

Thank you for choosing a COBY MP3 player!



- ~This guide will cover how to transfer your music CD's into your COBY MP3 player using Windows Media Player 11.
- ~This guide will also provide common troubleshooting solutions for your COBY MP3 player.

Requirements

Windows Media Player 11 (WMP11)

The directions in this guide are given for Windows Media Player 11 (WMP11)


If your computer does not have Windows Media Player installed, please download the latest version of Windows Media Player (WMP) from Microsoft's website

www.microsoft.com/windows/windowsmedia/player/download/download.aspx

Getting Started

Transfer your Music CD's into your COBY MP3 player

1) Launch the WMP11 program.

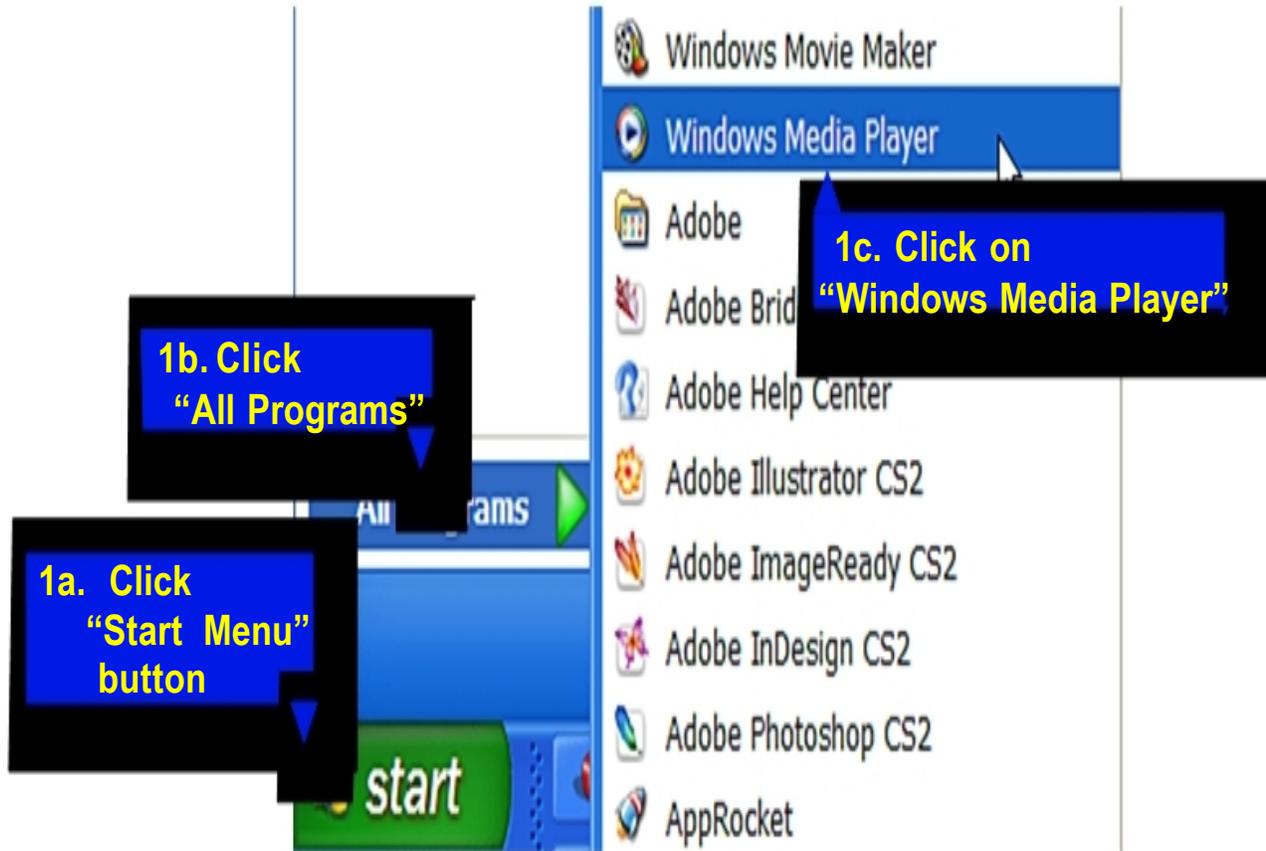

2) Put an audio CD into the CD-ROM drive of your computer.

- ✦ If your computer has an internet connection, WMP will automatically retrieve and display the album information.

Click the **Rip** tab and select which "Title" to rip.

To rip the entire album, check the top check box.




The screenshot shows the Windows Media Player interface. The top navigation bar includes 'Now Playing', 'Library', 'Rip', 'Burn', 'Sync', and 'URGE Sign In'. The 'Rip' tab is selected. Below the navigation bar, the breadcrumb path is 'Music > Coming Home (D:)'. The main area displays the album 'Coming Home (D:)' with a checkmark in a box next to the album name, indicating it is selected for ripping. The album cover for Lionel Richie's 'Coming Home' is shown on the left. The track list is displayed in a table format with columns for 'Title', 'Length', 'Rip Status', 'Contributing Artist', and 'Composer'. All tracks have a checkmark in the first column, indicating they are selected for ripping.

Album	<input checked="" type="checkbox"/>	Title	Length	Rip Status	Contributing Artist	Composer
Coming Home	<input checked="" type="checkbox"/>	1 I Call It Love	3:19	Stopped	Lionel Richie	Herman...
Lionel Richie	<input checked="" type="checkbox"/>	2 Sweet Vacation	3:54		Lionel Richie	Lionel Ri...
Soul and R&B	<input checked="" type="checkbox"/>	3 Why	4:01		Lionel Richie	Chuckii ...
2006	<input checked="" type="checkbox"/>	4 What You Are	4:12		Lionel Richie	Jermain...
☆☆☆☆☆	<input checked="" type="checkbox"/>	5 Up All Night	3:36		Lionel Richie	Chuckii ...
	<input checked="" type="checkbox"/>	6 I'm Coming Home	4:18		Lionel Richie	Chuckii ...
	<input checked="" type="checkbox"/>	7 All Around the World	3:34		Lionel Richie	Lionel Ri...
	<input checked="" type="checkbox"/>	8 Out of My Head	3:15		Lionel Richie	Lionel Ri...
	<input checked="" type="checkbox"/>	9 Reason to Believe	4:46		Lionel Richie	Dallas A...
	<input checked="" type="checkbox"/>	10 Stand Down	4:02		Lionel Richie	Dallas A...
	<input checked="" type="checkbox"/>	11 I Love You	4:12		Lionel Richie	Lionel Ri...

3) Set the Rip Options (optional).

Click the **Rip** button to set the Rip options. The recommended Rip settings are:

- ✧ Select "Format > mp3"
- ✧ Select "Bit Rate > 128 Kbps"
- ✧ Select "More Options" to change the directory to which WMP saves your ripped music files ✦ WMP will save your music to your "My Documents > My Music" default folder.

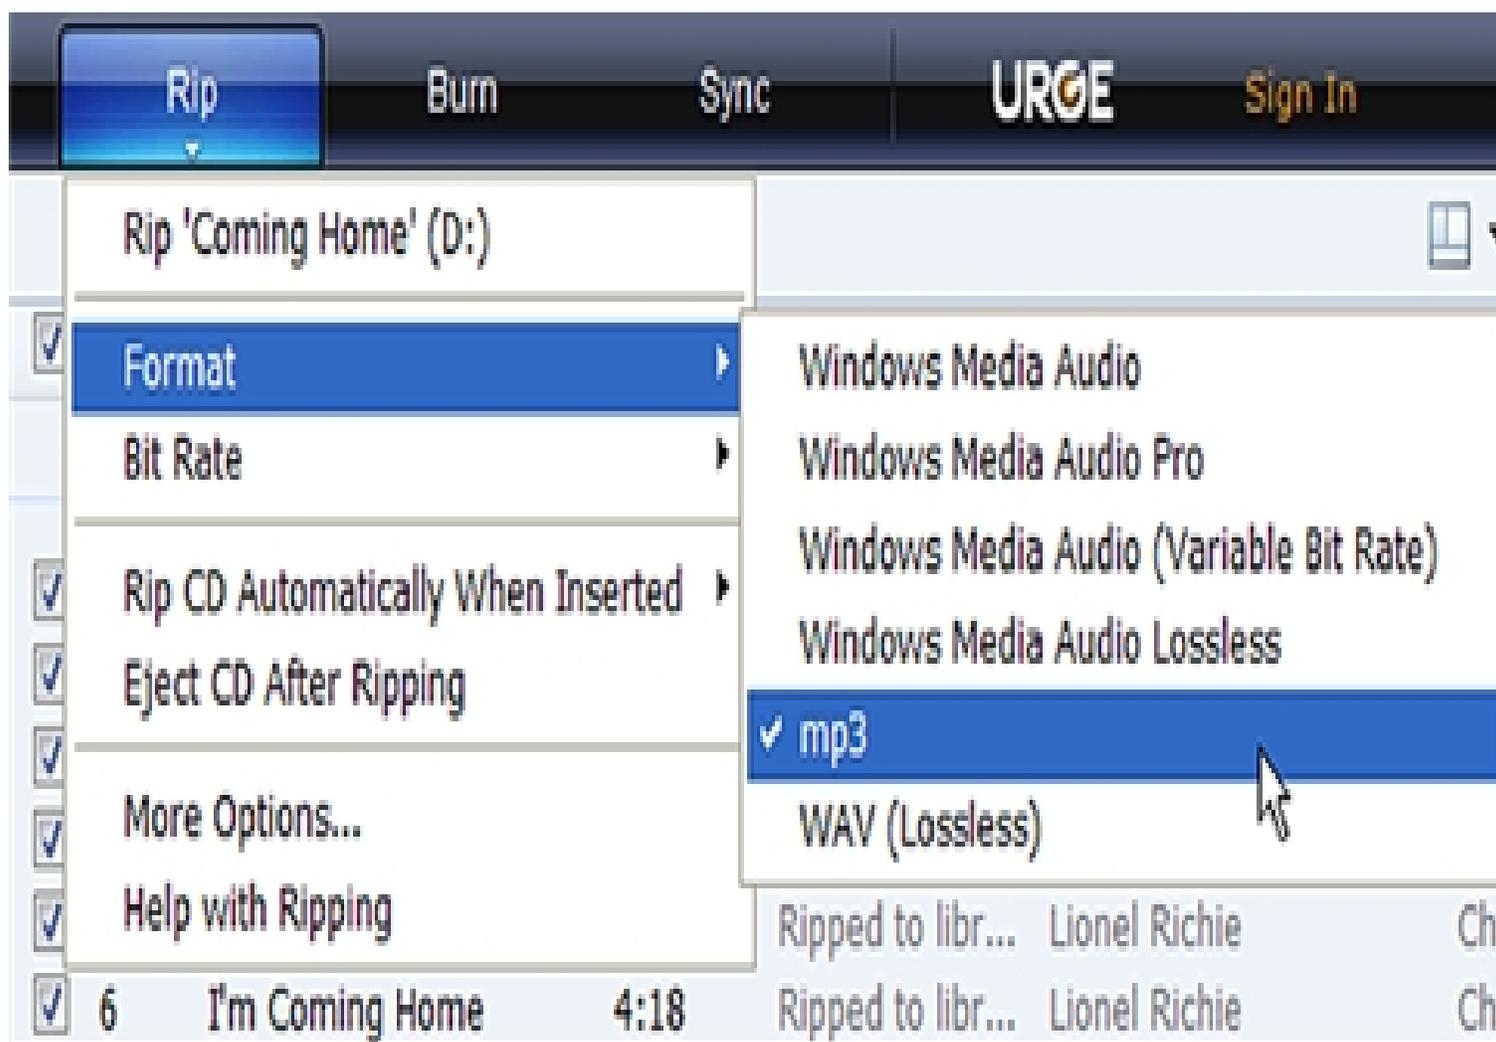

4) Start ripping the CD.

Click the “**Rip**” button and select “Rip” to start converting the audio CD to MP3/WMA

- ✦ The ripping process will take a few minutes to complete. WMP will save the converted music files in your “My Documents > My Music” default folder.



Transfer MP3/WMA Files to Your COBY Player


Once you have MP3 or WMA digital music files on your computer, transfer them to your COBY player in order to listen to music anywhere.

Use WMP11 to transfer (sync) music from your computer to your COBY MP3 player.

1) Launch the WMP11 program.

2) Connect your COBY player to a USB port on the computer.


✦ WMP11 will detect your COBY player automatically.

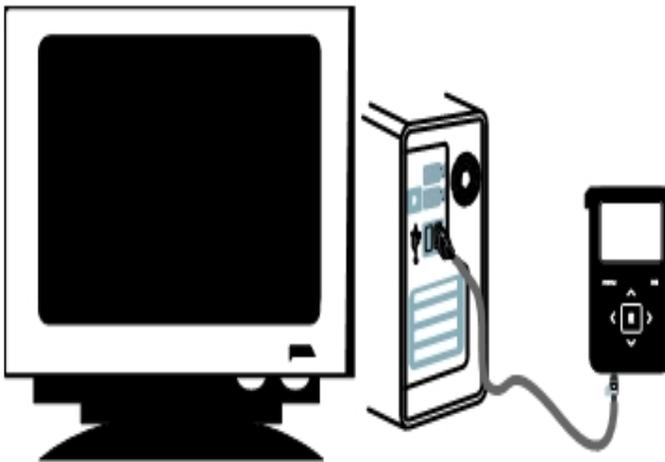

3) Browse your music library to choose songs to sync.

The screenshot shows the iTunes application window. At the top, there are tabs for 'Now Playing', 'Library', 'Rip', 'Burn', and 'Sync'. The 'Sync' tab is selected, and a mouse cursor is pointing at it. A blue callout box with yellow text says '3a. Click "Sync"'. Below the tabs is a search bar and a navigation pane on the left. The main area is divided into 'Primary Views' and 'Additional Views'. In the 'Primary Views' section, there are icons for 'Recently Added', 'Artist', 'Album', and 'Songs'. A blue callout box with yellow text says '3b. Double-click an icon to choose a view of your Music Library', pointing to the 'Songs' icon. The 'Additional Views' section has icons for 'Contributing Artist', 'Composer', 'Parental Rating', 'Online Stores', and 'Folder'. On the right side, there is a sync progress bar showing '6.1 GB remaining' and a 'Sync List' section with instructions: 'Drag items here to create a list to sync to 'MP-C951'' or 'Shuffle music to 'MP-C951''. At the bottom right, there is a 'Start Sync' button.

4) Select songs to sync to your COBY player.

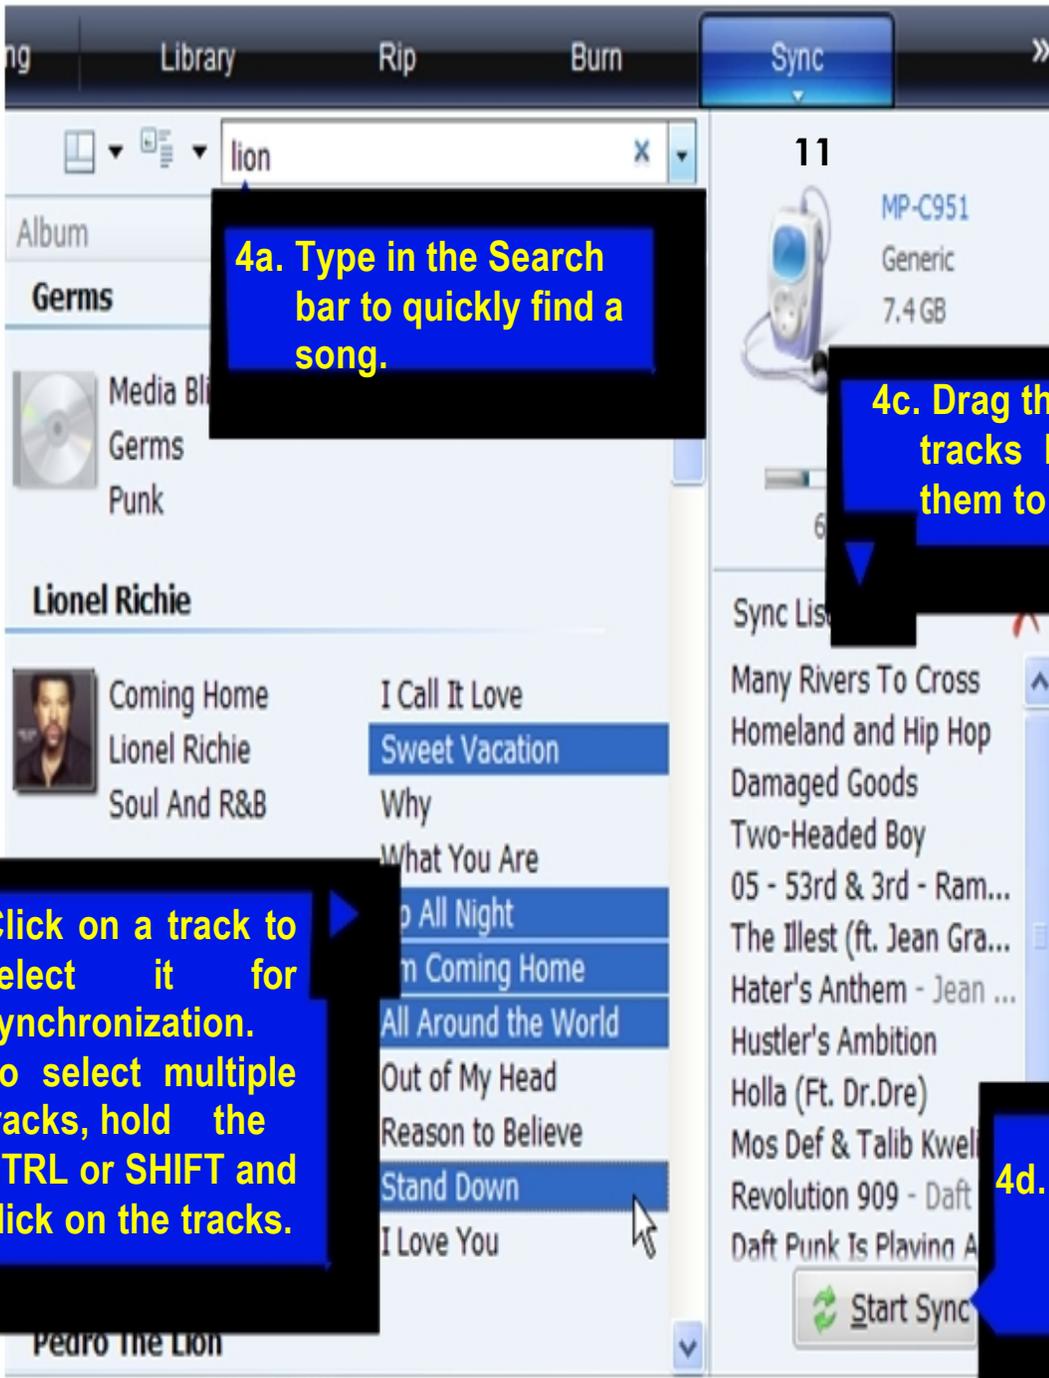

4a. Type in the Search bar to quickly find a song.


4c. Drag the selected tracks here to add them to the Sync List.

4b. Click on a track to select it for synchronization. To select multiple tracks, hold the CTRL or SHIFT and click on the tracks.

4d. Click "Start Sync" to transfer the Sync List to your COBY player.

5) Disconnect your COBY player from the computer.

Once the sync process is complete, unplug your player from the USB port of the computer. Now you're ready to listen to music on your COBY player.

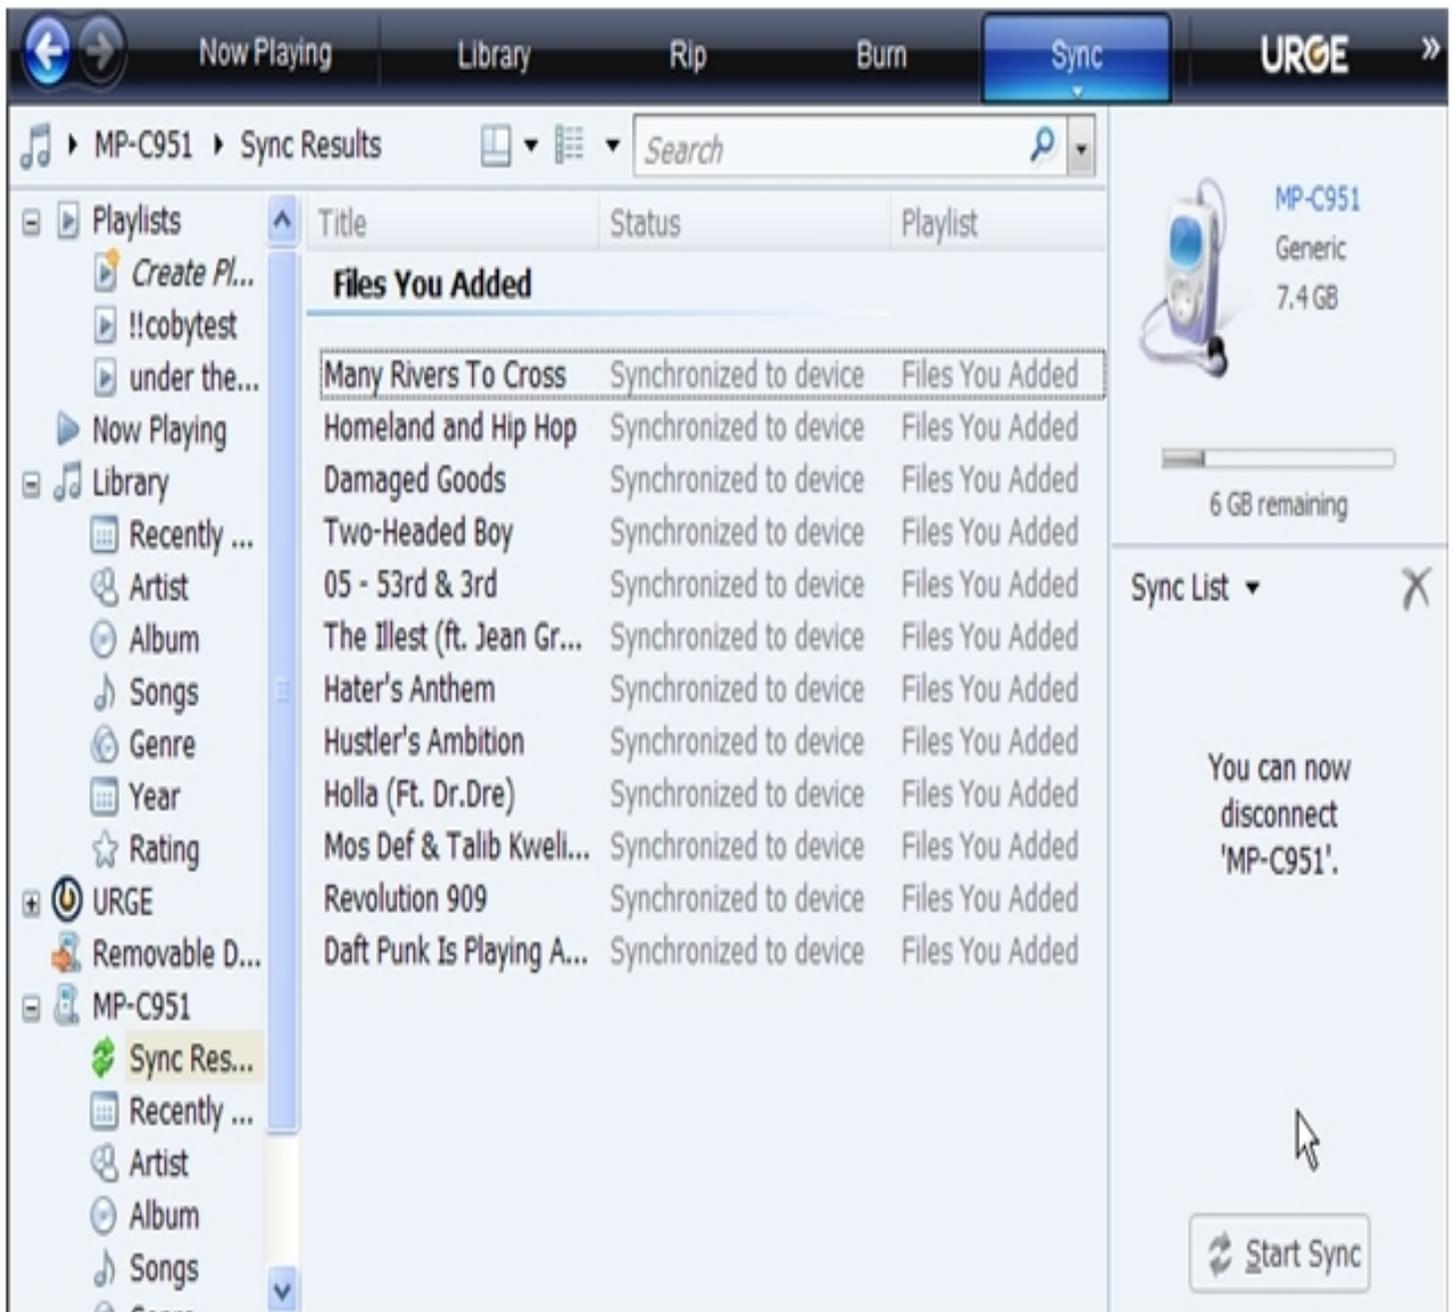

The screenshot shows the URGE software interface with the 'Sync' tab selected. The main window displays 'Sync Results' for device 'MP-C951'. A table lists the files synchronized to the device, all with a status of 'Synchronized to device'. The table has columns for 'Title', 'Status', and 'Playlist'. Below the table, a message states 'You can now disconnect 'MP-C951''. A 'Start Sync' button is visible at the bottom right. The left sidebar shows a tree view with 'MP-C951' selected, and a 'Sync Res...' option highlighted. The top navigation bar includes 'Now Playing', 'Library', 'Rip', 'Burn', and 'Sync'.

Title	Status	Playlist
Files You Added		
Many Rivers To Cross	Synchronized to device	Files You Added
Homeland and Hip Hop	Synchronized to device	Files You Added
Damaged Goods	Synchronized to device	Files You Added
Two-Headed Boy	Synchronized to device	Files You Added
05 - 53rd & 3rd	Synchronized to device	Files You Added
The Illest (ft. Jean Gr...	Synchronized to device	Files You Added
Hater's Anthem	Synchronized to device	Files You Added
Hustler's Ambition	Synchronized to device	Files You Added
Holla (Ft. Dr.Dre)	Synchronized to device	Files You Added
Mos Def & Talib Kweli...	Synchronized to device	Files You Added
Revolution 909	Synchronized to device	Files You Added
Daft Punk Is Playing A...	Synchronized to device	Files You Added

MP-C951
Generic
7.4 GB

6 GB remaining

Sync List

You can now disconnect 'MP-C951'.

Start Sync

Common Troubleshooting

Problems	Possible Solutions
No Power	<ul style="list-style-type: none">*Replace the Battery.*Hold the Play/Pause/Stop button for 5 seconds.*Reset the MP3 player by removing the battery
Song Freezes	<ul style="list-style-type: none">*Make sure your WMA file(s) are not DRM protected.*The file is corrupted or damaged.*Unsupported file format (ACC, WAV..... Etc)
No sound after file transfer	<ul style="list-style-type: none">*Ensure that the headphones are attached securely to the player.*Make sure your WMA file(s) are not DRM protected.*Unsupported file format (ACC, WAV.Etc)
MP3 Player not recognized by the Computer	<ul style="list-style-type: none">*Check the connection.*Switch USB ports.* Reset the MP3 player by removing the battery.

If you are still having difficulties with your MP3 player, please contact Customer Care, Hours of operation, Monday-Friday 8:00 AM – 8:30:00 PM EST, Saturday and Sunday 9:00 AM – 5:30 PM EST. You can also reach us online at customerservice@cobyusa.com or techsupport@cobyusa.com

1-800-727- 3592