

Warranty

Jewett Cameron Company warrants to the original purchaser that this product and all parts are free from manufacturer's defects. Warranties are 1 year on the framework and 6 months on the fabric material. We offer a "Bonus" if you register your purchase on line within 14 days of purchase, we will extend your fabric warranty, on a prorated basis, for 6 months additional warranty. To register on-line go to:

<http://www.jewettcameron.com/store/prodcutwarranty/register>

How to submit a warranty claim:

If you discover a defect within the warranty period, and wish to submit a claim, send your claim to one of the following:

- | | | |
|---|---|--|
| By Email:
Email: POP@jewettcameron.com
Attn: Warranty Dept. | By Fax:
Fax: (503) 647-2272
Attn: Warranty Dept. | By Mail:
Jewett Cameron Company
Attn: Warranty Dept.
P.O. Box 1010
North Plains, OR 97133 |
|---|---|--|

Please include the following when submitting your claim:

- A copy of your original purchase receipt or a proof of purchase (this document must be clear and readable and show the original date of purchase and the listing of the item you are submitting a claim on.)
- Your full name, complete delivery address (we do not ship to PO Box)
- Your contact phone number
- What part are you claiming on this submission?
- A detailed explanation of the defect on this part. (If needed we may require a picture of this defective part.)

After your claim has been reviewed and approved, the replacement parts will be shipped to you by a shipper of our choice, standard ground service. All cost associated for quick shipping requests will be the responsibility of the claimant.

Exclusions

- Normal and foreseeable wear and tear.
- Damages that are incurred during initial shipping (Customer is responsible to contact shipping company and to file a claim for damage goods received)
- Damages that occur due to acts of nature, ei. Hurricanes, tornadoes, snow, wind, wind driven debris, etc.
- Damages due to improper installation
- Product that has been subject to abuse, alteration, accidents, modification, vandalism, or negligence.
- Third part labor or installation fees of any kind are no recoverable
- Any local, State or Federal zoning or permit expenses.

 
All implied warranties of merchantability and fitness for particular purpose are limited in duration to one (1) year from date of purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

Questions - Claims?
Call Customer Service: 1-800-955-2879

Safe Grow™ Greenhouse instructions

Inventory and assembly guide

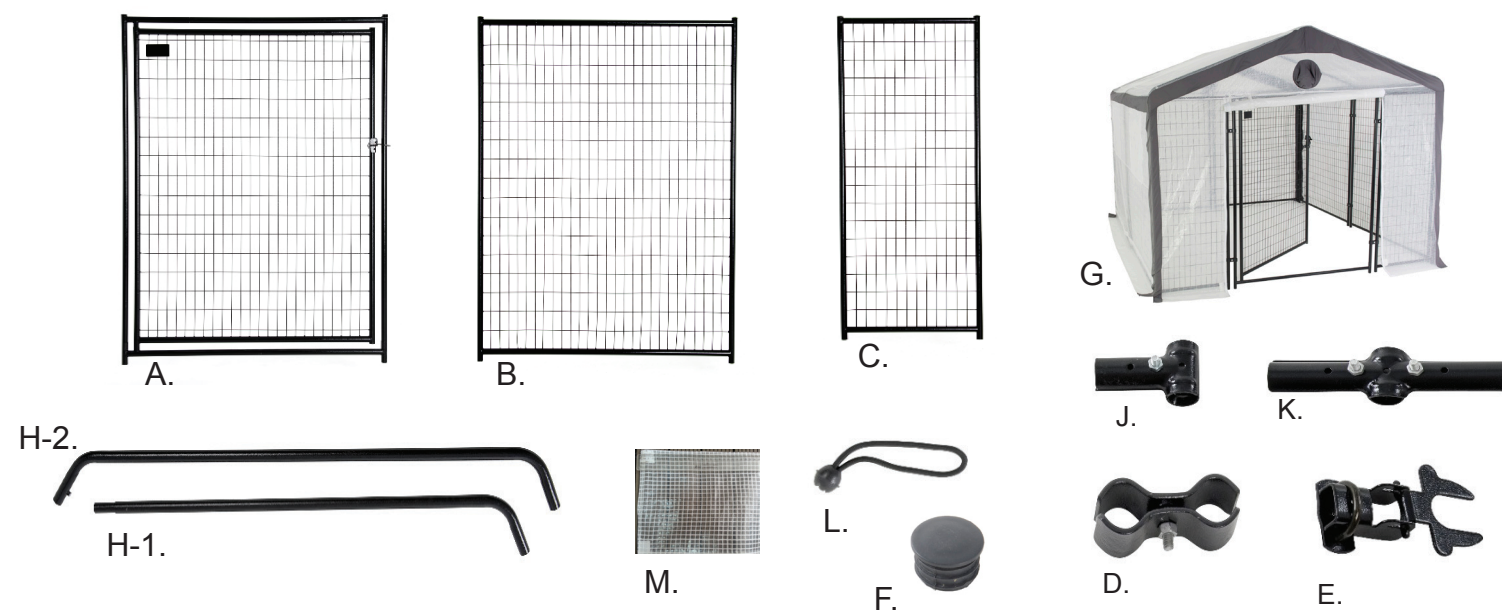

FRAME PARTS LIST	10' X 10'	10' x 15'	10' x 20'	COVER PARTS	10' x 10'	10' x 15'	10' x 20'
5' x 6' Gate - A	1	1	1	Single bend roof support tubes - H2	3	4	5
5' x 6' Panels - B	6	8	10	Horizontal staight tube - I	2	3	4
2.5' x 6' Panels - C	2	2	2	End clamps - J	2	2	2
Clamps - D	18	22	26	Center Clamp - K	1	2	3
Gate latch - E	1	1	1	Elastic bungee ball - L	28	34	40
Plastic caps - F	18	22	26	Cover saver - M	9	12	15
Cover - G	1	1	1				
Double bend roof support tube w/set screw - H1	3	4	5				

Note; Any plastic sleeves on panels are for shipping only, not to be used in assembly.
Tools Needed: Phillips Screw Driver, Adjustable Wrench---1 or 2 Ladders helpful.

Safe Grow™ Greenhouse instructions


*** ALL PHOTOS ARE OF 10' X 10' GREENHOUSE***

 1. Unpack and inventory parts.

- A.) Read instructions thoroughly prior to beginning.
- B.) Inventory all parts.
- C.) Tools Needed: Phillips Screw Driver, Adjustable Wrench---1 or 2 Ladders helpful.
- D.) Note: All plastic sleeves on panels are for shipping only, not to be used in assembly.

2. Assemble Greenhouse Frame.

- A. Use 2 clamps between each panel to connect the panels and gate using an adjustable wrench.

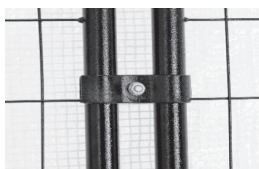

- B. Place the clamps about a foot from the top and bottom of panels.

- C. The 1" leg goes toward the bottom, caps go on top.

- D. All clamp nuts should be on the inside of the frame.

- E. The (C.) panels go on both sides of the gate to center it.

- F. Viewing from the front, the clamps should be perpendicular (at a right angle)

- G. Attach gate latch to gate with adjustable wrench.

(do not over tighten or u-bolt may bend or break)

3. Assemble the top frame.

- A. Remove caps from the 4 corner frame tubes and 2 of the opposing center frame tubes.

 
- B. Put together each Roof Support Tube (H1 + H2).

- C. Place the straight end of the single bend roof tube (H-1) into the double bend roof tube (H-2) w/ set screw and tighten screw.

- D. Slide each end into the poles where you removed the caps.

- E. Use the 2 end clamps (J), the center clamp (K) and the horizontal straight tubes (I) at the peak of the gables.

- F. Place the covers savers (M) on the peaks and outer bends of roof support tubes (H1 & H2) pinch velcro together.

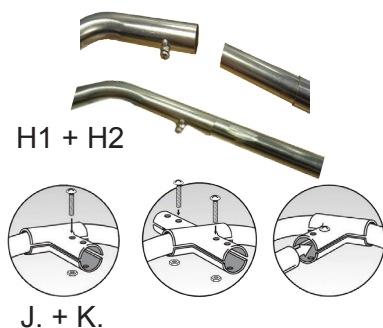

4. Put on the cover.

- A. Spread out the cover carefully on the ground. (Be sure the ground is free of sharp objects and do not step on the cover).
- B. Make sure the doors are in the front and back, and windows are on the side.
- C. Using 1 or 2 ladders carefully lift the cover up and over the front of the frame and work your way to the back.
- D. Make sure the cover is pulled down & sits comfortably on the frame.

hint: It can also help to have someone inside to move the cover along.

- E. Using the Elastic bungee balls, secure cover to frame with grommets on top and bottom of inside cover. Install to secure; Do not pull tight
- F. Inspect cover savers and reposition if needed. (Reinspect and reposition as needed)

DO NOT LEAVE CHILDREN OR PETS UNATTENDED IN THIS PRODUCT

This Greenhouse must be SECURELY anchored.

FOR REPLACEMENT PARTS OPTIONS AND ACCESSORIES

PLEASE CALL 800-955-2879 Monday thru Friday 7:30 am - 3:30 pm Pacific time.

