

MOOD+AARON'S

MOOD HARMONY™ MUSIC INSTALLATION GUIDE

Welcome to Mood Media.

This document contains the step-by-step instructions you will need to connect Mood's Harmony Music Player to your Aaron's DJ System.

The complete installation should take no more than 30 minutes.

STEP 1

+ The Harmony Music Player comes in a brown box with a label saying Audio.

+ Open the box & unpack all contents



STEP 2

+ Take a moment to check you have all the necessary parts.



Included & Required

1. Harmony Player
2. A/C Power Adapter
3. RCA Cables
4. Remote Control
5. Batteries x 2

Included but NOT Required

1. HDMI Cable
2. Data Cable (cat5)

STEP 3

+ Familiarize yourself with the media player.



Front

Showing your 3 status lights (green when online)

Back

This is where you will connect your RCA cable and power adapter

STEP 4

+ Bring all required parts to the Aaron's DJ System



STEP 5

+ Locate the AUX Audio Input on the back of the DJ System



A This is where your RCA cables will be attached

B IMPORTANT: DO NOT connect the cables to the LINE OUT AUDIO OUTPUT. They must be connected to the AUX AUDIO INPUT

STEP 6

+ Connect the RCA Cables to the AUX Audio Input




A The yellow connection is not required

B Connect white-to-white and red-to-red

STEP 7

+ Connect the RCA Cable to the AV input on the Harmony Music Device

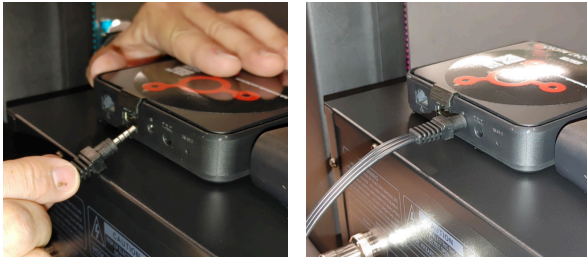

STEP 8

+ Plug in the power cable to the outlet and connect it to the power input on the Harmony Music Device



STEP 9

+ Give the Harmony Music player about a minute to boot-up. A successful wifi connection will be confirmed when you see the 3 LED status lights illuminated in green.



1. Boot-up takes no more than 1 minute

2. 3x Green LED status lights illuminated = Successful connection to Aaron's instore wifi

STEP 10

+ Selecting the correct input on the DJ System



1. Locate the input button on the front of the DJ system

2. Click it until AUX is displayed

STEP 11

+ Turn up the volume on the DJ System



1. Increase to the appropriate volume for your store

STEP 12

+ Use the Velcro to mount the Harmony Device to the back of the DJ System



1. Make sure you don't cover the serial number on the bottom of the device with the Velcro

2. Attach the Harmony device to the back of the DJ System's headend unit (Not the speakers) with cables facing downwards and just above the RCA connections on the DJ Systems

CONGRATULATIONS YOU ARE NOW CONNECTED TO AARON'S MUSIC PROGRAMS FROM MOOD MEDIA