



Rev1.0

## User Manual

### **DCT4+ Standalone Unlocker v0.3** (4plus.smx)

#### DCT4+ Standalone Unlocker Features:

The DCT4+ Standalone Unlocker for Genie-Universal allows you to Unlock Nokia DCT4+ Generation phones directly with Genie-Universal, without need for a PC.

Following Phone Modell's and Versions are supported by version 0.3:

Nokia 1680c - RM-394 version 06.82  
Nokia 1680c2 - RM-395 version 06.82  
Nokia 2323c - RM-543 versions 06.46, 06.75, 08.20  
Nokia 2330c - RM-512 versions 06.46, 06.75, 08.20, 08.21, 09.55  
Nokia 2330c - RM-513 versions 08.20, 08.21  
Nokia 2320c - RM-514 versions 06.75, 08.20  
Nokia 2600c - RM-340 version 07.60  
Nokia 2610 - RH-86 version 05.90, 07.04  
Nokia 2610b - RH-87 version 05.90, 07.04  
Nokia 2630 - RM-298 version 07.60, 57.20  
Nokia 2720f - RM-519 versions 08.20, 08.42  
Nokia 2720 - RM-520 versions 08.20, 08.42  
Nokia 2760 - RM-258 version 06.82, 07.60  
Nokia 2760b - RM-259 version 06.82, 07.60  
Nokia 2760 - RM-391 version 05.45  
Nokia 5000 - RM-362 version 06.32  
Nokia 7100s - RM-438 versions 05.22, 05.41, 06.31, 06.32

## Requirements:


In order to run the Standalone DCT4+ Unlocker (4plus.smx) on your Genie-Universal Device you must have the latest OS Firmware(v.0.0.0.183r) installed.

The Firmware is provided with the DCT4+ Unlocker Windows Installer(DCT4Plus.exe) that can be downloaded here: <http://www.genieuniversal.com/downloads/DCT4Plus.exe>

## Installation:

Download DCT4Plus.exe from <http://www.genieuniversal.com/downloads/DCT4Plus.exe> and start the Installation Process.


Be sure that you have previously connected your Genie-Universal in USB Mode to the PC:

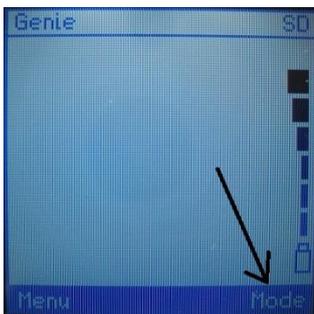

1. Press Mode



2. Select USB Disk

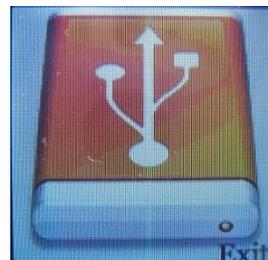


3. USB Disk Mode enabled

The Setup procedure should look like this:



Click Next to continue...

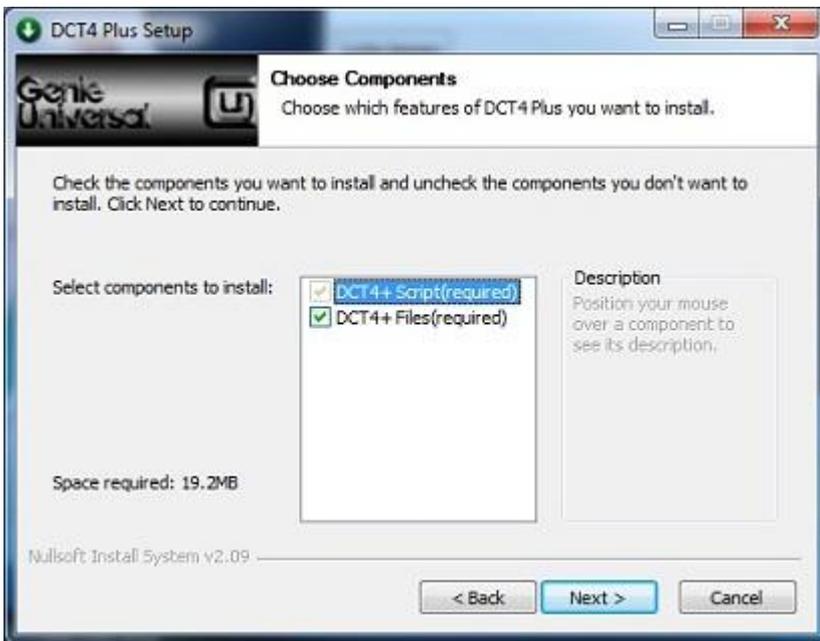

Again click Next to continue...




(if you see this message, then your Genie-Universal is not connected in USB Disk Mode to the PC)



If Genie-Universal is connected properly in USB Disk Mode then your screen will look like this and you can


hit the "INSTALL" Button...

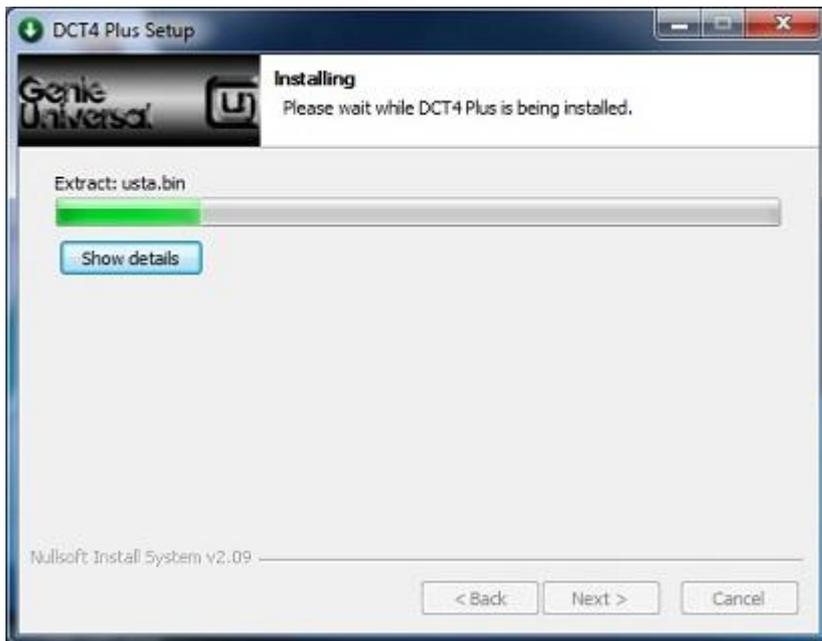

After the Setup Wizard has completed you are ready to Upgrade the Genie Firmware.

## How to Update the Genie-Universal Firmware/OS

- Connect the original Genie-Universal Charger (9V) to the Genie-Universal (PLEASE NOTE: The update will not start if there is no charger connected)
- On Genie-Universal, press right Function-Button (Mode) and select "FIRMWARE UPDATE"

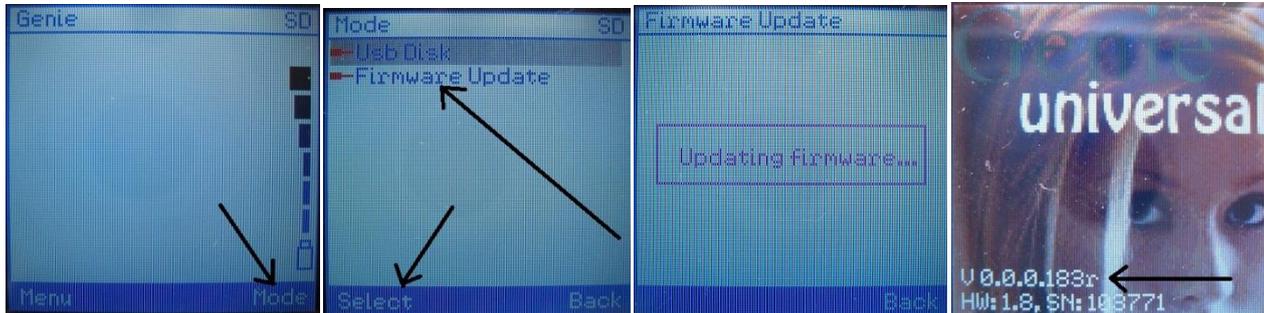


Genie-Universal will show on the LCD "Updating Firmware..." and will restart after 5-7 seconds with latest Firmware Inside.

If you get "FILE ERROR:7" when trying to update the Firmware, then don't worry, it just means that your Genie-Universal already have the latest Firmware/OS installed and there is no need to update it again. All is fine and you can continue...

## How to Start the DCT4+ Standalone Unlocker

Power on the Genie-Universal with Battery and/or Charger or by Mini-USB cable connected.

In the MENU, navigate to PROGRAMS/SCRIPT and RUN "4plus.smx".

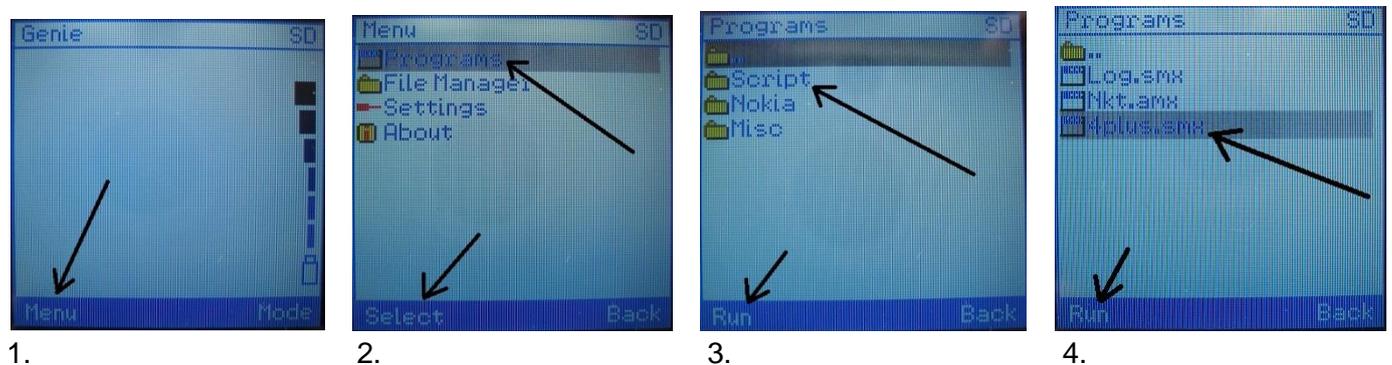

1.

2.

3.

4.

Now the DCT4+ Standalone Unlocker application will Load and Start(image5) and you should connect a supported DCT4+ phone within 4 seconds to the Genie-Universal Device(image6) if it isn't already connected.




5



6

After phone is connected to Genie-Universal the phone will be detected and the Unlock Process will start automatically(image 5 and 6).

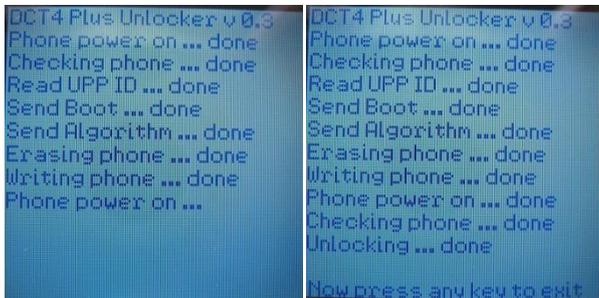

5.

6.

When you see the Status-Message “Unlocking...done” then your phone is successfully unlocked and you can exit the Unlock Application by pressing any Key.  
For unlocking the next phone, simply start again by executing the 4plus.smx” again.

---

For any suggestions, complains, idea´s or whatsoever on this Manual please sent email to:

[X33c2@gmx.net](mailto:X33c2@gmx.net)

Thank you!

---