

GOLDAIR

Operating Instructions

Micathermic Heater



Model: GMH150

General Care and Safety Guide

 
Thank you for choosing a Goldair Micathermic Heater. This Goldair Heater has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully.

1. Use only the voltage specified on the rating label of the appliance.
2. Keep all objects at least 1 metre from the front, sides and rear of the appliance. Do not place appliance close to radiant heat source.
3. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance. Do not sit on the appliance.
5. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
6. This appliance is intended for household use only and not for commercial or industrial use.
7. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electrical shock or injury.
8. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
9. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
10. Do not connect the appliance to mains supply until completely assembled and adjusted.
11. Switch off and use handles provided when moving.
12. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
13. The use of an extension cord with this appliance is not recommended.
14. Do not remove plug from power socket until the appliance has been switched off.
15. Do not remove plug from power socket by pulling cord; always grip plug.
16. Always unplug appliance when not in use.
17. Do not locate the heater directly below any power socket during operation.
18. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
20. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
21. When the appliance has been unpacked, check if for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Goldair Customer Services Team. (refer to details on back page)
22. If your appliance does not work, or is not working properly, contact the place of purchase or the Goldair Customer Services Team. (refer to details on back page). Repair work on the appliance by unqualified persons can cause serious risk to the user.
23. There are no user serviceable parts installed in the unit.
24. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
25. This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.
26. Indoor use only.
27. Children should be supervised to ensure that they do not play with the appliance.
28. Ensure heater is on a flat, stable, heat-resistant surface.


Overview of your Micathermic Heater

Micathermic heating uses both radiant and convection heating technology. Natural convection currents distribute the heat evenly throughout the room, while radiant heat from the heating surface warms people and objects in the room. This heater is equipped with two manual heat settings and an adjustable thermostat.

1. Heater
2. Control Panel
3. Front Panel
4. Wheel Bracket
5. Wheel

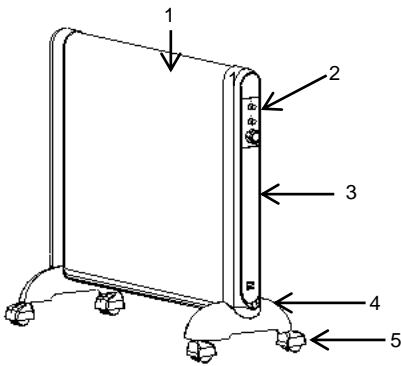

 1. Power indicator light
2. Power Switch I
3. Power Switch II
4. Thermostat

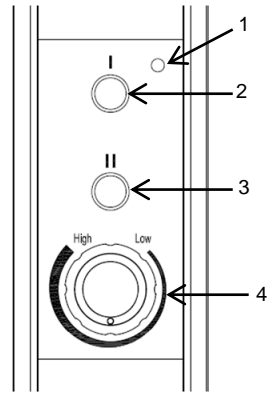

FEET ASSEMBLY

Install castor

Take out four castors, two wheel brackets, four fixed screws, four flat-gasket of 4mm diameter, four spring-gasket of 4mm diameter from list.


According to picture A, Firmly install castor on wheel bracket.

Install wheel bracket


Take both wheel-brackets once castors installed, take two Standard Screws, two flat-gasket of 5mm diameter, two spring-gasket of 5mm diameter.

According to picture B, firmly install wheel-bracket on the bottom of the Heater.

 PICTURE A

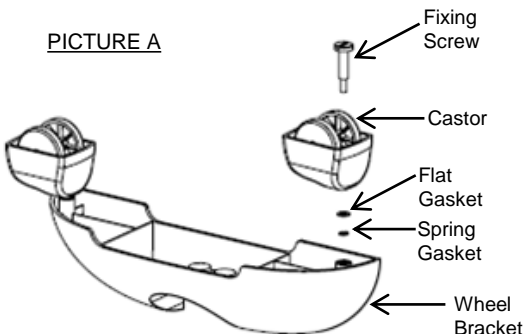

PICTURE B

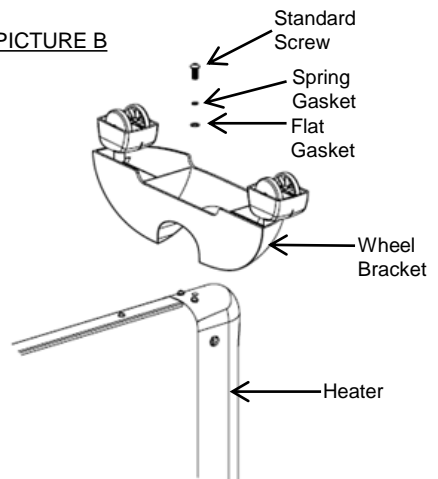 

Parts Included

Title	Quantity	Comments
Heater	1	
Wheel Bracket	2	
Castors	4	
Fixing Screws	4	Use for fixing Castors
4mm Flat Gasket	4	
4mm Spring Gasket	4	
Standard Screw	2	Use for fixing Wheel Bracket
5mm Flat gasket	2	
5mm Spring Gasket	2	
Operating Instructions	1	

TECHNICAL SPECIFICATION

Model No: GMH150

Power Supply: 220-240V, 50Hz AC only

Power: 2000W

Operating your Micathermic Heater

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. This appliance requires no installation, it should be used solely as a portable appliance.

WARNING: THIS IS A DOUBLE SIDED HEATER. Keep all objects at least 1 metre from the front, sides and rear of the appliance.

HEAT CONTROL SWITCH

The control switch positions are:

- 0 OFF
- I Low Heat
- II High Heat

Check that the heat control switch is set to off position before plugging the heater into the mains supply. For greater economy, use the high heat setting initially and then switch to the low heat setting.

THERMOSTAT

Turn the thermostat knob clockwise until the maximum temperature is obtained on the graduated scale. When the desired temperature is reached, slowly turn the knob anti-clockwise until the heater turns off (you will hear a click). The heater will now cycle on and off to maintain the set temperature.

CAUTION: never install the heater directly beneath a socket-outlet or in such a way that people in the baths, showers or pools may have to touch live parts such as a switch.

Important: The radiator must be connected to an earthed outlet of the appropriate voltage.

Note: When the heater is turned on for the first time, it may release a slight, odour or smoke. This odour or smoke is a normal occurrence caused by the initial heating of the internal heating elements and should not occur again.

SAFETY DEVICE

This appliance has three protection devices:

The first device will automatically turn the appliance off if the appliance is not in the appropriate operating position.

The second device, automatically disconnects & reconnects the appliance at a preset temperature.

The third device disconnects the appliance permanently in case of overheating, by means of a thermal fuse. (It is non resettable)

IMPORTANT! NEVER COVER THIS HEATER!

Covering the heater will cause activation of the non resettable safety fuse.

CARE AND CLEANING

Do not attempt to dismantle the Micathermic Heater. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician. The outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth. **CAUTION: DO NOT** let liquid enter the heater.

CAUTION

The Micathermic Heater generates heat during use. Proper precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically.

PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase. (Refer to back of booklet).

GOLDAIR

SUPPORT AND TECHNICAL ADVICE

PO Box 100707, NSMC, Auckland, New Zealand

Monday – Friday 8am-5pm

Phone: 0800 232 633

Website: www.Goldair.co.nz

GOLDAIR

Two Year Warranty

Your Goldair product has been inspected and tested and is guaranteed subject to the following for a period of two years from the date of purchase against defects in workmanship and materials. During this period, such defects will be rectified by repair or replacement of the product purchased. Your product contains no user serviceable components and this warranty becomes invalid if in our opinion the product has been misused, abused, incorrectly installed, tampered with, connected to an electrical supply not corresponding with the name plate specification, or subjected to power surges. The warranty does not include any labour or other associated expense that may be involved in removal or installation of the product. Normal wear and tear is expressly excluded.

If your Goldair product fails to operate satisfactorily, please return it to the retailer from whom it was purchased. To obtain a repair or replacement product under this warranty, you will need to produce satisfactory evidence of date of purchase. The completed warranty and purchase receipt must be presented with the product. The warranty should be filled out at the time of purchase. It is in your interest to make sure this is done.

If the product is to be replaced (cannot be repaired) then that replacement will be of the same or similar product or accessory excluding packaging, instruction card etc. Where a replacement product is supplied, this shall be guaranteed for the balance of the original warranty period.

Any model that is no longer available will be replaced by a model of a value and with such features as we consider appropriate in the circumstances. Goldair is not responsible for freight forwarding charges, losses or damage in transit.

If service is required after the warranty period has expired, the product should be returned to a qualified electrical technician. Service outside of the warranty period will be at your cost.

Consumers Guarantee Act (1993).

In accordance with the above act consumers are advised that: The manufacturer does not undertake that repair facilities and parts are necessarily available for this product.

If any of the provisions of the foregoing are contrary to any relevant legislation, then that provision shall be deemed to be excluded from the warranty and the rest of the provisions will continue to apply.

IMPORTANT: Please retain this warranty card



Name Purchased from

Address Date of purchase

..... Name of product

Suburb Model no

