

## Pool and spa ventilation models

### Heat Recovery Ventilators



SHR 8005R • SHR 14105R

Your ventilation system should be installed in conformance with the appropriate provincial requirements or, in the absence of such requirements, with the current edition of the National Building Code, and / or ASHRAE's "Good Engineering Practices".

#### United States






10048 Industrial Blvd., Lenexa, KS, 66215  
Tel.: 800.747.1762 • Fax: 800.487.9915

#### Canada

50 Kanalfakt Way, Bouctouche, NB, E4S 3M5  
Tel.: 800.565.3548 • Fax: 877.747.8116

Fantech reserves the right to modify, at any time and without notice, any or all of its products' features, designs, components and specifications to maintain their technological leadership position.  
Please visit our website [www.fantech.net](http://www.fantech.net) for more detailed technical information.



				
Note	Warning/ Important note	Information	Technical information	Practical tip



## PLEASE READ THIS MANUAL BEFORE INSTALLING UNIT

Before installation, careful consideration must be given to how this system will operate if connected to any other piece of mechanical equipment, i.e. a forced air furnace or air handler, operating at a higher static. After installation, the compatibility of the two pieces of equipment must be confirmed by measuring the airflow's of the Heat / Energy Recovery Ventilators. It is always important to assess how the operation of any HRV/ERV may interact with vented combustion equipment (i.e. Gas Furnaces, Oil Furnaces, Wood Stoves, etc.).

Install a ventilator in a situation where its normal operation, lack of operation or partial failure may result in the backdrafting or improper functioning of vented combustion equipment!!!



Products are designed and manufactured to provide reliable performance, but they are not guaranteed to be 100% free of defects. Even reliable products will experience occasional failures, and this possibility should be recognized by the user. If these products are used in a life support ventilation system where failure could result in loss or injury, the user should provide adequate back-up ventilation, supplementary natural ventilation or failure alarm system, or acknowledge willingness to accept the risk of such loss or injury.

Your ventilation system should be installed in accordance with the local building code that is in effect, in absence of such requirements, it is recommended to check with local authorities having jurisdiction in your area prior to installing this product.

# TABLE OF CONTENTS

INSTALLATION

- Location . . . . .5
- Port Configuration . . . . .6
- Installing Drain Line . . . . .6
- Installing Duct Connections . . . . .7

AIRFLOW BALANCING . . . . .8

INSTALLING BYPASS MODULE (BPM) . . . . .9

INSTALLATION EXAMPLES . . . . .9

MODES OF OPERATION . . . . .10

- Speed Setting . . . . .10

LOW VOLTAGE CONTROL SYSTEMS . . . . .11

MAINTENANCE . . . . .12

ELECTRICAL CONNECTIONS . . . . .13

INSTALLATION VERIFICATION TEST . . . . .14

### Understanding Fantech Product Numbers

SHR 14105R

S = Side Ducting

H = Heat Recovery

R = Remote Control Option

1410 = 1410cfm @0.4 W.G

5 = Five Ports

R = Recirculation



Here are the conditions that permit moisture reduction enclosure.

- Ventilation is a year round solution for providing better indoor air quality. Ventilation also provides moisture removing capabilities but may not be sufficient to control excess moisture year round.
- The pool and its environment must be operated according to the ASHRAE Application handbook guidelines. Failure to do so may lead to excessive moisture conditions. Consult with our technical support department for further assistance on sizing and guidelines. Unit should be set up and commissioned by qualified individuals.

#### The SHR 8005R contains the following items:

- |       |   |
|-------|---|
| 40455 | Heat Recovery Ventilator model SHR8005R with installation kit |
| 40452 | Bypass module model BPM0820P with installation kit            |


#### The SHR 1405R contains the following items:

- |       |  |
|-------|--|
| 40445 | Heat Recovery Ventilator model SHR14105R with installation kit |
| 40441 | Bypass module model BPM0824P with installation kit             |

# Installation

## Location

The HRV must be located in a conditioned space where it will be possible to conveniently service the unit. Typically the HRV would be located in the mechanical room, above a drop ceiling or an area close to the outside wall where the weatherhoods will be mounted. Attic installations are not recommended due to extreme temperatures, and difficulty in performing, required service & maintenance. Care must be taken to locate the recirculation port in an area that will not cause any unwanted contaminant to be drawn into the living space during recirculation and defrost.



Flexible duct connectors should be installed between the HRV and the galvanized ductwork.


**Connecting appliances to the HRV** It is not recommended, including:

- clothes dryer
- kitchen exhaust hoods
- combustion venting
- central vacuum system

These appliance may cause lint, dust or grease to collect in the HRV , damaging the unit.



Connecting any of these type of appliances to the HRV will invalidate your warranty

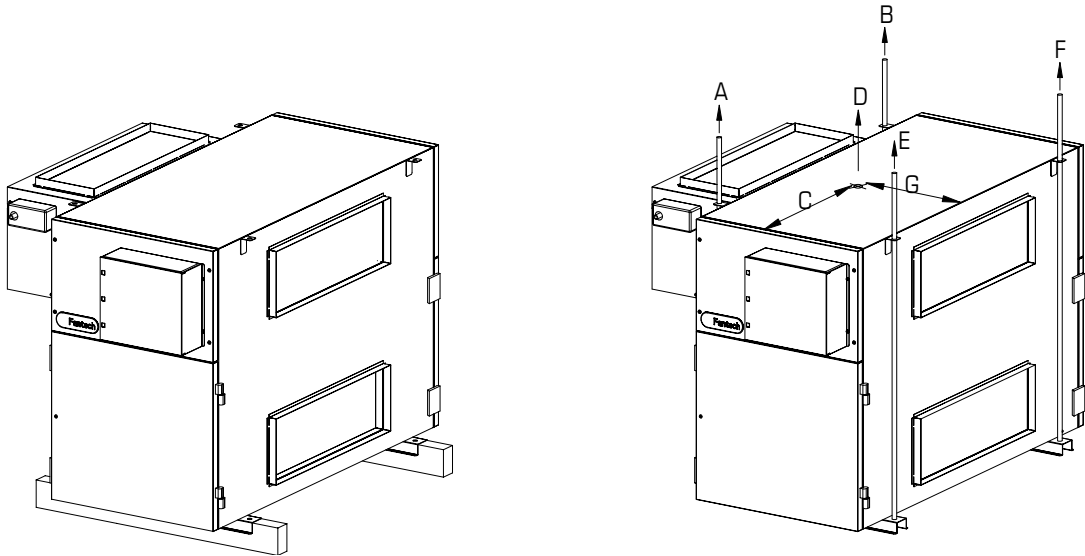


Model	A		B		C		D		E		F		G	
	Kg	lbs	Kg	lbs	in.	mm.	Kg	lbs	Kg	lbs	Kg	lbs	in.	mm.
SHR 8005R	23.8	52.5	22.5	49.6	15.4	390	85	187	20	44	18.8	41.3	17.6	448
SHR 14105R	30.4	67	27	60	21.4	544	109	241	27.7	61	24.3	53.5	18	455

## Port configuration


The unit has access doors on the front and back. Also, the main control panel may be moved from front to back allowing for ducting layout.

### Outdoor or Recirculated air

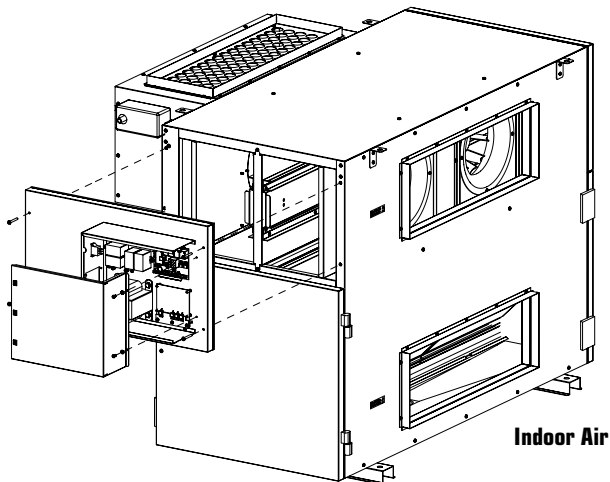

Factory Setting. Unit may be easily reversed in field.


### Indoor Air

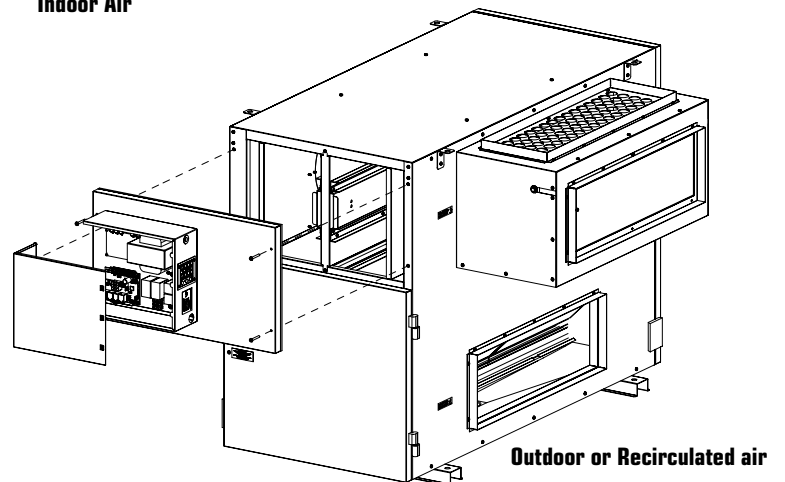

## Installing Drain Line

Through normal operation and including defrost mode, the HRV may produce some condensation. This water should flow into a nearby drain, or be taken away by a condensate pump. The HRV and all condensate lines must be installed in a space where the temperature is maintained above freezing point. A "P" trap should be made in the drain line. This will prevent odors from being drawn back up into the unit.

### Install the drain hose, making a "P" trap

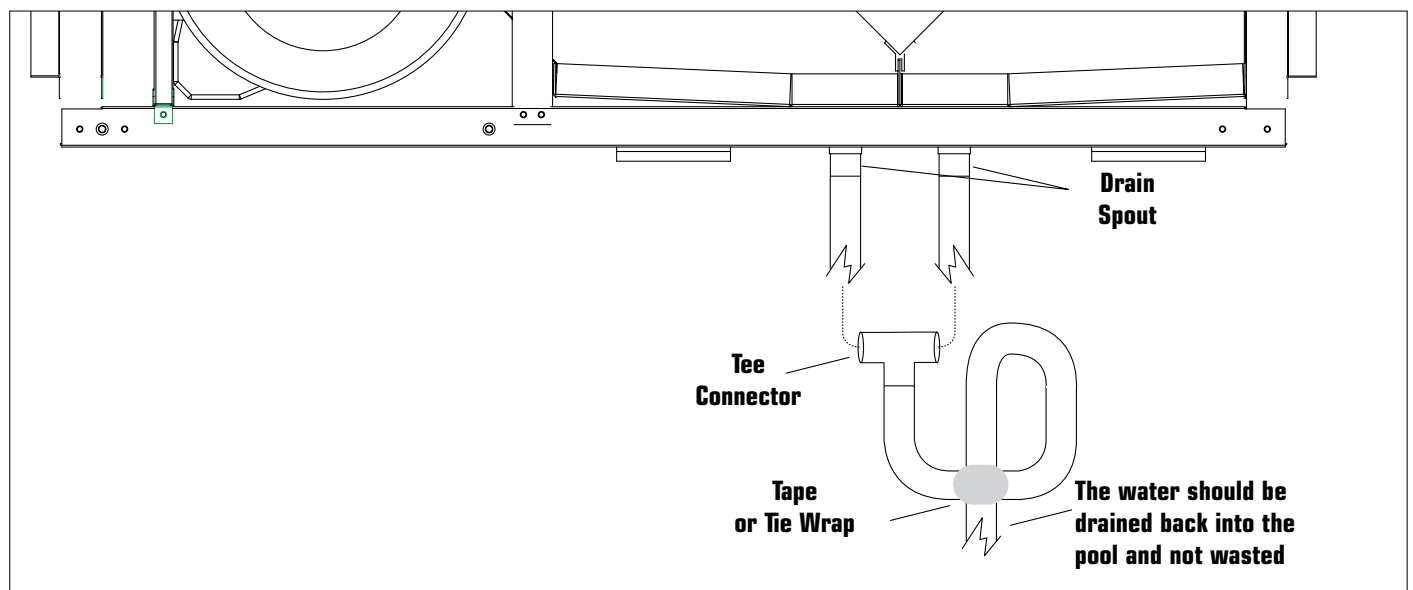

# Installing ducts going to / from outside

## INSTALLING THE DUCTING TO THE WEATHERHOODS

**OUTSIDE WEATHERHOODS** – The weatherhoods must have built-in "bird" screens with 6.35 mm (1/4 inch) minimum mesh to prevent birds and rodents from entering into the ductwork. Do not use smaller mesh as it will be very susceptible to plugging up. The preferred location of the weatherhoods is:

- No less than 3 m (10 ft.) apart from each other.
- At least 457.2 mm (18 inches) snow line or ground level.
- Supply hood must be kept away from sources of contaminant, such as automobile exhaust fumes, gas meters, garbage cans, containers, cooling towers, tar roofs, etc.
- Avoid prevailing winds, whenever reasonably possible.

The outside perimeter of the weatherhood must be sealed to prevent leakage into the building.

**DUCTING FROM THE WEATHERHOODS—TO AND FROM THE HRV** – Galvanized sheet metal ducting with sufficient cross section with an integral single piece of insulated wrap with vapor barrier should be used to connect the HRV to the weatherhoods. The R-value of the insulation should be adequate for condensation control. Insulated flex duct may be used in moderation, if sized and installed properly. (Consult local codes)

All ducts should be sealed using a good bead of high quality caulking (preferably acoustical sealant) and a high quality aluminum foil tape, or other approved duct sealant.

## Installing ducts to / from inside

To maximize airflow in the ductwork system, all ducts should be kept short and have as few bends or elbows as possible. Forty-five degree are preferred to 90° elbows. Use "Y" tees instead of 90° elbows whenever possible.

All duct joints must be fastened with screws or duct sealant and wrapped with a quality duct tape to prevent leakage. Aluminum foil duct tape is recommended.

### SUPPLY AIR DUCTING

In buildings without a forced air HVAC systems, fresh air should be supplied to all habitable areas. It should be supplied from high wall or ceiling locations. The grilles that are to be used should be designed to properly and comfortably sweep cold surfaces.

Optional inline duct heaters may be used to add heat if required. Typically the reheat is best done using a coil off the same boiler that heats the pool water.

### Direct Connection to Furnace/ Air handler return duct

- Should you wish to hard duct the supply air directly into the cold air return of the HVAC systems, remember to check the airflow balance of the HRV with the HVAC systems fan both "on" and "off" to determine that it does not imbalance the HRV more than 10%. Make sure you respect the minimum distance from the supply air in of the HRV and the HVAC systems.
- It may be necessary to install a separate fresh air supply ductwork system if the heating is other than forced air.

When installing an HRV, the designer and installer should be aware of local codes that may require smoke detectors and/or firestats in the HVAC or HRV ductwork.


Because an HRV is designed to bring fresh air into the building, structures may require supply voltage interrupt when smoke or flame sensors are triggered, or when a central fire alarm system is activated.

### Exhaust Air ducting

The stale air exhaust system is used to draw air from the points in the building where the worst air quality problems occur. ( See installation examples in the manual.)

## AIR FLOW BALANCING

- The balancing procedure consists of measuring the exhaust air leaving the system and the supply air entering the system and ensuring that these two are equal. A deviation of 10% or less is acceptable.

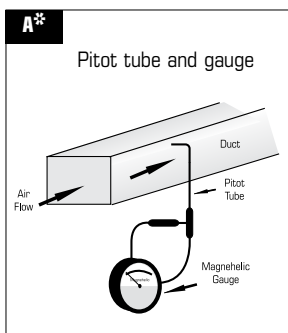

**A** The duct's airflow velocity is generally measured with a magnehelic gauge and a pitot tube.

- To avoid airflow turbulence and incorrect readings, the airflow velocity should be measured on steel ducting a minimum of 3 duct cross-section from the unit or elbow and before any transition.




A professional air balancer should be contacted to commission the system properly. A skilled HVAC Tech may complete the balance of air providing they possess the proper equipment. Call Fantech Technical support for assistance.




# Installing BYPASS Module (BPM)


Refer to BPM Installation, Operation and Maintenance document for Instructions

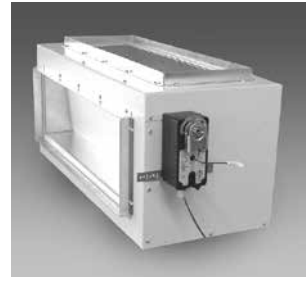


## Installation examples

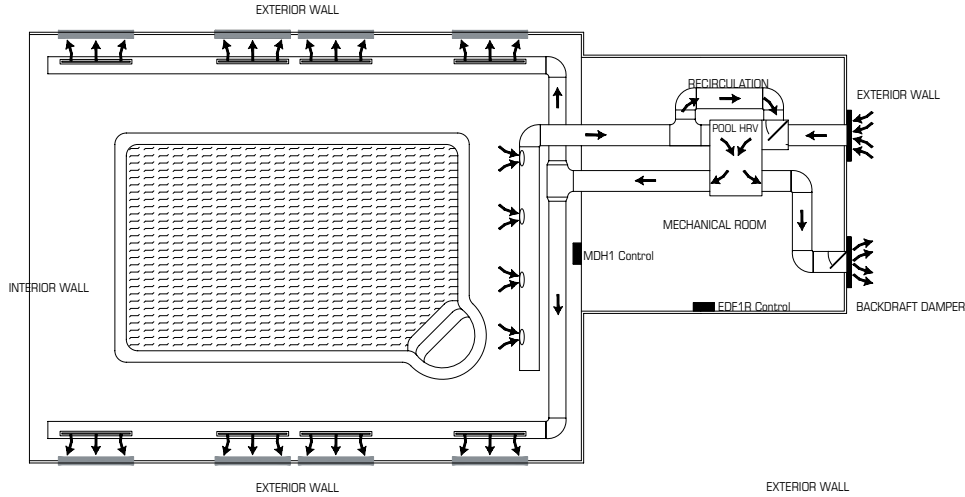

### Installation with Grille

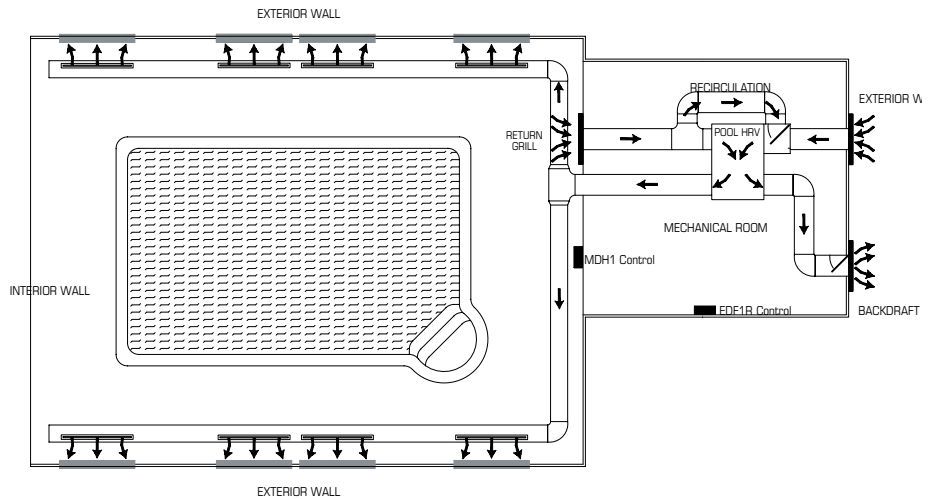

### HVAC

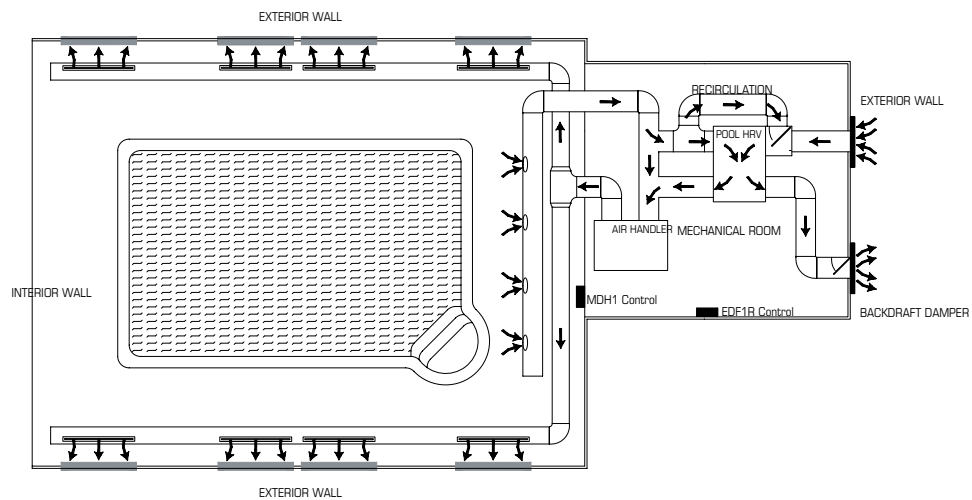

# Modes of operation

## 1. Continuous / Ventilation Mode

In this mode of operation, both fans are operating and exchanging air with the outside. The heat recovery ventilator (HRV) constantly exchanges the air at the rate you select, either at low or medium speed, and switches to high speed when activated by an optional remote control. The "Low" and "Med" fan speed selection will cause the unit to operate in continuous exchange mode at a reduce exchange rate. Continuous mode is recommended, since pollutants are slowly but constantly being generated in a building.

## 2. Recirculation Mode

In recirculation mode, the supply motor continues to run and a damper moves to block off air entering from outside, drawing air instead from the conditioned space. The exhaust to outside motor is OFF when in recirculation mode.

## 3. Intermittent / Standby Mode

The system is always on standby and operates at high speed when activated by an optional remote control (required): "Standby" should be selected if the user wishes to stop the unit from continuous exchange.

## 4. Defrost by Recirculation

A preset defrost sequence is activated at an outdoor air temperature of -5°C (23°F) and lower.

During the defrost sequence, the motorized damper in the bypass module (BPM) temporarily blocks the incoming fresh air stream so that the warm air from the room can circulate through the HRV. The exhaust blower shuts down and the supply blower switches into high speed to maximize the effectiveness of the defrost strategy. During this cycle, the unit will not create a negative pressure. Please note that these systems are configured to defrost with the BPM devices installed on the fresh air from outside port. Alternate configuration are available by contacting our technical support department.


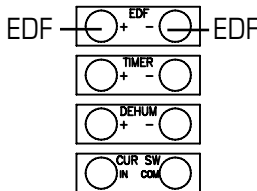

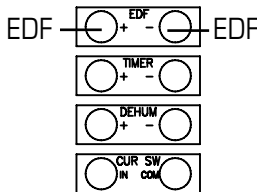

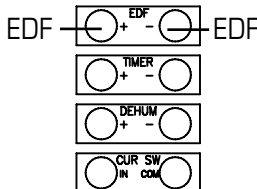
# Setting speed

The ERV is shipped from the factory on low speed, intermittent operation can be obtained by toggling switch located on outside of cabinet. External low voltage contacts allow for high speed operation when optional remote control is used.


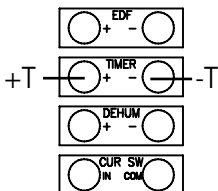

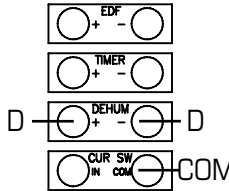

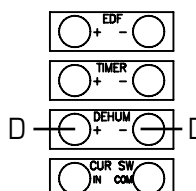
# Low Voltage Control Systems

\* Please see instruction manuals for individual controls for proper wiring and set up of control systems.

## CENTRAL CONTROLS – These control options can only be used individually

CONTROLS	FEATURES	CONNECT TO
<b>ECO-Touch</b> 	<ul style="list-style-type: none"> <li>Our most complete, yet easy to use control system</li> <li>Sleek design with backlight touchscreen LCD</li> <li>ECO mode selects the best operating mode and speed for the season, minimizing energy use associated with ventilation</li> <li>Set preferred indoor relative humidity range and ventilation mode for day and night conditions</li> <li>No battery to replace, all programmed settings are retained during power outage</li> <li>Maintenance reminder indicator</li> <li>Error code messages reduce troubleshooting time</li> </ul>	
<b>EDF7</b> 	<ul style="list-style-type: none"> <li>MODE button provides 3 modes of operations: Ventilation, Recirculation and Standby</li> <li>User selected fan speed: Low, Medium, Normal and 20 minutes per hour</li> <li>AUTO setting allows the homeowner to deactivate the dehumidistat</li> <li>When the humidity exceeds the desired setpoint, the ventilation system operates at Normal speed.</li> <li>Once the desired humidity level is achieved, your ventilation system resumes to its previous mode of operation</li> </ul>	
<b>EDF1R</b> 	<ul style="list-style-type: none"> <li>Press button once for continuous LOW speed</li> <li>Press button twice and the unit will cycle 20 minutes ON/ 40 minutes OFF and repeat</li> <li>Press button a third time and the system will run recirculation on HIGH speed</li> </ul>	

## AUXILIARY CONTROL – These controls can be paired

<b>RTS2*</b> 	<ul style="list-style-type: none"> <li>20- minute timer with LED light</li> <li>Boosts system to high speed with the touch of a button</li> <li>Up to 5 can be used in one system</li> <li>Use in bathroom, kitchen, laundry room</li> </ul>	
<b>RTS3</b> 	<ul style="list-style-type: none"> <li>Press button once and unit will operate in continuous mode on HIGH speed for 20 minutes (Green).</li> <li>Press button a second time and unit will operate in continuous mode on HIGH speed for 40 minutes (Yellow).</li> <li>Press button a third time and unit will operate in continuous mode on HIGH speed for 60 minutes (Red).</li> <li>Press button a fourth time to cancel the timer (LED turns off).</li> </ul>	
<b>MDEH1</b> 	<ul style="list-style-type: none"> <li>Rotary dial Dehumidistat</li> <li>Multiple units can be used</li> <li>We recommend setting the relative humidity above 80% during the summer</li> </ul>	

\*Maintain polarity between control and HRV

(+ → + ; - → -)

# Maintenance



## **CAUTION** MAKE SURE UNIT IS UNPLUGGED BEFORE ATTEMPTING ANY MAINTENANCE WORK

The following components should also be inspected regularly and well maintained.

**The motor** - The motors are factory balanced and lubricated for life. They require no maintenance.

**The unit** - The inside of the unit should be wiped clean as needed.


**Condensation Pan** - Units with drain hoses should have their line and connection checked regularly.

**Outside hoods** - The outside hoods need to be checked every season to make sure there are no leaves or insects blocking the airflow. Check regularly that there are no pollutants near the intake hood. Make sure they are clear of any snow accumulation during the winter months.

## **FILTERS**

The filters need to be checked and cleaned once a month or when they appear dirty.

## **FIXED PLATE**

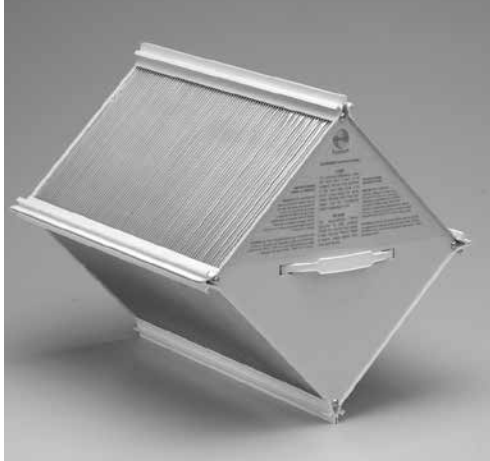

### **Clean cores on a average every 3-6 months or as needed.**


- a) Open access door & remove filters.
- b) Carefully pull on handle of core and pull evenly outward. Cores may be snug, but will slide out of the channel.
- c) Wash the cores in warm soapy water or light coil solution.
- d) Install clean cores making sure the matting surfaces have one sealing edges between each cores to minimize leaks.
- e) Install the clean filters
- f) Replace access door

**Note:** Core installation label on the outer end of the core.

### **To install the clean Core and Filters.**

- a) First mount the bottom flange of the core guide into the bottom channel approximately 6mm (1/4")
- b) Mount the left or right side flange of the core guide approximately 6mm (1/4") followed by the other side
- c) Mount the top flange of the core guide into the top channel approximately 6mm (1/4")
- d) With all four corners in place and the core straight and even, push hard in the centre of the core until the core stops on the back of the cabinet.

## Wiring diagram SHR 8005R and SHR 14105R

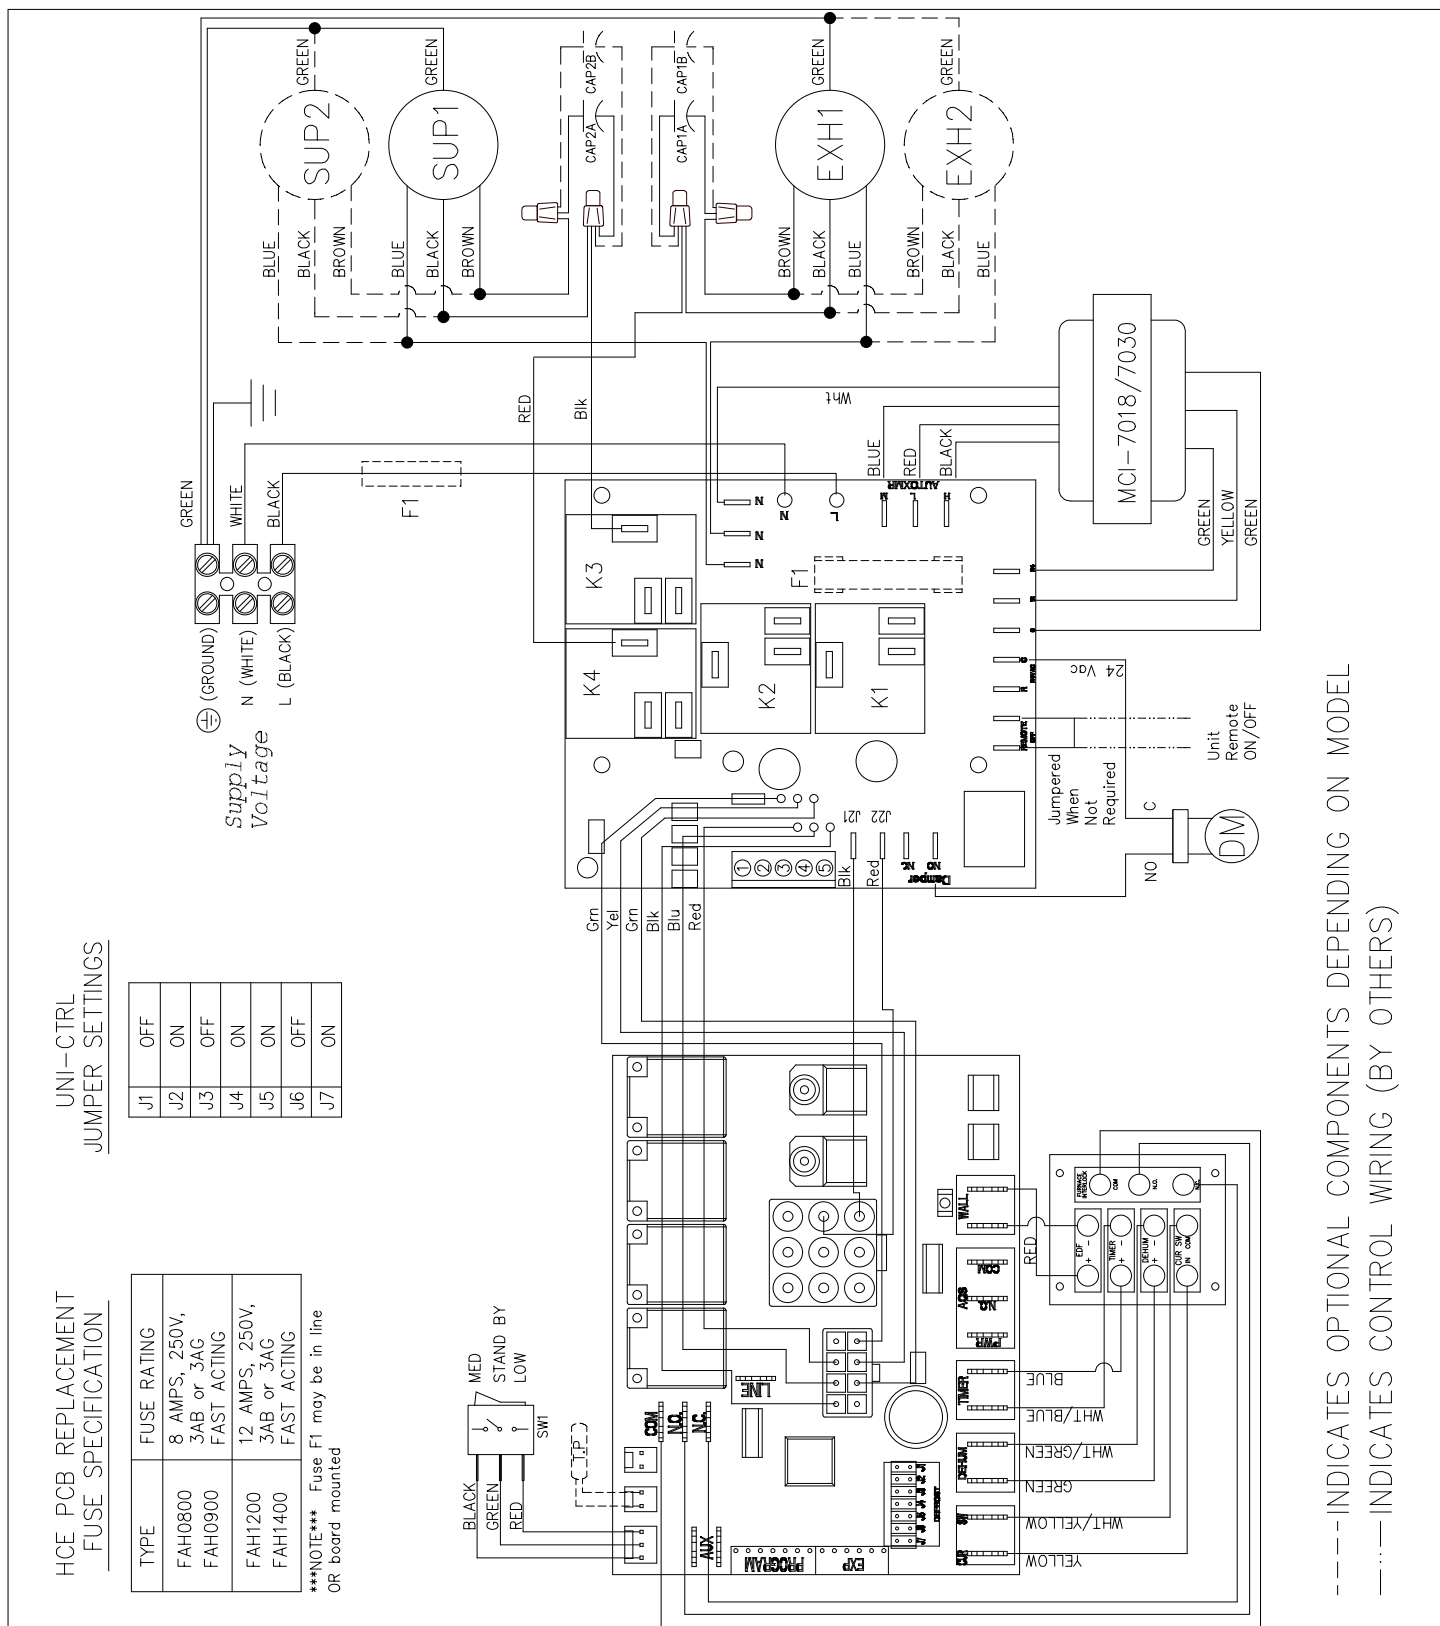

-----INDICATES OPTIONAL COMPONENTS DEPENDING ON MODEL  
 -----INDICATES CONTROL WIRING (BY OTHERS)

# Installation Verification Test

## SHR 8005R, SHR 14105R Models

### Without External Control

1. Fan speed selector switch
  - Set fan Speed selector switch to Standby.
2. Start-up
  - Apply power to unit
  - Unit should enter **Recirculation** mode for a 30 second duration and the following should occur:
    - ☐ Supply fan runs in HIGH speed
    - ☐ Exhaust fan remains off
3. Standby
  - Following the start-up unit should enter **Standby** mode. The following should occur:
    - ☐ Supply fan shuts off
    - ☐ Exhaust fan remains off
4. LOW speed
  - Set fans speed selector switch low speed. The following should occur:
    - ☐ Supply fan runs in LOW speed
    - ☐ Exhaust fan runs in LOW speed
5. Medium speed
  - Set fans speed selector switch MED speed. The following should occur:
    - ☐ Supply fan ramps up to MED speed
    - ☐ Exhaust fan ramps up to MED speed
6. Test completion
  - Set fan speed selector switch to desired setting
  - Installation Verification test is complete

### With external control

1. Start-up
  - Apply power to unit
  - Unit should enter **Recirculation** mode for a 30 second duration and the following should occur:
    - ☐ Supply fan runs in HIGH speed
    - ☐ Exhaust fan remains off
2. External control
  - Following start-up unit will respond to external control
  - Consult user manual/instruction provided with external controller and ensure unit responds appropriately.
3. Test completion
  - Installation Verification test is complete

## Limited Warranty

- The heat recovery aluminum core has a lifetime warranty. Fantech offers a lifetime warranty on the heat recovery core when installed in high humidity applications such as indoor pools and spas. During its lifetime oxidation may occur on the surface of the plates which is considered normal and does not need replacing. Fantech limits defects to condensation leaks as a result of perforation due to corrosion caused by normal use.
  - Fantech HRV's have a warranty that is limited to 3 years on all parts from the date of purchase, including parts replaced during this time period. If there is no proof of purchase available, the date associated with the serial number will be used for the beginning of the warranty period.
  - The motors found in all Fantech HRVs require no lubrication, and are factory balanced to prevent vibration and promote silent operation.
  - The limited warranty covers normal use. It does not apply to any defects, malfunctions or failures as a result of improper installation, abuse, mishandling, misapplication, fortuitous occurrence or any other circumstances outside Fantech's control.
  - Inappropriate installation or maintenance may result in the cancellation of the warranty.
  - Any unauthorized work will result in the cancellation of the warranty.
  - Fantech is not responsible for any incidental or consequential damages incurred in the use of the ventilation system.
  - Fantech is not responsible for providing an authorized service centre near the purchaser or in the general area.
  - Fantech reserves the right to supply refurbished parts as replacements.
  - Transportation, removal and installation fees are the responsibility of the purchaser.
  - The purchaser is responsible for adhering to all codes in effect in his area.
- \* This warranty is the exclusive and only warranty in effect relative to the ventilation system and all other warranties either expressed or implied are invalid.

Fantech reserves the right to make technical changes.  
For updated documentation please refer to [www.fantech.net](http://www.fantech.net)

Fantech®

