

QE *Pro* Scientific-grade Spectrometer Installation and Operation Manual



For Products: QE *Pro* Document: 891-00000-000-02-201603

A HALMA COMPANY

AMERICAS & WORLD HEADQUARTERS

Phone: +1 727-733-2447 Fax: +1 727-733-3962

Sales: info@oceanoptics.com Orders: orders@oceanoptics.com techsupport@oceanoptics.com Support:

Ocean Optics, Inc. 830 Douglas Ave. Dunedin, FL 34698 USA

Manufacturing & Logistics 4301 Metric Dr. Winter Park, FL 32792 USA

EUROPE, MIDDLE EAST & AFRICA

Phone: +31 26-319-0500 +31 26-319-0505 Fax: Email: info@oceanoptics.eu

Germany: +49 711-341696-0 UK : +44 1865-811118 France : +33 442-386-588

ASIA

Phone: +86 21-6295-6600 Fax: +86 21-6295-6708 Email: asiasales@oceanoptics.com

Japan & Korea: +82 10-8514-3797

Sales & Support

Geograaf 24 6921 EW Duiven The Netherlands

Manufacturing & Logistics Maybachstrasse 11

73760 Ostfildern Germany

Ocean Optics Asia

666 Gubei Road Kirin Tower Suite 601B Changning District Shanghai PRC, 200336

www.oceanoptics.com

Copyright © 2014 Ocean Optics, Inc.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, by any means, electronic, mechanical, photocopying, recording, or otherwise, without written permission from Ocean Optics, Inc. Trademarks

All products and services herein are the trademarks, service marks, registered trademarks or registered service marks of their respective owners. Limit of Liability

Every effort has been made to make this manual as complete and as accurate as possible, but no warranty or fitness is implied. The information provided is on an "as is" basis. Ocean Optics, Inc. shall have neither liability nor responsibility to any person or entity with respect to any loss or damages arising from the information contained in this manual.

Table of Contents

About This Manual	. iii
Document Purpose and Intended Audience	. iii
Document Summary	. iii
Product-Related Documentation	. iii
Upgrades	. iv
Warranty	
ISO Certification	
Compliance	

Chapter 1: Introduction	1
Product Overview	1
Models	2
Features	2
System Requirements	3
EEPROM Utilization	4
About Ocean Optics Software	4
Sampling System Overview	4
How Sampling Works	4
Modular Sampling Accessories	4
Interface Options	4
Shipment Components	5
Other Accessories Available	
Breakout Box	6

Chapter 2: Installing the QE Pro7

Overview	7
QE Pro Installation	7
USB Mode	7
QE Pro Spectrometer Device Driver Installation	8
Installing the Driver Software for QE Pro Spectrometers on Windows 7 (32 and 64-bit)	8
Installing the Driver Software for QE Pro Spectrometers on on Windows XP (32 and 64-bi	
	10
Serial Port Mode	12
LED Operation	12



Configuring the QE Pro	
Configuring QE <i>Pro</i> in OceanView	
OceanView QE Pro Acquisition Controls	
Connect Spectroscopic Accessories	
External Triggering Options	
Change the Slit	

Chapter 3: Troubleshooting......20

Overview	20
QE Pro Connected to Computer Prior to Software Installation	20
Windows Operating Systems	20
Remove the Unknown Device from Windows Device Manager	20
Apple Mac OSX Operating Systems	21
Linux Operating Systems	21

Appendix A: Calibrating the Wavelength of the QE Pro22

Overview	22
About Wavelength Calibration	22
Calibrating the Spectrometer	23
Preparing for Calibration	23
Calibrating the Wavelength of the Spectrometer	23
Saving the New Calibration Coefficients: USB Mode	25

Appendix B: Specifications......27

Overview	27
How the QE Pro Works	27
QE Pro Components Table	28
QE Pro Specifications	29
CCD Detector Specifications	29
QE Pro Spectrometer Specifications	29
System Compatibility	30
30-Pin Accessory Connector Pinout	31
30-Pin Accessory Connector Pinout Diagram	31
30-Pin Accessory Connector – Pin Definitions and Descriptions	31
30-Pin J2 Accessory Connector - Part Numbers	33
HR4-CBL-DB15 Accessory Cable Pinout	33

ndex	25

About This Manual

Document Purpose and Intended Audience

This document provides the user of the QE *Pro* Spectrometer with instructions for setting up, calibrating and performing experiments with their spectrometer.

What's New in this Document

This version of the *QE Pro Scientific-grade Spectrometer*, *Installation and Operation Manual* updates information about the optional shutter.

Document Summary

Chapter	Description
Chapter 1: <u>Introduction</u>	Contains descriptive information about the QE <i>Pro</i> Spectrometer and how sampling works. It also provides a list of system requirements, interface options, and shipment components.
Chapter 2: Installing the QE Pro	Provides installation and configuration instructions.
Chapter 3: <u>Troubleshooting</u>	Contains recommended steps to isolate and correct common problems.
Appendix A: <u>Calibrating the</u> <u>Wavelength of the QE Pro</u>	Provides instructions for calibrating the QE <i>Pro</i> Spectrometer.
Appendix B: <u>Specifications</u>	Contains technical specifications and connector pinouts for the QE <i>Pro</i> Spectrometer.

Product-Related Documentation

You can access documentation for Ocean Optics products by visiting our website at <u>http://www.oceanoptics.com</u>. Select *Support* \rightarrow *Technical Documents*, then choose the appropriate document from the available drop-down lists.

Document for	Document Location
OceanView software	http://oceanoptics.com/wp-content/uploads/OceanViewIO.pdf
HR-4 Breakout Box	http://oceanoptics.com/wp-content/uploads/HR-4-Breakout-Box.pdf
External triggering	http://oceanoptics.com/wp-content/uploads/External-Triggering- Options_Firmware3.0andAbove.pdf
Device driver issues	http://oceanoptics.com/wp-content/uploads/Correcting-Device-Driver-Issues.pdf



Ocean Optics offers a Glossary of spectroscopy terms to help you further understand your state-of-the-art products and how they function, located at: <u>http://oceanoptics.com/glossary/.</u>

Upgrades

Occasionally, you may find that you need Ocean Optics to make a change or an upgrade to your system. To facilitate these changes, you must first contact Customer Support and obtain a Return Merchandise Authorization (RMA) number. Please contact Ocean Optics for specific instructions when returning a product.

Warranty

Our 3-Year Warranty covers Ocean Optics miniature fiber optic spectrometers, light sources and sampling accessories – regardless of the application – from manufacturing defects. It also covers fibers and probes for a full 12 months: <u>http://oceanoptics.com/services/exclusive-3-year-warranty/.</u>

This comprehensive warranty ensures you of the highest level of craftsmanship and reliability for years to come. No other manufacturer offers such a solid guarantee of quality and reliability.

The Ocean Optics 3-Year Warranty applies to Ocean Optics equipment (excluding OEM configurations) purchased on or after July 1, 2010. The warranty covers parts and labor needed to repair manufacturing defects that occur during the warranty period. We also will cover the costs of shipping warranty-related repairs from our customers to Ocean Optics and from us to our customers.

ISO Certification

Ocean Optics, the industry leader in miniature photonics, has been certified for ISO 9001:2008 certification applicable to the design and manufacture of electro-optical equipment since 2009.

Compliance

WARNING

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.



FCC COMPLIANCE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference at his on expense.

WARNING: The authority to operate this equipment is conditioned by the requirement that no modifications will be made to the equipment unless the changes or modifications are expressly approved by the manufacturer.

Chapter 1 Introduction

Product Overview

The Ocean Optics QE *Pro* Spectrometer is a scientific-grade spectrometer that is ideal for researchers and industrial customers. Its broadband sensitivity, from UV to NIR, makes it suitable for a wide range of applications, while its high sensitivity and thermo electric cooler enable effective measurements at very low light levels. The QE *Pro* also has the highest dynamic range of any fiber optic CCD spectrometer in its class.

Two LEDs are provided to monitor spectrometer and TEC operation. The QE *Pro* operates from power provided from a separate +5VDC power supply.



Ocean Optics QE Pro High-Sensitivity Fiber Optic Spectrometer

The QE *Pro* features a Hamamatsu low-etaloning, back-thinned FFT-CCD detector with a 2-D arrangement of pixels (1044 horizontal x 64 vertical) that is responsive from 200-1100 nm and has a peak quantum efficiency of ~90% (with a QE of 65% at 250 nm). The detector's columns are binned, or summed, inside the detector prior to the readout process, thereby minimizing readout noise. Additionally, the detector can be cooled from 40°C below ambient up to 50°C with the onboard TE-Cooler to reduce dark noise. The reduction of noise and dark signal allows integration times of the spectrometer (analogous to the shutter speed of a camera) of up to 60 minutes, which greatly enhances the detection limit in low-light level applications. The back-illuminated detector coatings that can be difficult to apply consistently from batch to batch.

The combination of the spectrometer's low-noise detector and 18-bit A/D Converter delivers a dynamic typical range of ~85,000:1 and a signal-to-noise ratio of 1000:1 (at full signal).

Replaceable slits are offered for added convenience. Deep UV option includes purge port.

1: Introduction



The QE *Pro*'s onboard module has 10 user-programmable digital I/O lines for interfacing to other equipment; and a pulse generator for triggering other devices. You can use the I/Os to flash a lamp, stop/start a process, and send a message/alarm during the spectrometer's integration period. The spectrometer's operating parameters can be controlled through software. In fact, wavelength calibration coefficients unique to each spectrometer are programmed into a memory chip right on the spectrometer.

The QE *Pro*'s high-speed electronics have been designed for considerable flexibility in connecting to various modules and external interfaces, including PCs, PLCs and other embedded controllers, through USB 2.0 or RS-232 communications.

A +5 VDC external power supply is required to operate the spectrometer. This power supply is included with your spectrometer.

An optional internal shutter is available on custom-configured spectrometers (INTERNAL-SHUTTER-LRG-BENCH). This makes it easier to take dark measurements and when you need fast integration times with the best possible signal. This optional feature is also recommended for probe-based or emissive measurements where it is difficult to introduce a shutter into the optical path. The shutter can be added to an existing QE *Pro* for an extra charge.

Models

The QE Pro is custom configurable for your specific application. In addition, the following preconfigured models are offered:

- **QE** *Pro*-**ABS** For absorbance, reflection, irradiance and transmission measurements with a wavelength range of 200 950 nm
- QE Pro-FL For fluorescence measurements with a wavelength range of 350 1100 nm
- **QE** *Pro*-Raman for 785 nm Raman analysis with a wavelength range of 780 1100 nm (preset for 785 Raman)

Features

- Hamamatsu S7031-1006S Detector:
 - Typical dynamic range ~85,000:1
 - Peak QE: 90%
 - · Back-thinned for enhanced UV sensitivity
 - Integration times from 8 ms to 60 minutes
 - TE Cooled
- Scientific-grade Optical Bench:
 - Symmetrical Crossed Czerny Turner
 - 101mm focal length
 - F number : f/4
 - Interchangeable slits
 - 14 gratings (H1 H14); HC1
 - 6 slit widths, plus no slit in SMA or FC bulkhead





- Communications
 - USB 2.0 Full Speed
 - RS232 up to 460K Baud
- Thermo Electric Cooler (TEC)
 - Software-controlled set-point
 - LED indicator to show when the TEC is stable and accurate
 - Temperature stability: <0.1°C
 - Continuous TEC setpoint control 15 to 40°C below ambient
- GPIO
 - Single strobe
 - Continuous strobe
 - 10 user-programmable digital I/O pins
 - SPI/I2C for controlling peripherals
- Nonvolatile storage
 - Wavelength calibration coefficients
 - Linearity correction coefficients
 - Absolute irradiance calibration (optional)
- Buffering
- Triggering (4 modes)
- Resets
 - Watchdog timer for reliability
 - Hardware power recycle via reset pin or software command
- Kensington[®] security slot
- Optional shutter for dark measurements requiring a fast integration time and good throughput Specify when ordering
- LEDs for feedback on TEC readiness and general spectrometer health
- Software support:
 - OceanView
 - OmniDriver
 - SeaBreeze
- CE certification

System Requirements

You can use the QE *Pro*'s USB connectivity with any computer that meets the requirements for the spectrometer operating software being used (Windows XP/Vista/Windows 7, Mac OS X and Linux). See *About Ocean Optics Software*.

Alternately, the QE *Pro* has a serial port for connecting to PCs and PLCs. However, this connection method requires an external power supply to power the QE *Pro*, the Breakout Box, and a serial cable.



EEPROM Utilization

Nonvolatile memory in each QE *Pro* contains wavelength calibration coefficients, linearity coefficients, and a serial number unique to each individual spectrometer. The OOI software application reads these values directly from the spectrometer, enabling the ability to "hot-swap" spectrometers between computers without entering the spectrometer coefficients manually on each computer.

About Ocean Optics Software

OceanView is the latest generation of operating software for all Ocean Optics spectrometers. It is a completely modular, Java-based spectroscopy software platform that operates on Windows, Macintosh and Linux operating systems. The software can control any Ocean Optics USB spectrometer and device.

OceanView is a user-customizable, advanced acquisition and display program that provides a real-time interface to a variety of signal-processing functions. With OceanView, you have the ability to perform spectroscopic measurements (such as absorbance, reflectance, and emission), control all system parameters, collect and display data in real time, and perform reference monitoring and time acquisition experiments. Consult the OceanView manual for hardware requirements when using OceanView (see *Product-Related Documentation*).

Sampling System Overview

How Sampling Works

Ocean Optics components function in a sampling system as follows in this example:

- 1. The user stores reference and dark measurements to correct for instrument response variables.
- 2. The light transmits through an optical fiber to the sample.
- 3. The light interacts with the sample.
- 4. Another optical fiber collects and transmits the result of the interaction to the spectrometer.
- 5. The spectrometer measures the amount of light and transforms the data collected by the spectrometer into digital information.
- 6. The spectrometer passes the sample information to Ocean Optics software.
- 7. Ocean Optics software compares the sample to the reference measurement and displays processed spectral information.

Modular Sampling Accessories

Ocean Optics offers a complete line of spectroscopic accessories for use with the QE *Pro*. Most of our spectroscopic accessories have SMA connectors for application flexibility. Accordingly, changing the sampling system components is as easy as unscrewing a connector and replacing an accessory.

Interface Options

The QE *Pro* has both USB and serial port connectors (with the use of an adapter), enabling you to connect the spectrometer to a desktop or notebook computer via a USB port or serial port.



Computer Interface	Operating System Requirements	Part Needed	Description of Part
Computer via USB Port	OceanView: Windows XP/7/8 or Vista (32- bit only) for PC, OS X version 10.5 Intel or later for Mac, or any version released for an x86 or amd64 platform since 2010 for Linux	USB-CBL-1 (included)	Cable that connects from USB port on QE <i>Pro</i> to USB port on desktop or notebook PC
Desktop or Notebook PC via Serial Port	Any 32-bit or 64-bit Windows operating system	HR4- BREAKOUT (not included)	Adapter block that enables connection from serial port on QE <i>Pro</i> to serial port on desktop or notebook PC; comes with 5 VDC power supply (required when connecting to serial port)

Shipment Components

- □ QE Pro Spectrometer
- □ USB-CBL-1
- \Box + 5VDC power supply

The following information and documentation also ships with the QE Pro Spectrometer:

Packing List

The packing list is inside a plastic bag attached to the outside of the shipment box (the invoice arrives separately). It lists all items in the order, including customized components in the spectrometer (such as the grating, detector collection lens, and slit). The packing list also includes the shipping and billing addresses, as well as any items on back order.

Wavelength Calibration Data Sheet

Each spectrometer is shipped with a Wavelength Calibration Data Sheet that contains information unique to your spectrometer. Your spectrometer operating software reads this calibration data from your spectrometer when it interfaces to a computer via the USB port.

Note

Please save the Wavelength Calibration Data Sheet for future reference.



Other Accessories Available

Visit us at <u>www.OceanOptics.com</u> for a complete list of products available for all of your spectroscopy needs.

- □ Interchangeable Slits
- □ Fibers
- □ Light Sources
- Integrated Sampling Systems
- **D** Cuvettes
- **Gilter Holders**
- **Lithium Ion Battery Pack**
- **HR4-BREAKOUT Breakout Box**

Breakout Box

Ocean Optics also offers the Breakout Box (HR4-BREAKOUT), a passive module that separates the signals from their 22-pin port to an array of standard connectors and headers, enabling easy access to a variety of features found in Ocean Optics' QE *Pro* Spectrometer. In addition to the accessory connector, the breakout box features a circuit board based on a neutral breadboard pattern that allows custom circuitry to be prototyped on the board itself.

Note

Be aware when using the Breakout Box that the signals for hardware flow control (handshaking) are not connected in the QE *Pro*.

Chapter 2

Installing the QE Pro

Overview

You must install the operating software application prior to connecting the QE *Pro* Spectrometer to the computer. The Ocean Optics spectrometer operating software installs the drivers required for the QE *Pro* spectrometer installation. If you do not install the software first, the system will not properly recognize the QE *Pro*.

If you have already connected the QE *Pro* to the computer prior to installing the operating software, consult *Chapter 3:* <u>*Troubleshooting*</u> for information on correcting a corrupt QE *Pro* installation.

QE Pro Installation

This section contains instructions for connecting the QE Pro via both USB and serial modes.

USB Mode

This section contains instructions for connecting the QE *Pro* in USB mode. To connect the QE *Pro* to a computer via the USB port, the computer must be running a Windows XP/7/8/10 or Vista (32-bit only), Mac OS X (10.5 or later), or Linux (x86 or amd64 platform since 2010) operating system.

Procedure

Follow the steps below to connect the QE Pro to a computer via the USB port:

1. Install the spectrometer operating software on the destination computer.

Caution

Do NOT connect the spectrometer to the computer until you install the spectrometer operating software. Follow the instructions below to properly connect and configure your system.

- 2. Plug the +5 VDC power supply into the QE Pro.
- 3. Locate the USB cable (USB-CBL-1) provided with the QE Pro.
- 4. Insert the square end of the cable into the side of the QE Pro.
- 5. Insert the rectangular end of the cable into the USB port of the PC.




QE *Pro* **Spectrometer Device Driver Installation**

The QE Pro spectrometer requires special device driver installation instructions. Choose the appropriate instructions listed below depending on the type of Windows system your computer is running.

Installing the Driver Software for QE Pro Spectrometers on Windows 7 (32 and 64-bit)

When you first plug in your spectrometer, Windows 7 will attempt (unsuccessfully) to automatically install the driver for your spectrometer. Click close to close the warning message:

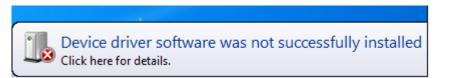

► Procedure

To manually install the new 64-bit driver for your spectrometer:

1. Click Change setting.

測 Driver Software Installation	X
Device driver software was not successfully installed	
QE-PRO XNo driver found	
You can change your setting to automatically search Windows Update for drivers Change setting	
What can I do if my device did not install properly?	
(Close

2. Select Yes, do this automatically.



Device Installation Settings
Do you want Windows to download driver software and realistic icons for your devices?
Yes, do this automatically (recommended)
No, let me choose what to do
Why should I have Windows do this automatically?
Save Changes Cancel

The system installs the device driver software.


Driver Software Installation	×
Installing device driver software	
QE-PRO O Searching Windows U	Jpdate
Obtaining device driver software from Windows Update might take a wh Skip obtaining driver software from Windows Update	iile.
	Close

When the installation process has finished successfully, the following screen displays:



Driver Software Installation		—
WinUsb Device installed		
WinUsb Device	Ready to use	
		Close

The Device Manager reports the following information:

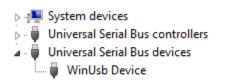

Installing the Driver Software for QE *Pro* Spectrometers on on Windows XP (32 and 64-bit)

► Procedure

1. When you first plug in your spectrometer, Windows XP displays the following screen. Choose No, not this time.



2. Choose Install from a list or specific location (Advanced).



ound New Hardware Wizard
Image: Second
< <u>B</u> ack <u>Next</u> Cancel

3. Navigate to C:\Program Files\Ocean Optics\OmniDriver\winusb_drivers.

Found New Hardware Wizard
Please choose your search and installation options.
Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM)
✓ Include this location in the search:
C:\Program Files\Ocean Optics\OmniDriver\winusb_ 🖌 🖪 rowse
O Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< <u>B</u> ack <u>N</u> ext > Cancel

4. The Progress window appears. When the installation has completed, the final window appears. Click **Finish** to complete the installation.





Serial Port Mode

Procedure


Follow the steps below to connect the QE Pro to the PC via serial port:

- 1. Plug the 5 VDC external power supply into an outlet and connect it to the QE Pro.
- 2. Connect the serial cable adapter block to the appropriate pins of the QE *Pro*'s 30-Pin Accessory Connector.
- 3. Connect one end of the 9-pin serial cable to the adapter block on the QE *Pro*, and then connect the other end to a serial port on the PC.
- 4. Note the number of the serial port (COM Port) to which you connected the QE *Pro* (some PCs may not have numbered ports; handheld PCs typically have only one serial port).

LED Operation

The OE Pro	features two	status LEDs:
Inc QLIIO	reatures the	Statas LLDS.

LED Position	Meaning
Top LED	Monitors Spectrometer status:
	Off – spectrometer does not have power
	 Flashing orange – spectrometer is booting
	 Steady green – spectrometer is ready

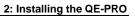



LED Position	Meaning		
Bottom LED	Monitors TEC status:		
	Off: The TEC system is off.		
	Orange: The TEC has not yet stabilized at its given setpoint.		
	 Green: The TEC is stable (has been within 1°C of the setpoint for at least 15 seconds). 		

Configuring the QE Pro

The *QE Pro* can be used with OceanView software when connected to the USB port. If you have followed the previous steps and started your spectrometer operating software, the spectrometer is already acquiring data. Even with no light in the spectrometer, there should be a dynamic trace displayed in the bottom of the graph. If you allow light into the spectrometer, the graph trace should rise with increasing light intensity. This means the software and hardware are correctly installed.

Configuring QE Pro in OceanView

If you have followed the previous steps and started OceanView, your spectrometer appears in the Schematic and Graph Views:

× 🔁 🗖 🖉 🛤		
	Wew_1 x	•••
Q 🔀	▶ ▶ 🖳 🤜 أ + ‡ ♥ ♥ ♥ ♥ ♥ ♥ 🖤 🗰 🗎 🛱	-
	≪ 🛠 🖂 🗶 Ⅲ ᠕	
	250000	
	2000	
	200000	
e 🔊 🚬 e e e e e 🎦 e e e e e 📐		
Acquire_1		
Device: QE PRO 005		
	150000	
	8	
	sity	
	leg l	
	50000	
	1 Internet and the second seco	
		100
	U 200 400 600 800 Wavelength (nm)	10

QE Pro in OceanView



OceanView QE Pro Acquisition Controls

In OceanView, the Acquisition Parameter Controls allow you to set the desired parameters for QE Pro.

Acquisition Parameter Controls										×
Main Controls Add/Remove Controls										
Acquire	Ac	quisition De	ay	0	🗘 mse	c Ru	nning			
Integration Time: Automatic	^	250000 -			L _	!	 		L _	!_
100 🗘 ms 🖌			-				1			-
Scans to Average: 1 🗘		200000 -		 	 !					
Boxcar width: 0 🗘					1		1	1		
No dark spectrum stored.	≡	000001 (counts)								
Nonlinearity Correction:		l III			1	1	1	1		
Stray Light Correction:		50000 ·		 	 					
Trigger Mode: On Demand 🗸					I	i	i I	1		
X-Axis: Wavelength (nm)		0.		450	sio	sio	800	ŝ	700	750
Strobe/Lamp Enable:	~		400	430			900 gth (nm)	650	/00	730
								Exit) <u>H</u> el	P

TE Cooler

► Procedure

To control the TE Cooler,

- 1. Right-click on the QE *Pro* in the Schematic View.
- 2. Select New Acquisition | Thermo-Electric Cooling.



Acquisition Parameter Controls	
Main Controls Add/Remove Controls	
Acquire	cquisition Delay 2,000 🜩 msec Running
Thermo-Electric Cooling TEC: O Enabled Detector Set Point: -5 C	25.2°C
	Exit <u>H</u> elp

Buffering

► Procedure

To control buffering,

- 1. Right-click on the QE *Pro* in the Schematic View.
- 2. Select New Acquisition | Data Buffer.

Data buffering can also be set using the Acquisition Parameter Controls.

Procedure

To add data buffering controls to the Acquisition Parameter Controls,

- 1. Click on the Add/Remove Controls tab.
- 2. Select Data Buffer. The Data Buffer controls appear on the Main Controls tab.



Acquisition Parameter Controls
Main Controls Add/Remove Controls
Acquire II Acquisition Delay 0 🗘 msec Running
Scans to Average: 1 💭 🙆 230000 + +
Boxcar width: 0 📚
No dark spectrum stored.
Stray Light Correction: Image: Construction in the image: Constructine in the image: Construction in the image: Construction i
X-Axis: Wavelength (nm)
Strobe/Lamp Enable:
Clear Buffer
Exit Help

- 3. Select the data buffering capacity (the total number of scans the device can store at once).
- 4. Click **Clear Buffer** to set the buffer to zero and start over.

Optional Shutter

Procedure


To enable the optional shutter,

- 1. In the Acquisition Group window, click on the Add/Remove Controls tab.
- 2. Select GPIO. The GPIO controls appear on the Main Controls tab.
- 3. Check the **Out** box for Index 4. This makes the GPIO an output.
- 4. Check the Value box for Index 4 to close the shutter. You can now take your dark measurement.



00493_1 Controls Add/Remove Controls II Running Data Update Rate 0 v msec	~	+ + +	t. t															< > •
		*		2	æ e	ə o	sm	🦽 rə	m		ካ 🖂	ny e	<u>م</u>	1X E	⊲ ♠	Ħ	.\ @	¢ [
			t. †	٩	9, 1	~ ~	. V		ш				P				Nu 🕾	~ L
			1		:			1				1			1		1	
ans to Average: 1 🚔 🧭	Î Î	~~~																
oxcar width: 0 🐳										1								
ectric Dark:																		
onlinearity Correction:										 		1						
igger Mode: Continuous 🔹										1		1						
Axis: Wavelength (nm) 👻	B a	500																
trobe/Lamp Enable:	Intensity (counts)				i													
OIO	Ě				ļ			1		1 1 1		1						
ndex Value Out? Alt?	tens	100						: : +		, , +		, , +	+					
1	드				}													
3																		
		200								, , L								
6										 								
8 9 9					1					1								
9		0			ا استخدار	and the second second		; 	and the second second		and a second second	i humana			mud	and a constant of the	أستمسم	
		Ť.	640		66	0	6	80	70		7. ngth (nm)	20	740		760		78)

5. Uncheck the Value box to open the shutter.

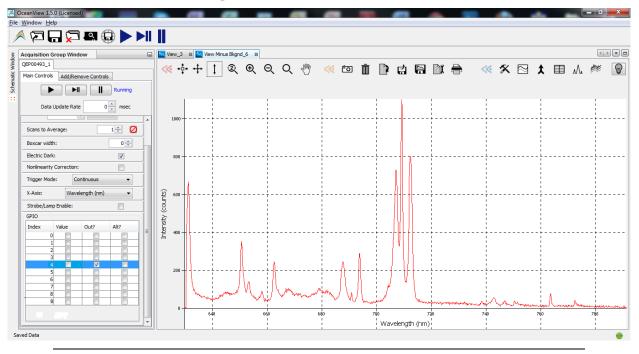

Notes

Make sure the ALT checkbox for the GPIO (Index 4) is not selected, which would prevent the shutter from triggering.

The activation time of the internal shutter is 11 ms.



Connect Spectroscopic Accessories

To find operating instructions for QE *Pro* compatible products (such as light sources, sampling chambers, and probes), visit the Ocean Optics website at http://www.oceanoptics.com/technical/operatinginstructions.asp.

External Triggering Options

You can trigger the QE *Pro* using a variety of External Triggering options through the 30-pin Accessory Connector on the spectrometer. See the External Triggering Options document located at <u>http://oceanoptics.com///wp-content/uploads/External-Triggering-</u> <u>Options_Firmware3.0andAbove.pdf</u>. The triggering document contains instructions for configuring External Triggering options for the QE *Pro*.

Change the Slit

There's no need to calibrate your spectrometer when changing the slit, just install and start measuring. There is one exception to this. You cannot change from a standard slit to a slit with a filter because it changes the optical focus and wavelength calibration of the spectrometer. In this case you would need to send the spectrometer back to Ocean Optics. A filter must be ordered for each slit (if your application requires a filter) and the spectrometer needs to be calibrated and focused with the filter installed. This only applies to filters installed inside the slit assembly.

Procedure

1. Find the SMA connector. If a fiber is attached, remove it.



- 2. Use the Allen key to remove the 2 the screws attaching the slit to the spectrometer.
- 3. Pull the slit out of the spectrometer.
- 4. Put the new INTSMA slit connector into the spectrometer; with the key of the connector on the left side.





- 5. Install the 2 screws again. Use the Allen key to tighten the screws carefully (do not over-tighten).
- 6. If necessary, connect the fiber again.

Chapter 3 Troubleshooting

Overview

The following sections contain information on troubleshooting issues you may encounter when using the QE *Pro* Spectrometer.

QE *Pro* Connected to Computer Prior to Software Installation

Windows Operating Systems

If you connected your Ocean Optics QE *Pro* device to the computer prior to installing your spectrometer operating software application (OceanView) on a Windows platform, you may encounter installation issues that you must correct before your Ocean Optics device will operate properly.

Follow the applicable steps below to remove the incorrectly installed device, device driver, and installation files.

Note

If these procedures do not correct your device driver problem, you must obtain the *Correcting Device Driver Issues* document from the Ocean Optics website: http://oceanoptics.com///wp-content/uploads/Correcting-Device-Driver-Issues.pdf.

Remove the Unknown Device from Windows Device Manager

► Procedure

- 1. Open Windows Device Manager. Consult the Windows operating instructions for your computer for directions, if needed.
- 2. Locate the **Other Devices** option and expand the **Other Devices** selection by clicking on the "+" sign to the immediate left.

Note

Improperly installed USB devices can also appear under the Universal Serial Bus Controller option. Be sure to check this location if you cannot locate the unknown device.



- 3. Locate the unknown device (marked with a large question mark). Right-click on the **Unknown Device** listing and select the **Uninstall** or **Remove** option.
- 4. Click the **OK** button to continue. A warning box appears confirming the removal of the Unknown Device. Click the **OK** button to confirm the device removal.
- 5. Disconnect the QE *Pro* from your computer.
- 6. Replug the spectrometer into your computer.

The system should now be able to locate and install the correct drivers for the USB device.

Apple Mac OSX Operating Systems

Since there are no device files for the QE *Pro* Spectrometer in a Mac operating system, you should not encounter any problems if you installed the spectrometer before the operating software.

Linux Operating Systems

For Linux operating systems, all you need to do is install the software, then unplug and replug in the spectrometer. Technically, the driver files for Linux simply give nonprivileged users permission to use newly connected hardware. There isn't any long-term harm to plugging in the device before installing the software.

Appendix A

Calibrating the Wavelength of the QE Pro

Overview

This appendix describes how to calibrate the wavelength of your spectrometer using SpectraSuite spectrometer operating software. Though each spectrometer is calibrated before it leaves Ocean Optics, the wavelength for all spectrometers will drift slightly as a function of time and environmental conditions. Ocean Optics recommends periodically recalibrating the QE *Pro*.

About Wavelength Calibration

You are going to be solving the following equation, which shows that the relationship between pixel number and wavelength is a third-order polynomial:

$$\lambda_p = I + C_1 p + C_2 p^2 + C_3 p^3$$

Where:

 λ = the wavelength of pixel p

I = the wavelength of pixel 0

 C_1 = the first coefficient (nm/pixel)

 C_2 = the second coefficient (nm/pixel²)

 C_3 = the third coefficient (nm/pixel³)

You will be calculating the value for *I* and the three *C*s.



Calibrating the Spectrometer

Preparing for Calibration

To recalibrate the wavelength of your spectrometer, you need the following components:

• A light source capable of producing spectral lines

Note

Ocean Optics' HG-1 Mercury-Argon lamp is ideal for recalibration. If you do not have an HG-1, you need a light source that produces several (at least 4-6) spectral lines in the wavelength region of your spectrometer.

- A QE *Pro* spectrometer
- An optical fiber (for spectrometers without a built-in slit, a 50-µm fiber works best)
- A spreadsheet program (Excel or Quattro Pro, for example) or a calculator that performs thirdorder linear regressions

Note

If you are using Microsoft Excel, choose **Tools** | **Add-Ins** and check **AnalysisToolPak** and **AnalysisTookPak-VBA**.

Calibrating the Wavelength of the Spectrometer

► Procedure

Perform the steps below to calibrate the wavelength of the spectrometer:

- 1. Place the spectrometer operating software into Quick View mode in OceanView and take a spectrum of your light source. Adjust the integration time (or the A/D conversion frequency) until there are several peaks on the screen that are not off-scale.
- 2. Move the cursor to one of the peaks and position the cursor so that it is at the point of maximum intensity.
- 3. Record the pixel number that is displayed in the status bar or legend (located beneath the graph). Repeat this step for all of the peaks in your spectrum.
- 4. Use the spreadsheet program or calculator to create a table like the one shown in the following figure. In the first column, place the exact or true wavelength of the spectral lines that you used.

In the second column of this worksheet, place the observed pixel number. In the third column, calculate the pixel number squared, and in the fourth column, calculate the pixel number cubed.



A: Calibrating the Wavelength of the QE Pro

Independent Variable		Dependent Variables		Values Computed from the Regression Output		
True Wavelength (nm)	Pixel #	Pixel # ²	Pixel # ³	Predicted Wavelength	Difference	
253.65	175	30625	5359375	253.56	0.09	
296.73	296	87616	25934336	296.72	0.01	
302.15	312	97344	30371328	302.40	-0.25	
313.16	342	116964	40001688	313.02	0.13	
334.15	402	161604	64964808	334.19	-0.05	
365.02	490	240100	117649000	365.05	-0.04	
404.66	604	364816	220348864	404.67	-0.01	
407.78	613	375769	230346397	407.78	0.00	
435.84	694	481636	334255384	435.65	0.19	
546.07	1022	1044484	1067462648	546.13	-0.06	
576.96	1116	1245456	1389928896	577.05	-0.09	
579.07	1122	1258884	1412467848	579.01	0.06	
696.54	1491	2223081	3314613771	696.70	-0.15	
706.72	1523	2319529	3532642667	706.62	0.10	
727.29	1590	2528100	4019679000	727.24	0.06	
738.40	1627	2647129	4306878883	738.53	-0.13	
751.47	1669	2785561	4649101309	751.27	0.19	

- 5. Use the spreadsheet or calculator to calculate the wavelength calibration coefficients. In the spreadsheet program, find the functions to perform linear regressions.
 - If using Quattro Pro, look under Tools | Advanced Math
 - If using Excel, look under Analysis ToolPak
- 6. Select the true wavelength as the dependent variable (Y). Select the pixel number, pixel number squared, and the pixel number cubed as the independent variables (X). After executing the regression, you will obtain an output similar to the one shown below. Numbers of importance are noted.

Regression Statistics

 Multiple R
 0.999999831

 R Square
 0.999999663

 Adjusted R Square
 0.999999607

 Standard Error
 0.125540214

 Observations
 22

	Int		
	Coefficients	Standard Error	
Intercept	190.473993	0.369047536	First coefficient
X Variable	1 0.36263983 🗲	0.001684745	
X Variable	2-1.174416E-05	8.35279E-07	
X Variable	3-2.523787E-09	2.656608E-10	Second coefficient
Thi	rd coefficient		



7. Record the Intercept, as well as the First, Second, and Third Coefficients. Additionally, look at the value for R squared. It should be very close to 1. If not, you have most likely assigned one of your wavelengths incorrectly.

Keep these values at hand.

Saving the New Calibration Coefficients: USB Mode

Ocean Optics programs wavelength calibration coefficients unique to each QE *Pro* onto an EEPROM memory chip in the QE *Pro*.

You can overwrite old calibration coefficients on the EEPROM if you are using the QE *Pro* via the USB port.

► Procedure

To save wavelength calibration coefficients using the USB mode, perform the following steps:

- 1. Ensure that the QE Pro is connected to the PC and that you have closed all other applications.
- Point your browser to <u>http://oceanoptics.com/support/software-downloads/</u> and scroll down to Utility Programs. Select the QE Pro Update Tool for your operating system.
- 3. Save the files to your computer and extract them from the zip file.
- 4. Double-click the **UpdateQE-PRO.jar** file to run the software.
- 5. Click on the desired QE Pro device displayed in the Devices pane.

🕌 QE-PRO Reflash Utility		
File Firmware		
Refresh Write Coeffi	icients to Devic	8
Devices	Wavelength	Coefficients
🔻 🚞 QE-PRO Devices	Order	Coefficient
Proto5	0	0.0E0
	1	1.0E1
	2	2.0E1
	3	3.0E0
	Nonlinoarity	Coefficients
	Noninearity	coencients
	Order	Coefficient
	0	0.0E0
	1	0.0E0
	2	0.0E0
	3	0.0E0
	4	0.0E0 0.0E0
·	6	0.0E0
Revisions	7	0.0E0
Component Version		
Hardware 0	Stray Light (Coefficients
Host Interface 55	Qualax	O
FPGA 2266	Order	Coefficient
	0	0.0E0
	1	0.0E0

- 6. Double-click on each of the calibration coefficients displayed in the **Wavelength Coefficients** pane of the USB Programmer screen and enter the new values acquired in Step 5 of the *Calibrating the Wavelength of the Spectrometer* section in this appendix.
- 7. Repeat Step 6 for all of the new values.
- 8. Click on the **Write Coefficients to Device** button to save the information, and then select **File**| **Exit** to exit the QE *Pro* Reflash Utility software.

The new wavelength calibration coefficients are now loaded onto the EEPROM memory chip on the QE *Pro*.

Appendix B


Specifications

Overview

This appendix contains information on spectrometer operation, specifications, and system compatibility. It also includes accessory connector pinout diagrams and pin-specific information.

How the QE Pro Works

Below is a diagram of how light moves through the optical bench of a QE *Pro* Spectrometer. The optical bench has no moving parts that can wear or break; all the components are fixed in place at the time of manufacture.

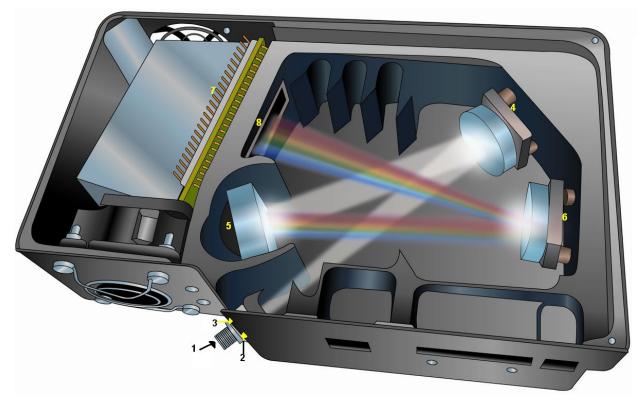

QE Pro Spectrometer with Components



QE *Pro* Components Table

Ocean Optics permanently secures all components in the QE *Pro* at the time of manufacture. Only Ocean Optics technicians can replace interchangeable components, where noted.

Item	Name	Description
1	SMA Connector	Secures the input fiber to the spectrometer. Light from the input fiber enters the optical bench through this connector.
		A dark piece of material containing a rectangular aperture, which is mounted directly behind the SMA Connector. The size of the aperture regulates the amount of light that enters the optical bench and controls spectral resolution.
2	Interchangeable Slit	You can also use the QE <i>Pro</i> without a Slit. In this configuration, the diameter of the fiber connected to the QE <i>Pro</i> determines the size of the entrance aperture.
		The user can change the slit. Ocean Optics also offers a range of FC connector slits in the same wavelengths, with the product code INTFC-XXX. An INTFC-KIT is also available.
3	Filter	Restricts optical radiation to pre-determined wavelength regions. Light passes through the Filter before entering the optical bench. Both bandpass and longpass filters are available to restrict radiation to certain wavelength regions.
		Only Ocean Optics technicians can change the Filter.
4	Collimating	Focuses light entering the optical bench towards the Grating of the spectrometer.
-	⁴ Mirror	Light enters the spectrometer, passes through the SMA Connector, Slit, and Filter, and then reflects off the Collimating Mirror onto the Grating.
5	Grating	Diffracts light from the Collimating Mirror and directs the diffracted light onto the Focusing Mirror. Gratings are available in different groove densities, allowing you to specify wavelength coverage and resolution in the spectrometer.
		Only Ocean Optics technicians can change the Grating.
6	Focusing Mirror	Receives light reflected from the Grating and focuses the light onto the CCD Detector or L2 Detector Collection Lens (depending on the spectrometer configuration).
7	Back-thinned Area Detector with TE Cooling	Provides 90% quantum efficiency and bins pixels in a vertical column to acquire light form the entire height of the spectrometer's slit image. This improves light collection and signal-to-noise significantly. This 2D area detector is back-thinned (back-illuminated) and does not require the detector upgrade that is normally applied to other detectors.
		Only Ocean Optics technicians can add or remove the Detector.
8	Detector with OFLV Filter	Eliminates second-order effects and is used with an HC-1 Grating in a 200-950 nm wavelength system in a QE <i>Pro</i> .



QE *Pro* Specifications

The following sections provide specification information for the CCD detector in the QE *Pro*, as well as the QE *Pro* Spectrometer itself.

CCD Detector Specifications

Specification	Value
Detector	Hamamatsu S7031-1006 Low Etaloning
Detector range	185-1100 nm
Pixels	1024 active
Pixel size	24 µm ²
Quantum efficiency	90% peak; 65% at 250 nm. See <i>Quantum Efficiency of Detector</i> graph below.

QE *Pro* Spectrometer Specifications

Specification	Value				
Integration time	8 ms to 60 minutes				
Typical dynamic range	~85,000:1				
Signal-to-noise ratio	1000:1 (single acquisition)				
Readout Noise	2.5 counts RMS (typical)				
Linearity Corrected	0.5% nonlinearity (max)				
f number	f/4				
Activation time of optional internal shutter	11 ms				
Trigger jitter	10 ns				
Fiber optic connector	SMA 905 and Ocean Optics FC				
Gratings	14 gratings available (H1H14), HC1 grating				



B: Specifications

Specification	Value
Entrance aperture	5, 10, 25, 50, 100 or 200 μm wide slits (or SMA/FC bulkhead with no slit)
Optical resolution (FWHM)	Depends on grating and size of entrance aperture
OFLV filters	OFLV-QE (200-950 nm); OFLV-QE-250 (250-1000 nm); OFLV- QE-300 (300-1050 nm); OFLV-QE-350 (350-1100 nm); OFLV-QE- 400 (400-1150 nm)
Temperature Operation	TE Cooler can only cool 15 to 20 °C below ambient temperature 0 °C to 50 °C
Humidity	≤ 90% noncondensing
Power consumption TEC On @ 40° below ambient TEC Off	15W (Max) 2.5W (Max, Typical)
Supply Voltage	4.5 – 5.5 V
Power-up Time	7 seconds
Interfaces	USB 2.0, 480 Mbps (USB 1.1 compatible); RS-232 (5-wire)
Dimensions (LxWxH)	182 mm (7.16 in.) x 110 mm (4.33 in.) x 47 mm (1.85 in.)
Weight QE <i>Pro</i> Power Supply	1.15 kg (2.6 lbs.) 0.45 kg (1 lb.)

System Compatibility

You can use the QE *Pro*'s USB connectivity with any computer that meets the requirements for the spectrometer operating software being used (Windows XP/Vista/Windows 7/8, Mac OS X and Linux). See <u>About Ocean Optics Software</u>.

Alternately, the QE *Pro* has a serial port for connecting to PCs, PLCs, and other devices with a Windows 32-bit operating system that support the RS-232 communication protocol. However, this connection method requires an external power supply to power the QE *Pro*, the HR4000 Breakout Box, and a serial cable.





30-Pin Accessory Connector Pinout

The QE Pro features a 30-pin Accessory Connector, located on the side of the unit as shown:



Location of QE Pro 30-Pin Accessory Connector

30-Pin Accessory Connector Pinout Diagram

When facing the 30-pin Accessory Connector on the front of the vertical wall of the QE *Pro*, pin numbering is as follows:

USB Port

2	4	6	8	10	12	14	16	18	20	22	24	26	28	30
1	3	5	7	9	11	13	15	17	19	21	23	25	27	29

30-Pin Accessory Connector Pinout Diagram

30-Pin Accessory Connector – Pin Definitions and Descriptions

The following table contains information regarding the function of each pin in the QE *Pro*'s 30-Pin Accessory Connector:

Pin #	Function	Input/Output	Description
1	RS232 Rx	Input	RS232 receive signal – Communicates with a PC over DB9 Pin 3



Pin #	Function	Input/Output	Description
2	RS232 Tx	Output	RS232 transmit signal – Communicates with a PC over DB9 Pin 2
3	GPIO (2)	Input/Output	General Purpose Input Output
4	-	-	Unused
5	Ground	Input/Output	Ground
6	I2C SCL	Input/Output	I2C clock signal for communication to other I2C peripherals
7	GPIO (0)	Input/Output	General Purpose Input Output
8	I2C SDA	Input/Output	I2C data signal for communication to other I2C peripherals
9	GPIO (1)	Input/Output	General Purpose Input Output
10	Ext. Trigger In	Input	CMOS input trigger tolerant from 3-5V
11	GPIO (3)	Input/Output	General Purpose Input Output
12	VOUT	Output	Output power pin for QE Pro
13	SPI_MOSI	Output	SPI Master Out Slave In (MOSI) signal for communication to other SPI peripherals
14	VOUT	Output	Output power pin for QE Pro
15	SPI MISO	Input	SPI Master In Slave Out (MISO) signal for communication to the other SPI peripherals
16	GPIO (4)*	Input /Output	General Purpose Input Output
17	Single Strobe	Output	CMOS (3.3V) output pulse used as a strobe signal – Has a programmable delay relative to the beginning of the spectrometer integration period
18	GPIO (5)	Input/Output	General Purpose Input Output
19	SPI Clock	Output	SPI clock signal for communication to other SPI peripherals
20	Continuous Strobe	Output	CMOS output signal used to pulse a strobe – Divided down from the master clock signal
21	SPI CS	Output	External SPI chip select (active low)
22	GPIO (6)	Input/Output	General Purpose Input Output



Pin #	Function	Input/Output	Description
23	RESET	Input	This pin is pulled up to 5V by a 10K internal resistor. Pull down to ground to reset. Leave open for normal operation.
24	RS-232 CTS	Output	RS-232 Clear to Send control logic signal – used to enable or suspend host transmission to the QE <i>Pro</i>
25	Lamp Enable	Output	CMOS signal driven Active HIGH when the Lamp Enable command is sent to the spectrometer
26	GPIO (7)	Input/Output	General Purpose Input Output
27	RS-232 RTS	Input	RS-232 Request To Send control logic signal used to enable QE <i>Pro</i> transmission to the host
28	GPIO (8)	Input/Output	General Purpose Input Output
29	Ground	Input/Output	Ground
30	GPIO (9)	Input/Output	General Purpose Input Output

30-Pin J2 Accessory Connector - Part Numbers

The part numbers for the 30-pin accessory connector on the QE Pro Spectrometer are as follows:

- The connector is Pak50[™] model from 3M Corp. Headed Connector Part Number **P50–030P1–RR1–TG**.
- The mating connector is Part Number P50–030S–TGF.
- Mating the two components requires two 1.27 mm (50 mil) flat ribbon cables (3M 3365 Series is recommended, HR4-CBL-DB15).

HR4-CBL-DB15 Accessory Cable Pinout

Pin #	Description	Pin #	Description
1	Single_strobe	9	GPIO-9
2	ContStrobe	10	GND_SIGNAL
3	V5_SW	11	SDA
4	ExtTrigIn	12	SCL
5	ExtTrigIn	13	LampEnable
6	GPIO-8	14	A_IN



B: Specifications

7	A_OUT	15	GPIO-7
8	ExtTrigIn		

Index

1

15-pin accessory cable pinouts, 33

3

30-pin accessory connector diagram, 31 part numbers, 33 pin definitions, 31

A

accessories, 6, 17 Accessories, 4 accessory connector pinout, 30 Acquisition Controls OceanView, 14

В

breakout box, 6 buffering, 15

С

Calibrating, iv, 21 calibration, 21 preparing for, 22 procedure, 22 calibration coefficients saving in USB mode, 24 CCD Detector, 28 collimating mirror, 28 compatibility, 30 Components Table, 28 configuring, 13 in OceanView, 13 configuring in OceanView buffering, 15 TE Cooler, 14

D

Detector Collection Lens, 28 document audience, iv purpose, iv summary, iv

Ε

EEPROM, 4 External Triggering, 18

F

features, 2 filter, 28 focusing mirror, 28

G

grating, 28

installation
QE *Pro* spectrometer driver, 8
QE *Pro* spectrometer driver on Windows 7
(32 and 64-bit), 8
QE *Pro* spectrometer driver on Windows XP
(32 and 64-bit), 10
Installation, 7
Serial Port mode, 12
USB mode, 7
installed filter, 28
Interface, 4
ISO certification, v



L2 Detector Collection Lens, 28 LED operation, 12 Lens, 28

Μ

memory chip, 4 mirror, 28 models, 2

0

OceanView Acquisition Controls, 14 configuring in, 13 Options Interface, 4

Ρ

packing list, 5 power supply (external), 2, 3, 5, 7, 30 product-related documentation, iv

Q

QE *Pro* spectrometer driver installation on Windows 7 (32 and 64-bit), 8 installation on Windows XP (32 and 64-bit), 10 QE-PRO specifications, 29

S

Sampling

Accessories, 4 System, 4 Serial Port mode, 12 setup, 7 shipment components, 5 shutter control, 16 slit, 28 change, 18 SMA Connector, 28 specifications, 27 QE-PRO, 29 spectrometer, 29 spectrometer driver installation on QE Pro, 8 spectroscopic accessories, 17 System Requirements, 3

T

TE Cooler, 1, 14, 30 Triggering, 18 troubleshooting Linux systems, 20 Mac systems, 20 Troubleshooting, 19

U

upgrades, v USB mode, 7 USB-ADP-PC, 5 USB-CBL-1, 5

W

warranty, v Wavelength Calibration about, 21 Wavelength Calibration Data File, 5 Wavelength Calibration Data Sheet, 5 what's new, iv

