

comfee'



Instruction Manual

Model: MK-12S07A

Please read the manual before operating your kettle. Retain it for future reference.

IMPORTANT SAFEGUARDS

SAFETY PRECAUTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons, do not immerse cord, plugs, base or kettle in water or other liquid.
4. Never leave the appliance unattended when in use. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use, no water in kettle, filling water, moving kettle and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Call our toll-free Customer Assistance Number for examination, repair or adjustment.
7. Do not use a base unit other than the one supplied. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces. Always store excess portion of the power cord in the compartment of the base unit.
10. Electric kettle must be operated on a flat surface. Do not place on or near a hot gas or electric burner, or in a heated oven, or on the top of other electric appliances.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn control to off, then

IMPORTANT SAFEGUARDS

SAFETY PRECAUTIONS

remove plug from wall outlet.

12. Do not use appliance for other than intended use.
13. To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
14. Do not fill kettle when positioned on base. Dry the water on the bottom of the body before placing it onto the power base.
15. Be aware of steam being emitted from spout or lid especially during refilling. Do not remove lid during boiling cycle.
16. Do not use the kettle to heat anything other than water.
17. Do not fill above the “max” indication marking. Do not operate kettle if water is below minimum marking. If the kettle is overfilled, boiling water may be ejected. The kettle is only to be used with the base unit provided.
18. Do not insert any object into slots or holes of the kettle.
19. Open the lid with the release button only. Push lid down to lock in place.
20. Scalding may occur if the lid is removed during the brewing cycles.
21. This appliance is for HOUSEHOLD USE ONLY. DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

Extension cords

A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply

IMPORTANT SAFEGUARDS

SAFETY PRECAUTIONS

cord or extension cord is used,

22. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
23. The extension cord should be a grounding-type 3-wire cord, and
24. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).

If this appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.


SAVE THESE INSTRUCTIONS.

Brief introduction

Rational design, bring convenience and enjoyment to your life

1. Rapid boiling,save time and energy for you.
2. Removable filter to keep the water clean of any foreign matter.
3. Steam control to switch the kettle off after boiling.
4. Automatically cuts out for boil-dry protection.
5. 360 Rotational power base.
6. Easy read water gauge.
7. Thermostat of high quality.

Part Name

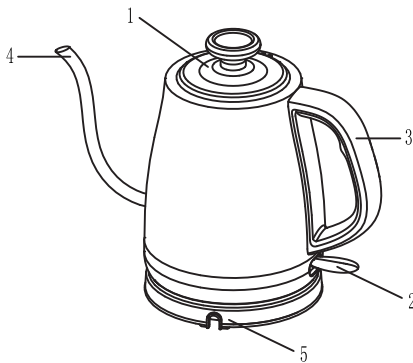

No.	Description
1	Lid
2	Switch/Light
3	Handle
4	Spout
5	Power Base

Technical Data of the Product

Model No.	Rated voltage	Rated power	Capacity	Dimensions	Weight
MK-12S07A	120V~ 60Hz	1500W	1.2L	85x145x226mm	0.9kg

How to use

For the first time to use or no use for a long time, it is recommended that you fill to the maximum level mark with fresh tap water, boil and empty the kettle at least 2 times to clear kettle of any tiny particles. Do not drink such water.

1. Press the lid lock on the handle, and you can open it.
2. Remove the kettle from the base to the filling place. Fill the kettle with desired amount (no less than the minimum and no more than the maximum.) Put back the lid; place the kettle back on the base unit.
3. Connect the plug into a power outlet (120V, AC), switch the kettle on by pressing the switch. The light will illuminate to indicate the kettle is heating.
4. The kettle will automatically switch off once the water has boiled and the neon light goes off.
5. Lift the kettle from the base, and you can pour out the water into container.
6. Correct Operation of Pouring Water: slowly lean the kettle to the right angle(no larger than 90 derees) to keep water pouring smoothly and steady.

Note

To prolong the kettle's life, please clean the mineral deposits in the kettle regularly.

Always unplug from the plug socket and allow to cool down before cleaning. Do not use chemical, steel wool, or abrasive cleaners to clean the outside of the kettle, as these will scratch the surface and fade the outside color.

1. Fill the kettle with 0.5L white vinegar and the remainder with water and allow to stand for over 1 hours ;
2. Empty the solution from the kettle. Wipe off the deposits remained with damp cloth
3. Fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will be ready to use;
4. If necessary, repeat the operations above for several times;
5. Do not immerse into water. The surface of the kettle may be wiped over with a damp cloth and polished with a soft dry cloth.
6. Grasp the top of the scale filter and pull upwards to remove. Wash with clean water and dry thoroughly before replacing in the kettle.

Specifications

Product : ELECTRIC KETTLE

Model : MK-12S07A

Rated voltage : 120V~

Rated frequency : 60Hz

Rated power : 1500W