

MP Soundstage 3 Bluetooth® Speaker

P/N 33393, 33394

User's Manual

CONTENTS

SAFETY WARNINGS AND GUIDELINES	3
FEATURES	5
CUSTOMER SERVICE	6
PACKAGE CONTENTS	6
PRODUCT OVERVIEW	7
Rear Panel	7
Top Panel	8
OPERATION	9
Pairing	9
Linking	10
Clearing Memory	11
SPECIFICATIONS	12
TECHNICAL SUPPORT	13
REGULATORY COMPLIANCE	13
Notice for FCC	13
Radio Notice for FCC	15

SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- This device is intended for indoor use only.
- Do not expose this device to water or moisture of any kind. Do not place drinks or other containers with moisture on or near the device. If moisture does get in or on the device, immediately unplug it from the power outlet and allow it to fully dry before reapplying power.
- Do not touch the device, the power cord, or any other connected cables with wet hands.
- If operating this speaker in a humid environment, ensure that no condensation occurs. Condensation could cause damage to the speaker cones and could cause a short in the amplifiers, which in turn could cause fire or severe electric shock.
- Do not subject the product to extreme force, shock, or fluctuations in temperature or humidity.

- Do not expose this device to excessively high temperatures. Do not place it in, on, or near heat sources, such as a fireplace, stove, radiator, etc. Do not leave it in direct sunlight.
- Prior to operation, check the unit and power cord for physical damage. Do not use if physical damage has occurred.
- Before plugging the unit into a power outlet, ensure that the outlet provides the same type and level of power required by the device.
- Unplug this device from the power source when not in use.
- Take care to prevent damage to the power cord. Do not allow it to become crimped, pinched, walked on, or become tangled with other cords. Ensure that the power cord does not present a tripping hazard.
- Never unplug the unit by pulling on the power cord.
 Always grasp the connector head or adapter body.
- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.

- This device has no user serviceable parts. Do not attempt to open, service, or modify this device.
- In the event of serious operating problem, stop using the unit immediately.
- Keep away from corrosive materials.

FEATURES

- 2.1-channel active Bluetooth® speaker system
- Bluetooth version 4.0 with Qualcomm[®] aptX[™] audio codec
- 1x 5.25" woofer and 2x 1" tweeters
- 1x 80-watt and 2x 20-watt amplifiers
- 42 Hz ~ 22 kHz frequency response
- Subwoofer output
- USB charging port (5 VDC, 2A)
- Includes Bluetooth®, digital optical (S/PDIF), stereo analog RCA, and stereo analog 3.5mm inputs
- Can be linked to a second system
- 100 ~ 240 VAC, 50/60 Hz input power

CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website www.monoprice.com during normal business hours (Mon-Fri: 5am-7pm PT, Sat-Sun: 9am-6pm PT) or via email at support@monoprice.com

PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

1x Soundstage 3 speaker system

1x IR remote control


1x AC power cable (IEC 60320 C7 to NEMA 1-15)

1x 3.5mm audio cable

1x User's manual

PRODUCT OVERVIEW


Rear Panel

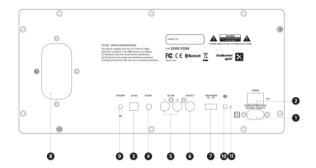

- 1. **AC INPUT:** Input for the AC power cord. The system can accept 100 ~240 VAC, 50/60 Hz input power.
- 2. POWER: Switch turns power on or off.
- 3. OPT IN: Digital optical S/PDIF audio input.
- AUX IN: 3.5mm jack for connecting a stereo analog audio source using the included audio cable.
- RCA IN: Two RCA jacks for connecting a stereo analog audio source.
- SUB OUT: RCA jack for connecting an external powered subwoofer.

- USB POWER: USB port for charging or powering a USB powered device. It has 5 VDC, 2A of charging power.
- 8. PORT: Bass reflex port.
- STANDBY/ON: Switch for controlling whether the system will automatically go into standby when no audio input is detected or whether it will remain always on.
- 10. TWS: True wireless stereo linking button.
- 11. TWS LED: TWS connection indicator.

 Top Panel



- 12. **ON/STANDBY:** Press to turn the system on or to put it into standby mode.
- 13. **PAIR:** Bluetooth® pairing button.
- 14. VOLUME -: Press to decrease the volume level.

- 15. **VOLUME +:** Press to increase the volume level.
- 16. SOURCE: Press to cycle through the inputs in the order AUX IN > RCA IN > BLUETOOTH® > OPT IN. The LEDs indicate the selected audio source.

OPERATION

Pairing

Perform the following steps to pair your mobile device with the speaker system. Note that two systems can be linked, with one service as the Master and the other as the Slave. Whichever system is paired to your device is the Master and the other is the Slave. See the *Linking* section below for instructions on linking two systems.

- Ensure that the POWER and the STANDBY/ON switches are in the ON position.
- Press and release the PAIR button. The BT source LED will begin flashing, indicating that it is in pairing mode.
- Search for nearby Bluetooth® devices on your mobile device. Select the Soundstage 3 entry. Once

pairing is complete, the **BT** source LED will cease flashing and will remain steadily illuminated.

The system will remember its pairing and linking status, even after power cycling. To reconnect your mobile device, open the Bluetooth® settings and select **Connect** to re-establish the connection.

Linking

Two systems can be linked so that one system is the Master and the other the Slave. When two systems are linked, the stereo audio signal will be split so that the Master system plays left channel audio, while the Slave system handles right channel audio. Perform the following steps to link two systems.

- Ensure that you have paired your mobile device to one of the systems. If audio is playing from your Bluetooth® device, stop it and wait 5 seconds.
- Press and release the TWS button on the rear panel of each speaker. The TWS LEDs will begin flashing on each speaker and a tone sequence will play while the two systems search for each other.

 Once the two systems are linked the TWS LEDs will cease flashing and will illuminate steadily. You will also hear a confirmation tone from both speakers.

If the connection is lost between the two speakers or between the Master speaker and the source device, and they do not reconnect automatically, power cycle both speakers and allow them to reconnect.

Note that the **PAIR** button on the Slave speaker will be disabled. If you press the **PAIR** button on the Slave speaker, you will hear three rapid beeps, indicating that the system cannot be paired.

Clearing Memory

To erase all previous pairings and linking settings, press and hold either the **PAIR** or the **TWS** button for 3 seconds. You will hear a long tone to confirm that the pairing and linking settings have been erased. The LEDs will also turn off. You can now establish a new pairing or link the speakers again.

SPECIFICATIONS

Model	33393 (black), 33394 (white)
Amplifier Type	Digital class D
Amplifier Power	1x 80-watt and 2x 20-watt
Low Frequency Driver	1x 5.25" aluminum concave
	cone woofer
High Frequency Driver	2x 1" silk dome tweeters
Frequency Response	42 Hz ~ 22 kHz
Crossover Frequency	3.0 kHz
	3.5mm stereo, RCA stereo,
Inputs	digital optical S/PDIF,
	Bluetooth®/TWS
Output	RCA subwoofer output
Bluetooth Version	4.0
Audio Codec	Qualcomm® aptX™
Input Power	100 ~ 240 VAC, 50/60 Hz
USB Charging Power	5 VDC, 2A
Dimensions	13.6" x 6.9" x 7.3"
	(345 x 176 x 185 mm)

TECHNICAL SUPPORT

Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website **www.monoprice.com** during regular business hours, 7 days a week. You can also get assistance through email by sending a message to **tech@monoprice.com**

REGULATORY COMPLIANCE

Notice for FCC



This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received,

including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to

correct the interference by one or more of the following

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radio Notice for FCC

Caution

This FCC Part 15 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1)

this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The Bluetooth® word mark and logos are registered trademarks of Bluetooth SIG, Inc.

Qualcomm[®] is a trademark of Qualcomm Incorporated, registered in the United States and other countries. aptX[™] is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries. Qualcomm[®] aptX[™] is a product of Qualcomm Technologies International, Ltd.