

BenQ DC C1000 Digital Camera
User Manual

Welcome

Copyright

Copyright 2006 by BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of this company.

Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of this company to notify any person of such revision or changes.

Taking care of your camera

- Do not use your camera in the following environmental range: temperature below 0°C or above 40°C.
- Do not use or store your camera in the environments listed below:
 - Direct sunlight
 - High and dusty places
 - Next to an air conditioner, electric heater or other heat sources
 - In a closed car that is in direct sunlight
 - Unstable locations
- If your camera becomes wet, wipe it with a dry cloth as soon as possible.
- Salt or seawater may cause severe camera damage.
- Do not use solvents, such as alcohol, to clean your camera.
- If the lens is dirty, use a lens brush or soft cloth to clean the lens. Do not touch the lens with your fingers.
- To prevent electric shock, do not attempt to disassemble or repair your camera by yourself.
- Water may cause a fire or electric shock. Therefore, store your camera in a dry place.
- Do not use your camera outdoors when it is raining or snowing.
- Do not use your camera in or near water.
- If a foreign substance or water gets in your camera, please turn the power off immediately and disconnect the batteries and the power adapter. Remove the foreign substance or water, and send it to the maintenance center.
- Transfer the data to the computer as soon as possible to avoid losing your images and/or video clips.

Disposal of Waste Electrical and Electronic Equipment by users in private households in the European Union.



This symbol on the product or on the packaging indicates that this can not be disposed of as household waste. You must dispose of your waste equipment by handing it over to the applicable take-back scheme for the recycling of electrical and electronic equipment. For more information about recycling of this equipment, please contact your city office, the shop where you purchased the equipment or your household waste disposal service. The recycling of materials will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and environment.

Table of Contents


1. Touring Your Camera	1
1.1 Checking the Package Contents	1
1.2 Camera Components.....	1
1.2.1 Front View	1
1.2.2 Rear View	2
1.2.3 Five-function buttons.....	2
1.3 Setting the Date and Time.....	2
2. Preparing Your Camera for Use	3
2.1 Inserting the Batteries	3
2.2 Inserting a Memory Card	3
2.2.1 About Camera Memory	4
3. Using the Camera	5
3.1 Turning the Power On and Off.....	5
3.2 Power Saving Function.....	5
3.3 Switching between Record and Playback	5
3.3.1 In Record mode	5
3.3.2 In Playback mode	5
3.4 Recording Menu/Playback Menu	6
3.4.1 Record Menu (Still Image).....	6
3.4.2 Record Menu (Movie).....	7
3.4.3 Playback Menu	8
3.4.4 ADJ. Menu	8
3.4.5 Setup Menu	9
3.5 Using the LCD monitor.....	10
3.5.1 LCD Screen Indicator	10
3.5.2 Switching the Screen Display	11
3.6 Recording	11
3.6.1 Recording Still Images	11
3.6.2 Using the Zoom Function	12
3.6.3 Using the Flash.....	12
3.6.4 Using the Self-timer and Burst	13
3.6.5 Using the Macro mode.....	13
3.7 Recording Movie Clips	14
3.7.1 Voices Recording	14
3.8 Setting the Recording Functions.....	14
3.8.1 Using the Scene Mode	14

3.9	Playback.....	15
3.9.1	Playing Back Images	15
3.9.2	Playing Back Sounds.....	16
3.9.3	Recording a Voice Memo.....	16
3.9.4	Playing Back a Voice Memo.....	17
3.10	Deleting Files	17
3.10.1	Deleting a Single File	17
3.10.2	Deleting All Files.....	17
3.11	Protecting Files.....	18
3.12	Editing Images.....	19
3.12.1	Rotating Still Images.....	19
3.12.2	Changing the Image Size	19
3.12.3	Adding Stickers to a Still Image	19
3.13	Setting the DPOF	20
3.14	Playing a Slide Show	20
3.15	Copying the Files.....	21
3.16	Setup Settings	21
3.16.1	Adjusting Sounds.....	21
3.16.2	Setting Auto Review	22
3.16.3	Setting the Power Save	22
3.16.4	Setting the Language.....	22
3.16.5	Resetting the File Numbers.....	22
3.16.6	File Naming.....	23
3.17	Setting the TV Out.....	23
3.18	Setting USB Port	23
3.19	Choosing a Startup Image	24
3.20	Formatting the Memory	24
3.21	Resetting to Default Settings	24
4.	Making Connections.....	25
4.1	Bundled Software.....	25
4.2	Connecting the Camera to a TV	25
4.3	Connecting the Camera to a Computer with a USB Cable	26
5.	Troubleshooting.....	27
6.	Specifications.....	28
7.	Service Information	28

1 Touring Your Camera

1.1 Checking the Package Contents


Carefully unpack your kit box and ensure that you have the following items.

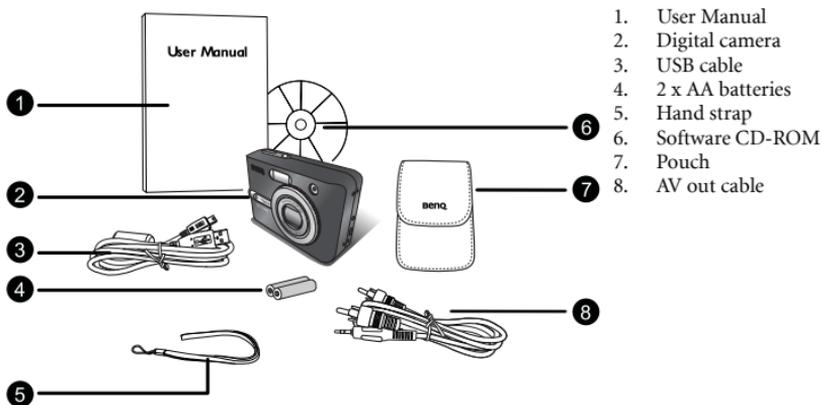

If any of the items are missing or appear to be damaged, contact your dealer. Save the packaging in case you need to ship your camera for service.

1.2 Camera Components


1.2.1 Front View

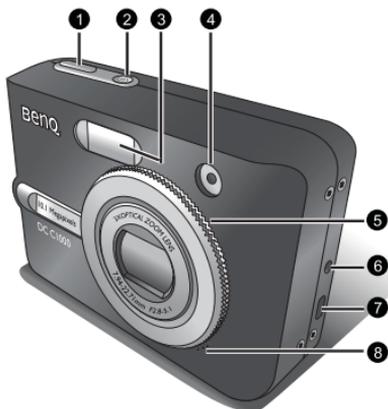

1. Shutter button
2. Power button
3. Built-in flash
4. Self-timer LED
5. Lens/Lens cover
6. DC IN terminal
7. USB connector/AV out terminal
8. Microphone

1.2.2 Rear View


1. LCD monitor
2. Zoom out button
3. Zoom in button
4. Playback mode button
5. MENU button
6. Status LED
7. Five-function buttons
8. Strap eyelet
9. Mode dial
10. Battery/SD memory card cover
11. DISP button
12. Tripod socket

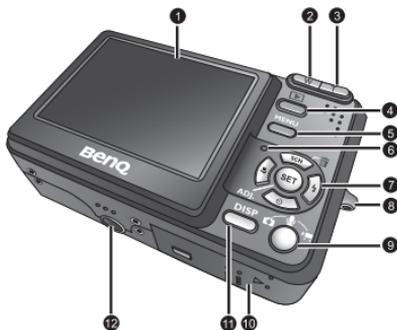

- ☞ • The LCD on the digital camera is manufactured with sophisticated technology; however, the display may have some light spots or show unusual colors. This is normal and does not indicate display malfunction, nor will this affect the pictures you take with the camera.

1.2.3 Five-function buttons

- 1 Scene/Delete/Up button
- 2 Flash/Right button
- 3 SET/ADJ button
- 4 Self-timer/Continue/Down button
- 5 Macro/Left button

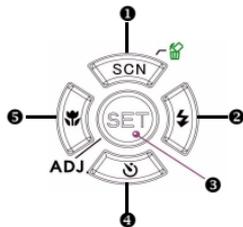

1.3 Setting the Date and Time

When the camera is first turned on, the date and time setting will not be correct. So before using, be sure to set date and time.

1. Press the **MENU** button, using ◀ or ▶ to select **SETUP** () and press the **SET** button.
2. Press ▲ or ▼ to select **DATE & TIME** () then press ▶ or the **SET** button to launch the Date & Time screen.
3. Press ▲ or ▼ to change the value of the highlighted field. Press ◀ or ▶ to highlight another field.
4. After adjusting the settings, press the **SET** or the **MENU** button to apply the setting.




- ☞ • If you hold down ▲ or ▼, you can change the value quickly.
- If the batteries are removed for about two days, the Date & Time setting will be lost. In this case, make these settings again.

2 Preparing Your Camera for Use

2.1 Inserting the Batteries

The camera is powered by two AA batteries or rechargeable batteries (min. 1600 mAh/1.2V). Proper operation cannot be guaranteed if you use any other type of battery other than that noted above.

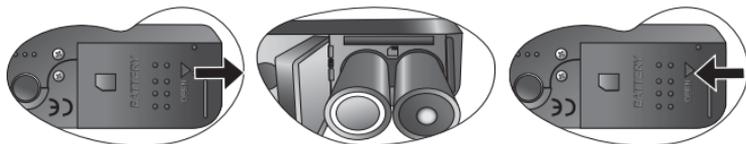

1. Slide the battery cover open.
2. Insert two AA-size alkaline batteries with the positive(+) and negative(-) poles matching the directions indicated inside the battery room.
3. Slide the battery cover closed.



- **Always make sure that the camera is turned off before removing the battery.**
- **Do not use manganese batteries. Manganese batteries cannot supply sufficient power to support camera operation.**
- **Replace all batteries at the same time. Never mix old and new batteries.**
- **Remove batteries from the camera if you do not plan on using it for more than two weeks.**
- **The camera body may feel warm after extended use. This is normal.**

2.2 Inserting a Memory Card

You can use SD Card with this digital camera. The memory card slot is located beneath the battery cover, adjacent to the battery compartment.



1. Be sure that the camera is turned off.
2. Slide the battery cover and open it.
3. Insert the card with the label facing up and the arrow pointing in.
4. Close the battery cover.

To remove the memory card, gently press on the edge of the card and release it. Pull the card out and close the battery cover.

2.2.1 About Camera Memory

The digital camera is equipped with internal memory. If the memory card is not inserted in the camera, all images and movie clips recorded by the camera will be stored in the internal memory. If the memory card is inserted, images and movie clips are stored on the memory card.

-  SD memory cards in the following sizes are supported: 8 MB, 16 MB, 32 MB, 64 MB, 128 MB, 256 MB, 512 MB, and 1 GB. The camera is compatible with SD memory cards manufactured by Panasonic, Toshiba, and Sandisk. Please contact your local dealer for purchasing information.


3 Using the Camera

3.1 Turning the Power On and Off

1. Press the **POWER** button to turn on the camera in the Record mode. Or you can press the  button to turn on the camera in the Playback mode.
2. Press the **POWER** button again to turn the power off.



- You can turn on the camera without the start-up and operating sound by pressing and holding the **POWER** or the  button for over 1.5 seconds.

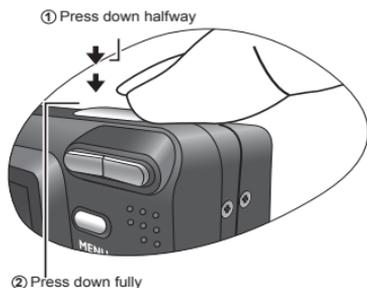

3.2 Power Saving Function

If the camera is turned off by Power Save feature, press the **POWER** or the  button to turn it on again.

The Power Save feature does not work in the following situations:

- Connecting the camera to a computer or printer with the USB cable.
- Connecting the camera with the AC adapter (sold separate).
- About the Power Save operation, refer to 3.16.3 “Setting the Power Save” on page 22.

3.3 Switching between Record and Playback

You can switch between Record mode and Playback mode in following ways:

3.3.1 In Record mode

- Press the **MODE** button to cycle through the still image shooting, voice recording, and movie recording.
- Press the  button to switch to the Playback mode.



- If you switch to Playback mode, the lens will retract after approximately 10 seconds.

3.3.2 In Playback mode

Press the **MODE** or the  button switch to the previous used Record mode.

3.4 Recording Menu/Playback Menu

When a menu screen is displayed, the arrow button and the **SET** button are used to make the desired settings.

1. Press the **MENU** button to display the menu.
2. The menu displays depends on whether you are in the Record mode or the Playback mode.
3. Press ◀ or ▶ to select a menu item.
4. Press ▲ or ▼ to change the setting.
 - In playback menu, press ▲ or ▼ to select an option, and then press the **SET** button to display a confirmation screen or apply the setting.
5. Press the **MENU** or the **SET** button to save the settings and close the menu.
 - In playback menu, press the **MENU** button to close the menu.

3.4.1 Record Menu (Still Image)

Menu Item	Available Setting	Functional Description
Resolution		<p>Sets the size of images that will be captured.</p> <ul style="list-style-type: none"> – : 3648 x 2736 - Suitable for printing large size paper. – : 3648 x 2432 - Printing in 3:2 ratio. – : 3264 x 2448 - Suitable for printing normal size paper. – : 2560 x 1920 - Suitable for printing on A4 paper. – : 2048 x 1536 - Suitable for printing on A5 paper. – : 640 x 480 - Suitable for attaching to e-mails or using in websites. <p> You can select lower image resolution and quality to decrease the image size to capture more images. Choose a suitable setting according to the desired image quality and purpose.</p>
Quality		<p>Sets the quality (compression rate) at which image are captured.</p> <ul style="list-style-type: none"> – : Stores the image with an extremely low compression. – : Stores the image with a low compression. – : Stores the image with normal compression.

Metering	[☉] / [■] / [•]	Adjusts the region of the subject or frame on which the camera measures light. <ul style="list-style-type: none"> – [☉]: Light is measured from the entire shooting screen, but gives more importance to the values near the center. – [■]: Selects an exposure based on readings from multiple points in the subject area. – [•]: Selects an exposure based on a single reading taken from the center of your picture.
Sharpness	■ / ■ / ■	You can select whether you want the image to have sharp or soft outlines. <ul style="list-style-type: none"> – ■: The edges of the image are emphasized. The edges will become sharp, but noise may occur in the recording image. – ■: The edges of the image are sharp. This is suitable for printing. – ■: The edges of the image are softened. This is suitable for editing images on PC.
Effect	Off/B&W/Sepia/Neg. Art	You can add special effects to your images in Record mode or in Playback mode. <ul style="list-style-type: none"> – Off: No effect is added to the image. – B&W: Convert image to black & white. – Sepia: Recorded image will be stored in a sepia tone. – Neg. Art: Opposite what they were in the original image.
Date Stamp	Off/Date/Date & Time	Adds a date to your pictures as you take them. <ul style="list-style-type: none"> – Off: Do not add the recorded date & time to printed images. – Date: Only adds the recorded date to printed images. – Date & Time: Adds the recorded date & time to printed images.
Digital Zoom	Off/On	<ul style="list-style-type: none"> – Off: deactivates digital zoom. – On: activates digital zoom.

3.4.2 Record Menu (Movie)

Menu Item	Available Setting	Functional Description
Movie Size	640 / 320 / 160	Sets the size of video clips that will be recorded. <ul style="list-style-type: none"> – 640: 640x480 - Suitable for viewing on TV. – 320: 320x240 - Suitable for viewing on PC. – 160: 160x128 - Suitable for attaching to e-mails or using in web-sites.
Metering	[☉] / [■] / [•]	Refer to 3.4.1 "Record Menu (Still Image)" on page 6.

3.4.3 Playback Menu

Menu Item	Available Setting
Protect	Single/Lock All/Unlock All
Delete	Single/All
Slide Show	Playing stored images in a slide show.
DPOF	Single/All/Reset
Copy to Card	Single/All
Effect	B&W/Sepia/Neg. Art/Mosaic
Rotate	Right 90/Left 90/Horizontal/Vertical
Resize	Reduces image size to smaller.
Sticker	Add interesting stickers to images.
Voice Memo	Recording a voice memo to a stored image.
S.Image	User 1/User 2

3.4.4 ADJ. Menu

You can quickly adjust the White Balance, BISO, Exposure in Record mode.

1. Press the **SET** button to display the menu.
 - When movie recording, only White Balance can be adjusted.
2. Press **▲** or **▼** to select a menu item.
3. Press **◀** or **▶** to select an option

4. Press the **SET** button to confirm the settings and close the menu.

Menu Item	Available Setting	Functional Description
White Balance	AUTO /  /  /  /  /  / 	<p>Sets the white balance when capturing images under specific lighting conditions.</p> <ul style="list-style-type: none"> – AUTO: Adjust the white balance to match different light sources such as sunlight, incandescent (tungsten) lighting or, fluorescent lighting. – : Adjusts for bright sun conditions, or natural light conditions. – : Adjusts for cloudy days or twilight conditions. – : Adjusts for normal indoor lighting conditions. Corrects the orange hue of household light bulbs. Ideal for indoor photos under tungsten or halogen lighting without a flash. – : Adjusts for fluorescent lighting. Corrects the green hue of fluorescent lighting. Ideal for indoor photos under fluorescent lighting without a flash. – : Adjusts for fluorescent lighting. Corrects the green hue of fluorescent lighting. Ideal for indoor photos under fluorescent lighting without a flash. – : For more accurate adjustment or when the light source cannot be specified.
ISO	AUTO/50/100/200	<p>Configures the camera's sensitivity to light.</p> <ul style="list-style-type: none"> – Auto: Sets the ISO sensitivity automatically. – ISO 50: Sets the sensitivity to ISO 50 equivalent. – ISO 100: Sets the sensitivity to ISO 100 equivalent. – ISO 200: Sets the sensitivity to ISO 200 equivalent. <p> Higher ISO speeds increase the image noise. To take clean images, use as low an ISO speed as possible.</p>
Exposure	-2.0 to +2.0	Sets the exposure value manually to compensate for unusual lighting conditions, such as indirect indoor lighting, dark backgrounds, and strong backlighting.

3.4.5 Setup Menu

You can change the basic settings of the camera in Record mode and Playback mode.

- Press the **MENU** button to display the menu.
 - The menu displays depends on whether you are in the Record mode or the Playback mode.
- Press **◀** or **▶** to select **SETUP** () and then press the **SET** button to display the Setup menu.

3. Press **▲** or **▼** to select a menu item and then press **▶** or the **SET** button to launch the submenu.
4. Press **▲** or **▼** to select an option and press **◀** or the **SET** button to apply the setting.
5. Press the **MENU** button to close the menu.


Menu Item	Available Setting
Sounds	Sets the camera sounds and volume.
Auto Review	Off/3 sec./5 sec.
Power Save	1 min./3 min./5 min.
Date & Time	Sets the date & time.
Language	English/Spanish/German/French/Italian/Portuguese/Dutch/Czech/Hungarian/Polish/Turkish/Russian/Japanese/Korean/S.Chinese/T.Chinese
File No.	Series/Reset
TV Out	NTSC/PAL
USB	Computer/Printer
S.Image	Sets the start-up image.
Format	Formats the internal memory or memory card.
Reset All	Resets all camera settings to initial default.

3.5 Using the LCD monitor

The LCD monitor is used to compose images while recording, adjust settings and replay images.

3.5.1 LCD Screen Indicator

3.5.1.1 In Recording

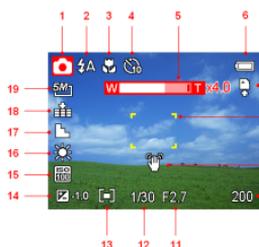

- | | |
|---------------------|--------------------|
| 1. Mode icon | 11. Aperture value |
| 2. Flash | 12. Shutter speed |
| 3. Macro | 13. Metering |
| 4. Self-timer/Burst | 14. Exposure |
| 5. Zoom indicator | 15. ISO |
| 6. Battery | 16. White balance |
| 7. Storage media | 17. Sharpness |
| 8. Focus area | 18. Quality |
| 9. Shake warning | 19. Resolution |
| 10. Shots remaining | |


3.5.1.2 In Playback



1. Mode icon
2. Protect
3. Voice memo
4. File number/Total
5. Battery
6. Storage media
7. Capture date & time
8. DPOF Date stamp
9. DPOF indicator
10. Resolution

3.5.2 Switching the Screen Display

Press the **DISP** button changes the next display mode of the LCD monitor as shown below:

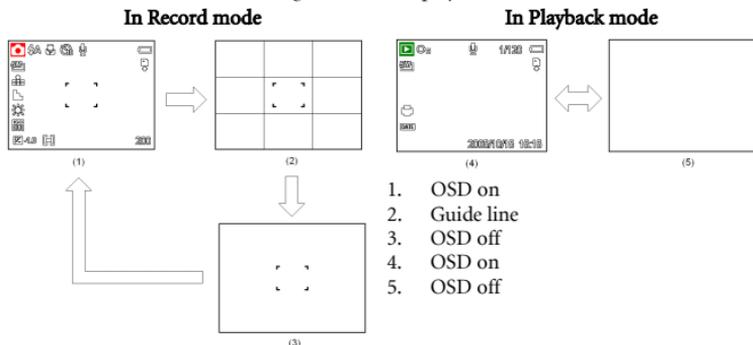

- 💡 • Use the "Guide line" mode to compose images easily before shooting images.
- 👉 • When the LCD display is not in "OSD on", pressing Macro, Self-timer, Flash will change the display mode to "OSD on" automatically.

3.6 Recording

3.6.1 Recording Still Images

1. Hold the camera with both hands and make sure the camera is stable.
2. Set the camera to the Record mode. Refer to 3.3 "Switching between Record and Playback" on page 5.
3. Aim the focus area to the subject that you want to take and press the shutter release button halfway.

- The focus area on the LCD monitor will light green when the camera is in focus.
 - If the shutter speed is slow or the possibility that image may be blurred, the shake warning icon  may appear on the LCD monitor. To avoid it, use a tripod to stabilize the camera when recording images.
4. Fully press the shutter release button to take an image.



• **Make sure that your fingers or the wrist strap does not block the lens.**

- **When the shutter release button is pressed halfway down, check the exposure value that appears on the LCD monitor to make sure that it is appropriate for the lighting conditions.**

3.6.2 Using the Zoom Function

Your camera has a combination of optical and digital zoom functions that allow you to zoom in on far away subjects or zoom out for a wide angle shot.

When the optical zoom factor is at maximum, zooming stops temporarily. Press the [T] again, the camera switches to the digital zoom automatically and zooming continues.



• **Zoom function cannot be used while a video clip is being recorded. Set the zoom before you start recording.**

- **Digital zoom is not available when recording movies.**

3.6.3 Using the Flash

Press the flash button cycles your camera through the various flash modes. A symbol appears on the LCD screen to indicate the flash mode. The flash cannot be used when movie recording.

1. Set the camera to the Record mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
 - The flash function only used in still image shooting.
2. Press the  button to change the flash mode:

Display	Option	Description
	Auto flash	Flash fires automatically when shooting conditions require extra lighting.
	Red eye reduction	Flash strobes to let the subject's eyes adjust to the flash, then fires again to take the actual image. The digital camera will detect the subject brightness and use the flash only when required.
	Forced on	Flash fires every time you take a photo, regardless of lighting conditions.
	Slow sync	Flash fires with a slow shutter speed.
	Forced off	The flash never fires even in dark situation.

3. Shoot the image.



• **The flash charging time may increase when the battery is low.**

3.6.4 Using the Self-timer and Burst

Use the self-timer to set a delay from the time the shutter button is pressed to the time the image is shot. Use the burst to record four continuous still images shooting.

- Set the camera to the Record mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
 - This function only used in still image shooting.
- Press the / button to change the settings:

Display	Option	Description
-	Single shot	Record a single image.
	2-SEC	The shutter release will be delayed for 2 seconds.
	10-SEC	The shutter release will be delayed for 10 seconds.
	Double	Record two images in a shot after pressing the shutter release button 10 and 12 seconds.
	Burst	For capturing 4 images in succession.

- Shoot the image.

Each option automatically switches to single shot in the following situation:

- After each shot.
- When the mode switched.
- When the camera is turned off.



-  • **When using the self-timer function, be sure to use a tripod or place the digital camera on a level, stable surface.**
- **Maximum number of continuous shots: 4.**
 - **In CONTINUOUS mode, the flash will be set to NO FLASH automatically.**

3.6.5 Using the Macro mode

Your camera is equipped with a macro function that allows you to focus on very close subjects. In macro mode you can focus on subjects 4 cm from the lens when in the maximum wide angle (zoomed out) setting and 25 cm in the maximum telephoto (zoomed in) setting.

- Set the camera to the Record mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
 - You can use the macro mode in still image shooting or movie recording.
- Press the  button to enter the macro mode.
 - The macro mode icon () appears on the LCD monitor.
- To leave the macro mode, press the  button again.

-  • **Distances referred to measure the distance between the camera lens surface and the subject.**

3.7 Recording Movie Clips

Your camera can record movie clips with audio.

1. Set the camera to the Record mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
 - The LCD monitor displays the available recording time.
2. Press the shutter to start recording.
3. Press the shutter again to end recording
 - The camera will stop recording automatically when the memory capacity has been reached.



- ☞ **The voices of the movie clips are recorded from the microphone of the camera. Be careful to avoid touching the microphone while recording.**
- **The White Balance is set and locked to the settings of the first frame.**

3.7.1 Voices Recording

You can record voices using this camera.

1. Set the camera to the Record mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
 - The LCD monitor displays the available recording time.
2. Press the shutter to start recording.
3. Press the shutter again to end recording.
 - The camera will stop recording automatically when the memory capacity has been reached.



- ☞ **The voices are recorded from the microphone of the camera. Be careful to avoid touching the microphone while recording.**

3.8 Setting the Recording Functions

3.8.1 Using the Scene Mode

You can select from various scene modes for specific shooting conditions.

1. Set the camera to the Record mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
 - The scene mode function only used in still image shooting.
2. Press the **SCN**  button to show the Scene Mode screen.
3. Use the arrow button to select a desired scene mode and press the **SET** button to confirm the setting.

Display	Option	Description
	Program	All settings can be changed in this mode.
	Aperture priority	The Aperture can be set manually in this mode.
	Shutter priority	The Shutter can be set manually in this mode.
	Manual	The Aperture value and Shutter speed can be set manually in this mode.
	Portrait	Blurring the background to focus on the subject.
	Landscape	Used for the wide scenic views.
	Night Scene	Shooting the subject while keeping the background night scenery.
	Kids	Take a still image to capture moving kids.
	Beach & Snow	Used for the beach or snow scenes.
	Backlight	Shooting the image of backlight object by changing metering.
	Sunset	Enhance the red hue for recording sunset images.
	Close-up	Close-up shooting for small subject.
	Text	Enhance the black & white contrast.
	Sports	Fast shutter speed to capture fast moving subjects.
	Fireworks	Slow shutter speed to take fireworks exploding.

3.9 Playback

3.9.1 Playing Back Images

1. Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
2. Press ◀ to play back the previous image; press ▶ to play back the next image.

 • Holding down ◀ or ▶ scrolls images in a high speed.

3.9.1.1 Using the Thumbnail

When in Playback mode, you can view all your stored images in thumbnail format.

1. Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
2. Press the zoom lever [W], a thumbnail screen is displayed.
3. Use the arrow button to select the desired image, and press [T] or the **SET** button to show the selected image in full screen.



3.9.1.2 Magnifying Still Images

1. Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
2. Press ◀ or ▶ to select the image that you want to magnify.
3. Press [T] to magnify the image, and the central portion of the image is displayed. You can use the arrow button to view different parts of the magnified image.



3.9.1.3 Playing Back Movie Clips

1. Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
2. Press ◀ or ▶ to select the movie clip that you want to playback.
3. Press the **SET** button to start the movie.
 - The movie clip will play on the LCD monitor.
4. Press the **MENU** button to stop the movie, or press the **SET** button to pause the movie.
 - When movie clip paused, press the **SET** button again to resume.



3.9.2 Playing Back Sounds

1. Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
2. Press ◀ or ▶ to select the audio clip that you want to play back.
3. Press the **SET** button to start playing the audio clip.
4. Press the **MENU** button to stop the audio clip, or press the **SET** button to pause it.
 - When audio clip paused, press the SET button again to resume.

3.9.3 Recording a Voice Memo

You can add a voice memo to the still images after you record it.

1. Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
2. Press ◀ or ▶ to select a still image that you want to add a voice memo.
3. Press the **MENU** button, using ◀ or ▶ to select **VOICE MEMO** (🗣️) and press the **SET** button.



- If the image already has the voice memo recorded, the 🗣️ appears on the LCD monitor. The new recording will replace the previous one.
4. Press the **SET** button to start recording for 30 seconds, or press the **MENU** button to cancel it.
 5. Press the **SET** button again to end recording.

- ☞ • The voice memo cannot be added to a movie clip or a protected image.
- You cannot delete only the voice memo.
- When you delete the image, the attached voice memo is also deleted.

3.9.4 Playing Back a Voice Memo

1. Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
2. Press ◀ or ▶ to select the image that has the voice memo recorded.
 - The image with a voice memo recorded shows 🎤 on the LCD monitor.
3. Press the **SET** button to play to voice memo.
4. Press the **MENU** button to stop the voice memo, or press the **SET** button to pause it.
 - When voice memo paused, press the **SET** button again to resume.



3.10 Deleting Files

3.10.1 Deleting a Single File

Single image can be deleted using the Playback Menu or pressing the camera button (🗑).

1. Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
2. Press the **MENU** button, then press ◀ or ▶ to select **DELETE** (🗑).
3. Press ▲ or ▼ to select **SINGLE**, and then press the **SET** button.
4. Press ◀ or ▶ to select the image you want to delete.
5. Press the **SET** button to delete the image or press the **MENU** button to cancel.
6. Repeat step 4~5 to delete images.



- **To quickly delete the current display image:**
 1. Select the image you want to delete.
 2. Press the 🗑 button to show a confirmation bar.
 3. Press the **SET** button to delete the current display image.

3.10.2 Deleting All Files

You can use the Playback Menu to delete multiple files.

1. Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
2. Press the **MENU** button, then press ◀ or ▶ to select **DELETE** (🗑).
3. Press ▲ or ▼ to select **ALL**, and then press the **SET** button.

4. Press the **SET** button to delete all images or press the **MENU** button to cancel.

- ☞ • The protect images cannot be deleted with the delete function. Refer to 3.11 “Protecting Files” on page 18.

3.11 Protecting Files

Files stored on your camera or on a memory card can be protected to prevent accidental deletion.

1. Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
2. Press the **MENU** button, then press ◀ or ▶ to select **PROTECT** (On).
3. Press ▲ or ▼ to select **SINGLE**, and then press the **SET** button.
4. Press ◀ or ▶ to select the file you want to protect.
5. Press the **SET** button to protect the file or press the **MENU** button to cancel.
 - When the file is locked, the On displays on the LCD monitor.
6. Repeat step 4~5 to protect images.



- 💡 • To unlock the file, press the **SET** button again in step 5. The On will disappear and the file is unlocked.
- To lock/unlock all files at a time:
 1. Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
 2. Press the **MENU** button, then press ◀ or ▶ to select **PROTECT** (On).
 3. Press ▲ or ▼ to select **LOCK ALL** (or **UNLOCK ALL**), and press the **SET** button. A confirmation message appears.
 4. Press the **SET** button to lock (or unlock) all files, or press the **MENU** button to cancel.

3.12 Editing Images

3.12.1 Rotating Still Images

The still images can be rotated by various degrees.

1. Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
2. Press ◀ or ▶ to select the image you want to rotate.
3. Press the **MENU** button, then press ◀ or ▶ to select **ROTATE** (⏏).
4. Press ▲ or ▼ to select an option, and then press the **SET** button.
5. Press the **SET** button to confirm the change or press the **MENU** button to cancel.
 - The rotated image will be saved as a new file name.



3.12.2 Changing the Image Size

The resolution of still images that had already been recorded can be changed.

1. Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
2. Press ◀ or ▶ to select the image you want to resize.
3. Press the **MENU** button, then press ◀ or ▶ to select **RESIZE** (⏏).
4. Press ▲ or ▼ to select an option, and then press the **SET** button.
 - The resized image will be saved as a new file name.



- ☞ • Only a large size image can be resize to a smaller one.

3.12.3 Adding Stickers to a Still Image

1. Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
2. Press ◀ or ▶ to select the image you want to add stickers.
3. Press the **MENU** button, then press ◀ or ▶ to select **STICKER** (♥).
4. Press the **SET** button to enter the sticker screen.
5. Press ◀ or ▶ to select a desired sticker, and then press the **SET** button. The selected sticker shows on the center of the image.
 - Use the arrow button to move sticker or press the zoom lever to rotate the sticker.
6. Press the **SET** button and repeat the step 5 to continue select stickers.
7. Press the **MENU** button to display a confirmation message.

- Press the **SET** button to confirm the change or press the **MENU** button to cancel without saving the file.
 - The image added stickers would be saved as a new file name.

3.13 Setting the DPOF

The Digital Print Order Format (DPOF) setting allows you to select images on the memory card for printing and specify the number of print copies in advance using the camera. This is extremely convenient for sending the images to a photo developing service or for printing on a direct print function compatible printer.

- Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
- Press the **MENU** button, using ◀ or ▶ to select **DPOF** () and press the **SET** button.
- Press ▲ or ▼ to select **SINGLE**, then press the **SET** button.
- Press ◀ or ▶ to select the image you want to print out, and press ▲ or ▼ to specify the number of copies.
 - The number of copies can be set from 0 to 30.
 - To cancel this image DPOF setting, set the number of copies to 0.
- Press the **SET** button to turn on the date stamp of current image.
 - The date stamp icon () displays on the LCD monitor.
 - Press the **SET** button again to turn off the date stamp.
- Repeat step 4~5 to set other images for printing.
- Press the **MENU** button to complete the setting.



-  **To set the DPOF setting for all images in a time, select ALL in step 3 and press the SET button.**
- To reset all DPOF settings to initial default, select RESET in step 3 and press the SET button.**

3.14 Playing a Slide Show

You can set the camera to display images in a slide show.

- Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
- Press the **MENU** button, using ◀ or ▶ to select **SLIDE SHOW** () and press the **SET** button.
- Use the arrow button to set the playback interval () and repeat or not ().
 - You can set the interval between 1~10 seconds.
- Press the **SET** button to start the slideshow, or press the **MENU** button to cancel.



- During the slideshow, press the **SET** button to pause the slideshow and press the **SET** button again to resume.
- ☞ • The slideshow function is not available for the movie clips and voice recording.

3.15 Copying the Files

You may want to copy the data from the camera's internal memory to the memory card for convenience.

1. Be sure you had inserted a memory card to your digital camera.
2. Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
3. Press the **MENU** button, using ◀ or ▶ to select **COPY TO CARD** (📄) and press the **SET** button.
4. Press ▲ or ▼ to select **SINGLE**, then press the **SET** button.
5. Press ◀ or ▶ to select the image you want to copy to a card.
6. Press the **SET** button to start copy.
7. Repeat step 5~6 to copy other images.
8. Press the **MENU** button to complete the setting.



- 💡 • To copy all images to a memory card in a time, select **ALL** in step 4 and press the **SET** button.

3.16 Setup Settings

3.16.1 Adjusting Sounds

You can adjust the sound volume and set different sounds as the start-up sound.

1. Set the camera to the Setup Menu. Refer to 3.4.5 “Setup Menu” on page 9.
2. Press ▲ or ▼ to select **SOUNDS** (🔊) and then press ▶ or the **SET** button to enter the sounds screen.
3. Use the arrow button to adjust the volume and select a desired start-up sound.
4. Press the **SET** or the **MENU** button to apply the setting.
5. Press the **MENU** button to close the menu.



3.16.2 Setting Auto Review

When Auto Review is enabled, you can view an image for a few seconds after you have taken it. Refer to 3.4.5 “Setup Menu” on page 9.

Option	Description
Off	The captured image will not automatically display after shooting.
3 sec.	The captured image will display for 3 seconds after shooting.
5 sec.	The captured image will display for 5 seconds after shooting.

3.16.3 Setting the Power Save

For power consumption, you can set your camera to turn off automatically for a period of time. For detail operation, refer to 3.4.5 “Setup Menu” on page 9.

Option	Description
1 min.	The power will turn off automatically after 1 minute.
3 min.	The power will turn off automatically after 3 minutes.
5 min.	The power will turn off automatically after 5 minutes.

3.16.4 Setting the Language

The camera can display menus and other information in a number of different languages.

1. Set the camera to the Setup Menu. Refer to 3.4.5 “Setup Menu” on page 9.
2. Press \blacktriangle or \blacktriangledown to select **LANGUAGE** (🗨️) then press \blacktriangleright or the **SET** button to launch the submenu.
3. Press \blacktriangle or \blacktriangledown to select a language and press \blacktriangleleft or the **SET** button to apply the setting.
4. Press the **MENU** button to close the menu.



3.16.5 Resetting the File Numbers

Use this function if the camera experiences a "Folder cannot be created" error or if you want to restart numbering, for example, after erasing all files. For detail operation, refer to 3.4.5 “Setup Menu” on page 9.

Resetting the file number is useful for avoiding the file name duplication when images are downloaded to a computer.

Option	Description
Series	Store the latest used file number no matter deleting files or inserting a new memory card.
Reset	Reset file numbering each time the memory card is changed.

3.16.6 File Naming

File name begins with "DSCI" and are followed by a 4-digit number that increases in sequence. File numbering starts from 0001 when a new folder is created.

If the highest folder number is 999 and highest file number exceeds 9999, the camera will display the warning message "Folder cannot be created". When it appears, try one of the following ways:

- Reset the file number and plug in a new memory card, refer to 3.16.5 "Resetting the File Numbers" on page 22.
- Format the memory, refer to 3.20 "Formatting the Memory" on page 24. The folder number and file number are initialized and renumbered from 100 and 0001 respectively.

 **Do not change the folder and file names in the memory card using your computer. It may be unable to playback the data using the digital camera.**

3.17 Setting the TV Out

Your camera can be connected to a TV allowing you to preview images and movie clips on the television screen. TV Out should be set to either NTSC or PAL depending on your region. For detail operation, refer to 3.4.5 "Setup Menu" on page 9 and 4.2 "Connecting the Camera to a TV" on page 25.

3.18 Setting USB Port

You can set USB mode to connect the camera with a printer or computer. For detail operation, refer to 3.4.5 "Setup Menu" on page 9 and 4.3 "Connecting the Camera to a Computer with a USB Cable" on page 26.

Option	Description
Computer	To connect your camera to a PC.
Printer	To connect your camera to a printer.

3.19 Choosing a Startup Image

You can choose a recorded image as the start-up image.

1. Set the camera to the Playback mode. Refer to 3.3 “Switching between Record and Playback” on page 5.
2. Press ◀ or ▶ to select a desired image.
3. Press the **MENU** button, then press ◀ or ▶ to select **S.IMAGE** (🔄).
4. Press ▲ or ▼ to select an option, and then press the **SET** button.
5. Set the camera to the Setup Menu. Refer to 3.4.5 “Setup Menu” on page 9.
6. Press ▲ or ▼ to select **S.IMAGE** (🔄) then press ▶ or the **SET** button.
7. Press ▲ or ▼ to select a desired image and press the **SET** or the **MENU** button to apply the setting.
8. Press the **MENU** button to close the menu.



- ☞ • **The start-up image will not be deleted even if the original image is deleted or memory formatted.**

3.20 Formatting the Memory

To erase all data stored in the memory card if you are using a card, or all data stored in the internal memory if there is no card inserted.

1. Set the camera to the Setup Menu. Refer to 3.4.5 “Setup Menu” on page 9.
2. Press ▲ or ▼ to select **FORMAT** (🗑️) then press ▶ or the **SET** button.
3. Press the **SET** button to start format, or press the **MENU** button to cancel it.
 - A "BUSY...PLEASE WAIT" message displays and the memory card is starting format.
 - A "COMPLETED" message displays when finish formatting.

- ☞ • **All data will be deleted including protected ones. Be sure to download important files to your computer before formatting.**

3.21 Resetting to Default Settings

You can reset the entire menu and button operation settings to initial default.

1. Set the camera to the Setup Menu. Refer to 3.4.5 “Setup Menu” on page 9.
2. Press ▲ or ▼ to select **RESET ALL** (🗑️) then press ▶ or the **SET** button to launch the submenu.
3. Press ▲ or ▼ to select **YES** then press the **SET** button to reset all settings.

4 Making Connections

4.1 Bundled Software

The camera is supplied with the following software. To install the software, refer to the information supplied with respective CDs.

Ulead Photo Express

Ulead® Photo Express™ 5.0 SE is a complete photo project software for digital images. Acquire photos effortlessly from digital cameras or scanners. Edit and enhance images using easy-to-use editing tools and cool photographic filters and effects. Assemble creative photo projects and share results via e-mail and multiple print options.

Ulead Photo Explorer

Ulead® Photo Explorer™ 8.0 SE Basic provides an efficient way to transfer, browse, modify and distribute digital media. It is an all-in-one tool for owners of digital cameras, webcams, DV camcorders, scanners, or for anyone who strives to effectively handle digital media.


Ulead VideoStudio

Ulead® VideoStudio™ 8 SE VCD is home video editing software that makes editing movies as fun as shooting them. Users can make a movie in three easy steps using the new Movie Wizard mode. Share finished projects on VCD, tape, the web, and mobile devices.

4.2 Connecting the Camera to a TV


Images displayed on the camera's monitor screen can also be displayed on a television.

1. Use the included audio/video cable to connect the camera to the TV set.
2. Set the TV input signal to Video In. Refer to the documentation included with your TV for more information.
3. Everything that would normally appear on the camera's LCD screen, such as photo and video clip playback, slide shows, and image or video capture, appears on the TV.

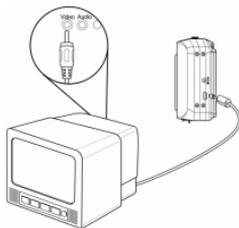

4.3 Connecting the Camera to a Computer with a USB Cable

1. Connect the supplied USB cable to the computer's USB port.
2. Turn on the camera.
3. The LCD screen turns off when the connection to the computer has been successfully completed.
4. Open **My Computer** or **Windows Explorer**. A "Removable Disk" appears in the drive list. Double-click the "Removable Disk" icon to view its contents.
5. Files stored on camera are located in the folder name "DCIM".

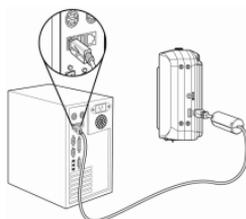

- ☞ **You don't have to turn off the computer or camera when making this connection.**
- **Refer to your computer's manual for information regarding the USB port location.**
- **The camera will turn off automatically if the USB cable is disconnected.**

System Requirements (For Windows)

* PC with processor better than MMX
 * Pentium 233 MHz
 * Windows XP/2000/ME
 * Minimum 32 MB RAM

* USB port
 * CD-ROM drive
 * 800 x 600 pixels, 16-bit color display compatible monitor

5 Troubleshooting

Problem	Cause	Solution
Power does not turn on.	Battery is inserted in the wrong direction.	Reload battery in the correct direction.
	Batteries are dead.	Replace or recharge batteries.
	The battery compartment door is open.	Make sure the battery compartment door is securely closed.
The camera does not take pictures.	The flash is charging.	Wait for the flash to charge.
	Memory is full.	Insert a new memory card.
	Memory card is not formatted correctly.	The card may be defective, use a new card.
Image is not recorded when the shutter button is pressed.	The Flash is charge.	Wait for the flash to charge.
	Memory is full.	Insert a new memory card.
The flash does not fire	Flash is set to OFF.	Set the flash to any mode except off.
Image is blurry or out of focus.	The camera was moving when the image was captured.	Hold the camera steady when shooting picture.
	The subject was beyond the range within which the camera can focus.	Turn the Macro mode on if the subject is within 5 cm (zoom out) or 50 cm (zoom in). Do not use Macro mode when shooting distant subjects.
Image is not displayed on the LCD monitor.	A memory card with non-DCIF images (recorded with other camera) is loaded.	This camera cannot display non-DCIF images.
Recorded images are not saved in memory.	The camera was turned off/power down before the image was stored in memory	If the battery low indicator appears on the LCD monitor, replace the battery immediately.
Cannot transfer images to a computer after connecting the USB cable.	USB driver is not installed.	Install the USB driver before you connect the camera to a computer/turn the camera on.

6 Specifications

Sensor	10.1 Mega Pixels CCD, Size: 1/1.8 inch
Lens	Focal Length: f=7.94 ~ 22.71 mm, 3X optical zoom, 4X digital zoom
LCD monitor	2.4" TFT color LCD
Focus Range	Normal: 80cm ~ Infinity Macro: (W) 5cm ~ 80cm / (T) 25cm ~ 80cm
Aperture	F/2.8 ~ 5.1
Shutter	8 ~ 1/2000 sec.
File Format	Still Image: JPEG (EXIF 2.2 compatible), DCF compatible, Support DPOF Video: MPEG-4 / Audio: WAV
Resolution	Still Image: 3648 x 2736 / 3648 x 2432 (3:2) / 3264 x 2448 / 2560 x 1920 / 2048 x 1536 / 640 x 480 Video: 640 x 480 / 320 x 240 / 160 x 128
Scene Mode	Program / Aperture priority / Shutter priority / Manual / Portrait / Landscape / Night Scene / Kids / Beach & Snow / Backlight / Sunset / Close-up / Text / Sports / Fireworks
Sensitivity	Auto/ISO 50/ISO 100/ ISO 200
White Balance	Auto/Daylight/Cloudy/Tungsten/Fluorescent (H)/Fluorescent (L)/Custom
Exposure Control	-2EV to +2EV in 1/3 step
Metering	Center-weighted/Multi/Spot
Burst	4 images at one shot
Self-timer	2 sec./10 sec./Double
Flash	Auto/Red eye reduction/Forced on/Slow sync/Forced off
Photo Effect	Black & White/Sepia/Negative Art/Mosaic
Storage	24 MB internal memory/SD slot
TV system	NTSC/PAL
Power Supply	AA alkaline battery x 2, AC power adaptor (3V) (optional)
Ambient temperature	Operating: 0° C to 40° C, Storage: -20° to 60° C
Microphone	Built-in
Speaker	Built-in
Dimensions	89 x 60.5 x 32.7 mm
Weight	Camera Body w/o battery: Approx. 140 (g)

 • These specifications are subject to change without notice.

7 Service Information

Technical Support

If you have any problem or question regarding the camera, you can visit the following web site for further assistance:

<http://support.BenQ.com>

For free driver updates, product information and news releases, visit the following web site:

<http://www.BenQ.com>