

COBY®

DP-758



7" Widescreen Color TFT LCD Digital Photo Frame



INSTRUCTION MANUAL

Please read this manual carefully before operation

Precautions

	CAUTION WARNING: SHOCK HAZARD. DO NOT OPEN. AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR	
CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

For Customer Use:

Enter below the serial number that is located on the bottom of the unit. Retain this information for future reference.

Model No. _____ DP-758 _____

Serial No. _____



For recycling or disposal information about this product, please contact your local authorities or the Electronics Industries Alliance: www.eiae.org.

Precautions

WARNING:

To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

CAUTION:

To prevent electric shock, match wide blade of plug to wide slot of outlet and fully insert.

 
Important Safety Instructions

1. **Read Instructions:** All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions:** The safety and operating instructions should be retained for future reference.
3. **Heed Warnings:** All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions:** All operating and usage instructions should be followed.
5. **Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments:** Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. **Water and Moisture:** Do not use this product near water (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. **Accessories:** Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. **Ventilation:** Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
11. **Power Sources:** This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
12. **Grounding or Polarization:** This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
13. **Power-Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.



Important Safety Instructions

14. **Protective Attachment Plug:** The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.
15. **Outdoor Antenna Grounding:** If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANS/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode (see figure).

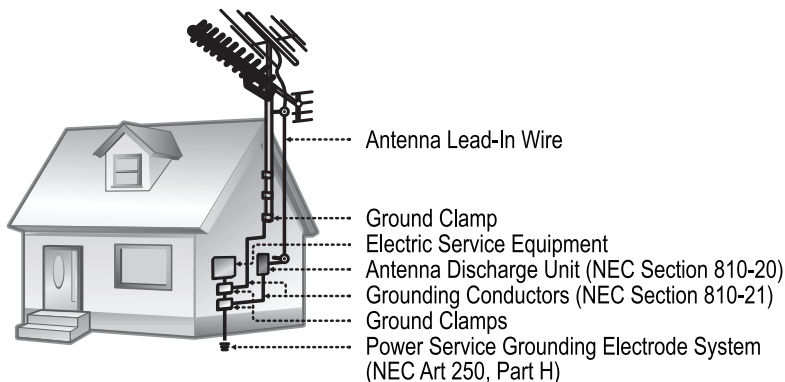

16. **Lightning:** For added protection for this product, unplug it from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
17. **Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.
18. **Overloading:** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

Important Safety Instructions

19. **Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. **Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. **Damage Requiring Service:** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
22. **Replacement Parts:** When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
23. **Safety Check:** Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
24. **Wall or Ceiling Mounting:** The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
25. **Heat:** The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Table of Contents

PRECAUTIONS	2
IMPORTANT SAFETY INSTRUCTIONS.....	4
TABLE OF CONTENTS	7
PACKAGE CONTENTS & FEATURES.....	9
Package Contents	9
Features	9
LOCATION OF CONTROLS.....	10
Top View.....	10
Left View	10
Front View	10
Right View	10
GETTING STARTED	11
Installing a Memory Card.....	11
Powering your Digital Picture Frame	11
Item List Screen	12
Select Card Screen.....	13
Photo Slideshow	13
To View Next / Previous Photo	13
PHOTO MODE.....	13
To Rotate the Photo / Change the screen ratio	14
Calendar with Time Screen	15
CLOCK MODE	15
SETUP MODE.....	16
Setup Screen	16
To adjust the Picture/Clock/LCD settings & Reset.....	16
SETUP MODE.....	17
INTERCHANGEABLE FACEPLATES.....	18

Table of Contents

FIRMWARE UPGRADES.....	19
TROUBLESHOOTING	20
SPECIFICATIONS	22
NOTES	23

Package Contents & Features

Package Contents

Please make sure that the items shown below are included in the package. Should an item be missing, please contact the local retailer from which you purchased this product.

 


1. COBY DP-758
2. Remote Control
3. Manual

Features

- 7" Widescreen TFT LCD Color Screen
- Displays JPEG Photo Files
- MS and SD/MMC Card Slots
- USB Port for Fast File Transfers
- Interchangeable Faceplate
- Detachable Stand
- Wall Mountable

Location of Controls

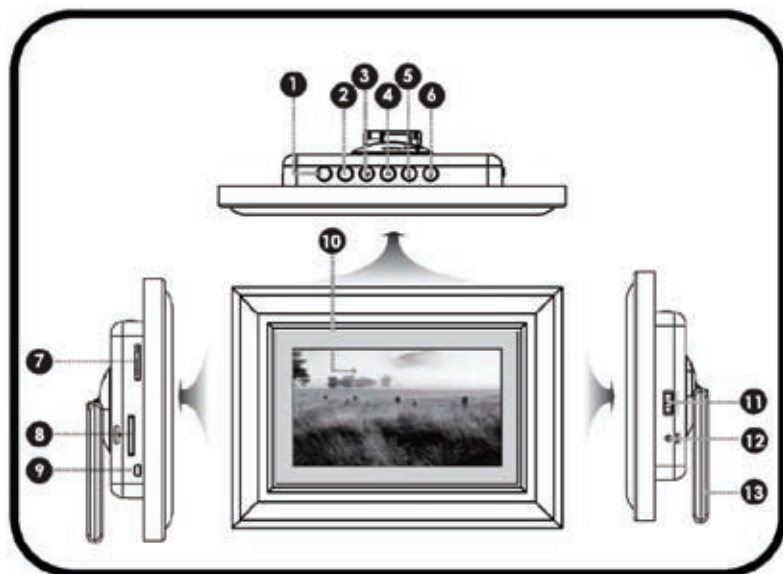

Top View

1. **Menu**
Press for exit
2. **Enter/Slideshow**
Press for Enter
Press for Slideshow
3. Down
4. Up
5. **Left**
Press for Left during selecting
Press for rotating
(In Photo Mode)

6. Right

Press for Right during selecting
Press for Full screen / Original screen
(In Photo Mode)

Left View

7. Memory Stick (MS)
8. Secure Digital (SD) / Multi Media Card (MMC)
9. USB Port (connect to a computer)

Front View

10. 7" TFT LCD

Right View

11. Power Switch (On / Off)
12. Power In Jack
13. Detachable Kickstand

Getting Started

Installing a Memory Card

Your photo frame supports the following types of memory cards:

- Compact Flash cards (CF)
- Secure Digital cards (SD)
- MultiMedia Card (MMC)

 
Simply insert the memory card of your choice into its corresponding card slot located on the left panel of the photo frame. Take care to orient the card in the proper direction.

Getting photos and files onto your picture frame for viewing couldn't be easier!

Powering your Digital Picture Frame

Your Photo Frame should be connected to an AC 100-240V wall outlet.

- Using the supplied power adapter, plug one end of the adapter into your photo frame's Power In Jack and plug the other end into an AC 100-240V wall outlet.

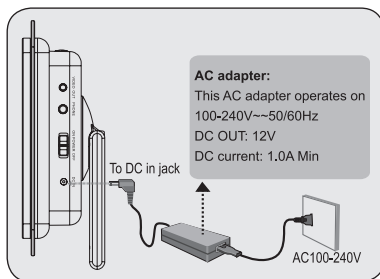

Do not connect the power plug to a power outlet other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

Do not handle the power plug with wet hands. Doing so may cause electric shock.

Use only the AC adapter supplied with the photo frame. Failure to do so may cause a fire or damage the player.

Getting Started

Item List Screen

Upon turning on the power, your photo frame will display the "ITEM LIST" screen show below.



Photo Mode

Select Card Screen

- Insert MS or SD/MMC card to the corresponding slot.
- Select PHOTO in Item List screen and press ENTER, the “Select Card” screen appears on LCD shown below.



SELECT CARD SCREEN

- Selecting:** A card icon that is in-color with highlighted frame indicates that the card is being selected.
- Inserted:** A card icon that is in-color indicates that the card has been inserted.
- No Card:** A card icon that is grayed-out indicates that the card has not been installed for use.

Photo Slideshow


- Press ⏪ or ⏩ to select the desired inserted card.
- Press ENTER to start playing Photo slideshow.


To View Next / Previous Photo

- In slideshow mode, press ENTER for “SINGLE SHOW”.
- Press ⏭ to view the next photo.
- Press ⏮ to view the previous photo.

Photo Mode

To Rotate the Photo / Change the screen ratio

Press  to rotate the photo to angles shown below:

- Rotation 90° → Rotation 180° → Rotation 270° → Original
- Press  to toggle the screen ratio between Full Screen and Original.



To adjust the photo slideshow speed to Fast / Middle / Slow, please turn to Setup section.

Clock Mode

Calendar with Time Screen

- Insert MS or SD/MMC card to the corresponding slot.
- Select CLOCK on Item List screen and press ENTER, the “Calendar with Time” screen appears on LCD shown below.



CALENDAR WITH TIME SCREEN

- Press / to select a year number, repeatedly press this button will increase / decrease the number of years.
- Press / to select a month number, repeatedly press this button will decrease / increase the number of months.
- To adjust the time and day, please turn to Setup section.

NOTE: This Digital Photo Frame has no flash memory, so date and time require adjusting manually after turning on the player.

Setup Mode

Setup Screen

- Insert MS or SD/MMC card to the corresponding slot.
- Select SETUP on Item List screen and press ENTER, the SETUP screen appears on LCD shown below.



SETUP SCREEN

To adjust the Picture/Clock/LCD settings & Reset

- Press / to select Picture/Clock/LCD/System in Setup List.
- Press ENTER to select the sub-settings.

Picture:





- Use to select the desired item.
Press MENU to go back to Setup List.

Clock:

- Press / to move cursor between time and date, and press / to adjust the time and date which will be displayed on Clock screen before turning off the player.
- Press ENTER to confirm the Selection.

Setup Mode

LCD:

- Press  /  to select different items.
- Press  /  to adjust the values and press ENTER to confirm.

System Reset



- Press  /  to select Ok/Cancel and press ENTER to confirm.

Interchangeable Faceplates

To affix a faceplate to your photo frame:



1. Attach the faceplate to the main unit and rotate the clips in the direction of the arrows at a $\pm 90^\circ$ angle.
2. Now it has been affixed to the surface of the photo frame.

  Interchangeable Faceplate

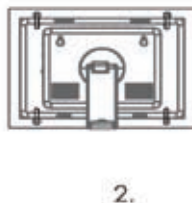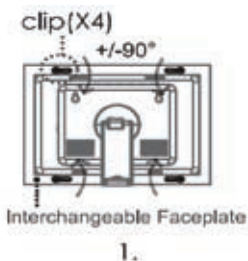

To detach the faceplate from your photo frame.

  1. Rotate the clips in the direction of the arrows at a $\pm 90^\circ$ angle.
2. Simply remove the main unit from the faceplate, the faceplate has been detached.

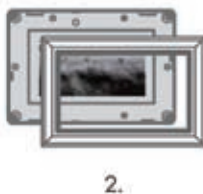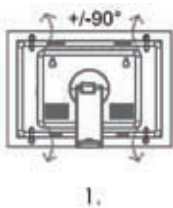

Firmware Upgrades

From time to time, COBY may release firmware updates to improve the performance of the DP-758 or to add additional features. Please check the COBY website periodically at www.cobyusa.com to see if new firmware has been released for your photo frame.

Troubleshooting

If you have a problem with this unit, please read the troubleshooting guide below and check our website at www.cobyusa.com for Frequently Asked Questions (FAQs) and firmware updates. If these resources do not resolve the problem, please contact Technical Support.

COBY Electronics Technical Support

56-65 Rust Street
Maspeth, NY 11378

Email: techsupport@cobyusa.com

Web: www.cobyusa.com

Phone: 800-727-3592 (8:00 AM–11:00 PM EST, seven days a week)
800-681-2629 (8:00 AM–5:30 PM EST, Monday to Friday)
718-416-3197 (8:00 AM–5:30 PM EST, Monday to Friday)

The player does not turn on.

- Make sure the unit has been powered on manually (i.e., the Power Switch has been physically set to the ON position).
- Ensure that the power cord has been properly connected to the power outlet.

I cannot select a memory card.

- Ensure that a memory card has been installed.
- Ensure that the memory card is properly installed.
- Ensure that the memory card is not defective.

The picture is noisy or distorted.

- Reset the color system of the TV set.
- Ensure that the photo frame is connected using the RCA AV cable.

Troubleshooting

The photo frame has malfunctioned.

- Turn the photo frame off and let it rest for 30 minutes. After that, turn on the photo frame -- the restore function should reset the photo frame.
- Try updating the player's firmware. Please refer to the Firmware Upgrade section of this manual for detailed instructions.

Specifications

Display Type	7" Full-Color TFT LCD
Display Resolution	480 x 3 (RGB) x 234
Memory	MS Card Slot SD/MMC Card Slot
Photo Format Support	JPEG (8MB)
USB Port	USB 2.0 High-Speed
Power Supply	DC 12V, 1A 100-240V AC Adapter

Specifications and manual are subject to change without prior notice.

Notes

COBY Electronics Corp.

56-65 Rust Street
Maspeth, NY 11378

www.cobyusa.com
www.ecoby.com