


Thank you for choosing a COBY MP3 player!

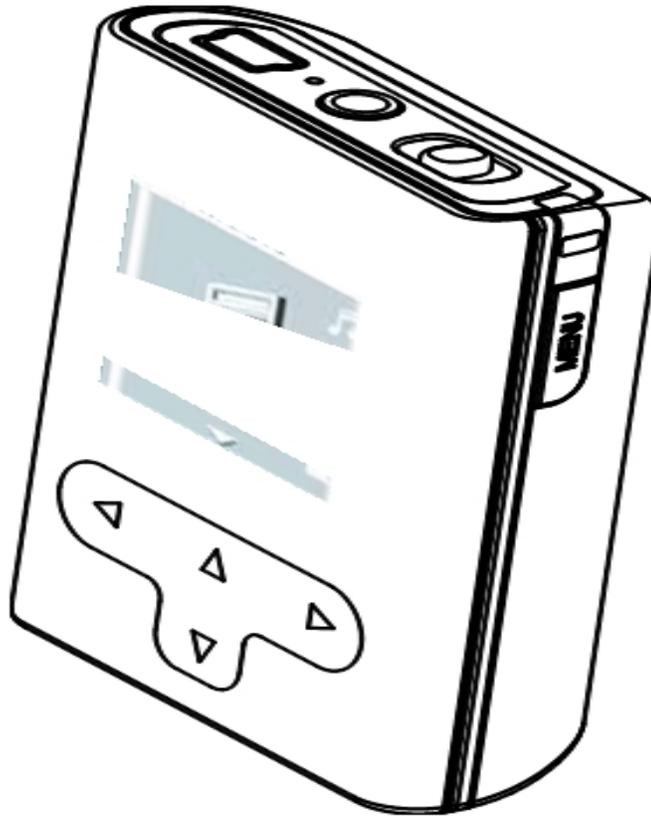

- ~This guide will cover how to transfer your music CD's into your COBY MP3 player using Windows Media Player 11.
- ~This guide will also provide common troubleshooting solutions for your COBY MP3 player.

Requirements

Windows Media Player 11 (WMP11)

The directions in this guide are given for Windows Media Player 11 (WMP11)


If your computer does not have Windows Media Player installed, please download the latest version of Windows Media Player (WMP) from Microsoft's website

www.microsoft.com/windows/windowsmedia/player/download/download.aspx

AUDIO TRANSFER – Getting Started

Transfer your Music CD's into your COBY MP3 player

1) Launch the WMP11 program.

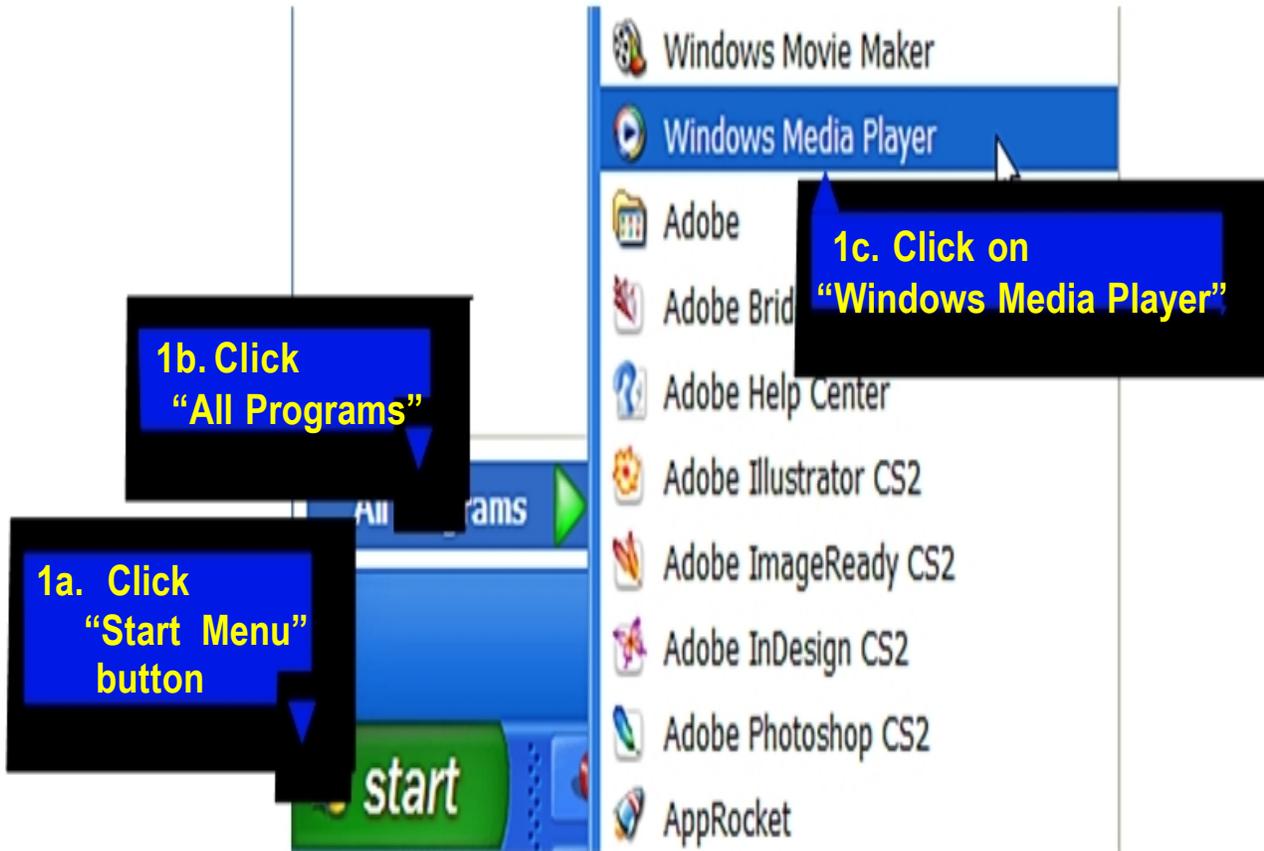

2) Put an audio CD into the CD-ROM drive of your computer.

- ✦ If your computer has an internet connection, WMP will automatically retrieve and display the album information.

Click the “**Rip**” tab and select which “Title” to rip.

To rip the entire album, check the top check box.


The screenshot shows the Windows Media Player interface with the 'Rip' tab selected. The album 'Coming Home (D:)' by Lionel Richie is displayed. A table of tracks is shown with a check box for each track, and the top check box for the entire album is highlighted with a blue box.

Album	<input checked="" type="checkbox"/>	Title	Length	Rip Status	Contributing Artist	Composer
Coming Home	<input checked="" type="checkbox"/>	1 I Call It Love	3:19	Stopped	Lionel Richie	Herman...
Lionel Richie	<input checked="" type="checkbox"/>	2 Sweet Vacation	3:54		Lionel Richie	Lionel Ri...
Soul and R&B	<input checked="" type="checkbox"/>	3 Why	4:01		Lionel Richie	Chuckii ...
2006	<input checked="" type="checkbox"/>	4 What You Are	4:12		Lionel Richie	Jermain...
☆☆☆☆☆	<input checked="" type="checkbox"/>	5 Up All Night	3:36		Lionel Richie	Chuckii ...
	<input checked="" type="checkbox"/>	6 I'm Coming Home	4:18		Lionel Richie	Chuckii ...
	<input checked="" type="checkbox"/>	7 All Around the World	3:34		Lionel Richie	Lionel Ri...
	<input checked="" type="checkbox"/>	8 Out of My Head	3:15		Lionel Richie	Lionel Ri...
	<input checked="" type="checkbox"/>	9 Reason to Believe	4:46		Lionel Richie	Dallas A...
	<input checked="" type="checkbox"/>	10 Stand Down	4:02		Lionel Richie	Dallas A...
	<input checked="" type="checkbox"/>	11 I Love You	4:12		Lionel Richie	Lionel Ri...

3) Set the Rip Options (optional).

Click the “**Rip**” button to set the Rip options. The recommended Rip settings are:

- ✧ Select “Format > mp3”
- ✧ Select “Bit Rate > 128 Kbps”
- ✧ Select “More Options” to change the directory to which WMP saves your ripped music files ✧ WMP will save your music to your “My Documents > My Music” default folder.

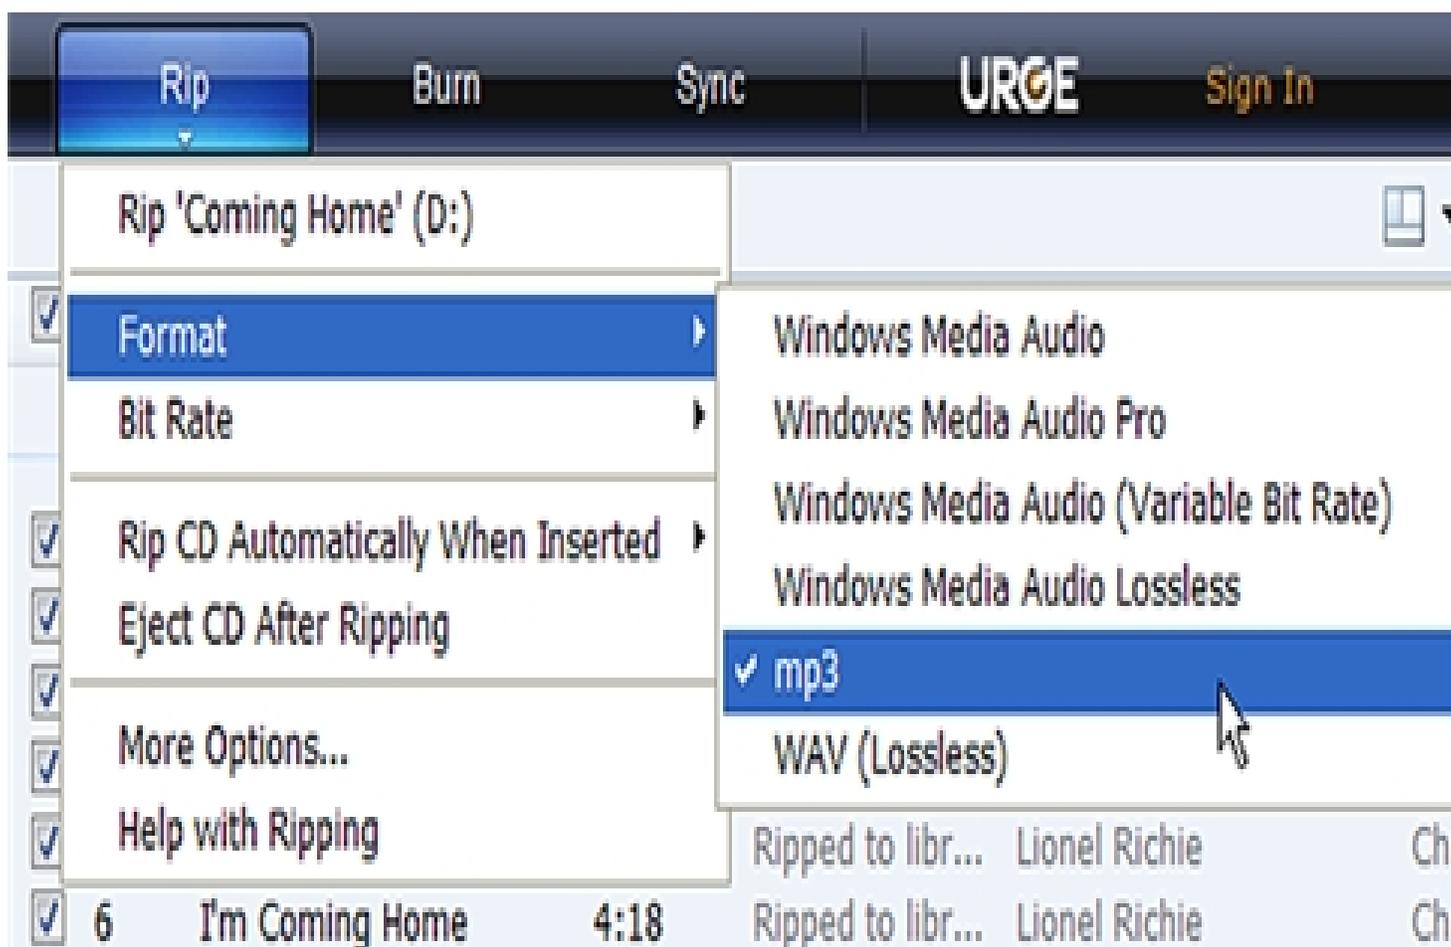

4) Start ripping the CD.

Click the “**Rip**” button and select “Rip” to start converting the audio CD to MP3/WMA

- ✦ The ripping process will take a few minutes to complete. WMP will save the converted music files in your “My Documents > My Music” default folder.



Transfer MP3/WMA Files to Your COBY Player


Once you have MP3 or WMA digital music files on your computer, transfer them to your COBY player in order to listen to music anywhere.

Use WMP11 to transfer (sync) music from your computer to your COBY MP3 player.

1) Launch the WMP11 program.

2) Connect your COBY player to a USB port on the computer.

✦ WMP11 will detect your COBY player automatically.

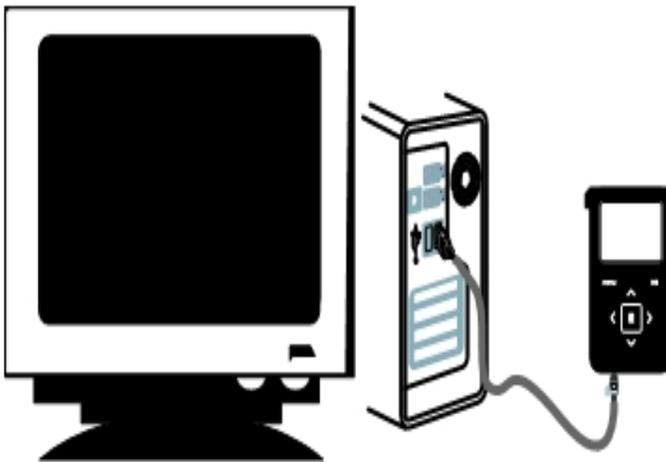

3) Browse your music library to choose songs to sync.

The screenshot shows the iTunes application window. At the top, there are tabs for 'Now Playing', 'Library', 'Rip', 'Burn', and 'Sync'. The 'Sync' tab is selected, and a mouse cursor is pointing at it. A blue callout box with yellow text says '3a. Click "Sync"'. Below the tabs is a search bar and a sidebar with 'Playlists' and 'Library' sections. The 'Library' section is expanded, showing 'Recently Added', 'Artist', 'Album', 'Songs', 'Genre', and 'Year'. The main area displays 'Primary Views' with icons for 'Recently Added', 'Artist', 'Album', and 'Songs'. A blue callout box with yellow text says '3b. Double-click an icon to choose a view of your Music Library'. Below this is the 'Additional Views' section with icons for 'Contributing Artist', 'Composer', 'Parental Rating', 'Online Stores', and 'Folder'. On the right side, there is a sync progress bar showing '6.1 GB remaining' and a 'Sync List' section with instructions: 'Drag items here to create a list to sync to 'MP-C951'' or 'Shuffle music to 'MP-C951''. At the bottom right, there is a 'Start Sync' button.

4) Select songs to sync to your COBY player.



4a. Type in the Search bar to quickly find a song.


4c. Drag the selected tracks here to add them to the Sync List.

4b. Click on a track to select it for synchronization. To select multiple tracks, hold the CTRL or SHIFT and click on the tracks.

4d. Click "Start Sync" to transfer the Sync List to your COBY player.

5) Disconnect your COBY player from the computer.

Once the sync process is complete, unplug your player from the USB port of the computer. Now you're ready to listen to music on your COBY player.

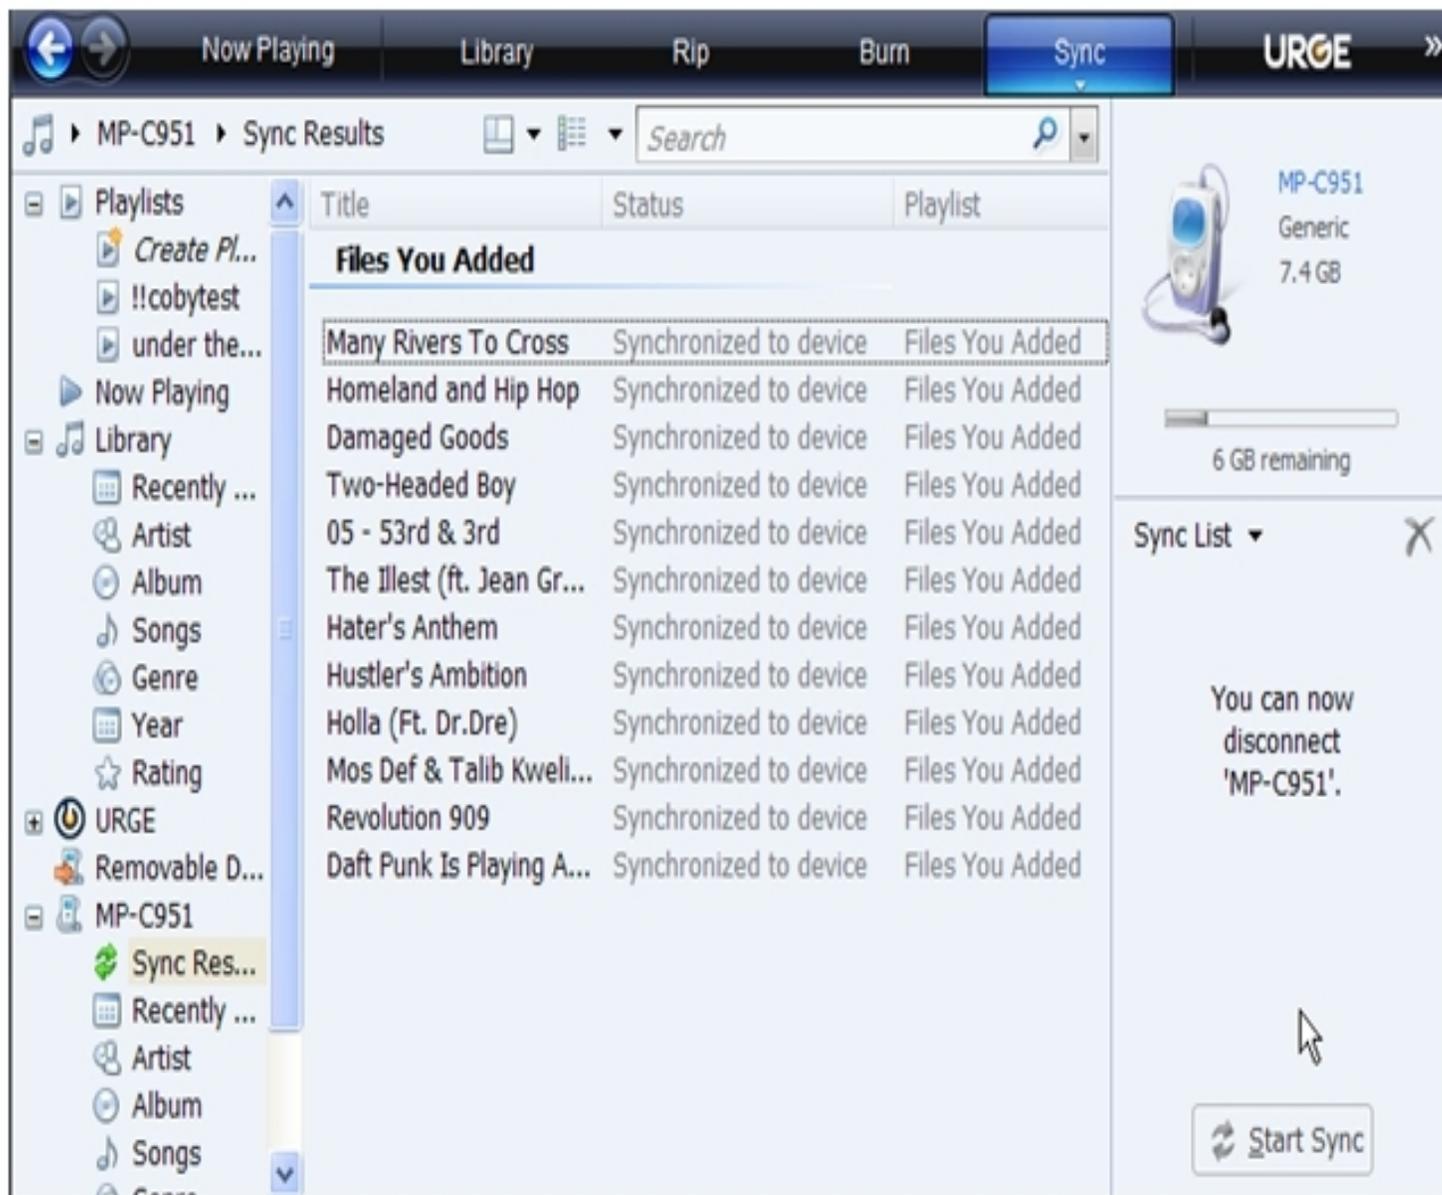

NOTE: Any files can be transferred to the MP3 player by using the drag and drop or copy and paste method. If you have existing files on your computer, they can be transferred into the MP3 player using any of the above method.

VIDEO TRANSFER – Getting Started

Converting your VIDEO files and transferring it into your player.

Install the PDConverter & the Xvid encoder

1. Insert the driver CD
2. The CD will Auto-run, Click on the “Video Converter”
3. You will be brought the (PDConverter & Xvid) download web site, which will prompt you to select your download
4. Download and Install [PDConverter v1.7.1.14](#) and [Xvid](#)

Run the Conversion Utility

1. Click on the “PDConverter” located on your desktop
2. The program will initialize

Converting Video (see diagram below)

- 1. a** Find and Select the video files to convert in the ADD field.
- 1. b** Select the directory where you want to save the converted file.
- 1. c** Start the conversion process by selecting “Encode Now!”

**When the conversion is completed,
Copy and Paste or Drag and Drop the converted
files to your MP3 player.**

Done!!

1.a Add Clear

Input Video Files	Type	Size	Status
-------------------	------	------	--------

There are no A/V files to show in this panel.

[-] Audio	
Bitrate	128 Kbps
Frequency	44100 Hz
[-] Video	
Frame Rate	15 fps
Resolution	128:128

Target Location:

 E:\ **1.b**



Encode Now! **1.c**

Common Troubleshooting

Problems

Possible Solutions

No Power

- *Ensure that the HOLD button is turned off
- *The Battery level may be too low. Charge the unit.
- *Reset the unit.

Song Freezes

- *Make sure your WMA file(s) are not DRM protected.
- *The file(s) are corrupted or damaged.
- *Unsupported file format (ACC, WAV, M4A...Etc.)

MP3 Player not recognized by the Computer

- *Check the connections
- *Switch USB ports
- *Go into the player SETTING and change the CONNECTION to either MSC or AUTO.

No sound after file transfer

- *Ensure that the headphone is attached securely to the player.
- *Make sure your WMA file(s) are not DRM protected
- *Unsupported file format (ACC, WAV, M4A...Etc.)

Video Conversion Error

- *Ensure that the original file plays on your computer. If not, then you will need to obtain the codec for that file.
- *Unsupported format

Video Issues

- *Make sure that you are using the correct output frame size and the correct output frame rate.
- *For the best output frame size, set the MTV Video Converter to 128X128 @ 15fps

Volume Issues

- *To change the volume, press the DOWN button twice.
- *Once the Volume appears, press the UP/Down to change Volume

If you are still having difficulty with your MP3 player, please contact Customer Care, Hours of operation, Monday-Friday 8:00 AM – 8:30:00 PM EST, Saturday and Sunday 9:00 AM – 5:30 PM EST. You can also reach us online at customerservice@cobyusa.com or techsupport@cobyusa.com

1-800-727- 3592