




Usage: Dell™ USB Enhanced Multimedia Keyboard User's Guide





Understanding the LED Indicators



On Dell™ USB Enhanced Multimedia Keyboard, there are 3 LED indicators:

LED Indicator Light	Meanning
 Num Lock	Num Lock key is toggled on
 Caps Lock	Caps Lock key is toggled on
 Scroll Lock	Scroll Lock key is toggled on

Using the Hotkeys

Eight hotkeys are designed on this keyboard for performing the Internet browser functions and launching E-mail, My Computer, calculator on Windows system. Each Hotkey's function is described as following:

Hotkey	Function
 WWW Back	Back one page
 WWW Forward	Forward one page
 WWW Stop	Stop the browser
 WWW Refresh	Refresh this page
 WWW Home	Go to Home page
 E-mail	Launch E-mail

 My Computer	Launch My Computer
 Calculator	Launch Calculator



NOTE: E-mail, My Computer and Calculator keys can be supported by Windows XP and further Windows version.



Using the Audio Cluster

Audio Cluster provides quick, one-touch access to volume and audio functions on Windows system and is described as follows:

Audio Cluster	Function
	1. Volume Knob - Volume Up / Volume Down (turns right to left, no push button)
	2. Mute On / Off
	3. Media Stop
	4. Previous Track
	5. Next Track
	6. Play / Pause
	7. Audio Key

Using the Application Key and Windows Keys


Application Key and two Windows Keys are the three specific keys on the keyboard for more convenient use on Windows system as follows:

 
Key Combinations	Function
 Application key	The same shortcut menu as right-clicking the desktop while pressing this key
 Windows key	Start Menu
Windows key + E	Windows Explorer
Windows key + F	Find Document
Windows key + M	Minimize All
Windows key + R	Display Run Dialog box
Windows key + F1	Display Help Menu
Windows key + TAB	Activate next taskbar button
Windows key + Ctrl + F	Find Computer

Windows key + Shift + M	Undo Minimize All
Windows key + Pause/Break	Perform a system function

Using the Keyboard's USB Ports

There are 2 USB Full-speed Hub ports under the bottom of keyboard that provides additional connections to the USB Full-speed or Low-speed devices. Any low-power or self-powered USB devices can be plugged into the USB ports.

 *NOTE: Some of USB High-Speed devices maybe cannot workable on USB Full-speed Hub ports.*



Dell™ USB Enhanced Multimedia Keyboard



System Requirements

In order to properly install and operate your Dell™ USB Enhanced Multimedia Keyboard, the following system requirements are necessary:

- One free USB port
- Microsoft Windows® 2000, Microsoft Windows® XP, Red Hat Linux Enterprise WS Edition

