

Fig.1/Abb.1/Afb.1

ON/OFF switch
ON: Press the switch,
OFF: Press the switch again.

Hauptschalter ON/OFF
ON: Einmal dr cken,
OFF: Erneut dr cken.

Interrupteur ON/OFF
ON: appuyer sur l'interrupteur,
OFF: appuyer une seconde fois.

Interruttore di accensione/
spegnimento (ON/OFF)
Accensione (ON):
Premere l'interruttore.
Spegnimento (OFF):
Premere di nuovo l'interruttore.

AAN/UIT schakelaar
AAN: Druk de schakelaar in.
UIT: Druk de schakelaar nogmaals in.


Interruptor ON/OFF
ON: Oprima el interruptor,
OFF: Vuelva a oprimir el interruptor.

T nd/sluk knap (ON/OFF)
ON: Tryk p knappen,
OFF: Tryk p knappen igen.

Str mbrytare (ON/OFF)
P (ON): Tryck p knappen,
AV (OFF): Tryck en g ng till p knappen.

P /av bryter (ON/OFF)
P (ON): Trykk p bryteren,
Av (OFF): Trykk p bryteren p nytt.

Virran kytkin/katkaisin (ON/OFF)
ON: Paina kytkint ,
OFF: Paina kytkint viel kerran.

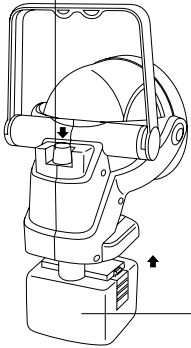


- Battery pack
- Akku
- Batterie
- Blocco batteria
- Batterij
- Bater a recargable
- Batteripakning
- Batteripaket
- Batteri
- Akku

※ EY3790 is referred for illustration.
※ Zur Illustration wird auf EY3790 Bezug genommen.
※ Le mod le EY3790 est montr titre d'exemple.
※ Ci si riferisce a EY3790 per l'illustrazione.
※ De EY3790 dient ter illustratie.
※ Se remite al EY3790 como ilustraci n.
※ Der henvises til EY3790 som illustration.
※ Modell EY3790 visas p bilderna.
※ Illustrasjonene viser EY3790.
※ EY3790 viittaa kuvaan.

Fig.2/Abb.2/Afb.2

Loosen
Herausdrehen
Desserrer
Allentare
Losmaken
Afloje
L ı sn
Lossa
L ı sne
L ysenn

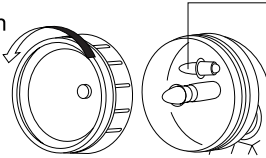

- Spare blub
- Neue Gl hbirne
- Ampoule de rechange
- Lampadina di ricambio
- Reserve lampje
- Bombilla de repuesto
- Reservep re
- Reservgl dlampa
- Reservelysp re
- Varapolttimo

- Bulb
- Gl hbirne
- Ampoule
- Lampadina
- Lampje
- Bombilla
- P re
- Gl dlampa
- Lysp re
- Polttimo

※ EY3790 is referred for illustration.
※ Zur Illustration wird auf EY3790 Bezug genommen.
※ Le mod le EY3790 est montr titre d'exemple.
※ Ci si riferisce a EY3790 per l'illustrazione.
※ De EY3790 dient ter illustratie.
※ Se remite al EY3790 como ilustraci n.
※ Der henvises til EY3790 som illustration.
※ Modell EY3790 visas p bilderna.
※ Illustrasjonene viser EY3790.
※ EY3790 viittaa kuvaan.

Index / Hinweise / Index / Indice / Index / Indice / Indeks / Index / Indeks / Hakemisto

English:	Page	3
Deutsch:	Seite	4
Frar ais:	Page	5
Italiano:	Pagina	6
Nederlands:	Badzijde	7
Espa ol:	P gina	8
Dansk:	Side	9
Svenska:	Sid	10
Norsk:	Side	11
Suomi:	Sivu	12

English

Cautions

¥The lantern automatically goes off when the voltage drops below a specified value. This is not malfunction (excessive discharge prevention function).
¥Do not use the lantern outside in rainy weather or in a place where it will be exposed to water. This may cause electric shock or a malfunction.
¥Do not cover the lantern with cloth or paper during use. Heat generated from the lantern will be trapped and cause an accident.
¥Do not drop the lantern or expose it to strong shock. This may cause a malfunction.
¥Store the lantern in a safe place. Avoid damp or dusty places, a place exposed to direct sunlight or inside a closed automobile.
¥To clean the lantern, wipe with a dry, soft cloth.
¥Do not throw the discarded battery pack into a fire. This can cause an explosion.
¥Do not disassemble the lantern. For repairs, consult your authorized distributor.

Using the Lantern (Fig. 1)

*Before Using the Lantern
Charge the battery pack with the battery charger.
(Battery pack [Optional], Battery charger [Optional])
1) Install the charged battery pack.
2) Switch the power on.

Applicable Battery Packs / Chargers

Battery packs and chargers are not included.

	EY3790						EY3793	
Battery pack	EY9001	EY9006	EY9101	EY9106	EY9107	EY9200	EY9136	EY9230
Operating hours	2 hours		2.5 hours	3 hours		4.5 hours	4 hours	6.5 hours
Battery charger	EY0202, EY0212, EY0213, EY0230					EY0213, EY0230	EY0212, EY0213, EY0230	EY0213, EY0230

NOTE: ¥Operation hours indicate approximate hours by continuous use.
¥Only the battery packs shown above should be used with the lantern.

Bulb

¥To replace the bulb, follow the steps shown in Fig. 2.
NOTE: The bulb is hot immediately after turning the lantern off. Wait awhile before replacing the bulb.
¥ Use the specified bulb only (see "Specifications" below).
*To purchase a new bulb, please consult your authorized distributor.

Specifications

Model	EY3790	EY3793
Bulb	Xenon bulb (7.2V, 0.75A)	
Brightness	Approx. 5 000 lx	
Dimensions (D×H×W) (excluding the battery pack)	155×max. 205×143mm (6-7/64"×max. 8-5/64"×5-1/16")	155×max. 203×143mm (6-7/64"×max. 7-63/64"×5-1/16")
Weight (excluding the battery pack)	Approx. 0.4kg (0.88 lb)	Approx. 0.42kg (0.93 lb)