

便携式 DVD 播放器

用户手册
User manual

 
 


PHILIPS



说明书会随时修改，恕不另行通知。商标归荷兰皇家飞利浦电子股份有限公司及其相应所有者所有。
2006 © 荷兰皇家飞利浦电子股份有限公司。版权所有。
飞利浦(中国)投资有限公司
上海天目西路 218 号办公楼 22 楼
邮编 200070
企业标准代号: QJ20412 GBK143-2005
顾客服务热线: 4008 800 008
http://www.philips.com

中国印刷 WK06292

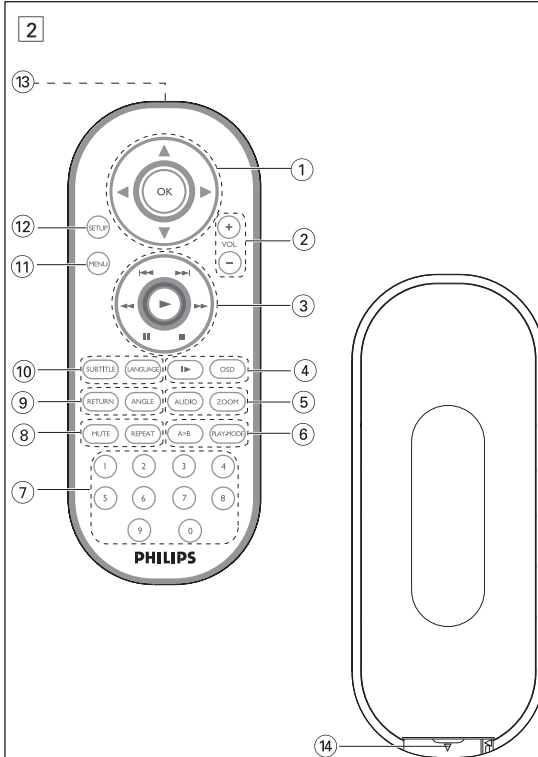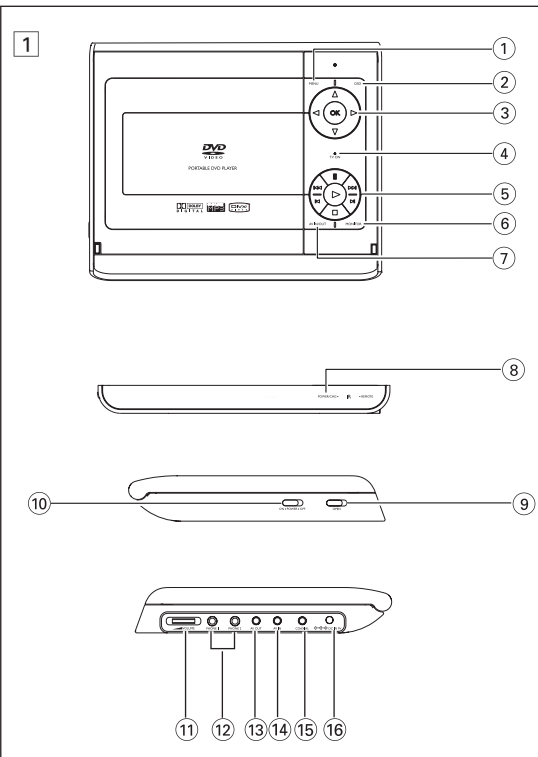

处理废旧产品

您的产品是由可以再生利用的优质材料和组件设计、制造而成的。
如果某一件产品上贴有交叉轮回回收箱标志，则表示该产品受第 2002/96/EC 号《欧洲规章》的保护。
请了解当地有关电气和电子产品收集的专属制度。
请遵守当地的规定，不要将废旧产品与一般家庭废品一起处理。正确处理您的废旧产品，以防止对环境 and 人类健康产生潜在的安全影响。

听觉安全

聆听时音量要适中。
• 耳机音量高会损害您的听力。即使暴露在此音量下的时间不超过一分钟，所产生的声音分贝强度可能会损害正常人的听觉。较高的分贝范围是提供给听力已有所受损的人士。
• 声音有时会给您错觉。听了一段时间后，听觉「舒适度」就会适应更高的音量。因此，听得太久，「正常」的音量实际上已经很大声，并且会损害您的听力。为了预防这个问题，请在听觉适应一定的音量之前，先调低至一个安全的水平，并维持该音量。
设置安全的音量：
• 先将音量设置在一個低水平。
• 然后慢慢提高，一直调校到您听起来舒服清晰、而且完全没有失真的音量为止。
聆听时应节制：
• 长时间暴露在声音环境下，即使是正常「安全」的音量，也会损害听力。
• 请务必适度使用您的设备，并适时暂停休息。
使用耳机时必须遵守以下规范。
• 合理节制聆听的音量及时间。
• 请勿于听觉正在适应音量时调校音量。
• 请勿将音量调得太高，而使自己听不到周围的声音。
• 身处有潜在危险的场所时，请小心或暂停使用耳机。
• 进行驾车、骑单车、玩电单车等活动时，请勿使用耳机，否则可能酿成交通事故，而且这在许多国家都属违法行为。

中文	功能概述
主要单元控制键 (见图 1)	
① MENU (菜单)	显示菜单项
② OSD (屏幕显示)	屏幕显示开关
③ ▲▼◀▶ (上、下、左、右) 上 / 下 / 左 / 右箭头	OK (确认)
④ TV ON (TV 开启)	TV 开启指示器
⑤ II (暂停)	暂停播放
▶ (播放)	开始/再继续播放
■ (停止)	按两次停止播放
◀▶ (上一 / 下一) 上一 (◀) 或下一 (▶) 章、轨道或标题	◀▶ (向后 / 向前) 向后搜索 (◀) 或向前搜索 (▶)
⑥ MONITOR (监视器)	显示选项 ☑ 使用 ▲▶ (左、右) 键调节亮度 ☑ 使用 ▲▶ (左、右) 键调节颜色 ☐ 使用 ▲▶ (左、右) 键调节屏幕为 16:9 或 4:3
⑦ AV IN/OUT	— 音频 / 视频输出 (音频 / 视频输入 / 输出) — 音频 / 视频输入 (AUX)
播放器正面 (见图 1)	
⑧ POWER/CHG (电源 / 充电)	电源和充电指示灯
IR	远程感应器

一般信息
电源 本装置使用提供的交流天适适配器、汽车适配器或可充电电池组。 • 确定交流电适配器的输入电压与当地电压相符。否则，可能损坏交流电适配器和本装置。 • 湿手切勿触摸交流电适配器以防电击。 • 与汽车电源 (点烟器) 适配器连接时，确定适配器输入电压与汽车电源电压一致。 • 长时间不使用本装置时从电源接口拔出交流电适配器或移除电池。 • 握住插头来断开交流电适配器。切勿拔电源卡。 安全和维护 • 激光射线对眼睛有害，切勿拆开本装置。 • 如果液体或杂物进入本装置内部，拔掉交流电适配器切断电源。 • 小心勿摔落本装置或使其遭受强烈震动。这样会导致故障。 • 切勿暴露在过热场所，如加热设备附近或遭受阳光直接照射。 • 本装置不防水：切勿将您的播放器浸入水中。播放器中进水会造成严重损害。 • 切勿使用任何含有酒精、氨水、苯或磨削剂的清洁剂，这些可能损害播放器。 • 设备不能受到液体滴落。切勿放置任何可能导致危险的物体于设备上 (如盛满液体的物体、点燃的蜡烛)。 • 切勿触摸镜头！ 注意： 长时间使用播放器，其表面会发热，这是正常现象。

准备
Digital Audio Out (数字音频输出) ☑ 提示 • 您也可以利用同轴插孔进行数字音频输出。 • 关于连接的更多信息请参阅您的附加设备的用户手册。 • 播放器支持 NTSC/PAL/AUTO 电视机。 一般说明 关于本手册 本手册提供了操作本 DVD 播放器的基本说明。但是一些 DVD 光盘播放时以特殊方式操作或只允许有限的操作。在这些情况下，播放器可能不会响应所有的操作命令。这类情况发生时，请参阅光盘说明。当屏幕上出现 图标时，播放器或光盘不允许该操作。 遥控器操作 • 除非另作说明，所有的操作均可通过遥控器进行。遥控器总是直接对着播放器，确定红外光路上没有障碍物。 • 主要设备上有相应键时，也可以使用这些键。 菜单导航 • 您的播放器有一个直键菜单导航系统引导您的各种设置和操作。 • 使用功能键激活 / 取消相关操作。 • 使用 ▲▼◀▶ (上、下、左、右) 键浏览菜单。 • 按 OK (确认) 键确认您的选择。

一般特徴
慢动作 按 ▶ (慢动作) 键一次或多次可得如下慢放选项： x 1 1/2 x 5° 1/2 x 向后 x 2 1/4 x 6° 1/4 x 向后 x 3 1/8 x 7° 1/8 x 向后 x 4 1/16 x 8° 1/16 x 向后 按 OK (确认) 键或 ▶ (播放) 键恢复正常播放。 * 仅限于 DVD 改变音频输出 重复按 AUDIO (音频) 键可得如下音频选项。 x 1 左声道 x 2 右声道 x 3 混合声道 x 4 立体声 图像缩放 图像缩放功能允许您缩放视频图像以及放大图像恢复到全屏。重复按 ZOOM (缩放) 键来选择如下选项。 Zooming options (缩放选项) Zoom x 1 2X Zoom x 2 3X Zoom x 3 4X Zoom x 4 1/2 Zoom x 5 1/3 Zoom x 6 1/4 Zoom x 7 正常

设置选项
使用 SETUP (设置) 键微调调节您的设置，可以得到最好的播放效果。使用 ▲▼◀▶ (上、下、左、右) 键突出显示您的选择，并按 OK (确认) 键。 按 OK (确认) 键。显示功能列表。 2 使用 ▲▼ (上、下) 键突出显示您的选择。 当光标突出显示这些设置，按 OK (确认) 键进入： 通用设定 选择显示和其他选项 音频设定 选择音频选项 初期设定 选择播放参数 密码设定 选择密码选项 3 按 ◀ (左) 键中止当前的设置或回到前一个菜单。 4 按 SETUP (设置) 键退出。 General Setup (通用设定) 当光标突出显示这些设置，按 OK (确认) 键进入： 电视机类型 选择外接电视的视频标准 显示语言 选择屏幕显示语言 数字音频 选择数字音频选项 隐藏字幕 选择字幕选项 屏幕保护 选择屏幕保护选项 按 ◀ (左) 键中止当前的设置或回到前一个菜单。

功能概述
播放器左侧 (见图 1) ⑨ ▲ OPEN (打开) 打开光盘门来插入或者移除光盘 ⑩ ON, POWER, OFF (开、电源、关) 开关播放器 播放器右侧 (见图 1) ⑪ VOLUME (音量) 音量控制 ⑫ PHONE 1 & 2 耳机插孔 ⑬ AV OUT (音频 / 视频输出) 音频 / 视频输出插孔 ⑭ AV IN (音频 / 视频输入) 音频 / 视频输入插孔 ⑮ COAXIAL (同轴插孔) 数字音频输出插孔 ⑯ DC IN 9V (直流输入 9V) 电源插座 注意 不同于这里的控制键或调整程序可能会导致危险的辐射暴露或其他不安全操作。

一般信息
使用光盘 • 切勿在光盘上粘贴纸条或胶带。 • 光盘避免直接阳光照射或远离热源。 • 播放后存放光盘于光盘盒 (套) 中。 • 使用柔软、不含磨料的乾淨布从里向外清洁光盘。 关于液晶屏幕的使用 液晶屏幕为高科技产品。然而您可能会看见黑点连续地出现在液晶屏幕上。这是制造过程的正常结果，并不表明这是故障。 环境信息 我们已经最大限度地减少包装材料并使其易于分成单一材料：纸、PE (聚苯乙烯)、PE (聚乙烯) 和 PET (聚酯)。如果由专业公司分解。请遵守当地法规来处理包装材料、废旧电池和旧设备。 版权信息 “DivX, DivX” 经过认证，相关标志为 DivXNetworks, Inc. (DivX) 网络有限公司商标，未经许可不得使用。 所有其他品牌和产品名称为其相应公司或组织的商标。 未经授权对任何从互联网下载记录或对 CD / VCD / DVD 的复制是违反版权法规和国际贸易的行为。 Windows Media 和 Windows 标识是 Microsoft 公司在美国 / 或其他国家的商标或注册商标。 任何没有获得许可而对有版权保护的 (包括电脑程序、文件、广播和录音等) 进行的抄录行为可属版权侵犯，并构成刑事责任。本设备不应当被用于以上行为。

基本功能
打开屏幕显示设置 英语是您的播放器的屏幕显示默认语言。您或许会选择使用英语、法语、西班牙语、德语、简体中文或者繁体中文作为您的屏幕显示语言。 国家 屏幕显示语言选项 欧洲 英语、法语、德语 美洲 英语、法语、西班牙语 亚太地区 英语、繁体中文、简体中文 1 滑动 POWER (电源) 到 ON (开) 位置打开播放器。 2 按 SET UP (设置) 键可进入设置菜单。 3 选择 GENERAL SETUP (一般设置) 并按 OK (确认) 键。 4 滚动选择 OSD LANG (屏幕显示语言) 并按 ▶ (播放) 键从 OSD 语言选项中选择。 5 选择您首选的语言然后按 OK (确认) 键。 装载光盘和打开开关 1 按 OPEN (打开) 键打开光盘门。 2 标签一面面向上插入您选择的光盘 (双面 DVD 光盘插入时也如此)。确定光盘在正确的凹座 适当地放置。 3 轻触上门。 4 滑动 POWER (电源) 开关到 ON (开) 位置打开播放器。 ☑ 提示 播放过程中会有正常的机械噪音。

一般特徴
MUTE (静音) 按 MUTE (静音) 键一次使播放器静音。 再按 MUTE (静音) 键一次取消静音。 REPEAT (重复) 重复按 REPEAT (重复) 键可得如下重复选项： x 1 重复章节 重复音轨 x 2 全部重复 全部重复 x 3 全部重复 全部重复 x 4 取消重复 REPEAT (重复) A > B 重复或循环标题中的一个次序： • 在您选择的开始点按 A > B 键： ☐ A 出现在屏幕上。 • 在您选择的结束点再次按 A > B 键 ☐ AB 出现在屏幕上，重复序列开始。 • 退出该序列按 A > B 键。

设置操作
Audio Setup (音频设定) 当光标突出显示这些设置，按 OK (确认) 键进入： 扬声器设定 选择扬声器选项 杜比数码设定 选择杜比声选项 均衡器设定 选择均衡器选项 环绕声处理 选择环绕声选项 按 ◀ (左) 键中止当前的设置或回到前一个菜单。 Preferences (初期设定) 当光标突出显示这些设置，按 OK (确认) 键进入： 声音 选择音频语言选项 字幕 选择字幕语言选项 碟片选单语言 选择光盘菜单语言选项 年龄控制 选择父母选项 DivX® 注册码 VOD 获得 DivX® ID 智能节能 使用电池播放时激活省电模式 出厂设定值 恢复出厂设定 按 ◀ (左) 键中止当前的设置或回到前一个菜单。 密码设定 当光标突出显示这些设置，按 OK (确认) 键进入： 密码开关 打开 / 关闭密码 密码改变 改变现有密码 (默认：99999) 按 ◀ (左) 键中止当前的设置或回到前一个菜单。

遥控器
遥控键 (见图 2) ① ▲▼◀▶ (上、下、左、右) 上 / 下 / 左 / 右箭头 OK (确认) 确认选择 ② VOL+/- (音量增大 / 减小) 音量控制 ③ ◀▶ (上一 / 下一) 上一 (◀) 或下一 (▶) 章、轨道或标题 II (暂停) 暂停播放 ▶ (播放) 开始 / 恢复播放 ■ (停止) 按两次停止播放 ◀▶ (向后 / 向前) 向后搜索 (◀) 或向前搜索 (▶) ④ OSD (屏幕显示) 屏幕显示开 / 关 ▶ (慢动作) 慢动作 ⑤ AUDIO (音频) 音频语言选择 ZOOM (缩放) 放大视频图像 ⑥ A > B 重复或循环标题中的一个次序 PLAY-MODE (播放-模式) 选择播放顺序选项 ⑦ 0 - 9 数字键盘 ⑧ MUTE (静音) 播放静音 REPEAT (重复) 重复章 / 标题 / 光盘 ⑨ RETURN (返回) 适用于 VCD 菜单页 ANGLE (角度) 选择 DVD 镜头角度 ⑩ SUBTITLE (字幕) 字幕语言选择 LANGUAGE (语言) 语言选择 ⑪ MENU (菜单) 显示 MENU (菜单) 页面 ⑫ SETUP (设置) 进入 SETUP (设置) 菜单 ⑬ Infra Red port (红外端口) ⑭ BATTERY COMPARTMENT (电池盒)

准备
电源 使用交流 / 直流适配器 适配器连接本设备和主电源 (如图所示)。 ☑ 提示 避免损坏播放器，在插入或拔出交流电适配器前先关播放器。 使用汽车适配器 提供的汽车适配器连接本设备和汽车点烟器接口。 ☑ 提示 • 避免损坏播放器，在插入或拔出汽车适配器前先关播放器。 • 与汽车电源 (点烟器) 适配器连接时，确定适配器输入电压与汽车电源电压一致。 给您的遥控器提供能量 1 打开电池盒。移除保护塑料片 (仅第一次使用时)。 2 插入 1 枚 3V 锂电池，型号 CR2025，然后关上电池盒。 注意 • 电池包含化学物质，请妥善处置。 • 电池的不当使用会导致电解液泄漏并腐蚀电池盒或者导致电池爆炸。 • 长时间不使用时请取出电池。

基本功能
播放 DVD 光盘 开机之后，插入光盘关闭光盘门，播放自动开始。屏幕显示加载的光盘的类型。光盘可能会要求您从菜单选择一个条目。使用 ▲▼◀▶ (上、下、左、右) 键突出显示您的选择，并按 OK (确认) 键。 注意： 因为 DVD 电影在世界的不同地方不同时间发布是很正常的，所有的播放器都有地区代码以及光盘可有一个可选的地区代码。如果您加载一个与您播放地区代码不同的光盘，您在屏幕上会看见地区代码提示。光盘不会播放，必须取消加载。 播放音频或视频 CD 光盘 • 开机以后，插入光盘，屏幕显示加载的光盘类型和光盘内容信息。按 ▶ 键开始播放。 • 当播放带有 MTV/Karaoke (卡拉 OK) 的 VCD 时，按数字键 (0-9) 选择轨道，按 ▶ (播放) 键或 OK (确认) 键播放该轨道。按 RETURN (返回) 键回到选择菜单。 播放 DivX® disc • 飞利浦提供允许您使用 DivX® VOD 服务购买或租赁视频的 DivX® VOD (Video on Demand) 注册代码。更多信息请访问 www.divx.com/vod • 在 SETUP (设置) 菜单选择 DivX® VOD。 • 注册代码会出现。 • 在 www.divx.com/vod 上使用注册代码从 DivX® VOD 服务购买或者租赁视频。遵从说明，下载视频到只读光盘，用于在这个播放器上播放。 ☑ 提示 所有从 DivX® VOD 下载的视频只能在这 DVD 播放器上播放。

一般特徴
Play modes (播放模式) 重复按 PLAY-MODE (播放-模式) 键可得如下播放次序选项： x 1 乱序 x 2 随机 x 3 编程 使用 (0-9) 和 OK (确认) 键输入具体设置。 Volume control (音量控制) • 按遥控器上的 +/- (增大 / 减小) 键增大或减小音量，或者 • 使用本设备右侧的旋转开关。 Monitor (监视器) (在主设备上) 重复按 MONITOR (监视器) 键并使用 ◀ (左) 和 ▶ (右) 键调节亮度、颜色以及显示模式 (正常或全屏)。

疑难解答
如果 DVD 视频播放器有故障，请先参照这张检查表。这可能是曾被忽视的东西。 警告 在任何情形下您都不得尝试自己修理本装置，因为这样会使保修失效。如果发生故障，在送去维修之前，请先检查所列的要点。如果您不能通过下列的提示解决问题，那么向您的经销商或服务中心请教。 症状 没有电源 修理 – 检查电源线绕的两个插头是否适当地连接。 – 插入另外一个设备检查交流电外接口是否有电。 – 检查电池组是否正确插入。 画面失真 修理 – 检查汽车适配器时候正确连接。 – 检查光盘上是否有指纹并用软布从中心到边缘擦拭清洁光盘。 – 有时少量图像失真可能发生。这不是故障。 完全失真的图像 / 电视屏幕完全没有颜色 修理 – NTSC/PAL 设置可能处于错误状态。使您的电视设置与您的播放器设置匹配。 没有声音 修理 – 检查音频连接。如果使用 HiFi 扩音器，尝试另一个声道。

介绍
您的便携式 DVD 播放器 您的便携式 DVD 播放器播放符合通用 DVD 视频标准的数字视频光盘。拥有它，您可以享受完全长度的真实影院画面质量、立体声或多声道 (取决于光盘和您的播放设置) 的电影。 视频的独特特征，如选择声道和选择字幕语言、选择不同镜头角度 (也取决于光盘)，都包括在内。 此外，父母锁让您决定的孩子可以看哪些光盘。有了屏幕显示和播放器的显示屏与遥控器的结合，您会发现您的播放器使用起来非常方便。 后封包装 首先检查和识别您的包裹的目录，如下所列： • 便携式 DVD 播放器 • 汽车适配器 (12V) • 可充电电池组 • 保修单 • 旅行包 • 遥控器 • 交流电适配器 • 用户手册 • 音频 / 视频电缆 放置 • 播放器应放置在稳固、平坦的表面。 • 避免家用加热设备及避免直接阳光照射。 • 如果播放器不能正确读 CD/DVD，在送去维修之前尝试使用一般可使用的清洁 CD/DVD 清洁镜头。其他清洁方法可能会损坏镜头。 • 一直保持光盘门关闭避免灰尘进入。 • 镜头在播放器突然由冷的环境带到温暖环境的时候会凝结成水珠。在这种情况下，不能播放 CD/DVD。将播放器放置在温暖环境中直到水珠蒸发。 介绍 除了 DVD 视频光盘，您也可以播放所有的 VCD 和音频 CD (包括 CDR, CDRW, DVD ± R 和 DVR ± RW)。 DVD 视频 取决于光盘上的内容 (电影、视频片断、系列剧等等)，这些光盘或许有一个或多个的标题，每个标题可能有一个章节或更多章。为使访问方便简单，您的播放器允许您在标题间以及章节间移动。 Video CD (VCD 视频光盘) 取决于光盘上的内容 (电影、视频片断、系列剧等等)，这些光盘或许有一个或多个的标题，每个标题可能有一个索引或更多索引 (如光盘盒所示)。为使访问方便简单，您的播放器允许您在标题间以及索引间移动。 音频光盘 / MP3 / WMA 光盘 音频光盘 / MP3 / WMA 光盘只包含音乐轨道。您可以使用遥控器 (或主设备上的) 通过立体声系统以一致的方式播放它们，或者使用屏幕显示通过电视机播放。 附有 JPEG 文件的光盘 您也可以在此播放器上观看 JPEG 静止照片。 DivX 视频光盘 DivX 是由 DivX 公司开发的受欢迎媒体技术。DivX 媒体文件含有高度压缩、高质量的视频，但保持了较小的文件大小。DivX 文件还可以包含高级媒体功能，例如菜单、字幕和交替音轨。许多 DivX 媒体文件都可以在线下载，您也可以使用您的个人内容和来自 DivX.com 的易用工具创建您自己的媒体文件。 Zero Bright Dot (零亮点) LCD 显示器上的图像 (LCD 显示屏上没有烦人的空白点)。LCD 显示器通常有缺陷，被 LCD 行业称为 'bright dots' (亮点)。有数量不多的亮点曾被误认为是 LCD 大规模生产不可避免的副作用。在你的便携式 DVD 播放器里使用了飞利浦产的高质量制程程序，我们的 LCD 显示屏生产时亮点的允许为零。选择带有 Philips Zero Bright Dot™ (飞利浦零亮点) 保护的便携式 DVD 播放器能保证理想的屏幕质量。 保修服务因地区而异。如需更多详细信息，请联系您当地的飞利浦代表。

准备
装配和更换电池组 1 关闭本设备。如图所示装配电池组。 2 连接电源适配器到主电源卡本装置 (如图所示)。充电直到红色指示灯熄灭 (关机后开始充电大约 4.5-6.5 小时)。 ☑ 提示 • 充电过程中电池组发热是正常的。 • 使用电池电源时 图标显示在屏幕上。 卸下电池组 1 关闭本装置。 2 拔掉交流电适配器。 3 倒转播放器。 4 按下电池组锁开关。(如图所示)。 5 如图所示 图标弹出电池组。 * 可充电电池充电循环次数有一定的数量限制。请避免将电池组完全放电和充电循环次数因使用方式和设置而不同。

基本功能
播放 WMA / MP3 光盘 下面的特徵可用于 WMA/MP3 光盘。更多信息请参阅相应部分。 音量控制、轨道跳转、搜索、重复、随机、等等。 使用 ▲▼◀▶ (上、下、左、右) 键突出显示您选择的音乐文件，按 OK (确认) 键播放。 ☑ 提示 您不能播放有复制保护的 WMA 文件。 播放 JPEG 光盘 使用 ▲▼◀▶ (上、下、左、右) 键突出显示您选择的图片文件。按 OK (确认) 键。然后播放器会自动进入幻灯片显示模式。 使用整个显示器屏幕一张张地显示位于所选当前文件夹 的其他 JPEG 文件。 • 使用 ▲▶ (左、右) 键旋转图像。 • 使用 ▲ (上) 键上下翻图像。 • 使用 ▼ (下) 键左右翻图像。 • 放映幻灯片时，按 MENU (菜单) 键返回到文件夹屏幕。 • 按 ■ (停止) 键进行批量播放。 • 使用 ▲▼◀▶ (上、下、左、右) 键突出显示预览图像并获取屏幕功能。 注意： 除非另作说明，所有描述的操作都基于遥控器操作。

特别的 DVD 特徵
查看 DVD 视频光盘内容：Menus (菜单)。 光盘上可能包括标题或章的选择菜单。DVD 菜单特征允许您从这些菜单中选择，按相应的数字键，或使用 ▲▼◀▶ (上、下、左、右) 键突出显示您的选择并按 OK (确认) 键。 光盘菜单 按 MENU (菜单) 键。菜单会列出，例如，镜头角度、对白语言和字幕选项，以及标题的章节。 镜头角度 如果光盘包含从不同镜头角度记录的序列，角度图标出现，显示可用的角度数目以及正在显示的角度。然后如果您愿意您可以改变镜头角度。 重复按 ANGLE (角度) 键直到得到您想要的观看角度。 重复按 ANGLE (角度) 键直到没有与角度相关的信息显示在屏幕上时，恢复到正常观看角度。 改变语言 按 LANGUAGE (语言) 键。如果当前光盘有不同语言选项，就会显示在屏幕上。 重复按 LANGUAGE (语言) 键直到得到您期望的语言选项。 字幕 按 SUBTITLES (字幕) 键。如果当前光盘有不同字幕选项，就会显示在屏幕上。 重复按 SUBTITLES (字幕) 键直到获得您期望的字幕选项。

疑难解答
症状 无法播放光盘 修理 – 确保光盘标签朝上。 – 清洁光盘。 – 尝试另外一张盘，检查光盘是否损坏。 播放器不响应遥控器 修理 – 用遥控器直接瞄准在播放器前的感应器，消除所有对光路的干扰。检查或更换电池。 DVD 图像失真或黑白图像 修理 – 只使用依照电视机使用而格式化的光盘 (PAL/NTSC)。 数字输出无音频 修理 – 检查数字连接。 – 检查 SETUP (设置) 菜单确定数字连接设置为 ON (开)。 播放时播放器不响应所有的操作命令 修理 – 光盘不允许这些操作。 – 参见光盘的说明。 播放器发热 修理 – 播放器长时间使用，表面会发热。这是正常的。 按下 AC 插头后，显示器变暗 修理 – 装置正在省电，以确保电池达到更长的播放时间这是正常现象。可以使用 MONITOR (显示器) 功能调节亮度。

本装置符合欧盟的无线电子技术要求。

 
 
介绍
可播放光盘格式 除了 DVD 视频光盘，您也可以播放所有的 VCD 和音频 CD (包括 CDR, CDRW, DVD ± R 和 DVR ± RW)。 DVD 视频 取决于光盘上的内容 (电影、视频片断、系列剧等等)，这些光盘或许有一个或多个的标题，每个标题可能有一个章节或更多章。为使访问方便简单，您的播放器允许您在标题间以及章节间移动。 Video CD (VCD 视频光盘) 取决于光盘上的内容 (电影、视频片断、系列剧等等)，这些光盘或许有一个或多个的标题，每个标题可能有一个索引或更多索引 (如光盘盒所示)。为使访问方便简单，您的播放器允许您在标题间以及索引间移动。 音频光盘 / MP3 / WMA 光盘 音频光盘 / MP3 / WMA 光盘只包含音乐轨道。您可以使用遥控器 (或主设备上的) 通过立体声系统以一致的方式播放它们，或者使用屏幕显示通过电视机播放。 附有 JPEG 文件的光盘 您也可以在此播放器上观看 JPEG 静止照片。 DivX 视频光盘 DivX 是由 DivX 公司开发的受欢迎媒体技术。DivX 媒体文件含有高度压缩、高质量的视频，但保持了较小的文件大小。DivX 文件还可以包含高级媒体功能，例如菜单、字幕和交替音轨。许多 DivX 媒体文件都可以在线下载，您也可以使用您的个人内容和来自 DivX.com 的易用工具创建您自己的媒体文件。 Zero Bright Dot (零亮点) LCD 显示器上的图像 (LCD 显示屏上没有烦人的空白点)。LCD 显示器通常有缺陷，被 LCD 行业称为 'bright dots' (亮点)。有数量不多的亮点曾被误认为是 LCD 大规模生产不可避免的副作用。在你的便携式 DVD 播放器里使用了飞利浦产的高质量制程程序，我们的 LCD 显示屏生产时亮点的允许为零。选择带有 Philips Zero Bright Dot™ (飞利浦零亮点) 保护的便携式 DVD 播放器能保证理想的屏幕质量。 保修服务因地区而异。如需更多详细信息，请联系您当地的飞利浦代表。

准备
连接 连接耳机 连接您的耳机到您的设备的 PHONE 1 插孔或 PHONE 2 插孔。 连接附加设备 • 在连接任何附加装备前先关掉您的设备。 • 您可以连接播放器到电视机或扩音器来享受 DVD 或卡拉 OK。 AV OUT (音频视频输出) 在 DVD 播放器面板上按 AV IN/OUT 键选择 A/V OUT (音频视频输出)。 AV IN (音频视频输入) 在 DVD 播放器面板上按 AV IN/OUT 键选择 A/V IN (AUX) (AUX 音频 / 视频输入)。 连接 Video (视频) 黄 Audio (Left) (音频, 左) 白 Audio (right) (音频, 右) 红

一般特徴
转移到另一个标题 / 轨道 / 章 当光盘有不止一个标题或轨道时，您可转换到另一个标题、轨道 / 章如下： • 播放时短按 ▶ (下一) 键来选择下一题目 / 轨道 / 章。 • 播放时短按 ◀ (上一) 键会退到上一题目 / 轨道 / 章。 • 16 倍速转换到任意一个题目、轨道或章，使用数字键 (0-9) 输入相应的数字。 静止图像和步进帧 按 II (暂停) 键一次或多次可得如下静止图像或步进帧选项： II x 1 暂停 / 静止图像 II x 2 屏幕显示 II 出现 II (慢动作) 图标后，重复按 II (暂停) 键来一帧一帧播放。按 OK (确认) 键恢复正常播放。 搜索 重复按 ▶ (向前) 键可得如下向前搜索选项：重复按 ◀ (向后) 键可得如下向后搜索选项： 2 X 回放 2 X 前进 4 X 回放 4 X 前进 8 X 回放 8 X 前进 16 X 回放 16 X 前进 32 X 回放 32 X 前进 正常速度 正常速度 按 OK (确认) 或 ▶ (播放) 键恢复正常播放。

屏幕显示操作
除了使用遥控器的键，您也可以使用屏幕显示改变光盘播放选项。 1 播放时按 OSD (屏幕显示) 键。显示特制列表。 2 使用 ▲▼ (上、下) 键突出显示您的选择。 当光标突出显示这些设置，按 OK (确认) 键来： 文件 键入期望文件编号 标题 键入期望标题编号 章节 键入期望章节编号 声音 选择音频选项 字幕 选择字幕选项 角度 选择镜头角度选项 文件时间 键入文件播放时间开始点 标题时间 键入标题播放时间开始点 章节时间 键入章节播放时间开始点 重复播放 选择重复选项 时间显示 选择时间显示选项 3 使用 (0-9) 键入特殊的设置。 4 按 ◀ (左) 键中止当前的设置或回到前一个菜单。 5 按 OSD (屏幕显示) 键退出。

技术数据
尺寸 19.4 x 17.1 x 3.2 cm 7.6 x 6.7 x 1.3 英寸 重量 0.86 kg / 1.89 lb 电源 DC 9V 1.8A 功率 30W 工作温度范围 0 - 50°C (32 - 122°F) 激光波长 650nm 视频系统 NTSC / PAL / AUTO 频率特性 20Hz - 20KHz ± 1dB 信噪比 ≥ 85dB 音频失真 + 噪音 ≤ -80dB (1KHz) 声道间隔 ≥ 85dB 动力范围 ≥ 80dB 输出 音频输出 (模拟音频) 输出水平: 2V ± 10% 10KΩ 负载阻抗 输出水平: 1Vp-p ± 20% 75Ω 飞利浦保留为改进产品而改变其设计和规格的权利，恕不事先通知。 用户如未经制造商授权擅自修改产品，可能会使其操作本设备的权利失效。 保留所有权利。

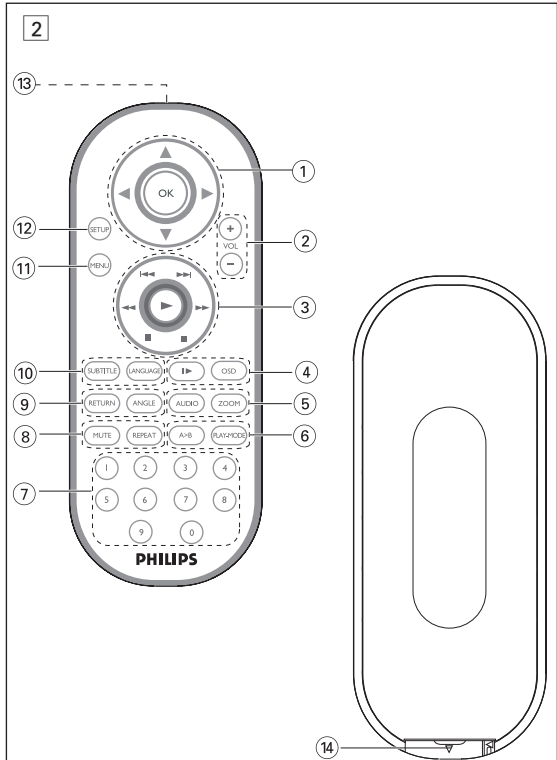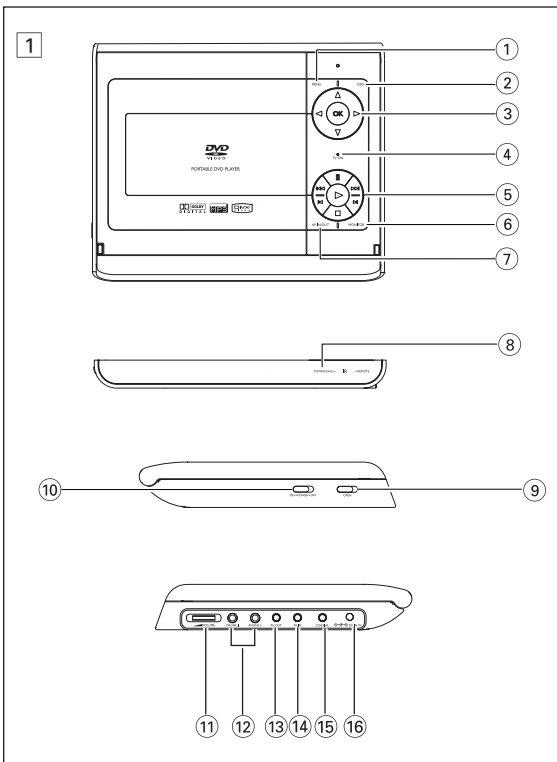

PREPARATIONS

Connections

Connecting headphones
Connect the headphones into the **PHONE 1** or the **PHONE 2** jack of your set.

Connecting additional equipment

- Turn off your set before connecting to any additional equipment.
- You can connect the player to a TV or an amplifier to enjoy DVDs or karaoke.

AV OUT
On the DVD player panel, press **AV IN/OUT** to select A/V OUT.

AV IN
On the DVD player panel, press **AV IN/OUT** to select A/V IN (AUX).

Connection	Video	Audio (Left)	Audio (right)
Color	Yellow	White	Red

GENERAL FEATURES

Moving to another title / track / chapter
When a disc has more than one title or track, you can move to another title/track/chapter as follows:

- Press **▶▶** briefly during play to select the next title / track / chapter.
- Press **◀◀** briefly during play to step back to the previous title/track/chapter.
- To go directly to any title, track or chapter, enter the corresponding number using the numerical keys (0-9).

Still picture and step frame
Press **II** once or more for the following still picture and step frame options:
II x 1 Pause / Still picture
II x 2 screen shows **II**
After the icon **II** is displayed, press **II** repeatedly to play frame by frame.
Press **OK** to resume normal playback.

Search
Press **▶** repeatedly for the following forward search options:
Press **◀** repeatedly for the following backward search options:
2 X backwards **2 X** forward
4 X backwards **4 X** forward
8 X backwards **8 X** forward
16 X backwards **16 X** forward
32 X backwards **32 X** forward
normal speed normal speed
Press **OK** or **▶** to resume normal playback.

DISPOSAL OF YOUR OLD PRODUCT

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.
When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
Please inform yourself about the local separate collection system for electrical and electronic products.
Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Hearing Safety
Listen at a moderate volume:

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So after prolonged listening, what sounds "normal" can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.
- To establish a safe volume level:
 - Set your volume control at a low setting.
 - Slowly increase the sound until you can hear it comfortably and clearly, without distortion.
 - Listen for reasonable periods of time:
 - Prolonged exposure to sound, even at normally "safe" levels, can also cause hearing loss.
 - Be sure to use your equipment reasonably and take appropriate breaks.
 - Be sure to observe the following guidelines when using your headphones:
 - Listen at reasonable volumes for reasonable periods of time.
 - Be careful not to adjust the volume as your hearing adapts.
 - Do not turn up the volume so high that you can't hear what's around you.
 - You should use caution or temporarily discontinue use in potentially hazardous situations.
 - Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc., it may create a traffic hazard and is illegal in many areas.

English	FUNCTIONAL OVERVIEW
Main unit controls (see figure 1)	
1 MENU	Display MENU page
2 OSD	On Screen Display on / off
3 ▲ ▼ ◀ ▶	Up / down / left / right cursor
4 OK	Confirm selection
5 TV ON	TV on indicator
6 II	Pause playback
7 ▶	Start / resume playback
8 ◀ ▶	Press twice to stop playback
9 ◀ ▶	For previous (◀◀) or next (▶▶) chapters, tracks or titles
10 ◀ ▶	Search backward (◀◀) or search forward (▶▶)
11 MONITOR	Selection display
12 ◀ ▶	To adjust the brightness with ◀ ▶
13 ◀ ▶	To adjust the color with ◀ ▶
14 ◀ ▶	To adjust the screen of 16:9 or 4:3 with ◀ ▶
15 AV IN/OUT	A/V OUT
16 AV IN (AUX)	A/V IN (AUX)
Front of player (see figure 1)	
17 POWER/CHG	Power and charging indicator
18 IR	Remote sensor

INTRODUCTION

Playable disc formats

About DivX
DivX is a popular media technology created by DivX, Inc. DivX media files contain highly compressed video with high visual quality that maintains a relatively small file size. DivX files can also include advanced media features like menus, subtitles, and alternate audio tracks. Many DivX media files are available for download online, and you can create your own using your personal content and easy-to-use tools from DivX.com.
Zero Bright Dot™
Enjoy highest-quality images that are free from annoying black spots on the LCD screen. LCD displays commonly have imperfections, termed as "bright dots" by the LCD industry. A limited number of bright dots were once considered an inevitable side effect of LCD mass production. With Philips' strict quality control procedures used in our Portable DVD Players, our LCD displays are produced with zero tolerance for bright dots. Select Portable DVD Players come with Philips Zero Bright Dot™ Policy to guarantee optimal screen quality.
Warranty service varies from region to region. Contact your local Philips representative for more detailed information.

The making of unauthorized copies of copy-protected material, including computer programmes, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

PREPARATIONS

Digital Audio Out

TIP

- You can also make use of the COAXIAL jack for digital audio output.
- Please refer to the user manuals of your additional equipment for more information about connection.
- Players support NTSC/PAL/AUTO television sets.



GENERAL FEATURES

Slow motion
Press **▶** once or more for the following slow play options:
x1 1/2 **x5*** 1/2 x backward
x2 1/4 **x6*** 1/4 x backward
x3 1/8 **x7*** 1/8 x backward
x4 1/16 **x8*** 1/16 x backward
Press **OK** or **▶** to resume normal playback.
*for DVDs only

Changing the audio output
Press **AUDIO** repeatedly for the following audio options.
x1 Mono left **x2** Mono right
x3 Mixed mono **x4** Stereo

Zoom
The Zoom function allows you to enlarge the video image and to pan through the enlarged image. Press **REPEAT** repeatedly to select the following zooming options:
Zoom x1 2X **Zoom x2** 3X
Zoom x3 4X **Zoom x4** 1/2
Zoom x5 1/3 **Zoom x6** 1/4
Zoom x7 normal

SETUP OPERATIONS

To maximize your playback experience, use **SETUP** to fine tune your settings. Use the **▲ ▼ ◀ ▶** keys to highlight your selection, and press **OK**.

1 Press **SETUP**. A list of features is shown.
2 Use the **▲ ▼** keys to highlight your selection.
When the cursor highlights these settings, press **OK** to:
GENERAL SETUP select display and other options
AUDIO SETUP select audio options
PREFERENCES select playback preferences
PASSWORD SETUP select password options

General Setup
When the cursor highlights these settings, press **OK** to:
TV DISPLAY select display ratio
TV TYPE select video standard of external TV set
OSD LANG select on screen display language
SPDIF select digital audio options
CAPTIONS select captions options
SCREEN SAVER select screen saver options

Press **◀** to abort current setting or go back to previous menu level

FUNCTIONAL OVERVIEW

Left of player (see figure 1)

- 9 ▲ OPENOpen disc door to insert or remove disc
- 10 ON . POWER . OFFSwitch the player on / off

Right of player (see figure 1)

- 11 ◀ VOLUMEVolume control.
- 12 PHONE 1 & 2Headphones jack
- 13 AV OUTAudio/Video output jack
- 14 AV INAudio/Video input jack
- 15 COAXIALDigital audio output jack
- 16 DC IN 9VPower supply socket

CAUTION

Use of controls and/or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

GENERAL INFORMATION

Power Sources

This unit operates on a supplied AC adaptor, car adaptor, or a rechargeable battery pack.

- Make sure that the input voltage of the AC adaptor is in line with the local voltage. Otherwise, the AC adaptor and unit may be damaged.
- Take care not to drop the unit or subject it to strong shocks, which may cause malfunction.
- When connecting with car power (cigarette lighter) adaptor, be sure the input voltage of the adaptor is identical with car voltage.
- Do not touch the AC adaptor with wet hands to prevent electric shock.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the player.
- Do not expose to excessive heat caused by heating equipment or direct sunlight.
- This product is not waterproof: do not allow your player to be submerged in water. Water entering the player may cause major damage.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the player.
- Do not touch the lens!

Note: When the player is in use for a long period of time, the surface will be heated. This is normal.

Copyright information
The making of unauthorized copies of copy-protected material, including computer programmes, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

GENERAL EXPLANATION

About this manual
This manual gives the basic instructions for operating this DVD player. Some DVD discs however are produced in a way that requires specific operation or allows only limited operation during playback. In these cases the player may not respond to all operating commands. When this occurs, please refer to the instructions in the disc's menu. When a **⓪** appears on the screen, the operation is not permitted by the player or the disc.

Remote control operation

- Unless otherwise stated, all operations can be carried out with the remote control. Always point the remote control directly at the player, making sure there are no obstructions in the path of the infrared beam.
- When there are corresponding keys on the main unit, they can also be used.

Menu navigation

- Your player has an intuitive menu navigation system to guide you through various settings and operations.
- Use the function keys to activate / disable relevant operations.
- Use **▲ ▼ ◀ ▶** to browse through menus.
- Press **OK** key to confirm your selection.

GENERAL FEATURES

MUTE
Press **MUTE** once to mute player volume.
Press **MUTE** again to disable.

REPEAT
Press **REPEAT** repeatedly for the following repeat options:
Repeat A VCD actions
x1 repeats chapter **repeats track**
x2 repeats title **repeats all**
x3 repeats all **repeats repeat**
x4 cancels repeat

Repeat A > B
To repeat or loop a sequence in a title:

- Press **A > B** at your chosen starting point;
- A** appears on the screen.
- Press **A > B** again at your chosen end point;
- AB** appears on the display, and the repeat sequence begins.
- To exit the sequence, press **A > B**.

SETUP OPERATIONS

Audio Setup
When the cursor highlights these settings, press **OK** to:
SPEAKER SETUP select speaker options
DOLBY DIGITAL SETUP select Dolby sound options
CHANNEL EQUALIZER select equalizer options
3D PROCESSING select surround sound options
Press **◀** to abort current setting or go back to previous menu level
Preferences
When the cursor highlights these settings, press **OK** to:
AUDIO select audio language options
SUBTITLE select subtitle language options
DISC MENU select disc menu language options
PARENTAL select parental options
DivX® VOD get DivX ID for VOD
POWER SAVING activate power saving mode when using battery playback
DEFAULT Restore factory settings
Press **◀** to abort current setting or go back to previous menu level
Note: Parental options are only selectable when password mode is deactivated.
Password Setup
When the cursor highlights these settings, press **OK** to:
PW MODE switch password on / off
PASSWORD change existing password (default: 99999)
Press **◀** to abort current setting or go back to previous menu level

REMOTE CONTROL	
Remote controls (see figure 2)	
1 ▲ ▼ ◀ ▶	Up / down / left / right cursor
OK	Confirms selection
2 VOL+ / -	Volume control
3 ◀◀ ▶▶	For previous (◀◀) or next (▶▶) chapters, tracks or titles
II	Pauses playback
▶	Starts / resumes playback
■	Press twice to stop playback
◀◀ / ▶▶	Search backward (◀◀) or search forward (▶▶)
4 OSD	On Screen Display on / off
▶	Slow motion
AUDIO	Audio language selector
ZOOM	Enlarges video image
A ▶ B	To repeat or loop a sequence in a title
PLAY-MODE	Selects play order options
7 0 - 9	Numeric keypad
MUTE	Muting player volume
REPEAT	Repeats chapter / title / disc
9 RETURN	For VCD menu page
ANGLE	Selects DVD camera angle
10 SUBTITLE LANGUAGE	Subtitle language selector Language selector
11 MENU	Displays MENU page
12 SETUP	Enters SETUP menu
13 Infra Red port	
BATTERY COMPARTMENT	

GENERAL INFORMATION

Handling discs

- Do not attach paper or tape to the disc.
- Keep the disc away from direct sunlight or heat sources.
- Store the disc in a disc case after playback.
- To clean, wipe the disc outwards from the center with a soft, lint-free clean cloth.

On handling the LCD screen

The LCD is manufactured using high precision technology. You may, however, see tiny black points that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

Environmental information

We have reduced the packaging to its minimum and made it easy to separate into many materials: cardboard, PS, PE and PET. Your set consists of material which can be recycled if disassembled by a specialized company. Please observe the local regulations to dispose of packaging, exhausted batteries and old equipment.

Copyright information

"DivX, DivX", Certified, and associated logos are trademarks of DivX, Inc. and are used under license.
All other brand and product names are trademarks of their respective companies or organizations.
Unauthorized duplication of any recordings downloaded from the internet or made from CDs / VCDs / DVDs is a violation of copyright laws and international treaties.
Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

BASIC FUNCTIONS

Switching on for OSD language setup

English is the default language of your player's on screen display. You may choose to use English, French, Spanish, German, Simplified Chinese or Traditional Chinese for your player's on screen display.

Countries	OSD Language Options
European	English, French, German
American	English, French, Spanish
Asia Pacific	English, Traditional Chinese, Simplified Chinese

1 Slide the **POWER** switch to **ON** to switch on the player.
2 Press **SET UP** for the set up menu.
3 Select **GENERAL SETUP** and press **OK**.
4 Scroll and select **OSD LANG** and press **▶** to select from OSD language options.
5 Select your preferred language and press **OK**.

Loading discs and switching on

1 Press **OPEN** to open the disc door.
2 Insert your chosen disc, label side up (also when a double sided DVD disc is inserted). Make sure it is sitting properly in the correct recess.
3 Gently push to close the door.
4 Slide the **POWER** switch to **ON** to switch on the player.

TIP
A normal mechanical noise is heard during playback.

GENERAL FEATURES

Play modes
Press **PLAY-MODE** repeatedly for the following play order options:
x1 Shuffle **x2** Random
x3 Program
Use **(0-9)** and **OK** to key in specific settings.

Volume Control

- Press **+** / **-** to increase or decrease playback volume in the Remote Control or
- Use the rotary switch on the right side of the unit.

Monitor (on the main unit)
Press **MONITOR** repeatedly and use **◀ ▶** to adjust brightness, color and display mode (normal or full screen).

TROUBLESHOOTING

If it appears that the DVD-Video player is faulty, first consult this checklist. It may be that something has been overlooked.

WARNING
Under no circumstances should you try to repair the set yourself as this will invalidate the guarantee.
If a fault occurs, first check the points listed, before taking the set for repair. If you are unable to solve a problem by following these hints, consult your dealer or service centre.

Symptom	Remedy
No power	– Check if both plugs of the mains cord are properly connected. – Check if there is power at the AC outlet by plugging in another appliance. – Check if battery pack is inserted appropriately. – Check if car adaptor is connected appropriately.
Distorted picture	– Check the disc for fingerprints and clean with a soft cloth, wiping from centre to edge. – Sometimes a small amount of picture distortion may appear. This is not a malfunction.
Completely distorted picture / no colour in the TV screen	– The NTSC/PAL setting may be in the wrong status. Match your TV's setting with the player's setting.
No sound	– Check audio connections. If using a HiFi amplifier, try another sound source.

INTRODUCTION

Your portable DVD player

Your portable DVD player plays digital video discs conforming to the universal DVD Video standard. With it, you will be able to enjoy full-length movies with true cinema picture quality, and stereo or multichannel sound (depending on the disc and on your playback set-up).

The unique features of DVD-Video, such as selection of soundtrack and subtitle languages, and of different camera angles (again depending on the disc), are all included.

What's more, parental lock lets you decide which discs your children will be able to see. You will find your player remarkably easy to use with the On-Screen Display and player display in combination with the remote control.

Unpacking

First check and identify the contents of your package, as listed below:

• Portable DVD player	• Remote Control
• Car adaptor (12V)	• AC power adaptor
• Rechargeable battery pack	• User Manual
• Warranty	• Audio / Video cable
• Travel bag	

Placement

- Place the player on a firm, flat surface.
- Keep away from domestic heating equipment and direct sunlight.
- If the player cannot read CDs/DVDs correctly, try using a commonly available cleaning CD/DVD to clean the lens before taking the player to be repaired. Other cleaning methods may destroy the lens.
- Always keep the disc door closed to avoid dust on the lens.
- The lens may cloud over when the player is suddenly moved from cold to warm surroundings. It is then not possible to play a CD/DVD. Leave the player in a warm environment until the moisture evaporates.

PREPARATIONS

Power supply

Using the AC / DC adaptor
Connect the supplied adaptor to the set and the main power supply (as shown).

TIP
To avoid damage to the player, switch off before plugging or unplugging the AC adaptor.

Using the car adaptor
Connect the supplied car adaptor to the set and the car cigarette lighter outlet.

TIP
To avoid damage to the player, switch off before plugging or unplugging the car adaptor.

When connecting with car power (cigarette lighter) adaptor, be sure the input voltage of the adaptor is identical with car voltage.

Powering your remote control

1 Open the battery compartment.
Remove the protective plastic tab (first time users only).
2 Insert 1 x lithium 3V battery, type CR2025, then close the compartment.

CAUTION
- Batteries contain chemical substances, so they should be disposed of properly.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst.
- Remove the batteries if the set is not to be used for a long time.

BASIC FUNCTIONS

Playing a DVD disc

After switching on, inserting the disc and closing the door, playback starts automatically. The screen shows the type of disc loaded. The disc may invite you to select an item from a menu. Use the **▲ ▼ ◀ ▶** keys to highlight your selection, and press **OK**.
Note: Since it is usual for DVD movies to be released at different times in different regions of the world, all players have region codes and discs can have an optional region code. If you load a disc of a different region code to your player, you will see the region code notice on the screen. The disc will not play, and should be unloaded.

Playing an audio or video CD disc
After switching on, inserting the disc and closing the door, the screen shows the type of disc loaded as well as information about the disc's contents.
Press **▶** to start playback.
While playing VCD with MTV/Karaoke, press number keys(0-9) to select the track and press **▶** or **OK** to play the track. Press **RETURN** to go back to menu of the selection.

Playing DivX® disc

- Philips provide you the DivX® VOD(Video on Demand) registration code that allows you to rent and purchase videos using the DivX® VOD service. For more information, visit www.divx.com/vod.
- Select the DivX® VOD on the SETUP menu.
- The registration code will appear.
- Use the registration code to purchase or rent the videos from DivX® VOD service at www.divx.com/vod. Follow the instructions and download the video onto a CD-R for playback on this DVD player.

TIP
All the downloaded videos from DivX® VOD can only be played back on this DVD player.

SPECIAL DVD FEATURES

Checking the contents of DVD-Video discs: **Menus**
For titles and chapters, selection menus may be included on the disc. The DVD's menu feature allows you to make selections from these menus. Press the appropriate numerical key, or use the **▲ ▼ ◀ ▶** keys to highlight your selection, and press **OK**.

Disc menu
Press **MENU**. The menu may list, for example, camera angles, spoken language and subtitle options, and chapters for the title.

Camera angle
If the disc contains sequences recorded from different camera angles, the angle icon appears, showing the number of available angles, and the angle being shown. You can then change the camera angle if you wish.
Press **ANGLE** repeatedly until you have reached your desired viewing angle.
To resume to normal viewing angle, press **ANGLE** repeatedly until no angle related message is shown on the screen.

Changing the language
Press **LANGUAGE**. If the current disc has different language options, this now appears on the screen.
Press **LANGUAGE** repeatedly until you have reached your desired language option.

Subtitles
Press **SUBTITLES**. If the current disc has different subtitle options, this now appears on the screen.
Press **SUBTITLES** repeatedly until you have reached your desired subtitles option.

TROUBLESHOOTING

Symptom	Remedy
Disc can't be played	– Ensure the disc label is upwards. – Clean the disc. – Check if the disc is defective by trying another disc.
The player does not respond to the remote control	– Aim the remote control directly at the sensor on the front of the player. Avoid all obstacles that may interfere with the signal path. Inspect or replace the batteries.
Distorted or B/W picture with DVD	– Use only discs formatted according to the TV-set used (PAL/NTSC).
No audio at digital output	– Check the digital connections. – Check the SETUP menu to make sure that the digital output is set to on.
Player does not respond to all operating commands during playback	– Operations are not permitted by the disc. – Refer to the instructions in the disc's menu.
Player feels warm	– When the player is in use for a long period of time, the surface will be heated. This is normal.
Display goes dimmer when AC is unplugged	– The unit is saving power to ensure longer playtime with battery. It is normal. Adjust the brightness using MONITOR function.

This set complies with the radio interference requirements of the European Union.


INTRODUCTION

Playable disc formats

In addition to DVD-Video disc, you will also be able to play all Video CDs and audio CDs (including CDR, CDRW, DVD±R and DVD±RW).


DVD-Video

Depending on the material on the disc (a movie, video clips, a drama series, etc.) these discs may have one or more Titles, and each Title may have one or more Chapters. To make access easy and convenient, your player lets you move between Titles, and also between Chapters.






Video CD

Depending on the material on the disc (a movie, video clips, a drama series, etc.) these discs may have one or more Tracks, and tracks may have one or more indexes, as indicated on the disc case. To make access easy and convenient, your player lets you move between Titles, and also between Chapters.



Audio CD / MP3 / WMA CD

Audio CDs / MP3/WMA CD contain music tracks only. You can play them in the conventional way through a stereo system using the keys on the remote control and/or main unit, or via the TV using the On Screen Display (OSD).



CD with JPEG files

You can also view JPEG still photos on this player.

PREPARATIONS

Attaching and charging the battery pack*