

Saitek A-250 Wireless 2.1 Speaker System

IMPORTANT ADDENDUM

My computer is turned on, music playing on the media player, wireless speaker system turned on, but I cannot hear any sound.

This may be due to the PC using an incorrect sound device to play music. To rectify this, please follow the simple steps below:

PC – Please go to Windows **Start, Settings, Control Panel**, select **Sounds and Audio devices, Audio Device** tab, and from the **Sound Playback** dropdown menu, select **CSR Bluetooth Headphones** as default audio device. Click **Apply** to select.

When you have closed the control panel window, restart your Media Player.

Apple Macintosh – Open System Preferences, double-click on **Sound** and select **USB transmitter** as the sound source.

Winamp media player users

For Winamp to work correctly with the A-250 Speaker System, open Winamp and go to **Options, Preferences** (CTRL+P), click **Global Hotkeys** on the left menu, and check the **Enabled** box. The Play/Pause, Previous track and Next track controls on the A-250 will now control the Winamp music files.