



HiPath 3000
optiPoint 500 entry, economy,
basic, standard & advance
快速查阅指南
Short Reference Manual

SIEMENS

Global network of innovation

www.siemens.com.cn/sbcc

HiPath

今日通信集成 沟通未来无限

目 录

Index

序号 No.	内 容 Content	页码 Page
1	功能与代码一览表 (英文显示)	P1
2	功能与代码一览表 (中文显示)	P5
3	Overview of Functions and Codes (Alphabetical)	P9
4	功能与代码一览表 (optiPoint 500 entry)	P13
5	Overview of Functions and Codes (optiPoint 500 entry)	P19

功能与代码一览表（英文显示）

下表列出了当出现在屏幕上时，所有可用的功能。已经配置的这些功能（详情请与系统支持部门联系）可以交互地开启（选择+保存），可通过程序/服务菜单（选择+保存或输入某个代码），或如果该功能已经配置（详情请与系统支持部门联系），按某个功能键。

功能(显示)	交互地	通过程序 /服务菜单...		使用 功能键...
		◀ ▶	Program/Service	
Account code 帐户代码		✓	*60	×
Advisory msg. On 咨询信息开启	✓	✓	*69	×
Advisory msg. Off 咨询信息关闭	✓	✓	#69	×
Associated dial 辅助拨号		✓	*67	×
Associated serv. 辅助服务		✓	*83	×
Call waiting 呼叫等待	✓	✓	*55	×
Waiting tone off 等待音关闭	✓	✓	*87	×
Waiting tone on 等待音开启	✓	✓	#87	×
Call wait.term.on 呼叫等待时间开启		✓	*490	×
Call wait.term.off 呼叫等待时间关闭		✓	#490	×
Caller List 主叫人列表	✓	✓	#82	×
Save number 保存号码	✓	✓	*82	×
Changeover on 切换开启	✓	✓	*66	×
Changeover off 切换关闭	✓	✓	#66	×
Change PIN 改变PIN		✓	*93	
Conference 电话会议	✓	✓	*3	×
Start conference 开启电话会议	✓			
Adding a party to the conference 向该会议补加一方	✓			
End conference 结束会议	✓	✓	#3	
View conf parties 查看到会各方	✓			
Remove party 撤消某一方	✓			
Drop last conf. party 将最后参会一方撤消(仅适用于美国)			*491	
Consult 转接	✓			
Return to held call 返回保留呼叫	✓	✓	*0	
Quit and return 退出并返回	✓	✓	*0	
Transfer 转移 US:Accpet call UK: Acceopt	✓			
Control Relay On 控制继电器开启		✓	*90	×
Control Relay Off 控制继电器关闭		✓	#90	×
US: directory 号码簿 UK: Phonebook号码簿	✓			
DISA				
Internal DISA内线DISA	✓	✓	*47	×
En-bloc sending 整体发送				
Dial 拨号	✓			

功能(显示)	交互地	通过程序 /服务菜单...		使用 功能键...	
		Program/Service			
		◀	▶		
DNDon DND 开启	✓	✓		*97 ×	
DND off DND 关闭	✓	✓		#97 ×	
Door opener on 开门器开启		✓		*89 ×	
Door opener off 开门器关闭		✓		#89 ×	
DTMF dialing DTMF 拨号		✓		*53 ×	
Forwarding on 转接开启	✓	✓		*1 ×	
1=all calls 所有呼叫	✓	✓		*11 ×	
2=external calls only 只限外线呼叫	✓	✓		*12 ×	
3=internal calls only 只限内线呼叫	✓	✓		*13 ×	
Forwarding off 转接关闭	✓	✓		#1 ×	
Trunk FWD on 中继线转接开启	✓	✓		*64 ×	
Trunk FWD out 中继线转接关闭	✓	✓		#64 ×	
Forward Line: On 转接线路: 开启		✓		*501 ×	
Forward Line: Off 转接线路: 关闭		✓		#501 ×	
Headset 耳机					
Answer call 呼叫应答	✓				
HF answerback on HF 回叫开启	✓	✓		*96 ×	
HF answerback off HF 回叫关闭	✓	✓		#96 ×	
Hotline 热线					
Join hunt group 加入寻线群组	✓	✓		*85 ×	
Leave hunt group 脱离寻线群组	✓	✓		#85 ×	
Rejoin all groups 重新加入所有群组	✓	✓		*85* ×	
Leave all groups 脱离所有群组	✓	✓		#85# ×	
Lock all phones 将所有话机加锁		✓		*943 ×	
Monitoring 监听				*944	
Mute on 静音开启	✓	✓		*52 ×	
Mute off 静音关闭	✓	✓		#52 ×	
Night answer on 夜间应答开启	✓	✓		*44 ×	
Night answer off 夜间应答关闭	✓	✓		#44 ×	
Open door 开门		✓		*61 ×	
Override 强插	✓	✓		*62 ×	
Page 寻呼		✓		*45 ×	
Answer page (not for U.S.) 应答寻呼 (不适用于美国)		✓		#45 ×	

功能(显示)	交互地	通过程序 /服务菜单...	使用功能键...	
			Program/Service	代码
Park a call 驻留一个呼叫		✓	*56	×
Retrieve call 恢复呼叫		✓	#56	
Phone Test 电话测试		✓	*940	
Pickup-directed 接听 - 定向	✓	✓	*59	×
Pickup-group 接听 - 群组	✓	✓	*57	×
Accept call 接受呼叫				
Prog. Feature key 编程功能键		✓	*91	×
Redial 重新拨号				×
Reject call 拒接呼叫				
Release 释放				×
Relocate 重新定位		✓	*9419	×
Complete Relocate 完成重新定位	✓		#9419	
Reserve trunk 保存中继线	✓			×
Reset services 重新设置服务		✓	#0	×
Retrieve line 恢复线路		✓	*63	×
Ring Transfer: On 振铃转移: 开启	✓	✓	*502	×
Ring Transfer: Off 振铃转移: 关闭	✓	✓	#502	×
Ringer cutoff on 振铃切断开启		✓	*98	×
Ringer cutoff off 振铃切断关闭		✓	#98	×
Ringing group on 群组振铃开启		✓	*81	×
Ringing group off 群组振铃关闭		✓	#81	×
Room monitor 房间监听		✓	*88	×
Select language 选择语言		✓	*48	
Send message 发送消息	✓	✓	*68	×
View sent message 查看发送的消息	✓	✓	#68	×
US: View message 查看消息 UK: Dispaly显示消息	✓	✓	#68	×
Mailbox 邮箱				×
Keypad dialing 键盘拨号		✓	*503	
Shift key Shift 键				×
Show call charges(own phone)显示话费 (自己话机)		✓	*65	×
View all charges(other party's phone)查看话费(对方话机)				×
Speaker call 免提呼叫		✓	*80	×
Suppress call ID 禁止呼叫ID	✓	✓	*86	×
Restore caller ID 储存主叫人ID	✓	✓	#86	×

功能(显示)	交互地	通过程序 /服务菜单...		使用 功能键...
		Program/Service	代码	
Tel. Data service 电话数据服务			*42	
Temporary MSN 临时MSN (不适用于美国)	✓	✓	*41	×
Temporary phone 临时话机		✓	*508	×
Timed reminder on 定时提醒开启		✓	*46	×
Timed reminder off 定时提醒关闭		✓	#46	×
Toggle/Connect 转换/连接	✓	✓	*2	×
Trace call 跟踪呼叫		✓	*84	×
Transfer 转移	✓			
Trunk Flash 中继闪断		✓	*51	×
UCD		✓		
Log on 登录		✓	*401	×
Log off 退出		✓	#401	×
Available 有效		✓	*402	×
Not Available 不可用		✓	#402	×
Work on 工作开启		✓	*403	×
Work off 工作关闭		✓	#403	×
UCD night on UCD 夜间开启		✓	*404	×
UCD night off UCD 夜间关闭		✓	#404	×
Calls in queue 呼叫排队		✓	*405	×
US: Callback回叫 UK: Set Callback 设置回叫	✓	✓	*58	×
View callbacks/Delete 查看回叫/删除	✓	✓	#58	
Use speed-dialing 使用缩位拨号		✓	*7	×
Change Speed-dial (station) 改变缩位拨号 (分机)		✓	*92	×

功能与代码一览表（中文显示）

下表列出了当出现在屏幕上时，所有可用的功能。已经配置的这些功能（详情请与系统支持部门联系）可以交互地开启（选择+保存），可通过程序/服务菜单（选择+保存或输入某个代码），或如果该功能已经配置（详情请与系统支持部门联系），按某个功能键。

功能(显示)	交互地  	通过程序 /服务菜单... 	使用功能键...	
			 	代码
分配项目代码		✓	*60	×
设置留言	✓	✓	*69	×
取消留言	✓	✓	#69	×
直联拨号		✓	*67	×
直联服务		✓	*83	×
接通等待的呼叫	✓	✓	*55	×
关闭来电提示音	✓	✓	*87	×
打开来电提示音	✓	✓	#87	×
呼叫等待时间开启		✓	*490	×
呼叫等待时间关闭		✓	#490	×
显示来电号码	✓	✓	#82	×
存储号码	✓	✓	*82	×
话机加锁	✓	✓	*66	×
话机解锁	✓	✓	#66	×
修改本机锁代码		✓	*93	
电话会议	✓	✓	*3	×
开启电话会议	✓			
向该会议补加一方	✓			
结束电话会议	✓	✓	#3	
查看到会各方	✓			
撤消某一方	✓			
将最后参会一方撤消（仅适用于美国）			*491	
转接	✓			
重拨被保持的呼叫	✓	✓	*0	
退出并返回	✓	✓	*0	
转移/美国：接听呼叫 英国：接听	✓			
控制继电器开启		✓	*90	×
控制继电器关闭		✓	#90	×
美国：号码簿 英国：号码簿	✓			
DISA				
内部DISA	✓	✓	*47	×
整体发送				
拨号	✓			

功能(显示)	交互地	通过程序 /服务菜单...		使用 功能键...
		◀▶	◀▶	
设置免打扰	✓	✓	*97	×
取消免打扰	✓	✓	#97	×
开门器开启		✓	*89	×
开门器关闭		✓	#89	×
音频补充拨号		✓	*53	×
设置呼叫转移	✓	✓	*1	×
1=所有呼叫	✓	✓	*11	×
2=仅外线呼叫	✓	✓	*12	×
3=仅内线呼叫	✓	✓	*13	×
取消呼叫转移	✓	✓	#1	×
中继线转接开启	✓	✓	*64	×
中继线转接关闭	✓	✓	#64	×
转移外线: 开启		✓	*501	×
转移外线: 关闭		✓	#501	×
耳机				
呼应回答	✓			
开启自动应答	✓	✓	*96	×
关闭自动应答	✓	✓	#96	×
热线				
加入寻线组	✓	✓	*85	×
退出寻线组	✓	✓	#85	×
重新加入所有群组	✓	✓	*85*	×
脱离所有群组	✓	✓	#85#	×
将所有话机加锁		✓	*943	×
监听			*944	
麦克风关	✓	✓	*52	×
麦克风开	✓	✓	#52	×
设置夜服	✓	✓	*44	×
取消夜服	✓	✓	#44	×
开门		✓	*61	×
强插	✓	✓	*62	×
寻呼		✓	*45	×
应答寻呼 (不适用于美国)		✓	#45	×

功能(显示)	交互地	通过程序 /服务菜单...		使用 功能键...
		Program/Service	代码	
呼叫暂存		✓	*56	×
重接暂存的呼叫		✓	#56	
话机测试		✓	*940	
组外代接	✓	✓	*59	×
接听群组	✓	✓	*57	×
接受呼叫				
编程功能键		✓	*91	×
重新拨号				×
拒接呼叫				
释放				×
重新定位		✓	*9419	×
完成重新定位	✓		#9419	
保存中继线	✓			×
复位所有功能		✓	#0	×
重接被保持的中继		✓	*63	×
振铃转移: 开启	✓	✓	*502	×
振铃转移: 关闭	✓	✓	#502	×
设置静音振铃		✓	*98	×
取消静音振铃		✓	#98	×
振铃组设置		✓	*81	×
振铃组关闭		✓	#81	×
房间监听		✓	*88	×
语言选择		✓	*48	
发送信息	✓	✓	*68	×
查看发送的信息	✓	✓	#68	×
美国: 查看消息 英国: 显示消息	✓	✓	#68	×
邮箱				×
键盘拨号		✓	*503	
Shift 键				×
显示话费 (自己话机)		✓	*65	×
查看话费 (对方话机)				×
扬声呼叫		✓	*80	×
禁止呼叫识别	✓	✓	*86	×
允许呼叫识别	✓	✓	#86	×

功能(显示)	交互地	通过程序 /服务菜单...		使用 功能键...
		Program/Service	代码	
电话数据服务代码			*42	
临时MSN号码	✓	✓	*41	×
临时电话		✓	*508	×
设置定时提醒		✓	*46	×
取消定时提醒		✓	#46	×
交替通话	✓	✓	*2	×
跟踪呼叫		✓	*84	×
转移	✓			
发送信号呼叫网络		✓	*51	×
UCD		✓		
登录		✓	*401	×
退出		✓	#401	×
进入呼叫分配组		✓	*402	×
暂离呼叫分配组		✓	#402	×
设置后处理		✓	*403	×
取消后处理		✓	#403	×
工作关闭		✓	*404	×
设置夜服呼叫分配		✓	#404	×
取消夜服呼叫分配		✓	*405	×
呼叫分配	✓	✓	*58	×
设置回叫	✓	✓	#58	
显示回叫/删除		✓	*7	×
缩位拨号		✓	*92	×
修改缩位拨号号码				

Overview of Functions and Codes (Alphabetical)

The table below lists all available functions as they appear on the display. Functions that have been configured (contact System Support) can be activated interactively (select + save) via the Program/Service menu (select + save or enter a code), or by pressing function keys, provided that the functions have been configured (contactSystemSupport).

Functions(display)	... Interactively...	Via the Program/Service menu	... With function keys
			Code
Account code		✓	*60
Advisory msg. on	✓	✓	*69
Advisory msg. off	✓	✓	#69
Associated dial		✓	*67
Associated serv.		✓	*83
Call waiting	✓	✓	*55
Waiting tone off	✓	✓	*87
Waiting tone on	✓	✓	#87
Call wait.term.on		✓	*490
Call wait.trm.off		✓	#490
Caller List	✓	✓	#82
Save number	✓	✓	*82
Changeover on	✓	✓	*66
Changeover off	✓	✓	#66
Change PIN		✓	*93
Conference	✓	✓	*3
Start conference	✓		
Adding a party to the conference	✓		
End conference	✓	✓	#3
View conf parties	✓		
Remove party	✓		
Drop last conf. party (only for U.S.)			*491
Consult	✓		
Return to held call	✓	✓	*0
Quit and return	✓	✓	*0
Transfer/US:Accept call UK:Accept	✓		
Control Relay On		✓	*90
Control Relay Off		✓	#90
US:Directory UK:Phonebook	✓		
DISA			
Internal DISA	✓	✓	*47
En-bloc sending			
Dial	✓		

Functions(display)	... Interactively...	Via the Program/Service menu		... With function keys
DND on	✓	✓	*97	✗
DND off	✓	✓	#97	✗
Door opener on		✓	*89	✗
Door opener off		✓	#89	✗
DTMF dialing		✓	*53	✗
Forwarding on	✓	✓	*1	✗
1=all calls	✓	✓	*11	✗
2=external calls only	✓	✓	*12	✗
3=internal calls only	✓	✓	*13	✗
Forwarding off	✓	✓	#1	✗
Trunk FWD on	✓	✓	*64	✗
Trunk FWD out	✓	✓	#64	✗
Forward Line: On		✓	*501	✗
Forward Line: Off		✓	#501	✗
Headset				
Answer call	✓			
HF answerback on	✓	✓	*96	✗
HF answerback off	✓	✓	#96	✗
Hotline				
Join hunt group	✓	✓	*85	✗
Leave hunt group	✓	✓	#85	✗
Rejoin all groups	✓	✓	*85*	✗
Leave all groups	✓	✓	#85#	✗
Lock all phones		✓	*943	✗
Monitoring			*944	
Mute on	✓	✓	*52	✗
Mute off	✓	✓	#52	✗
Night answer on	✓	✓	*44	✗
Night answer off	✓	✓	#44	✗
Open door		✓	*61	✗
Override	✓	✓	*62	✗
Page		✓	*45	✗
Answer page (not for U.S.)		✓	#45	✗

Functions(display)	... Inter-actively...	Via the Program/Service menu		... With function keys
Park a call			✓	*56
Retrieve call			✓	#56
Phone Test			✓	*940
Pickup - directed	✓		✓	*59
Pickup - group	✓		✓	*57
Accept call				
Prog. feature key			✓	*91
Redial				×
Reject call				
Release				×
Relocate			✓	*9419
Complete Relocate	✓			#9419
Reserve trunk	✓			×
Reset services			✓	#0
Retrieve line			✓	*63
Ring Transfer: On	✓		✓	*502
Ring Transfer: Off	✓		✓	#502
Ringer cutoff on			✓	*98
Ringer cutoff off			✓	#98
Ringing group on			✓	*81
Ringing group off			✓	#81
Room monitor			✓	*88
Select language			✓	*48
Send message	✓		✓	*68
View sent message	✓		✓	#68
US: View messages UK: Display Messages	✓		✓	#68
Mailbox				×
Keypad dialing!			✓	*503
Shift Key				×
Show call charges (own telephone)			✓	*65
View call charges (other party's telephone)				×
Speaker call			✓	*80
Suppress call ID	✓		✓	*86
Restore caller ID	✓		✓	#86

Functions(display)	... Inter-actively...	Via the Program/Service menu		... With function keys
Tel. data service				*42
Temporary MSN (not for U.S.)	✓	✓		*41
Temporary Phone		✓		*508
Timed reminder on		✓		*46
Timed reminder off		✓		#46
Toggle/Connect	✓	✓		*2
Trace call		✓		*84
Transfer	✓			
Trunk Flash		✓		*51
UCD		✓		
Log on		✓		*401
Log off		✓		#401
Available		✓		*402
Not available		✓		#402
Work on		✓		*403
Work off		✓		#403
UCD night on		✓		*404
UCD night off		✓		#404
Calls in queue		✓		*405
US:Callback UK:Set Callback	✓	✓		*58
View callbacks/Delete	✓	✓		#58
Use speed-dialing		✓		*7
Change Speed-dial (station)		✓		*92

功能与代码一览表 (optiPoint 500 entry)

下表列出了所有可用功能。假如这些功能已经配置（详情请与系统支持部门联系），输入一个功能代码或者按某个功能键即可以将其调出。

功能	操作步骤
接听一个等待呼叫(保留呼叫)	 协商 * 5
终止第二个呼叫，继续该呼叫	1X 或 2X 协商
防止自动保留呼叫	# 4 9 0
允许自动保留呼叫	* 4 9 0
呼叫等待音开启	* 8 7
呼叫等待音关闭	# 8 7
接听呼叫, 定向的	* 5 9 内线
接听呼叫, 群组	* 5 7
调整振铃音量	(+ 或 -) 1 + - 同时
调整振铃音调	(+ 或 -) 2 + - 同时
呼应回答	
分配分机号码(不适用于美国)	* 4 1 MSN 外线
伴随拨号	* 6 7 内线 分机号
伴随服务	* 8 3 内线
话费分配/帐户代码	* 6 0 代码 # 如果适用 外线
呼叫转接开启	* 1 1 分机号 * 1 2 分机号 * 1 3 分机号

功能	操作步骤
呼叫转接关闭	# 1 ↗
转接线路：开启	* 5 0 1 ↗ 中继号 1 ↗ 分机号 ↗
	* 5 0 1 ↗ 中继号 2 ↗ 分机号 ↗
	* 5 0 1 ↗ 中继号 3 ↗ 分机号 ↗
转接线路：关闭	# 5 0 1 ↗ 中继号 ↗
在运营商网络呼叫转接开启	* mno 6 ghi 4 1 ↗ MSN ↗ 外线 ↗
	* mno 6 4 abc 2 ↗ MSN ↗ 外线 ↗
	* mno 6 4 def 3 ↗ MSN ↗ 外线 ↗
在运营商网络呼叫转接关闭	# mno 6 ghi 4 1 ↗ MSN ↗
	# mno 6 4 abc 2 ↗ MSN ↗
	# mno 6 4 def 3 ↗ MSN ↗
呼叫等待（保留呼叫）	内线 ↗ 分机占线，等待5秒
改变呼叫号码	* wxyz 9 ghi 4 1 wxyz 9 ↗ 自己呼叫号码 代码 # wxyz 9 ghi 4 1 wxyz
改变呼叫音量	(⊕或⊖) ⊕ ⊖ 同时
转换开启（加锁）	* mno 6 mno ↗ 代码
转换关闭（开锁）	# mno mno ↗ 代码
将所有的话机加锁	* wxyz 9 ghi 4 3 ↗ 内线 *
将所有的话机开锁	* wxyz 9 ghi 4 3 ↗ 内线 #
协商	协商 ↗ 分机号
放弃协商。	(1x或2x) 协商 ↗
继续呼叫	
转换	协商 ↗ * 2
开始3方电话会议	协商 ↗ * 3
连接各方	

功能	操作步骤
控制继电器开启	* 9 0 (1 ... 4)
控制继电器关闭	# 9 0 (1 ... 4)
对话 (门口话机)	或30秒后 内线
开门	协商 * 6 1 内线
'开门' 开启	* 8 9 内线+代码 (1或2)
'开门' 关闭	# 8 9 内线
DND 开启	* 9 7
DND 关闭	# 9 7
DTMF拨号/音频拨号	协商 * 5 3
结束呼叫	或 释放
群组呼叫, 脱离	# 8 5 或 # 8 5 # 或 # 8 5 群组
群组呼叫, 加入	* 8 5 或 * 8 5 * 或 * 8 5 群组
热线	
打电话	分机号 或 分机号
监听 (仅适用于美国)	* 9 4 4 内线
静音开启	静音
静音关闭	静音
夜间应答开启	* 4 4 内线 或 * 4 4 *
夜间应答关闭	# 4 4
强插	分机占线 协商 * 6 2

功能	操作步骤
寻呼另一个人(不适用于美国)	* 4 5 内线
应答寻呼(简易寻呼设备)	* 4 9 内线
应答寻呼(增强寻呼设备)	* 4 5 内线
驻留某个呼叫	协商 * 5 6 (0 ... 9)
恢复被驻留的呼叫	# 5 6 (0 ... 9)
话机测试	* 9 4 0
接听(恢复)一个被保留的电话	* 6 3 线路号
重拨	重拨
拒接电话	释放
保留中继线	占线(外线); 等待5秒
当被保留的中继线空闲时	外线
重新设置服务	# 0
振铃转移开启	* 5 0 2 线路号
振铃转移关闭	# 5 0 2 线路号
群组振铃开启	* 8 1 内线
群组振铃关闭	# 8 1
房间监听开启	* 8 8
房间监听关闭	
监听某个房间	内线
保存定时提醒	* 4 6 (时间,如0905)
删除定时提醒	# 4 6
接听定时电话	
保存一个PIN	* 9 3 旧代码 2 × 新代码

功能	操作步骤
发送消息	* 6 8 内线 (0 ... 9)
删除消息 (发送的)	# 6 8 1
接受消息	# 6 8 3
免提呼叫	* 8 0 内线
高频回叫	
开启电话会议	分机号 协商
	分机号 协商 * 3
对方不回答	(1x 或 2x) 协商
继续呼叫	
电话会议补加一方(最多5方)	协商 分机号
脱离电话会议撤消一方	协商 * 3 等
撤消一方	
将ISDN 中央局方从电话	协商 # 3
会议撤出 (仅适用于美国)	协商 * 4 9 1
储存回叫	回叫
删除回叫	# 5 8
接听回叫	
来电显示禁止开启	* 8 6
来电显示禁止关闭	# 8 6
话机数据服务	协商 * 4 2
呼叫跟踪 (不适用于美国)	协商 * 8 4
在通知群组之后	协商 分机号
转移某个呼叫协商	协商 * 8 0
	群组
中继闪烁	协商 * 5 1

功能	操作步骤
UCD	
在上班时，登录	 *  0   代码 
在下班时，退出	 #  0  
工作时，登录	 #  0  
工作时，退出	 *  0  
工作时间开启	( 或 ) *  0  
工作时间关闭	( 或 ) #  0  
夜间应答开启	 *  0  
夜间应答关闭	 #  0  
使用缩位拨号	 缩位拨号  
缩位拨号：储存分机	(*0...*9 或 000...999) 或
	 *   (*0...*9 或 000...999)
临时使用其它话机	 *  0   外线  代码 
使用邮箱	 #  8  或
	 消息等待 

Overview of Functions and Codes (optiPoint 500 Entry)

The table below lists all available functions. If these functions have been configured (con-tact System Support), they can be called by entering a code or pressing a function key.

Functions	Operating Steps
Accept a waiting call (camp-on)	 * 5 5
Terminate second call,	(1x or 2x)
Continue the call	
Prevent automatic camp-on	# 4 9 0
Allow automatic camp-on	* 4 9 0
Call waiting tone on	* 8 7
Call waiting tone off	# 8 7
Accept call, directed	* 5 9 MSN Int.
Accept call, group	* 5 7
Adjust ring volume	(+ or -) 1 + - simultaneously
Adjust ring tone	(+ or -) 2 + - simultaneously
Answer call	
Assign station number (not for U.S.)	* 4 1 MSN Ext.
Associated dialing	* 6 7 Int. Stn No.
Associated service	* 8 3 Int.
Call charge assignment / account code	* 6 0 Code # if appl. Ext.
Call forwarding on	* 1 1 Stn No. * 1 2 Stn No. * 1 3 Stn No.

Functions	Operating Steps
Call forwarding off	
Forward Line: On	
Forward Line: Off	
Call forwarding in carrier network on	
Call forwarding in carrier network off	
Call waiting (camp-on)	Int. Stn busy; Wait 5 seconds
Change call number	own call No.
Change call volume	(+ or -) Simultaneously
Changeover on (lock)	
Changeover off (unlock)	
Lock all phones	
Unlock all phones	
Consult	Consultation
Quit consultation,	(1x or 2x) Consultation
Continue the call Toggle	Consultation
Start three-party conference	Consultation
Connect parties	

Functions	Operating Steps
FuControl relay on	* 9 0 (1 ... 4)
Control relay off	# 9 0 (1 ... 4)
Conversation(entrance telephone)	or after 30 seconds Int.
Open door	Consultation * 6 1 Int.
Door release on	* 8 9 Int. + Code 1 or 2
Door release off	# 8 9 Int.
DND on	* 9 7
DND off	# 9 7
DTMF dialing/Tone dialing	Consultation * 5 3
Ending a call	or Release
Group call, leave	# 8 5 or # 8 5 # or # 8 5 Group
Group call, join	* 8 5 or * 8 5 * or * 8 5 Group
Hotline	
Making calls	Stn No.or Stn No.
Monitoring (only U.S.)	* 9 4 4 Int.
Mute off	Mute
Mute on	Mute
Night answer on	* 4 4 Int. or * 4 4 *
Night answer off	# 4 4
Override	Stn busy Consultation * 6 2

Functions	Operating Steps
FuPaging another person (not for U.S.)	 * 4 5  Int. 
Answer page (simple paging equipment)	 * 4 9  Int.
Answer page (enhanced paging equipment)	 * 4 5  Int.
Park a call	 Consultation  * 5 6
Retrieve parked call	(0 ... 9) 
Phone test	 * 9 4 0
Picking up (retrieving) a held call	 * 6 3  Line No.
Redial	 Redial 
Reject call	Release 
Reserve trunk	 Busy (external); wait 5 seconds 
When the reserved trunk is free	 Ext. 
Reset services	 # 0 
Ring transfer on	 * 5 0 2  Line No. 
Ring transfer off	 # 5 0 2  Line No. 
Ringing group on	 * 8 1  Int. 
Ringing group off	 # 8 1 
Room monitor on	 * 8 8 
Room monitor off	
Monitoring a room	  Int.
Save timed reminder	 * 4 6  (Time,e.g. 0905) 
Delete timed reminder	 # 4 6 
Accept timed call	
Saving a PIN	 * 9 3  Old code  2× new code

Functions	Operating Steps
Send message	* Int. (0 ... 9)
Delete message (sent)	# 1
Accept message	1
Speaker call	* Int.
HF answerback	
Start conference	Stn No.
The other party does not respond	Stn No. *
1. Continue the call	
Add a party to the conference(max. five)	Stn No.
Leave conference	* etc.
Remove party	
Remove ISDN central office party from the conference (only for U.S.)	# *
Store a callback	
Delete callback	#
Accept callback	
Suppress caller ID on	*
Suppress caller ID off	#
Telephone data service	
Trace call (not for U.S.)	
Transferring a call ...after announcement to group	Stn No. Group
Trunk flash	

Functions	Operating Steps
UCD	
Log on at beginning of shift	 *  0   Code 
Log off at end of shift	 #  0  
Log off work	 #  0  
Log on work	 *  0  
Work time on	( or ) *  0  
Work time off	( or ) #  0  
Night answer on	 *  0  
Night answer off	 #  0  
Use speed-dialing	 speed-dial  
	(*0...*9 or 000...999) or
	 *  
Speed-dialing: store station	 *  2  *0...*9  Ext. 
Using another phone temporarily	 *  0   Int.  Code 
Using mailboxenctions	 #  8  or
	 #  

西门子 — 您商务通信的合作伙伴

西门子致力于为全球客户提供最先进的创新解决方案。凭借丰富经验及与其他全球技术领导商的战略合作伙伴关系，我们能够为商务解决方案和应用设立全新标准。结合了创新科技和投资保障的解决方案，为您的业务带来增值，并促进您的业务发展更好、效率更高的解决方案。您的利润和成功是我们的最高追求。

www.siemens.com.cn/sbcs



西门子数字程控通信系统有限公司(SBCS)

E-mail: marketing@sbcs.siemens.com.cn

免费 800 热线: 800 8200656

东区

上海总公司（总部）

浦东金桥出口加工区宁桥路931号

电话: 021-61013000 传真: 021-61013606 邮编: 201206

杭州办事处:

杭州市延安路511号元通大厦518室

电话: 0571-85155588 传真: 0571-85067942 邮编: 310006

南京办事处:

南京市中山东路90号华泰大厦20层

电话: 025-4560550-5670 传真: 025-45111612 邮编: 210002

武汉办事处:

武汉汉口建设大道709号建银大厦18楼

电话: 027-85486688-2200 传真: 027-85486777 邮编: 430015

南区

广州分部:

广州先烈中路69号东山广场16-17层

电话: 020-87320088 传真: 020-87320118 邮编: 510095

成都办事处:

成都市人民南路二段18号川信大厦18楼

电话: 028-86199499-1703 传真: 028-86199488 邮编: 610016

重庆办事处:

重庆市渝中区邹容路68号大都会商厦18层

电话: 023-63828919-5703 传真: 023-63702886 邮编: 400010

福州办事处:

福州东街96号福建东方大酒店15层

电话: 0591-7500888-2600 传真: 0591-7500333 邮编: 350001

昆明办事处:

昆明市青年路395号邦克大厦26楼

电话: 0871-3158085 传真: 0871-3158093 邮编: 650011

深圳办事处:

深圳市华侨城汉唐大厦10楼02区

电话: 0755-26935188-8020 传真: 0755-26934476 邮编: 518053

北区

北京分公司:

北京市朝阳区酒仙桥路14号兆维华灯大厦

邮箱: 北京市朝阳区酒仙桥邮局100016信箱14分箱

电话: 010-64721888 传真: 010-64728160 邮编: 100016

济南办事处:

济南市顺耕路28号舜华国际商务会所5楼

电话: 0531-26660088-6903 传真: 0531-2660836 邮编: 250014

沈阳办事处:

沈阳市和平区南京北街206号城市广场第2座15楼

电话: 024-23341110-8128 传真: 024-23341107 邮编: 110001

乌鲁木齐办事处:

新疆乌鲁木齐友好南路23号华都大饭店1206房

电话: 0991-4514579 传真: 0991-4514579 邮编: 830000

西安办事处:

西安市互助路2号西安建国饭店3342房

电话: 029-3238888-3342 传真: 029-3249160 邮编: 710048

© 西门子数字程控通信系统有限公司 2004

参考号: HiPath 3000: A31003-H8400-SR-3

本文档之信息包含性能的一般描述或特征。在实际使用中，性能及特征可能会与所描述的不一致或随产品开发而发生变更。但在合同条款中有明确规定时，才承担提供相关特征的义务。版本、供货情况及技术规格如有变更，恕不另行通知。西门子还可能随时对本文件中涉及的产品和/or程序进行改进和/or变更，恕不另行通知。

本文档可能包含其他所有权告示及维权信息，其条款必须得到遵守。所有其他商标或公司名称都是其各自所有者的财产。

西门子不向任何一方承担责任以其使用本文档而发生的任何直接、间接、特殊或后果性损害，包括但不限于任何利润损失、商业中断、您的信息处理系统中财产或其他数据的损失等—即使已明确告知我们可能会发生这些损害。

在中华人民共和国境内印刷，仅作市场推广之用。