

AWO43038

程序表




A. 開門指示燈

本機具有自動安全保護功能，在開始出現故障時，可自動進行檢查、診斷，並作出適當調整。

B. 入水喉關閉指示燈

請檢查水源壓力、水龍頭

C. 清理過濾器指示燈

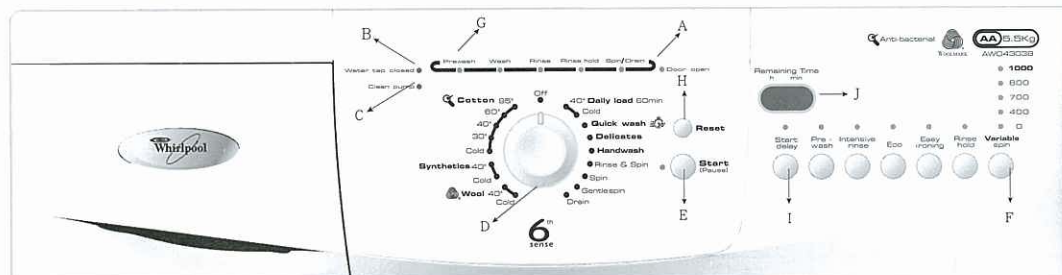

D. 程序選擇旋鈕

E. 啟動/暫停鍵

F. 脫水轉速選擇鍵

G. 程序過程指示燈



H. 重設鍵

I. 預校開機時間鍵

J. 剩餘時間顯示窗

洗衣程序	衣服標籤	衣物種類/骯髒程度 洗滌溫度的選擇，請按照衣物標籤上的建議進行	最大洗 衣量 Kg	洗衣劑和柔順劑			洗衣功能選擇								最高脫水 轉速 轉／分鐘
				預洗 	主洗 	柔順劑 	預校 開機	慳電	預洗	易燙貼	深層過水	延遲 脫水	脫水 轉速 選擇		
全棉 冷水、30℃、40℃ 60℃、95℃	   	非常骯髒到中度骯髒的床單、枱布、內衣、毛巾、襯衫等全棉或棉麻衣物。 對於非常骯髒的衣物，可選擇“預洗”功能。	5.5	*	是	*	*	*	*	*	*	*	*	1000	
合成纖維 冷水、40℃	 	中度骯髒的上衣、襯衫及其它合成纖維衣物（滌綸、聚酯纖維）外衣或棉混 紡衣物。	2.0	*	是	*	*	*	*	*	*	*	*	800(1)	
60分鐘 日日洗 冷水、40℃	 	輕微骯髒、中度骯髒的棉質或合成纖維衣物。	2.5	—	是	*	*	—	—	—	*	*	*	1000	
30分鐘速洗 30℃	 	穿了一會兒的外套、棉衣、聚酯纖維、聚酯氨和混紡運動服裝。	2.5	—	是	*	*	—	—	—	*	*	*	1000	
纖幼 30℃		窗簾、質料纖幼的裙子、襯衫、外套。	1.5	*	是	*	*	—	*	—	—	*	*	800(1)	
羊毛 冷水、40℃		只能洗滌有羊毛標記，及可機洗的羊毛衣物 如果選擇了“延遲脫水”功能，切勿讓衣物長時間在水中浸泡。	1.0	—	是	*	*	—	—	—	—	*	*	800(1)	
手洗 冷水		標記為手洗的棉麻、絲綢、人造絲的衣物 如果選擇了“延遲脫水”功能，切勿讓衣物長時間在水中浸泡，程序結束時 會進行輕柔脫水操作。	1.0	—	是	*	*	—	—	—	—	*	*	400 (2)	
過水＋脫水	—	與“全棉”程序的最後一次過水、脫水過程相同。	5.5	—	是	*	*	—	—	—	—	*	*	1000	
脫水	—	強力脫水，與“全棉”程序的脫水過程相同。	5.5	—	—	—	*	—	—	—	—	—	*	1000	
輕柔脫水	—	輕柔脫水，與“全棉”程序的脫水過程相同。	1.0	—	—	—	*	—	—	—	—	—	*	800(1)	
排水	—	此程度只進行排水，並沒有脫水操作，可作為“延遲脫水”後啟動排水操 作，然後結束程序。	—	—	—	—	—	—	—	—	—	—	—	—	

* 可選/是：必須加入

(1) 為了呵護衣物，脫水速度限制為800轉/分鐘。

(2) 為了呵護衣物，脫水速度限制為400轉/分鐘。

惠而浦是美國 (Whirlpool) 公司的註冊商標

基本程序表

性能數據			
程序	溫度 (°C)	洗衣量 (公斤)	程序持續時間 (大約)(小時：分鐘)
全棉※※	95	5.5	2:15
全棉※※※	60	5.5	2:10
全棉	40	5.5	1:59
全棉	30	5.5	1:55
全棉	冷水	5.5	1:54
合成纖維	40	2.0	1:15
合成纖維	冷水	2.0	1:10
60分鐘日日洗	40	2.5	0:55
60分鐘日日洗	冷水	2.5	0:50
30分鐘速洗	30	2.5	0:30
纖幼	30	1.5	0:40
羊毛	40	1.0	0:46
羊毛	冷水	1.0	0:41
手洗	冷水	1.0	0:35

性能數據是按照IEC/EN60456, GB/T4288標準，在正常條件下測試結果，與用戶使用時的實際耗水、耗電量、水溫、水壓以及洗滌衣物種類有關。

※ 程序實際運行時間，可能與表中數據不同，洗衣機能根據洗滌條件自動調節。

※※ 為降低水溫，防止衣物起皺，主洗過程結束後、排水前，洗衣機會自動加入冷水降溫。

※※※ 標準測試洗衣程序。

加入洗衣劑，關好機門，選擇程序

根據使用手冊中“洗衣劑和柔順劑”一節的說明，加入洗衣劑後，關好機門。

1. 將程序選擇旋鈕轉到所須程序和溫度的位置。
2. 剩餘時間顯示窗，顯示所選程序的時間（時、分），啟動／暫停鍵旁的指示燈閃動。
3. 程序建議的脫水轉速的指示燈亮起，視窗顯示程序時間。

選擇附加功能

按下希望增加的功能鍵，對應的指示燈亮起。當選擇的程序和附加功能不配合時，不能組合的功能將自動取消，指示燈隨即熄滅。

恆電洗

- 洗滌時間延長，洗滌溫度降低，可達到完美的洗衣效能，而且大大降低耗電量。

預洗

- 適用於非常骯髒的衣物（如沙土、灰塵），程序時間延長15分鐘。

易燙貼

- 可以與全棉、合成纖維程序組合，令衣物更易燙燙。
- 為減少起皺，增加用水量，並進行輕柔脫水。

深層過水

- 增加一次過水洗程序，並延長過水時間。
- 本功能適合於水質很軟的地區，或洗滌嬰兒衣物，或對洗衣劑過敏的人。

延遲脫水

- 洗滌衣物將留在最後一次過水中，洗衣機並不進行脫水。可避免衣物顏色變暗、起皺。
- 建議洗滌纖維、纖柔衣物時，選擇此功能。
- 如果希望延遲脫水時間，此功能很有效用。

註：當洗衣程序的延遲脫水指示燈亮起、啟動／暫停鍵的指示燈閃動時，運行到延遲脫水時，洗衣程序便會停止。

如何停止延遲脫水

- 按啟動／暫停鍵，洗衣機自動運轉至當前選擇程序的脫水過程，結束程序。
- 如果你不想將衣物進行脫水，請把程序選擇旋鈕轉到排水位置，然後按自動／暫停鍵。

脫水轉速

- 程序自動選擇預設的最高脫水轉速。
- 按鍵選擇其它脫水轉速。
- 如果選擇脫水轉速為“0”，最後脫水過程將被取消，程序結束時只進行排水，但過水過程仍會進行脫水操作。

預校開機時間功能

預校開機時間功能讓你在方便的時候洗滌衣物，如在電費較便宜的晚間時份使用。

- 選擇程序、溫度、附加功能。
- 按預校開機時間功能鍵，選擇1～23小時延遲開機時間。
- 按啟動／暫停鍵，指示燈亮起，洗衣機開始倒數計時。
- 當程序開始後，預校開機時間掣開機指示燈熄滅，數碼視窗顯示剩餘時間。
- 當按下啟動／暫停鍵，以及再次按下預校開機時間掣，便可更改設定的預校開機時間。

取消預校開機時間功能

- 在按啟動／暫停鍵之前，轉動程序選擇旋鈕到另一個程序位置，或按重設鍵。
- 在按啟動／暫停鍵後，持續按下重設鍵3秒，預校開機時間便從顯示窗消失。

啟動程序

開啟水龍頭，按啟動／暫停鍵，開始洗衣程序，啟動／暫停鍵旁的指示燈亮起，程序過程指示燈顯示洗衣程序的進度，從左到右依次顯示預洗、主洗、過水、脫水／排水操作。時間顯示窗顯示程序剩餘時間。由於衣物、進水溫度的變化，控制器在某個程序階段會重新計算剩餘時間。此時顯示窗將顯示動畫圖案。

開門指示燈

啟動程序前和程序結束後，指示燈亮起，表示可打開機門，只要程序正在運行，機門保持鎖定，便不能用力打開機門以免損壞機器。如果急需在程序運行過程中打開機門，請參考程序結束前取消／重設一節。

紅燈警示

入水喉關閉

洗衣機沒有供水或供水不足，請開啟水龍頭。如果指示燈仍然亮起。請參考使用手冊的“故障排除”一節。

清理過濾器

洗滌用水沒有排出，請檢查排水管是否打結、堵塞。清理過濾器，如屬後者，請參考使用手冊“清理過濾器”一節。

程序結束

- 所有程序過程指示燈熄滅。“開門”指示燈亮起。
 1. 把程序選擇旋鈕轉到“關”的位置。
 2. 關閉水龍頭。
 3. 打開機門，取出衣物。
 4. 機門微開，讓洗衣桶吹乾。

程序開始後更改程序、附加功能

1. 按啟動／暫停鍵中止程序，指示燈閃動。
 2. 選擇新程序、附加功能。如需要可選擇脫水轉速。
 3. 再次按啟動／暫停鍵開始新程序。
- 新洗衣程序將在上一個程序中止的位置繼續運行，因此不要添加洗衣劑。

程序結束前取消／重設

- 在程序結束前，按“重設”鍵取消洗衣程序。
- 按“重設”鍵至少3秒。在開門前排出機內積水。

AWO43038

A. "Door Open" Indicator


In this machine, there is a built-in safety function which automatically performs checking, diagnosis and self-adjustment when problem arises.

B. "Water tap closed" Indicator

Please check the inlet water pressure and tap.

C. "Clean pump" Indicator

Program Chart

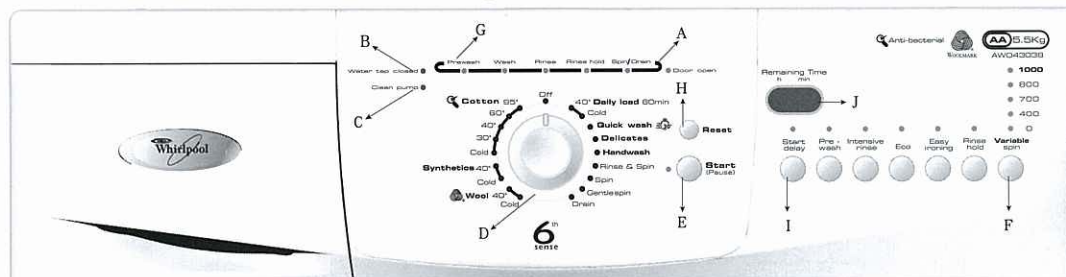

D. Program Selector Knob

E. "Start/Pause" button

F. "Variable spin" button










 
 
 

 


G. "Program Sequence" Indicator



H. "Reset" button

I. "Start Delay" button

J. Remaining time Display

Washing Program	Care Labels	Type of wash/ Degree of dirtiness For temperature selection, please follow the recommendations on the care label.	Max Load Kg	Detergents and Softener			Wash Function Selection							Max Spin Speed rpm
				Pre-wash 	Main Wash 	Softener 	Start Delay	Eco	Prewash	Easy ironing	Intensive Rinse	Rinse hold	Variable spin	
Cotton Cold Water; 30°C; 40°C; 60°C; 95°C	   	For heavily soiled to normally soiled bed sheet, table cloth, underwear, towels, shirts, made of cotton or linen. Please select an additional "Pre-wash" function for heavily soiled clothes.	5.5	*	Yes	*	*	*	*	*	*	*	*	1000
Synthetics Cold water; 40°C	 	Normally soiled jackets, blouses, clothes and coats made of synthetics fibres (polyester fiber, trevira) or blends with cotton.	2.0	*	Yes	*	*	*	*	*	*	*	*	800(1)
Daily load 60 min Cold water; 40°C	 	Slightly or normally soiled clothes made of cotton or synthetic.	2.5	—	Yes	*	*	—	—	—	*	*	*	1000
Quick wash 30 min 30°C	 	Shortly worn outer clothing made of cotton, polyester fibre, polyesteramine and blends with fabric.	2.5	—	Yes	*	*	—	—	—	*	*	*	1000
Delicate 30°C		Curtain and skirts, blouses, coats made of delicate materials.	1.5	*	Yes	*	*	—	*	—	—	*	*	800(1)
Wool Cold water; 40°C		Only woolens labeled with the woolmark and identified as machine washable. If the "Rinse hold" function is chosen, do not leave the clothes to soak for too long.	1.0	—	Yes	*	*	—	—	—	—	*	*	800(1)
Handwash Cold water		Clothes made of linen, silk, viscose and labeled as handwashable If the "Rinse hold" function is chosen, do not leave the clothes to soak for too long. The Gentle Spin function will operate when the program ends.	1.0	—	Yes	*	*	—	—	—	—	*	*	400 (2)
Rinse + Spin	—	Same as the last rinse and spin in the "Cotton" programme.	5.5	—	Yes	*	*	—	—	—	—	*	*	1000
Spin	—	Intensive Spinning, same as the spin cycle in the "Cotton" programme.	5.5	—	—	—	*	—	—	—	—	—	*	1000
Gentle spin	—	Gentle spinning, same as the spin cycle in the "Cotton" programme.	1.0	—	—	—	*	—	—	—	—	—	*	800(1)
Drain	—	Drain only no - spinning. It can be treated as no-spin option after "Rinse Hold" to end programme.	—	—	—	—	—	—	—	—	—	—	—	—

* Optional/Yes: dosing required

(1) For caring garment quality, spin speed is restricted to 800rpm in this programme.

(2) For caring garment quality, spin speed is restricted to 400rpm in this programme.

Whirlpool is a registered trademark of Whirlpool USA

Basic Programme Chart



Performance Data

Programme	Temperature (°C)	Load (kg)	Programme Duration (approximately) (hour:minute)
Cotton※※	95	5.5	2:15
Cotton※※※	60	5.5	2:10
Cotton	40	5.5	1:59
Cotton	30	5.5	1:55
Cotton	Cold water	5.5	1:54
Synthetics	40	2.0	1:15
Synthetics	Cold water	2.0	1:10
Daily Load 60 min	40	2.5	0:55
Daily Load 60 min	Cold water	2.5	0:50
Quick Wash 30 min	30	2.5	0:30
Delicate	30	1.5	0:40
Wool	40	1.0	0:46
Wool	Cold water	1.0	0:41
Handwash	Cold water	1.0	0:35

Performance data is measured in normal condition in compliance with IEC/EN60456 GB/T4288 standard. Energy and water consumption of domestic use is subject to water pressure, temperature and the type of wash.

※ The actual programme time may deviate from the values in the table. The washing programme will be adjusted automatically according to the washing condition.

※※ To reduce the water temperature for preventing of wrinkles, cold water is added automatically after the main wash cycle and before draining process.

※※※ Standard Testing for Washing Programme

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergents as described in the "Detergents and softener" section in the User Manual and close the door after adding detergents.

1. Turn the programme selector knob to the desired programme and temperature.
2. The remaining time display shows the duration of the chosen programme (in hours and minutes) and the indicator next to the "Start / Pause" button is flashing.
3. The predefined spin speed indicator corresponding to the selected programme lights up, display shows programme time.

SELECT DESIRED FUNCTION

Press the desired option button and the corresponding indicator lights up. When the combination of selected programme and the desired additional option is not practicable, the option will be cancelled and the indicator switches off immediately.

"Eco"

- With a prolonged washing duration and lower washing temperature, a desirable washing performance can be obtained and reduces energy consumption.

"Prewash"

- Suitable for heavily soiled loads (for example with sand and dust) and the programme duration is prolonged for 15 minutes.

"Easy Ironing"

- Can be used together with "Cotton", "Synthetics" programmes to make ironing easier.
- To avoid creasing, water level is increased and gentle spin programme is applied.

"Intensive Rinse"

- Adding one more rinsing programme and extend its rinsing duration.
- This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

"Rinse Hold"

- The laundry remains in the last rinse water without proceeding to the spin cycle to avoid creasing and fading
- This function is recommended for washing synthetic and delicate clothes.
- This function is very effective to delay the spinning time.

Note: When the "rinse-hold" light in the programme sequence is on and the indicator next to "Start / Pause" button flashes, the programme switches to rinse hold sequence and the programme stops.

How to stop the "Rinse Hold" Programme

- Press the "Start / Pause" button, the washing machine automatically switches to the spinning process of the selected programme option, and the programme ends.
- If you do not want to spin the clothes, please turn the programme selector knob to the position of "Drain" programme and press the "Start / Pause" button.

Variable Spin

- Every programme has an automatic predefined maximum spin speed
- Press button to select desired spin speed.
- If the spin speed "0" is selected, the final spinning is cancelled. Draining will occur when the programme ends, but spinning continues during rinsing programme.

Start Delay Function

Start Delay Function allows running the machine at your convenience, for example during night time when electricity is cheaper.

- Select programme, temperature and additional function
- Press the Start Delay button to select the delay time by 1 to 23 hours
- Press the "Start / Pause" button, the indication light is on and the machine starts the count down.
- Start Delay indication light will go off when the programme starts, and the remaining time is shown on the digital display
- By pressing the "Start / Pause" button, and pressing the Start Delay button again, the preset hours of the Start Delay can be adjusted.

Cancel the Start Delay function

- Before pressing the "Start / Pause" button, turn the programme selector knob to another programme position, or press the Reset button
- After pressing the "Start / Pause" button, press and hold the Reset button for 3 seconds, the Start Delay time will disappear from the display.

Programme Start

Open the tap and press the "Start/Pause" button to start the wash programme. The indicator next to the "Start/Pause" button lights up. The programme sequence indicator will show the progress of the current Prewash, wash programme. The sequence indication runs from left to right to show Prewash, Wash, Rinse, Spin/Drain functions. The Remaining Time Display will show the programme remaining time. With the variations in the type of clothes and temperature of the inlet water, the control will recount the remaining time at a certain stage when the programme is running. At the same time, the display will show the corresponding icons.

"Door Open" Indicator

Before the programme starts and after it ends, the indicator will light up and the door of the machine can be opened. When the Programme is running, the door will remain locked and cannot be forced open or the machine will be damaged. If you need to open the door urgently during the programme is running, please refer to the Chapter of "Cancel / Reset A Running Programme Before It Ends".

Red Indicator for Warning

Water tap closed

The appliance has no or insufficient water supply. Open the water tap; if the indicator still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

Clean Pump

Waste water is not pumped out. Check whether the drain hose is kinked or clogged. Clean the filter if it is the latter case. Please refer to the chapter of "Removing the filter" in the Instructions for Use.

Programme Ends

- All of the lights of the programme sequence are off. "Door Open" indicator lights up.
 1. Turn the Programme selector to the "Off" position.
 2. Close the water tap.
 3. Open the door and unload the machine.
 4. Leave the door ajar to allow the drum to dry out.

Change Programme and Options after the Programme Starts

- 1 Press the "Start/Pause" button to pause the Programme. The indicator flashes.
2. Select the new programme and any additional function. Select the spin speed if necessary.
3. Press the "Start/Pause" button again to start a new programme. The new Programme continues at the same position where the previous Programme was interrupted, so no additional detergent is needed.

Cancel / Reset A Running Programme Before It Ends

Press the "Reset" button to cancel a programme before the programme ends

- Press the "Reset" button for at least 3 seconds. Any water that remains in the appliance will be drained out before the door is opened.

Whirlpool is a registered trademark of Whirlpool USA
461970427561