

ZTE



Light, make it possible

Quick Start Guide

Light

使用手冊

法律聲明

本資料著作權未經許可，任何單位或個人不得以任何方式摘錄、複製或翻譯。

侵權必究。

對本手冊中的印刷錯誤及與最新資料不符之處我們會及時改進。這些改動不再事先通知，但會編入新版手冊中，保留最終解釋權。

版本號：V1.0

發佈日期：20101206

目錄

1. 基本知識	12
1.1 簡介.....	12
2. 安全事項	13
2.1 安全須知.....	13
2.2 安全警告和注意事項.....	13
2.3 駕駛車輛時使用移動設備注意事項.....	14
2.4 醫用設備及公共醫療場所.....	14
2.5 您的移動設備.....	15
2.6 可能引起爆炸的地點及爆破區.....	16
2.7 電子設備.....	17
2.8 汽車安全.....	17
2.9 飛機上的注意事項.....	18
2.10 電池使用.....	18
2.11 SAR.....	19
2.12 使用充電器的注意事項.....	19
2.13 清潔和維護.....	21

3.	免責聲明	22
4.	移動設備概觀	24
4.1	簡述.....	24
4.2	按鍵說明.....	27
4.3	技術參數.....	28
4.4	指示圖示說明.....	29
5.	開始使用	33
5.1	準備事項.....	33
5.1.1	安裝 SIM/記憶卡和電池.....	34
5.1.2	充電.....	38
5.1.3	開/關機.....	40
5.1.4	切換為睡眠模式.....	41
5.1.5	喚醒您的移動設備.....	41
5.2	螢幕控制.....	43
5.3	首頁.....	44
5.3.1	首頁的延伸介面.....	45
5.3.2	設定桌布.....	45

5.3.3	增加首頁顯示項目.....	46
5.3.4	刪除首頁顯示項.....	47
6.	電話功能.....	48
6.1	撥打電話.....	48
6.1.1	透過撥號器撥打電話.....	48
6.1.2	使用聯絡人撥打電話.....	49
6.1.3	從通話記錄撥打電話.....	49
6.1.4	從簡訊中撥打電話.....	49
6.1.5	撥打緊急電話.....	50
6.1.6	撥打國際長途電話.....	51
6.2	接聽電話.....	51
6.2.1	接聽來電.....	51
6.2.2	拒接來電.....	52
6.2.3	開啓免持.....	53
6.2.4	開啓靜音.....	53
6.2.5	保持電話.....	54
6.2.6	掛斷電話.....	54

6.3	通話設定	54
7.	聯絡人.....	56
7.1	開始使用聯絡人.....	56
7.2	管理聯絡人.....	56
7.2.1	匯入/匯出聯絡人.....	56
7.2.2	新增聯絡人.....	57
7.2.3	新增聯絡人至我的最愛	57
7.2.4	搜尋聯絡人.....	58
7.2.5	編輯聯絡人.....	58
7.2.6	刪除聯絡人.....	59
7.2.7	群組.....	60
8.	輸入介面.....	61
8.1	螢幕虛擬鍵盤簡介	61
8.1.1	Android 鍵盤.....	61
8.1.2	TouchPal 鍵盤	62
8.2	使用螢幕全鍵盤.....	65
8.2.1	輸入法簡介.....	65

8.2.2	中文注音輸入法	65
8.2.3	中文手寫輸入法	65
8.2.4	英文輸入法	66
8.3	文字設定	67
9.	訊息	70
9.1	發送簡訊	70
9.2	發送多媒體訊息	70
9.3	管理訊息和對話	71
9.3.1	回覆訊息	72
9.3.2	刪除訊息或對話	72
9.4	訊息設定	73
10.	電子郵件	75
10.1	設定電子郵件帳號	75
10.2	發送郵件	77
10.3	回覆或轉寄郵件	78
10.4	郵件設定	78
11.	網路應用	80

11.1	網路連接.....	80
11.1.1	網路連接的方法.....	80
11.1.2	GPRS/3G 網路.....	80
11.1.3	Wi-Fi 網路.....	82
11.2	使用瀏覽器.....	83
11.2.1	打開瀏覽器.....	83
11.2.2	打開網頁.....	84
11.2.3	瀏覽選項.....	84
11.2.4	使用書籤.....	85
11.2.5	瀏覽器設定.....	86
11.3	藍牙連接.....	88
11.3.1	啓用/關閉藍牙功能.....	89
11.3.2	設定藍牙屬性.....	89
11.3.3	使用藍牙與其他設備配對.....	89
12.	多媒體功能.....	91
12.1	相機.....	91
12.1.1	打開相機.....	91

	12.1.2	拍照.....	92
	12.1.3	相機設定.....	92
12.2		攝錄影機.....	94
	12.2.1	打開攝錄影機.....	94
	12.2.2	攝像.....	94
	12.2.3	攝錄影機設定.....	95
12.3		收音機.....	95
	12.3.1	打開收音機.....	96
	12.3.2	收聽節目.....	96
12.4		音樂.....	97
	12.4.1	打開音樂播放器.....	97
	12.4.2	欣賞音樂.....	97
	12.4.3	新建播放清單.....	98
	12.4.4	管理播放清單.....	98
	12.4.5	設定音樂為來電鈴聲.....	99
12.5		影片.....	100
	12.5.1	打開影片播放器.....	100
	12.5.2	欣賞影片.....	100

12.6	圖片庫	101
12.7	錄音程式	101
12.7.1	打開錄音程式	101
12.7.2	錄製聲音檔案	101
13.	移動設備設定	103
13.1	基本設定	103
13.1.1	設定日期與時間	103
13.1.2	顯示設定	104
13.1.3	聲音設定	105
13.1.4	語言設定	108
13.1.5	無線網路設定	109
13.2	安全設定	111
13.2.1	螢幕解鎖圖案	111
13.2.2	使用 PIN 碼	112
13.2.3	使用安全認證	113
13.3	儲存管理	114
13.3.1	microSD 卡儲存管理	114

	13.3.2	移動設備儲存空間管理	115
13.4		應用程式設定	116
	13.4.1	管理應用程式	116
13.5		恢復出廠設定	118
13.6		其他設定	118
	13.6.1	搜尋設定	118
	13.6.2	文字轉語音設定	119
14.		其他應用	120
	14.1	鬧鐘	120
		14.1.1 設定鬧鐘	120
	14.2	記事本	121
	14.3	計算機	121
	14.4	SIM 工具箱	121
	14.5	工作管理員	121
	14.6	檔案管理員	122
	14.7	碼錶	122
15.		簡單故障排除	123

1. 基本知識

1.1 簡介

感謝您購買Light（即移動互聯網設備），為使該產品使用在最佳狀態，請詳細閱讀本手冊，閱讀後請保留備用。

手冊中使用的圖片僅作為功能示意圖，可能與實際產品有所不同，請以實物為準。如果因為功能升級引起手冊中所述內容與實際產品不符，請以公司後續發佈的訊息為準。對本手冊中的列印錯誤及與最新資料不符之處我們會及時改進。這些改動不再事先通知，但會編入新版手冊中，本公司保留最終解釋權。

2. 安全事項

2.1 安全須知

- 如果您的移動設備丟失或被竊，請按系統商相關規定掛失 SIM 卡，這將使您免受他人冒打電話帶來的經濟損失。
- 爲使您的移動設備免受誤用，請採取防範措施，如：
 - 開啓SIM卡的 PIN碼。
 - 儘量隨身攜帶。

2.2 安全警告和注意事項

- 請正確使用移動設備。撥打或接聽電話時，按照使用有線電話的方式手握移動設備，然後直接對著話筒講話，並確保移動設備與身體保持適當距離。

- 通話期間請勿觸摸或覆蓋天線區域（移動設備背部上方區域），以免影響通話效果、耗費更多電量，從而減少通話時間和待機時間。
- 有些人在閃爍的燈光下（如看電視），可能易於發作癲癇或眩暈。如果您有過類似的發病史，在玩移動設備遊戲或使用閃燈功能前請先向醫生諮詢。
- 請將移動設備放在兒童難以觸及的地方，以免兒童將其當成玩具，造成人身傷害。

2.3 駕駛車輛時使用移動設備注意事項

駕車時請遵照相關交通法規，注意交通安全。

2.4 醫用設備及公共醫療場所

- 在某些醫用設備如心律調整器使用移動設備時需注意：保持開著的移動設備與這些醫用設備之間至少 20cm 的距離；不要把移動設備放在胸前口袋中；應使用與佩戴心律調整器的不同側的耳朵聽電話，以減少潛在干擾；必要時請關閉移動設備。如有其他問題請在使用之前向

該醫用設備生產廠家諮詢瞭解。移動設備可能會對某些助聽器產生干擾，如果出現了這類干擾，請與助聽器製造商聯繫尋求解決辦法。

- 如果您還有其他個人醫用設備，請向這些設備製造廠家諮詢，以確定這些設備是否能夠遮罩周圍的射頻信號。
- 在醫院或休養院等有特殊要求的場所，請注意移動設備的使用限制。若有要求，請關閉移動設備。

2.5 您的移動設備

- 您只能使用原廠的或經原廠認可的配件。使用任何未經認可的配件，都有可能影響移動設備的使用性能，違反本移動設備的保固條款以及國家關於通信終端產品的相關規定，甚至導致人身危害。
- 清潔移動設備時請先關機，並使用乾淨的防靜電布。清潔移動設備表面時注意不要使用清洗劑等化學製劑。
- 您的移動設備會產生電磁波，請不要放置在磁存儲媒質附近，如電腦磁片等。

- 在電視、電話、收音機和個人電腦等電器設備附近使用移動設備可能會引起干擾。
- 請不要將您的移動設備暴露在強烈日光之下，以免過度受熱而損壞。
- 請避免各種液體進入移動設備內部，以免造成損壞。
- 請不要扔放、敲打移動設備，粗暴地對待移動設備會毀壞內部電路板。
- 請不要與其他不配套的設備連接。
- 請勿拆卸移動設備。
- 請不要將易燃、易爆物品與移動設備放在一起，以免發生危險。

2.6 可能引起爆炸的地點及爆破區

- 在進入因潛在因素可能引起爆炸的區域之前（如油料倉庫，化學工廠等有爆炸性生產過程的），如果移動設備不是專門為這種區域使用而設計的，請您先關閉移動設備。

- 在這類區域，請不要取出、安裝電池，也不要給移動設備充電，因為在這些環境中，火花可能引起爆炸或火災，造成人身傷害。
- 爲了避免干擾爆破作業，在爆炸區的電雷管附近，以及貼有關閉移動設備等類似標語指示的地方，請遵守相關規定關閉移動設備。

2.7 電子設備

使用包括移動設備在內的射頻設備可能會對一些遮蔽性能不好的電子設備造成干擾，如機動車輛中的某些電子系統，必要時使用移動設備前請諮詢該設備製造商。

2.8 汽車安全

- 安全氣囊、剎車、速度控制系統與油料噴射系統應不受無線傳輸的影響，如您遇到如上問題，請與汽車經銷商聯繫。但請注意不要將移動設備放在安全氣囊上方或安全氣囊展開後能夠觸及到的區域，以免氣囊膨脹時產生的外力推動移動設備對車主造成傷害。

- 在加油時請關閉您的移動設備，同樣的情況也適用於禁止使用雙向無線設備的地方。

2.9 飛機上的注意事項

在飛機起飛前請關閉移動設備。為防止對飛機通信系統的干擾，在飛行中禁止使用移動設備進行無線通信。在飛機未起飛時使用移動設備應按照安全規定取得機組人員許可。

2.10 電池使用

- 請不要將電池短路，以免損壞電池、產生熱量及引起火災。
- 禁止將電池放在高溫下或丟入火中，以免引起爆炸。
- 請勿試圖拆開電池。
- 如果一段時間內不使用電池，請將其放電並存放在陰涼乾燥的地方。
- 當電池和充電器已經損壞或明顯老化時請停止使用。

- 請將廢舊電池返還給供應商或是放在指定的回收點，而不能放在家庭垃圾中。



警告：

假如電池破損，應避免接觸裏面的物質，若被沾染到皮膚，應用大量的清水沖洗，必要時請尋求醫生的幫助。

2.11 SAR

[注意] 減少電池波影響，請妥適使用。

本機型Light送測之SAR最大實測值為(WCDMA) **1.54** W/Kg。符合電信總局2.0W/Kg規範值。

2.12 使用充電器的注意事項

- 為提高充電效率和保證充電安全，請使用 100V-240V 交流電。
- 禁止短路充電器，否則會引起觸電、冒煙和充電器損壞。

- 請不要在電源線損壞的情況下使用充電器，否則可能會導致起火和觸電。
- 請及時清潔堆積在電源插座上的灰塵。
- 請不要把盛水的容器等放在充電器旁，以免水濺出造成充電器過熱、漏電和故障。
- 請不要拆卸或改裝充電器，否則會導致人身傷害、觸電、起火和充電器損壞。
- 請不要在浴室等高濕度的地方使用充電器，否則會導致觸電、起火或充電器損壞。
- 請不要用濕手接觸充電器、電線和電源插座，否則可能會導致觸電。
- 不要將重物放在電源線上或試圖改裝電源線，否則可能會造成觸電或起火。
- 在清潔和維護前請先將電源插頭從插座裏拔出。拔插頭時要抓住充電器，硬拉電源線會損壞電源線，可能引起觸電或起火。

- 請不要在下列地方充電：陽光過強溫度過高的地方；潮濕、有灰塵的地方或振動大的地方（容易引起故障）。

2.13 清潔和維護

- 請保持本產品的乾燥。雨水、濕氣和各種液體都可能腐蝕電子線路，造成產品的損壞。
- 請用柔軟的乾布清潔本產品。
- 請勿用酒精、稀釋劑或苯等溶液擦拭本產品。

3. 免責聲明

- 對於超越我們責任能力範圍的自然災害（如：地震、水災等）而導致的損失，本公司不承擔任何責任。
- 在任何情況下，對於伴隨本產品的使用而帶來的任何損失（包括依照手冊說明使用而導致的損失），諸如：公司利潤的損失、信譽損失、營業中斷、或存儲資料的丟失/改變等，以及因此導致的任何特別的、意外的、連帶的或間接的損失，本公司不承擔任何責任。
- 對由於不當使用非本公司指定的通訊硬體或軟體而導致的損失，本公司不承擔任何責任。
- 對於透過使用本產品獲得的訊息、資料、檔案或其他產品與服務，本公司不提供任何形式的保證與技術支援，且對於用戶對這些訊息、資料、檔案或其他產品與服務的使用，不承擔任何責任。
- 對於透過本產品使用的第三方軟體，本公司不承擔任何形式的擔保與技術支持責任。


- 本手冊的內容依照“現狀”提供。除非適用法律另有規定，否則本公司不對本文檔的準確性、可靠性和內容做出任何類型的、明確的或默許的保證。


4. 移動設備概觀

4.1 簡述

Light 移动互联网设备支援 WCDMA2100/1900/900 、 GSM900/1800/1900網路和GPRS，並且可在不同網路間切換。

Light性能強大、功能豐富。借助於最新的3G技術帶來的高速寬頻連接，它可以將您的生活與他人即時分享。

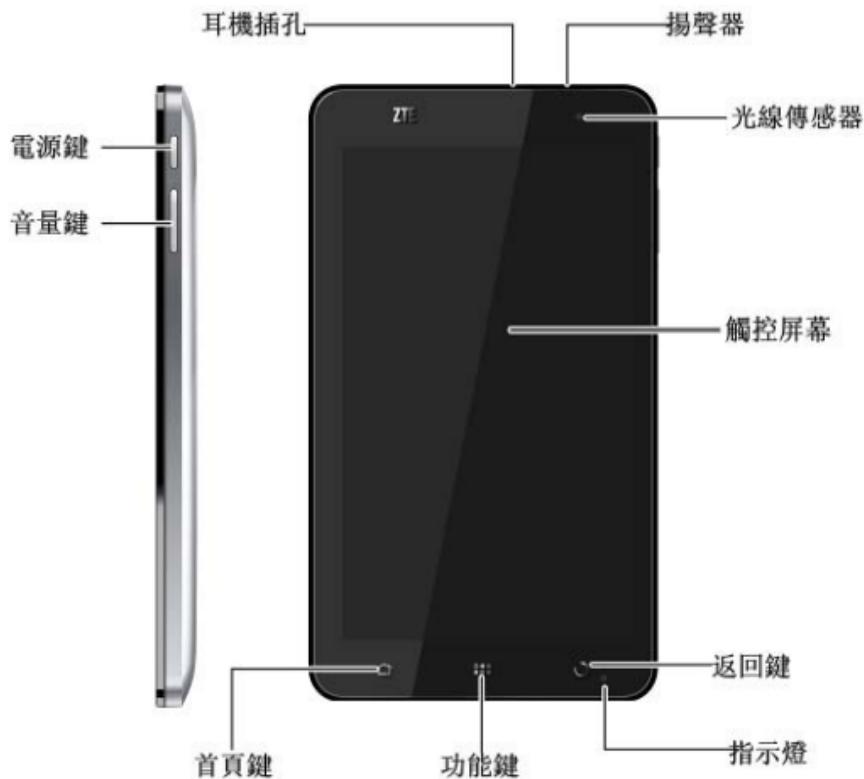

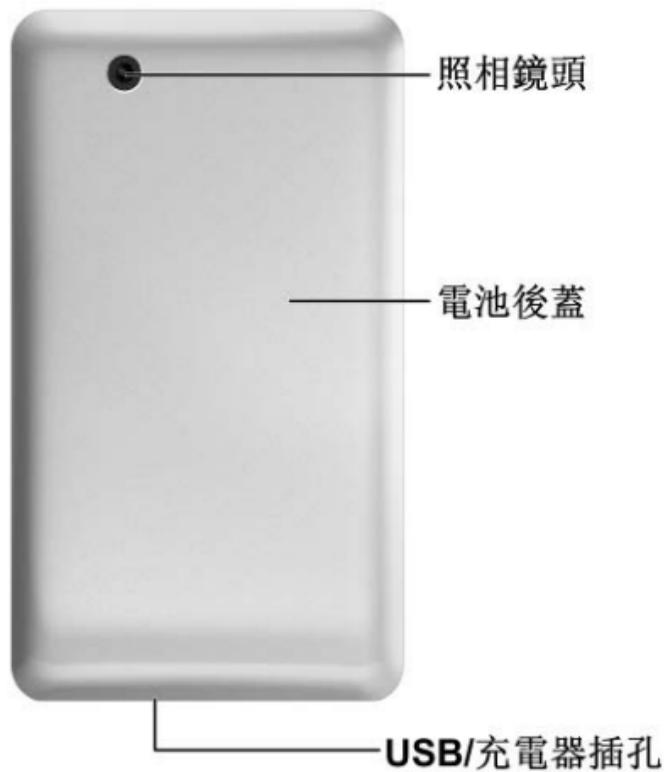

4.2 按鍵說明

按鍵	功能
電源鍵	<ul style="list-style-type: none">• 長按打開移動設備選項功能表。透過功能表，您可以啓用靜音模式、振動模式或飛航模式，您也可以選擇關機。• 切換移動設備至睡眠模式。• 從睡眠模式下喚醒移動設備。
首頁鍵	<ul style="list-style-type: none">• 從任何介面返回首頁。• 長按打開近期使用過的程式列表。
功能鍵	打開當前介面下的功能表選項。
返回鍵	返回上一介面。
音量鍵	調整音量大小。

4.3 技術參數

型號	Light	
尺寸	192mm×110mm×12.6mm	
重量	389g（包含標準電池）	
螢幕	26W 800*480像素	
照相機	鏡頭感測器類型	CMOS
	畫素	320萬
支持擴展卡	microSD卡 	
記憶卡最大容量	32GB	
電池	容量	3400mAh

	待機時間	300小時（取決於網路狀況）
	語音通話時間	16小時（取決於網路狀況）
瀏覽器版本	WAP2.0	

4.4 指示圖示說明

狀態圖示

	GPRS可用		無信號
	GPRS使用中		信號強度
	EDGE可用		漫遊
	EDGE使用中		喇叭靜音

	3G可用		通話靜音
	3G使用中		未插入SIM卡
	HSPA可用		飛航模式
	HSPA使用中		藍牙功能開啓
	電量低		GPS開啓
	電量極低		GPS已連接
	電量滿		USB已連接
	充電中		連接至Wi-Fi網路

	振動模式		鬧鐘開啓
	免持功能開啓		耳機已插入(耳機模式)

通知圖示

	新郵件		新即時訊息
	新簡訊		新多媒體訊息
	新語音訊息		音樂播放中
	未接來電		數據下載中
	通話中		資料下載完成
	通話保持中		數據上傳中

	來電轉接		更多未顯示的通知訊息
	簡訊/多媒體訊息發送失敗		即將到期的備忘訊息

5. 開始使用

5.1 準備事項


使用Light前，您需要安裝SIM卡和電池。在使用相機、圖庫等功能時，還需要事先插入記憶卡。


- **SIM 卡**：SIM 卡中儲存著您的本機號碼、電話簿、簡訊、系統商服務訊息和移動電視等服務訊息。這些功能只有在將卡插入移動設備後才能使用。如果沒有插入有效的 **SIM** 卡，移動設備將只能撥出緊急電話。
- **記憶卡**：**microSD** 記憶卡給您的移動設備提供了極大的記憶體容量，讓您能夠儲存各類多媒體資料，包括影像、相片、**MP3** 音樂檔和鈴聲。您也可以使用此記憶卡來儲存其他檔。
- **電池**：新移動設備電池可以立即使用。爲了獲得最佳電池性能，請在前三次充電時確保放完電後再充滿。

5.1.1 安裝 SIM/記憶卡和電池


在安裝SIM卡、記憶卡或電池之前，請保證移動設備處於**關機狀態**。

1. 拆下電池後蓋。

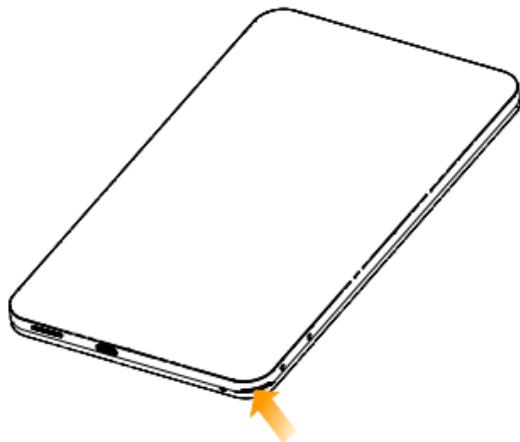


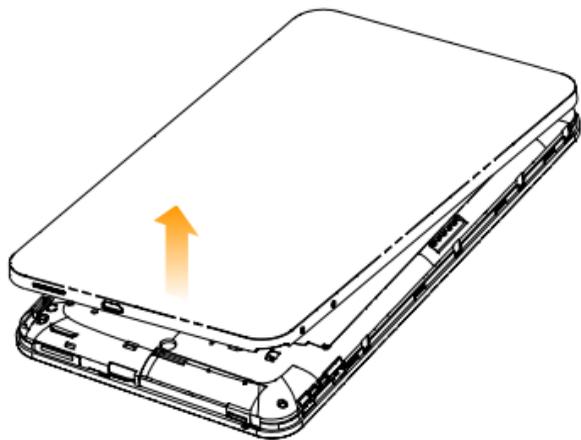

2. 將SIM卡的金屬接點朝下，按箭頭所示的方向和位置插入卡槽，SIM卡缺口方向依照卡槽形狀。

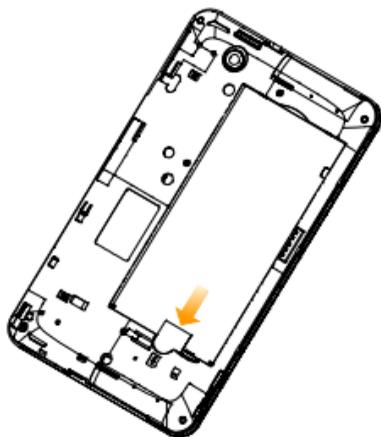


3. 按圖中所示將記憶卡金屬接點朝下、缺角向左插入卡槽，放入記憶卡槽。

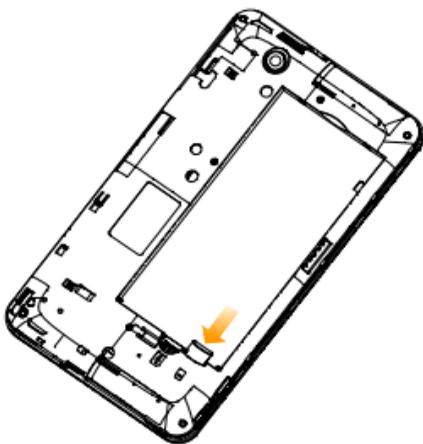

提示：

microSD 為 SD Card Association 的商標。

- 按箭頭指示方向將電池裝入電池槽，先插入有金屬點的一端。

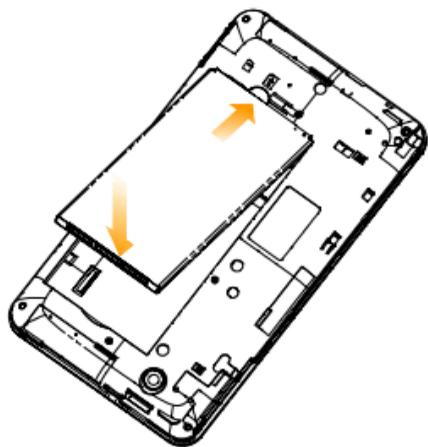


5. 裝上電池後蓋。

5.1.2 充電

電池在第一次拆封時並未完全充電，請將剩餘電量耗盡後再進行第一次充電。為電池充電時，第一次請充電八小時，之後每次充電至少兩小時，以發揮電池的最佳效能。

您可以使用隨機附帶的充電器進行充電。方法如下：

1. 將充電器的接線連接到移動設備USB插孔。

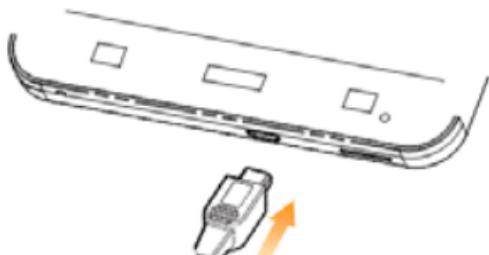

2. 將充電器連接至標準的電源插座。
3. 充電完成後，將充電器從插座拔出並取下移動設備。

溫馨提示：

您也可以使用隨機附帶的**USB**傳輸線，一端連接移動設備，另一端直接插入電腦的**USB**介面進行充電。

提示：

- 電池電量低時，移動設備的指示燈會顯示紅色。充電過程中，指示燈顏色會隨電量的變化而改變：

指示燈顏色	電量
紅色	電量低於10%
橙色	電量大於10%，而低於90%
綠色	電量大於90%

- 充電僅能在 0°C 至 45°C 的溫度範圍內進行。
- 使用充電器對電池進行充電時，完全充滿需要 2~3 小時。

5.1.3 開/關機

1. 要開機的話，長按**電源鍵**直到螢幕顯示開機畫面。
2. 如有提示要求，請輸入您的PIN碼。
3. 要關機的話，長按**電源鍵**選擇**關機**。

提示：

PIN（個人識別碼）是由您的系統商提供的密碼。如果**PIN**碼開啓，您需要這個密碼才能使用**SIM**卡。移動設備接受輸入的**PIN**碼後，便會自動搜尋指定的網路。搜尋的過程可能需要幾秒鐘。

5.1.4 切換為睡眠模式

睡眠模式是一種省電模式，此時移動設備螢幕會關閉，可以防止螢幕或按鍵的錯誤操作。如果您將移動設備閒置一定的時間，它將自動切換為睡眠模式。您還可以透過以下方法啓動睡眠模式：

按下**電源鍵**。

5.1.5 喚醒您的移動設備

移動設備在切換至睡眠模式後，螢幕會關閉並且會被鎖定。此時如果您需要使用移動設備，請喚醒移動設備並對螢幕進行解鎖操作：

1. 按**電源鍵**，此時您的移動設備螢幕已被啓動。
2. 點擊螢幕左下方的藍色塊，將其向右拖動解鎖螢幕。



溫馨提示：

如果您設定了螢幕解鎖圖案(詳情請見*移動設備設定-安全設定-螢幕解鎖圖案*一節)，您還需要繪製解鎖圖案。

5.2 螢幕控制

您可以透過螢幕上的一系列操作來控制您的移動設備。

- 點擊：您可以透過點擊螢幕選擇螢幕上的項目、打開應用、使用鍵盤輸入或按下螢幕上的按鍵。
- 滑動：您可以透過在螢幕上水準或垂直滑動，在螢幕的頁面上或左右滾動顯示。
- 長按：您可以透過長按某些項目獲得其可用功能表。在功能表中的程式介面上長按圖示兩秒不放，可以將該應用的快捷方式新增至首頁主螢幕。
- 拖曳：您可以透過拖曳螢幕上的某些項目實行一定的操作。
- 旋轉：您可以透過翻轉移動設備切換螢幕的橫豎螢幕顯示。橫豎螢幕顯示功能僅在某些介面有效，例如文字輸入介面、瀏覽網頁介面等等。

5.3 首頁

Light開機並解鎖螢幕之後，螢幕所顯示的介面即為Light的首頁。



首頁介面除上圖所顯示的快捷方式圖示外，您可以根據需要新增或刪除資料夾、其他捷徑或小工具。當首頁的空間使用完畢之後，您可以在螢幕上水準滑動打開首頁的延伸介面並新增所需內容。

5.3.1 首頁的延伸介面

延伸介面用於存放更多的快捷方式、部件或檔夾。您可以在首頁透過水準滑動螢幕打開延伸介面。



5.3.2 設定桌布

1. 按**首頁鍵**返回首頁介面。
2. 按**功能鍵**並選擇**桌布**。

3. 選擇桌布所在位置：**即時桌布**，**圖片庫**，或**桌布**。

溫馨提示：

在**即時桌布**內，您可以選擇動態桌布。

4. 選中所需桌布後，點擊**儲存**或**設定桌布**。

5.3.3 增加首頁顯示項目

1. 按**首頁鍵**返回首頁介面。
2. 按**功能鍵**並選擇**增加**。
3. 選擇需要新增項目的類別。
4. 選擇所需新增的項目。

溫馨提示：

您還可以在**首頁鍵**按下打開應用程式介面後，長按欲增加圖示兩秒不放，可以將該應用新增至首頁主螢幕。

5.3.4 刪除首頁顯示項

1. 按**首頁鍵**返回首頁介面。
2. 長按需要刪除的顯示項，直至  出現。
3. 將該顯示項拖動至  。



6. 電話功能

6.1 撥打電話

6.1.1 透過撥號器撥打電話

1. 按**首頁鍵**點擊  或**首頁鍵** >  > **撥號**打開撥號器。
2. 點擊螢幕輸入所需號碼。

如果輸入有誤，您可以點擊  刪除游標前的一個數字。按住該圖示可以刪除所有數位。輸入過程中，您的**Light**會自動顯示聯絡人或通話記錄中所匹配的號碼。您可以按  隱藏撥號鍵盤，以便查看更多的匹配號碼。

3. 從匹配列表中選擇所需號碼，點擊**撥號**。或在完全輸入號碼後點擊 。

6.1.2 使用聯絡人撥打電話

1. 按**首頁鍵**點擊  或**首頁鍵** >  > **聯絡人**打開聯絡人介面。
2. 您可以按**功能鍵** > **搜尋**搜尋所需聯絡人。
3. 點擊所需聯絡人。
4. 點擊  撥號。

6.1.3 從通話記錄撥打電話

1. 按**首頁鍵**點擊  或**首頁鍵** >  > **撥號**打開撥號器。
2. 點擊  打開通話記錄列表。
您也可以從聯絡人介面選擇**通話記錄**標籤頁打開通話記錄列表。
3. 點擊所需的通話記錄後方的  撥號。

6.1.4 從簡訊中撥打電話

1. 按**首頁鍵** >  > **簡訊**打開簡訊介面。

2. 選擇並打開所需的簡訊或會話。
3. 點擊所需的撥出的號碼。

如果簡訊中包含多個號碼，Light會自動顯示**選取操作**的功能表提示您選擇所需號碼。

4. 點擊 。

6.1.5 撥打緊急電話

與任何移動設備一樣，Light也使用無線電信號、無線網路和陸上網路以及用戶設定功能，在緊急狀況下可使用移動設備進行緊急呼叫。但是，因不能保證所有情況下網路都能連接成功，故在緊急情況下，不能將本移動設備作為唯一的聯繫方式。

1. 開啓移動設備後，點擊  或**首頁鍵 > 撥號**打開撥號器。
2. 輸入當地的緊急號碼 (例如：112/110/119/911或其他正式緊急號碼)。各地的緊急號碼有所不同。
3. 點擊  撥號。

6.1.6 撥打國際長途電話

提示：

國際長途電話功能取決於電信業者提供的服務和網路狀況。

1. 按**首頁鍵** > **撥號**或**首頁鍵** >  > **撥號**打開撥號器。
2. 長按  輸入+。
3. 輸入國家代碼、區號以及電話號碼。
4. 點擊 。

6.2 接聽電話

6.2.1 接聽來電

當接到來電時，移動設備會發出鈴聲、動畫或振動提示取決於當前的模式和設定。如果來電方啓用了**CLI**（來電號碼顯示）功能，您將會看到來電方的電話號碼。

在來電提示介面，向右拖拽  圖示接聽來電。


提示：

插入耳機後，按耳機線控按鍵也可以接聽來電。



6.2.2 拒接來電

在來電提示介面，向左拖拽  圖示拒接來電。

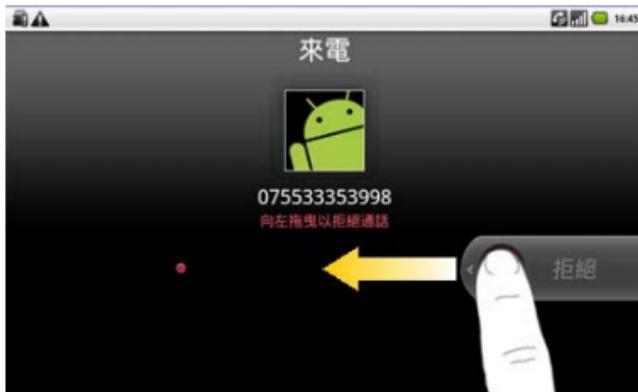

6.2.3 開啓免持

通話過程中，您可以點擊  開啓免持功能。

免持功能開啓後， 圖示將會出現在指示圖示框內。

6.2.4 開啓靜音

通話過程中，您可以點擊  開啓靜音關閉本機聲音。

靜音功能開啓後， 圖示將會顯示在指示圖示框內。

6.2.5 保持電話

通話過程中，按**功能鍵** > ，點擊  開啓撥號鍵盤。

保持通話後， 圖示將會顯示在指示圖示欄內。

6.2.6 掛斷電話

通話過程中，您可以點擊  掛斷電話。

6.3 通話設定

按**首頁鍵** > **功能鍵** > **設定** > **通話設定**，您可以對通話屬性進行設定。

固定撥號	管理固定撥號功能。您可以啓用/禁用固定撥號，更改PIN2碼，或查看固定撥號清單。
語音信箱	語音信箱服務 查看選擇語音信箱服務。

	語音信箱設定	查看或更改語音信箱號碼。
其他通話設定	DTMF信號音	設定DTMF音的長度。
	GSM通話設定	開啓/關閉來電轉接、來電待接和選擇是否發送本機號碼。
	小區廣播	開啓/關閉小區廣播接收功能、設定小區廣播頻道和語言。

7. 聯絡人

7.1 開始使用聯絡人

透過聯絡人功能，您可以查看或管理您的聯絡人。

按**首頁鍵** > **聯絡人**進入聯絡人介面。

聯絡人介面可以分為**通話記錄**、**聯絡人**、**我的最愛**和**群組**四個標籤頁。

7.2 管理聯絡人

7.2.1 匯入/匯出聯絡人

1. 按**首頁鍵** > **聯絡人**打開聯絡人介面。
2. 按**功能鍵** > **匯入/匯出**。
3. 選擇從**SIM卡**匯入/匯出到**SIM卡**/從**SD卡**匯入/匯出至**SD卡**。
4. 選擇需要匯入/匯出的聯絡人，必要的話點擊**完成/確定**。

從SIM卡中匯入聯絡人時，您也可以點擊**功能鍵** > **全選**完成SIM卡所有聯絡人的匯入。

7.2.2 新增聯絡人

1. 按**首頁鍵** > **聯絡人**打開聯絡人介面。
2. 按**功能鍵** > **新增聯絡人**。
3. 選擇新聯絡人的儲存位置。
4. 輸入姓名、電話號碼。如果您選擇的儲存位置為**電話**，您還可以點擊  新增該聯絡人的圖示，或新增電子郵件、即時訊息、郵寄地址等訊息。
5. 點擊**完成**。

7.2.3 新增聯絡人至我的最愛

1. 按**首頁鍵** > **聯絡人**打開聯絡人介面。
2. 滾動列表查找所需聯絡人。

3. 在列表介面長按所需聯絡人，直至該聯絡人的快顯功能表出現為止。
4. 點擊**新增至我的最愛**。

溫馨提示：

您也可以**在聯絡人介面點擊打開需要新增至我的最愛的聯絡人**，點擊右上角的  將該聯絡人直接新增至我的最愛列表。

7.2.4 搜尋聯絡人

1. 按**首頁鍵 > 聯絡人**打開聯絡人介面。
2. 按**功能鍵 > 搜尋**。
3. 輸入聯絡人姓名，Light將會自動列出所匹配的聯絡人。

7.2.5 編輯聯絡人

1. 按**首頁鍵 > 聯絡人**打開聯絡人介面。
2. 選擇並點擊所需聯絡人。
3. 按**功能鍵 > 編輯聯絡人**。

您也可以**在聯絡人介面**，長按需要編輯的聯絡人並在顯示的快顯功能表中選擇**編輯聯絡人**。

4. 編輯聯絡人訊息並**點擊完成**。

7.2.6 刪除聯絡人

5. 按**首頁鍵 > 聯絡人**打開聯絡人介面。

6. 選擇並**點擊**需要刪除的聯絡人。

7. 按**功能鍵 > 刪除聯絡人**。

8. **點擊確定**。

您也可以**從聯絡人介面**，長按需要刪除的聯絡人並從顯示的快顯功能表中選擇**刪除聯絡人**。

溫馨提示：

如果您需要大量刪除聯絡人，請在聯絡人介面**點擊功能鍵 > 刪除聯絡人**，選擇儲存位置和需要刪除的聯絡人後，**點擊完成**並**點擊確定**。

7.2.7 群組

1. 按**首頁鍵** > **聯絡人**打開聯絡人介面。
2. 選擇**群組**標籤頁。
3. 按**功能鍵** > **新建**。
4. 輸入新組名後點擊**確定**。
5. 點擊組名進入群組列表，按**功能鍵** > **添加**。
6. 在聯絡人列表中選擇要添加的群組成員後，點擊**完成**。

8. 輸入介面

8.1 螢幕虛擬鍵盤簡介


您的Light支援以下幾種螢幕虛擬鍵盤：XT9文字輸入、Android鍵盤和TouchPal鍵盤。需要切換輸入鍵盤的話，在進入輸入介面後，長按輸入框直至快顯功能表顯示，選擇所需輸入法。

8.1.1 Android 鍵盤





8.1.2 TouchPal 鍵盤

1. 中文注音輸入法

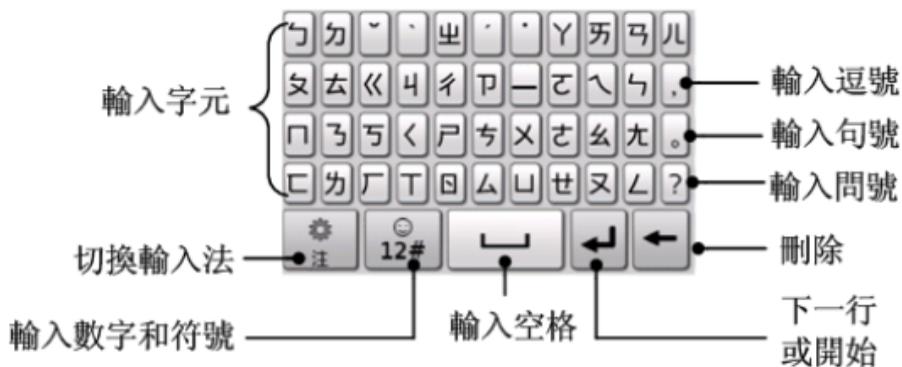

2. 中文手寫輸入法

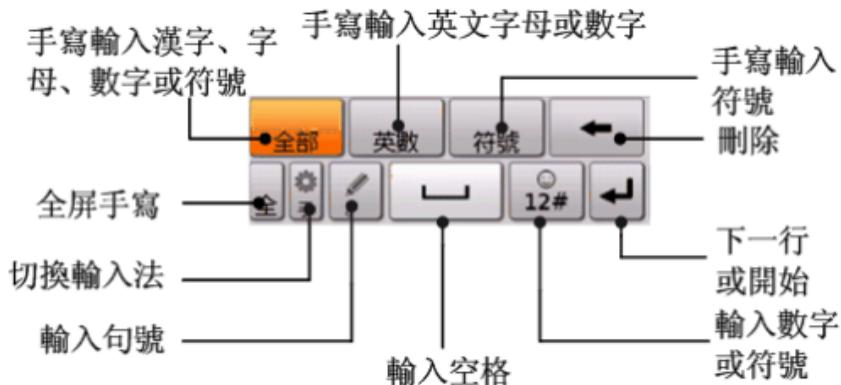

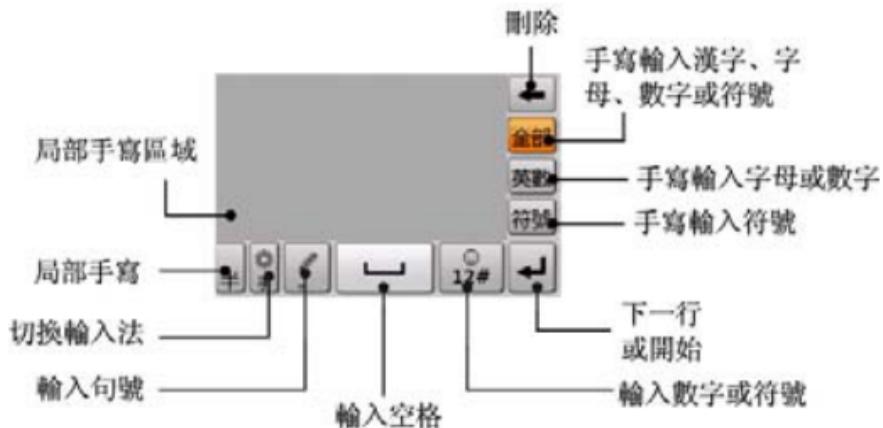

3. 英文輸入法



8.2 使用螢幕全鍵盤

8.2.1 輸入法簡介

您的Light支援以下幾種輸入法：中文注音、中文手寫和英語。其中android鍵盤只支援英文輸入，TouchPal鍵盤則支援以上所有輸入法。

8.2.2 中文注音輸入法

1. 用字母鍵盤輸入所需中文對應的字元，輸入面板中將會顯示與該中文讀音相近的中文或詞語。
2. 點擊所需中文輸入，或點擊  查找並選擇所需中文或詞語輸入。
3. 點擊所需符號輸入。您可以點擊  打開數字符號面板，選擇輸入數字和更多的符號。

8.2.3 中文手寫輸入法

1. 點擊  切換至中文手寫輸入法。

2. 在螢幕上的手寫區域書寫所需內容，Light會自動列出相近字元和詞語。
當選擇全螢幕手寫時，手寫區域是螢幕上除指示圖示區域外的所有區域；選擇局部手寫時，手寫區域是螢幕上灰色的區域（請參見文本輸入-螢幕虛擬鍵盤簡介-TouchPal鍵盤-中文手寫輸入法一節內容。）
3. 點擊所需字元或詞語輸入。

8.2.4 英文輸入法

您可以透過TouchPal或Android鍵盤輸入英文。

1. 如果需要的話，點擊  切換輸入法至英文輸入法。
2. 用字母鍵盤輸入所需英文。點擊  或  可以切換輸入大寫字母：點擊一次可以輸入一個大寫字母，點擊兩次可以保持輸入大寫字母。
3. 點擊  或  輸入空格。
4. 點擊  或  輸入數字或符號。

8.3 文字設定

按**首頁鍵** > **功能鍵** > **設定** > **語言與鍵盤**，您可以進行文字輸入相關設定。

XT9文字輸入

語言與設定：設定文字輸入的語言。

喜好設定：變更文字輸入喜好，如按鍵時震動、按鍵時響聲等。

關於：查閱版本等相關訊息。

TouchPal

基本設定

- **單詞預測**：打開或關閉單詞預測功能。
- **按鍵音**：打開或關閉按鍵提示音。
- **按鍵震動**：打開或關閉點擊按鍵時的震動回饋。
- **多語言混合輸入**：基於您在**選擇語言**中的所有語言進行預測輸入。

- **選擇語言**：選擇所需的輸入法語言。
- **滑動切換顯示**：開啓或關閉在鍵盤上長距離滑動切換鍵盤佈局的功能。
- **選擇直式顯示**：選擇豎螢幕下預設的螢幕風格。
- **選擇橫式顯示**：選擇橫螢幕下預設的螢幕風格。

預測和手勢

- **聯想詞**：打開或關閉聯想詞功能。
- **拼字校正**：打開或關閉拼字糾錯功能。
- **下滑輸入符號**：在鍵盤按鍵下方增加符號，下劃按鍵進行輸入。
- **快速相關詞**：在候選詞上支援手勢快速輸入相關詞。

中文相關選項

- **繁體模式**：打開或關閉繁體模式。打開繁體模式後，Light輸入的中文都會顯示爲繁體字。
- **GBK字符集**：打開或關閉GBK字符集。

- **模糊拼音**：選擇模糊拼音。

手寫

- **筆跡寬度**：設定筆跡寬度。
- **識別間隔**：調節手寫識別的間隔時間。
- **筆跡顏色**：選擇手寫時的筆跡顏色。
- **幫助**：查閱TouchPal的線上幫助。
- **關於**：查閱版本等相關訊息。

Android鍵盤

按鍵時震動：打開或關閉點擊按鍵時的振動回應。

按鍵時播放音效：打開或關閉點擊按鍵時的音效提示。

自動大寫：打開Android鍵盤輸入時的自動大寫功能。

9. 訊息

按**首頁鍵** > , 您可以透過簡訊功能發送或接收簡訊和多媒體訊息。

9.1 發送簡訊

1. 按**首頁鍵** >  > **簡訊** > **新增簡訊**。
2. 在**傳送到**一欄輸入接收方號碼。您也可以按**功能鍵** > **聯絡人**從聯絡人中選取收件人。
3. 點擊**輸入內容**一欄，輸入簡訊內容。
4. 點擊**傳送**。

9.2 發送多媒體訊息

1. 按**首頁鍵** >  > **簡訊** > **新增簡訊**。
2. 在**傳送到**一欄輸入收件人號碼。您也可以按**功能鍵** > **聯絡人**從聯絡人中選取收件人。

3. 按**功能鍵 > 新增主旨**，輸入多媒體訊息的主題。

提示：

訊息在新增主旨、附件等內容後，會自動轉換為多媒體訊息。同樣，多媒體訊息在刪除主題、附件等內容後，多媒體訊息會自動轉換為簡訊。

4. 點擊**輸入內容**一欄，輸入簡訊內容。
5. 按**功能鍵 > 附加**，選擇附加記憶體中的圖片、影片或音樂、聲音檔。您也可以選擇拍攝照片、影片或錄製聲音檔插入到多媒體訊息附件中。
6. 點擊**傳送**。

9.3 管理訊息和對話

來自同一聯絡人或號碼的簡訊、多媒體訊息將會按照時間先後順序來排列顯示在一個會話群組中。您可以在簡訊介面管理這些對話和訊息。

9.3.1 回覆訊息

1. 從簡訊介面點擊打開需要回覆的簡訊。
2. 點擊**輸入內容**，輸入簡訊的內容。
3. 點擊**傳送**。

9.3.2 刪除訊息或對話

1. 從訊息介面按**功能鍵 > 刪除會話群組**。
2. 選擇需要刪除的訊息或對話。
3. 點擊**確定**。

溫馨提示：

您也可以打開需要刪除的會話後，點擊**功能鍵 > 刪除簡訊**進行刪除。

9.4 訊息設定

在訊息介面按**功能鍵 > 設定**，您可以進行訊息相關設定。

儲存設定

- **刪除舊訊息**：設定訊息數量達到上限時，自動刪除舊訊息。
- **簡訊限制**：檢視每個對話訊息的數量上限。
- **多媒體訊息限制**：檢視每個會話多媒體訊息的數目上限。

簡訊(SMS)設定

- **傳送回條**：要求發送的每則簡訊都自動傳送回條。
- **管理 SIM 卡上的簡訊**：管理儲存在 SIM 卡上的訊息。
- **簡訊服務中心**：檢視或修改簡訊服務中心號碼。該號碼由您的電信業者提供，一般情況下使用預設號碼即可，如有疑問請諮詢您的電信業者。

多媒體訊息(MMS)設定

- **傳送回條**：要求發送的每則多媒體訊息都自動傳送回條。
- **讀取回條**：要求發送的每則多媒體訊息都自動讀取回條。
- **自動擷取**：啟動自動擷取訊息的功能。
- **漫遊時自動擷取**：啟動漫遊時自動檢索訊息的功能。

通知設定


- **通知**：選擇在狀態欄中顯示訊息通知。
- **選取鈴聲**：選擇訊息的通知鈴聲。
- **震動**：選擇在收到通知的同時開啓震動提示。

10. 電子郵件

按**首頁鍵** >  > **電子郵件**，您可以透過電子郵件功能接收和發送郵件。

10.1 設定電子郵件帳號

1. 輸入電子郵件帳號和密碼後，點擊**下一步**。

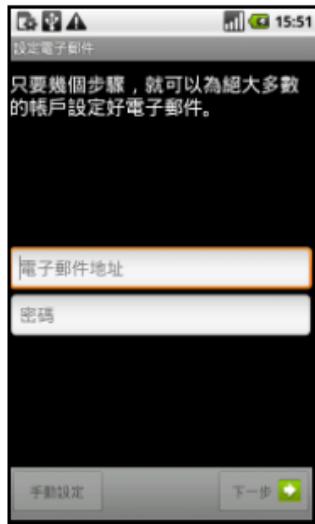

2. 移動設備將彈出注意事項，點擊**確定**後，您的移動設備會檢查外發伺服器設置並自動完成配置。
3. 設定電子郵件檢查頻率並點擊**下一步**。
4. 為電子郵件創建名稱並設置外發郵件時的顯示名稱。
5. 點擊**完成**。

溫馨提示：

您也可以在輸入電子郵件帳號和密碼後，點擊**手動設定**，選擇帳戶類型、收信伺服器設定選項等。

10.2 發送郵件

電子郵件帳號設定完畢後，Light會自動進入該郵件帳號的收件匣內。

1. 按**功能鍵** > **撰寫郵件**。

2. 輸入收件人的郵件地址。

您也可以按**功能鍵** > **新增副本/密件副本**。

3. 點擊**主旨**並輸入郵件的主題。

4. 點擊**撰寫郵件**並輸入郵件內容。

5. 點擊**功能鍵** > **新增附件**，您可以新增圖庫的圖片、音樂或錄製的音樂檔作為郵件的附件。

6. 點擊**傳送**。

10.3 回覆或轉寄郵件

1. 從郵件收件匣內選擇打開需要回復或轉發的郵件。
2. 按**功能鍵 > 回復/轉寄**回復或轉發該郵件。

您也可以按**功能鍵 > 全部回復**回復該郵件並寄送給所有的收件人、副本收件人。

3. 輸入郵件的回復內容或轉發時的收件人。
4. 點擊**傳送**。

10.4 郵件設定

在電子郵件介面按**功能鍵 > 帳戶設定**，您可以對郵件屬性進行設定。

一般設定

- **帳戶名稱**：檢視或修改帳戶名稱。
- **您的姓名**：設定您的郵件顯示名稱。

- **電子郵件地址**：設定您的電子郵件地址。
- **使用簽章**：選擇發送郵件時使用簽章。
- **簽章**：編輯簽章。
- **檢查電子郵件的頻率**：檢視或修改電子郵件檢查的頻率。
- **節電模式**：選擇智能調整郵箱同步時間。
- **預設帳戶**：設定當前郵件帳戶為預設的郵件傳送帳戶。

通知設定

- **電子郵件通知**：選擇在狀態欄中顯示收到電子郵件的通知圖示。
- **選取鈴聲**：選擇收到郵件時的通知鈴聲。
- **震動**：選擇收到郵件時，除通知外同時採用振動提示。

伺服器設定

- **內收設定**：檢視並設定接收伺服器選項。
- **外寄設定**：檢視並設定外發伺服器選項。

11. 網路應用

11.1 網路連接

您可以使用Light的網路連接功能連接至網際網路。

11.1.1 網路連接的方法

網路連接的方法有兩種：透過GPRS/3G/EDGE或者Wi-Fi。

11.1.2 GPRS/3G 網路

您可以透過GPRS/3G網路連接至網路並發送多媒體訊息和電子郵件。網路服務涉及一些資料業務，需要支付一定的費用，具體訊息請諮詢您的電信業者。

11.1.2.1 新增網路連接

新增網路連接之前，您需要從電信業者處獲得以下訊息：

- 存取點名稱（APN）

- 用戶名和密碼（如果需要的話）
 - 代理 IP 和埠（如果需要用到代理伺服器的話）
1. 按**首頁鍵** > **功能鍵** > **設定** > **無線與網路** > **行動網路** > **存取點名稱(APN)**。
 2. 按**功能鍵** > **新增APN**。
 3. 點擊**名稱**設定一個名稱（您可以自行設定）。
 4. 點擊**APN**輸入電信業者提供的APN名稱。
 5. 如果需要用到代理伺服器的話，點擊**Proxy**和**連接埠**並輸入相關訊息。
 6. 如果需要用到用戶名和密碼的話，點擊**使用者名稱**和**密碼**並輸入相關訊息。
 7. 設定完后，按**功能鍵** > **儲存**。

溫馨提示：

您也可以點擊**功能鍵** > **還原為預設狀態**，恢復原始設定的存取點。

11.1.3 Wi-Fi 網路

Wi-Fi網路為您提供近距離的無線網路連接功能。

11.1.3.1 啓用/關閉 Wi-Fi

1. 按**首頁鍵** > **功能鍵** > **設定** > **無線與網路**。
2. 點擊勾選**Wi-Fi**後面的複選框開啓Wi-Fi功能。取消勾選該複選框則可以關閉Wi-Fi功能。

11.1.3.2 連接至 Wi-Fi 網路

1. 按**首頁鍵** > **功能鍵** > **設定** > **無線與網路** > **Wi-Fi設定**。
您的Light會自動搜尋附近所有可被搜尋的Wi-Fi網路。
2. 從列表中點擊選擇需要連接的網路。
如果選擇的是開放網路，Light會自動完成連接。
如果選擇的是安全性網路，則需要您輸入密碼。

11.1.3.3 檢查 Wi-Fi 網路連接狀態

Light連接至Wi-Fi網路後，您可以透過以下兩種方法檢查Wi-Fi網路連接狀態。

1. 檢視狀態欄中的無線連接指示圖示 ，亮的格數越多，則表示無線網路信號強度越強。
2. 按**首頁鍵** > **功能鍵** > **設定** > **無線與網路** > **Wi-Fi設定**，選擇已連接的網路名稱，即可打開網路狀態功能表。

11.2 使用瀏覽器

透過瀏覽器，您可以連接至網際網路，自由地享受WAP無線網路和Internet無線網功能。該業務需要網路支援，為計費業務，請聯繫您的電信業者。

11.2.1 打開瀏覽器

按**首頁鍵** >  > **瀏覽器**即可打開瀏覽器。

11.2.2 打開網頁

在瀏覽器頁面，您可以透過以下方法打開網頁：

1. 按**點擊**瀏覽器網址欄，輸入需要打開網頁的網址並**點擊**虛網址欄后的前往。
2. 按**功能鍵** > **書籤**，選擇需要打開的書籤或**點擊**常用網頁/記錄標籤頁選擇打開其他網頁。

11.2.3 瀏覽選項

使用瀏覽器瀏覽網頁時，您可以進行以下操作：

1. 點擊網頁空白區域，向各方向拖曳查看網頁。
2. 點擊  縮小或放大網頁。
3. 按**功能鍵** > **重新整理**刷新頁面。
4. 按**功能鍵** > **更多** > **在頁面中尋找**，您可以在網頁上尋找所需內容。
5. 按**功能鍵** > **更多** > **選取文字**，您可以選擇網頁的文字並進行相關操作。

6. 按**功能鍵** > **更多** > **頁面資訊**，您可以查閱當前網頁的相關資訊。
7. 按**功能鍵** > **更多** > **分享網頁**，您可以透過**Gmail**、**簡訊**或**電子郵件**等分享當前網頁。
8. 按**功能鍵** > **更多** > **下載**，您可以查看下載記錄。
9. 按**功能鍵** > **更多** > **設定**，您可以設定瀏覽器相關選項。
10. 按**功能鍵** > **更多** > **新增書籤**，您可以將當前網頁新增至**書籤**中。
11. 按**功能鍵** > **更多** > **下一頁**，您可以再查看返回前的一個網頁。

11.2.4 使用書籤

1. 從瀏覽器介面按**功能鍵** > **書籤**，或點擊瀏覽器地址欄旁邊的 ，您可以查看**書籤**內容。
2. 點擊**新增**，輸入**書籤**名稱和位置後，點擊**確定**可以新增**書籤**。

如果您選擇的書籤瀏覽模式為清單檢視(按**功能鍵** > **清單檢視**可以進行相關設定)，新增書籤時需要點擊**加入書籤**。

3. 按**功能鍵** > 將最後瀏覽的網頁加入書籤，可以將上次瀏覽的網頁加入書籤。

11.2.5 瀏覽器設定

在瀏覽器介面，按**功能鍵** > **更多** > **設定**可以進入瀏覽器設定介面。

頁面內容設定

- **文字大小**：設定網頁顯示文字大小。
- **預設縮放**：查看或修改網頁的縮放設定。
- **以總覽模式開啟網頁**：選擇打開新網頁時，顯示該網頁的概覽。
- **文字編碼**：選擇文字編碼的種類。
- **封鎖快顯視窗**：選擇阻止顯示式視窗。
- **載入圖片**：選擇在網頁上顯示圖片。
- **自動調整頁面**：選擇調整網頁版面，以適合螢幕大小。
- **僅以水平模式顯示**：選擇僅以橫向寬屏模式顯示網頁。

- **啟用 JavaScript**：選擇啟用 JavaScript。
- **啟用外掛程式**：選擇啟用外掛程式。
- **在背景中開啟**：選擇在當前視窗後方打開新視窗。
- **設定首頁**：設定瀏覽器的首頁。

隱私設定

- **清除快取**：刪除儲存在本地暫存的內容和資料庫。
- **清除記錄**：清除瀏覽器導航的歷史記錄。
- **接受 Cookie**：選擇允許網站儲存並讀取 Cookie 資料。
- **清除所有 Cookie**：清除所有瀏覽器 Cookie。
- **儲存表單資料**：記住您在表單中輸入的資料，以便於以後使用。
- **清除表單資料**：清除所有已經儲存的表單數據。
- **啟用定位功能**：允許網站訪問您的位置訊息。
- **清除位置資訊存取權**：取消所有網站訪問位置訊息的許可權。

安全性設定

- **記住密碼**：儲存進入網站的用戶名和密碼。
- **清除密碼**：清除所有儲存的密碼。
- **顯示安全性警告**：當網站安全性出現問題時顯示警告。

進階設定

- **網站設定**：查看各網站的進階設定。
- **還原至初始設定**：清除所有瀏覽器資料，並將所有設定重置為預設值。

11.3 藍牙連接

透過藍牙功能，您可以與其他藍牙設備進行資料交換、使用藍牙耳機欣賞音樂和進行通話。由於藍牙連接透過無線電波進行通信，因此可能因為一些障礙或其他電子設備而受到干擾。在使用藍牙設備進行通信時，請保證兩台設備之間的最大距離不超過10米。

11.3.1 啓用/關閉藍牙功能

1. 按**首頁鍵** > **功能鍵** > **設定** > **無線與網路**。
2. 勾選**藍牙**後面的複選框開啓藍牙。取消勾選該複選框即可關閉藍牙功能。

藍牙功能開啓後， 圖示將會出現在狀態欄中。

11.3.2 設定藍牙屬性

1. 按**首頁鍵** > **功能鍵** > **設定** > **無線與網路** > **藍牙設定**。
2. 如果藍牙功能未開啓，勾選**藍牙**後面的複選框。
3. 點擊**裝置名稱**設定您的名稱。
4. 勾選**無法測得**後面的複選框，以便於其他藍牙設備能搜所到您的移動設備。

11.3.3 使用藍牙與其他設備配對

1. 按**首頁鍵** > **功能鍵** > **設定** > **無線與網路** > **藍牙設定**。

2. 如果藍牙功能沒有開啓的話，勾選**藍牙**複選框。
3. 點擊**掃描裝置**。
您的**Light**會列出所有搜尋到的藍牙設備列表。
4. 點擊列表中所需配對的設備。
5. 點擊**配對**。

溫馨提示：

如果您的**Light**和同類型的移動設備進行配對，則無需輸入**PIN**碼即可配對成功。

如果您的**Light**和不同類型的移動設備或其他藍牙設備進行配對，則需要輸入**PIN**碼才能完成配對（一般預設為**0000**）。

12. 多媒體功能

12.1 相機

您的Light帶有一個320萬畫素的照相鏡頭，可用於拍攝照片。您可將照片設定為桌布或透過多媒體訊息、郵件等發送。



注意：

請在拍攝照片時尊重他人權利、遵守當地法律法規和風俗習慣。

12.1.1 打開相機

按**首頁鍵** >  > **相機**即可打開照相機。

溫馨提示：

在相機介面，您可以向右拖動  快速切換至攝錄影機。

12.1.2 拍照

1. 將鏡頭對準位置/物件。
2. 取景滿意後，點擊  拍照。

相片拍攝完畢後，點擊螢幕右上角的方框可以瀏覽該相片。您可以在出現的功能表中進行以下操作：

點擊**刪除**，您可以刪除該相片。

點擊**分享**，您可以透過Gmail、Picasa、電子郵件、簡訊或藍牙和好友一起分享該相片。

點擊**設為**，您可以將該相片設定為桌布或聯絡人圖示。

點擊**完成**，您可以完成該相片的瀏覽並返回相機介面。

12.1.3 相機設定

在相機介面按**功能鍵 > 設定**，您可以進行相機相關設定：

- **白平衡**：選擇白平衡效果。

- **閃光過濾**：選擇按照頻率調整預覽圖片品質，以避免環境燈光的頻率對相片造成影響。
- **色彩效果**：設定拍照的色彩效果。
- **儲存位置**：選擇在照片資料中記錄位置訊息。
- **選擇 ISO**：選擇 ISO 等級。等級越高的 ISO 越適用於光線暗淡的環境。
- **相片大小**：設定相片的大小。
- **相片品質**：設定相片的品質。
- **對焦模式**：選擇對焦方式。
- **尖銳度**：選擇相片的尖銳度。
- **對比度**：選擇相片的對比度。
- **飽和度**：選擇相片的飽和度。
- **恢復出廠設定**：恢復相機為預設設定。

12.2 攝錄影機

您的攝錄影機可以用於拍攝有聲影像短片。



注意：

請在拍攝影片短片時尊重他人權利、遵守當地法律法規和風俗習慣。

12.2.1 打開攝錄影機

按**首頁鍵** >  > **攝錄影機**即可打開攝錄影機。

溫馨提示：

在攝錄影機介面，您可以拖動  快速切換至相機功能。

12.2.2 攝像

1. 將鏡頭對準位置/物件。
2. 點擊  開始攝影。

3. 點擊  結束攝影。

完成攝影後，您可以點擊右上方的圖示可選擇刪除、分享、播放該錄影檔，或完成查看並返回攝影介面。

12.2.3 攝錄影機設定

在攝錄影機介面按**功能鍵 > 設定**，您可以對攝錄影機屬性進行設定：

- **影片品質**：設定影片檔的畫質。
- **視訊編碼**：選擇影片的編碼類型。
- **聲音編碼**：選擇音頻的編碼類型。
- **影片長度**：設定影片錄製時間。
- **恢復出廠設定**：恢復攝錄影機為預設設定。

12.3 收音機

透過收音機，您可以搜尋收聽**FM**頻道。收聽品質取決於信號覆蓋程度。

提示：

- 收音機功能需要用到有線耳機作為天線，所以打開收音機功能前，請插入耳機。
- 使用耳機收聽節目時，請將音量調節至適當位置。音量過高時使用耳機，可能對您的聽力造成影響。

12.3.1 打開收音機

按**首頁鍵** >  > **收音機**即可打開收音機。

收音機打開後， 圖示將會出現在狀態欄中。

12.3.2 收聽節目

1. 點擊  或  搜尋頻道。
2. 按**功能表** > **微調**，點擊  以0.1MHZ為幅度微調頻率。
3. 長按螢幕上顯示的頻率直至下方出現紅色方框，將頻率拖到下方紅框內，您可以對該頻道進行收藏。

4. 按**音量鍵**調節收音機音量。
5. 按**功能鍵** > **睡眠**可以設定睡眠時間。

12.4 音樂

您可以透過音樂播放器功能欣賞記憶體中儲存的音樂。

12.4.1 打開音樂播放器

播放音樂檔前，需要先將音樂檔拷貝至記憶卡中。

1. 按**首頁鍵** >  > **音樂**打開音樂介面。
2. 選擇需要播放的音樂文件，點擊即可打開音樂播放器。

12.4.2 欣賞音樂

1. 在音樂介面，點擊**演出者/專輯/樂曲/播放清單/目前播放**標籤頁，找到您需要播放的音樂檔。
2. 點擊該音樂檔開始播放。

12.4.3 新建播放清單

爲了方便管理您的音樂檔，您可以創建一些播放清單。

1. 打開需要新增到新播放清單的音樂所在的檔案夾。
2. 選擇該音樂檔，長按直至顯示快顯功能表。
3. 點擊**新增至播放清單**。
4. 點擊**新增**。
5. 輸入新播放清單的名稱。
6. 點擊**儲存**。

此時您選擇的音樂檔會自動新增至新建的播放清單中。

12.4.4 管理播放清單

1. 按**首頁鍵** >  > **音樂** > **播放清單**。
2. 從列表中選擇需要編輯或播放的播放清單，長按直至顯示快顯功能表。
播放：播放該列表中的音樂。

編輯：編輯該播放清單，您只能編輯系統預設的**最近新增的樂曲**列表。

刪除：刪除該列表，您只能刪除自建播放清單。

重新命名：為該播放清單重新命名，您只能為自建播放清單重命名。

12.4.4.1 新增音樂至播放清單

1. 找到音樂檔所在的位置。
2. 選擇需要新增至播放清單的音樂檔，長按直至顯示快顯功能表。
3. 點擊**新增至播放清單**。
4. 選擇需要新增的播放清單。

12.4.5 設定音樂為來電鈴聲

1. 找到音樂檔案所在的位置。
2. 選擇需要設為鈴聲的音樂檔，長按直至顯示快顯功能表。
3. 點擊**設成來電鈴聲**。

溫馨提示：

您也可以播放音樂時，按**功能鍵 > 設成鈴聲**設定當前音樂為鈴聲。

12.5 影片

您可以透過影片播放器功能欣賞記憶卡內的影片檔案。

12.5.1 打開影片播放器

1. 按**首頁鍵 >  > 影片** 可以打開影片列表。
2. 選擇需要播放的影片檔案，點擊打開即可使用影片播放器播放。

12.5.2 欣賞影片

在欣賞影片檔案前，請將影片檔拷貝至記憶卡中。

1. 按**首頁鍵 >  > 影片**。
2. 選擇需要播放的影片檔案，點擊打開。

12.6 圖片庫

按**首頁鍵** >  > **圖片庫**，您可以查看記憶卡內所有圖片和影片檔。其中影片檔可以採用影片播放器播放。

12.7 錄音程式

透過錄音功能，您可以錄製聲音文檔。

12.7.1 打開錄音程式

打開錄音程式功能前，請插入記憶卡。

按**首頁鍵** >  > **錄音程式**即可打開錄音機。

12.7.2 錄製聲音檔案

1. 將Light的麥克風靠近您的嘴巴，點擊  開始錄音。
2. 點擊  停止錄音。
3. 點擊  重播錄音檔。

4. 點擊**確定**儲存錄音檔，點擊**放棄**放棄儲存錄音檔。

儲存錄音檔後，您可以在**首頁鍵** >  > **音樂** > **播放清單** > **我的錄音**中查看您的錄音文件。

溫馨提示：

您也可以將錄音檔設為來電鈴聲，在**我的錄音**中，長按該錄音檔直至顯示快顯功能表，點擊**設成來電鈴聲**。

13. 移動設備設定

13.1 基本設定

13.1.1 設定日期與時間

1. 按**首頁鍵** > **功能鍵** > **設定** > **日期與時間**。
2. 如果您需要自己設定日期與時間，取消勾選**自動**複選框。否則您的Light時間會自動和系統時間同步。
3. 點擊**設定日期**，調節日期後點擊**設定**。
4. 點擊**選取時區**，選擇您所在的時區。
5. 點擊**設定時間**，調節時間後點擊**設定**。
6. 選擇勾選**使用24小時格式**複選框使用24小時制，否則選擇使用12小時制。
7. 點擊**選取日期格式**，選擇日期的顯示格式。

13.1.2 顯示設定

13.1.2.1 調節螢幕亮度

1. 按**首頁鍵** > **功能鍵** > **設定** > **音效與顯示** > **亮度**。
2. 調節螢幕亮度，點擊**確定**。

13.1.2.2 設定螢幕待機時間

1. 按**首頁鍵** > **功能鍵** > **設定** > **音效與顯示** > **螢幕逾時**。
2. 選擇螢幕待機時間。

Light在待機時間達到設定時間時，螢幕顯示會自動關閉並進入睡眠模式。

13.1.2.3 設定螢幕顯示方向

您可以選擇透過旋轉Light來調整螢幕顯示的方向（豎螢幕或橫螢幕顯示）。

1. 按**首頁鍵** > **功能鍵** > **設定** > **音效與顯示**。

2. 選擇勾選**顯示方向**。

13.1.2.4 啓用/關閉窗口動畫

您的Light可以支援開啓和關閉視窗時的動畫顯示。

1. 按**首頁鍵** > **功能鍵** > **設定** > **音效與顯示**。
2. 點擊**動畫**選擇**沒有動畫**、**部份動畫**或**全部動畫**。

13.1.3 聲音設定

13.1.3.1 設定移動設備鈴聲

1. 按**首頁鍵** > **功能鍵** > **設定** > **音效與顯示** > **電話鈴聲**。
Light會自動顯示移動設備內所有聲音檔列表。
2. 點擊所需鈴聲並點擊**確定**。

溫馨提示：

您也可以透過**音樂**功能設定移動設備鈴聲，請見**多媒體功能-音樂-設定音樂**為來電鈴聲和**多媒體功能-錄音程式-錄製音頻文檔**。

13.1.3.2 調節鈴聲音量

1. 按**首頁鍵** > **功能鍵** > **設定** > **音效與顯示** > **鈴聲音量**。
2. 調節鈴聲音量並點擊**確定**。

您也可以選擇**通知使用來電音量**複選框，同步設定來電鈴聲和通知鈴聲的音量。

13.1.3.3 設定預設通知鈴聲

1. 按**首頁鍵** > **功能鍵** > **設定** > **音效與顯示** > **通知鈴聲**。
Light會自動顯示所有的可用通知鈴聲列表。
2. 選擇並點擊所需鈴聲。
3. 點擊**確定**。

13.1.3.4 開啓靜音模式

1. 按**首頁鍵** > **功能鍵** > **設定** > **音效與顯示**。
2. 勾選**靜音模式**複選框。

靜音模式下，除媒體和鬧鐘外，其餘聲音全部都為靜音狀態。

13.1.3.5 開啓移動設備震動

1. 按**首頁鍵** > **功能鍵** > **設定** > **音效與顯示**。
2. 勾選**手機震動**複選框。

開啓移動設備振動之後，來電時移動設備會振動提示。

13.1.3.6 調節媒體音量

1. 按**首頁鍵** > **功能鍵** > **設定** > **音效與顯示** > **媒體音量**。
2. 調節媒體音量，點擊**確定**。

13.1.3.7 開啓撥號操作音

1. 按**首頁鍵** > **功能鍵** > **設定** > **音效與顯示**。
2. 勾選**觸控音效**複選框。

開啓撥號操作音後，在您使用撥號器時，每撥一個號碼，Light都會發出聲音提示。

13.1.3.8 開啓螢幕選擇操作音

1. 按**首頁鍵** > **功能鍵** > **設定** > **音效與顯示**。
2. 勾選**有聲選項**複選框。

開啓螢幕選擇操作音後，每次點擊螢幕進行選擇，Light都會發出提示音。

13.1.3.9 開啓 microSD 卡通知提醒

1. 按**首頁鍵** > **功能鍵** > **設定** > **音效與顯示**。
2. 勾選**SD卡通知**複選框。

開啓SD卡通知提醒之後，所有microSD卡相關操作都會有聲音提示。

13.1.4 語言設定

13.1.4.1 切換系統語言

1. 按**首頁鍵** > **功能鍵** > **設定** > **語言與鍵盤**。
2. 點擊**選取地區設定**。

Light會自動顯示所有可用語言列表。

3. 選擇所需語言。

13.1.5 無線網路設定

13.1.5.1 啓用漫遊

1. 按**首頁鍵** > **功能鍵** > **設定** > **無線與網路** > **行動網路**。
2. 勾選**資料漫遊**複選框。

13.1.5.2 切換網路模式

1. 按**首頁鍵** > **功能鍵** > **設定** > **無線與網路** > **行動網路** > **網路模式**。
2. 點擊選擇所需網路模式。

13.1.5.3 選擇電信業者

1. 按**首頁鍵** > **功能鍵** > **設定** > **無線與網路** > **行動網路** > **電信業者**。

2. 點擊**搜尋網路**進行手動搜尋，或點擊**自動選取**自動選擇電信業者。

13.1.5.4 新增存取點名稱設定

一般情況下，您可以使用Light預設的接入點設定。如需新增，請諮詢您的電信業者獲得APN相關訊息。

1. 按**首頁鍵** > **功能鍵** > **設定** > **無線與網路** > **行動網路** > **存取點名稱 (APN)**。
2. 按**功能鍵** > **新增APN**。後續操作步驟請參見**網路應用-網路連接-GPRS/3G網路-新增網路連接**。

13.1.5.5 啓用飛航模式

1. 按**首頁鍵** > **功能鍵** > **設定** > **無線與網路**。
2. 勾選**飛航模式**複選框。

您也可以通過長按電源鍵或掛斷鍵後選擇飛航模式啓用飛航模式。飛航模式啓用後，您的Light將關閉所有無線連接。

13.2 安全設定

13.2.1 螢幕解鎖圖案

您可以設定一個螢幕解鎖圖案，以防止您的Light被未經授權的使用。

13.2.1.1 設定螢幕解鎖圖案

1. 按**首頁鍵** > **功能鍵** > **設定** > **位置與安全性** > **設定解鎖圖形**。
2. 閱讀相關說明後，點擊**下一頁**。
3. 觀看範例圖形後，點擊**下一頁**。
4. 點擊螢幕上的圓點繪製您的圖案。
5. 點擊**繼續**。
6. 再次繪製您的圖案進行確認。
7. 點擊**確認**。

13.2.1.2 鎖定螢幕

按**電源鍵**鎖定Light的螢幕。

在鎖定螢幕的同時，您的Light也會被切換至睡眠模式。

13.2.1.3 使用圖案解鎖

1. 按**電源鍵**。
2. 在螢幕上繪製您的解鎖圖案。

如果在繪製圖案時出現錯誤，您會被要求重試。

13.2.2 使用 PIN 碼

使用PIN碼可以防止您的SIM卡被未經授權的使用。

13.2.2.1 啓用 PIN 碼

1. 按**首頁鍵** > **功能鍵** > **設定** > **位置與安全性**> **建立SIM/RUSIM卡鎖**。
2. 勾選**鎖定SIM/RUSIM卡選框**。

3. 輸入PIN碼。
4. 點擊**確定**。

13.2.2.2 修改 PIN 碼

1. 按**首頁鍵** > **功能鍵** > **設定** > **位置與安全性**>**建立SIM/RUSIM卡鎖**。
2. 點擊**更改SIM/RUSIM卡PIN碼**。
3. 輸入原PIN碼，點擊**確定**。
4. 輸入新PIN碼，點擊**確定**。
5. 再次輸入新PIN碼，點擊**確定**。

13.2.3 使用安全認證

您可以設定允許應用訪問安全憑證和其他憑證。

13.2.3.1 啓用認證存儲空間

1. 按**首頁鍵** > **功能鍵** > **設定** > **位置與安全性**。

2. 點擊**設定密碼**。
3. 輸入密碼並再次輸入確認，點擊**確定**。

您可以選擇**從SD卡安裝**，選擇SD卡內的加密證書啓用認證存儲空間。

13.2.3.2 清除儲存空間

1. 按**首頁鍵** > **功能鍵** > **設定** > **位置與安全性**。
2. 點擊**清除儲存空間**。

13.3 儲存管理

13.3.1 microSD 卡儲存管理

13.3.1.1 查看 microSD 卡可用空間

1. 按**首頁鍵** > **功能鍵** > **設定** > **SD卡和行動電話儲存空間**。
2. 在**SD卡**下，**可用空間**類目下可以查看SD卡可用空間。

13.3.1.2 卸載 SD 卡

1. 按**首頁鍵** > **功能鍵** > **設定** > **SD卡和行動電話儲存空間**。
2. 點擊**卸載SD卡**，您就可以安全移除SD卡了。

13.3.1.3 SD 卡格式化

格式化SD卡，需要先卸載SD卡。

1. 按**首頁鍵** > **功能鍵** > **設定** > **SD卡和行動電話儲存空間**。
2. 點擊**將格式化SD卡**。

13.3.2 移動設備儲存空間管理

13.3.2.1 查看移動設備可用空間

1. 按**首頁鍵** > **功能鍵** > **設定** > **SD卡和行動電話儲存空間**。
2. 在移動設備內部記憶體下，可以查看移動設備可用空間。

13.4 應用程式設定

13.4.1 管理應用程式

您可以查看、管理移動設備內安裝的應用程式。

13.4.1.1 安裝新的應用程式

您可以從Android Market直接安裝應用程式，也可以安裝非Android Market的應用程式。安裝非Android Market的應用程式時，請確保該軟體適用於您的Light。

Android Market的程式安裝

1. 打開Market並查找所需安裝的軟體。
2. 點擊**安裝**。

非Android Market的程式安裝

1. 按**首頁鍵** > **功能鍵** > **設定** > **應用程式**。
2. 勾選**未知的來源**複選框。

3. 將您需要安裝的軟體拷貝至microSD卡中，並從**首頁鍵 >  > 檔案管理員**中找到該軟體的安裝檔。
4. 點擊該安裝檔，按照提示完成安裝。

13.4.1.2 卸載應用程式

Android Market的軟體卸載

1. 打開Android Market該軟體的下載頁面。
2. 點擊**解除安裝**，按照提示完成卸載。

非Android Market的軟體卸載

1. **首頁鍵 > 功能鍵 > 設定 > 應用程式 > 管理應用程式**。
2. 滾動列表，點擊需要卸載的程式。
3. 點擊**解除安裝**，並按照提示完成卸載。

13.5 恢復出廠設定

1. 按**首頁鍵** > **功能鍵** > **設定** > **隱私設定** > **重設為原廠設定**。
2. 點擊**重設手機**。
3. 點擊**清除全部**。

13.6 其他設定

13.6.1 搜尋設定

13.6.1.1 Google 搜尋

按**首頁鍵** > **功能鍵** > **設定** > **搜尋** > **Google搜尋設定**，您可以勾選**顯示網頁建議**以便於在進行Google搜尋時顯示Google提供的建議。

13.6.1.2 可搜尋的項目

按**首頁鍵** > **功能鍵** > **設定** > **搜尋** > **可搜尋項目**，您可以選擇可以搜尋的具體項目。

13.6.2 文字轉語音設定

您可以按**首頁鍵** > **功能鍵** > **設定** > **文字轉語音**，您可以設定文本轉語音選項。在使用語音合成功能前，您需要安裝相關語音資料。

14. 其他應用

14.1 鬧鐘

按**首頁鍵** >  > **鬧鐘**，您可以查看當前時鐘或設定鬧鐘。

14.1.1 設定鬧鐘

1. 按**首頁鍵** >  > **鬧鐘**。
2. 點擊預設鬧鐘，或按**功能鍵** > **新增鬧鐘**。
3. 勾選**開啓鬧鐘**複選框。
4. 設定鬧鐘的**時間**，**重複**等其他必要訊息。

設定完成後，您還可以按**功能鍵** > **刪除鬧鐘/預覽鬧鐘**刪除或預覽該鬧鐘。

14.2 記事本

按**首頁鍵** >  > **記事本**，您可以按**功能鍵** > **新建文件**記錄一些備忘的檔。

14.3 計算機

按**首頁鍵** >  > **計算機**，您可以進行簡單的數學計算。

14.4 SIM 工具箱

按**首頁鍵** >  > **SIM工具箱**，您可以查看並使用SIM卡內建的一些工具集。該功能由電信業者提供，有任何疑問請諮詢您的系統商。

14.5 工作管理員

按**首頁鍵** >  > **工作管理員**，您可以查看當前任務、應用程式和資源訊息，也可以結束當前執行的任務。

14.6 檔案管理員

按**首頁鍵** >  > **檔案管理員**，您可以查閱移動設備或記憶卡中的所有檔案。

14.7 碼錶

按**首頁鍵** >  > **碼錶**，您可以使用碼錶功能進行計時。

15. 簡單故障排除

如果您的移動設備在使用中出現如下現象請先查閱下方的相關訊息，如果還不能解決請與經銷商聯繫。

問題	可能原因	可能的解決方式
信號接收不良	您目前所在位置的網路信號比較弱 (例如地下室或靠近大廈)，使得無線電波無法有效傳達。	請移動到可以良好接收網路信號的位置。
	目前網路忙線 (例如，高峰時段網路的流量可能過高，造成無法通話)。	請避免在類似時段使用移動設備，或稍待片刻再試。
	您與基站的距離過遠。	請向電信業者索取服務地區地圖。

問題	可能原因	可能的解決方式
回音或雜訊	部分電信業者的網路中繼線品質不良。	請掛斷電話，重新撥號。也許可以切換到品質比較好的網路中繼線或電話線。
	當地電話線路品質不良。	
無法選取特定的功能	電信業者不支援這些功能，或您尚未開通提供這些功能的服務。	請諮詢電信業者。
電池無法充電	電池或電池充電器已經損壞。	請聯繫經銷商。
	移動設備溫度低於-10°C 或高於50°C。	請注意電池充電時的環境，避免溫度過高或過低。
	電池與充電器之間接觸不良。	請檢查所有接頭，確定所有線路皆正確連接。

問題	可能原因	可能的解決方式
待機時間縮短	待機時間與電信業者的系統設定有關。相同的移動設備在不同電信業者系統下的待機時間不盡相同。	如果您位於信號微弱的區域，請暫時將移動設備關機。
	電池耗盡。在高溫環境下，電池壽命將會縮短。	請更換新電池。
	如果無法連接到網路，移動設備將會持續發射搜尋基站信號。移動設備便會持續消耗電池電量，造成待機時間縮短。	請移動到能夠訪問網路的地方，或暫時將移動設備關機。
無法開機	電池電量已經耗盡。	請儘快為移動設備的電池

問題	可能原因	可能的解決方式
		充電。
SIM卡錯誤	SIM卡故障或損壞。	請將 SIM 卡交由電信業者測試。
	SIM卡未正確插入。	請正確插入 SIM 卡。
	SIM卡接點髒汙。	請使用柔軟的乾布擦拭 SIM 卡接點。
無法連接到網路	SIM卡無效。	請聯繫電信業者。
	您不在網路服務區域內。	請向電信業者詢問服務區域。
	信號不良。	請移動到空曠的地方；如果您正在建築物內，請移動到靠近窗戶的地方。

問題	可能原因	可能的解決方式
無法接聽來電	您已經啓動來電轉接功能。	請進入來電轉接設定，然後選擇停用轉接功能。
無法撥出電話	您已啓動固定撥號功能。	請進入固定撥號設定，並選擇停用此功能。
PIN碼被鎖定	您連續三次輸入錯誤的PIN碼。	請聯繫電信業者。如果系統商提供您SIM卡的PUK碼，請使用PUK碼解除鎖定SIM卡。
無法在電話簿中輸入訊息	電話簿記憶體已滿。	請從聯絡人中刪除不必要的資料。

LIGHT

User Manual

LEGAL INFORMATION

Copyright © 2010 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.0

Edition Time : 20101206

Contents

For Your Safety	14
Product Safety Information.....	14
RF Exposure.....	15
General Statement on RF Energy.....	15
Specific Absorption Rate (SAR).....	16
Body-worn Operation	17
Limiting Exposure to Radio Frequency (RF) Fields.....	17
Regulatory Information.....	18
Distraction.....	18
Driving	18
Operating Machinery	19
Product Handling	19
General Statement on Handling and Use.....	19
Small Children.....	21
Demagnetization	21
Electrostatic Discharge (ESD).....	22

Air Bags	22
Seizures/Blackouts	22
Repetitive Motion Injuries	22
Emergency Calls	23
Loud Noise	23
Device Heating	23
Electrical Safety	24
Accessories	24
Connection to a Car	24
Faulty and Damaged Products	24
Interference	25
General Statement on Interference	25
Pacemakers	25
Hearing Aids	26
Medical Devices	26
Hospitals	26
Aircraft	27
Interference in Cars	27

Explosive Environments	27
Petrol Stations and Explosive Atmospheres	27
Blasting Caps and Areas	28
Getting Started	29
Overview	29
Key Definition	31
Starting up	32
How to slot your SIM/memory card	32
How to pop in your battery	34
How to charge your LIGHT	35
Powering On/Off Your Device	37
How to power on your device	37
How to switch your device to sleep mode	38
How to wake up your device from sleep mode	38
Getting Around Your Device	40
Using Finger Gestures	40
Home Screen	41

Device Status and Notifications.....	45
Applications and Settings Preview	48
Phone Calls	57
Making a Call	57
Making a Call from Dialer	57
Making a Call from Contacts	57
Making a Call from Call History	58
Making a Call from a Text Message	59
Making an Emergency Call	59
Making an International Call.....	59
Receiving a Call.....	60
Answering an Incoming Call.....	60
Rejecting an Incoming Call.....	61
Muting a Call	61
Putting a Call on Hold.....	62
Turning the Speaker On/Off	62
Ending a Call	62

Call Settings.....	63
Contacts	65
Starting to use Contacts	65
Contacts Screen.....	65
Managing Contacts.....	66
Importing/Exporting Contacts	66
Creating a Contact	67
Adding a Contact to Favorites	68
Searching for a Contact.....	69
Editing a Contact	69
Deleting a Contact.....	69
Entering Text.....	71
Using the On-screen Keyboard	71
Android Keyboard.....	71
TouchPal Keyboard.....	73
XT9 Text Input.....	75
Entering Text through the On-screen Keyboard.....	83

Entering Numbers and Symbols.....	83
Touch Input Settings.....	83
Messages	87
Exchanging Messages.....	87
Composing an SMS	87
Composing an MMS.....	88
Managing Messages and Messages Threads.....	89
Message Settings.....	91
Using Email.....	92
Creating an Email account.....	93
Composing and sending an Email.....	94
Reply to or Forward an Email.....	95
Email Settings	96
Getting Connected.....	98
Connecting to the Internet	98
Ways of Connecting to the Internet.....	98
GPRS/3G/EDGE	98

Wi-Fi	100
Using Browser.....	102
Opening Browser.....	103
Opening Web Pages	103
Browsing Options	103
Using Bookmarks	107
Browser Settings	108
Bluetooth.....	111
Turning on/off Bluetooth	111
Making your device visible	112
Change your device name	112
Pair with another Bluetooth device.....	113
Experiencing Multimedia	114
Camera	114
Opening Camera	114
Taking Pictures.....	114
Camera Settings.....	115

Camcorder	116
Opening Camcorder	116
Shooting Videos	117
Video Settings	117
FM Radio	118
Opening FM Radio	119
Listening to FM Radio	119
Music.....	120
Opening Music	121
Playing Music	121
Creating Playlists.....	121
Managing Your Playlists.....	122
Setting a Song as Ringtone.....	123
Videos	123
Opening Videos.....	123
Playing Videos.....	124
Gallery.....	124
Sound Recorder.....	124

Opening Sound Recorder.....	125
Record Your Memo	125
Google Applications.....	126
Signing In to Your Google Account.....	126
Using Gmail	126
Open Gmail	127
Creating and sending an gmail.....	127
Using Google Calendar	127
Using Google Talk	128
Opening Google Talk	128
Adding a new friend.....	128
Viewing and accepting an invitation	129
Changing your online status.....	129
Starting a chat	129
Settings	130
Basic Settings	130
Setting the Time and Date.....	130

Display Settings.....	131
Sound Settings	132
Language Settings	136
Mobile Network Services.....	136
Security Settings.....	138
Protecting Your LIGHT with a Screen Lock.....	138
Protecting Your SIM Card with a PIN.....	141
Setting Up Credential Storage.....	142
Managing Memory	143
Managing Your Memory Card	143
Managing Internal Storage.....	144
Reset to factory settings.....	145
Application Settings	145
Managing Applications	145
Other Settings.....	147
Search Settings	147
Speech Synthesis Settings.....	148

Other Applications.....	149
Alarming.....	149
Set alarms	149
Docs To Go.....	149
Global Time.....	150
Note pad	150
Calculator.....	150
SIM Toolkit.....	151
Task Manager	151
Stopwatch	151
Places	152
Latitude	153
Specifications	154
EC DECLARATION OF CONFORMITY.....	156

For Your Safety

Product Safety Information

	Read the Safety Information section of this user guide on this page		Do not use while re-fuelling
	Do not use hand-held while driving		This device may produce a bright or flashing light
	Small parts may cause a choking hazard		Do not dispose of it in a fire
	This device may produce a loud sound		Avoid contact with magnetic media
	Keep away from pacemakers and other personal medical devices		Avoid Extreme Temperatures

	Switch off when instructed in hospitals and medical facilities		Avoid any contact with liquid, keep it dry
	Switch off when instructed in aircrafts and airports		Do not attempt to disassemble
	Switch off in explosive environments		Do not rely on this device for emergency communications
			Only use approved accessories

RF Exposure

General Statement on RF Energy

Your mobile device contains a transmitter and a receiver. When it is ON,

it receives and transmits RF energy. When you communicate with your device, the system handling your call controls the power level at which your device transmits.

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 1.54 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide**.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device

to ensure it only uses the minimum power required to communicate with the network.

* The tests are carried out in accordance with EN 62311, EN 62209-1, IEC 62209-2.

** Please see body worn operation.

Body-worn Operation

Important safety information regarding radio frequency radiation (RF) exposure:

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

Limiting Exposure to Radio Frequency (RF) Fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile devices. If

individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile devices away from the head and body.

Further information on this subject can be obtained online from the WHO fact sheet N°193 at <http://www.who.int/mediacentre/factsheets/fs193/en/>

Regulatory Information

The following approvals and notices apply in specific regions as noted.

Please find the Declaration of RoHS Compliance, and EC Declaration of Conformity in Appendix.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a mobile device while driving (even with a hands

free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your mobile device and any consequences of its use.

You must always switch off your mobile device wherever the use of a phone is prohibited. Use of your device is subject to safety measures designed to protect users and their environment.

- Always treat your device and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your device or its accessories to open flames or lit tobacco products.
- Do not expose your device or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your device or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your device or its accessories.
- Do not attempt to disassemble your device or its accessories, only authorized personnel should do so.
- Do not expose your device or its accessories to extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.
- Please check local regulations for disposal of electronic products.

- Do not carry your mobile device in your back pocket as it could break when you sit down.

Small Children

Do not leave your mobile device and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the device.

Your mobile device contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your device for a long time.

Electrostatic Discharge (ESD)

Do not touch the SIM card's metal connectors.

Air Bags

Do not place the device in the area over an air bag or in the air bag deployment area.

Store the device safely before driving your vehicle.

Seizures/Blackouts

The device can produce a bright or flashing light.

Repetitive Motion Injuries

To minimize the risk of RSI when texting or playing games with your device:

- Do not grip the device too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.

- Take lots of breaks to stretch and relax.

Emergency Calls

This mobile device, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless device for emergency communications.

Loud Noise

This mobile device is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

Device Heating

Your device may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.

Connection to a Car

Seek professional advice when connecting a mobile device interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the device or its accessory.

Only qualified personnel should service or repair the device or its accessory.

If your device or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

Interference

General Statement on Interference

Care must be taken when using the mobile device in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile device and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the mobile device on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your mobile device may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft, if your device offers a 'flight mode' this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Petrol Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.


Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.


Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

Getting Started

Overview

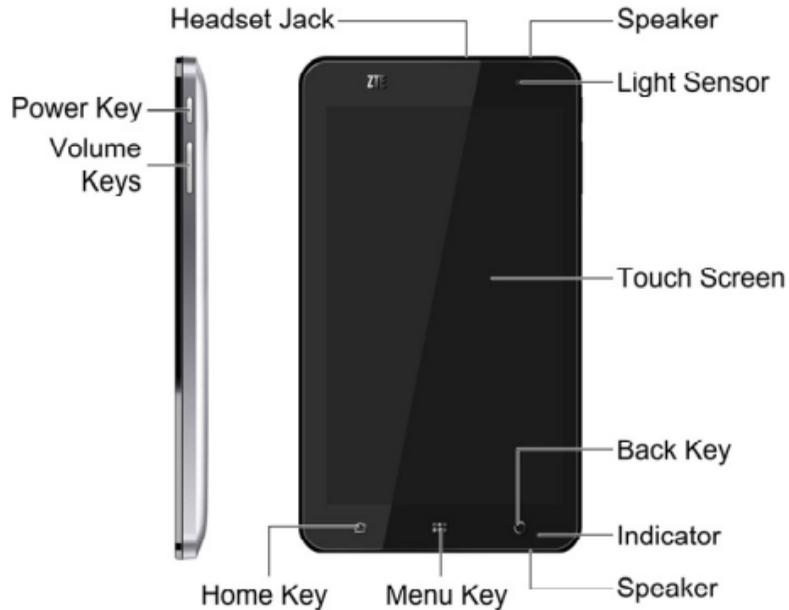

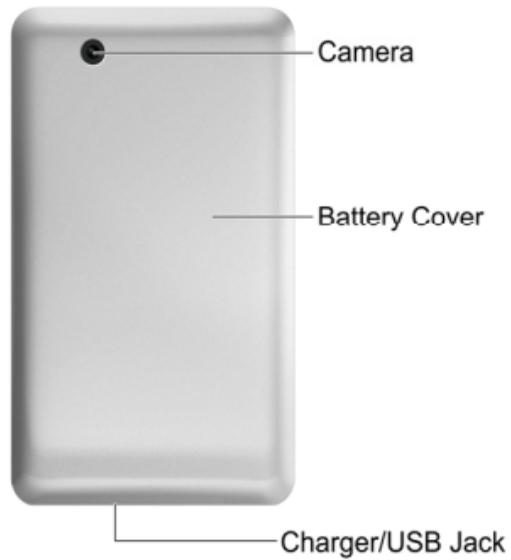

Key Definition



Key	Function
Power Key	<ul style="list-style-type: none">• Hold to get the phone options. You can select Silent mode, Vibration mode, Airplane mode or to power off your device.• Press to switch your device to sleep mode.• Press to wake up your device.
Home Key	<ul style="list-style-type: none">• Press to return to Home Screen from any application or screen.• Hold to see the recently- used applications.
Menu Key	Press to get the options on the current screen.
Back Key	Press to go to the previous screen.
Volume Keys	<ul style="list-style-type: none">• Press Volume Up Key to turn the volume up.• Press Volume Down Key to turn the volume down.

Starting up


How to slot your SIM/memory card

Power off your device before installing or replacing the battery, SIM card, and memory card.


1. Remove the battery cover.

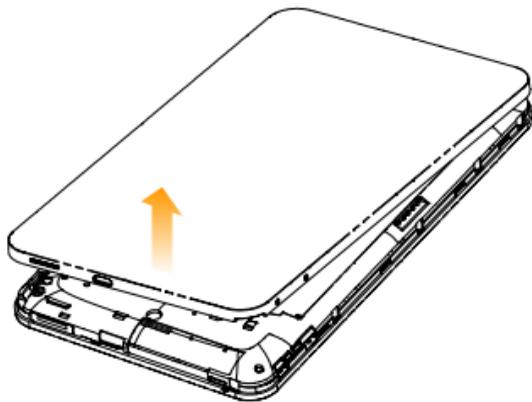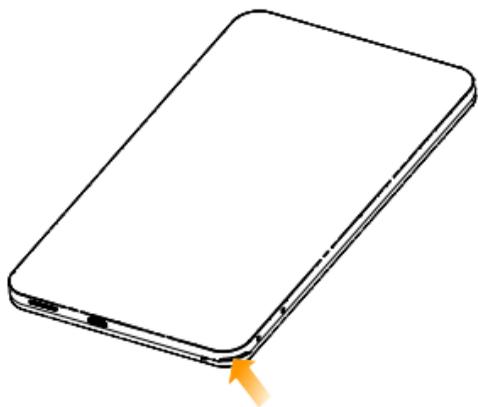

2. Hold your SIM card with the cut corner oriented as shown below and then insert it into the card holder properly.

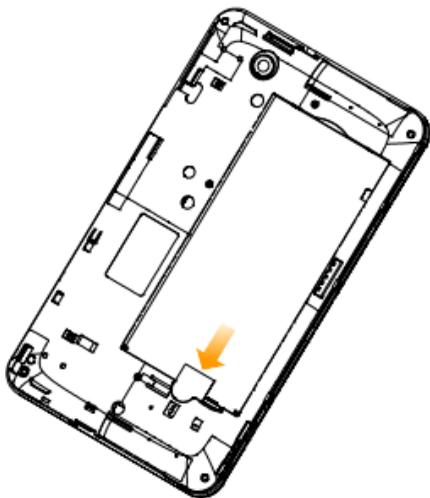

3. Hold your memory card with the cut corner oriented as shown in the following picture and then insert it into the card holder properly.

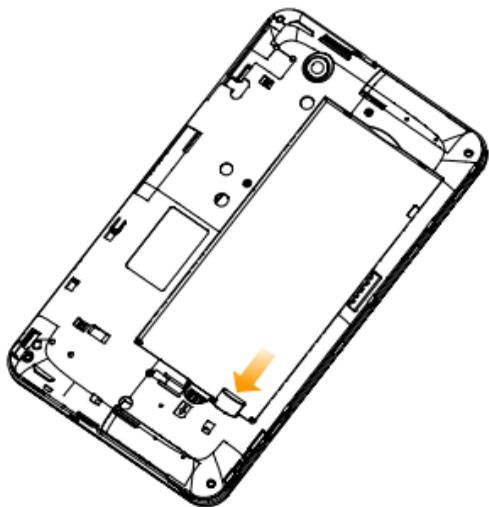


Notes:

microSD logo is a trade mark of SD Card Association.

How to pop in your battery

1. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment on the device.

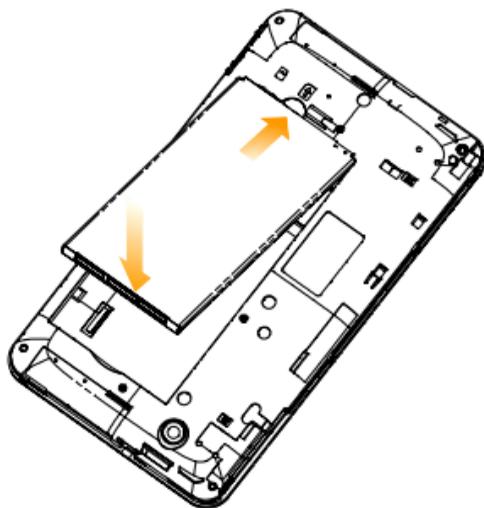


2. Push down the battery until it clicks into place.

How to charge your LIGHT

The new battery is not fully charged. To charge the battery, you need to:

1. Connect the adapter to the charger jack.

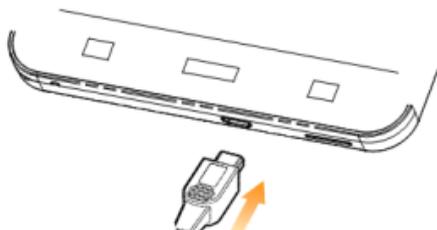

2. Connect the charger to a standard AC wall outlet.

Notes:

- ▶ If the battery is low, there will be a pop-up message on the screen and the indicator light will be red.
- ▶ When you charge your device, the indicator light will change according to the battery level:

Indicator color	Battery level
Red	Less than 10% of the total battery level
Orange	More then 10%, but less than 90% of the total battery level
Green	More than 90% of the total battery level

► If the device is powered on, the icon  will appear on the status bar. When charging is completed, the battery indicator  appears on the status bar.

3. Disconnect the charger when the battery is fully charged.

Powering On/Off Your Device

How to power on your device

1. Make sure that your SIM card is in your device and the battery is charged.
2. Press **Power Key** to power on your device.

To power off your device, hold **Power Key** to get the phone options, select **Power off**, and then tap **OK**.

How to switch your device to sleep mode


Press **Power Key**.

Sleep Mode suspends your device to a low-power-consumption state while the display is off to save battery power. Your device also goes into Sleep Mode automatically when you leave it idle after a certain period of time.

How to wake up your device from sleep mode

If your device is switched to sleep mode, you need to wake it up:

1. Press **Power Key** to activate your screen display.
2. Drag  icon to the right.

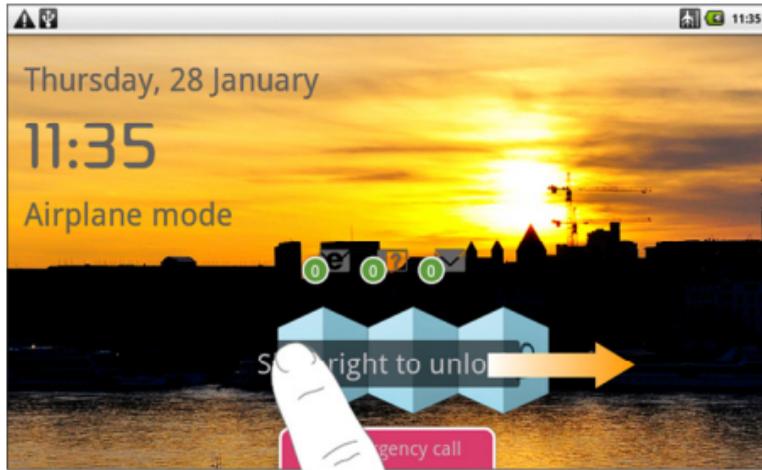

Notes:

If you have set an unlock pattern for your device (refer to *Device Settings-Security Settings-Protecting Your Device with a Screen Lock-Set the screen unlock pattern*), you need to draw the pattern to unlock your screen.

Getting Around Your Device

Using Finger Gestures

You can use finger gestures to control your device. The controls on your touch screen change dynamically depending on the tasks you are performing.

1. Tap the buttons, icons, or applications to select items or to open applications.
2. Hold a certain item to get available options.
3. Slide on the screen, you can scroll up/down. From Home Screen, you can also slide left/right to browse the extended Home Screen.
4. Drag a certain item to move it or to do some other corresponding operations.

Tips:

Besides using finger gestures to control your device, you can also switch your device screens (such as text input screen, gallery screen, etc.) between portrait or landscape mode by holding the device upright or sideways.

Home Screen

You can add or remove home items in your Home Screen.



Notifications	Displays the reminders and status icons of your device. Flick down to open the notifications panel
Bars	Shows you which part of the Home Screen you are looking at.
Shortcuts & Widgets	Tap to start related applications.
Applications	Tap to open the main menu.

How to extend the Home Screen

Beyond the screen width, the Home Screen extends to provide more space for adding items. Slide your finger to the left or right to get the extended Home Screen.



Customize the Home Screen Wallpaper

To change the wallpaper

1. Tap **Home Key** to return to the Home Screen.
2. Tap **Menu Key** and select **Wallpaper**.
3. Select the wallpaper you want to use from **Gallery**, **Live wallpapers**, or **Wallpapers**.

4. Tap **Save** or **Set wallpaper**.

To add a Home Screen item

1. Tap **Home Key** to return to Home Screen.
2. Slide left or right to find an extended Home Screen where there is space to add an item.
3. Tap **Menu Key** and select **Add**.
You can also tap and hold the blank area of the Home Screen to get the **Add to Home screen** shortcut menu.
4. Select an item type and the item you want to add to Home Screen.

To remove a Home Screen item

1. Tap **Home Key** to return to Home Screen.
2. Hold the item you want to delete until the  icon appears on the screen.
3. Drag the item to .



Device Status and Notifications

Device Status

	GPRS connected		Signal strength
	GPRS in use		Roaming
	EDGE connected		Phone speaker is mute
	EDGE in use		Phone microphone is mute

	3G connected		No SIM card installed
	3G in use		GPS is on
	Battery is very low		GPS is connected
	Battery is low		USB is connected
	Battery is full		Connected to a Wi-Fi network
 	Battery is charging		Alarm is set
	Vibrate mode		Wired microphone headset
	Airplane mode		Bluetooth is on
	No signal		Speaker is on

Notifications

	New Mail		New instant message
	New SMS/MMS		Upcoming event
	New voicemail		Song is playing
	Missed call		Downloading data
	Call in progress		Content downloaded
	Call on hold		Uploading data
	Call forwarding on		More (not displayed) notifications
	Problem with SMS/MMS delivery		

How to open the notification panel

From the Notifications Panel, you can get the information of calendar events, new messages, and ongoing settings such as call forwarding or the current call status. You can open the message, reminder, event notification etc. from the Notification Panel.

1. Hold the notifications bar until  appears on the top of the Screen.
2. Drag the  downwards.

Tips:

You can also open the Notifications Panel from the Home Screen by tapping **Menu Key > Notifications**.

Applications and Settings Preview

Programs Preview

Your LIGHT has lots of functions. Tap  to get the following programs that are pre-installed on your device.

Applications	Description
Alarm	Enables you to set alarms.
Browser	Enables you to browse the internet.
Calculator	Enables you to perform the basic calculation, such as addition, subtraction, multiplication, division and so on.
Calendar	Enables you to schedule appointments, including meetings and other events.
Call log	Enables you to view your call history.
Camcorder	Enables you to enter camcorder and shoot the video clips you like.
Camera	Enables you to enter the camera screen directly and use the camera features.
Contacts	Enables you to manage the information of your friends and colleagues.

Applications	Description
Dialer	Enables you to dial a number to call.
Docs To Go	Enables you to view your documents.
Email	Enables you to enter the Email screen, where you can setup Email, send or receive Emails.
Filer	Enables you to organize and manage your files on your microSD card.
FMRadio	Enables you to search for radio channels, listen to them, and save them on your device.
Gallery	Enables you to organize and manage your multimedia files.
Global Time	Enables you to view the global time.
Gmail	Enables you to access your Gmail account and check your email on your mobile device.
Latitude	See your friends' locations and share yours with them.

Applications	Description
Maps	Enables you to track your current location, view real-time traffic situations, and receive detailed directions to your destination.
Market	Enables you to access to useful applications and fun games which you can download and install on your device.
Messages	Enables you to enter the Messages screen, where you can send and receive SMS and MMS messages.
Music	Enables you to browse your audio files and listen to them in the Music player.
Navigation	Enables you to use Google Maps Navigation.
Note pad	Enables you to create text notes.
Places	Enables you to find restaurants, ATMs, and other places of interest near you.

Applications	Description
Settings	Enables you to adjust the device settings.
SIM Toolkit	Appears on the screen only if your SIM card provides this function. Please contact your service provider for detailed information.
Sound Recorder	Enables you to record audio clips.
Stopwatch	Enables you to measure the exact time it takes to do something.
Talk	Enables you to send and receive instant messages and voice over internet protocol (VOIP), offered by Google Inc.
Task Manager	Enables you to view and manage all the running programs on your device.
Videos	Enables you to browse your video files and watch them in the Videos player.

Applications	Description
YouTube	Enables you to watch YouTube videos and upload your own.

Settings Preview

You can adjust the device settings. Tap **Home Key** >  > **Settings** to view all the settings on your device.

Tips:

You can also tap **Menu Key** > **Settings** from the Home Screen.


Wireless & networks	Enables you to configure and manage your device's wireless connections, such as Wi-Fi, Bluetooth, mobile networks, and Virtual Private Networks. You can also enable the Airplane mode.
Call settings	Enables you to set up fixed dialing numbers, voicemail, call forwarding, call waiting, and caller ID etc.

Sound & display	Enables you to set sound settings, such as ringtones, notifications, and display settings such as screen brightness and so on.
Location & security	Enables you to set the screen unlock pattern, enable the SIM card lock, or manage the device's credential storage. You can also select the sources to use when determining locations from My Location .
Applications	Enables you to manage applications and installation of new programs.
USB Settings	Enables you to configure the PC connection and USB Charging settings.
Account & sync	Enables you to manage your account and configure general sync settings.
Privacy	Enables you to configure privacy settings, such as Location, back up Settings, and Personal data.
SD card, USB	Enables you to check the available memory of the

Mass Storage & phone storage	external card and the internal storage.
Search	Enables you to set the search options.
Language & keyboard	Enables you to set the locale (operating system language and region) and text input options.
Accessibility	Enables you to manage accessibility options.
Text-to-speech	Enables you to configure the text-to-speech settings if you have installed a text-to-speech (voice data) application.
Date & time	Enables you to set the date, time, time zone, and date/time format. If the network supports, you can also enable automatic time update.
About phone	Enables you to view the device status, battery level, and legal information.

How to open recently used applications

1. Hold **Home Key** from any screen until the following recently used applications interface appears.

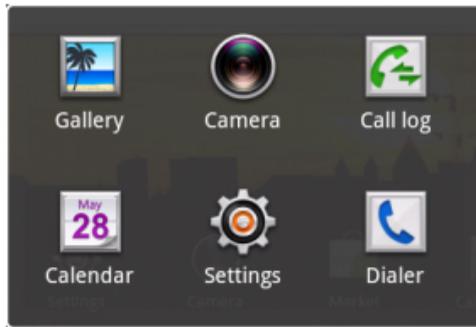

2. Tap the application you want to open.

Phone Calls

Making a Call

Making a Call from Dialer

1. Tap  from the Home Screen.
2. Enter the phone number or the contact name you want to call.
Tap  to erase the wrong entry, hold this key to clear all digits. Your device automatically lists the matching contacts. You can tap  to hide the keypad and to see if there are more matching numbers or contacts.
3. Tap .

Making a Call from Contacts

1. Tap  from the Home Screen.

2. Slide your finger to scroll the contacts list and tap the contact you want to call.

Tips:

You can search for a contact by tapping **Menu Key > Search**.

3. Tap .

Making a Call from Call History

1. Tap  from the Home Screen to open the Dialer.
2. Tap  to open Call History.

Tips:

You can also open Call History by tapping the  > **Call log** from the Home Screen.

3. Tap a recently dialed or received call from the list. You can scroll down the list to see more call history.
4. Tap .

Making a Call from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

1. Tap **Home Key** >  and tap the message conversation you need.
2. Tap the message you need in the conversation.
3. Select the number and tap .

Making an Emergency Call

1. Enter the emergency number for your location from Dialer.
2. Tap .

Notes:

It is possible to dial emergency numbers when the SIM card is not inserted. Contact your service provider for the emergency numbers they support.

Making an International Call

Notes:

This function is subject to your service operator and the network status.

1. Hold  from the Dialer to enter “+”.
2. Enter the full phone number.

For example: +49-123-12345678 in the following format: + country code-area code-phone number.


3. Tap .

Receiving a Call

Answering an Incoming Call

When there is an incoming call, the LIGHT will display the information on the screen.

Drag  to the right to answer the call.

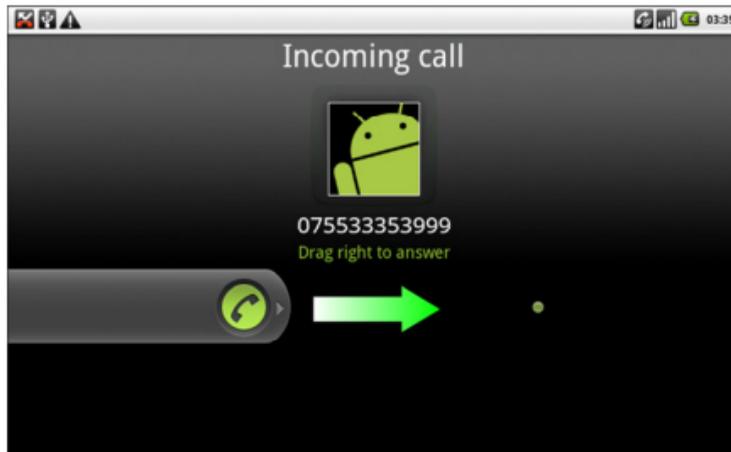

Rejecting an Incoming Call

Drag  to the left to reject the call.

Muting a Call

During a call, you can tap **Mute** to turn off the microphone so that the person with whom you are speaking cannot hear you, but you can still hear him or her.

When the microphone is turned off, the mute icon  appears on the screen.

Putting a Call on Hold

During a call, you can use the following methods to put the call on hold. Tap . The  icon will be displayed if a call is on hold.

Turning the Speaker On/Off

The speaker is always on when the headset is not plugged in. When you connect the headset to your device, tap **Menu Key** > **Speaker** during a call to turn the speaker on or off.

The speakerphone icon () appears in the status bar when the speakerphone is on.

Ending a Call

Tap  to end a call.

Call Settings

You can adjust the call settings of your phone. To open the call settings menu, press **Menu Key > Settings > Call settings** from the Home Screen.

Fixed Dialing Numbers	Enables you to restrict outgoing calls to a fixed set of numbers. To enable this feature you must know your SIM card's PIN2 code.	
Voicemail service	Enables you to select a voicemail service provider.	
Voicemail settings	Enables you to specify a voicemail number.	
DTMF Tones	Enables you to set the length of DTMF tones.	
GSM/WCDMA call settings	Call forwarding	Enables you to forward incoming calls to a different number. You can select when to

forward: **Always forward, Forward when busy, Forward when unanswered**, or

		Forward when unreachable.	
	Additional settings	Caller ID	Enables you to choose whether to display your number in outgoing calls.
		Call waiting	Enables you to choose whether to be notified of new incoming calls while you are already on a call.
Cell broadcast settings	Enable or disable receipt of cell broadcast messages. You can also select languages and manage channels. This function needs network support. Please consult your service provider.		

Contacts


Starting to use Contacts

You can add new contacts along with their information. Setting up communication information for the contact will allow you to call the person quickly or browse the contact's information. Contacts are saved in the internal memory or in the SIM card. If you store the information in the SIM card, you can fill the name and a number. If you store the information in the internal memory, you can also fill out more information including Email, Postal address, pictures, Nickname, website, etc.

Tap **Home Key** >  to enter the Contacts Screen.

Contacts Screen

There are four tabs in the Contacts Screen: **Call log**, **Contacts**, **Favorites**, and **Groups**.

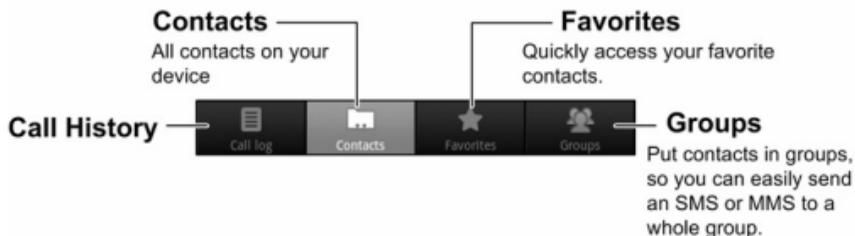

Managing Contacts

Importing/Exporting Contacts

You can import/export contacts from/to you SIM card or microSD card.

Import/export contacts from/to SIM card

1. Tap **Menu Key** > **Import/Export** from the Contacts Screen.
2. Select to import or export contacts from/to your SIM card.
Your LIGHT will automatically read the contacts.
3. Select the contacts you want to import/export.

Tips:

▶ If you want to import/export all contacts, tap **Menu Key > Select all**.

4. Tap **Done**.

Import/export contacts from/to memory card

1. Tap **Menu Key > Import/Export** from the Contacts Screen.

2. Select to import or export contacts from/to microSD card.

If you want to import contacts from microSD card, you should have vCard files saved in the microSD card. If there is more than one vCard file, you need to select the vCard file.

3. Tap **OK**.

Creating a Contact

1. Tap **Menu Key > New contact** from the Contacts Screen.


2. Select the location to save your contact.

3. Enter the name and phone numbers. You can also set the Group, Email addresses, IM addresses, Postal addresses, Organizations etc. if you select to create a phone contact.

4. Tap **Done** to save the contact.

Adding a Contact to Favorites

1. Select the contact you want to add to Favorites from your Contacts Screen.
2. Hold the contact until a shortcut menu appears.

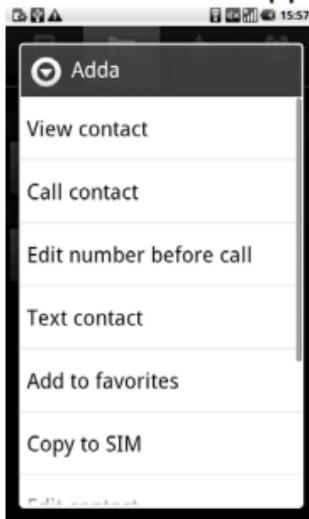

3. Tap **Add to favorites**.

Searching for a Contact

1. Tap **Menu Key > Search** from the Contacts Screen.
2. Input the contact name you want to search for.

The contacts matched will be listed.

Editing a Contact

1. Select the contact you want to edit from the Contacts Screen.
2. Tap **Menu Key > Edit contact**.

Tips:

You can also edit a contact by holding it in the Contacts Screen and select **Edit contact** from the pop-up shortcut menu.

3. Edit the contact and tap **Done**.

Deleting a Contact

1. Select the contact you want to delete from the Contacts Screen.

2. Tap **Menu Key > Delete contact**.

Tips:

You can also delete a contact by holding it in the Contacts Screen and select **Delete contact** from the pop-up shortcut menu.

3. Tap **OK**.

Entering Text

Using the On-screen Keyboard

When you enter a field that needs text or numbers, hold the input box and select **Input method** from the pop-up menu to change input method.

Android Keyboard

Android Keyboard is a keyboard layout similar to a desktop computer keyboard. You can choose to use the landscape orientation of the on-screen keyboard, by turning the LIGHT sideways.




Tips:

- If you want to use the landscape keyboard, you need to select the **Orientation** check box in **Settings > Sound & display**.
- The landscape QWERTY keyboard is not supported in all applications.


TouchPal Keyboard

You can select to use one of the three layouts of TouchPal Keyboard.

- Full QWERTY

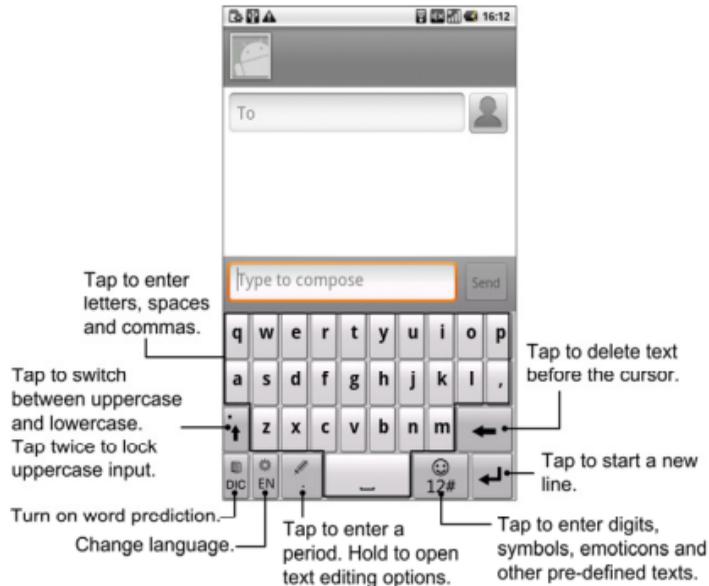


- 12–Key PhonePad

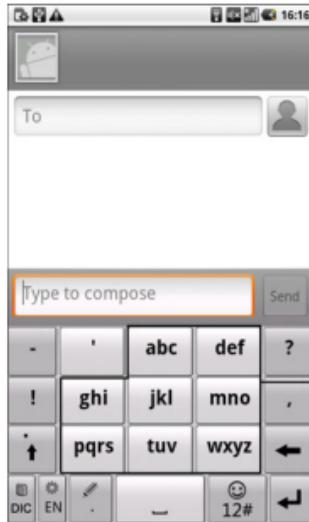

Tap a key repeatedly until the desired letter appears.

- CooTek T+

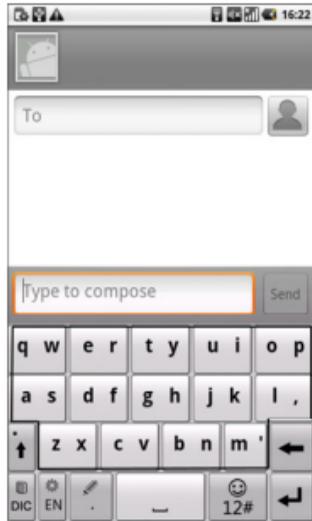


Tap to enter the left letter on the key; tap and flick right to enter the right letter/symbol on the key.

XT9 Text Input

XT9 Text Input can speed up text input by replacing the letter tapping/typing motion of input with a tracing gesture where you move your finger from letter to letter without lifting the finger until you reach the end of the word.

You can select to use one of the three layouts (Keyboard, Reduced keyboard, Phone keypad) of XT9 Text Input Keyboard.

- Keyboard

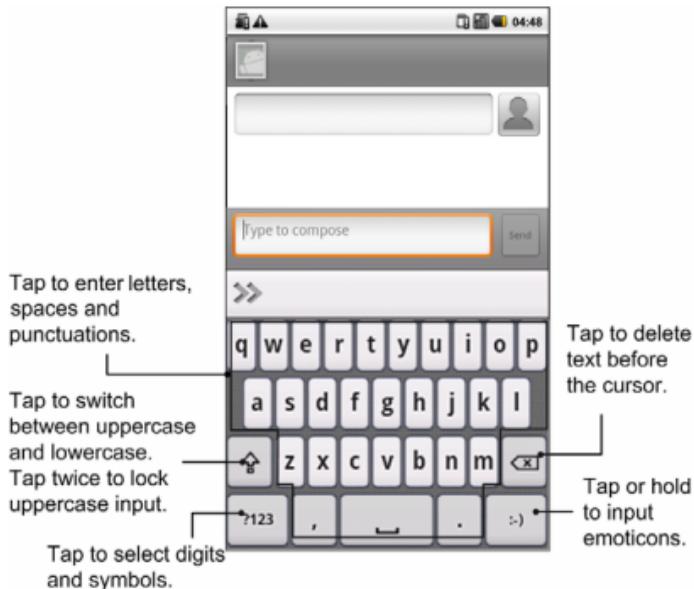


Move your finger from letter to letter to trace a word without lifting the finger until you reach the end of the word.


The trace feature is also available in the Reduced keyboard layout and Phone keypad layout.




- Reduced keyboard

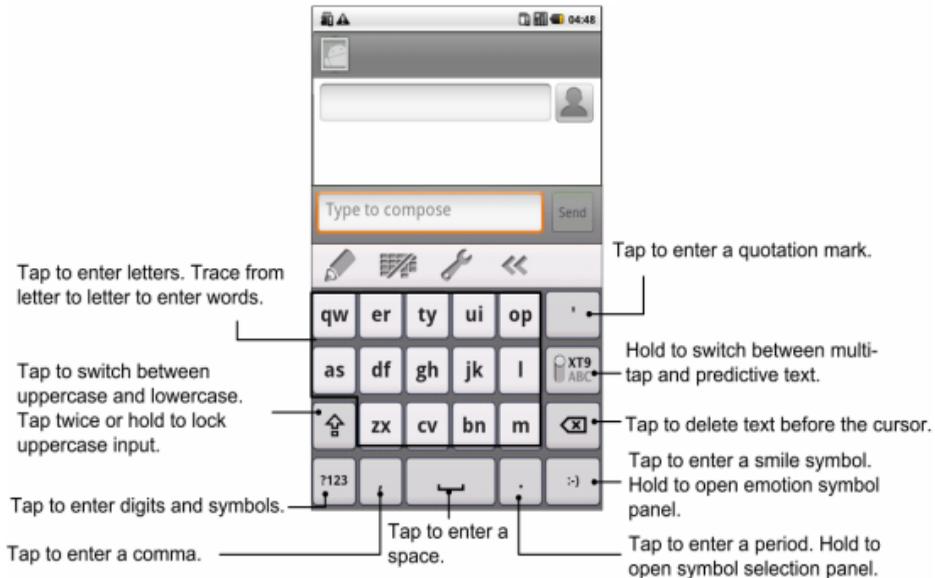

- Phone keypad

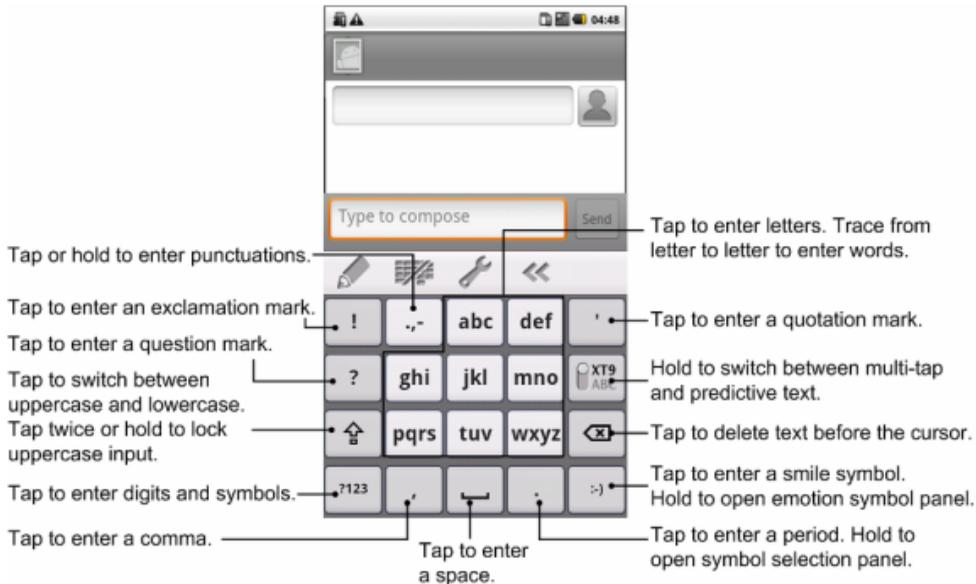

- Using the tool bar

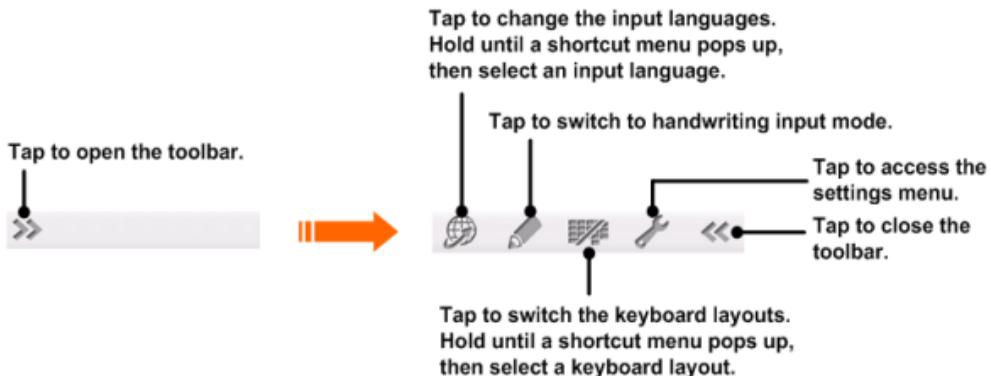

Notes:


The  icon is available when more than one language is activated. You can select more input languages by pressing **Menu Key > Settings > Language & keyboard > XT9 Text Input > Languages and settings** from Home Screen.

- Using XT9 handwriting input mode
 1. Switch to XT9 text input method.
 2. Open the toolbar and tap  to enable the handwriting input mode.

3. Write the letters of your word in the handwriting panel. You can also write punctuations, symbols or digits if the feature is enabled in Handwriting Input settings.

Note: The direction you draw is very important, for example, the “h” character must begin in the upper left and finish in the lower right.

4. When you are finished with the word, tap the correct word in the selection list, or tap the space character.

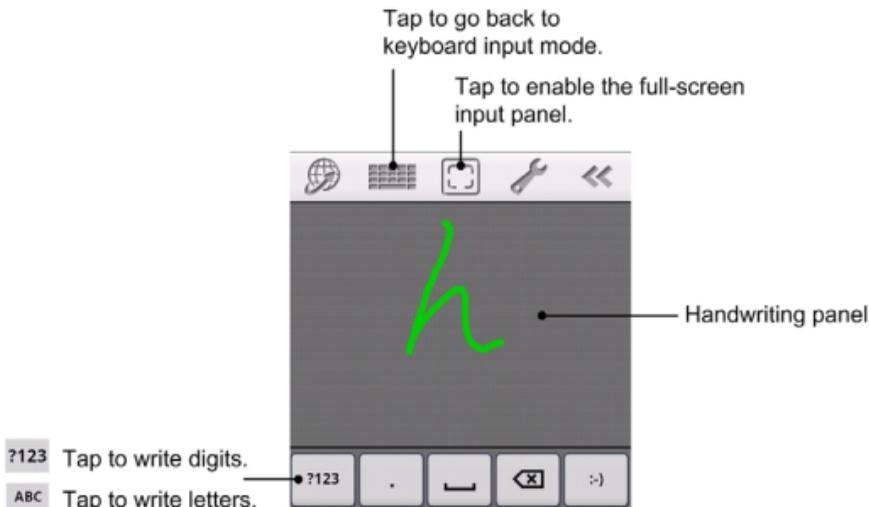

More finger gestures available in the handwriting input mode:



Delete character left.



Input a space. (when writing letters)

Tips for using XT9 Text Input

- Ignore double letters—XT9 Text Input will figure those out for you automatically.
- Tap when you want to. If you want to enter a single letter, go ahead and tap.

- Lift your finger at the end of the word. A space is added automatically when you begin to trace the next word.

Entering Text through the On-screen Keyboard

1. Enter a field that needs text or numbers.
2. Tap or hold the letters on the keyboard to enter your text.

Entering Numbers and Symbols

1. Enter a field that needs text or numbers.
2. Tap    to open the symbol panel.
3. Select the numbers and symbols.

Touch Input Settings

You can configure the touch input settings by tapping **Menu Key > Settings > Language & keyboard** from Home Screen.

TouchPal

- Basic settings
 - ▶ **Word prediction:** Enables the word prediction function.
 - ▶ **Key press sound:** Enables the sound feedback as you touch on the keyboard.
 - ▶ **Key press vibration:** Enables the vibration feedback as you touch on the keyboard.
 - ▶ **Mixed language input:** Enables the language auto-detection if no more than 3 languages are selected.
 - ▶ **Select languages:** Select the languages that you may use.
 - ▶ **Swipe to switch layout:** Select to swipe horizontally over the keyboard to switch layout.
 - ▶ **Layout in portrait mode:** Select **Full QWERTY**, **12-Key PhonePad**, or **CooTek T+** to change the keypad layout in portrait mode.
 - ▶ **Layout in landscape mode:** Select **Full QWERTY**, **12-Key PhonePad**, or **CooTek T+** to change the keypad layout in landscape mode.

- Prediction & Gestures
 - ▶ **Predict next word:** Enables yourLIGHT to predict the next word.
 - ▶ **Correct mistyping:** Enables yourLIGHT to correct your mistyping.
 - ▶ **Slide-down symbols:** Enables you to input symbols by sliding down on keys.
 - ▶ **Relevant words:** Enables you to input relevant words by sliding on candidates.
 - ▶ **Help:** View the online user manual for using TouchPal.
 - ▶ **About:** View the TouchPal information.

Android keyboard

- **Vibrate on keypress:** Enables vibration feedback as you touch on the keyboard.
- **Sound on keypress:** Enables the sound feedback as you touch on the keyboard.
- **Auto-capitalization:** Select the check box to capitalize the first letter of each sentence automatically.

XT9 Text Input

- **Languages and settings:** Select input languages. Tap a language to set up keyboard layout, word suggestion settings, key input settings, trace input settings, and handwriting input settings.
- **Preferences:** Set up keypress vibration, keypress sound, auto-capitalization, and auto-punctuation.
- **About:** View the XT9 version information.

Messages

Messaging is where all of your SMS and MMS accounts are located. To access your message accounts, tap **Home Key** >  > **Messages**.

Exchanging Messages

From **Messages**, you can receive and send an SMS or MMS.

When you receive a new message, you can open it from the Notifications Panel, or from Messages Screen. Simply tap on the new message to read it.

The device will alert you for the unread message(s) with the icon  in the status bar.

Composing an SMS

1. Tap **Home Key** > .
2. Tap **New message**.

3. Tap **To** field and enter the recipient's number. You can also enter the first letters of the recipient's name to display a list of matching names stored in **Contacts**, and then select a recipient from the list.
4. Tap **Type to compose** field and enter the content of your SMS.
5. Tap **Send** to send your SMS.

Composing an MMS

1. Tap **Home Key** > .
2. Tap **New message**.
3. Tap **To** field and enter the recipient's number. You can also enter the first letters of the recipient's name to display a list of matching names stored in **Contacts**, and then select a recipient from the list.
4. Tap **Menu Key** > **Add subject** to enter the subject of your MMS.
5. Tap **Type to compose** field and enter the contents of your MMS.
6. Tap **Menu Key** > **Attach** to add an attachment to your MMS:
Pictures: Select a picture to add to your MMS.

Capture picture: Take a photo and add to your MMS.

Videos: Select a video clip to attach to your MMS.

Capture video: Shoot a video clip and add to your MMS.

Audio: Select an audio file to add to your MMS.

Record audio: Record an audio file and add to your MMS.

Slideshow: Edit a sildeshow and add to your MMS.

7. Tap **Send** to send your MMS.

Tips:

- If you add a subject or an attachment to your SMS, the SMS will be converted to an MMS automatically.
- If you remove the subject and attachment of your MMS, the MMS will be converted to an SMS automatically.

Managing Messages and Messages Threads

SMS and MMS messages which are sent to and received from a contact (or a number) are grouped into message threads in the Messages screen.

Threaded messages show you exchanged messages (similar to a chat program) with a specific contact on the screen. Message threads are sorted by the time when you received them, with the latest one on the top.

Reply to a message

1. Tap the message you want to reply to from the Messages Screen.
2. Tap **Type to compose** and enter the contents of your message.
3. Tap **Send**.

Delete a message (thread)

1. Tap **Menu Key > Delete threads** from the Messages Screen.
2. Select the messages or threads you want to delete.
3. Tap **Delete**.

Notes:

You can also delete a message or thread by opening it from the Messaging Screen and tapping **Menu Key > More > Delete thread**.

Message Settings

Tap **Menu Key > Settings** from the Messages Screen. You can configure your message settings.

Storage settings

- **Delete old messages:** Select to delete old messages as limits are reached.
- **Text message limit:** Set the maximum number of text messages allowed in a single thread.
- **Multimedia message limit:** Set the maximum number of multimedia messages allowed in a single thread.

Text message (SMS) settings

- **Delivery reports:** Request a delivery report for each SMS message you send.
- **Manage SIM card messages:** Manage the messages saved in your SIM card.
- **Service Center:** Enables you to view and edit the service center.

Multimedia message (MMS) settings

- **Delivery reports:** Request a delivery report for each MMS message you send.
- **Read reports:** Request a read report for each MMS message you send.
- **Auto retrieve:** Select to retrieve MMS messages automatically.
- **Roaming auto-retrieve:** Select to retrieve MMS messages automatically when you are roaming.

Notifications settings


- **Notifications:** Select to display message notifications in the status bar.
- **Select ringtone:** Select a ringtone for your incoming messages.
- **Vibrate:** Select to make your LIGHT vibrate when receiving a new message.

Using Email

Tap **Home Key** > . You can enter the Email Screen to setup your Email account and exchange Emails.

Creating an Email account

1. Enter your Email address and password, then tap **Next** when you enter the Email Screen for the first time.

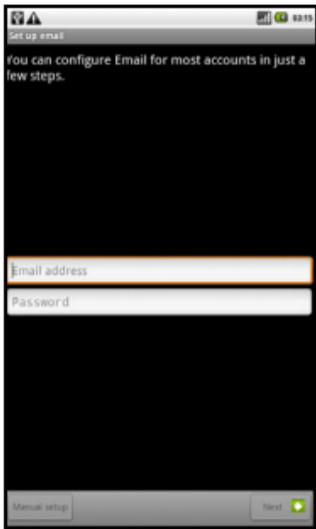

2. Select the type of your account, edit the incoming server settings, and then tap **Next/Next[Check]**.

If you tap **Next[Check]**, your device will check the incoming server settings and finish the setup automatically. If you are notified that setup could not be finished, you might need to correct some settings to finish it. If there is any problem, please contact your mobile service provider and Email service provider.

3. Edit the outgoing server settings and tap **Next/Next[Check]**.

If you tap **Next[Check]**, your device will check the outgoing server settings and finish the setup automatically.

4. Set the Email checking frequency, select whether to use this account by default or be notified when Email arrives, and then tap **Next**.
5. Give your account a name and set a name displayed on outgoing message, and then tap **Done**.

Composing and sending an Email

After creating an Email account, you can compose and send Email messages.

1. Tap **Menu Key > Compose** from the Email Screen.

2. Tap the **To** field and enter the recipient's address.

When you enter the address, the matching addresses saved in your Contacts will be displayed. You can tap the recipient from the list.

Tips:

You can also tap **Menu Key > Add Cc/Bcc** to add recipients.

3. Enter the subject and the content of your Email.
4. Tap **Send**.

Reply to or Forward an Email

1. Open the Email you want to reply to or forward from Email Screen.
2. Tap **Reply** or **Menu Key > Forward** to reply to/forward the Email.
You can also tap **Reply all** to reply to all recipients of the Email.
3. Enter the contents/recipients of your Email.
4. Tap **Send**.

Email Settings

Tap the account you want to set from the Email Screen and tap **Menu Key > Account settings**. You can get the Email settings.

General settings

- **Account name:** Set your account name.
- **Your name:** Set the name displayed on outgoing message.
- **Email address:** View or edit the email address.
- **Use signature:** Select to use signature.
- **Signature:** Edit your signature.
- **Email check frequency:** Set the email checking frequency.
- **Power-saving mode:** Enable the email synchronization time intelligent adjustment.
- **Default account:** Select the check box to send email from this account by default.

Notification settings

- **Email notifications:** Select to be notified in status bar when Email arrives.
- **Select ringtone:** Select the ringtone for incoming Email notification.
- **Vibrate:** Select to be notified by vibration with ringtones when Email arrives.

Server settings

- **Incoming settings:** Set the incoming server settings.
- **Outgoing settings:** Set the outgoing server settings.

Getting Connected

Connecting to the Internet

Your device's networking capabilities allow you to access the Internet or your corporate network.

Ways of Connecting to the Internet

You can use the default connection settings to connect to the Internet through your mobile network (GPRS/3G/EDGE), or Wi-Fi.

GPRS/3G/EDGE

Use **GPRS/3G/EDGE** to connect to the Internet and to send and receive MMS/Email messages on your LIGHT. You will need a data plan to use your wireless service provider's GPRS/3G/EDGE network. Check with your wireless service provider for GPRS/3G/EDGE rates. If the GPRS/3G/EDGE settings are not pre-configured on your device, contact your operator for the parameters. Do not change the settings as this may cause services to stop working.

Add a new GPRS/3G/EDGE connection

Before you begin, get the following information from your service provider:

- Access Point Name (APN)
 - Your user name and password if needed.
 - Server IP and the port number if the network uses a proxy server.
1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Mobile networks** > **Access Point Names**.
 2. Tap **Menu Key** > **New APN**.
 3. Tap **Name** to enter you APN name (You can name it as you like).
 4. Tap **APN** to enter the APN you want to add.
 5. Tap **Proxy** and **Port** to enter the Server IP and port if the network uses a proxy server.
 6. Tap and enter **Username** and **Password** (If there is no User name and Password, leave them blank).
 7. Tap and enter **APN type** if needed.

8. Tap **Menu Key > Save** to complete.

Notes:

If you want to set the APN to default settings, tap **Menu Key > Reset to default**.

Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 300 feet (100 meters).

Turn on Wi-Fi

1. Tap **Home Key >  > Settings > Wireless & networks**.
2. Select the **Wi-Fi** check box to turn Wi-Fi on.

Add a Wi-Fi network

1. Tap **Home Key >  > Settings > Wireless & networks > Wi-Fi settings**.

The Wi-Fi network names and security settings (open network or secured network) of detected Wi-Fi networks are displayed in the Wi-Fi networks section.


2. Tap a network to connect.
 - ▶ If you select an open network, you will be automatically connected to the network.
 - ▶ If you select a secured network, you will need to input the wireless password.

Check the Wi-Fi network status

You can check the Wi-Fi network status from the status bar and wireless controls.

1. Check the  icon in the status bar.
2. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Wi-Fi settings**, then tap the wireless network that the device is currently connected to.

You can check the network status from the pop-up window.

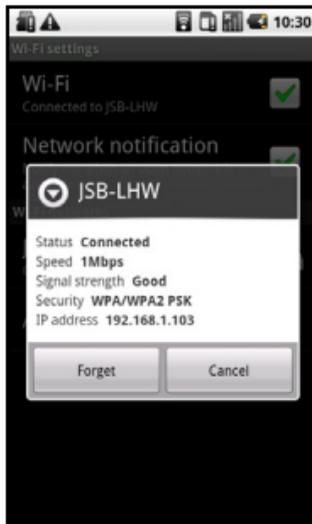

Using Browser

You can use your Browser to browse most of the websites. Some web pages may not be displayed properly as some specific web page technologies, such as Flash, are not supported by the browser. Your LIGHT will automatically create an EDGE or GPRS/3G connection for you while

browsing web pages.

Opening Browser

Tap **Home Key** >  > **Browser** to start this function.

Opening Web Pages

In **Browser**, you can open web pages through the following ways.

1. Tap the address bar to enter the website you want to browse, and tap **Go**.
2. Tap **Menu Key** > **Bookmarks** and select an item to open.
3. Select an item from **Most visited** tab/**History** tab of Bookmarks Screen.

Browsing Options

When browsing web pages, you can do some operations.

1. Tap **Menu Key** > **Refresh** to refresh the page.

2. Tap **Menu Key > More > Find on page** to enter the search item to view the search result.
3. Tap **Menu Key > More > Select text** and slide your on the page to select the text you want to copy.
Your LIGHT automatically copies the selected text to the clipboard.
4. Tap **Menu Key > More > Share page** to send the page by Email, Gmail, or Messages.
5. Tap **Menu Key > More > Page info/Downloads** to view the page or download information.
6. Rotate your device sideways to view the landscape Browser Screen if you select the **Orientation** check box in **Home Key >  > Settings > Sound & display**.


Open a new browser window

1. Tap **Menu Key > New window** to open a new browser window.
2. Tap the address bar to enter the website you want to browse.

Switch between different browser windows

If you have more than one browser window opened, you can switch between these windows.

1. Tap **Menu Key > Windows** to view all the windows you opened.

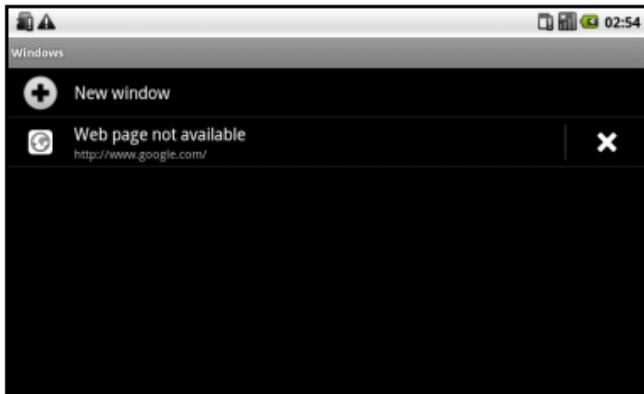

2. Tap the page you want to browse.

Tips:

You can also tap  to close a window.

Open links in web pages

1. Open a web page that contains a link.
2. Tap a link to open the page.

You can also hold on the link to open the shortcut menu:

- ▶ **Open:** Open the web page.
- ▶ **Open in new window:** Open the web page in a new window.
- ▶ **Bookmark link:** Save the link to your **Bookmarks**.
- ▶ **Save link:** Download the linked web page to your LIGHT.
- ▶ **Share link:** Send the link by Email, Gmail, or Messages.
- ▶ **Copy link URL:** Copy the link to the clipboard.

Download applications from web pages

1. Open a web page that contains an application link.
2. Tap the link or hold on the link and select **Save link** to download the application to your LIGHT.

Notes:

Downloaded applications are saved in your microSD card.

Using Bookmarks

You can save your frequently-used pages as bookmarks on your LIGHT.

Add a new bookmark

1. Open a web page.
2. Tap **Menu Key > Bookmarks**.
3. Tap **Add**.
4. Enter a name of the bookmark and tap **OK**.

Edit a bookmark

1. Open a Browser window.
2. Tap **Menu Key > Bookmarks**.
3. Select an item you want to edit and hold on it until the shortcut menu pops up.

4. Select **Edit bookmark**.
5. Edit the name or location, and then tap **OK** to save it.

Delete a bookmark

1. Open a Browser window.
2. Tap **Menu Key > Bookmarks**.
3. Select an item you want to delete and hold on it until the shortcut menu pops up.
4. Select **Delete bookmark** and tap **OK** to confirm the deletion.

Browser Settings

You can set the Browser text size, home page etc. by tapping **Menu Key > More > Settings** from a browser window.

Page content settings

- **Text size:** Adjust the browser text size.
- **Default zoom:** Set the browser default zoom.

- **Open pages in overview:** Select to show overview of newly opened pages.
- **Text encoding:** Select a text encoding type.
- **Block pop-up windows:** Select to block pop-up windows.
- **Load images:** Select to show the images of web pages.
- **Auto-fit pages:** Select to format the web pages to fit the screen.
- **Landscape-only display:** Display the web pages only in landscape screen orientation.
- **Enable JavaScript:** Select to enable JavaScript.
- **Enable plug-ins:** Select to enable plug-ins.
- **Open in background:** Select to open new windows behind the current one.
- **Set home page:** Select to edit the home page web site.

Privacy settings

- **Clear cache:** Delete all the cached page contents.
- **Clear history:** Clear the browser navigation history.

- **Accept cookies:** Select to allow sites to save and read cookies.
- **Clear all cookie data:** Clear the browser cookies.
- **Remember form data:** Select to remember the data you type in forms for later use.
- **Clear form data:** Clear the saved form data.
- **Enable location:** Select to allow sites to request access to your location.
- **Clear location access:** Select to clear access for all websites.

Security settings

- **Remember passwords:** Select to save usernames and passwords for web sites.
- **Clear passwords:** Clear the saved passwords.
- **Show security warnings:** Select to show warnings if there is a problem with a site's security.

Advanced settings

- **Website settings:** View advanced settings for individual websites. Only available for some websites.

- **Reset to default:** Clear all browser data and reset all settings to default.

Bluetooth

Bluetooth is a short-range wireless communication technology. Wireless devices with Bluetooth capabilities can exchange information within a distance of about 10 meters without any physical connection. The Bluetooth devices must be paired before the communication is performed.

Turning on/off Bluetooth

1. Tap **Home Key** >  > **Settings** > **Wireless & networks**.
2. Select the **Bluetooth** check box to turn Bluetooth on.

The  icon will be displayed in the status bar. If you want to turn Bluetooth off, clear the **Bluetooth** check box.

Notes:

By default, Bluetooth is turned off. If you turn it on, and then turn off your

device, Bluetooth is also turned off. When you turn on your device again, Bluetooth turns on automatically.

Making your device visible

Other devices with Bluetooth capabilities can detect your LIGHT, establish a partnership, or use a Bluetooth service.

1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Bluetooth settings**.
2. Select the **Bluetooth** check box if needed.
3. Select the **Discoverable** check box to make your device visible.

Change your device name

1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Bluetooth settings**.
2. Select the **Bluetooth** check box if needed.
3. Tap **Device name**.
4. Enter the name and tap **OK**.

Pair with another Bluetooth device

You can pair your device with another device that has Bluetooth capabilities. Once you do this, the two devices must have Bluetooth turned on but do not need to be visible for you to exchange information between them.

1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Bluetooth settings**.

2. Tap **Scan for devices**.

Your LIGHT will display all reachable Bluetooth devices in the **Bluetooth devices** section.

3. Tap the device you want to pair with.

4. If necessary, type your PIN to pair and tap **OK**.

Tips:

The same PIN should be entered on the other device.

Experiencing Multimedia

Camera

Your LIGHT comes with a 3.2–megapixel camera that lets you capture sharp pictures.

Opening Camera

Tap **Home Key** >  > **Camera** to open the camera.

Notes:

You can switch from the camera to the camcorder quickly: Drag the  switch up.

Taking Pictures

Aim the camera at the subject and then tap  to take the shot.

► Tap the picture in the right corner of your Camera Screen to view the picture just captured.

- ▶ Tap **Menu Key > Gallery** to view all of your pictures.

Camera Settings

By tapping **Menu Key > Settings** from the Camera Screen, you can adjust the camera settings.

Camera settings

- **White balance:** Tap to adjust the white balance. White balance enables the camera to capture colors more accurately by adjusting to the current lighting environment.
- **Anti Banding:** Select to adjust preview images automatically or for specified AC frequencies, in order to avoid striate previews caused by interference.
- **Color effect:** Tap to select the picture effect.
- **Store location:** Select to record location in picture data.
- **Select ISO:** Tap to set the ISO level to 100, 200, 400, or 800, or set it back to Auto. Higher ISO numbers are better for taking pictures in low light conditions.

- **Picture size:** Tap to select the size of your captured pictures.
- **Picture quality:** Tap to adjust the jpeg quality.
- **Sharpness:** Tap to adjust the saturation.
- **Contrast:** Tap to adjust the contrast. Higher contrast ratio enables you to easily see the sharp colors of blue, red or green against any black color.
- **Saturation:** Tap to adjust the saturation.

Restore to default settings

Restore to default settings: Restore the camera settings to default.

Camcorder

Camcorder enables you to shoot video clips.

Opening Camcorder

Tap **Home Key** >  > **Camcorder** to open the camcorder.

Notes:

You can switch from the camcorder to the camera quickly:

- ▶ Drag the  switch down.

Shooting Videos

1. Tap  to start shooting.
2. Tap  to stop shooting.

Notes:

- ▶ Tap the picture in the right corner of your Camcorder Screen to view the video clip just shot.
- ▶ Tap **Menu Key > Gallery** to view all of your video clips.

Video Settings

By tapping **Menu Key > Settings** from the Camcorder Screen, you can adjust the video settings.

Camcorder settings

- **Video quality:** Select the video quality type.
- **Video Encoder:** Select the video encoder type.
- **Audio Encoder:** Select the audio encoder type.
- **Video duration:** Tap to set the video duration.

Restore to default settings

Restore to default settings: Restore the camcorder settings to default.

FM Radio

With the FM Radio, you can search for radio channels, listen to them, and save them on your device. Note that the quality of the radio broadcast depends on the coverage of the radio station in that particular area. The wired headset works as an antenna, so always connect the headset when using the radio. When you receive an incoming call while listening to the radio, the radio will be turned off during the call.

Opening FM Radio


You need to insert a headset to your LIGHT before opening the FM radio.

Tap **Home Key** >  > **FM Radio** to open the FM radio.

After opening the FM radio, you will see the  icon in the status bar.

Listening to FM Radio

1. Tap  or  to scan for channels automatically.
2. Tap **Menu Key** > **Adjust**, and then tap  /  to fine tune the frequency by ± 0.1 MHz manually.
3. Hold on a frequency until a red box appears on the screen, and then drag it to the box to save the frequency.

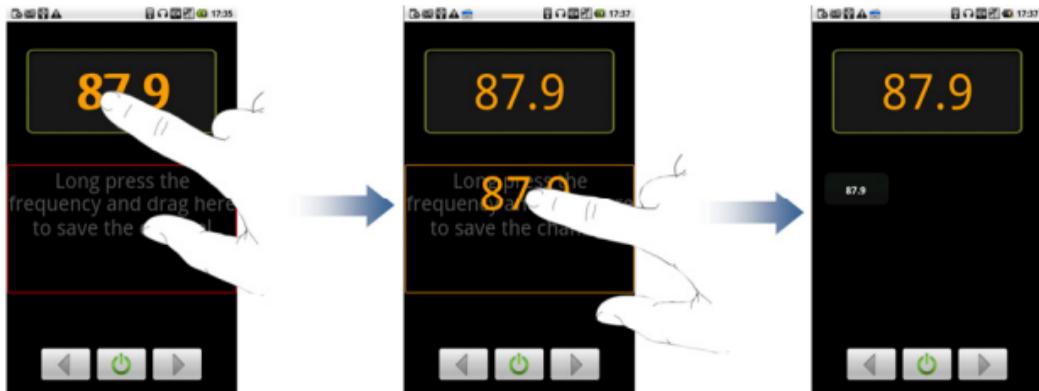

4. Press **Volume Keys** to adjust the volume.
5. Tap **Menu Key > Sleep** to set the FM radio sleep timer.
6. Tap  to turn off the FM radio.

Music

You can play digital audio files from your device's memory card in Music.

Opening Music

You need to copy the audio files you want to play to your memory card first.

1. Tap **Home Key** >  > **Music** to open Music Screen.
2. Select a file to open.

Playing Music

1. Tap Artists/Albums/Songs/Playlists to get the songs you want to play.
2. Tap a song from the list to start playing.

Notes:

Press **Volume Keys** to adjust the volume.

Creating Playlists

You can create some playlists to organize your music files.

1. Select a music file you want to add to a new playlist.
2. Tap and hold on the file until a shortcut menu pops up.

3. Tap **Add to playlist**.
4. Tap **New**.
5. Enter the playlist name and tap **Save**.

The playlist is created and the file you selected is added to the playlist.

Managing Your Playlists

1. Tap **Playlist** from the Music Screen to view all playlists.
2. Hold on the playlist you want to play or edit until a shortcut menu pops up.
 - i. Tap **Play** to play the playlist.
 - ii. Tap **Delete** to delete the playlist.
 - iii. Tap **Rename** to edit the playlist name.

Add songs to your playlist

1. Open the folder where the song you want to add to a playlist is.
2. Hold on the song until a shortcut menu pops up.
3. Select **Add to playlist**.

4. Select a playlist from the list.

Setting a Song as Ringtone

1. Open the folder where the song you want to set as ringtone is.
2. Hold on the song until a shortcut menu pops up.
3. Select **Use as phone ringtone**.

Tips:

You can also set a song as ringtone when you are playing it by tapping **Menu Key > Use as ringtone**.

Videos

You can use **Videos** to play your video files.

Opening Videos

Tap **Home Key >  > Videos** to open the video player.

Your device will show you all video files saved on your memory card.

Playing Videos

Copy the video file to your memory card before playing it.

1. Tap the video file you want to play from the Videos Screen.
2. Tap on the screen to show the control bar. You can pause, rewind, fast forward, or jump to any part of the video with the time bar.

Gallery

Gallery helps you view pictures and play back videos. For pictures, you can also do some basic editing tasks. For instance, set them as your wallpaper or contact icon, and share with your friends.

Sound Recorder

Sound Recorder enables you to record your voice memos that you can set as ringtone.

Opening Sound Recorder

Tap **Home Key** >  > **Sound Recorder** to open the sound recorder.

Notes:

You need to install a memory card to use Sound Recorder.

Record Your Memo

1. Get the microphone near to your mouth.
1. Tap  to start recording.
2. Tap  to stop recording.
3. Tap  to play back the voice recording.
4. Tap **OK** to save the voice recording, or tap **Discard** to discard the recording.

Notes:

You can find your recordings in **Home Key** >  > **Music** > **Playlists** > **My recordings**. If you want to set a recording as ringtone, hold the recording and select **Use as phone ringtone** from the pop-up shortcut menu.

Google Applications

Signing In to Your Google Account

Signing in to your Google Account enables you to synchronize Gmail, Calendar, web album, and contacts between your device and the web.

1. Tap a Google application, such as **Talk**.
2. Read the instructions and tap **Next**.
3. Tap **Sign in** if you have a Google account. Enter your user name and password, and then tap **Sign in**.

Tap **Create** if you do not have a Google account.

Using Gmail

Gmail is Google's web-based email service. Gmail is configured when you sign in to your Google account. Depending on your synchronization settings, Gmail on your LIGHT is automatically synchronized with your Gmail account on the web.

Open Gmail

Tap **Home Key** >  > **Gmail**.

Creating and sending an gmail

1. In the Inbox, press **Menu Key** and then tap **Compose**.
2. Enter the message recipient's email address in the To field. If you are sending the email to several recipients, separate the email addresses with a comma. You can add as many message recipients as you want.
3. Enter the email subject, and then compose your email.
4. After composing your email, tap **Send**.

Using Google Calendar

Tap **Home Key** >  > **Calendar** to use Google Calendar, Google's time management application. You can use the calendar to schedule appointments, including meetings and other events. Your appointments

will be displayed on the screen as are scheduled. All your appointments are synchronised to your Google account, which enables you to share your schedule, get your entire calendar on the go, and receive Email reminder for your upcoming events.

Using Google Talk

Google Talk is Google's instant messaging program, which enables you to communicate with other people that also use Google Talk.

Opening Google Talk

Tap  > **Talk**.

Adding a new friend

You can only add people who have a Google account.

1. In the Friends list, press **Menu Key > Add friend**.
2. Enter the Google Talk instant messaging ID or Google email address of the friend you want to add.

Viewing and accepting an invitation

1. In the Friends list, press **Menu Key > Invites**.

All chat invitations you have sent or received are listed on the pending invitations screen.

2. Tap a received pending invitation, and then tap **Accept** or **Decline**.

Changing your online status

1. Tap the online status icon beside your status message, and then select the status you want on the menu.
2. Tap the status message box and then enter your status message using the onscreen keyboard.

Starting a chat

1. Tap a friend in the Friends list.
2. Chat with your friend by entering text using the on-screen keyboard.
3. After entering your message, tap **Send**.

Settings

Basic Settings

Setting the Time and Date

1. Tap **Home Key > Menu Key > Settings > Date & time.**
2. Clear the **Automatic** check box if you want to set time and date by yourself.
3. Configure the time and date settings:
 - Tap **Set date.** Adjust the date, and tap **Set** to save it.
 - Tap **Select time zone** and tap the area where you are.
 - Tap **Set time.** Adjust the time, and tap **Set** to save it.
 - Tap the check box behind **Use 24-hour format** to change the time format.
 - Tap **Select date format** and select the type you like.

Display Settings

By tapping **Home Key > Menu Key > Settings > Sound & display**, you can configure the display settings, such as orientation, animation, brightness, screen timeout, and calibration.

Adjust the screen brightness

1. Select **Brightness** from the Display settings.
2. Adjust the brightness and tap **OK**.

Adjust the delay before the screen turns off

1. Tap **Screen timeout** from the Display settings.
2. Select the time from the list.

Switch the screen orientation automatically

You can select to switch your screen orientation to landscape or portrait automatically when rotating your LIGHT.

Select the **Orientation** check box from the Display settings.

If you want to disable this function, clear the **Orientation** check box.

Show animation when opening/closing windows

You can select to show an animation when opening or closing windows.

1. Tap **Animation** in the Display settings.
2. Select the animation type you'd like to use.

If you want to disable this function, select **No animations**.

Sound Settings

By tapping **Home Key > Menu Key > Settings > Sound & display**, you can configure the sound settings, such as ringtones and notifications.

Set the ringtone

1. Tap **Phone ringtone** from Sound settings.
2. Select the ringtone you want to use from the pop-up list.

Tips:

You can also set an audio file as the ringtone while browsing the music list.

1. Open the songs list by tapping **Home Key >  > Music > Songs**.

2. Hold the song you like until the shortcut menu pops up.
3. Select **Use as phone ringtone**.

Set the default notification ringtone

1. Select **Notification ringtone** from the Sound & display settings.
2. Scroll the ringtone list and select one to set as the default notification ringtone.
3. Tap **OK** to save.

Switch your device to silent mode

Select the **Silent mode** check box from the Sound & display settings.
The silent icon  will appear in the status bar.

Switch your device to vibration mode

Select the **Phone vibrate** check box from the Sound & display settings.
If your LIGHT is already in silent mode, the vibration icon  will appear in the status bar.

Enable the haptic feedback

You can get the vibration feedback while pressing the soft keys and on certain UI interfaces if you have enabled haptic feedback.

1. Tap **Home Key** >  > **Settings** > **Sound & display**.
2. Select the **Haptic feedback** check box.

Adjust the ringer volume

If you want to set the ringer volume, make sure your device is not in silent mode.

1. Select **Ringer volume** from the Sound & display settings.
2. Adjust the ringer volume and tap **OK** to save.

Tips:

You can adjust the ringer volume quickly by pressing **Volume Keys** from any screen.

Notes:

If you want to adjust the notification volume together with ringer volume, select the **Use incoming call volume for notifications** check box.

Adjust the media volume

You can adjust the media volume for **Music** and **Videos** players.

1. Select **Media volume** from the Sound & display settings.
2. Adjust the media volume and tap **OK** to save.

Enable the touch tones

You can set your LIGHT to play tones when touching the keys of Dialer.

Select the **Audible touch tones** check box from the Sound & display settings.

Enable the screen selection tones

You can set your LIGHT to play sound while making a selection by touching the screen.

Select the **Audible selection** check box from the Sound & display settings.

Enable the SD card notifications

You can set your LIGHT to play sound for microSD card notifications.

Select the **SD card notifications** check box from the Sound & display settings.

Enable Dolby Mobile

You can enable Dolby Mobile for better sound quality.

When Dolby Mobile is on, you can, in the interface of the playing music track, tap **Menu Key > Dolby Mobile Settings** to select a music mode.

Language Settings

You can change the system language of your device.

Change the language of your operating system

1. Tap  > **Settings > Language & keyboard > Select locale.**
2. Select a language from the locale list to set it as the system language.

Mobile Network Services

The GSM and WCDMA services are supported by your device. You can configure the network settings according to your phone service.

Enable data roaming

1. Tap  > **Settings** > **Wireless & networks** > **Mobile networks**.
2. Select the **Data roaming** check box to enable data roaming.

Switch the network mode

1. Tap  > **Settings** > **Wireless & networks** > **Mobile networks** > **Network Mode**.
2. Select **GSM/WCDMA auto**, **WCDMA only**, or **GSM only** to switch the network mode.

Switch the network operators

1. Tap  > **Settings** > **Wireless & networks** > **Mobile networks** > **Network operators**. The phone automatically searches for all available networks.
2. Tap a network to register manually, or tap **Select automatically**.

Set the Access Point Names

You can use the default Access Point Names (APN) to connect to the

internet. If you want to add a new APN, please contact your network operator to get detailed information.

1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Mobile networks** > **Access Point Names**.
2. Tap **Menu Key** > **New APN**.
3. Set the necessary parameters (see *Getting Connected- Connecting to the Internet- GPRS/3G/Edge- Add a new GPRS/3G/EDGE connection*.)
4. Tap **Menu Key** > **Save**.

Security Settings

You can protect your device and SIM card from unauthorized use.


Protecting Your LIGHT with a Screen Lock

Set the screen unlock pattern

You can protect your LIGHT from unauthorized use by creating a

personal screen unlock pattern.

1. Tap  > **Settings** > **Location & security** > **Set unlock pattern**.
2. Read the instructions and tap **Next**.
3. Watch the example pattern and tap **Next**.
4. Draw your own pattern and tap **Continue**.

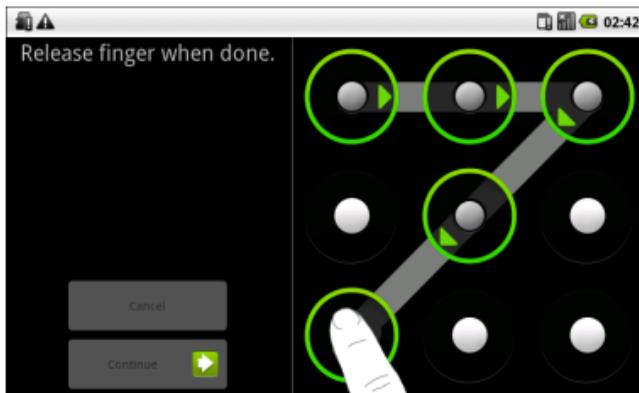


5. Draw the pattern again and tap **Confirm**.

Lock the screen


Press **Power Key** to lock the screen.

Unlock the screen with a pattern

1. Press **Power Key**.
2. Draw the pattern you set to unlock the screen.

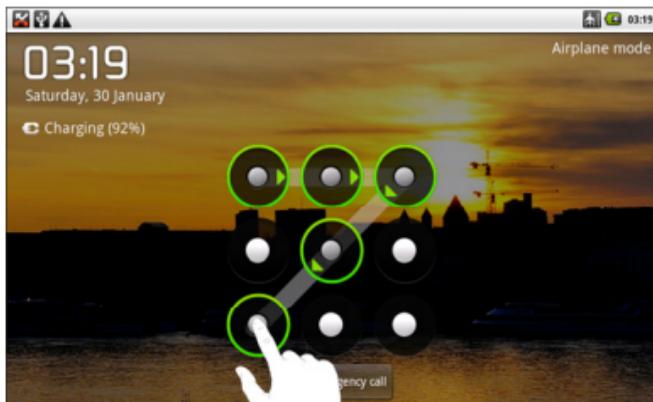

If you make a mistake, your LIGHT will ask you to try again.

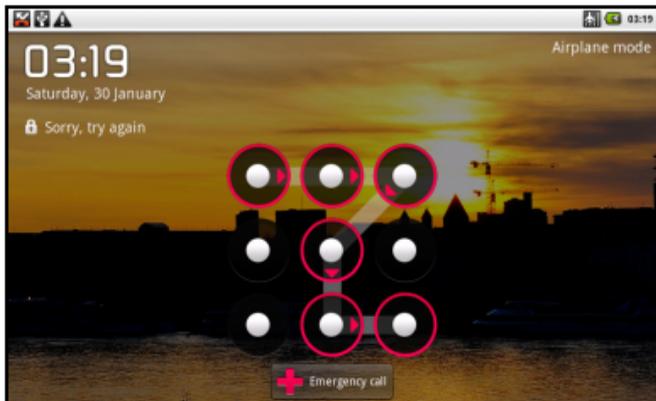

Protecting Your SIM Card with a PIN

You can set the PIN password to prevent others from using the SIM function. The initial PIN code is provided by your service operator.

1. Tap  > **Settings** > **Location & security** > **Set up (U)SIM card lock**.
2. Select the **Enable/disable SIM PIN** check box.
3. Enter the PIN and tap **OK**.

Change SIM PIN

Before changing SIM PIN, you need to enable it.

1. Tap **Home Key** >  > **Settings** > **Location & security** > **Set up (U)SIM card lock**.
2. Tap **Change (U)SIM PIN**.
3. Enter the PIN and tap **OK**.
4. Enter a new PIN and tap **OK**.
5. Reenter the new PIN and tap **OK**.

Setting Up Credential Storage

You can select to allow applications to access secure certificates and other credentials.

Enable secure credentials

1. Tap **Home Key** >  > **Settings** > **Location & security**.
2. Tap **Set password** to create a password.

Tips:

You can also install encrypted certificates from microSD card by tapping **Install from SD card**.

Delete credentials

1. Tap  > **Settings** > **Location & security**.
2. Tap **Clear storage** to clear credentials.

Managing Memory

Managing Your Memory Card

View the space information

Tap **Home Key** >  > **Settings** > **SD card, USB Mass Storage & phone storage**.

You can view the space information from the **Total space/Available space** in **SD card** section.

Unmount your memory card

1. Tap **Home Key** >  > **Settings** > **SD card, USB Mass Storage & phone storage**.
2. Tap **Unmount SD card**.

The  icon will appear in the status bar.

Format your memory card

1. Unmount your memory card.
2. Tap **Format SD card**.
3. Tap **Format SD card** to confirm.

Managing Internal Storage

View the phone space information

1. Tap **Home Key** >  > **Settings** > **SD card, USB Mass Storage & phone storage**.
2. Scroll down to view the **Available space** in the **Internal phone storage** section.

Reset to factory settings

1. Tap **Home Key** >  > **Settings** > **Privacy**.
2. Tap **Factory data reset**.
3. Tap **Reset phone**.
4. Tap **Erase everything**.

Application Settings

Managing Applications

You can view and manage the applications installed in your device.

View the applications installed in your device

Tap **Home Key** >  > **Settings** > **Applications** > **Manage applications**.

Your LIGHT will show you the applications in a list.

Allow the installation of non-Market applications

1. Tap **Home Key** >  > **Settings** > **Applications**.

2. Select the **Unknown sources** check box.

Install an application

You can install an application from the Android Market by selecting the item you want to download and tap **Install**.

You can also install a non-Marketing application if you have allowed the installation of it. Make sure that you select an application developed for your device and processor type before installing it.

1. Tap **Home Key** >  > **Filer**, and open the folder where the application you want to install is.
2. Tap the application to start installation.
3. Read the installation instructions that come with the application and follow it to complete the setup.

Remove an application

You can uninstall any application that you have downloaded and installed from Android Market.

1. On the Downloads screen, tap the application you want to uninstall, then tap **Uninstall**.
2. When prompted, tap **OK** to remove the application from your device.
3. Choose the reason for removing the application, then tap **OK**.

Uninstall third-party applications

1. Tap **Home Key** >  > **Settings** > **Applications** > **Manage applications**.
2. Tap on the application you want to remove.
3. Tap **Uninstall**, and tap **OK** to confirm.

Other Settings

Search Settings

You can manage search settings and history by tapping **Home Key** >  > **Settings** > **Search**.

Google Search Settings

- **Show web suggestions:** Select to show suggestions from Google as you type.

Searchable Items Settings

Tap **Home Key** >  > **Settings** > **Search** > **Searchable items**.

When you search for information on your LIGHT, only the searchable items will be searched.

Speech Synthesis Settings

You can set the text-to-speech options by tapping **Home Key** >  > **Settings** > **Text-to-speech**. Before you use this function, you should install the voice data.

Other Applications

Alarming

Set alarms

1. Tap **Home Key** >  > **Alarm**.
2. Tap the default alarm set to configure it or tap **Menu Key** > **Add alarm** to create a new alarm.
3. Select the **Turn on alarm** check box and edit the items needed, such as Name, Time, Repeat, Snooze, Duration, Vibrate, Ringtone, Volume, Volume crescendo, and Delay.

Docs To Go

You can use this application suite to open word, excel, powerpoint, or PDF files.

Read the on-screen instructions for detailed information.

Global Time

Global Time is used to view the time of major cities in the world.

Note pad

Note pad is used to take down some memos.

Calculator

Open Calculator

Tap  > **Calculator**.

Calculator function introduction

1. Enter a number.
2. Tap $+/-/×/÷$.
3. Enter another number.
4. Tap $=$.
5. Tap **CLEAR** to reset the calculator.

Tips:

Tap **Menu** > **Advanced panel** to use scientific calculation.

SIM Toolkit

SIM Toolkit appears on the screen only if your SIM card provides this function. To use the SIM card services, insert your SIM card into the device first.

Tap **Home Key** >  > **SIM Toolkit**.

Task Manager

You can use **Task Manager** to view and stop running applications.

Stopwatch

1. Tap  > **Stopwatch**.
2. Tap **Start** to start timing.
3. Tap **Pause** to pause time and tap **Resume** to continue.

4. Tap **Reset** to reset the stopwatch.

Places

Google Places helps you find all kinds of businesses near you.

1. Tap  > **Settings** > **Location & security** > **Use GPS satellites** or **Use assisted GPS**.
2. Tap  > **Places**. Wait while you are being located.
Your location, when found, is displayed at the bottom of the screen.
3. Select a business category and the information of that type of business near you will be displayed.
You can also use the **Find places** search box on the top to find the business you need.
Note: Tap **Add** to add new business categories.
4. Tap a result you are interested in and check out the details and reviews about that place. You can also see the place on Google Maps, find out how to get there, or give that business a call.

Latitude

Google's Latitude service is a social tool for sharing your location information with selected friends.

Tap  > **Maps** and, after signing in to your Google account, tap **Menu Key** > **Join Latitude** to enable Latitude service.

Each time you launch Maps application, your location will be determined using GPS and your Latitude status will be updated. You can tap **Menu Key** > **Latitude** in **Maps** or  > **Latitude** to see your status as well as that of your selected friends.

In Latitude, tap **Menu Key** to refresh friends status, see them on Maps, add new friends, or change privacy settings.

You can also turn off Latitude service by tapping **Turn off Latitude** in **Privacy** settings.

Specifications

Dimension		Approx. 192mm×110mm×12.6mm
Weight		Approx. 389g (with battery)
Bearer		GSM/WCDMA support
Main Display dimension, resolution, color space		TFT 800*480 ,260K
Back Camera	Sensor Type	CMOS
	Still Image Capture Resolution	3.2M Pixels
Total internal memory		1024MB
Removable memory card		Support microSD card

Maximum Capacity of memory card		32GB
Battery	Capacity	3400mAh
	Standby time	Approx. 300h (subject to network status)
	Voice talk time	Approx. 16h (subject to network status)
WAP browser version		WAP2.0

EC DECLARATION OF CONFORMITY

C € 1588 !

It is hereby declared that following designated product:

Product Type: Tablet Computer

Model No: Light

Complies with the essential protection requirements of the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/5/EC) and the Electromagnetic Compatibility Directive (2004/108/EC).

This declaration applies to all specimens manufactured identical to the samples submitted for testing/evaluation.

Assessment of compliance of the product with the requirements relating to the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/5/EC) was performed by American TCB (Notified Body No.1588), based on the following standards:

Safety	EN 60950-1:2006
EMC	EN 301 489-1 V1.8.1; EN 301 489-7 V1.3.1; EN 301 489-17 V1.3.2; EN 301 489-19 V1.2.1;EN 301 489-24 V1.4.1; EN 55013:2001+A2:2006;EN 55020:2007;
Radio	EN 301 511 V9.0.2; EN 301 908-1 V3.2.1; EN 301 908-2 V3.2.1; EN 300 328 V1.7.1; ETS 300 487 A1:1997
Health	EN 62311:2008; EN 62209-1:2006; IEC 62209-2:2010; EN 50332-1:2000; EN 50332-2:2003

This declaration is the responsibility of the manufacturer:

ZTE Corporation

ZTE Plaza, Keji Road South, Hi-Tech, Industrial Park,
Nanshan District, Shenzhen, Guangdong, 518057, P.R.China

Authorised person signing for the company:

Xu Feng Quality Director Of ZTE Corporation

Name in block letters & position in the company

Shenzhen, 27 October 2010

Place & date

Legally valid signature 徐锋

ZTE

ZTE CORPORATION

NO. 55, Hi-tech Road South, ShenZhen, P.R.China

Postcode: 518057

<http://www.zte.com.cn> mobile@zte.com.cn

Service Hotline: +86-755-26779999

The information on the package is only for your reference. Images are for your reference only. Please check the product model before purchasing. ZTE reserves the rights to change specifications and parameters of the products without further notice.