

2018 **MAXIMA**

QUICK REFERENCE GUIDE





- 1** Headlight and Turn Signal Switch
- 2** Low Tire Pressure Warning Light
- 3** Vehicle Information Display
- 4** Trip Odometer*
- 5** Instrument Brightness Control*
- 6** Wiper and Washer Switch

- 7** Steering Wheel Switches For Audio*/Vehicle Information Display/Navigation
- 8** Cruise Control/Bluetooth® and Voice Recognition Switches
- 9** Trunk Lid Release Switch

- 10** Vehicle Dynamic Control (VDC) OFF Switch
- 11** Heated Steering Wheel Switch*
- 12** Rear Power Sunshade Switch
- 13** Tilt/Telescopic Steering Column*
- 14** Hood Release*

- 15** Control Panel Display*
- 16** Front Passenger Air Bag Status Light*
- 17** Heater and Air Conditioner Controls (automatic)
- 18** Display Commander

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

How to Use Your Maxima's Touch-screen Display	2
Intelligent Around View Monitor (I-AVM) (if so equipped)	3
Blind Spot Warning (BSW) (if so equipped)	4
Intelligent Forward Collision Warning (I-FCW)	5
Automatic Emergency Braking (AEB)	5
Vehicle Dynamic Control (VDC)	6
NissanConnect® Services Powered by SiriusXM®	6
SiriusXM Travel Link and SiriusXM Traffic	8
Display Commander	8

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert	9
Loose Fuel Cap	10
Fuel-filler Door	10
Heated Steering Wheel (if so equipped)	10
Clock Set/Adjustment	11

FIRST DRIVE FEATURES

Nissan Intelligent Key® System	12
Automatic Drive Positioner (if so equipped)	14
Seat Adjustments	15
Trunk Lid Release	16
Outside Mirror Control Switch	16
Starting/Stopping the Engine	17
Headlight Control Switch	17
Wiper and Washer Switch	18
Moonroof/Rear Sunshade Switch (if so equipped)	19
Heater and Air Conditioner (automatic)	20
FM/AM/SiriusXM® Satellite Radio with CD Player	21
USB (Universal Serial Bus) Connection Port/AUX Jack and iPod® Interface	23
Front Armrest/Center Console Storage Box	23
Cruise Control (if so equipped)	24
Intelligent Cruise Control (ICC) (if so equipped)	25

SYSTEM GUIDE

Vehicle Information Display	26
Apple CarPlay™	27
Hands-free Text Messaging Assistant	28
Android Auto™	29
Bluetooth® Hands-free Phone System	30
System Operating Tips	30
Bluetooth® Streaming Audio	33
Navigation System	34
HomeLink® Universal Transceiver	36



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual, and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES




HOW TO USE YOUR MAXIMA'S TOUCH-SCREEN DISPLAY

- 1** Launch Bar - Various functions can be accessed by touching the items on the Launch Bar **1**, which is displayed on most of the main screens. Touching these keys will bring up the corresponding screens.
- 2** Widget - These items can be interchanged, moved, or deleted from the MENU pages.
- 3** Touch either arrow to navigate to the next or previous page of the "MENU" screen.
- 4** These dots indicate the page you are currently on, in white, out of the number of pages there are available, in gray.
- 5** Shortcut - Shortcuts, once touched, will bring up the system they correspond to for quick, one-touch convenience for commonly used features.
- Shortcuts and Widgets can be set up through the "Edit Menu" screen, which can be accessed by touching the "Settings" key **6** followed by the "Edit Home Menu" key **7**. This will display the "Edit Menu" screen, which allows Shortcuts and Widgets to be moved and rearranged **8**, deleted **9** or created **10**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to your NissanConnect® Owner's Manual.

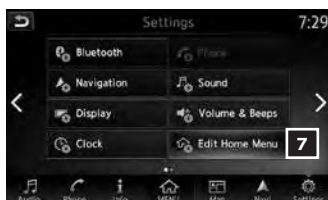


To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

INTELLIGENT AROUND VIEW MONITOR (I-AVM) (if so equipped)


- With the ignition switch in the ON position, the Intelligent Around View Monitor (I-AVM) is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position. The monitor displays various views of the position of the vehicle.

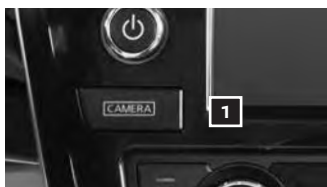

- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

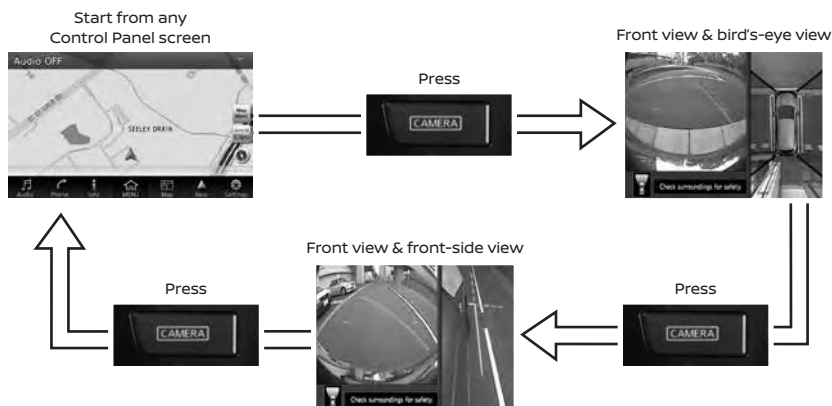

- When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

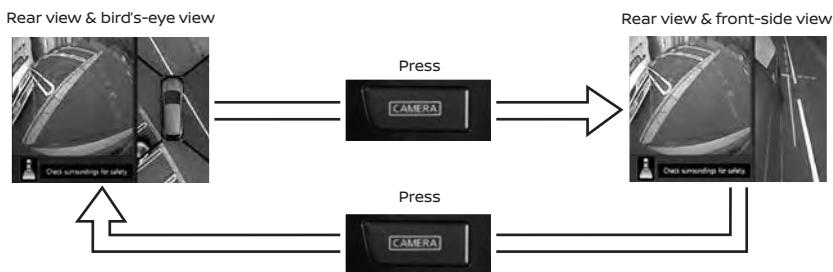


- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m) (if so equipped).
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.

NEW SYSTEM FEATURES

- There are some areas where the system will not detect objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.
 - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.
 - The distance between objects viewed on the I-AVM differs from the actual distance.
- Objects in the bird's-eye view will appear farther than the actual distance.
- Always check your surroundings and turn to look behind you before moving the vehicle.



2

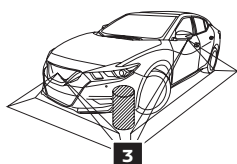

3

MOVING OBJECT DETECTION (MOD) (if so equipped)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **D (DRIVE)**, **N (NEUTRAL)**, **R (REVERSE)** or **P (PARK)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image.
- When the following is displayed:
 - Blue **MOD** icon **4**; the system is active.
 - Gray **MOD** icon; the system is not active.
 - No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.
- The MOD system will not operate if the trunk is open.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

BLIND SPOT WARNING (BSW) (if so equipped)

- The BSW helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator light located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.

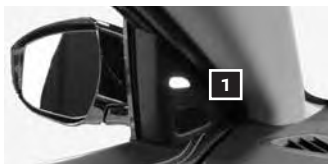

- The indicator light **2** will illuminate after the ignition switch is ON and the BSW is enabled. This indicates that the BSW is operational.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.



INTELLIGENT FORWARD COLLISION WARNING (I-FCW)

- The I-FCW system can help alert the driver of sudden braking by the second vehicle traveling ahead of your vehicle in the same lane.
- The I-FCW system operates at speeds above approximately 3 mph (5 km/h).
- If there is a potential risk of a forward collision, the I-FCW system will warn the driver with the vehicle ahead detection indicator light **1** and an audible warning tone will be heard.

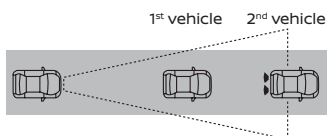

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

AUTOMATIC EMERGENCY BRAKING (AEB)

- The AEB can assist the driver when there is a risk of a forward collision with a vehicle ahead in the traveling lane.
- The AEB operates at speeds greater than 3 mph (5 km/h).
- If there is a risk of a forward collision, an audible tone will sound and the vehicle ahead detection indicator light **1** will illuminate. If the driver applies the brakes after the warning and the AEB detects that there is still the possibility of a forward collision, the system will automatically increase the braking force. If the driver does not take action, the AEB will issue a second visual warning **2**, an audible warning and also apply partial braking.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

NEW SYSTEM FEATURES

VEHICLE DYNAMIC CONTROL (VDC)

- VDC should remain on when driving, except when freeing the vehicle from mud or snow.
- When the VDC OFF switch **1** is pushed, an indicator light will illuminate. If the system is turned off, it will turn back on when the switch is pushed a second time. Also, if the system is turned off and the vehicle is restarted, the system will automatically turn on again.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.


NISSANCONNECT® SERVICES POWERED BY SiriusXM®

NissanConnect® Owner's Manual is a collection of security and convenience services that add innovation to your daily drive.

- To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number or VIN. Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect Services or to enroll your vehicle, please visit www.NissanUSA.com/connect or call 855-426-6628.

Here is a quick overview of some of the features that may be available for your vehicle. A full description of these and other NissanConnect Services can be found in your Navigation System Owner's Manual.

- Automatic Collision Notification, a service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Emergency Call, which connects you to a NissanConnect Services Specialist who will assist in the dispatch of emergency services to the vehicle location. To use this feature, press the **SOS** button **1** on the overhead console. The **SOS** button **1** should only be used in emergency situations.
- Roadside Assistance, which dispatches roadside assistance to the vehicle's location in non-emergency situations. Roadside Assistance can be accessed by touching the  headset icon **2** on the map screen, via the NissanConnect Services companion app or by calling the Roadside Assistance provider directly.
- Stolen Vehicle Locator, a service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- Remote Door Lock/Unlock, for use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.



- Remote Engine Start - Start your engine remotely using the NissanConnect Services companion app or website.
- Assisted Search, a feature that allows you to verbally request point-of-interest or destination data from a live operator by touching the headset icon **2** on the map screen.
- Journey Planner, with which you can send a route with a destination and up to five way points directly to the vehicle.
- Boundary Alert, a feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.
- Speed Alert, which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.
- Alarm Notification - This system will notify you when the factory-installed vehicle alarm has been activated.
- Maintenance Alert - Receive notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- Connected Search - Select "Connected Search" from the Destination menu on the vehicle's Navigation System to conduct a Point Of Interest (POI) search within a certain distance of the vehicle's location.
- Valet Alert - Use Valet Alert to set up a 0.2-mile radius around your vehicle. Activate alerts via the NissanConnect Services companion app or website.
- Curfew Alert - Specify curfew limits via the NissanConnect Services companion app or website and be notified via a selected method if curfew is violated.



To access these features in your vehicle:

- Touch the "i Info" key **3** on the control panel.
- Touch the "NissanConnect Services" key **4**.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.

NEW SYSTEM FEATURES

SiriusXM TRAVEL LINK AND SiriusXM TRAFFIC

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- Touch the "i Info" key to access SiriusXM Travel Link and SiriusXM Traffic.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.

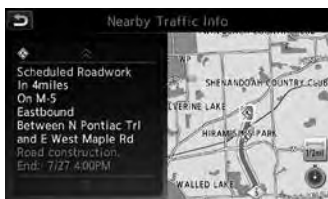

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.

DISPLAY COMMANDER

- 1 HOME MENU** - Press to display the "HOME MENU" screen.
- 2 BACK** - Press to go back to the previous screen.
- 3 MAP/VOICE** - Press to display the vehicle's current location on the map. Press and hold to hear the current voice guidance for a programed route.
- 4 OK** - Press to enter the selected item. If this button is pressed while a map is displayed, the map menu is shown on the display.
- 5 Center dial/Slide switch** - Turn the dial to scroll the highlighted item or to adjust a setting (treble, brightness, etc.). While the map screen is displayed, adjust the map scale by turning the dial. Depending on the screen, sliding the slide switch can select areas on the screen or scroll the pages. While the map screen is displayed, scroll the map screen by sliding the switch.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- A **Tire Pressure Low-Add Air** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.

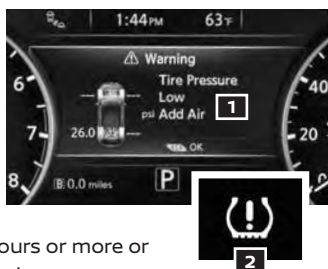

- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **Tire Pressure Low-Add Air** warning message and low tire pressure warning light **2** will extinguish.
- In addition to the **Tire Pressure Low-Add Air** warning message, you can view the individual tire's pressure in the vehicle information display as well as the recommended pressure, denoted by blue lettering, for each tire.
- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.

To use the Easy-Fill Tire Alert:

1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
 2. Place the ignition switch in the ON position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
 5. Repeat this procedure for any additional under-inflated tires.
- When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended that you visit a Nissan dealer for this service.
 - Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
 - The Tire and Loading Information label contains valuable information. Refer to the "Technical and consumer information (section 10)" of your Owner's Manual for the location of the Tire and Loading Information label.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Do-it-yourself (section 8)**" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

ESSENTIAL INFORMATION

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** and the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

FUEL-FILLER DOOR

- To open the fuel-filler door, push the right side of the fuel-filler door to release.
- The fuel-filler door is located on the driver's side of the vehicle.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



HEATED STEERING WHEEL (if so equipped)

- Once activated, your heated steering wheel will automatically turn on and off to maintain a temperature above 68°F (20°C).
- When the surface temperature of the steering wheel is above 68°F (20°C) and the switch **1** is turned on, the system will not heat the steering wheel. This does not indicate a malfunction.





Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Press the  **MENU** button on the control panel.
2. Touch the  "Settings" key on the Launch Bar.
3. Touch the "Clock" key.



- The following settings can be adjusted:
 - **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF.
 - **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
 - **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
 - **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
 - **Daylight Savings Time:** The application of Daylight Savings Time can be turned ON or OFF.
 - **Time Zone:** Adjust the time zone. Choose a time zone from the available list.
- Touch the " " key or press the  **BACK** button on the Display Commander to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Getting started (section 2)**" of your NissanConnect® Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM




The Nissan Intelligent Key® system allows you to lock or unlock your vehicle, open your trunk lid and start the engine. It is important to make sure the Intelligent Key (I-Key) is with you (that is, in your pocket or purse).

KEY-LINKED SYSTEM (if so equipped)

- The vehicle information display has added features, allowing the Key-Linked System to remember some of the vehicle information display settings.
- The Key-Linked System states which I-Key is being recognized **1**, and enabling/disabling of the system's function can be easily accessed through notifications on the vehicle information display.
- The Key-Linked System can be turned on or off through the vehicle information display in the "Key-Linked Settings" screen **2**.
- You can set a maximum of two I-Keys to the Key-Linked System.
- When the system is enabled, the recognized I-Key is displayed at engine start-up (Engine ON) as well as within the "Key-Linked Settings" screen **2**.
- When the system is active, the vehicle information display setting items are memorized for each key that has been enabled in the Key-Linked System.
- If two keys are in the vehicle, the Key-Linked System will recognize the key that was used most recently; this usually means the last key to unlock/lock the door from the I-Key.
- If there is a desire to change to another key that is in the vehicle, turn off the engine and initiate communication from the desired key.
 1. Turn the engine to OFF.
 2. Press the **i** button from the desired I-Key.
 3. Start the engine.
 4. The desired key number recognized should appear on the vehicle information display.
- The vehicle information display displays a pop-up notification at Engine ON for the recognition of the system with a shortcut function to the setup menu.
- From the shortcut setup menu, you can select to enable or disable the Key-Linked System or select "Later" to keep the factory state.
- When enabled, the Key-Linked System will remember the state of the items memorized automatically from the last ignition cycle.







REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL*

- The Remote Engine Start operating range is approximately 200 ft (60 m) from the vehicle. The effective operating range may be shorter if there are walls, strong radio wave sources near the operating location or other obstructions between the key and the vehicle.
- For the Remote Engine Start to function, the vehicle must be in the **P (PARK)** position with the ignition off and all doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Press the  button **4** to lock all of the doors.
 2. Within 5 seconds, press and hold the Remote Engine Start  button **3** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- The automatic climate control system will begin heating or cooling the vehicle depending on the outside (ambient) temperature, cabin (in-car) temperature and the last user mode. During this period, the climate control display and buttons will be inoperable until the ignition switch is turned ON.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 through 2 to extend the time for an additional 10-minute period. Remote Engine Start can only be activated for a maximum of 20 minutes.
 - After two remote starts, the ignition switch must be cycled before the Remote Engine Start can be used again.
 - To cancel Remote Engine Start, press the remote start  button **3**.
- To start driving, depress the brake pedal and press the ignition switch **START/STOP** button.



LOCKING AND UNLOCKING THE VEHICLE

- The operating range of the I-Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, either push the door handle request switch **7** once or press the  button **4** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **7** once to unlock the corresponding door. Push the door handle request switch **7** again within 1 minute to unlock all doors, or
 - Press the  button **5** on the key fob to unlock the driver's side door. Press the  button **5** again within 1 minute to unlock all doors.
- The I-Key can also be used to activate the panic alarm by pressing and holding the  button **6** for 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



FIRST DRIVE FEATURES


AUTO UNLOCK

In the Vehicle Settings menu in the vehicle information display, there are three options to choose from for the auto unlock function:

- OFF - Auto Unlock is disabled.
- IGNITION OFF - All doors unlock when the ignition is turned off.
- SHIFT TO PARK - All doors unlock when the shift lever is moved to the **P (PARK)** position.

NISSAN INTELLIGENT KEY® BATTERY DISCHARGE

- If the battery of the I-Key is discharged or environmental conditions interfere with the I-Key operation, **Key Battery Low** **8** will display on the gauge and the engine will need to be started according to the following procedure:

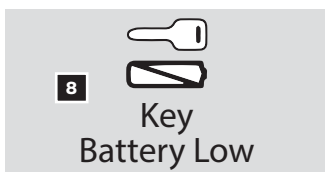

1. Move the shift lever to the **P (PARK)** position.
2. Firmly apply the foot brake.
3. Touch the ignition switch with the I-Key. A chime will sound.
4. Within 10 seconds after the chime sounds, press the ignition switch **START/STOP** button while depressing the brake pedal and the engine will start.

* State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Pre-driving checks and adjustments (section 3)", the "Starting and driving (section 5)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

AUTOMATIC DRIVE POSITIONER (if so equipped)

- Two positions for the driver's seat, steering column (if so equipped) and outside mirrors can be stored in the automatic drive positioner memory.



- Follow this procedure to set the memory positions:

- Place the ignition switch in the ON or ACC position. (The vehicle should be stopped while setting the memory.)
- Adjust the driver's seat, steering column (if so equipped) and outside mirrors to the desired positions using the adjusting switches for each feature.
- Push the **SET** switch **1**, and within 5 seconds, push the memory switch **(1 or 2)**.
- The indicator light for the memory switch you select will illuminate for approximately 5 seconds, and a chime will sound when the memory is stored.
- The driver's seat, steering column (if so equipped) and outside mirror positions are now set to your preferences.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- These memorized positions can also be linked to your Nissan Intelligent Key®.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

SEAT ADJUSTMENTS

SEAT FABRIC

- If so equipped, your vehicle's seats may be made from a material known as Alcantara®. In the case of most localized stains, using lukewarm water and soap will restore Alcantara® to its factory condition. For more details on proper cleaning, please refer to your Owner's Manual.


POWER SEATS

- To slide the seat forward or backward, push the  switch **1** forward or backward.
- To recline the seatback, push the  switch **2** forward or backward.



POWER SEAT LIFTER

(if so equipped for passenger seat)

- To adjust the angle of the front seat cushion or height of the seat, push the front or rear end of the  switch **1** up or down.



POWER LUMBAR SUPPORT

(if so equipped for driver's seat)

- To adjust the seat lumbar support, push the front or back end of the  switch **3**.



THIGH SUPPORT (if so equipped for driver's seat)

- Pull up and hold the lever **4** to extend the front portion of the seat to the desired position.



FOLDING DOWN THE REAR SEAT

- To fold the rear seatback, press down on the button on the rear parcel shelf **5**. The passenger's side rear seatback will release.
- The pull straps **6** located in the trunk will release the rear seatbacks to allow them to fold forward.
- To raise the seatback, lift up each seatback and push it to the upright position until it is latched.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

TRUNK LID RELEASE

Use one of the following methods to open the trunk lid:

- Press the  button **1** on the Nissan Intelligent Key® for 1 second.
- Push the trunk opener request switch **2** while carrying the Intelligent Key with you (that is, in your pocket or purse).
- From inside the vehicle, push the trunk opener switch **3**, located on the instrument panel to the left of the steering wheel.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, slide the mirror control switch **1** right or left.
- To adjust the mirror angle, move the control switch up, down, right or left.
- To prevent accidentally moving the mirror, slide the mirror control switch **1** to the center (neutral) position.



REVERSE TILT-DOWN FEATURE (if so equipped)

The reverse tilt-down feature will turn both outside mirror surfaces downward to provide better rear visibility close to the vehicle.

1. Apply the brake.
2. Place the ignition switch in the ON position.
3. Move the shift lever to the **R (REVERSE)** position.
4. Both outside mirror surfaces will turn downward. (The mirror control switch **1** must be out of the center [neutral] position.)

The outside mirror surfaces will return to their original positions when one of the following conditions occurs:

- The shift lever is moved to any position other than **R (REVERSE)**.
- The outside mirror control switch **1** is set to the center (neutral) position.
- The ignition switch is placed in the OFF position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

STARTING/STOPPING THE ENGINE

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.



TURNING THE ENGINE OFF



- Move the shift lever to the **P (PARK)** position.
- Press the ignition switch **START/STOP** button to turn the engine off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.



HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

 

- Rotate the headlight control switch to the  position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Rotate the switch to the  position **2** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the **OFF** position,  position **1** or  position **2**.



HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



FIRST DRIVE FEATURES

FOG LIGHT SWITCH

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.



LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.


Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:
 - 1** Mist (**MIST**) - One sweep operation of the front wipers.
 - 2** Auto (**AUTO**) - Operates the rain-sensing wipers (if so equipped) intermittently. The intermittent speed can be adjusted by rotating the time control ring **3** to increase or decrease wiper sensitivity. Also, the intermittent operation speed varies in accordance with vehicle speed.
 - 4** Low (**LO**) - Front wipers operate at a continuous low-speed.
 - 5** High (**HI**) - Front wipers operate at a continuous high-speed.
 - 6** Pull the lever toward you to activate the front washer. The wipers will operate several times.

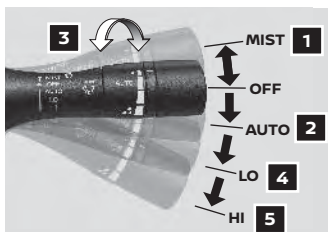

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

MOONROOF/REAR SUNSHADE SWITCH (if so equipped)

OPENING/CLOSING THE MOONROOF AND SUNSHADE

- To fully open the moonroof and sunshade, push the switch fully past the detent toward the **OPEN** position **1**.
- To fully close the moonroof and sunshade, push the switch fully past the detent toward the **CLOSE** position **2**.
- To open just the sunshade (moonroof will remain closed), push the switch **3** to the detent toward the **OPEN** position **1**. Push the switch **3** toward the open position **1** again to open the moonroof.
- To close just the moonroof (sunshade will remain open), push the switch **3** to the detent toward the **CLOSE** position **2**. Push the switch **3** toward the **CLOSE** position **2** again to close the moonroof.



OPENING THE SUNSHADE/TILTING THE MOONROOF

- Push the switch **3** once to open the sunshade and tilt the moonroof.
- Push the switch **3** again to close the moonroof. Push the switch **3** to the detent toward the **CLOSE** position **2** to close the sunshade.



REAR POWER SUNSHADE

- The rear sunshade switch **4** is located in the instrument panel to the left of the steering wheel.
- To raise the sunshade, push the upper side of the switch.
- To lower the sunshade, push the lower side of the switch.
- The switch does not need to be held down.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

FIRST DRIVE FEATURES



HEATER AND AIR CONDITIONER (automatic)

1 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial left for cooler air or right for warmer air.

2 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

3 ON-OFF BUTTON





- Press the **ON-OFF** button to turn the system on or off.

4 FAN SPEED CONTROL BUTTONS

- Press either the  or the  button to decrease or increase fan speed.

5 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the front defroster and foot vents.

6 A/C BUTTON




- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

7 FRESH AIR INTAKE BUTTON


- Press the fresh air intake  button **7** to draw outside air into the passenger compartment.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.


8 AIR RECIRCULATION BUTTON

- Press the air recirculation control  button **8** to recirculate interior air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

9 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster  button to turn the system on. This feature removes humidity from the air.
- Turn the temperature control dial **1** to set the desired temperature.
- To defrost the front and side windows quickly, set the temperature controls and fan speed controls to their maximum settings.

10 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS (if so equipped)

- Push the rear window and outside mirror (if so equipped) defroster  switch to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.



FM/AM/SiriusXM® SATELLITE RADIO WITH CD PLAYER

Touch the "🎵 Audio" key on the Launch Bar to display the current audio source. Touch the "🎵 Audio" key a second time to access the source selection screen.

1 (ON-OFF) BUTTON/VOLUME CONTROL KNOB

- Press the  (on-off) button to turn the audio system on or off.
- Turn the **VOLUME** control knob right or left to increase or decrease the volume.









2 AUDIO KEY

- Touch the "🎵 Audio" key on the Launch Bar to bring up the current source's control screen.


To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

3 (SEEK and CAT/TRACK) BUTTONS

- Press the  button or the  button to seek up or down to the next receivable station.
- For satellite radio to switch to the first channel of the previous or next category, press the  button or the  button.
- To change tracks on a CD, press the  button or the  button.
- To rewind or fast forward a track on a CD, press and hold the  button or the  button.

4 ENTER SOUND BUTTON/TUNE-SCROLL KNOB

- Press the **ENTER SOUND** button to cycle through the audio settings individually and use the **TUNE-SCROLL** knob to adjust the current setting.
- Touch the  "Settings" key on the Launch Bar and then touch the "Sound" key to view all audio settings.
- To manually tune the radio, turn the **TUNE-SCROLL** knob left or right.

5 AUDIO (SOURCE) BUTTON

- Pressing this button will give access to the **AM, FM, SXM, CD, USB1/iPod, USB2/iPod, Bluetooth Audio** or **AUX** audio source.
- Twelve memory stations can be set for the FM band, six for the AM band and 18 for satellite radio. These appear at the bottom of the screen when one of these sources is selected.
- To store a station in a preset, you must first select a radio band by touching the "AM" key **6**, "FM" key **7** or "SXM" key **8** then tune to the desired AM, FM or satellite radio station. Next, press and hold the desired station preset key until you hear a beep. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select key.

6 AM KEY / 7 FM KEY

- Touch the "AM Menu" or "FM Menu" key to view the station list or turn HD mode on or off.
- Tag favorite songs to save to an iPod®.
 - Apple® website: If you are listening to a radio station that supports iTunes Tagging, you can tag a song you hear so you can preview and purchase it later on the iTunes Store. Songs that can be tagged are marked with a tag icon next to the song title or on the "Now Playing" screen.

8 SXM KEY

- Touch the "SXM Menu" key to bring up the categories, favorites and replay options.

9 CD KEY

- Touch the "CD Menu" key to view the track list.

10 AUX KEY

- A cable with 1/8 in (3.5 mm) stereo mini plugs is required for audio playback.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Audio system (section 3)"** of your NissanConnect® Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE

- The USB ports are located in the media pocket **1** below the climate control system.
- **USB1/iPod®** and **USB2/iPod®**
 - When a device is connected via USB, the system will automatically start playing music from it.
 - This system supports Android™ and Apple® devices and USB memory devices. Only Android brand, Android certified cables, Apple brand or Apple certified cables will work. NISSAN cannot guarantee compatibility with aftermarket cables that are not certified by Android or Apple.
 - Android Auto™ and Apple CarPlay™ can only be used with USB1, which is the port closest to the driver.
 - It may not be compatible with some versions of Android.
- Touch the “USB/iPod® Menu” key to view the folder list and track listing, playlist, albums, album art, artist and songs.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Audio system (section 3)**” of your NissanConnect® Owner's Manual.



FRONT ARMREST/CENTER CONSOLE STORAGE BOX

- To open the console box, press up on the lever **1** and raise the lid.
- To close, push the lid down until the lock latches.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.



FIRST DRIVE FEATURES

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the ON/OFF  switch **1** on the steering wheel. The cruise indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **SET-** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **RES+** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the ON/OFF  switch **1** on the steering wheel. The cruise indicator light in the instrument panel will extinguish.








Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle mode, push the **CRUISE**  switch **1** on the steering wheel. The **CRUISE**  indicator light **2** will illuminate.
- Accelerate to the desired speed.
- Push down on the **SET-** switch **3** on the steering wheel and release it. Intelligent Cruise Control will be set to the desired speed.
- Push the distance  switch **4** on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **5** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance and set vehicle speed indicator lights will illuminate **6** in set mode.
- To reset at a faster cruising speed, push and hold the **RES+** switch **7** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **3** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **8** on the steering wheel or tap the brake pedal. The set vehicle speed indicator **5** will extinguish.
- To turn off Intelligent Cruise Control, push the **CRUISE**  switch **1** on the steering wheel. The **CRUISE**  indicator light **2** in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

SYSTEM GUIDE



VEHICLE INFORMATION DISPLAY

- When the ◀▶ arrow buttons **1** on the steering wheel are pressed, the following modes will appear on the vehicle information display **2**:

🏠 **Home** – Displays the current speed, the compass and the additional media that is available.

🎵 **Audio** – Displays the current playing media.

▲ **Navigation** – Displays the vehicle's current heading.

📊 **Drive Computer** – Displays Average Fuel Economy, Average Speed, Trip Computer and Time of the Trip. Each can be reset individually.

⛽ **Fuel Economy** – Displays Average Fuel Economy. Press and hold the **OK** button **3** on the steering wheel to reset.

🛖 **Driving Aids (if so equipped)** – Displays the Driving Aids that are equipped on your vehicle. Use the **OK** button **3** on the steering wheel to turn each system on or off.

🛞 **Tire Pressure (psi)** – Displays the individual tire's pressure while driving.

S **SPORT** – Displays the oil pressure, gear oil temperature, digital speedometer and horsepower percentage.

⚠️ **Warning Review** – Displays the current warnings.

⚙️ **Settings** – Displays the available settings that can be changed.

- Press the ▲▼ arrow buttons **4** on the steering wheel to cycle through the various setting modes.
- Press the **OK** button **3** on the steering wheel to choose the selected menu.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



 

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.




APPLE CARPLAY™

- The in-vehicle system can be used as a controller for some of the iPhone® functions through Apple CarPlay™.
- If your iPhone® is compatible, the Apple CarPlay can be used.
 - Select the “ MENU” key **1** on the screen.
 - Select “Apple CarPlay” **2** from the menu.
- To connect your CarPlay capable iPhone® to the system, you must connect the iPhone® cable to USB1.
 - Depending on the setting, the “Startup Information” screen will appear.
 - Touch “Yes” to use Apple CarPlay.
 - The Apple CarPlay top menu screen will appear, and the iPhone® functions displayed on the screen can be operated by the in-vehicle system.
 - To return to the “Apple CarPlay” top menu screen after operation, touch the “ ” key **4** on the lower left corner of the “Apple CarPlay” screen.
 - To exit the “Apple CarPlay” screen and display the other screens, press the MENU button or one of the other buttons on the control panel and touch the preferred menus.
 - To return to the “Apple CarPlay” screen, touch the “ Info” key **3** on the Launch Bar and then touch the “Apple CarPlay” key **2**.
- When connected to Apple CarPlay, Siri® operation can also be accessed.

SYSTEM GUIDE


- There are three ways to start a Siri session.
 1. Press and hold the  button on the steering wheel.
 2. Touch and hold the “” key **4** at the lower left corner of the Apple CarPlay screen.
 3. Say “Hey Siri” (requires appropriate permissions enabled via phone).
- Press the  button on the steering wheel or touch the “” key **4** at the lower left corner of the Apple CarPlay screen to end Siri operation.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.), which may prevent the system from recognizing the voice commands correctly.
- Some Siri functions may not be available during driving.
- For functions that can be used with Siri, please refer to the Apple website.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay is active.

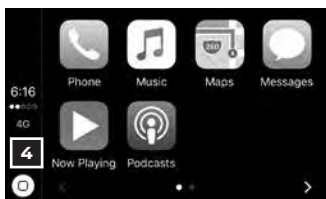

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Getting started (section 2)**” and the “**Information (section 5)**” of your NissanConnect® Owner's Manual.

 HANDS-FREE TEXT MESSAGING ASSISTANT*

- This text messaging feature allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  button on the steering wheel.
- Text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable “Notifications” in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Hands-Free Phone (section 4)"** of your NissanConnect® Owner's Manual.




ANDROID AUTO™

- The in-vehicle system can be used as a controller for some of the Android™ functions through Android Auto™.




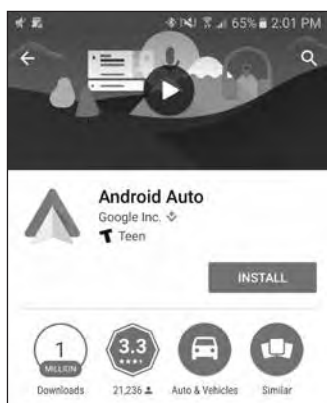

INITIAL SETUP

 
- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application.
- Complete the initial set-up as prompted on your Android phone. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.



SYSTEM GUIDE

USING ANDROID AUTO

- To connect your Android Auto capable phone to the system, you must connect a certified USB cable to the USB1 port located below the center console.
 - Depending on the setting, the “Startup Information” screen will appear on the center display.
 - Touch “Yes” to use Android Auto.
 - The Android Auto top menu screen will appear, and the Android functions displayed on the screen can be operated by the in-vehicle system.
- When connected to Android Auto, voice operation can be accessed. There are three ways to start voice operation:
 1. Press and hold the  button on the steering wheel until a beep is heard.
 2. Touch the “” key **1** on the upper right corner of the “Android Auto” screen.
 3. Say “OK Google” (requires appropriate permissions enabled via phone).
- To return to the “Android Auto” top menu screen after operation, touch the “O” key **2** on the bottom of the “Android Auto” screen.
- To exit the “Android Auto” screen and display the other screens, press the  **MENU** button or touch the “” key **3**.
- To return to the “Android Auto” screen, touch the “ Info” key **4** on the Launch Bar and then touch the Android Auto key **5**.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.
- If you have difficulties with connection or performance, try a different certified USB cable.

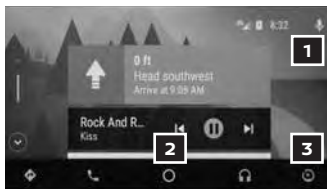


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the “**Getting started (section 2)**” and the “**Information (section 5)**” of your NissanConnect® Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM*



- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For Information regarding connecting your cellular phone, refer to the connecting procedure within this guide.


SYSTEM OPERATING TIPS

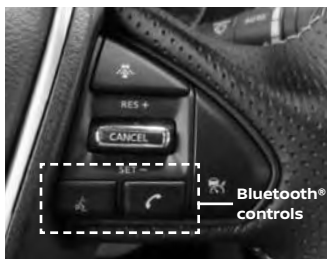- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.




To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- If you experience difficulty with the Voice Recognition System recognizing a contact name, please try saying both the first and last name of the contact as this improves recognition accuracy.
- To cancel a Voice Recognition session, say "Cancel" or "Quit" or press and hold the  button on the steering wheel for 5 seconds.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.

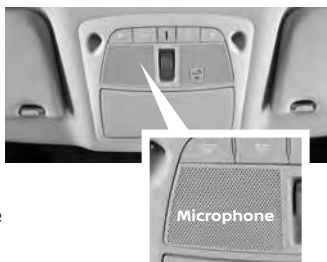




CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
 1. Press the  button on the steering wheel and touch the "Connect Phone" key.
 2. Initiate connecting from the cellular phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.
 - When prompted, confirm the PIN on the display with the PIN shown on the handset. If your device does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.
 - Some cellular phones may incorrectly state that the connection was unsuccessful. Please verify that the touch-screen displays that the connection is successful, or touch  "Settings" > "Bluetooth" > "Select BT Device" > "Phone" and confirm that your cellular phone is listed.
 3. When connecting is complete, the screen will return to the Phone menu display.



SYSTEM GUIDE

 
PHONEBOOK SETUP

- Press the  **MENU** button on the control panel.
 - Touch the  “Settings” key on the Launch Bar, touch the “Phone” key and then touch the “Phonebook” key.
 - Depending on your cellular phone, the system may automatically download your cellular phone’s entire phonebook to the vehicle’s Bluetooth® system.
 - The Quick Dial phonebook can also be set for up to five entries that can be used with your cellular phone.
1. Press the  button on the Launch Bar and touch the “Quick Dial” key.
 2. Touch the “Add New” key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - “Copy from Call History” to save a number from the Outgoing, Incoming or Missed Calls lists.
 - “Copy from the Phonebook” to save a number that has been downloaded from your handset to the vehicle.
 - “Enter Number by Keypad” to input the number and name manually.




MAKING A CALL


To make a call, follow this procedure:


1. Press the  button on the steering wheel. The Phone menu will appear on the control panel display.
2. Touch one of the following:
 - “Quick Dial”, “Phonebook” or “Call History” key. Select the desired entry from the list and then the desired number, or
 - To enter a number manually, touch the “Dial Number” key, then enter the number and touch “OK”.



RECEIVING/ENDING A CALL

- To accept the call:
 - Press the  button on the steering wheel, or
 - Touch the “Answer” key on the touch-screen display.

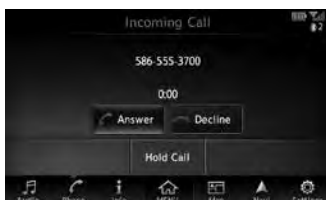

- To reject the call:
 - Press the ▲ ▼ arrow buttons on the steering wheel to highlight “Decline” through the vehicle information display and press the **OK** button on the steering wheel, or
 - Touch the “Decline” key on the touch-screen display.
- To hang up:
 - Press the  button on the steering wheel, or
 - Touch the “Hang up” key on the touch-screen display.






* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Hands-Free Phone (section 4)**” of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® STREAMING AUDIO

- If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular phone should not be used while driving so full attention may be given to vehicle operation.
 1. Touch the  “Audio” key and select the “Bluetooth Audio” key.
 2. A prompt to connect your device will display.
 - If the device is already paired:
 - a. Touch the “Select Devices” key to play from an already paired device.
 - b. Select the desired device and touch the “Connect” key **1**.
 - c. The last played audio will start playing once the device is connected.
 - If the device needs to be connected:
 - a. Touch the  “Settings” key.
 - b. Touch the “Bluetooth” key.
 - c. Touch the “Connect Device” key.
- Touch “BT Menu” to view track listing, artist, songs or albums.
- Touch “BT Settings” to change which device is playing audio.

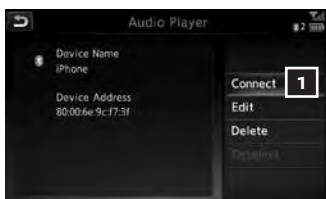

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Hands-Free Phone (section 4)**” of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

SYSTEM GUIDE



NAVIGATION SYSTEM

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle is not in motion. Voice commands may be available for some of the restricted functions. For more information, refer to the "Voice recognition (section 7)" of your Navigation System Owner's Manual.

- 1** **MENU** - Touch to access all available shortcut and widget items in the "Menu" screen.
- 2** Touch-screen
- 3** **Map Menu** - Touch to access different options related to either a selected location by touch or one that you have navigated to. Some options include "Save Location", "Nearby POIs", "Map Icons" or "New Destination".
- 4** **Navi** (Navigation) - Touch to access the Navigation function.
- 5** **Info** (Information) - Touch to display the vehicle, traffic (if so equipped) and weather (if so equipped) information.
- 6** **ZOOM OUT**, **7** **ZOOM IN** - Touch to adjust the map scale. When parked, you can pinch in or out to zoom on the screen.
- 8** **Map** - Touch to display the map.
- 9** **Settings** - Touch to display the system settings.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

 
SETTING A DESTINATION

You can set a destination with your Navigation System using the touch-screen display or Voice Recognition.

■ Touch-screen Display

- Touch the “▲ Navi” key on the Launch Bar.
- When a destination is set, touch the “New Destination” key and then select one of the displayed options for choosing your destination.

■ Voice Recognition


- Press the  button on the steering wheel, and after the tone, say “Navigation”. From here, the system will give you the options available for setting a destination.

SETTING A DESTINATION USING POINTS OF INTEREST (POI)

■ Touch-screen Display

- Touch the “▲ Navi” key on the Launch Bar, and if a destination is already set, touch the “New Destination” key.
- Touch the “Points of Interest” key and then select one of the displayed options for choosing your destination.

■ Voice Recognition

- Press the  button on the steering wheel, and after the tone, say “Navigation” then say “Points of Interest”. From here, the system will give you the options available for setting a POI.

NAVIGATION SWIPE TO METER

- Turn-by-turn route guidance can also be viewed in the vehicle information display by using Navigation Swipe to Meter. This can be done by programing a route, touching the turn-by-turn route icon on the center display, and swiping toward the general direction of the vehicle information display.
- The turn-by-turn route icon will move across the center display and transfer the route information to the vehicle information display when the vehicle is not moving.
- The icon will not move across the screen if the vehicle speed is over 4 mph (7 km/h), but the information will still transfer to the vehicle information display.
- The turn-by-turn route guidance cannot be transferred to the vehicle information display if the navigation screen is already shown or if a warning is present.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner's Manual.

SYSTEM GUIDE



HOMELINK® UNIVERSAL TRANSCEIVER

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (2-3 cm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the “learn” or “smart” button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programed button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2018/maxima
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2018 Nissan North America, Inc.

QR18EA 0A36U1

Printing: May 2018

