



Instruction Manual (Function)

Compact, high functionality inverters

FR-E820-0008(0.1K) to 0330(7.5K)
FR-E840-0016(0.4K) to 0170(7.5K)
FR-E860-0017(0.75K) to 0120(7.5K)
FR-E820S-0008(0.1K) to 0110(2.2K)
FR-E820-0008(0.1K) to 0330(7.5K)E
FR-E840-0016(0.4K) to 0170(7.5K)E
FR-E860-0017(0.75K) to 0120(7.5K)E
FR-E820S-0008(0.1K) to 0330(7.5K)SCE
FR-E840-0016(0.4K) to 0170(7.5K)SCE
FR-E840-0016(0.4K) to 0170(7.5K)SCE
FR-E860-0017(0.75K) to 0120(7.5K)SCE
FR-E820S-0008(0.1K) to 0110(2.2K)SCE

Cha	apter 1 Introduction
1.1	Inverter model
1.2	Operation steps
1.3	Related manuals
Cha	apter 2 Basic Operation
2.1	Operation panel
2.1.1 2.1.2 2.1.3 2.1.4	Components of the operation panel19Basic operation of the operation panel23Digital characters and their corresponding printed equivalents25Changing the parameter setting value25
2.2	Monitoring the inverter
2.2.1 2.2.2 2.2.3	Monitoring of output current and output voltage 27 First priority monitor screen. 27 Displaying the set frequency. 27
2.3	Easy setting of the inverter operation mode
2.4	Frequently-used parameters (simple mode parameters)
2.4.1	Simple mode parameter list
2.5	Basic operation procedure (PU operation)
2.5.1 2.5.2 2.5.3 2.5.4	Setting the frequency on the operation panel (example: operating at 30 Hz)34Setting the frequency with switches (multi-speed setting)35Setting the frequency using an analog signal (voltage input)36Setting the frequency using an analog signal (current input)37
2.6	Basic operation procedure (External operation)
2.6.1 2.6.2 2.6.3 2.6.4 2.6.5 2.6.6	Setting the frequency on the operation panel
2.7	Basic operation procedure (JOG operation)
2.7.1 2.7.2	Giving a start command by using external signals for JOG operation
2.8	I/O terminal function assignment
Cha	apter 3 Parameters52
3.1	Parameter initial value groups

3.2	Parameter list (by parameter number)
3.3	Use of a function group number for the identification of parameters
3.4	Parameter list (by function group number)80
Ch	apter 4 Control Method
4.1	Vector control and Real sensorless vector control
4.2	Changing the control method and mode
4.3	Selecting the Advanced magnetic flux vector control
4.4	Selecting the PM sensorless vector control
Ch	apter 5 Speed Control
5.1	Setting procedure of Real sensorless vector control (speed control)111
5.2	Setting procedure of Vector control (speed control)112
5.3	Setting procedure of PM sensorless vector control (speed control)113
5.4	Setting the torque limit level
5.5	Performing high-accuracy, fast-response control (gain adjustment for Real sensorless vector control, Vector control, and PM sensorless vector control)
5.6	Speed feed forward control, model adaptive speed control
5.7	Torque bias
5.8	Avoiding motor overrunning
5.9	Troubleshooting in the speed control
Ch	apter 6 Torque Control
6.1	Torque control
6.2	Setting procedure of Real sensorless vector control (torque control)

6.3	Setting procedure for Vector control (torque control)
6.4	Torque command
6.5	Speed limit
6.6	Torque control gain adjustment
6.7	Troubleshooting in torque control
Cha	apter 7 Adjustment during Real sensorless vector control, Vector control, PM sensorless vector control 154
7.1	Speed detection filter
7.2	Excitation ratio
7.3	Gain adjustment of current controllers for the d axis and the q axis
Cha	apter 8 (E) Environment Setting Parameters158
8.1	Clock
8.2	Reset selection / disconnected PU detection / PU stop selection
8.3	PU display language selection
8.4	Buzzer control
8.5	PU contrast adjustment
8.6	Automatic frequency setting / key lock operation selection
8.7	Frequency change increment amount setting (standard model)
8.8	RUN key rotation direction selection
8.9	Multiple rating setting171
8.10	Parameter write selection
8.11	Password

8.12	Free parameter178
8.13	Setting multiple parameters by batch
8.14	Extended parameter display and user group function
8.15	PWM carrier frequency and Soft-PWM control
8.16	Inverter parts life display
8.17	Maintenance timer alarm
8.18	Current average value monitor signal191
Cha	pter 9 (F) Settings for Acceleration/Deceleration 196
9.1	Setting the acceleration and deceleration time196
9.2	Acceleration/deceleration pattern
9.3	Remote setting function
9.4	Starting frequency and start-time hold function
9.5	Minimum motor speed frequency at the motor start up
9.6	Shortest acceleration/deceleration (automatic acceleration/deceleration)209
Cha	pter 10 (D) Operation Command and Frequency Command 212
10.1	Operation mode selection
10.2	Startup of the inverter in Network operation mode at power-ON
10.3	Start command source and frequency command source during communication operation223
10.4	Reverse rotation prevention selection
10.5	JOG operation
10.6	Operation by multi-speed setting

Cha	pter 11 (H) Protective Function Parameters23	8
11.1	Motor overheat protection (electronic thermal O/L relay)	38
11.2	Cooling fan operation selection	45
11.3	Earth (ground) fault detection at start24	46
11.4	Inverter output fault detection enable/disable selection	47
11.5	Initiating a protective function	48
11.6	I/O phase loss protection selection	49
11.7	Retry function	50
11.8	Limiting the output frequency (maximum/minimum frequency)	53
11.9	Avoiding machine resonance points (frequency jump)	54
11.10	Stall prevention operation	56
11.11	Load characteristics fault detection	61
11.12	Motor overspeeding detection	66
Cha	pter 12 (M) Item and Output Signal for Monitoring 26	8
12.1	Speed indication and its setting change to rotations per minute	68
12.2	Monitor item selection on operation panel or via communication	70
12.3	Monitor display selection for terminals FM and AM	79
12.4	Adjustment of terminal FM and terminal AM	83
12.5	Energy saving monitoring	86
12.6	Output terminal function selection	92
12.7	Output frequency detection	01
12.8	Output current detection function	04

12.9	Output torque detection function
12.10	Remote output function
Cha	pter 13 (T) Multi-Function Input Terminal Parameters 310
13.1	Analog input selection
13.2	Analog input terminal (terminal 4) function assignment
13.3	Response level of analog input and noise elimination
13.4	Frequency setting voltage (current) bias and gain
13.5	Torque (magnetic flux) setting current (voltage) bias and gain
13.6	Input terminal function selection
13.7	Inverter output shutoff
13.8	Selecting the condition to activate the Second function selection (RT) signal
13.9	Start signal operation selection
Cha	pter 14 (C) Motor Constant Parameters 340
14.1	Applied motor
14.2	Offline auto tuning
14.3	Offline auto tuning for a PM motor (motor constant tuning)
14.4	Online auto tuning
14.5	Parameter settings for a motor with encoder
14.6	Signal loss detection of encoder signals
Cha	pter 15 (A) Application Parameters
15.1	Brake sequence function
15.2	Stop-on-contact control

15.3	Traverse function
15.4	PID control
15.5	Calibration of PID display
15.6	Dancer control
15.7	Automatic restart after instantaneous power failure / flying start with an induction motor 403
15.8	Automatic restart after instantaneous power failure / flying start with a PM motor 408
15.9	Offline auto tuning for a frequency search410
15.10	Power failure time deceleration-to-stop function
15.11	PLC function
15.12	Trace function
Cha	pter 16 (G) Control Parameters426
Cha 16.1	pter 16 (G) Control Parameters 426 Manual torque boost 426
	·
16.1	Manual torque boost
16.1 16.2	Manual torque boost
16.1 16.2 16.3	Manual torque boost
16.1 16.2 16.3 16.4	Manual torque boost
16.1 16.2 16.3 16.4 16.5	Manual torque boost
16.1 16.2 16.3 16.4 16.5	Manual torque boost
16.1 16.2 16.3 16.4 16.5 16.6	Manual torque boost
16.1 16.2 16.3 16.4 16.5 16.6 16.7	Manual torque boost

16.12	Droop control
16.13	Speed smoothing control
Cha	pter 17 Checking and Clearing of Settings 456
17.1	Parameter clear / All parameter clear
17.2	List of parameters changed from the initial values
17.3	
17.5	Fault history clear
	pter 18 Appendix
Cha	pter 18 Appendix
18.1 18.1.1	pter 18 Appendix 460 For customers replacing the conventional model with this inverter .460 Replacement of the FR-E700 series .460
18.1 18.1.1 18.1.2	pter 18 Appendix 460 For customers replacing the conventional model with this inverter .460 Replacement of the FR-E700 series .460 Replacement of the FR-E500 series .462
18.1 18.1.1 18.1.2 18.2	pter 18 Appendix460For customers replacing the conventional model with this inverter.460Replacement of the FR-E700 series.460Replacement of the FR-E500 series.462Specification change.463

CHAPTER 1 Introduction

1.1	Inverter model	11
1.2	Operation steps	13
1.3	Related manuals	15

1 Introduction

The contents described in this chapter must be read before using this product.

Always read the instructions before use.

Abbreviations

Item	Description
PU	Operation panel, parameter unit (FR-PU07), LCD operation panel (FR-LU08), and enclosure surface operation panel (FR-PA07)
Parameter unit	Parameter unit (FR-PU07), LCD operation panel (FR-LU08), and enclosure surface operation panel (FR-PA07)
Inverter	Mitsubishi Electric inverter FR-E800 series
E800	Standard model (RS-485 + SIL2/PLd functional safety)
E800-E	Ethernet model (Ethernet + SIL2/PLd functional safety)
E800-SCE	Safety communication model (Ethernet + SIL3/PLe functional safety)
FM type inverter	Standard model with terminal FM (pulse output)
AM type inverter	Standard model with terminal AM (voltage output)
Vector control compatible option	FR-A8AP E kit
Pr.	Parameter number (Number assigned to function)
PU operation	Operation using the PU (operation panel / parameter unit)
External operation	Operation using the control circuit signals
Combined operation	Combined operation using the PU (operation panel / parameter unit) and External operation
Mitsubishi Electric standard efficiency motor	SF-JR
Mitsubishi Electric constant- torque motor	SF-HRCA
Mitsubishi Electric high- performance energy-saving motor	SF-PR
Mitsubishi Electric high- performance energy-saving motor with encoder	SF-PR-SC
Mitsubishi Electric Vector control dedicated motor	SF-V5RU
Mitsubishi Electric geared motor	GM-[]
Mitsubishi Electric inverter- driven geared motor for encoder feedback control	GM-DZ, GM-DP

◆ Trademarks


- Ethernet is a registered trademark of Fuji Xerox Corporation in Japan.
- MODBUS is a registered trademark of SCHNEIDER ELECTRIC USA, INC.
- BACnet is a registered trademark of the American Society of Heating, Refrigerating and Air-Conditioning Engineers (ASHRAE).
- DeviceNet and EtherNet/IP are registered trademarks of ODVA (Open DeviceNet Vendor Association, INC).
- PROFIBUS and PROFINET are either trademarks or registered trademarks of PROFIBUS & PROFINET International.
- · CC-Link IE TSN and CC-Link IE Field Network Basic are registered trademarks of CC-Link Partner Association.
- · Other company and product names herein are the trademarks and registered trademarks of their respective owners.

◆ Notes on descriptions in this Instruction Manual

Connection diagrams in this Instruction Manual appear with the control logic of the input terminals as sink logic, unless
otherwise specified. (Refer to the FR-E800 Instruction Manual (Connection) for the switching of the control logic of the
inverter.)

1.1 Inverter model

Check the rating plate on the side of the product. Some characters in the model name indicate the specification as follows.

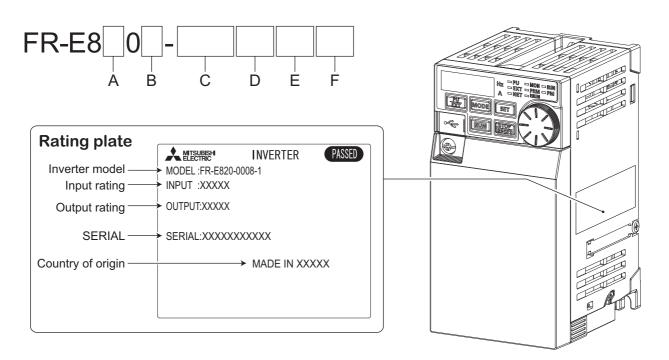

· A: The voltage class is shown.

Symbol	Voltage class
2	200 V class
4	400 V class
6	575 V class

• B: The number of phases of the power source is shown.

Symbol	Description
None	Three-phase input
S	Single-phase input

• C: The inverter rated capacity or the inverter rated current is shown.

Symbol	Description
0.1K to 7.5K	Inverter ND rated capacity (kW)
0008 to 0330	Inverter ND rated current (A)

• D: The communication type and the functional safety specification are shown.

Symbol	Communication / functional safety
None	Standard model (RS-485 + SIL2/PLd)
E	Ethernet model (Ethernet + SIL2/PLd)
SCE	Safety communication model (Ethernet + SIL3/PLe)

• E: The output specification for monitoring and the rated frequency are shown for the standard model, and the communication protocol group is shown for the Ethernet model and the safety communication model.

Symbol	Monitoring/protocol specification	Rated frequency	Control logic
-1	Pulse (terminal FM)	60 Hz	Sink logic
-4	Voltage (terminal AM)	50 Hz	Source logic
-5	Voltage (terminal AM)	60 Hz	Sink logic
PA	Protocol group A (CC-Link IE TSN, CC-Link IE Field Network Basic, MODBUS/TCP, EtherNet/IP, and BACnet/IP)	60 Hz	Sink logic
РВ	Protocol group B (CC-Link IE TSN, CC-Link IE Field Network Basic, MODBUS/TCP, PROFINET)	50 Hz	Source logic

• F: Availability of circuit board coating / plated conductors is shown.

Symbol	Circuit board coating*1	Plated conductor
None	Without coating	Without plated conductors
-60	With coating	Without plated conductors

*1 Conforming to IEC 60721-3-3 3C2



• In this Instruction Manual, the inverter model name consists of the applicable motor capacity and the rated current. (Example) FR-E820-0008(0.1K)


♦ How to read the SERIAL number

Rating plate example			
	00	\bigcirc	<u>000000</u>
Symbol	Year	Month	Control number
		SERIA	.L

The SERIAL consists of two symbols, three characters indicating the production year and month, and six characters indicating the control number.

The last two digits of the production year are indicated as the Year, and the Month is indicated by 1 to 9, X (October), Y (November), or Z (December).

1.2 Operation steps

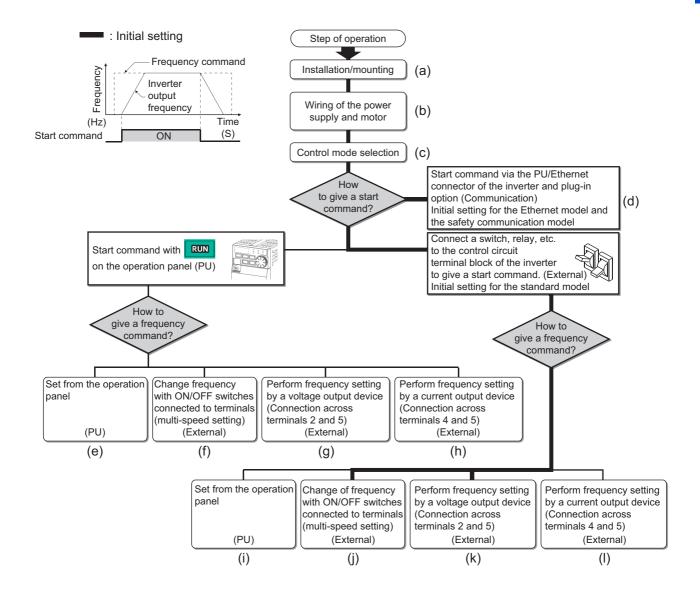

Symbol	Overview	Refer to page
(a)	Install the inverter.	Instruction Manual (Connection)
(b)	Perform wiring for the power supply and the motor.	Instruction Manual (Connection)
(c)	Select the control method (V/F control, Advanced magnetic flux vector control, Real sensorless vector control, Vector control, and PM sensorless vector control).	90
(d)	Give the start command via communication.	Instruction Manual (Communication)
(e)	Give both the start and frequency commands from the PU. (PU operation mode)	34
(f)	Give the start command from the PU and the frequency command via terminals RH, RM, and RL. (External/PU combined operation mode 2)	35
(g)	Give the start command from the PU and the frequency command by voltage input via terminal 2. (External/PU combined operation mode 2)	36
(h)	Give the start command from the PU and the frequency command by current input via terminal 4. (External/PU combined operation mode 2)	37
(i)	Give the start command via terminal STF or STR and the frequency command from the PU. (External/PU combined operation mode 1)	39
(j)	Give the start command via terminal STF or STR and the frequency command via terminals RH, RM, and RL. (External operation mode)	40
(k)	Give the start command via terminal STF or STR and the frequency command by voltage input via terminal 2. (External operation mode)	41
(1)	Give the start command via terminal STF or STR and the frequency command by current input via terminal 4. (External operation mode)	43

1.3 Related manuals

The manuals related to the FR-E800 inverter are as follows.

Name	Manual number
FR-E800 Inverter Safety Guideline	IB-0600857ENG
FR-E860 Inverter Safety Guideline	IB-0600910ENG
FR-E800-E Inverter Safety Guideline	IB-0600860ENG
FR-E860-E Inverter Safety Guideline	IB-0600911ENG
FR-E800-SCE Inverter Safety Guideline	IB-0600921ENG
FR-E860-SCE Inverter Safety Guideline	IB-0600924ENG
FR-E800 Instruction Manual (Connection)	IB-0600865ENG
FR-E860 Instruction Manual (Connection)	IB-0600906ENG
FR-E800 Instruction Manual (Communication)	IB-0600871ENG
FR-E800 Instruction Manual (Maintenance)	IB-0600874ENG
FR-E800 Instruction Manual (Functional safety)	BCN-A23488-000
FR-E800-SCE Instruction Manual (Functional safety)	BCN-A23488-004
FR Configurator 2 Instruction Manual	IB-0600516ENG
PLC Function Programming Manual	IB-0600492ENG

MEMO

CHAPTER 2 Basic Operation

2.1	Operation panel	19
2.2	Monitoring the inverter	
2.3	Easy setting of the inverter operation mode	
2.4	Frequently-used parameters (simple mode parameters)	29
2.5	Basic operation procedure (PU operation)	34
2.6	Basic operation procedure (External operation)	39
2.7	Basic operation procedure (JOG operation)	46
2.8	I/O terminal function assignment	48

Basic Operation


This chapter explains the basic operation of this product. Always read the instructions before use.

2.1 Operation panel

2.1.1 Components of the operation panel

♦ Standard model

The operation panel cannot be removed from the inverter.

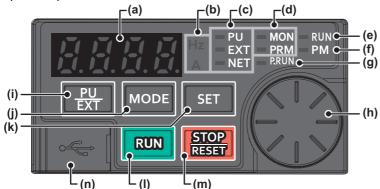


No.	Appearance	Name	Description
()		Monitor (4-digit	Shows a numeric value (readout) of a monitor item such as the frequency or a parameter
(a)	ā.ā.ā.ā.	LED)	number. (The monitor item can be changed according to the settings of Pr.52 , Pr.774 to Pr.776 .)
(b)	Hz A	Unit indication	Hz: ON when the actual frequency is monitored. (Blinks when the set frequency is monitored.) A: ON when the current is monitored. (Both "Hz" and "A" are OFF to indicate a value other than the frequency or the current.
(c)	PU EXT NET	Inverter operation mode LED indicator	PU: ON when the inverter is in the PU operation mode. EXT: ON when the inverter is in the External operation mode. (ON when the inverter in the initial setting is powered ON.) NET: ON when the inverter is in the Network operation mode. PU and EXT: ON when the inverter is in the External/PU combined operation mode 1 or 2.
(d)	MON PRM	Operation panel mode LED indicator	MON: ON or blinks only when the first, second, or third monitor is displayed. PRM: ON when the operation panel is in the parameter setting mode. The indicator blinks when the inverter is in the easy setting mode.
(e)	RUN	Operating status indicator	ON or blinks during inverter running. ON: During forward rotation operation. Blinks slowly (1.4-second cycle): During reverse rotation operation. Blinks quickly (0.2-second cycle): Operation is disabled although the start command is given.*1
(f)	PM	Controlled motor type LED indicator	ON when the inverter is set to control the PM motor. The indicator blinks during test operation. The indicator is OFF when the inverter controls the induction motor.
(g)	P.RUN	PLC function LED indicator	ON when the PLC function of the inverter is valid.
(h)		Setting dial	The setting dial of the Mitsubishi Electric inverters. Turn the setting dial to change the setting of frequency or parameter, etc. Press the setting dial to perform the following operations: To display a set frequency on the LED display in the monitor mode. (The monitor item shown on the display can be changed by using Pr.992.) To display the present setting during calibration.
(i)	PU EXT	PU/EXT key	Switches between the PU operation mode, the PUJOG operation mode, and the External operation mode. The easy setting of the inverter operation mode is enabled by pressing this key simultaneously with the MODE key. Also cancels the PU stop warning.
(j)	MODE	MODE key	Switches the operation panel to a different mode. The easy setting of the inverter operation mode is enabled by pressing this key simultaneously with the PU/EXT key. Every key on the operation panel becomes inoperable by holding this key for 2 seconds. The key inoperable function is invalid when Pr.161 = "0 (initial setting)". (Refer to page 167.)
(k)	SET	SET key	Confirms each selection. When this key is pressed during inverter operation, the monitor item changes. (The monitor item on each screen can be changed according to the settings of Pr.52, Pr.774 to Pr.776.)
(I)	RUN	RUN key	Start command The direction of motor rotation depends on the Pr.40 setting.
(m)	STOP RESET	STOP/RESET key	Stops the operation commands. Used to reset the inverter when the protective function is activated.
(n)		USB connector	FR Configurator2 is available by USB connection.

^{*1} Situations such as when the MRS/X10 signal is input, during the automatic restart after instantaneous power failure, after auto tuning is complete, when "SE" (incorrect parameter setting) alarm occurs.

♦ Ethernet model and safety communication model

The operation panel cannot be removed from the inverter.

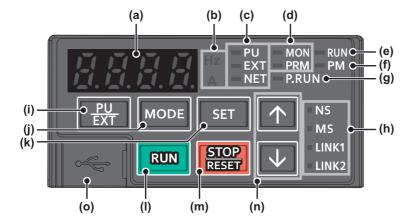


No.	Appearance	Name	Description
(a)	8.8.8.8.	Monitor (4-digit LED)	Shows a numeric value (readout) of a monitor item such as the frequency or a parameter number. (The monitor item can be changed according to the settings of Pr.52 , Pr.774 to Pr.776 .)
(b)	Hz A	Unit indication	Hz: ON when the actual frequency is monitored. (Blinks when the set frequency is monitored.) A: ON when the current is monitored. (Both "Hz" and "A" are OFF to indicate a value other than the frequency or the current.
(c)	PU EXT NET	Inverter operation mode LED indicator	PU: ON when the inverter is in the PU operation mode. EXT: ON when the inverter is in the External operation mode. (ON when the inverter in the initial setting is powered ON.) NET: ON when the inverter is in the Network operation mode. PU and EXT: ON when the inverter is in the External/PU combined operation mode 1 or 2.
(d)	— MON ─ PRM	Operation panel mode LED indicator	MON: ON or blinks only when the first, second, or third monitor is displayed. PRM: ON when the operation panel is in the parameter setting mode. The indicator blinks when the inverter is in the easy setting mode.
(e)	RUN	Operating status indicator	ON or blinks during inverter running. ON: During forward rotation operation. Blinks slowly (1.4-second cycle): During reverse rotation operation. Blinks quickly (0.2-second cycle): Operation is disabled although the start command is given.*1
(f)	— РМ	Controlled motor type LED indicator	ON when the inverter is set to control the PM motor. The indicator blinks during test operation. The indicator is OFF when the inverter controls the induction motor.
(g)	P.RUN	PLC function LED indicator	ON when the PLC function of the inverter is valid.
(h)	NS MS LINK1 LINK2	Ethernet communication status	Indicates the Ethernet communication status. For details, refer to the Instruction Manual (Communication).
(i)	PU EXT	PU/EXT key	Switches between the PU operation mode, the PUJOG operation mode, and the External operation mode. The easy setting of the inverter operation mode is enabled by pressing this key simultaneously with the MODE key. Also cancels the PU stop warning.
(j)	MODE	MODE key	Switches the operation panel to a different mode. The easy setting of the inverter operation mode is enabled by pressing this key simultaneously with the PU/EXT key. Every key on the operation panel becomes inoperable by holding this key for 2 seconds. The key inoperable function is invalid when Pr.161 = "0 (initial setting)". (Refer to page 167.)
(k)	SET	SET key	Confirms each selection. When this key is pressed during inverter operation, the monitor item changes. (The monitor item on each screen can be changed according to the settings of Pr.52, Pr.774 to Pr.776.)
(I)	RUN	RUN key	Start command The direction of motor rotation depends on the Pr.40 setting.
(m)	STOP RESET	STOP/RESET key	Stops the operation commands. Used to reset the inverter when the protective function is activated.
(n)	lacktriangle	UP/DOWN key	Used to change the setting of frequency or parameter.
(o)		USB connector	FR Configurator2 is available by USB connection.

^{*1} Situations such as when the MRS/X10 signal is input, during the automatic restart after instantaneous power failure, after auto tuning is complete, when "SE" (incorrect parameter setting) alarm occurs.


2.1.2 Basic operation of the operation panel

♦ Basic operation (standard model)

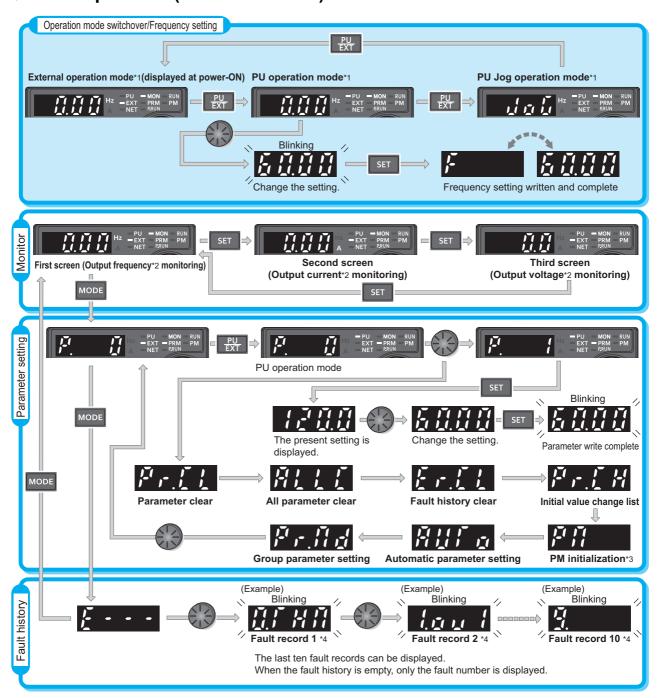

- *1 For the details of operation modes, refer to page 212.
- *2 The monitor item can be changed. (Refer to page 270.)
- *3 Not displayed for the 575 V class.
- *4 For the details of the fault history, refer to the Instruction Manual (Maintenance).

Basic operation (Ethernet model and safety communication model)

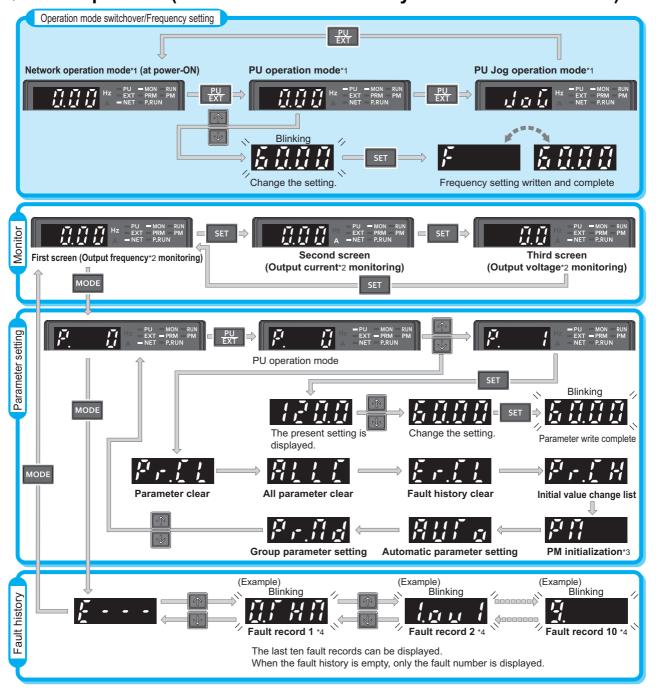

- For the details of operation modes, refer to page 212.
- The monitor item can be changed. (Refer to page 268.)
- Not displayed for the 575 V class.
- For the details of the fault history, refer to the Instruction Manual (Maintenance).

Parameter setting mode


In the parameter setting mode, inverter functions (parameters) are set.

The following table explains the indications in the parameter setting mode.

Operation panel indication	Function name	Description	Refer to page
F.	Parameter setting mode	Under this mode, the set value of the displayed parameter number is read or changed.	25
Pr.EL	Parameter clear	Clears and resets parameter settings to the initial values. Calibration parameters and offline auto tuning parameters are not cleared. For the details of the uncleared parameters, refer to page 465.	456
ALLE	All parameter clear	Clears and resets parameter settings to the initial values. Calibration parameters and the offline auto tuning parameters are also cleared. For the details of the uncleared parameters, refer to page 465.	456
E []	Fault history clear	Deletes the fault history.	458
FrEH	Initial value change list	Identifies the parameters that have been changed from their initial settings.	457
FΠ	PM parameter initialization	Changes the parameter settings required to drive a PM motor to the settings for V/F control as a batch. (Not displayed for the 575 V class.)	104
ЯЦГ _о	Automatic parameter setting	Changes parameter settings as a batch. The target parameters include communication parameters for the Mitsubishi Electric human machine interface (GOT) connection and the parameters for the rated frequency settings of 50/60 Hz.	179
Frild	Group parameter setting	Displays parameter numbers by function groups.	78

2.1.3 Digital characters and their corresponding printed equivalents


Digital characters displayed on the operation panel display are as follows.

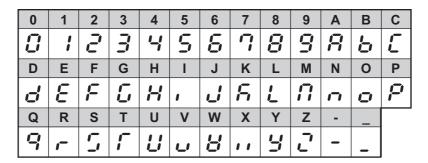

2.1.4 Changing the parameter setting value

- Select the parameter number in the parameter setting mode and press the SET key to change the parameter setting value.
- · After changing the parameter setting value, press the SET key to write the setting value to the inverter.
- When the parameter number is 4-digit, "Pr." and the parameter number are displayed alternately.
- When the parameter number is 5-digit, the upper 1 digit and the lower 4 digits of the parameter number are displayed alternately.

◆ Parameter setting screen

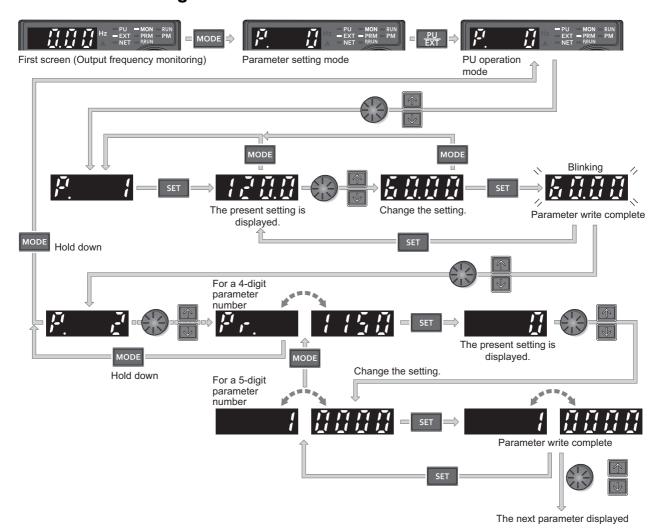

• NOTE

• If a parameter write condition is not satisfied, a parameter write error appears on the LCD display. (For details of the errors, refer to the Instruction Manual (Maintenance).)

Error indication	Description
E + 1	Parameter write error
£ - Ē	Write error during operation
E - 3	Calibration error
E - 4	Mode designation error

• When **Pr.77 Parameter write selection** = "0 (initial setting)," the parameter setting change is only available while the inverter is stopped and under the PU operation mode. To enable the parameter setting change while the inverter is running or under the operation mode other than PU operation mode, change the **Pr.77** setting. (Refer to page 173.)

2.2 Monitoring the inverter

2.2.1 Monitoring of output current and output voltage



 Press the SET key on the operation panel in the monitor mode to switch the monitor item between output frequency, output current, and output voltage.

Operating procedure

- **1.** Press the MODE key during inverter operation to monitor the output frequency. The [Hz] LED turns ON.
- 2. Press the SET key to monitor the output current. This operation is valid during running or stopping under any operation mode. The [A] LED turns ON.
- **3.** Press the SET key to monitor the output voltage. Unit LEDs are both OFF.



• Other monitor item, such as output power or set frequency, is also available. Use **Pr.52 Operation panel main monitor selection** or **Pr.774 Operation panel monitor selection 1** to **Pr.776 Operation panel monitor selection 3** to change the setting. (Refer to page 270.)

2.2.2 First priority monitor screen

The first priority monitor screen, which is displayed first when the operation panel becomes in the monitor mode, is selectable. To set it, press the SET key for a while when the desired monitor item is displayed on a monitor screen.

The following show the procedure to set the monitor screen displaying the output current as the first priority monitor screen.

Operating procedure

- **1.** Change the mode of the operation panel to the monitor mode, and switch the monitor screen to the one on which the output current can be monitored.
- **2.** Press the SET key for a while (1 second). The output current monitor screen is set as the first priority monitor screen.
- **3.** When the operation panel is in the monitor mode next time, the output current monitored value is displayed first.



• Use Pr.52 Operation panel main monitor selection or Pr.774 Operation panel monitor selection 1 to Pr.776 Operation panel monitor selection 3 to change the monitor item. (Refer to page 270.)

2.2.3 Displaying the set frequency

To display the present set frequency in the standard model, change the mode of the operation panel to the monitor mode and

press the setting dial () while the inverter runs in the PU operation mode or in the External/PU combined operation mode

1 (Pr.79 Operation mode selection = "3").



• Use Pr.992 Operation panel setting dial push monitor selection to change the item to be displayed. (Refer to page 270.)

2.3 Easy setting of the inverter operation mode

The operation mode suitable for start and speed command combinations can be set easily using **Pr.79 Operation mode selection**.

The following shows the procedure to operate with the external start command (STF/STR) and the frequency command by using the operation panel.

Operating procedure

1. Press the PU/EXT key and MODE key for 0.5 second at the same time.



2. Turn the setting dial or press the UP/DOWN key until "79-3" (External/PU combined operation mode 1) appears. (For other settings, refer to the following table.)



3. Press the SET key to confirm the setting. External/PU combined operation mode 1 (**Pr.79** = "3") is set.

	Operatio	n method	Operation mode	
Operation panel indication	Start command	Frequency command		
Blinking	RUN key	Setting dial or UP/ DOWN key	PU operation mode	
Blinking	External (STF/STR signal)	Analog voltage input	External operation mode	
Blinking	External (STF/STR signal)	Setting dial or UP/ DOWN key	External/PU combined operation mode 1	
Blinking	RUN key	Analog voltage input	External/PU combined operation mode 2	

• NOTE

- When the user group function is used (**Pr.160** = "1") or the password function is enabled (with **Pr.296** and **Pr.297**), the easy setting is disabled (**Pr.79** is not displayed).
- "ER2" appears if a setting change is attempted during inverter operation. Turn OFF the start command (the RUN key or STF/STR signal).
- If the MODE key is pressed before pressing the SET key, the easy setting mode is terminated and the operation panel returns to the monitor mode. If the easy setting is terminated while **Pr.79** = "0 (initial value)", check the inverter operation mode because the inverter may switch its operation mode between the PU operation mode and the External operation mode.
- · Reset by pressing the STOP/RESET key is enabled.
- The following is the frequency commands listed in descending order of priority when "3" is set in Pr.79: Multi-speed setting function (RL/RM/RH/REX signal) > PID control (X14 signal) > terminal 4 analog input (AU signal) > digital input from the operation panel.

2.4 Frequently-used parameters (simple mode parameters)

Parameters that are frequently used for the FR-E800 series are grouped as simple mode parameters.

When **Pr.160 User group read selection** = "9999", only the simple mode parameters are displayed on the operation panel. This section explains the simple mode parameters.

2.4.1 Simple mode parameter list

For simple variable-speed operation of the inverter, the initial values of the parameters may be used as they are. Set the necessary parameters to meet the load and operational specifications. Parameter's setting, change and check can be made on the operation panel.



Pr.160 User group read selection can narrow down the displayed parameters to only the simple mode parameters. (In the
initial setting, all parameters are displayed.) Set Pr.160 User group read selection as required. (To change the parameter
setting, refer to page 25.)

Pr.160 setting	Description				
9999	Only simple mode parameters are displayed.				
0 (initial value)	All parameters (simple mode parameters and extended parameters) are displayed.				
1	Only parameters registered in user groups are displayed.				

◆ Simple mode parameters (standard model)

	Pr.			Initial value*9				Refer
Pr.	group	Name	Increment	Gr.1	Gr.2	Range	Application	to page
				6% ^{*1}			Set this parameter to obtain a higher starting	
	0 G000	Torque boost	0.1%	5% ^{*2}		0% to 30%	torque under V/F control. Also set this when a loaded motor cannot be driven, the warning "OL" occurs, and the inverter output is shut off	426
0				4%*3				
				3% ^{*4}		-	with the fault indication "E.OC1".	
1	H400	Maximum	0.01 Hz	2% ^{*5}		0 to 120 Hz	Set the upper limit for the output frequency.	
•	11100	frequency Minimum	0.01112	120 112		0 10 120 112	ost the appearance of the satput hequelley.	253
2	H401	frequency	0.01 Hz	0 Hz		0 to 120 Hz	Set the lower limit for the output frequency.	
3	G001	Base frequency	0.01 Hz	60 Hz	50 Hz	0 to 590 Hz	Set this parameter when the rated motor frequency is 50 Hz. Check the rating plate of the motor.	428
4	D301	Multi-speed setting (high speed)	0.01 Hz	60 Hz	50 Hz	0 to 590 Hz		35, 40, 234
5	D302	Multi-speed setting (middle speed)	0.01 Hz	30 Hz		0 to 590 Hz	Pre-set the speeds that will be switched among by terminals.	
6	D303	Multi-speed setting (low speed)	0.01 Hz	10 Hz		0 to 590 Hz		
7	F010	Acceleration time	0.1 s	5 s*6		0 to 3600 s	Set the acceleration time.	
				5 s*6 10 s*7			Set the deceleration time.	196
8	F011	Deceleration time	0.1 s			0 to 3600 s		
9	H000 C103	Electronic thermal O/L relay	0.01 A	Inverter rated current*8		0 to 500 A	Protects the motor from heat. Set the rated motor current.	238
79	D000	Operation mode selection	1	0		0 to 4, 6, 7	Select the start and frequency command sources.	212
125	T022	Terminal 2 frequency setting gain frequency	0.01 Hz	60 Hz	50 Hz	0 to 590 Hz	Change the frequency at the maximum potentiometer setting (5 V in the initial setting).	42, 318
126	T042	Terminal 4 frequency setting gain frequency	0.01 Hz	60 Hz	50 Hz	0 to 590 Hz	Change the frequency at the maximum current input (20 mA in the initial setting).	44, 318
160	E440	User group read selection	1	0		0, 1, 9999	This function restricts the parameters that are read by the operation panel and parameter unit.	181
998	E430	PM parameter initialization	1	0		0, 8009, 8109, 9009, 9109	Select the PM sensorless vector control and set the parameters that are required to drive a PM motor.	102
999	E431	Automatic parameter setting	1	9999		10, 12, 20, 21, 9999	Changes parameter settings as a batch. The target parameters include communication parameters for the Mitsubishi Electric human machine interface (GOT) connection and the parameters for the rated frequency settings of 50/60 Hz.	179

- *1 Initial value for the FR-E820-0050(0.75K) or lower, FR-E840-0026(0.75K) or lower, and FR-E820S-0050(0.75K) or lower.
- $^{*}2$ Initial value for the FR-E860-0017(0.75K).
- *3 Initial value for the FR-E820-0080(1.5K) to FR-E820-0175(3.7K), FR-E840-0040(1.5K) to FR-E840-0095(3.7K), and FR-E820S-0080(1.5K) or higher.
- $^{\star}4 \quad \text{Initial value for the FR-E820-0240(5.5K) or higher, FR-E840-0120(5.5K) or higher, FR-E860-0027(1.5K), and FR-E860-0040(2.2K).}$
- *5 Initial value for the FR-E860-0061(3.7K) or higher.
- *6 Initial value for the FR-E820-0175(3.7K) or lower, FR-E840-0095(3.7K) or lower, FR-E860-0061(3.7K) or lower, and FR-E820S-0110(2.2K) or lower.
- *7 Initial value for the FR-E820-0240(5.5K) or higher, FR-E840-0120(5.5K) or higher, and FR-E860-0090(5.5K) or higher.
- *8 The initial value for the FR-E820-0050(0.75K) or lower, the FR-E840-0026(0.75K) or lower, the FR-E860-0017(0.75K), and the FR-E820S-0050(0.75K) or lower is set to the 85% of the inverter rated current.
- *9 Gr.1 and Gr.2 are the parameter initial value groups. (Refer to page 52.)

♦ Simple mode parameters (Ethernet model and safety communication model)

	Pr.			Initial value*9				Refer
Pr.	group	Name	Increment	Gr.1	Gr.2	Range	Application	to page
				6% ^{*1}			Set this parameter to obtain a higher starting	
			5% ^{*2}			torque under V/F control. Also set this when a		
0	G000	Torque boost	0.1%	4% ^{*3}		0% to 30%	loaded motor cannot be driven, the warning "OL" occurs, and the inverter output is shut off with the fault indication "E.OC1".	426
				3% ^{*4} 2% ^{*5}				
1	H400	Maximum frequency	0.01 Hz	120 Hz		0 to 120 Hz	Set the upper limit for the output frequency.	253
2	H401	Minimum frequency	0.01 Hz	0 Hz		0 to 120 Hz	Set the lower limit for the output frequency. Set this parameter when the rated motor	
3	G001	Base frequency	0.01 Hz	60 Hz	50 Hz	0 to 590 Hz	frequency is 50 Hz. Check the rating plate of the motor.	428
4	D301	Multi-speed setting (high speed)	0.01 Hz	60 Hz	50 Hz	0 to 590 Hz		35,
5	D302	Multi-speed setting (middle speed)	0.01 Hz	30 Hz		0 to 590 Hz	Pre-set the speeds that will be switched among by terminals.	40, 234
6	D303	Multi-speed setting (low speed)	0.01 Hz	10 Hz		0 to 590 Hz		
7	F010	Acceleration time	0.1 s	5 s*6 10 s*7		0 to 3600 s	Set the acceleration time.	
8	F011	Deceleration time	0.1 s	5 s*6 10 s*7		0 to 3600 s	Set the deceleration time.	196
9	H000 C103	Electronic thermal O/L relay	0.01 A	Inverter rated current*8		0 to 500 A	Protects the motor from heat. Set the rated motor current.	238
79	D000	Operation mode selection	1	0		0 to 4, 6, 7	Select the start and frequency command sources.	212
125	T022	Terminal 2 frequency setting gain frequency	0.01 Hz	60 Hz	50 Hz	0 to 590 Hz	Change the frequency at the maximum potentiometer setting (5 V in the initial setting).	42, 318
126	T042	Terminal 4 frequency setting gain frequency	0.01 Hz	60 Hz	50 Hz	0 to 590 Hz	Change the frequency at the maximum current input (20 mA in the initial setting).	44, 318
160	E440	User group read selection	1	0		0, 1, 9999	This function restricts the parameters that are read by the operation panel and parameter unit.	102
313	M410	DO0 output selection	1	9999		Refer to page 270.	Set this parameter to assign the functions to the devices RX9 to RXB for the CC-Link IE TSN and CC-Link IE Field Network Basic.	*10
314	M411	DO1 output selection	1					
315	M412	DO2 output selection	1	9999			TON AND CO-LINK IE TIERU NETWORK BASIC.	
349	N010	Communication reset selection	1	0		0, 1	Disable an error reset command given via communication in the External operation mode or the PU operation mode.	*10
541	N100	Frequency command sign selection	1	0		0, 1	Set this parameter to make the start command (forward/reverse rotation) inverted by adding a plus or minus sign to the value of the frequency command sent through the CC-Link IE TSN or the CC-Link IE Field Network Basic.	*10
544	N103	CC-Link extended setting	1	0		0, 1, 12, 14, 18, 24, 28	Set this parameter to extend the function of the remote registers for the CC-Link IE TSN or the CC-Link IE Field Network Basic.	*10
998	E430	PM parameter initialization	1	0		0, 8009, 8109, 9009, 9109	Select the PM sensorless vector control and set the parameters that are required to drive a PM motor.	102
999	E431	Automatic parameter setting	1	9999		10, 12, 20, 21, 9999	Changes parameter settings as a batch. The target parameters include communication parameters for the Mitsubishi Electric human machine interface (GOT) connection and the parameters for the rated frequency settings of 50/60 Hz.	179

 $^{^{\}star}1 \quad \text{Initial value for the FR-E820-0050(0.75K) or lower, FR-E840-0026(0.75K) or lower, and FR-E820S-0050(0.75K) or lower.}$

- *2 Initial value for the FR-E860-0017(0.75K).
- *3 Initial value for the FR-E820-0080(1.5K) to FR-E820-0175(3.7K), FR-E840-0040(1.5K) to FR-E840-0095(3.7K), and FR-E820S-0080(1.5K) or higher.
- *4 Initial value for the FR-E820-0240(5.5K) or higher, FR-E840-0120(5.5K) or higher, FR-E860-0027(1.5K), and FR-E860-0040(2.2K).
- *5 Initial value for the FR-E860-0061(3.7K) or higher.
- *6 Initial value for the FR-E820-0175(3.7K) or lower, FR-E840-0095(3.7K) or lower, FR-E860-0061(3.7K) or lower, and FR-E820S-0110(2.2K) or lower.
- *7 Initial value for the FR-E820-0240(5.5K) or higher, FR-E840-0120(5.5K) or higher, and FR-E860-0090(5.5K) or higher.
- *8 The initial value for the FR-E820-0050(0.75K) or lower, the FR-E840-0026(0.75K) or lower, the FR-E860-0017(0.75K), and the FR-E820S-0050(0.75K) or lower is set to the 85% of the inverter rated current.
- $^{*}9$ Gr.1 and Gr.2 are the parameter initial value groups. (Refer to page 52.)
- *10 For details, refer to the Instruction Manual (Communication).

2.5 **Basic operation procedure (PU operation)**

Select a method to give the frequency command from the list below, and refer to the specified page for its procedure.

Method to give the frequency command	Refer to page
Setting the frequency on the operation panel in the frequency setting mode	34
Give commands by turning ON/OFF switches wired to inverter's terminals (multi-speed setting)	35
Setting the frequency by inputting voltage signals	36
Setting the frequency by inputting current signals	37

Setting the frequency on the operation panel 2.5.1 (example: operating at 30 Hz)



Use the operation panel to give a start command and a frequency command. (PU operation)



The following shows the procedure to operate at 30 Hz.

Operating procedure

- Turning ON the power of the inverter The operation panel is in the monitor mode.
- 2 Changing the operation mode Press the PU/EXT key to choose the PU operation mode. The PU LED turns ON.
- 3. Setting the frequency

Turn the setting dial or press the UP/DOWN key until the target frequency "30.00" (30.00 Hz) appears. The indication blinks for about 5 seconds.

While the value is blinking, press the SET key to enter the frequency. "F" and "30.00" are displayed alternately. After about 3 seconds of alternate display, the indication returns to "0.00" (the indication of a monitored value). (If the SET key is not pressed, the indication of the value returns to "0.00" (0.00 Hz) after about 5 seconds of blinking. In that case, turn the setting dial or press the UP/DOWN key and set the frequency again.)

- Start → acceleration → constant speed
 - Press the RUN key to start running. The frequency value on the monitor increases according to the setting of Pr.7 **Acceleration time**, and "30.00" (30.00 Hz) appears on the monitor.

(To change the set frequency, return to step 3. The previously set frequency appears.)

- 5. Deceleration → stop
 - Press the STOP/RESET key to stop. The frequency value on the monitor decreases according to the setting of Pr.8 Deceleration time, "0.00" (0.00 Hz) appears on the monitor, and the motor stops rotating.




- To display the set frequency in the standard model, press the setting dial while the inverter runs in the PU operation mode or in the External/PU combined operation mode 1 (Pr.79 = "3"). (Refer to page 270.)
- The frequency can be set without pressing the SET key when Pr.161 Frequency setting/key lock operation selection = "1 or 11". (Refer to page 167.)


2.5.2 Setting the frequency with switches (multi-speed setting)

Point P

- Use the RUN key on the operation panel to give a start command.
- Turn ON the RH, RM, or RL signal to give a frequency command (multi-speed setting).
- Set Pr.79 Operation mode selection = "4" (External/PU combination operation mode 2).

[Connection diagram]

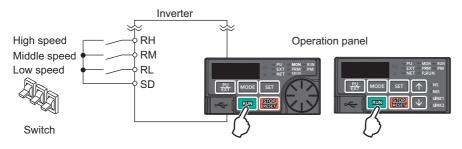

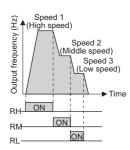

The following shows the procedure to operate at a low speed (10 Hz).

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- Changing the operation mode Set "4" in Pr.79. The PU LED and EXT LED turn ON. (To change the setting, refer to page 28.)
- **3.** Setting the frequency

 Turn ON the low-speed switch (RL signal).
- 4. Start → acceleration → constant speed
 Press the RUN key to start running. The frequency value on the monitor increases according to the setting of Pr.7
 Acceleration time, and "10.00" (10.00 Hz) appears on the monitor.
- Deceleration → stop
 Press the STOP/RESET key to stop. The frequency value on the monitor decreases according to the setting of Pr.8
 Deceleration time, "0.00" (0.00 Hz) appears on the monitor, and the motor stops rotating. Turn OFF the low-speed switch (RL signal).

NOTE

- The initial value is 60 Hz for terminal RH in Group 1 (50 Hz in Group 2), 30 Hz for terminal RM, and 10 Hz for terminal RL. (To change the settings, use **Pr.4**, **Pr.5**, and **Pr.6**, respectively.)
- In the initial setting, if two or more speed switches (signals) are simultaneously turned ON, priority is given to the switch (signal) for the lower speed. For example, when both RH and RM signals turn ON, the RM signal (**Pr.5**) has the higher priority.
- Up to 15-speed switching operation can be performed.
- Up to two external input terminals are available for the Ethernet model. Use Pr.178 STF/DI0 terminal function selection and Pr.179 STR/DI1 terminal function selection to assign the functions to terminals DI0 and DI1.

Parameters referred to


Pr.4 to Pr.6 (multi-speed setting) ☐ page 234
Pr.7 Acceleration time, Pr.8 Deceleration time ☐ page 196
Pr.79 Operation mode selection ☐ page 212
Pr.178 STF/DI0 terminal function selection ☐ page 328

2.5.3 Setting the frequency using an analog signal (voltage input)

Point P

- · Use the RUN key on the operation panel to give a start command.
- Use the frequency setting potentiometer to give a frequency command (by connecting it to terminals 2 and 5 (voltage input)).
- Set Pr.79 Operation mode selection = "4" (External/PU combination operation mode 2).

[Connection diagram] (The inverter supplies 5 V power to the frequency setting potentiometer via terminal 10.)

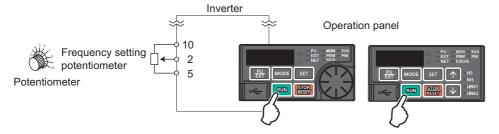

The following shows the procedure to operate at 60 Hz.

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- Changing the operation mode
 Set "4" in Pr.79. The PU LED and EXT LED turn ON. (To change the setting, refer to page 28.)
- **3.** Start

 Press the RUN key. The RUN LED blinks as no frequency command is given.
- **4.** Acceleration → constant speed

 Turn the frequency setting potentiometer clockwise slowly to full. The frequency value on the monitor increases according to the setting of **Pr.7 Acceleration time**, and "60.00" (60.00 Hz) appears on the monitor.
- Deceleration
 Turn the frequency setting potentiometer counterclockwise slowly to full. The frequency value on the monitor decreases according to the setting of Pr.8 Deceleration time, "0.00" (0.00 Hz) appears on the monitor, and the
 - 6. Stop
 Press the STOP/RESET key. The RUN LED turns OFF.

motor stops rotating. The RUN LED blinks.

NOTE

- To change the frequency (60 Hz) at the maximum voltage input (initial value: 5 V), adjust **Pr.125 Terminal 2 frequency setting** gain frequency.
- To change the frequency (0 Hz) at the minimum voltage input (initial value: 0 V), adjust the calibration parameter C2 (Pr.902)

 Terminal 2 frequency setting bias frequency.
- When terminal 10 is used, the maximum output frequency may fluctuate in a range of ±6 Hz due to fluctuations in the output voltage (5 ±0.5 VDC). Use **Pr.125** or **C4 (Pr.903)** to adjust the output frequency at the maximum analog input as required. (Refer to page 318.)

Parameters referred to


Pr.7 Acceleration time, Pr.8 Deceleration time page 196
Pr.79 Operation mode selection page 212
Pr.125 Terminal 2 frequency setting gain frequency page 318
C2(Pr.902) Terminal 2 frequency setting bias frequency page 318

2.5.4 Setting the frequency using an analog signal (current input)

Point P

- Use the RUN key on the operation panel to give a start command.
- Use the current regulator which outputs 4 to 20 mA to give a frequency command (by connecting it across terminals 4 and 5 (current input)).
- · Turn ON the AU signal.
- Set Pr.79 Operation mode selection = "4" (External/PU combination operation mode 2).

[Connection diagram]

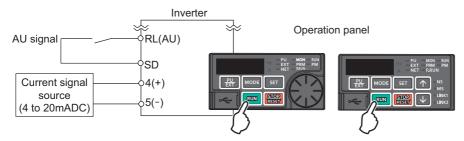

The following shows the procedure to operate at 60 Hz.

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- 2. Changing the operation mode

 Set "4" in Pr.79. The PU LED and EXT LED turn ON. (To change the setting, refer to page 28.)
- 3. Assignment of AU signal
 Set Pr.180 RL terminal function selection = "4" to assign the AU signal to terminal RL.
- **4.** Selecting the input via terminal 4 Turn ON the Terminal 4 input selection (AU) signal. Input via terminal 4 to the inverter is enabled.
- Start
 Press the RUN key. The RUN LED blinks as no frequency command is given.
- 6. Acceleration → constant speed Input a current of 20 mA to the inverter from the regulator. The frequency value on the monitor increases according to the setting of Pr.7 Acceleration time, and "60.00" (60.00 Hz) appears on the monitor.
- 7. Deceleration
 Input a current of 4 mA or less. The frequency value on the monitor decreases according to the setting of Pr.8
 Deceleration time, "0.00" (0.00 Hz) appears on the monitor, and the motor stops rotating. The RUN LED blinks.
- Stop
 Press the STOP/RESET key. The RUN LED turns OFF.

• NOTE

- The AU signal can be assigned to another terminal. Set "4" in any parameter from **Pr.178 to Pr.184 (Input terminal function selection)** to assign the function to an input terminal. (For the Ethernet model, assign the signal to terminal DI0 or DI1 using **Pr.178 or Pr.179**.)
- To change the frequency (60 Hz) at the maximum current input (initial value: 20 mA), adjust **Pr.126 Terminal 4 frequency** setting gain frequency.
- To change the frequency (0 Hz) at the minimum current input (initial value: 4 mA), adjust the calibration parameter C5 (Pr.904)

 Terminal 4 frequency setting bias frequency.

Parameters referred to

Pr.7 Acceleration time, Pr.8 Deceleration time page 196
Pr.79 Operation mode selection page 212
Pr.126 Terminal 4 frequency setting gain frequency page 318
Pr.178 to Pr.184 (Input terminal function selection) page 328
C5(Pr.904) Terminal 4 frequency setting bias frequency page 318

2.6 Basic operation procedure (External operation)

Select a method to give the frequency command from the list below, and refer to the specified page for its procedure.


Method to give the frequency command							
Setting the frequency on the operation panel in the frequency setting mode							
Turning ON/OFF switches wired to inverter's terminals (multi-speed setting)							
Setting the frequency by inputting voltage signals							
Setting the frequency by inputting current signals	43						

2.6.1 Setting the frequency on the operation panel



- Turn ON the STF/STR signal to give a start command.
- Use operation panel (setting dial or UP/DOWN key) to give a frequency command.
- Set Pr.79 = "3" (External/PU combined operation mode 1).

[Connection diagram]

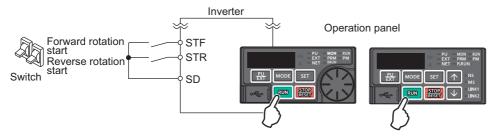

The following shows the procedure to operate at 30 Hz.

Operating procedure

- Changing the operation mode
 Set "3" in Pr.79. The PU LED and EXT LED turn ON. (To change the setting, refer to page 28.)
- **2.** Setting the frequency

Turn the setting dial or press the UP/DOWN key until the target frequency "30.00" (30.00 Hz) appears. The indication blinks for about 5 seconds.

While the value is blinking, press the SET key to enter the frequency. "F" and "30.00" are displayed alternately. After about 3 seconds of alternate display, the indication returns to "0.00" (the indication of a monitored value). (If the SET key is not pressed, the indication of the value returns to "0.00" (0.00 Hz) after about 5 seconds of blinking. In that case, turn the setting dial or press the UP/DOWN key and set the frequency again.)

- 3. Start → acceleration → constant speed

 Turn ON the start switch (STF/STR signal). The frequency value on the monitor increases according to the setting of Pr.7 Acceleration time, and "30.00" (30.00 Hz) appears on the monitor. The RUN LED is ON during forward rotation and blinks slowly during reverse rotation. (To change the set frequency, return to step 2. The previously set frequency appears.)
- **4.** Deceleration → stop

 Turn OFF the start switch (STF/STR signal). The frequency value on the monitor decreases according to the setting of **Pr.8 Deceleration time**, "0.00" (0.00 Hz) appears on the monitor, and the motor stops rotating.



- When both the forward rotation start switch (STF signal) and the reverse rotation start switch (STR signal) are turned ON, the motor cannot be started. If both are turned ON while the inverter is running, the inverter decelerates to a stop.
- Pr.178 STF/DI0 terminal function selection must be set to "60" (or Pr.179 STR/DI1 terminal function selection must be set to "61") (initial value).
- Setting Pr.79 Operation mode selection = "3" enables multi-speed operation.
- If the STOP/RESET key on the operation panel is pressed during the External operation, the inverter stops and the PU stop warning is activated ("PS" appears on the LCD display of the operation panel.) To reset the PU stop warning, turn OFF the start switch (STF or STR signal), and then press the PU/EXT key. (Refer to page 162.)


Pr.4 to Pr.6 (multi-speed setting) page 234, Pr.7 Acceleration time, Pr.8 Deceleration time page 196 Pr.178 STF/DI0 terminal function selection, Pr.179 STR/DI1 terminal function selection page 328 Pr.79 Operation mode selection page 212


2.6.2 Setting the frequency and giving a start command with switches (multi-speed setting) (Pr.4 to Pr.6)



- Turn ON the STF/STR signal to give a start command.
- Turn ON the RH, RM, or RL signal to give a frequency command (multi-speed setting).

[Connection diagram]

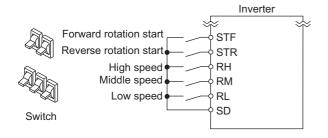

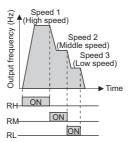

The following shows the procedure to operate at a high speed (60 Hz).

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- **2.** Setting the frequency
 Turn ON the high-speed switch (RH signal).
- 3. Start → acceleration → constant speed

 Turn ON the start switch (STF/STR signal). The frequency value on the monitor increases according to the setting
 of Pr.7 Acceleration time, and "60.00" (60.00 Hz) appears on the monitor. The RUN LED is ON during forward
 rotation and blinks slowly during reverse rotation. When the RM signal is turned ON, 30 Hz is displayed. When the
 RL signal is turned ON, 10 Hz is displayed.
- 4. Deceleration → stop Turn OFF the start switch (STF/STR signal). The frequency value on the monitor decreases according to the setting of Pr.8 Deceleration time, "0.00" (0.00 Hz) appears on the monitor, and the motor stops rotating. The RUN LED turns OFF. Turn OFF the high-speed switch (RH signal).



- When both the forward rotation start switch (STF signal) and the reverse rotation start switch (STR signal) are turned ON, the motor cannot be started. If both are turned ON while the inverter is running, the inverter decelerates to a stop.
- The initial value is 60 Hz for terminal RH in Group 1 (50 Hz in Group 2), 30 Hz for terminal RM, and 10 Hz for terminal RL. (To change the settings, use **Pr.4**, **Pr.5**, and **Pr.6**, respectively.)
- In the initial setting, if two or more speed switches (signals) are simultaneously turned ON, priority is given to the switch (signal) for the lower speed. For example, when both RH and RM signals turn ON, the RM signal (**Pr.5**) has the higher priority.
- · Up to 15-speed switching operation can be performed.
- Up to two external input terminals are available for the Ethernet model. Use **Pr.178 STF/DI0 terminal function selection** and **Pr.179 STR/DI1 terminal function selection** to assign the functions to terminals DI0 and DI1.

Pr.4 to Pr.6 (multi-speed setting) page 234

Pr.7 Acceleration time, Pr.8 Deceleration time page 196

Pr.178 STF/DI0 terminal function selection, Pr.179 STR/DI1 terminal function selection 🖙 page 328


2.6.3 Setting the frequency using an analog signal (voltage input)



- Turn ON the STF/STR signal to give a start command.
- Use the frequency setting potentiometer to give a frequency command (by connecting it across terminals 2 and 5 (voltage input)).

[Connection diagram]

(The inverter supplies 5 V power to the frequency setting potentiometer via terminal 10.)

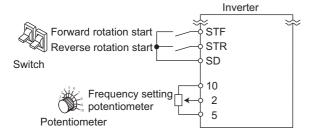

The following shows the procedure to operate at 60 Hz.

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- 2. Start

Turn ON the start switch (STF/STR signal). The RUN LED on the operation panel blinks as no frequency command is given.

3. Acceleration \rightarrow constant speed

Turn the frequency setting potentiometer clockwise slowly to full. The frequency value on the monitor increases according to the setting of **Pr.7 Acceleration time**, and "60.00" (60.00 Hz) appears on the monitor. The RUN LED is ON during forward rotation and blinks slowly during reverse rotation.

4. Deceleration

Turn the frequency setting potentiometer counterclockwise slowly to full. The frequency value on the monitor decreases according to the setting of **Pr.8 Deceleration time**, "0.00" (0.00 Hz) appears on the monitor, and the motor stops rotating. The RUN LED blinks.

5. Stop

Turn OFF the start switch (STF/STR signal). The RUN LED turns OFF.



- When both the forward rotation start switch (STF signal) and the reverse rotation start switch (STR signal) are turned ON, the motor cannot be started. If both are turned ON while the inverter is running, the inverter decelerates to a stop.
- Pr.178 STF/DI0 terminal function selection must be set to "60" (or Pr.179 STR/DI1 terminal function selection must be set to "61") (initial value).
- When terminal 10 is used, the maximum output frequency may fluctuate in a range of ±6 Hz due to fluctuations in the output voltage (5 ±0.5 VDC). Use **Pr.125** or **C4** (**Pr.903**) to adjust the output frequency at the maximum analog input as required. (Refer to page 318.)

Pr.7 Acceleration time, Pr.8 Deceleration time page 196

Pr.178 STF/DI0 terminal function selection, Pr.179 STR/DI1 terminal function selection page 328

2.6.4 Changing the frequency (initial value: 60 Hz) at the maximum voltage input (initial value: 5 V)



Change the maximum frequency.

The following shows the procedure to change the frequency at 5 V from 60 Hz (initial value) to 50 Hz using a frequency setting potentiometer for 0 to 5 VDC input. Set 50 Hz in **Pr.125** so that the inverter outputs 50 Hz at 5 V input.

Operating procedure

1. Selecting the parameter

Turn the setting dial or press the UP/DOWN key until "P.125" (Pr.125) appears.

Press the SET key to show the present set value (60.00 Hz).

2. Changing the maximum frequency

Turn the setting dial or press the UP/DOWN key to change the value to "50.00" (50.00 Hz).

Press the SET key to confirm the setting. "50.00" blinks.

3. Selecting the mode and the monitor item

Press the MODE key twice to select the monitor mode and to monitor a frequency.


4. Start

Turn ON the start switch (STF/STR signal), and turn the frequency setting potentiometer clockwise slowly to full. (Refer to steps 2 and 3 in 2.6.3.)

The motor is operated at 50 Hz.



• To set the frequency at 0 V, use the calibration parameter C2 (Pr.902).

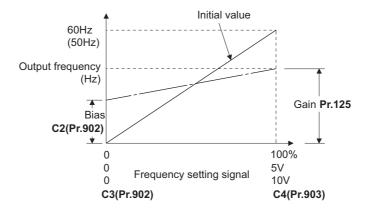

• Other adjustment methods for the frequency setting voltage gain are the following: adjustment by applying a voltage directly across terminals 2 and 5, and adjustment using a specified point without applying a voltage across terminals 2 and 5. (Refer to page 318.)

Parameters referred to


Pr.125 Terminal 2 frequency setting gain frequency ☐ page 318 C2(Pr.902) Terminal 2 frequency setting bias frequency ☐ page 318 C4(Pr.903) Terminal 2 frequency setting gain ☐ page 318

2.6.5 Setting the frequency using an analog signal (current input)



- Turn ON the STF/STR signal to give a start command.
- · Turn ON the AU signal.
- Set Pr.79 Operation mode selection = "2" (External operation mode).

[Connection diagram]

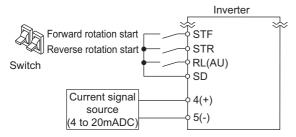

The following shows the procedure to operate at 60 Hz.

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- 2. Assignment of AU signal
 Set Pr.180 RL terminal function selection = "4" to assign the AU signal to terminal RL.
- **3.** Selecting the input via terminal 4

 Turn ON the Terminal 4 input selection (AU) signal. Input via terminal 4 to the inverter is enabled.
- **4.** Start

 Turn ON the start switch (STF/STR signal). The RUN LED blinks as no frequency command is given.
- 5. Acceleration → constant speed Input a current of 20 mA to the inverter from the regulator. The frequency value on the monitor increases according to the setting of Pr.7 Acceleration time, and "60.00" (60.00 Hz) appears on the monitor. The RUN LED is ON during forward rotation and blinks slowly during reverse rotation.
- Deceleration
 Input a current of 4 mA or less. The frequency value on the monitor decreases according to the setting of Pr.8
 Deceleration time, "0.00" (0.00 Hz) appears on the monitor, and the motor stops rotating. The RUN LED blinks.
- 7. Stop
 Turn OFF the start switch (STF/STR signal). The RUN LED turns OFF.



- When both the forward rotation start switch (STF signal) and the reverse rotation start switch (STR signal) are turned ON, the motor cannot be started. If both are turned ON while the inverter is running, the inverter decelerates to a stop.
- The AU signal can be assigned to another terminal. Set "4" in any parameter from **Pr.178 to Pr.184 (Input terminal function selection)** to assign the function to an input terminal. (For the Ethernet model, assign the signal to terminal DI0 or DI1 using **Pr.178 or Pr.179**.)

Pr.7 Acceleration time, Pr.8 Deceleration time page 196
Pr.178 to Pr.184 (Input terminal function selection) page 328

2.6.6 Changing the frequency (initial value: 60 Hz) at the maximum current input (initial value: 20 mA)



Change the maximum frequency.

The following shows the procedure to change the frequency at 20 mA from 60 Hz (initial value) to 50 Hz using a frequency setting potentiometer for 4 to 20 mA input. Set 50 Hz in **Pr.126** so that the inverter outputs 50 Hz at 20 mA input.

Operating procedure

1. Selecting the parameter

Turn the setting dial or press the UP/DOWN key until "P.126" (Pr.126) appears.

Press the SET key to show the present set value (60.00 Hz).

2. Changing the maximum frequency

Turn the setting dial or press the UP/DOWN key to change the value to "50.00" (50.00 Hz).

Press the SET key to confirm the setting. "50.00" blinks.

3. Selecting the mode and the monitor item


Press the MODE key twice to select the monitor mode and to monitor a frequency.

4. Start

Turn ON the start switch (STF or STR) to apply a 20 mA current (refer to steps 3 and 4 in 2.6.5). Operate at 50 Hz.



• To set the frequency at 4 mA, use the calibration parameter C5 (Pr.904).

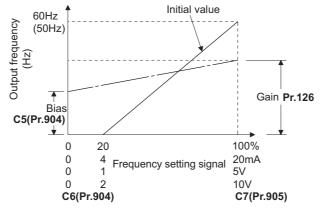

 Other adjustment methods for the frequency setting current gain are the following: adjustment by applying a current through terminals 4 and 5, and adjustment using a specified point without applying a current through terminals 4 and 5. (Refer to page 318.)

Parameters referred to

Pr.126 Terminal 4 frequency setting gain frequency page 318
C5(Pr.904) Terminal 4 frequency setting bias frequency page 318
C7(Pr.905) Terminal 4 frequency setting gain page 318

 
2.7 Basic operation procedure (JOG operation)

2.7.1 Giving a start command by using external signals for JOG operation

Point P

- The JOG signal can be input only via a control terminal.
- · JOG operation is performed while the JOG signal is ON.
- Use Pr.15 Jog frequency to set a frequency, and set Pr.16 Jog acceleration/deceleration time to set the acceleration/deceleration time for JOG operation.
- Set Pr.79 Operation mode selection = "2" (External operation mode).

[Connection diagram]



The following shows the procedure to operate at 5 Hz.

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- 2. Assignment of JOG signal

 Set Pr.180 RL terminal function selection = "5" to assign the JOG signal to terminal RL.
- Turning ON the JOG signal
 Turn ON the JOG switch (JOG signal). The inverter is set ready for the JOG operation.
- 4. Start → acceleration → constant speed
 Turn ON the start switch (STF/STR signal). The frequency value on the monitor increases according to the setting of Pr.16 Jog acceleration/deceleration time, and "5.00" (5.00 Hz) appears on the monitor. The RUN LED is ON during forward rotation and blinks slowly during reverse rotation.
- 5. Deceleration → stop Turn OFF the start switch (STF/STR signal). The frequency value on the monitor decreases according to the setting of Pr.16 Jog acceleration/deceleration time, "0.00" (0.00 Hz) appears on the monitor, and the motor stops rotating. The RUN LED turns OFF. Turn OFF the JOG switch (JOG signal).

NOTE

- To change the frequency, change the setting of ${\bf Pr.15~Jog~frequency}$ (initial value: 5 Hz).
- To change the acceleration/deceleration time, change the setting of **Pr.16 Jog acceleration/deceleration time** (initial value: 0.5 seconds).
- The JOG signal can be assigned to another terminal. Set "5" in any parameter from **Pr.178 to Pr.184 (Input terminal function selection)** to assign the function to an input terminal. (For the Ethernet model, assign the signal to terminal DI0 or DI1 using **Pr.178 or Pr.179**.)
- The JOG2 signal enables the JOG operation via communication. (Refer to page 232.)

Parameters referred to

 
Pr.15 Jog frequency, Pr.16 Jog acceleration/deceleration time ☞ page 232 Pr.79 Operation mode selection ☞ page 212

2.7.2 Giving a start command from the operation panel for JOG operation



• JOG operation is performed while the RUN key on the operation panel is pressed.

Operation panel



The following shows the procedure to operate at 5 Hz.

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- Changing the operation mode Press the PU/EXT key twice to choose the PUJOG operation mode. The display shows "JOG", and the PU LED is ON.
- 3. Start → acceleration → constant speed
 Hold down the RUN key. The frequency value on the monitor increases according to the setting of Pr.16 Jog
 acceleration/deceleration time, and "5.00" (5.00 Hz) appears on the monitor.
- 4. Deceleration → stop Release the RUN key. The frequency value on the monitor decreases according to the setting of Pr.16 Jog acceleration/deceleration time, "0.00" (0.00 Hz) appears on the monitor, and the motor stops rotating.




- To change the frequency, change the setting of **Pr.15 Jog frequency** (initial value: 5 Hz).
- To change the acceleration/deceleration time, change the setting of Pr.16 Jog acceleration/deceleration time (initial value: 0.5 seconds).

Parameters referred to

Pr.15 Jog frequency, Pr.16 Jog acceleration/deceleration time page 232

2.8 I/O terminal function assignment

· Functions can be assigned to the external I/O terminals (physical terminals) or communication (virtual terminals) by setting parameters.

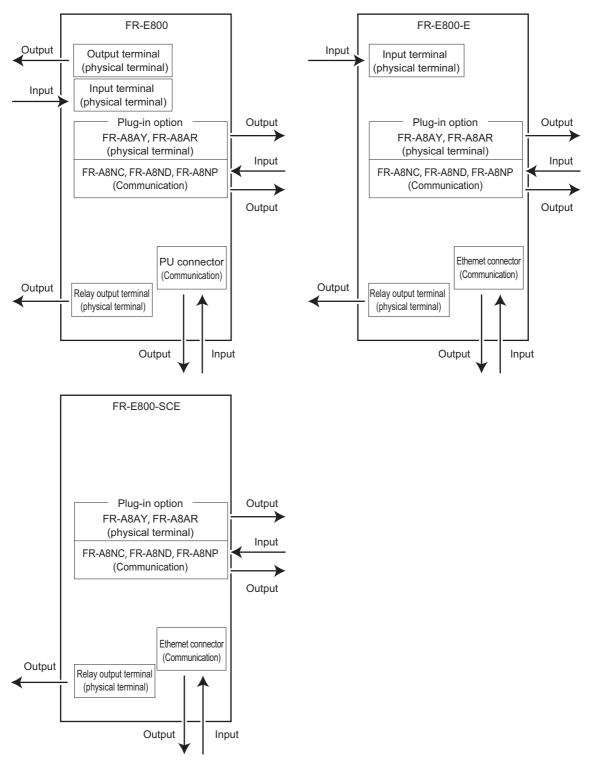

· Two or more plug-in options cannot be installed at the same time.

Input terminal function assignment

• Signals can be input to the inverter by using physical terminals (except for the FR-E800-SCE) or via communication.

NOTE

• Use the following parameters to assign functions to input terminals. Check the terminal available for each parameter.

Pr.	Terminal	External inpu	ut terminal (phys	ical terminal)	Input via	
FI.	name	FR-E800	FR-E800-E	FR-E800-SCE	communication*1	
178	STF/DI0	○ (STF)	∘ (DI0)	_	0	
179	STR/DI1	∘ (STR)	∘ (DI1)	_	0	
180	RL	0	_	_	0	
181	RM	0	_	_	0	
182	RH	0	_	_	0	
183	MRS	0	_	_	0	
184	RES	0	_	_	0	
185	NET X1	_	_	_	0	
186	NET X2	_	_	_	0	
187	NET X3	_	_	_	0	
188	NET X4	_	_	_	0	
189	NET X5	_	_	_	0	

o: Assignment/input available, -: Assignment/input unavailable (no function)

^{*1} The communication protocol affects which terminals can be used. For details, refer to the Instruction Manual (Communication) or the Instruction Manual of each communication option.



• For the available signals, refer to page 328.

◆ Output terminal function assignment

- Signals can be output to the inverter by using physical terminals or via communication or assigned to the extension terminals of the plug-in option (FR-A8AY or FR-A8AR).
- Use the following parameters to assign functions to input terminals. Check the terminal available for each parameter.

Pr.	Terminal	name			Output via communication*1	Option output terminal (physical terminal)*2		
	Hame	FR-E800	FR-E800 FR-E800-E FR-E800-SCE		Communication	FR-A8AY	FR-A8AR	
190	RUN	0	_	_	0	_	_	
191	FU	0	_	_	0	_	_	
192	A,B,C	0	0	0	0	_	_	
193	NET Y1	_	_	_	0	_	_	
194	NET Y2	_	_	_	0	_	_	
195	NET Y3	_	_	_	0	_	_	
196	NET Y4	_	_	_	0	_	_	
313	DO0	_	_	_	0	0	_	
314	DO1	_	_	_	0	0	_	
315	DO2	_	_	_	0	0	_	
316	DO3	_	_	_	_	0	_	
317	DO4	_	_	_	_	0	_	
318	DO5	_	_	_	_	0	_	
319	DO6	_	_	_	_	0	_	
320	RA1	_	_	_	_	_	0	
321	RA2	_	_	_	_	_	0	
322	RA3	_	_	_	_	_	0	

o: Assignment/output available, -: Assignment/output unavailable (no function)

^{*2} Refer to the Instruction Manual of the option for details on the option output terminals.



• For the available signals, refer to page 292.

^{*1} The communication protocol affects which terminals can be used. For details, refer to the Instruction Manual (Communication) or the Instruction Manual of each communication option.

MEMO

CHAPTER 3 Parameters

3.1	Parameter initial value groups	52
3.2	Parameter list (by parameter number)	
3.3	Use of a function group number for the identification of parameters	
3.4	Parameter list (by function group number)	80

3 Parameters

This chapter explains the function setting for use of this product.

Always read the instructions before use.

The following marks are used to indicate the controls. (Parameters without any mark are valid for all the controls.)

Mark	Control method	Applied motor	
V/F	V/F control		
<u>Magnetic</u> ;flux	Advanced magnetic flux vector control	Three-phase induction motor	
Sensorless	Real sensorless vector control	Three-phase induction motor	
Vector	Vector control		
PM	PM sensorless vector control	PM motor	

3.1 Parameter initial value groups

- Initial values of parameters of the FR-E800 differ depending on the parameter initial value group. In this Instruction Manual, Gr.1 indicates the parameter initial value group 1, and Gr.2 indicates the parameter initial value group 2.
- FR-E800 inverters are divided into two groups as shown in the following table.

Parameter initial value groups	Model	Specification		
	FR-E800-1	RS-485 communication, terminal FM		
Group 1 (Gr.1)	FR-E800-5	RS-485 communication, terminal AM		
	FR-E800-(SC)EPA	Ethernet communication (Protocol group A)		
Group 2 (Gr.2)	FR-E800-4	RS-485 communication, terminal AM		
Group 2 (Gr.2)	FR-E800-(SC)EPB	Ethernet communication (Protocol group B)		

• The initial values of the following parameters differ depending on the parameter initial value group.

Pr.	Name	Initia	al value	Refer to
Pr.	Name	Gr.1	Gr.2	page
3	Base frequency	60 Hz	50 Hz	428
4	Multi-speed setting (high speed)	60 Hz	50 Hz	234
19	Base frequency voltage	9999	8888	428
20	Acceleration/deceleration reference frequency	60 Hz	50 Hz	196
55	Frequency monitoring reference	60 Hz	50 Hz	270
66	Stall prevention operation reduction starting frequency	60 Hz	50 Hz	256
125	Terminal 2 frequency setting gain frequency	60 Hz	50 Hz	318
126	Terminal 4 frequency setting gain frequency	60 Hz	50 Hz	318
249	Earth (ground) fault detection at start	0	1	246
301	BCD input gain	60 Hz	50 Hz	*1
303	BIN input gain	60 Hz	50 Hz	*1
505	Speed setting reference	60 Hz	50 Hz	268
808	Speed limit	60 Hz	50 Hz	147
1486	Load characteristics maximum frequency	60 Hz	50 Hz	261

^{*1} The parameter is available when the plug-in option (FR-A8AX) is installed. For details, refer to the FR-A8AX E kit Instruction Manual.

3.2 Parameter list (by parameter number)

For simple variable-speed operation of the inverter, the initial values of the parameters may be used as they are. Set the necessary parameters to meet the load and operational specifications. Parameter's setting, change and check can be made on the operation panel.

NOTE

- **Simple** indicates simple mode parameters. Use **Pr.160 User group read selection** to indicate the simple mode parameters only (initial setting is to indicate the extended mode parameters).
- The changing of the parameter settings may be restricted in some operating statuses. Use **Pr.77 Parameter write selection** to change the setting of the restriction.
- Refer to page 465 for instruction codes for communication and availability of parameter copy, Parameter clear, and all clear.

Notation

[E800]: Available for the standard model.

[E800-1]: Available for the FM type inverter (standard model).

[E800-4]: Available for the AM (50 Hz) type inverter (standard model).

[E800-5]: Available for the AM (60 Hz) type inverter (standard model).

[E800-(SC)E]: Available for the Ethernet model and the safety communication model.

[E800-SCE]: Available for the safety communication model.

[E800-(SC)EPA]: Available for the Protocol group A (Ethernet model / safety communication model).

[E800-(SC)EPB]: Available for the Protocol group B (Ethernet model / safety communication model).

[200/400 V class]: Available for the 200/400 V class inverters.

[575 V class]: Available for the 575 V class inverters.

[3-phase]: Available for the three-phase power input model.

♦ Pr.0 to Pr.99

Function	Pr.	Pr. group	Name	Setting range	Minimum setting		tial ue ^{*1}	Refer to page	Customer setting
		group			increments	Gr.1	Gr.2	to page	Setting
						6% ^{*2}			
						5% ^{*2}			
	0	G000	Torque boost Simple	0% to 30%	0.1%	4% ^{*2}		426	
						3% ^{*2}			
						2% ^{*2}			
	1	H400	Maximum frequency Simple	0 to 120 Hz	0.01 Hz	120 Hz	<u>z</u>	253	
	2	H401	Minimum frequency Simple	0 to 120 Hz	0.01 Hz	0 Hz		253	
	3	G001	Base frequency Simple	0 to 590 Hz	0.01 Hz	60 Hz	50 Hz	428	
ction	4	D301	Multi-speed setting (high speed) Simple	0 to 590 Hz	0.01 Hz	60 Hz	50 Hz	234	
Basic function	5	D302	Multi-speed setting (middle speed) Simple	0 to 590 Hz	0.01 Hz	30 Hz		234	
	6	D303	Multi-speed setting (low speed) Simple	0 to 590 Hz	0.01 Hz	10 Hz		234	
	7	F010	Acceleration time Simple	0 to 3600 s	0.1 s	5 s ^{*3} 10 s		196	
	8	F011	Deceleration time Simple	0 to 3600 s	0.1 s	5 s ^{*3} 10 s		196	
	9	H000 C103	Electronic thermal O/L relaySimple Rated motor currentSimple	0 to 500 A	0.01 A	Inverte		238, 345, 355	

Function	Pr.	Pr.	Name	Setting range	Minimum setting		tial ue ^{*1}	Refer	Customer
		group		2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	increments	Gr.1	Gr.2	to page	setting
ake	10	G100	DC injection brake operation frequency	0 to 120 Hz	0.01 Hz	3 Hz		434	
DC injection brake	11	G101	DC injection brake operation time	0 to 10 s, 8888	0.1 s	0.5 s		434	
ject			DO intention backs are setting			6% ^{*4}			
D. ir	12	G110	DC injection brake operation voltage	0% to 30%	0.1%	4% ^{*4}		434	
						1% ^{*4}		007	
_	13	F102	Starting frequency	0 to 60 Hz	0.01 Hz	0.5 Hz		207, 208	
_	14	G003	Load pattern selection	0 to 3	1	0		430	
ion	15	D200	Jog frequency	0 to 590 Hz	0.01 Hz	5 Hz		232	
JOG operation	16	F002	Jog acceleration/ deceleration time	0 to 3600 s	0.1 s	0.5 s		232	
_	17	T720	MRS/X10 terminal input selection	0 to 5	1	0		332	
_	18	H402	High speed maximum frequency	0 to 590 Hz	0.01 Hz	120 Hz	<u>z</u>	253	
_	19	G002	Base frequency voltage	0 to 1000 V, 8888, 9999	0.1 V	9999	8888	428	
time	20	F000	Acceleration/deceleration reference frequency	1 to 590 Hz	0.01 Hz	60 Hz	50 Hz	196	
Acceleration/deceleration time	21	F001	Acceleration/deceleration time increments	0, 1	1	0	0	196	
ntion	22	H500	Stall prevention operation level (Torque limit level)	0% to 400%	0.1%	150%		114, 256	
Stall prevention	23	H610	Stall prevention operation level compensation factor at double speed	0% to 200%, 9999	0.1%	9999		256	
Multi-speed setting	24 to 27	D304 to D307	Multi-speed setting (speed 4 to speed 7)	0 to 590 Hz, 9999	0.01 Hz	9999		234	
_	29	F100	Acceleration/deceleration pattern selection	0 to 2	1	0		201	
_	30	E300	Regenerative function selection	0 to 2	1	0		442	
<u>6</u>	31	H420	Frequency jump 1A	0 to 590 Hz, 9999	0.01 Hz	9999		254	
Frequency jump	32	H421	Frequency jump 1B	0 to 590 Hz, 9999	0.01 Hz	9999		254	
Σc	33	H422	Frequency jump 2A	0 to 590 Hz, 9999	0.01 Hz	9999		254	
ner	34	H423	Frequency jump 2B	0 to 590 Hz, 9999	0.01 Hz	9999		254	
req	35	H424	Frequency jump 3A	0 to 590 Hz, 9999	0.01 Hz	9999		254	
Ц	36	H425	Frequency jump 3B	0 to 590 Hz, 9999	0.01 Hz	9999		254	
	37	M000	Speed display	0.01 to 9998	0.001	1800		268	
_	40	E202	RUN key rotation direction selection	0, 1	1	0		170	

Function	Pr.	Pr.	Name	Sotting range	Minimum setting	Initial value ^{*1}	Refer	Customer
runction	PI.	group	Name	Setting range	increments	Gr.1 Gr.2	to page	setting
- E	41	M441	Up-to-frequency sensitivity	0% to 100%	0.1%	10%	301	
ecti	42	M442	Output frequency detection	0 to 590 Hz	0.01 Hz	6 Hz	301	
Frequency detection	43	M443	Output frequency detection for reverse rotation	0 to 590 Hz, 9999	0.01 Hz	9999	301	
	44	F020	Second acceleration/ deceleration time	0 to 3600 s	0.1 s	5 s ^{*3} 10 s ^{*3}	196, 396	
Second function	45	F021	Second deceleration time	0 to 3600 s, 9999	0.1 s	9999	196, 396	
, ŭ	46	G010	Second torque boost	0% to 30%, 9999	0.1%	9999	426	
ρ	47	G011	Second V/F (base frequency)	0 to 590 Hz, 9999	0.01 Hz	9999	428	
900	48	H600	Second stall prevention operation level	0% to 400%, 9999	0.1%	9999	256	
S	51	H010 C203	Second electronic thermal O/ L relay Rated second motor current	0 to 500 A, 9999	0.01 A	9999	238, 345, 355	
Monitoring	52	M100	Operation panel main monitor selection	[E800][E800- (SC)EPB] 0, 5 to 14, 17 to 20, 23 to 25, 32, 33, 35, 38, 40 to 42, 44, 45, 50 to 57, 61, 62, 67, 91, 97, 100 [E800-(SC)EPA] 0, 5 to 14, 17 to 20, 23 to 25, 32, 33, 35, 38, 40 to 42, 44, 45, 50 to 57, 61, 62, 67, 83, 91, 97, 100	1	0	270	
2	53	M003	Frequency / rotation speed unit switchover	0, 1, 4	1	0	268	
	54	M300	FM terminal function selection [E800-1]	1 to 3, 5 to 14, 17, 18, 21, 24, 32, 33, 50, 52, 53, 61, 62, 67, 70, 97	1	1	279	
	55 ^{*7}	M040	Frequency monitoring reference	0 to 590 Hz	0.01 Hz	60 Hz 50 Hz	279	
	56 ^{*7}	M041	Current monitoring reference	0 to 500 A	0.01 A	Inverter rated current	279	
start	57	A702	Restart coasting time	0, 0.1 to 30 s, 9999	0.1 s	9999	403, 408	
Automatic restart	58	A703	Restart cushion time	0 to 60 s	0.1 s	1 s	403	
_	59	F101	Remote function selection	0 to 3, 11 to 13	1	0	203	
_	60	G030	Energy saving control selection	0, 9	1	0	432	
ation	61	F510	Reference current	0 to 500 A, 9999	0.01 A	9999	209	
deceler	62	F511	Reference value at acceleration	0% to 400%, 9999	1%	9999	209	
Automatic acceleration/deceleration	63	F512	Reference value at deceleration	0% to 400%, 9999	1%	9999	209	

Function	Pr.	Pr.	Name	Setting range	Minimum setting		tial ue ^{*1}	Refer	Customer
		group		3 . 3	increments	Gr.1	Gr.2	to page	setting
_	65	H300	Retry selection	0 to 5	1	0		250	
_	66	H611	Stall prevention operation reduction starting frequency	0 to 590 Hz	0.01 Hz	60 Hz	50 Hz	256	
Ţ.	67	H301	Number of retries at fault occurrence	0 to 10, 101 to 110	1	0		250	
Retry	68	H302	Retry waiting time	0.1 to 600 s	0.1 s	1 s		250	
	69	H303	Retry count display erase	0	1	0		250	
_	70	G107	Special regenerative brake duty	0% to 100%	0.1%	0%		442	
-	71	C100	Applied motor	[200/400 V class] 0, 3, 5, 6, 10, 13, 15, 16, 20, 23, 30, 33, 40, 43, 50, 53, 70, 73, 1800, 1803, 8090, 8093, 9090, 9093 [575 V class] 0, 3, 5, 6, 10, 13, 15, 16, 30, 33, 8090, 8093, 9090, 9093	1	0		340, 345, 355	
_	72	E600	PWM frequency selection	0 to 15	1	1		184	
_	73	T000	Analog input selection	0, 1, 6, 10, 11, 16	1	1		310	
_	74	T002	Input filter time constant	0 to 8	1	1		316	
		_	Reset selection/ disconnected PU detection/ PU stop selection	[E800(-E)] 0 to 3, 14 to 17 [E800-SCE] 0 to 3, 14 to 17, 10000 to 10003, 10014 to 10017		[E800(14 [E800- 10014	/ -		
_	75	E100	Reset selection		1	0		161	
		E101	Disconnected PU detection	0, 1		U			
		E102	PU stop selection			1			
		E107	Reset limit	0, 10 [E800-SCE]		[E800(0 [E800- 10			
_	77	E400	Parameter write selection	0 to 2	1	0		173	
_	78	D020	Reverse rotation prevention selection	0 to 2	1	0		231	
_	79	D000	Operation mode selection (Simple)	0 to 4, 6, 7	1	0		212, 222	

Function	Pr.	Pr. group	Name	Setting range	Minimum setting	Initial value ^{*1}	Refer to page	Customer setting
		group			increments	Gr.1 Gı	.2 to page	Setting
	80	C101	Motor capacity	0.1 to 30 kW, 9999	0.01 kW	9999	97, 345, 355	
	81	C102	Number of motor poles	2, 4, 6, 8, 10, 12, 9999	1	9999	97, 345, 355	
	82	C125	Motor excitation current	0 to 500 A, 9999	0.01 A	9999	345	
	83	C104	Rated motor voltage	0 to 1000 V	0.1 V	[200 V class 200 V [400 V class 400 V [575 V class 575 V	s] 97, 345,	
nstant	84	C105	Rated motor frequency	10 to 400 Hz, 9999	0.01 Hz	9999	97, 345, 355	
Motor constant	89	G932	Speed control gain (Advanced magnetic flux vector)	0% to 200%, 9999	0.1%	9999	102	
	90	C120	Motor constant (R1)	0 to 50 Ω, 9999	0.001Ω	9999	345, 355, 410	
	91	C121	Motor constant (R2)	0 to 50 Ω, 9999	0.001Ω	9999	345	
	92	C122	Motor constant (L1)/d-axis inductance (Ld)	0 to 6000 mH, 9999	0.1 mH	9999	345, 355	
	93	C123	Motor constant (L2)/q-axis inductance (Lq)	0 to 6000 mH, 9999	0.1 mH	9999	345, 355	
	94	C124	Motor constant (X)	0% to 100%, 9999	0.1%	9999	345	
	95	C111	Online auto tuning selection	0, 1	1	0	362	
	96	C110	Auto tuning setting/status	0, 1, 11	1	0	345, 355, 410	

♦ Pr.100 to Pr.199

Function	Pr.	Pr.	Name	Setting range	Minimum setting		tial ue ^{*1}	Refer	Customer
		group			increments	Gr.1	Gr.2	to page	setting
	117	N020	PU communication station number	0 to 31	1	0		*8	
	118	N021	PU communication speed	48, 96, 192, 384, 576, 768, 1152	1	192		*8	
ion		_	PU communication stop bit length / data length	0, 1, 10, 11		1			
PU connector communication	119	N022	PU communication data length	0, 1	1	0		*8	
i i i		N023	PU communication stop bit length	0, 1		1			
ector c	120	N024	PU communication parity check	0 to 2	1	2		*8	
conne	121	N025	PU communication retry count	0 to 10, 9999	1	1		*8	
₽	122	N026	PU communication check time interval	0, 0.1 to 999.8 s, 9999	0.1 s	0		*8	
	123	N027	PU communication waiting time setting	0 to 150 ms, 9999	1 ms	9999		*8	
	124	N028	PU communication CR/LF selection	0 to 2	1	1		*8	
_	125	T022	Terminal 2 frequency setting gain frequency <u>Simple</u>	0 to 590 Hz	0.01 Hz	60 Hz	50 Hz	318	
_	126	T042	Terminal 4 frequency setting gain frequency <u>Simple</u>	0 to 590 Hz	0.01 Hz	60 Hz	50 Hz	318	

127	Customer	Refer	tial ue ^{*1}		Minimum setting	Setting range	Name	Pr.	Pr.	Function
127	setting	to page				Coming rungs	Ttullio	group		- unotion
128		380		9999	0.01 Hz	0 to 590 Hz, 9999		A612	127	
130		396		0	1	51, 60, 61, 1000, 1001, 1010, 1011, 2000,	PID action selection	A610	128	
132				100%	0.1%	0.1% to 1000%, 9999	PID proportional band	A613	129	tion
132				1 s	0.1 s	0.1 to 3600 s, 9999	PID integral time	A614	130	opera
132				9999	0.1%	0% to 100%, 9999	PID upper limit	A601	131	PD
133				9999	0.1%	0% to 100%, 9999	PID lower limit	A602	132	
134				9999	0.01%	0% to 100%, 9999	PID action set point	A611	133	
145 E103 selection 0 to 7 1 164				9999	0.01 s	0.01 to 10 s, 9999	PID differential time	A615	134	
147 F022 time switching frequency 0 to 590 Hz, 9999 0.01 Hz 9999 198 198 198 150 M460 Output current detection level 0% to 400% 0.1% 150% 304 151 M461 Output current detection signal delay time 152 M462 Zero current detection level 0% to 400% 0.1% 5% 304 153 M463 Zero current detection time 0 to 10 s 0.01 s 0.5 s 304 153 M463 Zero current detection time 0 to 10 s 0.01 s 0.5 s 304 153 M463 Zero current detection time 0 to 10 s 0.01 s 0.5 s 304 154 M463 Zero current detection time 0 to 10 s 0.01 s 0.5 s 304 154 M463 Zero current detection time 0 to 10 s 0.01 s 0.5 s 304 150 M463 Zero current detection time 0 to 10 s 0.01 s 0.5 s 304 150 M463 Zero current detection selection 0 to 31, 100, 101 1 0 256 256 Zero current detection operation 0 to 31, 100, 101 1 0 256 Zero current detection 21, 24, 32, 33, 50, 52 to 54, 61, 62, 67, 70, 91, 97 279		164		_	1	0 to 7	. ,	E103	145	PO
150 M460 level 0% to 400% 0.1% 150% 304 151 M461 Output current detection 0 to 10 s 0.1 s 0 s 304 152 M462 Zero current detection level 153 M463 Zero current detection level 0% to 400% 0.1% 5% 304		196		9999	0.01 Hz	0 to 590 Hz, 9999		F022	147	_
154		304		150%	0.1%	0% to 400%	-	M460	150	ction
154		304		0 s	0.1 s	0 to 10 s	-	M461	151	t dete
154		304		5%	0.1%	0% to 400%	Zero current detection level	M462	152	ren
154		304		0.5 s	0.01 s	0 to 10 s	Zero current detection time	M463	153	Ğ
Telephone		256		1	1	1, 11	during stall prevention	H631	154	-
157 M430 OL signal output timer 0 to 25 s, 9999 0.1 s 0 s 256		256		0	1	0 to 31, 100, 101		H501	156	_
The bound of the				0 s	0.1 s	0 to 25 s, 9999	OL signal output timer	M430	157	_
Temple Color Col		279		1	1	21, 24, 32, 33, 50, 52 to 54, 61, 62, 67, 70,	selection [E800-4][E800-5]	M301	158	-
161 E200 operation selection 0, 1, 10, 11 1 0 167		181		0	1	0, 1, 9999	= -	E440	160	_
162 A700 instantaneous power failure 0, 1, 10, 11 1 0 408, 410		167		0	1	0, 1, 10, 11	operation selection	E200	161	_
		408,		0	1	0, 1, 10, 11	instantaneous power failure	A700	162	restart
166 M433 Output current detection signal retention time 0 to 10 s, 9999 0.1 s 0.1 s 304		403		150%	0.1%	0% to 400%		A710	165	Automatic
Tete		304		0.1 s	0.1 s	0 to 10 s, 9999		M433	166	ction
167 M464 Output current detection operation selection 0, 1, 10, 11 1 0 304		304		0	1	0, 1, 10, 11	-	M464	167	Current detection
— 168 <u>E000</u> E080									168	_
E080 Parameter for manufacturer setting. Do not set.						ing. Do not set.	Parameter for manufacturer set			
— 169 ————								E081	169	_

Function	Pr.	Pr.	Name	Setting range	Minimum setting	Initial value ^{*1}	Refer	Customer
		group		J	increments	Gr.1 Gr.2	to page	setting
ŗ	170	M020	Watt-hour meter clear	0, 10, 9999	1	9999	270	
Cumulative monitor	171	M030	Operation hour meter clear	0, 9999	1	9999	270	
Jser group	172	E441	User group registered display/batch clear	9999, (0 to 16)	1	0	181	
er g	173	E442	User group registration	0 to 1999, 9999	1	9999	181	
178	174	E443	User group clear	0 to 1999, 9999	1	9999	181	
	178	T700	STF/DI0 terminal function selection	0 to 5, 7, 8, 10, 12 to 16, 18, 23 to 27, 30, 37, 42, 43, 46, 47, 50, 51, 60, 62, 65 to 67, 72, 74, 92, 9999	1	60	328	
	179	T701	STR/DI1 terminal function selection	0 to 5, 7, 8, 10, 12 to 16, 18, 23 to 27, 30, 37, 42, 43, 46, 47, 50, 51, 61, 62, 65 to 67, 72, 74, 92, 9999	1	61	328	
assigı	180	T702	RL terminal function selection	[E800]	1	0	328	
ıction	181	T703	RM terminal function selection	0 to 5, 7, 8, 10, 12 to 16, 18, 23 to 27, 30,	1	1	328	
nal fun	182	T704	RH terminal function selection	37, 42, 43, 46, 47, 50, 51, 62, 65 to 67, 72, 74, 92, 9999	1	2	328	
Input te	183	T709	MRS terminal function selection	[E800-(SC)E] 0 to 4, 8, 13 to 15, 18,	1	24	328	
	184	T711	RES terminal function selection	23, 24, 26, 27, 30, 37,	1	[E800] 62 [E800-(SC)E] 9999	328	
	185	T751	NET X1 input selection		1		328	
	186	T752	NET X2 input selection	0 to 4, 8, 13 to 15, 18,	1		328	
	187	T753	NET X3 input selection	23, 24, 26, 27, 30, 37, 42, 43, 46, 47, 50, 51,	1	9999	328	
	188	T754	NET X4 input selection	72, 74, 92, 9999	1		328	
	189	T755	NET X5 input selection	12, 14, 92, 9999	1		328	

Function	Pr.	Pr.	Name	Setting range	Minimum setting		tial ue ^{*1}	Refer	Customer
Tunction	г.	group	Name	Setting range	increments	Gr.1	Gr.2	to page	setting
	190	M400	RUN terminal function selection	0, 1, 3, 4, 7, 8, 11 to 16, 20, 25, 26, 30 to 35, 39 to 41, 44 to 48, 57, 64, 70, 80, 81, 90 to 93, 95, 96, 98 to 101, 103, 104, 107, 108, 111 to 116, 120, 125, 126, 130 to 135, 130 to 141	1	0		292	
	191	M404	FU terminal function selection	130 to 135, 139 to 141, 144 to 148, 157, 164, 170, 180, 181, 190 to 193, 195, 196, 198, 199, 206, 211 to 213, 242 [E800-(SC)E], 306, 311 to 313, 342 [E800-(SC)E], 9999	1	4		292	
Output terminal function assignment	192	M405	ABC terminal function selection	0, 1, 3, 4, 7, 8, 11 to 16, 20, 25, 26, 30 to 35, 39 to 41, 44 to 48, 57, 64, 70, 80, 81, 82 [E800-(SC)EPA], 90, 91, 95, 96, 98 to 101, 103, 104, 107, 108, 111 to 116, 120, 125, 126, 130 to 135, 139 to 141, 144 to 148, 157, 164, 170, 180, 181, 182 [E800-(SC)EPA], 190, 191, 195, 196, 198, 199, 206, 211 to 213, 242 [E800-(SC)E], 306, 311 to 313, 342 [E800-(SC)E], 9999	1	99		292	
	193	M451	NET Y1 output selection	0, 1, 3, 4, 7, 8, 11 to 16, 20, 25, 26, 30 to 35, 39 to 41, 44 to 48, 57, 64, 70, 80, 81, 90 to 93, 95, 98 to 101, 103,	1	9999		292	
	194	M452	NET Y2 output selection	104, 107, 108, 111 to 116, 120, 125, 126, 130 to 135, 139 to 141, 144 to 148, 157, 164, 170, 180, 181, 190 to	1	9999		292	
	195	M453	NET Y3 output selection	193, 195, 198, 199, 206, 211 to 213, 242 [E800-(SC)E], 306, 311 to 313, 342 [E800-	1	9999		292	
	196	M454	NET Y4 output selection	(SC)E], 9999	1	9999		292	
_	198	E709	Display corrosion level	(1 to 3)	1	1		186	

♦ Pr.200 to Pr.299

Function	Pr.	Pr. group	Name	Setting range	Minimum setting increments	Init valu Gr.1	tial ue ^{*1} Gr.2	Refer to page	Customer setting
Multi-speed setting	232 to 239	D308 to D315	Multi-speed setting (speed 8 to speed 15)	0 to 590 Hz, 9999	0.01 Hz	9999	01.2	234	
» W	240	E601	Soft-PWM operation	0, 1	1	1		184	
	241	M043	selection Analog input display unit	0, 1	1	0		318	
	244	H100	switchover Cooling fan operation	0, 1	1	1		245	
_			selection	0% to 50%, 9999				449	
sation	245 246	G203 G204	Rated slip Slip compensation time constant	0.01 to 10 s	0.01% 0.01 s	9999 0.5 s		449	
Slip compensation	247	G205	Constant output range slip compensation selection	0, 9999	1	9999		449	
_	249	H101	Earth (ground) fault detection at start	0, 1	1	0	1	246	
_	250	G106	Stop selection	0 to 100 s, 1000 to 1100 s, 8888, 9999	0.1 s	9999		440	
_	251	H200	Output phase loss protection selection	0, 1	1	1		249	
	255	E700	Life alarm status display	(0 to 879)	1	0		186	
¥	256	E701	Inrush current limit circuit life display	(0% to 100%)	1%	100%		186	
Life check	257	E702	Control circuit capacitor life display	(0% to 100%)	1%	100%		186	
Life	258	E703	Main circuit capacitor life display	(0% to 100%)	1%	100%		186	
	259	E704	Main circuit capacitor life measuring	0, 1	1	0		186	
_	260	E602	PWM frequency automatic switchover	0, 10	1	10		184	
Power failure stop	261	A730	Power failure stop selection	0 to 2	1	0		414	
_	267	T001	Terminal 4 input selection	0 to 2	1	0		310	
_	268	M022	Monitor decimal digits selection	0, 1, 9999	1	9999		270	
_	269	E023	Parameter for manufacturer sett	ing. Do not set.	T				I
t	270	A200	Stop-on-contact control selection	0, 1, 11	1	0		375	
Stop-on-contact control	275	A205	Stop-on contact excitation current low-speed scaling factor	0% to 300%, 9999	0.1%	9999		375	
Stop-c	276	A206	PWM carrier frequency at stop-on contact	0 to 9, 9999	1	9999		375	
0,	277	H630	Stall prevention operation current switchover	0, 1	1	0		256	

Function	Pr.	Pr.	Name	Setting range	Minimum setting		tial ue ^{*1}	Refer	Customer setting
		group			increments	Gr.1	Gr.2	to page	setting
	278	A100	Brake opening frequency	0 to 30 Hz	0.01 Hz	3 Hz		370	
	279	A101	Brake opening current	0% to 400%	0.1%	130%		370	
	280	A102	Brake opening current detection time	0 to 2 s	0.1 s	0.3 s		370	
nce	281	A103	Brake operation time at start	0 to 5 s	0.1 s	0.3 s		370	
ənk	282	A104	Brake operation frequency	0 to 30 Hz	0.01 Hz	6 Hz		370	
sec	283	A105	Brake operation time at stop	0 to 5 s	0.1 s	0.3 s		370	
Brake sequence	284	A106	Deceleration detection function selection	0, 1	1	0		370	
_	285	A107	Overspeed detection frequency	0 to 20 Hz 0000	0.01 Hz	9999		130, 370,	
	205	H416	Speed deviation excess detection frequency	0 to 30 Hz, 9999	U.U I FIZ	9999		450	
ō	286	G400	Droop gain	0% to 100%	0.1%	0%		452	
Droop control	287	G401	Droop filter time constant	0 to 1 s	0.01 s	0.3 s		452	
	289	M431	Inverter output terminal filter	5 to 50 ms, 9999	1 ms	9999		292	
_	290	M044	Monitor negative output selection	0, 1, 4, 5, 8, 9, 12, 13	1	0		270, 279	
_	292	A110 F500	Automatic acceleration/ deceleration	0, 1, 7, 8, 11	1	0		209, 370	
_	293	F513	Acceleration/deceleration separate selection	0 to 2	1	0		209	
_	295	E201	Frequency change increment amount setting	0, 0.01, 0.1, 1, 10,	0.01	0		169	
Password	296	E410	Password lock level	0 to 6, 99, 100 to 106, 199, 9999	1	9999		175	
Pass	297	E411	Password lock/unlock	(0 to 5), 1000 to 9998, 9999	1	9999		175	
_	298	A711	Frequency search gain	0 to 32767, 9999	1	9999		345, 410	
_	299	A701	Rotation direction detection selection at restarting	0, 1, 9999	1	0		403	

♦ Pr.300 to Pr.399

Function	Pr.	Pr. group	Name	Setting range	Minimum setting increments	Initial value ^{*1} Gr.1 Gr.2	Refer to page	Customer setting
	313 ^{*9}	M410	DO0 output selection	0, 1, 3, 4, 7, 8, 11 to 16,	1	9999	292	
	314 ^{*9}	M411	DO1 output selection	20, 25, 26, 30 to 35, 39 to 41, 44 to 48, 57, 64, 70, 80, 81, 90 to 93,	1	9999	292	
	315 ^{*9}	M412	DO2 output selection	95, 96, 98 to 101, 103, 104, 107, 108, 111 to	1	9999	292	
	316 ^{*9}	M413	DO3 output selection	116, 120, 125, 126, 130 to 135, 139 to 141, 144 to 148, 157, 164,	1	9999	292	
ш	317 ^{*9}	M414	DO4 output selection	170, 180, 181, 190 to 193, 195, 196, 198, 199, 206, 211 to 213,	1	9999	292	
CC-Link IE	318 ^{*9}	M415	DO5 output selection	242 [E800-(SC)E], 306, 311 to 313, 342	1	9999	292	
S	319 ^{*9}	M416	DO6 output selection	[E800-(SC)E], 9999	1	9999	292	
	320 ^{*9}	M420	RA1 output selection	0, 1, 3, 4, 7, 8, 11 to 16, 20, 25, 26, 30 to 35, 39	1	0	292	
	321 ^{*9}	M421	RA2 output selection	to 41, 44 to 48, 57, 64, 70, 80, 81, 90, 91, 95, 96, 98, 99, 206, 211 to	1	1	292	
	322 ^{*9}	M422	RA3 output selection	213, 242 [E800- (SC)E], 9999	1	4	292	
<u> </u>	338	D010	Communication operation command source	0, 1	1	0	223	
icatic	339	D011	Communication speed command source	0 to 2	1	0	223	
RS-485 communication	340	D001	Communication startup mode selection	0, 1, 10	1	[E800] 0 [E800-(SC)E] 10	222	
RS-46	342	N001	Communication EEPROM write selection	0, 1	1	0	*8	
	343	N080	Communication error count	(0 to 999)	1	0	*8	
_	349 ^{*10}	N010	Communication reset selection	0, 1	1	0	*8	
	359 ^{*5}	C141	Encoder rotation direction	100, 101	1	101	365, 450	
ack	367 ^{*5}	G240	Speed feedback range	0 to 590 Hz, 9999	0.01 Hz	9999	450	
edp	368 ^{*5}	G241	Feedback gain	0 to 100	0.1	1	450	
Encoder feedback	369 ^{*5}	C140	Number of encoder pulses	2 to 4096	1	1024	365, 450	
nco	374	H800	Overspeed detection level	0 to 590 Hz, 9999	0.01 Hz	9999	266	
Ш	376 ^{*5}	C148	Encoder signal loss detection enable/disable selection	0, 1	1	0	368, 450	
_	390	N054	% setting reference frequency [E800-(SC)EPA]	1 to 590 Hz	0.01 Hz	60 Hz —	*8	

♦ Pr.400 to Pr.499

Function	unction Pr. Pr.		Name	Setting range	Minimum setting	Initial value ^{*1}		Refer	Customer
		group			increments	Gr.1	Gr.2	to page	Setting
ပု	414	A800	PLC function operation selection	0 to 2, 11, 12	1	0		416	
굽	415	A801	Inverter operation lock mode setting	0, 1	1	0		416	

Function	Pr.	Pr.	Name	Setting range	Minimum setting	Initial value ^{*1}	Refer	Customer
1 diletion		group	Hame	Octung range	increments	Gr.1 Gr.2	to page	setting
_	422	B003	Position control gain	0 to 150 s ⁻¹	1 s ⁻¹	10 s ⁻¹	434	
	442	N620	Default gateway address 1 [E800-(SC)E]				*8	
rnet	443	N621	Default gateway address 2 [E800-(SC)E]	0.4- 055	4		*8	
Ethernet	444	N622	Default gateway address 3 [E800-(SC)E]	0 to 255	1	0	*8	
	445	N623	Default gateway address 4 [E800-(SC)E]				*8	
	450	C200	Second applied motor	[200/400 V class] 0, 3, 5, 6, 10, 13, 15, 16, 20, 23, 30, 33, 40, 43, 50, 53, 70, 73, 1800, 1803, 8090, 8093, 9090, 9093, 9999 [575 V class] 0, 3, 5, 6, 10, 13, 15, 16, 30, 33, 8090, 8093, 9090, 9093, 9999	1	9999	340	
	451	G300	Second motor control method selection	10 to 12, 20, 40, 9999	1	9999	97	
	453	C201	Second motor capacity	0.1 to 30 kW, 9999	0.01 kW	9999	345, 355	
tant	454	C202	Number of second motor poles	2, 4, 6, 8, 10, 12, 9999	1	9999	345, 355	
suoo .	455	C225	Second motor excitation current	0 to 500 A, 9999	0.01 A	9999	345	
Second motor constant	456	C204	Rated second motor voltage	0 to 1000 V	0.1 V	[200 V class] 200 V [400 V class] 400 V [575 V class] 575 V	345, 355	
	457	C205	Rated second motor frequency	10 to 400 Hz, 9999	0.01 Hz	9999	345, 355	
	458	C220	Second motor constant (R1)	0 to 50 Ω, 9999	0.001 Ω	9999	345, 355, 410	
	459	C221	Second motor constant (R2)	0 to 50 Ω, 9999	0.001 Ω	9999	345	
	460	C222	Second motor constant (L1) / d-axis inductance (Ld)	0 to 6000 mH, 9999	0.1 mH	9999	345, 355	
	461	C223	Second motor constant (L2) / q-axis inductance (Lq)	0 to 6000 mH, 9999	0.1 mH	9999	345, 355	
	462	C224	Second motor constant (X)	0% to 100%, 9999	0.1%	9999	345	
	463	C210	Second motor auto tuning setting/status	0, 1, 11	1	0	345, 355, 410	
후 녹	495	M500	Remote output selection	0, 1, 10, 11	1	0	307	
Remote	496	M501	Remote output data 1	0 to 4095	1	0	307	
% o	497	M502	Remote output data 2	0 to 4095	1	0	307	
_	498	A804	PLC function flash memory clear	0, 9696 (0 to 9999)	1	0	416	

♦ Pr.500 to Pr.599

Function	Pr.	Pr. group	Name	Setting range	Minimum setting	lni valı		Refer to page	Customer setting
		9.000			increments	Gr.1	Gr.2	to page	ocug
_	502	N013	Stop mode selection at communication error	0 to 2, 6	1	0		*8	

Function	Pr.	Pr. group	Name	Setting range	Minimum setting	Initial value ^{*1}	Refer to page	Customer setting
					increments	Gr.1 Gr.2		Setting
nce	503	E710	Maintenance timer	0 (1 to 9998)	1	0	190	
Maintenance	504	E711	Maintenance timer warning output set time	0 to 9998, 9999	1	9999	190	
_	505	M001	Speed setting reference	1 to 590 Hz	0.01 Hz	60 Hz 50 Hz	268	
eck	506	E705	Display estimated main circuit capacitor residual life	(0% to 100%)	1%	100%	186	
Life check	507	E706	Display ABC relay contact life	0% to 100%	1%	100%	186	
_	509	E708	Display power cycle life	(0% to 100%)	0.01%	100%	186	
ation	541	N100	Frequency command sign selection [E800-(SC)E]	0, 1	1	0	*8	
Communication	544	N103	CC-Link extended setting [E800-(SC)E]	0, 1, 12, 14, 18, 100, 112, 114, 118	1	0	*8	
<u> </u>	547	N040	USB communication station number	0 to 31	1	0	*8	
USB	548	N041	USB communication check time interval	0 to 999.8 s, 9999	0.1 s	9999	*8	
	549	N000	Protocol selection	0, 1	1	0	*8	
Communication	550	D012	NET mode operation command source selection	[E800] 0, 2, 9999 [E800-(SC)E] 0, 5, 9999	1	9999	223	
Comm	551	D013	PU mode operation command source selection	[E800] 2 to 4, 9999 [E800-(SC)E] 3, 4, 9999	1	9999	223	
_	552	H429	Frequency jump range	0 to 30 Hz, 9999	0.01 Hz	9999	254	
ᅙ	553	A603	PID deviation limit	0% to 100%, 9999	0.1%	9999	380	
PID control	554	A604	PID signal operation selection	0 to 3, 10 to 13	1	0	380	
bu	555	E720	Current average time	0.1 to 1 s	0.1 s	1 s	191	
tori	556	E721	Data output mask time	0 to 20 s	0.1 s	0 s	191	
Average current monitoring	557	E722	Current average value monitor signal output reference current	0 to 500 A	0.01 A	Inverter rated current	191	
_	560	A712	Second frequency search gain	0 to 32767, 9999	1	9999	345, 410	
_	563	M021	Energization time carrying- over times	(0 to 65535)	1	0	270	
_	564	M031	Operating time carrying-over times	(0 to 65535)	1	0	270	
Second motor constant	569	G942	Second motor speed control gain	0% to 200%, 9999	0.1%	9999	102	

Function	Pr.	Pr. group	Name	Setting range	Minimum setting	Initial value ^{*1}	Refer to page	Customer setting
		group			increments	Gr.1 Gr.2	to page	Setting
Multiple rating	570	E301	Multiple rating setting [3-phase]	1, 2	1	2	171	
_	571	F103	Holding time at a start	0 to 10 s, 9999	0.1 s	9999	207	
_	574	C211	Second motor online auto tuning	0, 1	1	0	362	
ō	575	A621	Output interruption detection time	0 to 3600 s, 9999	0.1 s	1 s	380	
PID control	576	A622	Output interruption detection level	0 to 590 Hz	0.01 Hz	0 Hz	380	
뭅	577	A623	Output interruption cancel level	900% to 1100%	0.1%	1000%	380	
	592	A300	Traverse function selection	0 to 2	1	0	378	
	593	A301	Maximum amplitude amount	0% to 25%	0.1%	10%	378	
Traverse	594	A302	Amplitude compensation amount during deceleration	0% to 50%	0.1%	10%	378	
Trav	595	A303	Amplitude compensation amount during acceleration	0% to 50%	0.1%	10%	378	
	596	A304	Amplitude acceleration time	0.1 to 3600 s	0.1 s	5 s	378	
	597	A305	Amplitude deceleration time	0.1 to 3600 s	0.1 s	5 s	378	

♦ Pr.600 to Pr.699

Function	Pr.	Pr. group	Name	Setting range	Minimum setting increments	Initial value ^{*1} Gr.1 Gr.2	Refer to page	Customer setting
relay	600	H001	First free thermal reduction frequency 1	0 to 590 Hz, 9999	0.01 Hz	9999	238	
Electronic thermal O/L relay	601	H002	First free thermal reduction ratio 1	1% to 100%	1%	100%	238	
herma	602	H003	First free thermal reduction frequency 2	0 to 590 Hz, 9999	0.01 Hz	9999	238	
onic t	603	H004	First free thermal reduction ratio 2	1% to 100%	1%	100%	238	
Electr	604	H005	First free thermal reduction frequency 3	0 to 590 Hz, 9999	0.01 Hz	9999	238	
_	607	H006	Motor permissible load level	110% to 250%	1%	150%	238	
_	608	H016	Second motor permissible load level	110% to 250%, 9999	1%	9999	238	
ntrol	609	A624	PID set point/deviation input selection	2 to 5	1	2	380, 396	
PID control	610	A625	PID measured value input selection	2 to 5	1	3	380, 396	
_	611	F003	Acceleration time at a restart	0 to 3600 s, 9999	0.1 s	9999	403, 408	
_	631	H182	Inverter output fault detection enable/disable selection	0, 1	1	0	247	
ence	639	A108	Brake opening current selection	0, 1	1	0	370	
Brake sequence	640	A109	Brake operation frequency selection	0, 1	1	0	370	

Function	Pr.	Pr. group	Name	Setting range	Minimum setting		tial ue ^{*1}	Refer to page	Customer setting
		group			increments	Gr.1	Gr.2	to page	Setting
5	653	G410	Speed smoothing control	0% to 200%	0.1%	0%		453	
Speed smoothing control	654	G411	Speed smoothing cutoff frequency	0 to 120 Hz	0.01 Hz	20 Hz		453	
_	665	G125	Regeneration avoidance frequency gain	0% to 200%	0.1%	100%		446	
_	673	G060	SF-PR slip amount adjustment operation selection [200/400 V class]	2, 4, 6, 9999	1	9999		433	
_	674	G061	SF-PR slip amount adjustment gain [200/400 V class]	0% to 500%	0.1%	100%		433	
_	675	A805	User parameter auto storage function selection	1, 9999	1	9999		416	
_	690	H881	Deceleration check time	0 to 3600 s, 9999	0.1 s	1 s		130	
relay	692	H011	Second free thermal reduction frequency 1	0 to 590 Hz, 9999	0.01 Hz	9999		238	
II O/L	693	H012	Second free thermal reduction ratio 1	1% to 100%	1%	100%		238	
herma	694	H013	Second free thermal reduction frequency 2	0 to 590 Hz, 9999	0.01 Hz	9999		238	
Electronic thermal O/L relay	695	H014	Second free thermal reduction ratio 2	1% to 100%	1%	100%		238	
Electr	696	H015	Second free thermal reduction frequency 3	0 to 590 Hz, 9999	0.01 Hz	9999		238	
_	699	T740	Input terminal filter	5 to 50 ms, 9999	1 ms	9999		328	

♦ Pr.700 to Pr.799

Function	Pr.	Pr. group	Name	Setting range	Minimum setting	Initial value*1		Refer to page	Customer setting
		group			increments	Gr.1	Gr.2	to page	Setting
	702	C106	Maximum motor frequency	0 to 400 Hz, 9999	0.01 Hz	9999		355	
	706	C130	Induced voltage constant (phi f)	0 to 5000 mV (rad/s), 9999	0.1 mV (rad/s)	9999		355	
	707	C107	Motor inertia (integer)	10 to 999, 9999	1	9999		355	
	711	C131	Motor Ld decay ratio	0% to 100%, 9999	0.1%	9999		355	
텉	712	C132	Motor Lq decay ratio	0% to 100%, 9999	0.1%	9999		355	
consta	5	C182	Starting resistance tuning compensation coefficient 1	0% to 200%, 9999	0.1%	9999		355	
otor o		C188	Starting resistance tuning compensation coefficient	0% to 200%, 9999	0.1%	9999		345	
Σ	721	C185	Starting magnetic pole position detection pulse width	0 to 6000 μs, 9999	1 µs	9999		355	
	724	C108	Motor inertia (exponent)	0 to 7, 9999	1	9999		355	
	725	C133	Motor protection current level	100% to 500%, 9999	0.1%	9999		355	
rnet	728	N052	Device instance number (Upper 3 digits) [E800- (SC)EPA]	0 to 419	1	0		*8	
Ethernet	729	N053	Device instance number (Lower 4 digits) [E800- (SC)EPA]	0 to 9999	1	0		*8	

Function	Pr.	Pr.	Name	Setting range	Minimum setting	Initial value ^{*1}	Refer	Customer
. unotion		group	Titalii o	County rungs	increments	Gr.1 Gr.2	to page	setting
	737	C288	Starting resistance tuning compensation coefficient 2	0% to 200%, 9999	0.1%	9999	355	
	738	C230	Second motor induced voltage constant (phi f)	0 to 5000 mV (rad/s), 9999	0.1 mV (rad/s)	9999	355	
	739	C231	Second motor Ld decay ratio	0% to 100%, 9999	0.1%	9999	355	
	740	C232	Second motor Lq decay ratio	0% to 100%, 9999	0.1%	9999	355	
Motor constant	741	C282	Second motor starting resistance tuning compensation coefficient 1	0% to 200%, 9999	0.1%	9999	355	
or co	742	C285	Second motor magnetic pole detection pulse width	0 to 6000 μs, 9999	1 µs	9999	355	
Mo	743	C206	Second motor maximum frequency	0 to 400 Hz, 9999	0.01 Hz	9999	355	
	744	C207	Second motor inertia (integer)	10 to 999, 9999	1	9999	355	
	745	C208	Second motor inertia (exponent)	0 to 7, 9999	1	9999	355	
	746	C233	Second motor protection current level	100% to 500%, 9999	0.1%	9999	355	
_	759	A600	PID unit selection	0 to 43, 9999	1	9999	393	
	774	M101	Operation panel monitor selection 1	[E800][E800- (SC)EPB] 1 to 3, 5 to 14, 17 to 20, 23 to 25, 32, 33, 35,	1	9999	270	
Monitoring	775	M102	Operation panel monitor selection 2	38, 40 to 42, 44, 45, 50 to 57, 61, 62, 67, 91, 97, 100, 9999 [E800-(SC)EPA] 1 to 3, 5 to 14, 17 to 20,	1	9999	270	
	776	M103	Operation panel monitor selection 3	23 to 25, 32, 33, 35, 38, 40 to 42, 44, 45, 50	1	9999	270	
_	779	N014	Operation frequency during communication error	0 to 590 Hz, 9999	0.01 Hz	9999	*8	
-	791	F070	Acceleration time in low- speed range	0 to 3600 s, 9999	0.1 s	9999	196	
_	792	F071	Deceleration time in low- speed range	0 to 3600 s, 9999	0.1 s	9999	196	

♦ Pr.800 to Pr.999

Function	unction Pr. Pr.	Pr. group	Name	Setting range	Minimum setting	Initial value ^{*1}		Refer to page	Customer setting
		group			increments	Gr.1	Gr.2	to page	Setting
_	800	G200	Control method selection	0 to 2, 9, 10 to 12, 19, 20, 40	1	40		97	
_	801	H704	Output limit level	0% to 400%, 9999	0.1%	9999		114, 143	
_	802	G102	Pre-excitation selection	0, 1	1	0		434	
land	803	G210	Constant output range torque characteristic selection	0 to 2, 10	1	0		114, 143	
command	804	D400	Torque command source selection	0, 1, 3 to 6	1	0		143	
Torque	805	D401	Torque command value (RAM)	600% to 1400%	1%	1000%		114, 143	
ř	806	D402	Torque command value (RAM, EEPROM)	600% to 1400%	1%	1000%		114, 143	

Function	Pr.	Pr.	Name	Setting range	Minimum setting	Initial value ^{*1}	Refer	Customer
T diletion		group	reame	Octung range	increments	Gr.1 Gr.2	to page	setting
Ħ	807	H410	Speed limit selection	0, 1	1	0	147	
ᆵ	808	H411	Speed limit	0 to 400 Hz	0.01 Hz	60 Hz 50 Hz	147	
Speed limit	809	H412	Reverse-side speed limit	0 to 400 Hz, 9999	0.01 Hz	9999	147	
	810	H700	Torque limit input method selection	0 to 2	1	0	114	
	811	D030	Set resolution switchover	0, 10	1	0	114	
	812	H701	Torque limit level (regeneration)	0% to 400%, 9999	0.1%	9999	114	
Torque limit	813	H702	Torque limit level (3rd quadrant)	0% to 400%, 9999	0.1%	9999	114	
Torqu	814	H703	Torque limit level (4th quadrant)	0% to 400%, 9999	0.1%	9999	114	
	815	H710	Torque limit level 2	0% to 400%, 9999	0.1%	9999	114	
	816	H720	Torque limit level during acceleration	0% to 400%, 9999	0.1%	9999	114	
	817	H721	Torque limit level during deceleration	0% to 400%, 9999	0.1%	9999	114	
	820	G211	Speed control P gain 1	0% to 1000%	1%	60%	121	
	821	G212	Speed control integral time 1	0 to 20 s	0.001 s	0.333 s	121	
	822	T003	Speed setting filter 1	0 to 5 s, 9999	0.001 s	9999	316	
	823 ^{*5}	G215	Speed detection filter 1	0 to 0.01 s	0.001 s	0.001 s	154	
	824	G213	Torque control P gain 1 (current loop proportional gain)	0% to 500%	1%	100%	149	
ب	825	G214	Torque control integral time 1 (current loop integral time)	0 to 500 ms	0.1 ms	5 ms	149	
Adjustment	826	T004	Torque setting filter 1	0 to 5 s, 9999	0.001 s	9999	316	
ıstn	828	G224	Model speed control gain	0 to 1000 rad/s	1 rad/s	100 rad/s	124	
۱dju	830	G311	Speed control P gain 2	0% to 1000%, 9999	1%	9999	121	
٩	831	G312	Speed control integral time 2	0 to 20 s, 9999	0.001 s	9999	121	
	832	T005	Speed setting filter 2	0 to 5 s, 9999	0.001 s	9999	316	
	833 ^{*5}	G315	Speed detection filter 2	0 to 0.01 s, 9999	0.001 s	9999	154	
	834	G313	Torque control P gain 2 (current loop proportional gain)	0% to 500%, 9999	1%	9999	149	
	835	G314	Torque control integral time 2 (current loop integral time)	0 to 500 ms, 9999	0.1 ms	9999	149	
	836	T006	Torque setting filter 2	0 to 5 s, 9999	0.001 s	9999	316	
	840	G230	Torque bias selection	0 to 3, 9999	1	9999	126	
	841	G231	Torque bias 1	600% to 1400%, 9999	1%	9999	126	
	842	G232	Torque bias 2	600% to 1400%, 9999	1%	9999	126	
(0	843	G233	Torque bias 3	600% to 1400%, 9999	1%	9999	126	
bias	844	G234	Torque bias filter	0 to 5 s, 9999	0.001 s	9999	126	
ne	845	G235	Torque bias operation time	0 to 5 s, 9999	0.01 s	9999	126	
Torque bias	846	G236	Torque bias balance compensation	0% to 100%, 9999	0.1%	9999	126	
	847	G237	Fall-time torque bias terminal 4 bias	0% to 400%, 9999	1%	9999	126	
	848	G238	Fall-time torque bias terminal 4 gain	0% to 400%, 9999	1%	9999	126	

Function	Pr.	Pr. group	Name	Setting range	Minimum setting	Initial value ^{*1}	Refer to page	Customer setting
		group			increments	Gr.1 Gr.2	to page	Setting
	849	T007	Analog input offset adjustment	0% to 200%	0.1%	100%	316	
	850	G103	Brake operation selection	0 to 2	1	0	434	
	853	H417	Speed deviation time	0 to 100 s	0.1 s	1 s	130	
io	854	G217	Excitation ratio	0% to 100%	1%	100%	155	
Additional function	858	T040	Terminal 4 function assignment	0, 4, 6, 9999	1	0	114, 256, 315	
dition	859	C126	Torque current/Rated PM motor current	0 to 500 A, 9999	0.01 A	9999	345, 355	
¥	860	C226	Second motor torque current/Rated PM motor current	0 to 500 A, 9999	0.01 A	9999	345, 355	
	864	M470	Torque detection	0% to 400%	0.1%	150%	306	
	865	M446	Low speed detection	0 to 590 Hz	0.01 Hz	1.5 Hz	301	
Indication	866	M042	Torque monitoring reference	0% to 400%	0.1%	150%	270	
_	867	M321	AM output filter [E800-4][E800-5]	0 to 5 s	0.01 s	0.01 s	283	
_	870	M440	Speed detection hysteresis	0 to 15 Hz	0.01 Hz	0 Hz	301	
Protective function	872	H201	Input phase loss protection selection [3-phase]	0, 1	1	1	249	
nct	873 ^{*5}	H415	Speed limit	0 to 400 Hz	0.01 Hz	20 Hz	130	
F 수	874	H730	OLT level setting	0% to 400%	0.1%	150%	114	
Ę	877	G220	Speed feed forward control/ model adaptive speed control selection	0 to 2	1	0	124	
/ste	878	G221	Speed feed forward filter	0.01 to 1 s	0.01 s	0.01 s	124	
Control system	879	G222	Speed feed forward torque limit	0% to 400%	0.1%	150%	124	
Co	880	C114	Load inertia ratio	0 to 200 times	0.1 time	7 times	121, 124	
	881	G223	Speed feed forward gain	0% to 1000%	1%	0%	124	
	882	G120	Regeneration avoidance operation selection	0 to 2	1	0	446	
Regeneration avoidance	883	G121	Regeneration avoidance operation level	300 to 1200 V	0.1 V	[200 V class] 400 V [400 V class] 780 V [575 V class] 944 V	446	
Regener	885	G123	Regeneration avoidance compensation frequency limit value	0 to 45 Hz, 9999	0.01 Hz	6 Hz	446	
	886	G124	Regeneration avoidance voltage gain	0% to 200%	0.1%	100%	446	
ter	888	E420	Free parameter 1	0 to 9999	1	9999	178	
Free parameter	889	E421	Free parameter 2	0 to 9999	1	9999	178	

Function	Function Pr.	Pr. group	Name	Setting range	Minimum setting		tial ue ^{*1}	Refer to page	Customer setting
		group			increments	Gr.1	Gr.2	to page	Journa
	891	M023	Cumulative power monitor digit shifted times	0 to 4, 9999	1	9999		270, 286	
	892	M200	Load factor	30% to 150%	0.1%	100%		286	
ing	893	M201	Energy saving monitor reference (motor capacity)	0.1 to 30 kW	0.01 kW	Inverter rated capacity		286	
Energy saving monitoring	894 M202	M202	Control selection during commercial power-supply operation	0 to 3	1	0		286	
aving	895	M203	Power saving rate reference value	0, 1, 9999	1	9999		286	
s ≥	896	M204	Power unit cost	0 to 500, 9999	0.01	9999		286	
Energ	897	M205	Power saving monitor average time	0 to 1000 h, 9999	1 h	9999		286	
	898	M206	Power saving cumulative monitor clear	0, 1, 10, 9999	1	9999		286	
	899	M207	Operation time rate (estimated value)	0% to 100%, 9999	0.1%	9999		286	
_	986	H110	Display safety fault code [E800-SCE]	0 to 127	1	0		*11	
	990	E104	PU buzzer control	0, 1	1	1		165	
<u> </u>	991	E105	PU contrast adjustment	0 to 63	1	58		166	
Monitoring	992	M104	Operation panel setting dial push monitor selection [E800]	0 to 3, 5 to 14, 17 to 20, 23 to 25, 32, 33, 35, 38, 40 to 42, 44, 45, 50 to 57, 61, 62, 67, 91, 97, 100	1	0		270	
_	997	H103	Fault initiation	0 to 255, 9999	1	9999		248	
_	998	E430	PM parameter initialization Simple	0, 8009, 8109, 9009, 9109,	1	0		104	
-	999	E431	Automatic parameter setting Simple	10, 12, 20, 21, 9999	1	9999		179	

♦ Pr.1000 to Pr.1099

Function		Pr. Pr. group	Name	Setting range	Minimum setting increments	Initial value ^{*1}		Refer to page	Customer setting
						Gr.1	Gr.2	to page	Setting
_	1002	C150	Lq tuning target current adjustment coefficient	50% to 150%, 9999	0.1%	9999		355	
×	1006	E020	Clock (year)	2000 to 2099	1	2000		158	
Clock	1007	E021	Clock (month, day)	Jan. 1 to Dec. 31	1	101		158	
ပ	1008	E022	Clock (hour, minute)	0:00 to 23:59	1	0		158	
_	1015	A607	Integral stop selection at limited frequency	0 to 2	1	0		380	

Function	Pr.	Pr.	Name	Setting range	Minimum setting	Initial value ^{*1}	Refer	Customer
- unouon		group	- Namo	ootting rungs	increments	Gr.1 Gi	to page	setting
	1020	A900	Trace operation selection	0 to 3	1	0	418	
	1022	A902	Sampling cycle	1, 2, 5, 10, 50, 100, 500, 1000	1	1	418	
	1023	A903	Number of analog channels	1 to 8	1	4	418	
	1024	A904	Sampling auto start	0, 1	1	0	418	
	1025	A905	Trigger mode selection	0 to 4	1	0	418	
	1026	A906	Number of sampling before trigger	0% to 100%	1%	90%	418	
	1027	A910	(1ch)	201	418			
	1028	A911	Analog source selection (2ch)			202	418	
	1029	A912	Analog source selection (3ch)	1 to 3, 5 to 14, 17 to 20,	1	203	418	
	1030	A913	Analog source selection (4ch)	23, 24, 32, 33, 35, 40 to 42, 52 to 54, 61, 62,		204	418	
	1031	A914	Analog source selection (5ch)	67, 83 [E800- (SC)EPA], 91, 97, 201 to 210, 212, 213, 230	1	205	418	
Trace	1032	A915	Analog source selection (6ch)	to 232, 235 to 238		206	418	
Ë	1033	A916	Analog source selection (7ch)			207	418	
	1034	A917	Analog source selection (8ch)			208	418	
	1035	A918	Analog trigger channel	1 to 8	1	1	418	
	1036	A919	Analog trigger operation selection	0, 1	1	0	418	
	1037	A920	Analog trigger level	600 to 1400	1	1000	418	
	1038	A930	Digital source selection (1ch)			0	418	
	1039	A931	Digital source selection (2ch)			0	418	
	1040	A932	Digital source selection (3ch)			0	418	
	1041	A933	Digital source selection (4ch)	0 to 255	1	0	418	
	1042	A934	Digital source selection (5ch)	0 10 200	'	0	418	
	1043	A935	Digital source selection (6ch)			0	418	
	1044	A936	Digital source selection (7ch)			0	418	
	1045	A937	Digital source selection (8ch)			0	418	
	1046	A938	Digital trigger channel	1 to 8	1	1	418	
	1047	A939	Digital trigger operation selection	0, 1	1	0	418	

♦ Pr.1100 to Pr.1399

Function	Pr.	Pr. group	Name	Setting range	Minimum setting increments	Initial value*1 Gr.1 Gr.2 Refer to page		Customer setting	
_	1103	F040	Deceleration time at emergency stop	0 to 3600 s	0.1 s	5 s	GI.2	196	
D _L	1106	M050	Torque monitor filter	0 to 5 s, 9999	0.01 s	9999		270	
Ö	1107	M051	Running speed monitor filter	0 to 5 s, 9999	0.01 s	9999		270	
Monitoring	1108	M052	Excitation current monitor filter	0 to 5 s, 9999	0.01 s	9999		270	
_	1124	N681	Station number in inverter-to- inverter link [E800-(SC)E]	0 to 5, 9999	1	9999		*8	
_	1125	N682	Number of inverters in inverter-to-inverter link system [E800-(SC)E]	2 to 6	1	2		*8	
PLC function	1150 to 1199	A810 to A859	PLC function user parameters 1 to 50	0 to 65535	1	0		416	

	Function	Pr.	Pr. group	Pr. Name Setting range		Pr. Name Setting range setting		Minimum setting	Initial value ^{*1}		Refer to page	Customer setting
		group			increments	Gr.1	Gr.2	Julia				
	-	1200	M390	AM output offset calibration [E800-4][E800-5]	2700 to 3300	1	3000		283			
	-	1399	N649	Inverter identification enable/ disable selection [E800- (SC)E]	0, 1	1	1		*8			

♦ Pr.1400 to Pr.1499

Function	Pr.	Pr. group	Name	Setting range	Minimum setting increments	Initial value ^{*1} Gr.1 Gr	Refer to page	Customer setting
_	1412	C135	Motor induced voltage constant (phi f) exponent [E800-(SC)E]	0 to 2, 9999	1	9999	355	
_	1413	C235	Second motor induced voltage constant (phi f) exponent [E800-(SC)E]	0 to 2, 9999	1	9999	355	
	1424	N650	Ethernet communication network number [E800-(SC)E] 1 to 239		1	1	*8	
	1425	N651	Ethernet communication station number [E800-(SC)E]	1 to 120		1	*8	
	1426	Link speed and duplex mode selection [E800-(SC)E]	0 to 4	1	0	*8		
ection	1427	N630	Ethernet function selection 1 [E800-(SC)E]	[E800-(SC)EPA] 502, 5000 to 5002, 5006 to 5008, 5010 to	1	5001	*8	
Ethernet function selection	1428	N631	Ethernet function selection 2 [E800-(SC)E]	5013, 44818, 45237, 45238, 47808, 61450, 9999	1	45237	*8	
net func	1429	N632	Ethernet function selection 3 [E800-(SC)E]	[E800-(SC)EPB] 502, 5000 to 5002,	1	45238	*8	
Ether	1430 N633 Ethe	Ethernet function selection 4 [E800-(SC)E]	5006 to 5008, 5010 to 5013, 34962, 45237, 45238, 61450, 9999	1	9999	*8		
	1431	Ethernet signal loss detection function selection [E800-(SC)E] O to 3		0 to 3	1	3	*8	
	1432	N644	Ethernet communication check time interval [E800- (SC)E]	0 to 999.8 s, 9999	0.1 s	1.5	*8	

Function	Pr.	Pr. group	Name	Setting range	Minimum setting	valu		Refer	Customer setting
		group			increments	Gr.1	Gr.2	to page	Setting
	1434	N600	IP address 1 (Ethernet) [E800-(SC)E]	0 to 255	1	192		*8	
	1435	N601	IP address 2 (Ethernet) [E800-(SC)E]	0 to 255	1	168		*8	
	1436	N602	IP address 3 (Ethernet) [E800-(SC)E]	0 to 255	1	50		*8	
	1437	N603	IP address 4 (Ethernet) [E800-(SC)E]	0 to 255	1	1		*8	
	1438	N610	Subnet mask 1 [E800-(SC)E]	0 to 255	1	255		*8	
	1439	N611	Subnet mask 2 [E800-(SC)E]	0 to 255	1	255		*8	
	1440	N612	Subnet mask 3 [E800-(SC)E]	0 to 255	1	255		*8	
	1441	N613	Subnet mask 4 [E800-(SC)E]	0 to 255	1	0		*8	
	1442	N660	IP filter address 1 (Ethernet) [E800-(SC)E]	0 to 255	1	0		*8	
	1443	N661	IP filter address 2 (Ethernet) [E800-(SC)E]	0 to 255	1	0		*8	
	1444	N662	IP filter address 3 (Ethernet) [E800-(SC)E]	0 to 255	1	0		*8	
	1445	N663	IP filter address 4 (Ethernet) [E800-(SC)E]	0 to 255	1	0		*8	
	1446	N664	IP filter address 2 range specification (Ethernet) [E800-(SC)E]	0 to 255, 9999	1	9999		*8	
net	1447	N665	IP filter address 3 range specification (Ethernet) [E800-(SC)E]	0 to 255, 9999	1	9999		*8	
Ethernet	1448	N666	IP filter address 4 range specification (Ethernet) [E800-(SC)E]	0 to 255, 9999	1	9999		*8	
	1449	N670	Ethernet command source selection IP address 1 [E800- (SC)E]	0 to 255	1 0			*8	
	1450	N671	Ethernet command source selection IP address 2 [E800- (SC)E]	thernet command source election IP address 2 [E800- 0 to 255 1		0		*8	
	1451	N672	Ethernet command source selection IP address 3 [E800- (SC)E]	0 to 255	1	0		*8	
	1452	N673	Ethernet command source selection IP address 4 [E800- (SC)E]	0 to 255	1	0		*8	
	1453	N674	Ethernet command source selection IP address 3 range specification [E800-(SC)E]	0 to 255, 9999	1	9999		*8	
	1454	N675	Ethernet command source selection IP address 4 range specification [E800-(SC)E]	ommand source 0 to 255, 9999 1 9999			*8		
	1455	N642	Keepalive time [E800-(SC)E]	1 to 7200 s	1	60 s		*8	
	1456	N647	Network diagnosis selection [E800-(SC)E]	0 to 2, 9999	1	9999		*8	
	1457	N648	Extended setting for Ethernet signal loss detection function selection [E800-(SC)E]	0 to 3, 8888, 9999	1	9999		*8	

Function	Pr.	Pr. group	Name	Setting range	Minimum setting		tial ue ^{*1}	Refer to page	Customer setting
		group			increments	Gr.1	Gr.2	to page	Setting
	1480	H520	Load characteristics measurement mode	0, 1 (2 to 5, 81 to 85)	1	0		261	
	1481	H521	Load characteristics load reference 1	0% to 400%, 8888, 9999	0.1%	9999		261	
	1482	H522	Load characteristics load reference 2	0% to 400%, 8888, 9999	0.1%	9999		261	
Ē	1483	H523	Load characteristics load reference 3	0% to 400%, 8888, 9999	0, 8888, 0.1% 9999			261	
oad characteristics fault detection	1484	H524	Load characteristics load reference 4	0% to 400%, 8888, 9999	0.1%	9999		261	
ault de	변 보 1485 H525	H525	Load characteristics load reference 5	0% to 400%, 8888, 9999	0.1%	9999		261	
itics fa	1486	H526	Load characteristics maximum frequency	0 to 590 Hz	0.01 Hz	60 Hz	50 Hz	261	
acteris	1487	H527	Load characteristics minimum frequency	0 to 590 Hz	0.01 Hz	6 Hz		261	
l chara	1488	H531	Upper limit warning detection width	0% to 400%, 9999	0.1%	20%		261	
Load	1489	H532	Lower limit warning detection width	0% to 400%, 9999	0.1%	20%		261	
	1490	H533	Upper limit fault detection width	0% to 400%, 9999	0.1%	9999		261	
	1491 H	H534	Lower limit fault detection width	0% to 400%, 9999	0.1%	9999		261	
	1492	H535	Load status detection signal delay time / load reference measurement waiting time	0 to 60 s	0.1 s	1 s		261	
_	1499	E415	Parameter for manufacturer sett	ing. Do not set.					

Alphabet (calibration parameters, etc.)

Function	Pr.	Pr.	Name	Setting range	Minimum setting		tial ue ^{*1}	Refer	Customer
		group			increments	Gr.1	Gr.2	to page	setting
	C0 (900) ^{*6}	M310	FM terminal calibration [E800-1]	_	_	_		283	
	C1 (901) ^{*6}	M320	AM terminal calibration [E800-4][E800-5]	_	_	_		283	
	C2 (902) ^{*6}	T200	Terminal 2 frequency setting bias frequency	0 to 590 Hz	0.01 Hz	0 Hz		318	
	C3 (902) ^{*6}	T201	Terminal 2 frequency setting bias	0% to 300%	0.1%	0%		318	
	125 (903) ^{*6}	T202	Terminal 2 frequency setting gain frequency	0 to 590 Hz	0.01 Hz	60 Hz	50 Hz	318	
neter	C4 (903) ^{*6}	T203	Terminal 2 frequency setting gain	0% to 300%	0.1%	100%		318	
ר parar	C5 (904)*6	T400	Terminal 4 frequency setting bias frequency	0 to 590 Hz	0.01 Hz	0 Hz		318	
Calibration parameter	C6 (904) ^{*6}	T401	Terminal 4 frequency setting bias	0% to 300%	0.1%	20%	ı	318	
Calli	126 (905) ^{*6}	T402	Terminal 4 frequency setting gain frequency	0 to 590 Hz	0.01 Hz	60 Hz	50 Hz	318	
	C7 (905) ^{*6}	T403	Terminal 4 frequency setting gain	0% to 300%	0.1%	100%		318	
	C38 (932) ^{*6}	T410	Terminal 4 bias command (torque/magnetic flux)	0% to 400%	0.1%	0%		318	
	C39 (932) ^{*6}	T411	Terminal 4 bias (torque/ magnetic flux)	0% to 300%	0.1%	0%		318	
	C40 (933) ^{*6}	T412	Terminal 4 gain command (torque/magnetic flux)	0% to 400%	0.1%	150%		318	
	C41 (933) ^{*6}	T413	Terminal 4 gain (torque/ magnetic flux)	0% to 300%	0.1%	100%	100%		
	C42 (934) ^{*6}	A630	PID display bias coefficient	0 to 500, 9999	0.01	9999		393	
PID display	C43 (934) ^{*6}	A631	PID display bias analog value	0% to 300%	0.1%	20%		393	
PID o	(935)*6	A632	PID display gain coefficient	0 to 500, 9999	0.01	9999		393	
	C45 (935) ^{*6}	A633	PID display gain analog value	0% to 300%	0.1%	100%		393	
ers	PR.CL		Parameter clear	(0), 1	1	0		456	
met	ALLC		All parameter clear	(0), 1	1	0		456	
Clear parameters	ER.CL		Fault history clear	(0), 1	1	0		458	
_	PR.CH		Initial value change list	_	1	0		52	
_	PM		PM initialization	0	1	0		104	
_	AUTO		Automatic parameter setting	_	_	_		179	
_	PR.MD		Group parameter setting	(0), 1, 2	1	0		78	

^{*1} Gr.1 and Gr.2 are the parameter initial value groups. (Refer to page 52).

^{*2} Differs depending on the capacity.

^{6%:} FR-E820-0050(0.75K) or lower, FR-E840-0026(0.75K) or lower, and FR-E820S-0050(0.75K) or lower

^{5%:} FR-E860-0017(0.75K)

^{4%:} FR-E820-0080(1.5K) to FR-E820-0175(3.7K), FR-E840-0040(1.5K) to FR-E840-0095(3.7K), and FR-E820S-0080(1.5K) or higher

^{3%:} FR-E820-0240(5.5K) or higher, FR-E840-0120(5.5K) or higher, FR-E860-0027(1.5K), and FR-E860-0040(2.2K)

^{2%:} FR-E860-0061(3.7K) or higher

^{*3} Differs depending on the capacity.

⁵ s: FR-E820-0175(3.7K) or lower, FR-E840-0095(3.7K) or lower, FR-E860-0061(3.7K) or lower, and FR-E820S-0110(2.2K) or lower 10 s: FR-E820-0240(5.5K) or higher, FR-E840-0120(5.5K) or higher, FR-E840-0120(5.5K) or higher

- *4 Differs depending on the capacity.
 - 6%: FR-E820-0015(0.2K) or lower and FR-E820S-0015(0.2K) or lower
 - 4%: FR-E820-0030(0.4K) or higher, FR-E840-0016(0.4K) or higher, and FR-E820S-0030(0.4K) or higher
 - 1%: FR-E860-0017(0.75K) or higher
- *5 The setting is available when a plug-in option for Vector control is installed.
- *6 On the LCD operation panel used as the command source, the parameter number in parentheses appears instead of that starting with the letter C.
- *7 For the Ethernet model and the safety communication model, the setting is available only when the FR-A8AY is installed.
- *8 For details, refer to the Instruction Manual (Communication).
- *9 Available when the PLC function is enabled. (**Pr.313 to Pr.315** are always available for settings in the Ethernet model and the safety communication model.)
- $^{\star}10~$ For the standard model, the setting is available only when a communication option is installed.
- *11 For details, refer to the FR-E800-SCE Instruction Manual (Functional Safety).

3.3 Use of a function group number for the identification of parameters

A parameter identification number shown on the PU can be switched from a parameter number to a function group number. As parameters are grouped by function and displayed by the group, the related parameters can be set continually at a time.

◆ Changing a parameter identification number to a function group number

Pr.MD setting	Description				
0	The setting of parameter identification number remains the same as the last setting.				
1	The parameter number is used for the identification of parameters, and displayed in numerical order.				
2	The function group number is used for the identification of parameters, and displayed in alphanumeric order.				

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- 2. Selecting the parameter setting mode
 Press the MODE key to choose the parameter setting mode. (The parameter number read previously appears on the 12-segment LCD display.)
- **3.** Selecting a parameter

 Turn the setting dial or press the UP/DOWN key until "Pr.MD" (Group parameter setting) appears.

 Press the SET key to confirm the selection. "0" (initial value) will appear.
- **4.** Selecting the use of the function group number

 Turn the setting dial or press the UP/DOWN key to change the value to "2" (function group number). Press the SET key to confirm the Group parameter setting. "2" blinks after the setting is completed.

◆ Selecting a parameter by function group number to change its setting

The following shows the procedure to change the setting of P.H400 (Pr.1) Maximum frequency.

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- Changing the operation mode
 Press the PU/EXT key to choose the PU operation mode. [PU] indicator turns ON.
- 3. Selecting the parameter setting mode

 Press the MODE key to choose the parameter setting mode. (The parameter group number read previously appears.)
- **4.** Enabling the function group selection

 Turn the setting dial or press the UP/DOWN key until "H4.." (Protective function parameter 4) appears. Press the SET key to confirm the selection. "H4--" will appear, which shows that the operation panel is ready for selection of a number in the group of monitor parameter 4.
- 5. Selecting a parameter
 Turn the setting dial or press the UP/DOWN key until "H400" (P.H400 Maximum frequency) appears. Press the SET key to display the present set value. "120.0" (initial value) appears.

6. Changing the setting value

Turn the setting dial or press the UP/DOWN key to change the value to "60.00". Press the SET key to confirm the setting. "60.00" blinks after the setting is completed.

3.4 Parameter list (by function group number)

♦ E: Environment setting parameters

Parameters for the inverter operating environment.

Pr. group	Pr.	Name	Refer to page			
E000	168	Parameter for manufacturer setting set.	g. Do not			
E001	169	Parameter for manufacturer setting set.	g. Do not			
E020	1006	Clock (year)	158			
E021	1007	Clock (month, day)	158			
E022	1008	Clock (hour, minute)	158			
E023	269	Parameter for manufacturer setting. Do no set.				
E080	168	Parameter for manufacturer setting. Do not set.				
E081	169	Parameter for manufacturer setting set.	g. Do not			
E100		Reset selection				
E101	75	Disconnected PU detection	161			
E102		PU stop selection				
E103	145	PU display language selection	164			
E104	990	PU buzzer control	165			
E105	991	PU contrast adjustment	166			
E107	75	Reset limit	161			
E200	161	Frequency setting/key lock operation selection	167			
E201	295	Frequency change increment amount setting	169			
E202	40	RUN key rotation direction selection	170			
E300	30	Regenerative function selection	442			
E301	570	Multiple rating setting	171			
E400	77	Parameter write selection	173			
E410	296	Password lock level	175			
E411	297	Password lock/unlock	175			
E415	1499	Parameter for manufacturer setting set.	g. Do not			
E420	888	Free parameter 1	178			
E421	889	Free parameter 2	178			
E430	998	PM parameter initialization Simple	104			
E431	999	Automatic parameter setting Simple	179			
E440	160	User group read selection Simple	181			
E441	172	User group registered display/ batch clear	181			
E442	173	User group registration	181			
E443	174	User group clear	181			
E600	72	PWM frequency selection	184			
E601	240	Soft-PWM operation selection	184			
E602	260	PWM frequency automatic switchover	184			
E700	255	Life alarm status display	186			

Pr. group	Pr.	Name	Refer to page
E701	256	Inrush current limit circuit life display	186
E702	257	Control circuit capacitor life display	186
E703	258	Main circuit capacitor life display	186
E704	259	Main circuit capacitor life measuring	186
E705	506	Display estimated main circuit capacitor residual life	186
E706	507	Display ABC relay contact life	186
E708	509	Display power cycle life	186
E709	198	Display corrosion level	186
E710	503	Maintenance timer	190
E711	504	Maintenance timer warning output set time	190
E720	555	Current average time	191
E721	556	Data output mask time	191
E722	557	Current average value monitor signal output reference current	191

♦ F: Settings for acceleration/ deceleration

Parameters for the motor acceleration/deceleration characteristics.

Pr. group	Pr.	Name	Refer to page
F000	20	Acceleration/deceleration reference frequency	196
F001	21	Acceleration/deceleration time increments	196
F002	16	Jog acceleration/deceleration time	232
F003	611	Acceleration time at a restart	403, 408
F010	7	Acceleration time Simple	196
F011	8	Deceleration time Simple	196
F020	44	Second acceleration/ deceleration time	196, 396
F021	45	Second deceleration time	196, 396
F022	147	Acceleration/deceleration time switching frequency	196
F040	1103	Deceleration time at emergency stop	196
F070	791	Acceleration time in low-speed range	196
F071	792	Deceleration time in low-speed range	196
F100	29	Acceleration/deceleration pattern selection	201
F101	59	Remote function selection	203
F102	13	Starting frequency	207, 208
F103	571	Holding time at a start	207

Pr. group	Pr.	Name	Refer to page
F500	292	Automatic acceleration/ deceleration	209, 370
F510	61	Reference current	209
F511	62	Reference value at acceleration	209
F512	63	Reference value at deceleration	209
F513	293	Acceleration/deceleration separate selection	209

◆ D: Parameters for the setting of operation command and frequency command

Parameters for setting the command source to the inverter, and the motor driving frequency and torque.

Pr. group	Pr.	Name	Refer to page
D000	70	Operation mode	212,
D000	79	selection Simple	222
D001	340	Communication startup mode selection	222
D010	338	Communication operation command source	223
D011	339	Communication speed command source	223
D012	550	NET mode operation command source selection	223
D013	551	PU mode operation command source selection	223
D020	78	Reverse rotation prevention selection	231
D030	811	Set resolution switchover	114, 268
D200	15	Jog frequency	232
D301	4	Multi-speed setting (high speed) Simple	234
D302	5	Multi-speed setting (middle speed)Simple	234
D303	6	Multi-speed setting (low speed)Simple	234
D304 to D307	24 to 27	Multi-speed setting (speed 4 to speed 7)	234
D308 to D315	232 to 239	Multi-speed setting (speed 8 to speed 15)	234
D400	804	Torque command source selection	143
D401	805	Torque command value (RAM)	114, 143
D402	806	Torque command value (RAM, EEPROM)	114, 143

♦ H: Protective function parameter

Parameters to protect the motor and the inverter.

Pr. group	Pr.	Name	Refer to page
H000	9	Electronic thermal O/L relay(Simple)	238, 345, 355

			Refer
Pr. group	Pr.	Name	to page
H001	600	First free thermal reduction frequency 1	238
H002	601	First free thermal reduction ratio 1	238
H003	602	First free thermal reduction frequency 2	238
H004	603	First free thermal reduction ratio 2	238
H005	604	First free thermal reduction frequency 3	238
H006	607	Motor permissible load level	238
H010	51	Second electronic thermal O/L relay	238, 345, 355
H011	692	Second free thermal reduction frequency 1	238
H012	693	Second free thermal reduction ratio 1	238
H013	694	Second free thermal reduction frequency 2	238
H014	695	Second free thermal reduction ratio 2	238
H015	696	Second free thermal reduction frequency 3	238
H016	608	Second motor permissible load level	238
H100	244	Cooling fan operation selection	245
H101	249	Earth (ground) fault detection at start	246
H110	986	Display safety fault code [E800-SCE]	*7
H182	631	Inverter output fault detection enable/disable selection	247
H200	251	Output phase loss protection selection	249
H300	65	Retry selection	250
H301	67	Number of retries at fault occurrence	250
H302	68	Retry waiting time	250
H303	69	Retry count display erase	250
H400	1	Maximum frequency Simple	253
H401	2	Minimum frequency Simple	253
H402	18	High speed maximum frequency	253
H415	873 ^{*1}	Speed limit	130
H416	285	Speed deviation excess detection frequency	130, 370
H420	31	Frequency jump 1A	254
H421	32	Frequency jump 1B	254
H422 H423	33 34	Frequency jump 2A	254 254
H423	35	Frequency jump 2B Frequency jump 3A	254
H425	36	Frequency jump 3B	254
H429	552	Frequency jump range	254
H500	22	Stall prevention operation level (Torque limit level)	114, 256
H501	156	Stall prevention operation selection	256
H600	48	Second stall prevention operation level	256

Pr. group	Pr.	Name	Refer
FI. group	FI.		to page
H610	23	Stall prevention operation level compensation factor at double speed	256
H611	66	Stall prevention operation reduction starting frequency	256
H630	277	Stall prevention operation current switchover	256
H631	154	Voltage reduction selection during stall prevention operation	256
H103	997	Fault initiation	248
H800	374	Overspeed detection level	266
H520	1480	Load characteristics measurement mode	261
H521	1481	Load characteristics load reference 1	261
H522	1482	Load characteristics load reference 2	261
H523	1483	Load characteristics load reference 3	261
H524	1484	Load characteristics load reference 4	261
H525	1485	Load characteristics load reference 5	261
H526	1486	Load characteristics maximum frequency	261
H527	1487	Load characteristics minimum frequency	261
H531	1488	Upper limit warning detection width	261
H532	1489	Lower limit warning detection width	261
H533	1490	Upper limit fault detection width	261
H534	1491	Lower limit fault detection width	261
H535	1492	Load status detection signal delay time / load reference measurement waiting time	261
H881	690	Deceleration check time	130

♦ M: Item and output signal for monitoring

Parameters for the settings regarding the monitoring to check the inverter's operating status and the output signals for the monitoring.

Pr. group	Pr.	Name	Refer to page
M000	37	Speed display	268
M001	505	Speed setting reference	268
M003	53	Frequency / rotation speed unit switchover	268
M020	170	Watt-hour meter clear	270
M021	563	Energization time carrying- over times	270
M022	268	Monitor decimal digits selection	270
M023	891	Cumulative power monitor digit shifted times	270, 286
M030	171	Operation hour meter clear	270

Pr. group	Pr.	Name	Refer to page
M031	564	Operating time carrying-over times	270
M040	55 ^{*3}	Frequency monitoring reference	279
M041	56 ^{*3}	Current monitoring reference	279
M042	866	Torque monitoring reference	270
M043	241	Analog input display unit switchover	318
M044	290	Monitor negative output selection	270, 279
M050	1106	Torque monitor filter	270
M051	1107	Running speed monitor filter	270
M052	1108	Excitation current monitor filter	270
M100	52	Operation panel main monitor selection	270
M101	774	Operation panel monitor selection 1	270
M102	775	Operation panel monitor selection 2	270
M103	776	Operation panel monitor selection 3	270
M104	992	Operation panel setting dial push monitor selection [E800]	270
M200	892	Load factor	286
M201	893	Energy saving monitor reference (motor capacity)	286
M202	894	Control selection during commercial power-supply operation	286
M203	895	Power saving rate reference value	286
M204	896	Power unit cost	286
M205	897	Power saving monitor average time	286
M206	898	Power saving cumulative monitor clear	286
M207	899	Operation time rate (estimated value)	286
M300	54	FM terminal function selection [E800-1]	279
M301	158	AM terminal function selection [E800-4][E800-5]	279
M310	C0 (900)*2	FM terminal calibration [E800-1]	283
M320	C1 (901)* ²	AM terminal calibration [E800-4][E800-5]	283
M321	867	AM output filter [E800-4][E800-5]	283
M390	1200	AM output offset calibration [E800-4][E800-5]	283
M400	190	RUN terminal function selection	292
M404	191	FU terminal function selection	292
M405	192	ABC terminal function selection	292
M410	313 ^{*5}	DO0 output selection	292
M411	314 ^{*5}	DO1 output selection	292
M412	315 ^{*5}	DO2 output selection	292
M413	316 ^{*5}	DO3 output selection	292
M414	317 ^{*5}	DO4 output selection	292

Pr. group	Pr.	Name	Refer to page
M415	318 ^{*5}	DO5 output selection	292
M416	319 ^{*5}	DO6 output selection	292
M420	320 ^{*5}	RA1 output selection	292
M421	321 ^{*5}	RA2 output selection	292
M422	322 ^{*5}	RA3 output selection	292
M430	157	OL signal output timer	114, 256
M431	289	Inverter output terminal filter	292
M433	166	Output current detection signal retention time	304
M440	870	Speed detection hysteresis	301
M441	41	Up-to-frequency sensitivity	301
M442	42	Output frequency detection	301
M443	43	Output frequency detection for reverse rotation	301
M446	865	Low speed detection	301
M451	193	NET Y1 output selection	292
M452	194	NET Y2 output selection	292
M453	195	NET Y3 output selection	292
M454	196	NET Y4 output selection	292
M460	150	Output current detection level	304
M461	151	Output current detection signal delay time	304
M462	152	Zero current detection level	304
M463	153	Zero current detection time	304
M464	167	Output current detection operation selection	304
M470	864	Torque detection	306

♦ T: Multi-function input terminal parameters

Parameters for the setting of the input terminals via which commands are given to the inverter.

Pr. group	Pr.	Name	Refer to page
T000	73	Analog input selection	310
T001	267	Terminal 4 input selection	310
T002	74	Input filter time constant	316
T003	822	Speed setting filter 1	316
T004	826	Torque setting filter 1	316
T005	832	Speed setting filter 2	316
T006	836	Torque setting filter 2	316
T007	849	Analog input offset adjustment	316
T022	125	Terminal 2 frequency setting gain frequency Simple	318
T040	858	Terminal 4 function assignment	114, 256, 315
T042	126	Terminal 4 frequency setting gain frequency <u>Simple</u>	318
T200	C2 (902) ^{*2}	Terminal 2 frequency setting bias frequency	318
T201	C3 (902) ^{*2}	Terminal 2 frequency setting bias	318
T202	125 (903) ^{*2}	Terminal 2 frequency setting gain frequency	318

Pr. group	Pr.	Name	Refer to page
T203	C4 (903) ^{*2}	Terminal 2 frequency setting	318
T400	C5 (904)*2	Terminal 4 frequency setting bias frequency	318
T401	C6 (904)*2	Terminal 4 frequency setting bias	318
T402	126 (905)* ²	Terminal 4 frequency setting gain frequency	318
T403	C7 (905)*2	Terminal 4 frequency setting gain	318
T410	C38 (932)*2	Terminal 4 bias command (torque/magnetic flux)	318
T411	C39 (932) ^{*2}	Terminal 4 bias (torque/ magnetic flux)	318
T412	C40 (933)*2	Terminal 4 gain command (torque/magnetic flux)	318
T413	C41 (933) ^{*2}	Terminal 4 gain (torque/ magnetic flux)	323
T700	178	STF/DI0 terminal function selection	328
T701	179	STR/DI1 terminal function selection	328
T702	180	RL terminal function selection	328
T703	181	RM terminal function selection	328
T704	182	RH terminal function selection	328
T709	183	MRS terminal function selection	328
T711	184	RES terminal function selection	328
T720	17	MRS/X10 terminal input selection	332
T740	699	Input terminal filter	328
T751	185	NET X1 input selection	328
T752	186	NET X2 input selection	328
T753	187	NET X3 input selection	328
T754	188	NET X4 input selection	328
T755	189	NET X5 input selection	328

♦ C: Motor constant parameters

Parameters for the applied motor setting.

Pr. group	Pr.	Name	Refer to page
C100	71	Applied motor	340, 345, 355
C101	80	Motor capacity	97, 345, 355
C102	81	Number of motor poles	97, 345, 355
C103	9	Rated motor current(Simple)	238, 345, 355
C104	83	Rated motor voltage	97, 345, 355
C105	84	Rated motor frequency	97, 345, 355
C106	702	Maximum motor frequency	355
C107	707	Motor inertia (integer)	355

Pr. group	Pr.	Name	Refer
			to page
C108	724	Motor inertia (exponent)	355
C110	96	Auto tuning setting/status	345, 355,
0110	00	Auto turning souring/status	410
C111	95	Online auto tuning selection	362
C114	880	Load inertia ratio	121,
C114	000	Load Inertia ratio	124
C120	90	Motor constant (R1)	345, 355, 410
C121	91	Motor constant (R2)	345
0400	00	Motor constant (L1)/d-axis	345,
C122	92	inductance (Ld)	355
C123	93	Motor constant (L2)/q-axis	345,
2121		inductance (Lq)	355
C124	94	Motor constant (X)	345
C125	82	Motor excitation current	345
C126	859	Torque current/Rated PM motor current	345, 355
		Induced voltage constant (phi	
C130	706	f)	355
C131	711	Motor Ld decay ratio	355
C132	712	Motor Lq decay ratio	355
C133	725	Motor protection current level	355
C135	1412	Motor induced voltage constant (phi f) exponent	355
C140	369 ^{*1}	Number of encoder pulses	365, 450
C141	359 ^{*1}	Encoder rotation direction	365, 450
C148	376 ^{*1}	Encoder signal loss detection enable/disable selection	368, 450
C150	1002	Lq tuning target current adjustment coefficient	355
C182	717	Starting resistance tuning compensation coefficient 1 Starting magnetic pole	355
C185	721	position detection pulse width Starting resistance tuning	355
C188	720 450	compensation coefficient Second applied motor	345
			345.
C201	453	Second motor capacity	355
C202	454	Number of second motor poles	345,
		·	355
C203	51	Rated second motor current	238, 345,
5230	٠.	Tatou occonu motor current	355
C204	456	Poted accord mater valte ::-	345,
0204	+50	Rated second motor voltage	355
C205	457	Rated second motor frequency	345, 355
C206	743	Second motor maximum frequency	355
C207	744	Second motor inertia (integer)	355
C208	745	Second motor inertia (exponent)	355
C210	463	Second motor auto tuning	345,
6210	403	setting/status	355, 410
C211	574	Second motor online auto tuning	362

Pr. group	Pr.	Name	Refer
Pr. group	PI.	Name	to page
C220	458	Second motor constant (R1)	345, 355, 410
C221	459	Second motor constant (R2)	345
C222	460	Second motor constant (L1) / d-axis inductance (Ld)	345, 355
C223	461	Second motor constant (L2) / q-axis inductance (Lq)	345, 355
C224	462	Second motor constant (X)	345
C225	455	Second motor excitation current	345
C226	860	Second motor torque current/ Rated PM motor current	345, 355
C230	738	Second motor induced voltage constant (phi f)	355
C231	739	Second motor Ld decay ratio	355
C232	740	Second motor Lq decay ratio	355
C233	746	Second motor protection current level	355
C235	1413	Second motor induced voltage constant (phi f) exponent	355
C282	741	Second motor starting resistance tuning compensation coefficient 1	355
C285	742	Second motor magnetic pole detection pulse width	355
C288	737	Starting resistance tuning compensation coefficient 2	355

♦ A: Application parameters

Parameters for the setting of a specific application.

Pr. group	Pr.	Name	Refer to page
A100	278	Brake opening frequency	370
A101	279	Brake opening current	370
A102	280	Brake opening current detection time	370
A103	281	Brake operation time at start	370
A104	282	Brake operation frequency	370
A105	283	Brake operation time at stop	370
A106	284	Deceleration detection function selection	370
A107	285	Overspeed detection frequency	370, 450
A108	639	Brake opening current selection	370
A109	640	Brake operation frequency selection	370
A110	292	Automatic acceleration/ deceleration	209, 370
A200	270	Stop-on-contact control selection	375
A205	275	Stop-on contact excitation current low-speed scaling factor	375
A206	276	PWM carrier frequency at stop- on contact	375
A300	592	Traverse function selection	378
A301	593	Maximum amplitude amount	378
A302	594	Amplitude compensation amount during deceleration	378

Pr. group	Pr.	Name	Refer
		Amplitude compensation	to page
A303	595	amount during acceleration	378
A304	596	Amplitude acceleration time	378
A305	597	Amplitude deceleration time	378
A600	759	PID unit selection	393
A601	131	PID upper limit	380, 396
A602	132	PID lower limit	380, 396
A603	553	PID deviation limit	380
A604	554	PID signal operation selection	380
A607	1015	Integral stop selection at limited frequency	380
A610	128	PID action selection	380, 396
A611	133	PID action set point	380, 396
A612	127	PID control automatic switchover frequency	380
A613	129	PID proportional band	380, 396
A614	130	PID integral time	380, 396
A615	134	PID differential time	380, 396
A621	575	Output interruption detection time	380
A622	576	Output interruption detection level	380
A623	577	Output interruption cancel level	380
A624	609	PID set point/deviation input selection	380, 396
A625	610	PID measured value input selection	380, 396
A630	C42 (934) ^{*2}	PID display bias coefficient	393
A631	C43 (934) ^{*2}	PID display bias analog value	393
A632	C44 (935) ^{*2}	PID display gain coefficient	393
A633	C45 (935) ^{*2}	PID display gain analog value	393
		Automatic restart after	403,
A700	162	instantaneous power failure selection	408, 410
A701	299	Rotation direction detection selection at restarting	403
A702	57	Restart coasting time	403, 408
A703	58	Restart cushion time	403
A710	165	Stall prevention operation level for restart	403
A711	298	Frequency search gain	345, 410
A712	560	Second frequency search gain	345, 410
A730	261	Power failure stop selection	414
A800	414	PLC function operation selection	416
A801	415	Inverter operation lock mode setting	416

Pr. group	Pr.	Name	Refer
Pr. group	Pr.	Name	to page
A804	498	PLC function flash memory clear	416
A805	675	User parameter auto storage function selection	416
A810 to A859	1150 to 1199	PLC function user parameters 1 to 50	416
A900	1020	Trace operation selection	418
A902	1022	Sampling cycle	418
A903	1023	Number of analog channels	418
A904	1024	Sampling auto start	418
A905	1025	Trigger mode selection	418
A906	1026	Number of sampling before trigger	418
A910	1027	Analog source selection (1ch)	418
A911	1028	Analog source selection (2ch)	418
A912	1029	Analog source selection (3ch)	418
A913	1030	Analog source selection (4ch)	418
A914	1031	Analog source selection (5ch)	418
A915	1032	Analog source selection (6ch)	418
A916	1033	Analog source selection (7ch)	418
A917	1034	Analog source selection (8ch)	418
A918	1035	Analog trigger channel	418
A919	1036	Analog trigger operation selection	418
A920	1037	Analog trigger level	418
A930	1038	Digital source selection (1ch)	418
A931	1039	Digital source selection (2ch)	418
A932	1040	Digital source selection (3ch)	418
A933	1041	Digital source selection (4ch)	418
A934	1042	Digital source selection (5ch)	418
A935	1043	Digital source selection (6ch)	418
A936	1044	Digital source selection (7ch)	418
A937	1045	Digital source selection (8ch)	418
A938	1046	Digital trigger channel	418
A939	1047	Digital trigger operation selection	418

♦ B: Position control parameters

Parameters for the position control setting.

Pr. group	Pr.	Name	Refer to page
B003	422	Position control gain	434

♦ N: Communication operation parameters

Parameters for the setting of communication operation such as the communication specifications or operating characteristics.

Pr. group	Pr.	Name	Refer to page
N000	549	Protocol selection	*4
N001	342	Communication EEPROM write selection	*4
N010	349 ^{*6}	Communication reset selection	*4
N013	502	Stop mode selection at communication error	*4

Pr. group	Pr.	Name	Refer to page
N014	779	Operation frequency during communication error	*4
N020	117	PU communication station	*4
N021	118	PU communication speed *4	
N022	119	PU communication data length	*4
N023	119	PU communication stop bit length	*4
N024	120	PU communication parity check	*4
N025	121	PU communication retry count	*4
N026	122	PU communication check time interval	*4
N027	123	PU communication waiting time setting	*4
N028	124	PU communication CR/LF selection	*4
N040	547	USB communication station number	*4
N041	548	USB communication check time interval	*4
N052	728	Device instance number (Upper 3 digits) [E800- (SC)EPA]	*4
N053	729	Device instance number (Lower 4 digits) [E800- (SC)EPA]	*4
N054	390	% setting reference frequency [E800-(SC)EPA]	*4
N080	343	Communication error count	*4
N100	541	Frequency command sign selection [E800-(SC)E]	*4
N103	544	CC-Link extended setting [E800-(SC)E]	*4
N600	1434	IP address 1 (Ethernet) [E800-(SC)E]	*4
N601	1435	IP address 2 (Ethernet) [E800-(SC)E]	*4
N602	1436	IP address 3 (Ethernet) [E800-(SC)E]	*4
N603	1437	IP address 4 (Ethernet) [E800-(SC)E]	*4
N610	1438	Subnet mask 1 [E800-(SC)E]	*4
N611	1439	Subnet mask 2 [E800-(SC)E]	*4
N612	1440	Subnet mask 3 [E800-(SC)E]	*4
N613	1441	Subnet mask 4 [E800-(SC)E]	*4
N620	442	Default gateway address 1 [E800-(SC)E]	*4
N621	443	Default gateway address 2 [E800-(SC)E]	*4
N622	444	Default gateway address 3 [E800-(SC)E]	*4
N623	445	Default gateway address 4 [E800-(SC)E]	*4
N630	1427	Ethernet function selection 1 [E800-(SC)E]	*4
N631	1428	Ethernet function selection 2 [E800-(SC)E]	*4
N632	1429	Ethernet function selection 3 [E800-(SC)E]	*4
N633	1430	Ethernet function selection 4 [E800-(SC)E]	*4

Pr. group	Pr.	Name	Refer to page	
N641	1426	Link speed and duplex mode selection [E800-(SC)E]	*4	
N642	1455	Keepalive time [E800-(SC)E]	*4	
N643	1431	Ethernet signal loss detection function selection [E800- (SC)E]	*4	
N644	1432	Ethernet communication check time interval [E800- (SC)E]	*4	
N647	1456	Network diagnosis selection [E800-(SC)E]	*4	
N648	1457	Extended setting for Ethernet signal loss detection function selection [E800-(SC)E]	*4	
N649	1399	Inverter identification enable/ disable selection [E800-(SC)E]	*4	
N650	1424	Ethernet communication network number [E800-(SC)E]	*4	
N651	1425	Ethernet communication station number [E800-(SC)E]	*4	
N660	1442	IP filter address 1 (Ethernet) [E800-(SC)E]	*4	
N661	1443	IP filter address 2 (Ethernet) [E800-(SC)E]	*4	
N662	1444	IP filter address 3 (Ethernet) [E800-(SC)E]	*4	
N663	1445	IP filter address 4 (Ethernet) [E800-(SC)E]	*4	
N664	1446	IP filter address 2 range specification (Ethernet) [E800-(SC)E]	*4	
N665	1447	IP filter address 3 range specification (Ethernet) [E800- (SC)E]	*4	
N666	1448	IP filter address 4 range specification (Ethernet) [E800- (SC)E]	*4	
N670	1449	Ethernet command source selection IP address 1 [E800- (SC)E]	*4	
N671	1450	Ethernet command source selection IP address 2 [E800- (SC)E]	*4	
N672	1451	Ethernet command source selection IP address 3 [E800- (SC)E]	*4	
N673	1452	Ethernet command source selection IP address 4 [E800- (SC)E]	*4	
N674	1453	Ethernet command source selection IP address 3 range specification [E800-(SC)E]	*4	
N675	1454	Ethernet command source selection IP address 4 range specification [E800-(SC)E]	*4	
N681	1124	Station number in inverter-to- inverter link [E800-(SC)E]	*4	
N682	1125	Number of inverters in inverter-to-inverter link system [E800-(SC)E]	*4	

♦ (G) Control parameters

Parameters for motor control.

Pr. group	Pr.	Name	Refer to page
G000	0	Torque boostSimple	426
G001	3	Base frequency Simple	428
G002	19	Base frequency voltage	428
G003	14	Load pattern selection	430
G010	46	Second torque boost	426
G011	47	Second V/F (base frequency)	428
G030	60	Energy saving control selection	432
G060	673	SF-PR slip amount adjustment operation selection [200/400 V class]	433
G061	674	SF-PR slip amount adjustment gain [200/400 V class]	433
G100	10	DC injection brake operation frequency	434
G101	11	DC injection brake operation time	434
G102	802	Pre-excitation selection	434
G103	850	Brake operation selection	434
G106	250	Stop selection	440
G107	70	Special regenerative brake duty	442
G110	12	DC injection brake operation voltage	434
G120	882	Regeneration avoidance operation selection	446
G121	883	Regeneration avoidance operation level	446
G123	885	Regeneration avoidance compensation frequency limit value	446
G124	886	Regeneration avoidance voltage gain	446
G125	665	Regeneration avoidance frequency gain	446
G200	800	Control method selection	97
G203	245	Rated slip	449
G204	246	Slip compensation time constant	449
G205	247	Constant output range slip compensation selection	449
G210	803	Constant output range torque characteristic selection	114, 143
G211	820	Speed control P gain 1	121
G212	821	Speed control integral time 1	121
G213	824	Torque control P gain 1 (current loop proportional gain)	149
G214	825	Torque control integral time 1 (current loop integral time)	149
G215	823 ^{*1}	Speed detection filter 1	154
G217	854	Excitation ratio	155
G220	877	Speed feed forward control/ model adaptive speed control selection	124
G221	878	Speed feed forward filter	124
G222	879	Speed feed forward torque limit	124
G223	881	Speed feed forward gain	124

Pr. group	Pr.	Name	Refer to page
G224	828	Model speed control gain	124
G230	840	Torque bias selection	126
G231	841	Torque bias 1	126
G232	842	Torque bias 2	126
G233	843	Torque bias 3	126
G234	844	Torque bias filter	126
G235	845	Torque bias operation time	126
G236	846	Torque bias balance compensation	126
G237	847	Fall-time torque bias terminal 4 bias	126
G238	848	Fall-time torque bias terminal 4 gain	126
G240	367 ^{*1}	Speed feedback range	450
G241	368 ^{*1}	Feedback gain	450
G300	451	Second motor control method selection	97
G311	830	Speed control P gain 2	121
G312	831	Speed control integral time 2	121
G313	834	Torque control P gain 2 (current loop proportional gain)	149
G314	835	Torque control integral time 2 (current loop integral time)	149
G315	833 ^{*1}	Speed detection filter 2	154
G400	286	Droop gain	452
G401	287	Droop filter time constant	452
G410	653	Speed smoothing control	453
G411	654	Speed smoothing cutoff frequency	453
G932	89	Speed control gain (Advanced magnetic flux vector)	102
G942	569	Second motor speed control gain	102

- *1 The setting is available when a plug-in option for Vector control is installed.
- *2 On the LCD operation panel used as the command source, the parameter number in parentheses appears instead of that starting with the letter C.
- *3 For the Ethernet model and the safety communication model, the setting is available only when the FR-A8AY is installed.
- *4 For details, refer to the Instruction Manual (Communication).
- *5 Available when the PLC function is enabled. (Pr.313 to Pr.315 are always available for settings in the Ethernet model and the safety communication model.)
- *6 For the standard model, the setting is available only when a communication option is installed.
- *7 For details, refer to the FR-E800-SCE Instruction Manual (Functional Safety).

MEMO

CHAPTER 4 Control Method

4.1	Vector control and Real sensorless vector control	94
4.2	Changing the control method and mode	97
4.3	Selecting the Advanced magnetic flux vector control	102
4.4	Selecting the PM sensorless vector control	104

4 Control Method

V/F control (initial setting), Advanced magnetic flux vector control, Real sensorless vector control, and PM sensorless vector control are available with this inverter.

♦ V/F control

The inverter controls the output frequency (F) and the output voltage (V) so that the ratio of frequency to voltage (V/F) is kept constant when the frequency is changed.

Advanced magnetic flux vector control

The inverter performs vector calculation and divide its output current into the excitation current and the torque current. The inverter compensates the frequency and the voltage to output a current that meets the load torque to the motor, which improves the motor torque at low speed. The output frequency is further compensated (slip compensation) to bring the actual motor speed closer to the commanded speed. This control method is useful when the load fluctuates are severe.



- Advanced magnetic flux vector control requires the following conditions.
 If these conditions are not satisfied, select V/F control. Otherwise, malfunctions such as insufficient torque, uneven rotation may occur.
- For the motor capacity, the rated motor current should be equal to or less than the rated inverter current. (Note that the motor rated current should be 0.4 kW or higher (0.1 kW or higher for the 200 V class).)
 If a motor with substantially low rated current compared with the inverter rated current is used, speed and torque accuracies may deteriorate due to torque ripples, etc. Set the rated motor current to about 40% or higher of the inverter rated current.
- · The motor described in the following table is used.

Motor	Condition
Mitsubishi Electric standard efficiency motor (SF-JR)	
Mitsubishi Electric high-efficiency motor (SF-HR)	
Mitsubishi Electric constant-torque motor (SF-JRCA 4P, SF-HRCA)	Offline auto tuning is not required.
Mitsubishi Electric high-performance energy-saving motor (SF-PR)	
Mitsubishi Electric geared motor (constant-torque) (GM-[])	
Other motors (other manufactures' motors)	Offline auto tuning is required.

- Single-motor operation (one motor to one inverter) is performed.
- The wiring length from inverter to motor is 30 m or less. (When the wiring length exceeds 30 m, perform offline auto tuning with the wiring in place.)

◆ Real sensorless vector control

- As the inverter estimates the motor speed and controls the output current more accurately, a high-level control of the speed and the torque is enabled. Select Real sensorless vector control for a high-accuracy, fast-response control. The offline auto tuning is required initially.
- · This control method is useful for the following purposes:
 - To minimize the speed fluctuation even at a severe load fluctuation
 - To generate a low speed torque
 - To prevent machine from damage due to a too large torque (To set the torque limit)
 - To control the torque



- Real sensorless vector control requires the following conditions.

 If these conditions are not satisfied, select V/F control. Otherwise, malfunctions such as insufficient torque, uneven rotation may occur.
- For the motor capacity, the rated motor current should be equal to or less than the rated inverter current. (Note that the motor rated current should be 0.4 kW or higher (0.1 kW or higher for the 200 V class).)
 - If a motor with substantially low rated current compared with the inverter rated current is used, speed and torque accuracies may deteriorate due to torque ripples, etc. Set the rated motor current to about 40% or higher of the inverter rated current.
- · Offline auto tuning is performed.
 - Offline auto tuning is required under Real sensorless vector control even when the Mitsubishi Electric motor is used since the wiring length affects the operation.
- Single-motor operation (one motor to one inverter) is performed.
- A surge voltage suppression filter (FR-ASF/FR-BMF) is not used.

Vector control

- With a vector control option (FR-A8AP E kit) installed, full-scale vector control operation of a motor with an encoder can be performed. Speed control (zero speed control, servo lock) and torque control can be performed with fast response and high accuracy.
- Vector control has excellent control characteristic compared to other control methods such as V/F control. Its control characteristic is equal to those of DC machines.
- This control method is useful for the following purposes:
 - To minimize the speed fluctuation even at a severe load fluctuation
 - To generate a low speed torque
 - To prevent machine from damage due to a too large torque (To set the torque limit)
 - To control the torque
 - To control a torque generated in a motor in a servo-lock state (the motor with its shaft stopped)



• A vector control option (FR-A8AP E kit) needs to be installed to perform Vector control. The FR-A8AP E kit cannot be used with another plug-in option, as two or more plug-in options cannot be installed to the FR-E800 inverter at the same time. The following networks are not available when the inverter is under Vector control.

Model	Unavailable network
1 EB-E800	CC-Link, DeviceNet, PROFIBUS-DP, CC-Link IE TSN, CC-Link IE Field Network Basic, MODBUS/TCP, EtherNet/IP, BACnet/IP, and PROFINET
FR-E800-E, FR-E800-SCE	CC-Link, DeviceNet, PROFIBUS-DP, Mitsubishi inverter protocol (computer link communication), MODBUS RTU


- Vector control requires the following conditions.
 - When the conditions are not satisfied, malfunctions such as insufficient torque, uneven rotation may occur.
- The rated motor current should be equal to or less than the inverter rated current.
 If a motor with substantially low rated current compared with the inverter rated current is used, speed and torque accuracies may deteriorate due to torque ripples, etc. Set the rated motor current to about 40% or higher of the inverter rated current.
- · Torque control is not available for a PM motor.
- · The motor described in the following table is used.

Motor	Condition
Mitsubishi Electric high-performance energy-saving motor with encoder (SF-PR-SC)	
Mitsubishi Electric Vector control dedicated motor (SF-V5RU (1500 r/min series))	
Mitsubishi Electric inverter-driven geared motor for encoder feedback control (GM-DP)	The offline auto tuning is not required.
Mitsubishi Electric standard efficiency motor with encoder (SF-JR)	
Mitsubishi Electric high-efficiency motor with encoder (SF-HR)	
Mitsubishi Electric constant-torque motor with encoder (SF-JRCA 4P, SF-HRCA)	
Mitsubishi Electric inverter-driven geared motor for encoder feedback control (GM-DZ)	The offline auto tuning is required.
Other motors (motors other than SF-V5RU 1500 r/min series, other manufactures' motors, etc.)	The online auto turning is required.

- · Single-motor operation (one motor to one inverter) is performed.
- The wiring length from inverter to motor is 30 m or less. (When the wiring length exceeds 30 m, perform offline auto tuning with the wiring in place.)
- A surge voltage suppression filter (FR-ASF/FR-BMF) is not used.

PM sensorless vector control

- The inverter enables highly efficient motor control and highly accurate motor speed control of a PM (permanent magnet embedded) motor, which is more efficient than an induction motor.
- A speed detector such as an encoder is not required as the inverter estimates the motor speed by the calculation from the
 inverter output voltage and current. The inverter drives the PM motor with the least required current for a load in order to
 achieve the highest motor efficiency.

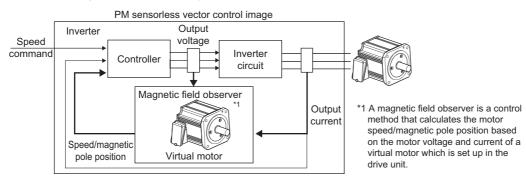




- The PM sensorless vector control requires the following conditions.
- For the motor capacity, the rated motor current should be equal to or less than the rated inverter current. (Note that the motor rated current should be 0.4 kW or higher (0.1 kW or higher for the 200 V class).)
 - If a motor with substantially low rated current compared with the inverter rated current is used, speed and torque accuracies may deteriorate due to torque ripples, etc. Set the rated motor current to about 40% or higher of the inverter rated current.
- Offline auto tuning is performed.
- Single-motor operation (one motor to one inverter) is performed.
- The overall wiring length with the motor must be 100 m or less. (For the wiring length, refer to the Instruction Manual (Connection).)
- A surge voltage suppression filter (FR-ASF/FR-BMF) is not used.


4.1 Vector control and Real sensorless vector control

Vector control is one of the control techniques for driving an induction motor. To help explain Vector control, the fundamental equivalent circuit of an induction motor is shown below.

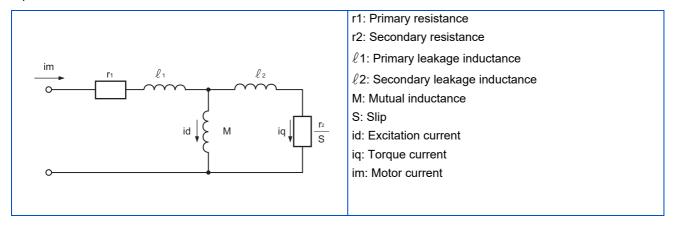

In the above diagram, currents flowing in the induction motor can be classified into a current id (excitation current) for making a magnetic flux in the motor and a current iq (torque current) for causing the motor to develop torque.

In Vector control, the voltage and output frequency are calculated to control the motor so that the excitation current and torque current flow to the optimum as described below:

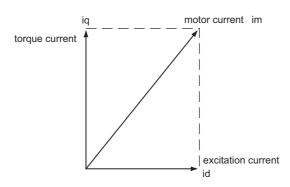

- The excitation current is controlled to place the internal magnetic flux of the motor in the optimum status.
- The torque command value is derived so that the difference between the motor speed command and the actual speed (speed estimated value for Real sensorless vector control) obtained from the encoder connected to the motor shaft is zero.
 Torque current is controlled so that torque as set in the torque command is developed.

Motor-generated torque (TM), slip angular velocity (ω s) and the motor's secondary magnetic flux (Φ 2) can be found by the following calculation:

TM
$$\propto \Phi 2 \cdot iq$$

$$\Phi 2 = M \cdot id$$

$$\omega s = \frac{r2}{L2} \cdot \frac{iq}{id}$$

where, L2: secondary inductance


$$L2 = \ell 2 + M$$


Vector control provides the following advantages:

• Vector control has excellent control characteristic compared to V/F control and other controls. The control characteristic of the Vector control is equal to those of DC machines.

- It is applicable to fast response applications with which induction motors were previously regarded as difficult to use. Applications requiring a wide variable-speed range from extremely low speed to high speed, frequent acceleration/ deceleration operations, continuous four-quadrant operations, etc.
- Torque control is enabled (when an induction motor is used).
- It allows servo-lock torque control which generates a torque in the motor shaft while stopped. (Not available under Real sensorless vector control.)

Block diagram of Real sensorless vector control

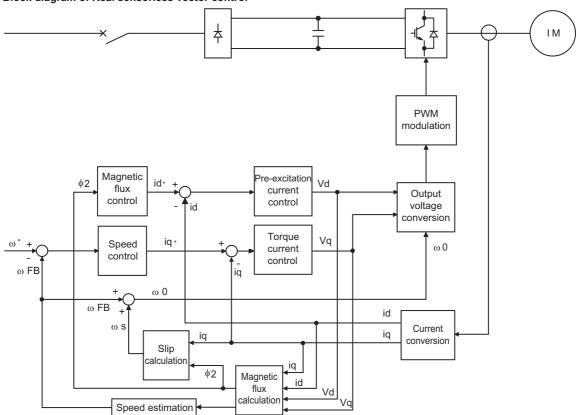

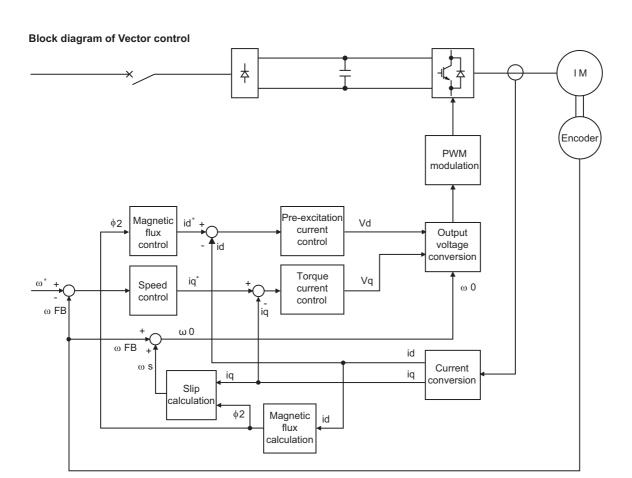

Speed control	Speed control operation is performed to zero the difference between the speed command (ω^*) and actual rotation value detected by encoder (ωFB) . At this time, the motor load is found and its result is transferred to the torque current controller as a torque current command (iq^*) .
Torque current control	A voltage (Vq) is calculated to flow a current (iq) which is identical to the torque current command (iq*) found by the speed controller.
Magnetic flux control	The magnetic flux $(\Phi 2)$ of the motor is derived from the excitation current (id). The excitation current command (id*) is calculated to use that motor magnetic flux $(\Phi 2)$ as a predetermined magnetic flux.
Excitation current control	A voltage (Vd) is calculated to flow a current (id) which is identical to the excitation current command (id*).
Output frequency calculation	Motor slip (ω s) is calculated on the basis of the torque current value (iq) and magnetic flux (Φ 2). The output frequency (ω 0) is found by adding that slip (ω s) to the feedback (ω FB) found by a feedback from the encoder.

The above results are used to make PWM modulation and run the motor.

4.2 Changing the control method and mode

Set the control method and the control mode.

V/F control, Advanced magnetic flux vector control, Real sensorless vector control, Vector control, and PM sensorless vector control are available.

The available control modes are speed control and torque control modes.

- · Select a control method and a control mode by setting Pr.800 (Pr.451) Control method selection.
- The control mode can be switched using a mode switching signal (MC).

Pr.	Name	Initial value	Setting range	Description
71 C100	Applied motor	0	0, 3, 5, 6, 10, 13, 15, 16, 20, 23, 30, 33, 40, 43, 50, 53, 70, 73, 1800, 1803, 8090, 8093, 9090, 9093 ^{*1}	By selecting a standard motor or constant-torque motor, the thermal characteristic and motor constant of each motor are set.
80 C101	Motor capacity	9999	0.1 to 30 kW 9999	Set the applied motor capacity. No motor capacity setting
81 C102	Number of motor poles	9999	2, 4, 6, 8, 10, 12 9999	Set the number of motor poles. No number of motor poles setting
83 C104	Rated motor voltage	200/400/575 V ^{*2}	0 to 1000 V	Set the rated motor voltage (V).
84 C105	Rated motor frequency	9999	10 to 400 Hz 9999	Set the rated motor frequency (Hz). The setting value of Pr.3 Base frequency is used.*3
800 G200 Control method sel			0 to 2 9	Vector control Vector control test operation Real sensorless vector control / PM sensorless vector
	Control method selection	hod selection 40	11, 12 19 20	control Real sensorless vector control PM sensorless vector control test operation Advanced magnetic flux vector control
			10	V/F control Real sensorless vector control / PM sensorless vector control
451 G300	Second motor control method selection	9999	11, 12 20 40	Real sensorless vector control Advanced magnetic flux vector control V/F control
			9999	Control selected in Pr.800

- *1 The setting range for the 575 V class is "0, 3, 5, 6, 10, 13, 15, 16, 30, 33, 8090, 8093, 9090, and 9093".
- *2 The initial value differs according to the inverter's voltage class (200/400/575 V).
- *3 The inverter internal data is used under PM sensorless vector control.

◆ Setting the motor capacity and the number of motor poles (Pr.80, Pr.81)

- Motor specifications (the motor capacity and the number of motor poles) must be set to select Advanced magnetic flux vector control, Real sensorless vector control, or PM sensorless vector control.
- Set the motor capacity (kW) in Pr.80 Motor capacity and set the number of motor poles in Pr.81 Number of motor poles.

◆ Selection of the control method and the control mode

 Select a control method (and a control mode) from V/F control, Advanced magnetic flux vector control (speed control), Real sensorless vector control (speed control), torque control), Vector control (speed control) and PM sensorless vector control (speed control). To enable the control method and the control mode selected in Pr.800 (Pr.451), the condition to start operation must be
satisfied as shown in the following table. Otherwise the operation does not start due to the setting error (SE) alarm when
the start signal is input.

				Condition to start operation		
Pr.800 setting	Pr.451 setting	Control method	Control mode	Pr.80 (Pr.453), Pr.81 (Pr.454) setting	Pr.71 (Pr.450)	MC signal
0	_		Speed control			_
1	_		Torque control		Induction motor	_
2	_	Vector control ³³	Speed control / torque control switchover			ON: Torque control OFF: Speed control
9	_	Vector control test operation				_
10		Real sensorless vector control / PM sensorless vector control	Speed control	Other than 9999	*1	_
11			Torque control			_
12		Real sensorless vector control	Speed control / torque control switchover	Induction motor	ON: Torque control OFF: Speed control	
19	_	PM sensorless vector control test	t operation		PM motor	_
120		Advanced magnetic flux vector control	Speed control		Induction	_
40 (initial value)	40	V/F control	_	_*2	motor	_
_	9999 (initial value)	Control method and control mode selected in Pr.800 (provided that they are selectable with Pr.451)		1)		

^{*1} The control method depends on the motor selected in **Pr.71** (**Pr.450**): Real sensorless vector control for the induction motor, and PM sensorless vector control for the PM motor.

◆ Automatic parameter setting by changing the Pr.800 setting

- The Pr.10 and Pr.22 settings are automatically changed when the control method is changed.
- When the control method is changed from V/F control or Advanced magnetic flux vector control to Vector control, the Pr.10 setting is automatically changed as follows.

Pr.	Setting value before change	Setting value after change		
10	3 Hz (initial value)	0.5 Hz		

When the control method is changed from Vector control to V/F control or Advanced magnetic flux vector control, the Pr.10 setting is automatically changed as follows.

Pr.	Setting value before change	Setting value after change	
10	0.5 Hz	3 Hz (initial value)	

When the control method is changed from V/F control or Advanced magnetic flux vector control to Real sensorless vector control or Vector control, the Pr.22 setting is automatically changed as follows (only for the ND rating in the FR-E820-0175(3.7K) or lower, FR-E840-0095(3.7K) or lower, FR-E860-0061(3.7K) or lower, and FR-E820S-0110(2.2K) or lower).

Pr.	Setting value before change	Setting value after change		
22	150% (initial setting)	200%		

When the control method is changed from Real sensorless vector control or Vector control to V/F control or Advanced magnetic flux vector control, the Pr.22 setting is automatically changed as follows (only for the ND rating in the FR-E820-0175(3.7K) or lower, FR-E840-0095(3.7K) or lower, FR-E860-0061(3.7K) or lower, and FR-E820S-0110(2.2K) or lower).

Pr.	Setting value before change	Setting value after change		
22	200%	150% (initial setting)		

^{*2} Operation can start regardless of the setting.

^{*3} A Vector control compatible option is required.

◆ Vector control test operation, PM sensorless vector control test operation (Pr.800 = "9 or 19")

A test operation for speed control is available without connecting a motor to the inverter.
 The speed calculation changes to track the speed command, and such speed changes can be checked on the operation panel or by outputting it as analog signals to terminal FM or AM.



- Since current is not detected and voltage is not output, monitors related to current and voltage such as output current and output voltage, etc. and output signals do not function.
- For speed calculation, speed is calculated in consideration of Pr.880 Load inertia ratio.

◆ I/O signal status during the test operation

· During the test operation, the following signals are disabled.

Input terminal function selection (Pr.178 to Pr.189)	Output terminal function selection (Pr.190 to Pr.196)
V/F SWICCOVER (X18) Control mode switchover (MC)	 Electronic thermal O/L relay pre-alarm (THP) Brake opening request (BOF) Start time tuning completion (Y39)

Parameters referred to

Pr.178 to Pr.189 (Input terminal function selection) ☞ page 328
Pr.190 to Pr.196 (Output terminal function selection) ☞ page 292

◆ Status of the monitoring during the test operation

- o: Enabled
- x: Disabled (0 is displayed at any time.)
- Δ : A cumulative total before the test operation is displayed.

-: Not available

Monitor item	Monitoring on the operation panel	Output via FM/AM
Output frequency	0	0
Output current	×	×
Output voltage	×	×
Fault indication	0	_
Frequency setting value	0	0
Motor speed	0	0
Motor torque	0	0
Converter output voltage	0	0
Brake duty	×	×
Electronic thermal O/L relay load factor	x*1	x*1
Output current peak value	x*1	x*1
Converter output voltage peak value	0	0
Output power	×	×
Load meter	×	×
Motor excitation current	×	×
Position pulse	×	_
Cumulative energization time	0	_
Reference voltage output	_	0
Actual operation time	0	_
Motor load factor	×	×
Cumulative energy	Δ	_
Commanded torque	o*4	o*4
Torque current command	o*4	o*4

Monitor item	Monitoring on the operation panel	Output via FM/AM
Feedback pulse	×	_
Trace status	0	_
User monitor 1	0	—
User monitor 2	0	_
User monitor 3	0	_
Communication station number (PU port)	0	_
Station number (CC-Link)	0	—
Energy saving effect	Δ*3	Δ*3
Cumulative energy saving	Δ	_
PID set point	0	0
PID measured value	0	0
PID deviation	0	_
Inverter I/O terminal monitor	0	_
Option input terminal monitor	0	_
Option output terminal monitor	0	_
Option input terminal monitor 1 (for communication)	0	_
Option input terminal monitor 2 (for communication)	0	_
Option output terminal monitor (for communication)	0	_
Motor thermal load factor	×	×
Inverter thermal load factor	o*2	o*2
PID measured value 2	0	0
PID manipulated variable	0	_
Dancer main speed setting	0	0

- *1 When the inverter operation is switched to the test operation, the indication is changed to 0. When PM sensorless vector control is selected again after the test operation, the output current peak value and the electronic thermal relay load factor from the last operation are displayed.
- *2 When the inverter operation is switched to the test operation, the accumulated thermal value is reduced because the output current is considered as 0.
- *3 During the test operation, only the average power saving, average power saving rate, and average power cost savings can be monitored.
- *4 Enabled under Vector control only.

Parameters referred to

Operation panel main monitor selection □ page 270
Pr.158 AM terminal function selection □ page 292

◆ Changing the control method with external terminals (RT signal, X18 signal)

- Control method (V/F control, Advanced magnetic flux vector control, Real sensorless vector control, Vector control) can be switched using external terminals.
 - The control method can be switched using either the Second function selection (RT) signal or the V/F switchover (X18) signal.
- Set the second motor in Pr.450 Second applied motor and set the second motor's control method in Pr.451 Second motor control method selection. Turning ON the RT signal or X18 signal enables the second function, enabling the switchover of the control method.

• To input the RT signal, set "3" in any parameter from Pr.178 to Pr.189 (Input terminal function selection) to assign the

To input the X18 signal, set "18" in any parameter from Pr.178 to Pr.189 (Input terminal function selection) to assign the function.

First motor control method	Second motor control method (RT/X18 signal-ON)	Pr.450 setting	Pr.453 to Pr.454 settings	Pr.451 setting
		9999	_	_
	V/F control	_	_	9999
		Induction motor	_	40
V/F control	Advanced magnetic flux vector control	Induction motor	044	20
	Real sensorless vector control		Other than 9999	10 to 12
	PM sensorless vector control IPM/SPM motor			10
		9999	_	_
Advanced magnetic flux vector control*1	Same control as the first motor*1	Same as Pr.71 setting	Other than 9999	Same as Pr.800 setting
Real sensorless vector control*1	V/F control	Induction motor	_	40
Vector control ^{*1} PM sensorless vector control	Advanced magnetic flux vector control	Induction motor	Other than 9999	20
	Real sensorless vector control			10 to 12
	PM sensorless vector control	IPM/SPM motor		10

^{*1} V/F control is set by turning ON the X18 signal.



- The RT signal is a second function selection signal. The RT signal also enables other second functions. (Refer to page 334.)
- When V/F control is set using the V/F switchover (X18) signal, the second functions are selected at the same time.
- The control method could be changed by external terminals (RT signal, X18 signal) while the inverter is stopped. If a signal is switched during the operation, the control method changes after the inverter stops.

◆ Changing the control mode with external terminals (MC signal)

• The setting of Pr.800 or Pr.451 can be used to switch the control mode by turning ON/OFF the MC signal. Refer to page 97 to set Pr.800 or Pr.451.

To input the MC signal, set "26" in any parameter from Pr.178 to Pr.189 (Input terminal function selection) to assign the function.

- · When using an analog input terminal (terminal 4) for torque limit and torque command, switching of the control mode changes the terminal function as follows:
- · Terminal 4 functions by control

Pr.858 setting	Speed control/torque control switchover (Pr.800 = "2 or 12")					
F1.000 Setting	Speed control (MC signal-OFF)	Torque control (MC signal-ON)				
0 (initial value)	Speed command (AU signal-ON)	Speed limit (AU signal-ON)				
4	Torque limit (Pr.810 = "1")	Torque command (Pr.804 = "0")				
6	Torque bias input (Pr.840 = "1, 2, or 3")	_				
9999	_	_				

—: No function



- · Switching between the speed control and the torque control is always enabled regardless of the motor status: in a stop, in running, or in DC injection brake (during pre-excitation).
- · Changing the terminal assignment using Pr.178 to Pr.189 (Input terminal function selection) may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.178 to Pr.189 (Input terminal function selection) F page 328

Pr.450 Second applied motor page 340

Pr.804 Torque command source selection ☐ page 143

Pr.807 Speed limit selection 3

Pr.810 Torque limit input method selection 🖙 page 114

4.3 Selecting the Advanced magnetic flux vector control

Magnetic flux



To use the Advanced magnetic flux vector control, select the control method using Pr.800, and the motor type and specification
using Pr.71, Pr.80, and Pr.81.

♦ Advanced magnetic flux vector control

Operating procedure

- **1.** Perform wiring properly. (Refer to the Instruction Manual (Connection).)
- **2.** Change the control method to Advanced magnetic flux vector control (**Pr.800** = "20").
- **3.** Make the motor setting (**Pr.71**).
- 200/400 V class

Motor	Pr.71 setting ^{*1}	Remarks	
	SF-JR	0 (initial value) (3)	
Mitsubishi Electric standard efficiency motor	SF-JR 4P 1.5 kW or lower	20	
Mitsubishi Electric high-efficiency motor	SF-HR	40	
	Others	0 (3)	Offline auto tuning is required.*2
	SF-JRCA 4P	10	
Mitsubishi Electric constant-torque motor	SF-HRCA	50	
	Other (SF-JRC, etc.)	10 (13)	Offline auto tuning is required.*2
Mitsubishi Electric high-performance energy- saving motor	SF-PR	70 (73)	
Mitsubishi Electric geared motor (constant-torque)	GM-[]	1800 (1803)	
Other manufacturer's standard motor	_	0 (3)	Offline auto tuning is required.*2
Other manufacturer's constant-torque motor	_	10 (13)	Offline auto tuning is required.*2

• 575 V class

Motor	Pr.71 setting ^{*1}	Remarks
Standard motor	0 (initial value) (3)	
Constant-torque motor	10	Offline auto tuning is required.*2
Other manufacturer's standard motor	0 (3)	Offline auto tuning is required.*2
Other manufacturer's constant-torque motor	10 (13)	Offline auto tuning is required.*2

- *1 For the other setting values of **Pr.71**, refer to page 340.
- *2 For offline auto tuning, refer to page 345.
- **4.** Set the motor overheat protection (**Pr.9**). (Refer to page 238.)
- **5.** Set the motor capacity and number of motor poles (**Pr.80**, **Pr.81**). (Refer to page 97.) Operation does not start when the setting value is "9999" (initial value).
- **6.** Set the rated motor voltage and frequency (**Pr.83**, **Pr.84**). (Refer to page 345.)
- 7. Set the operation command. (Refer to page 212.) Select the start command and speed command.
- **8.** Perform the test operation.

As required

- Perform the offline auto tuning (Pr.96). (Refer to page 345.)
- Select the online auto tuning (Pr.95). (Refer to page 362.)




- To perform driving in a better accuracy, perform offline auto tuning, then set the online auto tuning, and select Real sensorless vector control.
- · Under this control, rotations are more likely to be uneven than under V/F control. (This control method is not suitable for grinder, wrapping machine, etc., which require even rotation at a low speed.)
- · When the inverter is operated with a surge voltage suppression filter (FR-ASF-H/FR-BMF-H) installed between the inverter and the motor, the output torque may decrease.

Keeping the motor speed constant when the load fluctuates (speed control gain)

Pr.	Name	Initial value	Setting range	Description
89 G932	Speed control gain (Advanced magnetic flux vector)	9999	0% to 200%	Makes adjustments to keep the motor speed constant during variable load operation under Advanced magnetic flux vector control. The reference value is 100%.
	vector)		9999	The gain set by Pr.71 . (The gain set in accordance with the motor.)
569 G942	Second motor speed control gain	9999	0% to 200%	Makes adjustments to keep the second motor speed constant during variable load operation under Advanced magnetic flux vector control. The reference value is 100%.
			9999	The gain set by Pr.450 . (The gain set in accordance with the motor.)

• Use Pr.89 to keep the motor speed constant during variable load operation. (This parameter is useful to make adjustments on the motor speed after replacing a conventional model with an FR-E800 series model.)

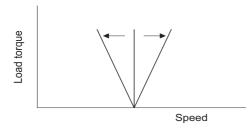

Driving two motors under Advanced magnetic flux vector control

- Turning ON the Second function selection (RT) signal enables the second motor operation.
- Set a second motor in Pr.450 Second applied motor. (In the initial setting, "9999" (no second applied motor) is selected. Refer to page 340.)

Function	RT signal-ON (second motor)	RT signal-OFF (first motor)
Applied motor	Pr.450	Pr.71
Motor capacity	Pr.453	Pr.80
Number of motor poles	Pr.454	Pr.81
Speed control gain (Advanced magnetic flux vector)	Pr.569	Pr.89
Control method selection	Pr.451	Pr.800

NOTE

- The RT signal is a Second function selection signal. The RT signal also enables other second functions. (Refer to page 334.) To input the RT signal, set "3" in any parameter from Pr.178 to Pr.189 (Input terminal function selection) to assign the
- · Changing the terminal assignment using Pr.178 to Pr.189 (Input terminal function selection) may affect the other functions. Set parameters after confirming the function of each terminal.

Pr.71, Pr.450 Applied motor page 340
Pr.800, Pr.451 Control method selection page 97

4.4 Selecting the PM sensorless vector control

PM

◆ Initializing the parameters required for the PM sensorless vector control (Pr.998)

- · Use PM parameter initialization to set the parameters required for driving a PM motor.
- Perform offline auto tuning before setting Pr.998. (Refer to page 345.)
- All the parameters required for PM motor control are automatically set by setting Pr.998 # "0".

Pr.	Name	Initial value	Setting range	Description			
		0	0	Parameter setting (in frequencies) for an induction motor	The setting of the motor parameters is changed to the setting required to drive an induction motor.		
			8009	Parameter setting (in rotations per minute) for an IPM motor (after tuning)	The setting of the motor parameters is changed to the setting required to drive an		
998 E430	PM parameter initialization		8109	Parameter setting (in frequencies) for an IPM motor (after tuning)	IPM motor. (Set Pr.71 Applied motor and perform offline auto tuning in advance. (Refer to page 355.))		
			9009	Parameter setting (in rotations per minute) for an SPM motor (after tuning)	The setting of the motor parameters is changed to the setting required to drive an		
			9109	Parameter setting (in frequencies) for an SPM motor (after tuning)	SPM motor. (Set Pr.71 Applied motor and perform offline auto tuning in advance. (Refer to page 355.))		

- To use a motor capacity that is one rank lower than the inverter capacity, set Pr.80 Motor capacity before performing PM
 parameter initialization.
- When "8009 or 9009" is set in **Pr.998**, the motor speed which was set/monitored in frequencies is set/monitored in motor rotations per minute. To use frequency to display or set, set **Pr.998** = "8109 or 9109".
- Set **Pr.998** = "0" to change the PM sensorless vector control parameter settings to the parameter settings required to drive an induction motor.

NOTE

- Make sure to set Pr.998 before setting other parameters. If the Pr.998 setting is changed after setting other parameters, some
 of those parameters are initialized too. (Refer to the "List of the target parameters for the motor parameter initialization".)
- · To change back to the parameter settings required to drive an induction motor, perform Parameter clear or All parameter clear.
- If the setting of **Pr.998 PM parameter initialization** is changed from "8009 or 9009 (rotations per minute)" to "8109 or 9109 (frequency)", all the relevant parameters are initialized.
 - The purpose of Pr.998 is not to change the display units. Use **Pr.53 Frequency / rotation speed unit switchover** to change the display units between rotations per minute and frequency. Using **Pr.53** enables switching the unit between rotations per minute and frequencies without initializing the setting of the motor parameters.
- The PM parameter initialization (**Pr.998**) changes parameter settings for the first motor. When a PM motor is used as the second motor, parameters for the second motor must be set individually.

♦ List of the target parameters for the motor parameter initialization

• The settings of the parameters in the following table are changed to the settings for PM sensorless vector control by performing the motor parameter initialization using **Pr.998 PM parameter initialization**. The changed settings differ according to the specification (capacity) of the PM motor used.

• Performing Parameter clear or All parameter clear resets these parameter settings to the settings required to drive an induction motor.

		Setting					
Pr.	Name	Induction motor		PM motor (rotations per minute)	PM motor (frequency)	Setting increments	
		0 (initia	l value) ^{*1}	8009, 9009	8109, 9109	8009, 0, 8109,	
		Gr.1	Gr.2	0009, 9009	6109, 9109	9009	9109
1	Maximum frequency	120 Hz		Maximum motor rotations per minute*3	Maximum motor frequency*3	1 r/min	0.01 Hz
4	Multi-speed setting (high speed)	60 Hz	50 Hz	Pr.84	Pr.84	1 r/min	0.01 Hz
9	Electronic thermal O/L relay	Inverter ra	ted current	_	_	0.01 A	0.01 A
13	Starting frequency	0.5 Hz		Pr.84 × 10%	Pr.84 × 10%	1 r/min	0.01 Hz
15	Jog frequency	5 Hz		Pr.84 × 10%	Pr.84 × 10%	1 r/min	0.01 Hz
20	Acceleration/deceleration reference frequency	60 Hz	50 Hz	Pr.84	Pr.84	1 r/min	0.01 Hz
22	Stall prevention operation level	150% ^{*2}		150% ^{*2}	150% ^{*2}	0.1%	0.1%
53	Frequency / rotation speed unit switchover	0		1	0	1	1
55	Frequency monitoring reference	60 Hz	50 Hz	Pr.84	Pr.84	1 r/min	0.01 Hz
56	Current monitoring reference	Inverter ra	ted current	Pr.859	Pr.859	0.01 A	0.01 A
71	Applied motor	0		_	_	1	1
72	PWM frequency selection	_		2	2	1	1
80	Motor capacity	9999		_	_	0.01 kW	0.01 kW
81	Number of motor poles	9999		_	_	1	1
84	Rated motor frequency	9999		_	_	1 r/min	0.01 Hz
125 (903)	Terminal 2 frequency setting gain frequency	60 Hz	50 Hz	Pr.84	Pr.84	1 r/min	0.01 Hz
126 (905)	Terminal 4 frequency setting gain frequency	60 Hz	50 Hz	Pr.84	Pr.84	1 r/min	0.01 Hz
240	Soft-PWM operation selection	1		0	0	1	1
374	Overspeed detection level	9999		Maximum motor rotations per minute + 10 Hz*3*4	Maximum motor frequency + 10 Hz*3	1 r/min	0.01 Hz
390	% setting reference frequency	60 Hz	50 Hz	Pr.84	Pr.84	1 r/min	0.01 Hz
505	Speed setting reference	60 Hz	50 Hz	_	_	1 r/min	0.01 Hz
557	Current average value monitor signal output reference current	Inverter ra	ted current	Pr.859	Pr.859	0.01 A	0.01 A
800	Control method selection	40		10	10	1	1
820	Speed control P gain 1	60%		30%	30%	1%	1%
821	Speed control integral time 1	0.333 s		0.333 s	0.333 s	0.001 s	0.001 s
824	Torque control P gain 1 (current loop proportional gain)	100%		100%	100%	1%	1%
825	Torque control integral time 1 (current loop integral time)	5 ms		20 ms	20 ms	0.1 ms	0.1 ms
870	Speed detection hysteresis	0 Hz		0.5 Hz*4	0.5 Hz	1 r/min	0.01 Hz
885	Regeneration avoidance compensation frequency limit value	6 Hz		Pr.84 × 10%	Pr.84 × 10%	1 r/min	0.01 Hz
893	Energy saving monitor reference (motor capacity)	Inverter rated current		Motor capacity (Pr.80)	Motor capacity (Pr.80)	0.01 kW	0.01 kW

-: Not changed

- *1 Gr.1 and Gr.2 are the parameter initial value groups. (Refer to page 52.)
- $^{*}2$ 120% for LD rating and 150% for ND rating (Refer to **Pr.570 Multiple rating setting** on page 171.)
- *3 The **Pr.702 Maximum motor frequency** is used as the maximum motor frequency (rotations per minute). When **Pr.702** = "9999" (initial value), the **Pr.84 Rated motor frequency** is used as the maximum motor frequency (rotations per minute).
- *4 The setting value is converted from frequency to rotations per minute. (It differs according to the number of motor poles.)

NOTE

• When the motor parameter initialization is performed with the setting in units of rotations per minute (**Pr.998** = "8009 or 9009"), the parameters not listed in the table and the monitor items are also set and displayed in rotations per minute.

◆ Setting for the V/F control by selecting PM parameter initialization on the operation panel ("PM")

Point P

When the control method is changed from PM sensorless vector control to V/F control, all the parameter settings required to
drive an induction motor are automatically set. (Refer to page 104.)

The following shows the procedure to change the control method from PM sensorless vector control to V/F control by selecting PM parameter initialization on the operation panel.

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- **2.** Changing the operation mode

 Press the PU/EXT key to choose the PU operation mode.

 The PU LED turns ON.
- **3.** Selecting the parameter setting mode

 Press the MODE key to choose the parameter setting mode.

 The PRM LED is ON.
- **4.** PM parameter initialization

 Turn the setting dial or press the UP/DOWN key until "PM" (PM parameter initialization) appears.
- **5.** Displaying the set value Press the SET key to read the present set value. The value set in **Pr.998** is displayed.
- Changing the setting value
 Turn the setting dial or press the UP/DOWN key to change the value to "0", and the SET key to confirm it.
 "0" blinks. The setting is completed.

NOTE

- If PM parameter initialization is selected on the operation panel to set V/F control, the setting of **Pr.998 PM parameter** initialization is also changed automatically.
- The changed parameter settings are the same as those when Pr.998 = "0".

CHAPTER 5 Speed Control


5.1	Setting procedure of Real sensorless vector control (speed control)	111			
5.2	Setting procedure of Vector control (speed control)	112			
5.3	Setting procedure of PM sensorless vector control (speed control)	113			
5.4	Setting the torque limit level	114			
5.5	Performing high-accuracy, fast-response control (gain adjustment for Real sensorless vector control, Vector control				
	and PM sensorless vector control)121				
5.6	Speed feed forward control, model adaptive speed control	124			
5.7	Torque bias	126			
5.8	Avoiding motor overrunning	130			
5.9	Troubleshooting in the speed control	132			


Speed Control

Purpose	Parameter to set				
To limit the torque during speed control	Torque limit	P.H500, P.H700 to P.H704, P.H710, P.H720, P.H721, P.H730, P.D030, P.T040, P.G210	Pr.22, Pr.801, Pr.803, Pr.810 to Pr.817, Pr.858, Pr.874	114	
To adjust the speed control gain	Speed control P gain, speed control integral time	P.G211, P.G212, P.G311, P.G312	Pr.820, Pr.821, Pr.830, Pr.831	121	
To improve the motor trackability for the speed command changes	Speed feed forward control, model adaptive speed control	P.G220 to P.G224, P.C114	Pr.828, Pr.877 to Pr.881	124	
To stabilize the speed detection signal	Speed detection filter	P.G215, P.G315	Pr.823, Pr.833	154	
To make starting torque start-up faster	Torque bias	P.G230 to P.G238	Pr.840 to Pr.848	126	
To avoid motor overrunning	Speed deviation excess	P.H415 to P.H417, P.H881	Pr.285, Pr.690, Pr.853, Pr.873	130	

This chapter explains the speed control under Real sensorless vector control, Vector control, and PM sensorless vector control. Speed control performs control so that the speed command and the actual motor rotation speed match.

◆ Control block diagram

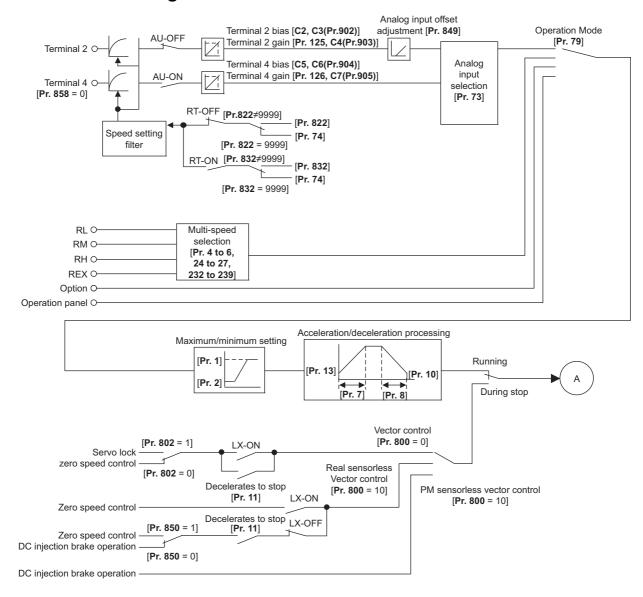

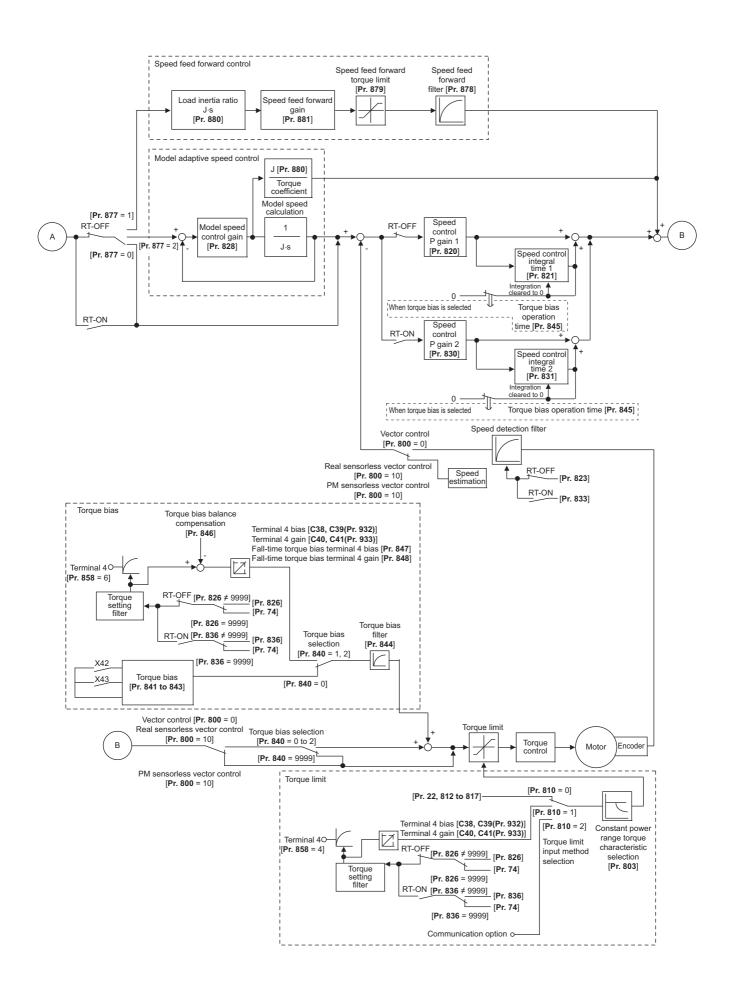

5.1 Setting procedure of Real sensorless vector control (speed control)

Sensorless

Operating procedure

- **1.** Perform wiring properly. (Refer to the Instruction Manual (Connection).)
- 2. Set the applied motor (Pr.71). (Refer to page 340.)
 Set Pr.71 Applied motor to "0" (standard motor) or "10" (constant-torque motor).
- 3. Set the overheat protection of the motor (Pr.9). (Refer to page 238.)
- **4.** Set the motor capacity and number of motor poles (**Pr.80**, **Pr.81**). (Refer to page 97.) Operation does not start when the setting value is "9999" (initial value).
- 5. Set the rated motor voltage and the rated motor frequency (Pr.83, Pr.84). (Refer to page 345.)
- 6. Select the control method (Pr.800). (Refer to page 97.)
 Select Pr.800 = "10" (speed control) or "12" (speed/torque switchover) to enable speed control.
- 7. Set the operation command. (Refer to page 212.) Select the start command and speed command.
- **8.** Set the torque limit (**Pr.810**). (Refer to page 114.)
- **9.** Perform the offline auto tuning (**Pr.96**). (Refer to page 345.)
- **10.** Perform the test operation.

As required

- Select online auto tuning (Pr.95). (Refer to page 362.)
- · Adjust the speed control gain manually. (Refer to page 121.)

→ NOTE

- During Real sensorless vector control, offline auto tuning must be performed properly before starting operations.
- The speed command setting range under Real sensorless vector control is 0 to 400 Hz.
- The carrier frequency is limited during Real sensorless vector control. (Refer to page 184.)
- Torque control is not available in a low-speed (about 10 Hz or lower) regenerative range, or with a low speed and light load (about 5 Hz or lower and rated torque about 20% or lower). Vector control must be selected.
- Performing pre-excitation (LX signal and X13 signal) under torque control may start the motor running at a low speed even
 when the start signal (STF or STR) is not input. This product with the start command ON may also rotate the motor at a low
 speed when the speed limit value is set to zero. Confirm that the motor running does not cause any safety problems before
 performing pre-excitation.
- Switching between the forward rotation command (STF) and reverse rotation command (STR) must not be performed during operations under torque control. An overcurrent trip (E.OC[]) or opposite rotation deceleration fault (E.11) will occur.
- In case of starting the motor while the motor is coasting under Real sensorless vector control, the frequency search must be set for the automatic restart after instantaneous power failure function (**Pr.57** ≠ "9999", **Pr.162** = "10"). (Refer to page 403.)
- When Real sensorless vector control is applied, there may not be enough torque provided in the ultra low-speed range of about 2 Hz or lower.

Generally, the speed control range is as follows.

For power driving, 1:200 (2, 4 or 6 poles) (available at 0.3 Hz or higher when the rating is 60 Hz), 1:30 (8 or 10 poles) (available at 2 Hz or higher when the rating is 60 Hz).

For regenerative driving, 1:12 (2 to 10 poles) (available at 5 Hz or higher when the rating is 60 Hz).

5.2 Setting procedure of Vector control (speed control)

Vector

Operating procedure

- **1.** Perform wiring properly. (Refer to the Instruction Manual (Connection).) Install a Vector control compatible option.
- 2. Set the applied motor and encoder (Pr.71, Pr.359, Pr.369). (Refer to page 340, page 365.)
- 3. Set the overheat protection of the motor (**Pr.9**). (Refer to page 238.)

 When using the SF-V5RU or a motor equipped with a thermal sensor, set **Pr.9** = 0 A. For details on connecting a motor equipped with a thermal sensor, refer to the Instruction Manual (Connection).
- **4.** Set the motor capacity and number of motor poles (**Pr.80**, **Pr.81**). (Refer to page 97.) V/F control is performed when the setting is "9999" (initial value).
- **5.** Set the rated motor voltage and the rated motor frequency (**Pr.83**, **Pr.84**). (Refer to page 345.)
- Select the control method (**Pr.800**). (Refer to page 97.)

 Select **Pr.800** = "0" (speed control) or "2" (speed/torque switchover) to enable speed control.
- **7.** Set the operation command. (Refer to page 212.) Select the start command and speed command.
- 8. Set the torque limit (Pr.810). (Refer to page 114.)
- **9.** Perform the test operation.

As required

- Perform offline auto tuning (Pr.96). (Refer to page 345.)
- Select online auto tuning (Pr.95). (Refer to page 362.)

NOTE

- Under Vector control, the magnetic flux observer is enabled to estimate or measure the flux within the motor using the current running through the motor and the inverter output voltage. This improves the torque accuracy since the flux of a motor can be accurately estimated and optimum characteristics can be obtained without being affected by temperature change in the second resistor.
- The speed command setting range under Vector control is 0 to 400 Hz.
- The carrier frequency is limited during Vector control. (Refer to page 184.)

5.3 Setting procedure of PM sensorless vector control (speed control)

PM

This inverter is set for an induction motor in the initial setting. Follow the following procedure to change the setting for the PM sensorless vector control.

Operating procedure

- 1. Set the applied motor (Pr.9, Pr.71, Pr.80, Pr.81, Pr.83, and Pr.84). (Refer to page 340, page 355.)
 Set "8093" (IPM motor) or "9093" (SPM motor) in Pr.71 Applied motor. Set Pr.9 Rated motor current, Pr.80 Motor capacity, Pr.81 Number of motor poles, Pr.83 Rated motor voltage, and Pr.84 Rated motor frequency according to the motor specifications. (Operation does not start when the setting values of Pr.80 and Pr.81 are "9999" (initial value).)
- 2. Select the PM sensorless vector control (Pr.800). (Refer to page 97.)
 The PM LED on the operation panel turns ON when the PM sensorless vector control is set by setting Pr.800 = "10".
- **3.** Perform the offline auto tuning for a PM motor (**Pr.96**). (Refer to page 355.) Set "1" (offline auto tuning without rotating motor) in **Pr.96**, and perform tuning.
- **4.** Configure the initial setting for the PM sensorless vector control using **Pr.998**. (Refer to page 104.)
 When the setting for the PM motor is selected in **Pr.998 PM parameter initialization**, all the parameters required for PM sensorless vector control are automatically set.

Setting	Description
8009	Parameter settings (in rotations per minute) for an IPM motor
8109	Parameter settings (in frequencies) for an IPM motor
9009	Parameter settings (in rotations per minute) for an SPM motor
9109	Parameter settings (in frequencies) for an SPM motor

- Set parameters such as the acceleration/deceleration time and multi-speed setting.
 Set parameters such as the acceleration/deceleration time and multi-speed setting as required.
- **6.** Set the operation command. (Refer to page 212.) Select the start command and speed command.
- **7.** Perform the test operation.

■ NOTE

- To change to the PM sensorless vector control, perform PM parameter initialization after offline auto tuning. If parameter
 initialization is performed after setting other parameters, some of those parameters are initialized too. (Refer to page 104 for
 the parameters that are initialized.)
- To use a motor capacity that is one rank lower than the inverter capacity, set **Pr.80 Motor capacity** before performing PM parameter initialization.
- The carrier frequency is limited during PM sensorless vector control. (Refer to page 184.)
- The protective function may be activated due to insufficient torque in the low-speed range of 10% of the rated motor frequency or lower. The toque limit is not activated.
- During PM sensorless vector control, the RUN signal is output about 100 ms after turning ON the start command (STF, STR). The delay is due to the magnetic pole detection.

5.4 Setting the torque limit level

Sensorless Vector PM

Limit the output torque not to exceed the specified value.

The torque limit level can be set in a range of 0% to 400%. The TL signal can be used to switch between two types of torque

The torque limit level can be selected by setting it with a parameter, or by using the analog input terminal (terminal 4). Also, the torque limit levels of forward rotation (power driving/regenerative driving) and reverse rotation (power driving/regenerative driving) can be set individually.

Pr.	Name	Initial value	Setting range	Descr	ription
22 H500	Stall prevention operation level (Torque limit level)	150% / 200% ^{*1}	0% to 400%	Set the torque limit level as a per torque as 100%.	centage with regards to the rated
157 M430	OL signal output timer	0 s	0 to 25 s	Set the OL signal output start timoperation.	e at the activation of torque limit
1430			9999	No OL signal output.	
801			0% to 400%	Set the torque current limit level.	
H704	Output limit level	9999	9999	The torque limit setting value is u level.	sed for limiting the torque current
			0	The torque rises in the low- speed range.	The motor power output is limited to be constant in the constant power range.
	Constant output range		1	The torque is kept constant in the low-speed range.	The torque is limited to be constant in the constant power range.
803 G210	Constant output range torque characteristic selection	0	2	The torque is kept constant in the low-speed range. (The torque current is limited.)	The torque is limited to be constant in the constant power range unless the output limit of the torque current is reached. (The torque current is limited.)
			10	The torque is kept constant in the low-speed range.	The motor power output is limited to be constant in the constant power range.
			0	Torque command given by analog input via terminal 4	
		o ce 0	1	Torque limit by the parameter setting (Pr.805 or Pr.806) (-400% to 400%)	
804	Torque command source		3	Torque limit via communication*2	
D400	selection		4	The internal torque limit 2 cannot be used	
			5 6	Torque limit via communication*2	!
805 D401	Torque command value (RAM)	1000%	600% to 1400%	Writes the torque limit value in R set torque command by an offset	AM. Regards 1000% as 0%, and tof 1000%.
806 D402	Torque command value (RAM, EEPROM)	1000%	600% to 1400%	Writes the torque limit value in R Regards 1000% as 0%, and set 1000%.	
			0	Internal torque limit 1 (torque lim	ited by parameter settings)
810 H700	Torque limit input method selection	0	1	External torque limit (torque limited by terminal 4)	
111700	Selection		2	Internal torque limit 2 (torque limited via communication)*2	
811	Set resolution switchover	0	0	Torque limit setting increments 0	.1%
D030	Set resolution switchover	<u> </u>	10	Torque limit setting increments 0.01%	
812	Torque limit level	9999	0% to 400%	Set the torque limit level for forward rotation regenerative driving	
H701	(regeneration)	- 300	9999	Limit using Pr.22 or the analog to	
813	Torque limit level (3rd	9999	0% to 400%	Set the torque limit level for reverse rotation power driving.	
H702	quadrant)		9999	Limit using Pr.22 or the analog terminal values. Set the torque limit level for reverse rotation regenerative driving	
814 H703	Torque limit level (4th quadrant)	9999	0% to 400% 9999	Limit using Pr.22 or the analog to	
815		0000	0% to 400%	When the torque limit selection (TL) signal is ON, Pr.815 is the
H710	Torque limit level 2	9999	9999	torque limit value regardless of P	
				The torque limit set to Pr.810 is v	/allu.


Pr.	Name	Initial value	Setting range	Description
816	Torque limit level during	9999	0% to 400%	Set the torque limit value during acceleration.
H720	acceleration	9999	9999	The same torque limit as constant speed.
817	Torque limit level during	9999	0% to 400%	Set the torque limit value during deceleration.
H721 deceleration	9999	9999	The same torque limit as constant speed.	
858 T040	Terminal 4 function assignment	0	0, 4, 6, 9999	The torque limit level can be changed with setting value "4" and the signal to terminal 4.
874 H730	OLT level setting	150%	0% to 400%	The inverter can be set to be shut off at activation of torque limit and stalling of the motor. Set the output to be shut off.

- The initial value changes from 150% to 200% when the control method is changed from V/F control or Advanced magnetic flux vector control to Real sensorless vector control or Vector control in the FR-E820-0175(3.7K) or lower, FR-E840-0095(3.7K) or lower, FR-E860-0061(3.7K) or lower, and FR-E820S-0110(2.2K) or lower.
- *2 Torque can be limited via CC-Link, CC-Link IE TSN, and CC-Link IE Field Network Basic. CC-Link communication is unavailable when the Vector control compatible options is installed.

• NOTE

- The lower limit for the torque limit level under Real sensorless vector control is set to 30% even if a value lower than 30% is set.
- Under PM sensorless vector control, the torque limit is not activated in a low-speed range with a rated frequency of less than 10%.
- Under PM sensorless vector control, the torque limit level is reduced inversely proportional to the output frequency in the constant output range of the rated motor frequency or higher.

 ♦ Block diagram of torque limit



◆ Selecting the torque limit input method (Pr.810)


• Use **Pr.810 Torque limit input method selection** to select the method to limit the output torque for speed control. The method in the initial setting is use of the parameter settings.

Pr.810 setting	Torque limit input method	Operation
0 (initial value)	Internal torque limit 1	Perform the torque limit operation using the parameter (Pr.22 , Pr.812 to Pr.814) settings. If changing the torque limit parameters via communication is enabled, the torque limit input can be performed via communication.
1	External torque limit	Torque limit using analog voltage (current) to terminal 4 is valid.
2	(Internal torque limit 2)	 The setting value of Pr.805 or Pr.806 is used as the torque limit value. The torque limit via communication is enabled.

◆ Internal torque limit 1 (Pr.810 = "0", Pr.812 to Pr.814)


- · The torque is limited by parameter setting
- In the initial value, a limit is applied to all quadrants by Pr.22 Stall prevention operation level (Torque limit level).

To set individually for each quadrant, use Pr.812 Torque limit level (regeneration), Pr.813 Torque limit level (3rd quadrant), Pr.814 Torque limit level (4th quadrant). When "9999" is set, Pr.22 setting is regarded as torque limit level in all the quadrants.

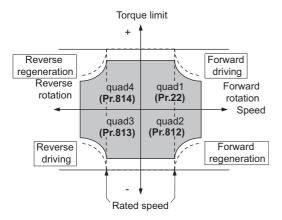

◆ Torque limit level using analog input (terminal 4) (Pr.810 = "1", Pr.858)

- The torque is limited with the analog input of terminal 4. (External torque limit)
- Torque limit using analog input is valid with a limit value lower than the internal torque limit (**Pr.22**, **Pr.812 to Pr.814**). (If the torque limit using analog input exceeds the internal torque limit, the internal torque limit is valid.)
- For inputting from terminal 4, set Pr.858 Terminal 4 function assignment = "4".
- The torque limit using analog input can be calibrated by the calibration parameters C38 (Pr.932) to C41 (Pr.933). (Refer to page 323.)

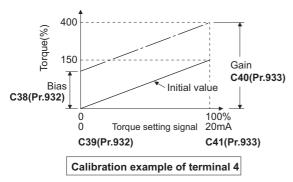


◆ Internal torque limit 2 (Pr.810 = "2", Pr.805, Pr.806)

- The setting value of Pr.805 or Pr.806 is used as the torque limit value.
- When the CC-Link, CC-Link IE TSN, or CC-Link IE Field Network is used, the torque limit value can be input using a remote register (RWwC).

Pr.804 setting	Torque limit input	Setting range ^{*1}	Setting increments	Required condition
1	Torque limit by Pr.805 , Pr.806 *2	600 to 1400	1%	_
3	Torque limit by remote register (RWwC)*3	(-400% to 400%)	1 70	FR-A8NC is installed, or CC-Link
5	Torque limit by remote register (RWwC)*3	-32768 to 32767 (two's	*4	IE TSN or CC-Link IE Field
6	Torque limit by Pr.805 , Pr.806 *2	complement) (-327.68% to 327.67%) ^{*4}	0.01% ^{*4}	Network Basic is used.

- *1 The torque limit setting is defined as an absolute value.
- *2 The torque limit value can also be set using the operation panel or parameter unit.
- *3 The torque can also be limited by setting a value in Pr.805 or Pr.806.
- *4 On the operation panel or parameter unit, the setting range is "673 to 1327 (-327% to 327%)" and the setting increment is 1%.

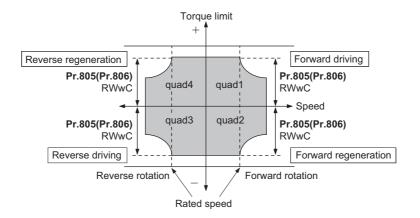


• NOTE

- For the details of the CC-Link communication, refer to the FR-A8NC E kit Instruction Manual. For the details of the CC-Link IE TSN or CC-Link IE Field Network, refer to the Instruction Manual (Communication).
- · CC-Link communication is unavailable when the Vector control compatible options is installed.

◆ Second torque limit level (TL signal, Pr.815)

- For **Pr.815 Torque limit level 2**, when the Torque limit selection (TL) signal is ON, the setting value of **Pr.815** is the limit value regardless of the setting of **Pr.810 Torque limit input method selection**.
- To assign the TL signal, set "27" in any parameter from Pr.178 to Pr.189 (Input terminal function selection).

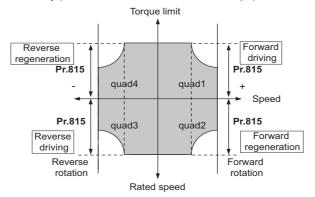


NOTE

Changing the terminal assignment using Pr.178 to Pr.189 (Input terminal function selection) may affect the other functions.
 Set parameters after confirming the function of each terminal.

◆ Setting the torque limit values during acceleration/deceleration individually (Pr.816, Pr.817)

- The torque limit during acceleration and deceleration can be set individually. Torque limit using the setting values of Pr.816
 Torque limit level during acceleration and Pr.817 Torque limit level during deceleration is as follows.
- If 1 second elapses while the difference between the set speed and rotation speed is within ±2 Hz, the torque limit level during acceleration/deceleration (**Pr.816** or **Pr.817**) changes to the torque control level during constant speed (**Pr.22**).

• When the difference between the set speed and rotation speed is -2 Hz or less, the torque limit level during deceleration Torque limit level during deceleration (**Pr.817**) activates.

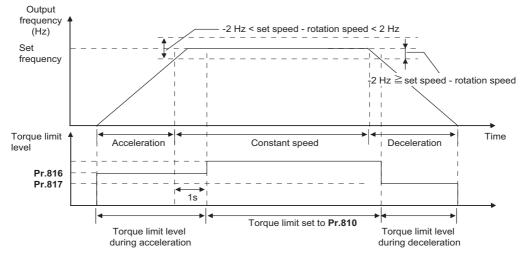

◆ Changing the setting increments of the torque limit level (Pr.811)

• The setting increments of Pr.22 Torque limit level, Pr.801 Output limit level, and Pr.812 to Pr.817 Torque limit level can be changed to 0.01% by setting Pr.811 Set resolution switchover = "10".

Pr.811 setting	Torque limit setting increments
0 (initial value)	0.1%
10	0.01%



- The internal resolution of the torque limit is 0.024% (100/2¹²), and fractions below this resolution are rounded off.
- When Real sensorless vector control is selected, fractions below a resolution equivalent to 0.1% are rounded off even if Pr.811
 = "10" is set.


◆ Changing the torque characteristic of the constant-power range (Pr.801, Pr.803)


• For the torque limit operation, the torque characteristic can be changed between in the low-speed range and in the constant power range.


Pr.803 setting	Torque characteristic in low-speed range	Torque characteristic in	n constant-power range
F1.003 Setting	Torque characteristic in low-speed range	Torque characteristic	Output limit
0 (initial value)	Torque rise	Constant motor output	_
1	Constant torque	Constant torque	Disabled
2	Constant torque	Constant torque	Enabled
10	Constant torque	Constant motor output	_


· To avoid overload or overcurrent of the inverter or motor, use Pr.801 Output limit level to limit the torque current.

Pr.801 setting	Description		
0% to 400%	Set the torque current limit level.		
9999	The torque limit setting value (Pr.22, Pr.812 to Pr.817, etc.) is used for limiting the torque current.		

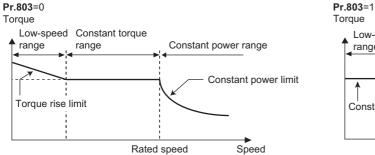

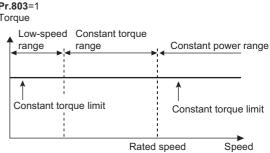

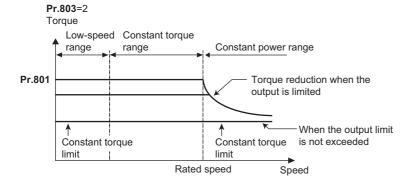

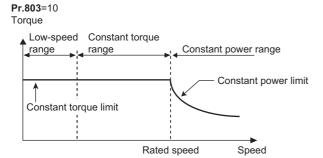


• NOTE

• When the **Pr.801** setting value is less than the torque limit setting value (**Pr.22**, **Pr.812** to **Pr.817**, etc.), the **Pr.801** setting is used for limiting the torque current.

◆ Trip during torque limit operation (Pr.874)

• The inverter can be set to be shut off at activation of torque limit and stalling of the motor.

When a high load is applied and the torque limit is activated under speed control, the motor stalls. At this time, if the rotation speed is lower than the value set in Pr.865 Low speed detection and the output torque exceeds the level set in Pr.874 OLT level setting, and this state continues for 3 seconds, Stall prevention stop (E.OLT) is activated and the inverter output is shut off.

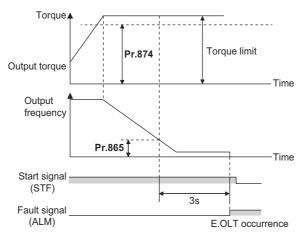




- Under V/F control or Advanced magnetic flux vector control, if the output frequency drops to 0.5 Hz due to the stall prevention
 operation and this state continues for 3 seconds, a fault indication (E.OLT) appears, and the inverter output is shut off. This
 operation is activated regardless of the Pr.874 setting.
- · This fault does not occur under torque control.

Adjusting the signal output under torque limit operation and output timing (OL signal, Pr.157)

- If the output torque exceeds the torque limit level and the torque limit is activated, the overload warning (OL signal) is turned ON for 100 ms or longer. When the output torque drops to the torque limit level or lower, the output signal also turns OFF.
- **Pr.157 OL signal output timer** can be used to set whether to output the OL signal immediately, or whether to output it after a certain time period has elapsed.
- For the OL signal, set "3" (positive logic) or "103" (negative logic) in one of **Pr.190 to Pr.196 (Output terminal function selection)** to assign the function to the output terminal.

Pr.157 setting value	Description
0 (initial value)	Output immediately.
0.1 to 25	Output after the set time (s).
9999	Not output.

 · The OL signal is also output during the regeneration avoidance operation ("OLV" display (overvoltage stall)).





 Changing the terminal assignment using Pr.190 to Pr.196 (Output terminal function selection) may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.22 Stall prevention operation level ☐ page 256
Pr.178 to Pr.189 (Input terminal function selection) ☐ page 328
Pr.190 to Pr.196 (Output terminal function selection) ☐ page 292
Pr.865 Low speed detection ☐ page 301

5.5 Performing high-accuracy, fast-response control (gain adjustment for Real sensorless vector control, Vector control, and PM sensorless vector control)


Sensorless Vector PM

Gain adjustment is useful for achieving optimum machine performance or improving unfavorable conditions, such as vibration and acoustic noise during operation with high load inertia or gear backlash.


Pr.	Name	Initial value	Setting range	Description
820 G211	Speed control P gain 1	60%	0% to 1000%	The proportional gain during speed control is set. (Setting this parameter higher improves the trackability for speed command changes. It also reduces the speed fluctuation caused by external disturbance.)
821 G212	Speed control integral time 1	0.333 s	0 to 20 s	The integral time during speed control is set. (Setting this parameter lower shortens the return time to the original speed when the speed fluctuates due to external disturbance.)
830	Speed control P gain 2	9999	0% to 1000%	Second function of Pr.820 (valid when RT signal is ON)
G311	Speed Control P gain 2	9999	9999	The Pr.820 setting is applied to the operation.
831	Speed control integral time 2	9999	0 to 20 s	Second function of Pr.821 (enabled when the RT signal is ON)
G312	312 Speed control integral time 2	3333	9999	The Pr.821 setting is applied to the operation.
880 C114	Load inertia ratio	7 times	0 to 200 times	The load inertia ratio for the motor is set.

◆ Speed control gain adjustment

- The speed control gain can be adjusted for the conditions such as abnormal machine vibration, acoustic noise, slow response, and overshoot.
- Setting 60% (initial value) in **Pr.820 Speed control P gain 1** is equivalent to 120 rad/s (speed response of a single motor). (Equivalent to the half the rad/s value during Real sensorless vector control.) Setting this parameter higher speeds up the response, but setting this too high causes vibration and acoustic noise.
- Setting **Pr.821 Speed control integral time 1** lower shortens the return time to the original speed during speed fluctuation, but setting it too low causes overshoot.

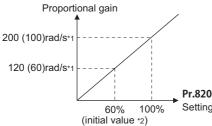

- *1 The value in the parentheses is applicable under Real sensorless vector control.
- *2 Performing PM parameter initialization changes the settings. (Refer to page 104.)
- Actual speed gain is calculated as follows when load inertia is applied.

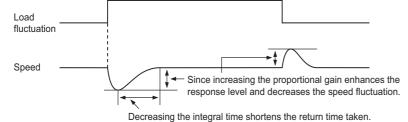

JM: Motor inertia

JL: Load inertia converted as the motor axis inertia

♦ Adjustment procedure

- 1. Change the Pr.820 setting while checking the conditions.
- 2. If it cannot be adjusted well, change Pr.821 setting, and perform step 1 again.

No.	Movement / condition	Adjustment method		
		Set Pr.820	O and Pr.821 higher.	
1	Load inertia is too high.	Pr.820	If acceleration is slow, raise the setting by 10% and then set the value to 80% to 90% of the setting immediately before vibration/noise starts occurring.	
		Pr.821	If overshoots occur, set about 80% to 90% of the maximum value without overshooting while increasing the setting value by twice.	
		Set Pr.820	D lower and Pr.821 higher.	
2	Vibration or acoustic noise are generated from	Pr.820	Set about 80% to 90% of the maximum value without any vibration/noise while decreasing the setting value by 10%.	
	machines.	Pr.821	If overshoots occur, set about 80% to 90% of the maximum value without overshooting while increasing the setting value by twice.	
		Set Pr.820	D higher.	
3	Response is slow.		If acceleration is slow, set about 80% to 90% of the maximum value without any vibration/ acoustic noise while increasing the setting value by 5%.	
	Poturn time (reenense	Set Pr.82	1 lower.	
4	4 Return time (response time) is long.		80% to 90% of the maximum value without overshooting or unstable movements while g the setting value of Pr.821 by half.	
	Overshoots or unstable		1 higher.	
5	movements occur.		80% to 90% of the maximum value without overshooting or unstable movements while the setting value of Pr.821 by double.	



Pr.830 Speed control P gain 2 and Pr.831 Speed control integral time 2 are valid when terminal RT is ON. In this case, replace them for Pr.820 and Pr.821 in the description above.

◆ When using a multi-pole motor (8 poles or more)

- If the motor inertia is known, set Pr.707 Motor inertia (integer) and Pr.724 Motor inertia (exponent). (Refer to page 345.)
- Under Real sensorless vector control or Vector control, adjust Pr.820 Speed control P gain 1 and Pr.824 Torque control
 P gain 1 (current loop proportional gain) to suit the motor, by referring to the following methods.
- Setting the parameter of **Pr.820 Speed control P gain 1** higher speeds up the response, but setting this too high causes vibration and acoustic noise.
- Setting the parameter of **Pr.824 Torque control P gain 1 (current loop proportional gain)** too low causes current ripple, and a noise synchronous with this will be emitted from the motor.

· Adjustment method:

No.	Movement / condition	Adjustment method
1	Motor rotation speed in the low- speed range is unstable.	Pr.820 Speed control P gain 1 must be set higher according to the motor inertia. For multi-pole motors, because the inertia of the motor itself tends to be large, first perform broad adjustment to improve the unstable movements, and then perform fine adjustment by referring to the response level based on this setting.
2	Rotation speed trackability is poor.	Set Pr.820 Speed control P gain 1 higher. Raise the setting by 10%s and set a
3	Large fluctuation of the rotation speed relative to load fluctuation.	value that approximately 80% to 90% of the setting right before vibration/noise starts occurring. If it cannot be adjusted well, double Pr.821 Speed control integral time 1 and perform the adjustment of Pr.820 again.
4	Torque shortage or motor backlash occurs when starting or passing a low-speed range under Real sensorless vector control.	Set the speed control gain higher. (The same as No.1.) If this cannot be prevented through gain adjustment, raise Pr.13 Starting frequency for a fault that occurs when starting, or shorten the acceleration time and avoid continuous operation in a low-speed range.
5	Unusual vibration, noise and overcurrent of the motor or machine occurs.	Set Pr.824 Torque control P gain 1 (current loop proportional gain) lower. Lower the setting by 10% and set a value that is approximately 80% to 90% of the
6	Overcurrent or overspeed (E.OS) occurs when starting under Real sensorless vector control.	setting immediately before the condition improves.

5.6 Speed feed forward control, model adaptive speed control


Sensorless Vector

Speed feed forward control or model adaptive speed control can be selected using parameter settings.
 Under speed feed forward control, the motor trackability for speed command changes can be improved.
 Under model adaptive speed control, the speed trackability and the response level to motor external disturbance torque can be adjusted individually.

Pr.	Name	Initial value	Setting range	Description
828 G224	Model speed control gain	100 rad/s	0 to 1000 rad/ s	Set the gain for the model speed controller.
077	Speed feed forward		0	Perform normal speed control.
877 G220	control/model adaptive	0	1	Perform speed feed forward control.
3220	speed control selection		2	Model adaptive speed control becomes valid.
878 G221	Speed feed forward filter	0.01 s	0.01 to 1 s	Set the primary delay filter for the result of the speed feed forward calculated from the speed command and load inertia ratio.
879 G222	Speed feed forward torque limit	150%	0% to 400%	Set a maximum limit for the speed feed forward torque.
880 C114	Load inertia ratio	7 times	0 to 200 times	Set the load inertia ratio for the motor.
881 G223	Speed feed forward gain	0%	0% to 1000%	Set the calculation result for speed feed forward as the gain.

◆ Speed feed forward control (Pr.877 = "1")

- When the load inertia ratio is set in **Pr.880**, the required torque for the set inertia is calculated according to the acceleration and deceleration commands, and the torque is generated quickly.
- When the speed feed forward gain is 100%, the calculation result for speed feed forward is applied as is.
- If the speed command changes suddenly, the torque is increased by the speed feed forward calculation. The maximum limit for the speed feed forward torque is set in **Pr.879**.
- The speed feed forward result can also be lessened with a primary delay filter in Pr.878.

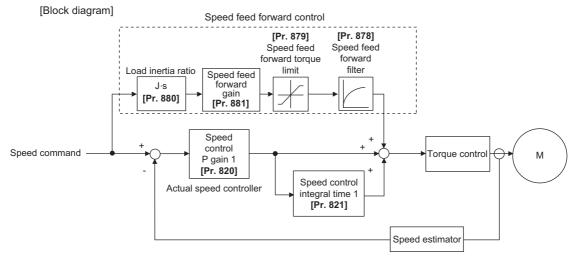

NOTE

- · The speed feed forward control is enabled for the first motor.
- Even if the driven motor is switched to the second motor while **Pr.877** = "1", the second motor is operated as **Pr.877** = "0".


◆ Model adaptive speed control (Pr.877 = "2", Pr.828)

• The model speed of the motor is calculated, and the feedback is applied to the speed controller on the model side. Also, this model speed is set as the command of the actual speed controller.

- The inertia ratio of **Pr.880** is used when the speed controller on the model side calculates the torque current command value.
- The torque current command of the speed controller on the model side is added to the output of the actual speed controller, and set as the input of the iq current control.

Pr.828 is used for the speed control on the model side (P control), and first gain **Pr.820** is used for the actual speed controller.

[Block diagram]

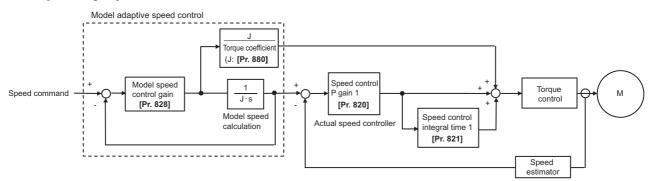



- The model adaptive speed control is enabled for the first motor.
- Even if the driven motor is switched to the second motor while Pr.877 = "2", the second motor is operated as Pr.877 = "0".


5.7 Torque bias

Sensorless Vector

The torque bias function can be used to make the starting torque start-up faster. At this time, the motor starting torque can be adjusted with a contact signal or analog signal.

Pr.	Name	Initial value	Setting range	Description
			0	Set the torque bias amount using contact signals (X42, X43) in Pr.841 to Pr.843 .
0.40			1	Set the torque bias amount using terminal 4 in any of C38 to C41. (When the squirrel cage rises during forward motor rotation.)
840 G230	Torque bias selection	9999	2	Set the torque bias amount using terminal 4 in any of C38 to C41 . (When the squirrel cage rises during reverse motor rotation.)
			3	The torque bias amount using terminal 4 can be set automatically in C38 to C41 and Pr.846 according to the load.
			9999	No torque bias, rated torque 100%
841 G231	Torque bias 1		600% to 999%	Negative torque bias amount (-400% to -1%)
842 G232	Torque bias 2	9999	1000% to 1400%	Positive torque bias amount (0% to 400%)
843 G233	Torque bias 3		9999	No torque bias setting
844	Targue bigo filter	9999	0 to 5 s	The time until the torque starts up.
G234	Torque bias filter		9999	The same operation as 0 s.
845	Torque bias operation	9999	0 to 5 s	The time for retaining the torque of the torque bias amount.
G235	time	9999	9999	The same operation as 0 s.
846 G236	Torque bias balance	9999	0% to 100%	Set the input voltage/current at a balanced load in %, considering the full-scale value of the voltage input via terminal 4 as 100%.
G236	6 compensation		9999	The same operation as 0 V. (Fixed to 0 V/0%.)
847	Fall-time torque bias	0000	0% to 400%	The bias value setting in the torque command.
G237	terminal 4 bias	9999	9999	The same as (C38, C39 (Pr.932)) when ascending
848	Fall-time torque bias	9999	0% to 400%	The gain value setting in the torque command.
G238	terminal 4 gain	3333	9999	The same as (C40, C41 (Pr.933)) when ascending

♦ Block diagram

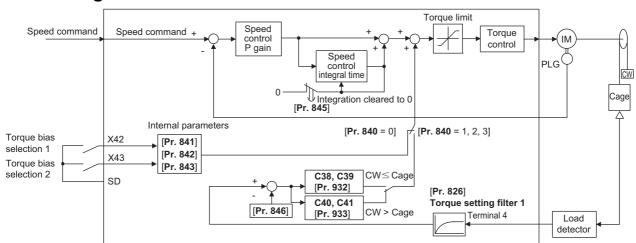

◆ Setting the torque bias amount using contact input (Pr.840 = "0", Pr.841 to Pr.843)

• Select the torque bias amount shown in the following table using the corresponding contact signal combination.

• To input the X42 signal, set "42" in any of **Pr.178 to Pr.189 (Input terminal function selection)** to assign the function to a terminal, and to input the X43 signal, set "43".

Torque bias selection 1 (X42)	Torque bias selection 2 (X43)	Torque bias amount
OFF	OFF	0%
ON	OFF	Pr.841 -400% to +400% (Setting value: 600% to 1400%)
OFF	ON	Pr.842 -400% to +400% (Setting value: 600% to 1400%)
ON	ON	Pr.843 -400% to +400% (Setting value: 600% to 1400%)


When **Pr.841** = "1025", the torque bias is 25%. When **Pr.842** = "975", the torque bias is -25%. When **Pr.843** = "925", the torque bias is -75%.



• Changing the terminal assignment using **Pr.178 to Pr.189 (Input terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

◆ Setting the torque bias amount using terminal 4 (Pr.840 ="1 or 2", Pr.847, Pr.848)

- Calculate the torque bias from the load input to terminal 4 as shown in the following diagram, and then apply the torque bias.
- To set the torque bias amount with a voltage input to terminal 4, set Pr.858 Terminal 4 function assignment = "6".
- The torque bias amount (**Pr.847**) and gain amount (**Pr.848**) when descending (reverse motor rotation when the **Pr.840** setting is "1", forward motor rotation when the setting is "2") can be set in a range of 0% to 400%. When **Pr.847** or **Pr.848** ="9999", the setting is the same for both descending and ascending (**C38** to **C41**).

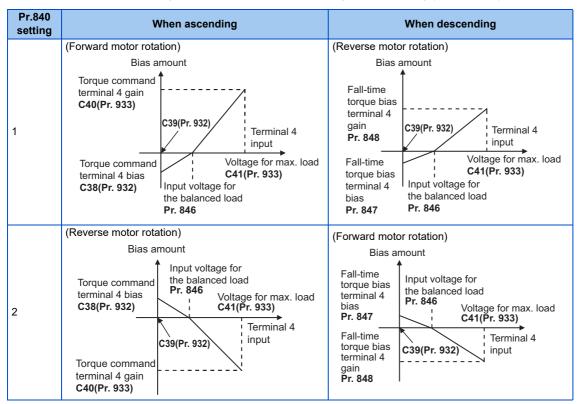


- *1 When the LX signal is ON, the torque bias amount when ascending is applied regardless of the motor rotation direction.
- *2 In Pr.846, set the input voltage/current at a balanced load in %, considering the full-scale value of the voltage input via terminal 4 as 100%.

Pr.267 setting	Terminal 4 input	Input voltage/current for the balanced load (Pr.846 = "50")
0	4 to 20 mA	20 mA × 50% = 10 mA
1	0 to 5 V	5 V × 50% = 2.5 V
2	0 to 10 V	10 V × 50% = 5 V

◆ Setting the torque bias amount automatically using terminal 4 (Pr.840 = "3", Pr.846)

- The settings of C38 Terminal 4 bias command (torque/magnetic flux), C39 Terminal 4 bias (torque/magnetic flux),
 C40 Terminal 4 gain command (torque/magnetic flux),
 C41 Terminal 4 gain (torque/magnetic flux) and Pr.846
 Torque bias balance compensation can be set automatically according to the load.
- To set the torque bias amount with a voltage input to terminal 4, set Pr.858 Terminal 4 function assignment = "6".
- Set the terminal 4 to accept input of load detection voltage, set "3" in Pr.840 Torque bias selection, and adjust the
 parameter settings according to the following procedures.


Setting C38, C39 (Pr.932)

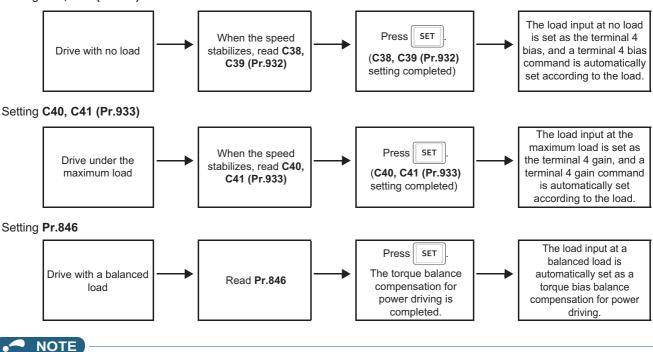

• To perform a torque bias operation after the automatic setting is completed, set Pr.840 to "1" or "2".

◆ Torque bias operation (Pr.844, Pr.845)

- The torque start-up can be made slower by setting **Pr.844 Torque bias filter** ≠ "9999". The torque start-up operation at this time is the time constant of the primary delay filter.
- Set the time for continuing the output torque simply by using the command value for the torque bias in **Pr.845 Torque bias** operation time.

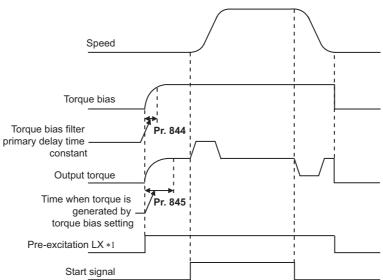

^{*1} When pre-excitation is not performed, the torque bias functions at the same time as the start signal.



- When torque bias is enabled and Pr.858 = "6", terminal 4 operates as a torque command.
- Changing the terminal assignment using **Pr.178 to Pr.189 (Input terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.
- When the X13 signal is ON, the torque bias function is disabled.

Parameters referred to

Pr.73 Analog input selection page 310
Pr.178 to Pr.189 (Input terminal function selection) page 328
C38 to C41 (Pr.932, Pr.933) (torque setting voltage (current) bias/gain) page 323

5.8 Avoiding motor overrunning

Vector PM


Motor overrunning due to excessive load torque or an error in the setting of the number of encoder pulses can be avoided.

Pr.	Name	Initial value	Setting range	Description
285 H416	Speed deviation excess detection frequency*1	9999	0 to 30 Hz	Set the speed deviation excess detection frequency (difference between the rotation speed (estimated value) and the speed command value) at which the protective function (E.OSD) activates.
			9999	No speed deviation excess
853 H417	Speed deviation time	1.0 s	0 to 100 s	Set the time from when the speed deviation excess state is entered to when the protective function (E.OSD) activates.
873 ^{*2} H415	Speed limit	20 Hz	0 to 400 Hz	Set the frequency limit with the set frequency + Pr.873 value.
690 H881	Deceleration check time	1.0 s	0 to 3600 s	Set the time required to shut off output due to deceleration check.
11001			9999	No deceleration check

- *1 This is the overspeed detection frequency under encoder feedback control. (Refer to page 450).
- *2 The setting is available when a Vector control compatible option is installed.

◆ Speed deviation excess detection (Pr.285, Pr.853)

- A shutoff can be set for when the deviation between the set frequency and the rotation speed (estimated value) is large, such as when the load torque is excessive.
- When the difference (absolute value) between the speed command value and the rotation speed (estimated value) is equal
 to or higher than the setting value in Pr.285 Speed deviation excess detection frequency for a continuous time equal
 to or longer than the setting value in Pr.853 Speed deviation time, the speed deviation excess detection (E.OSD) is
 activated to shut off the inverter output.

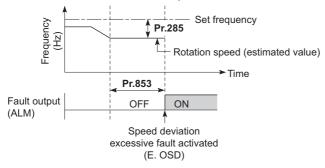


→ NOTE

 This function is enabled at a frequency equal to or higher than 10% of the rated motor frequency under PM sensorless vector control.

◆ Speed limit (Pr.873)

This function prevents overrunning even when the setting value for and the value of the actual number of pulses are
different. When the setting value for the number of encoder pulses is lower than the actual number of pulses, because the
motor may increase speed, the output frequency is limited with the frequency of (set frequency + Pr.873).

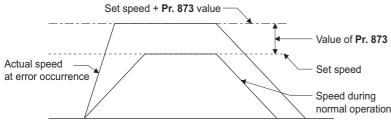




- When the automatic restart after instantaneous power failure function is selected (**Pr.57 Restart coasting time** ≠ "9999") and the setting value for the number of encoder pulses is lower than the actual number of pulses, the output speed is limited with the synchronous speed of the value of **Pr.1 Maximum frequency** + **Pr.873**.
- When a regenerative driving torque limit is applied and the speed limit function activates, the output torque may drop suddenly.
 Also, when the speed limit function activates during pre-excitation operation, output phase loss (E.LF) may occur.
 If the setting for the number of encoder pulses is confirmed as correct, it is recommended that Pr.873 be set to the maximum value (400 Hz).
- Even if the set frequency is lowered after inverter operation, the speed limit value is not lowered. During deceleration, the speed is limited at frequency command value + **Pr.873**.

◆ Deceleration check (Pr.690)

- This function can stop the inverter output when the motor is accelerated accidentally during rotation. This prevents a malfunction due to incorrect encoder pulse settings.
- When the difference between the actual motor speed and the speed command value exceeds 2 Hz, the deceleration check starts.
- If the motor does not decelerate within the time period set in **Pr.690**, the speed deviation excess detection (E.OSD) is activated to shut off the inverter output.

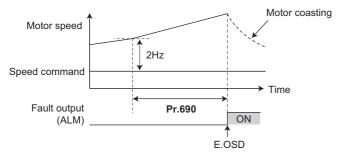

NOTE

- The deceleration check is enabled in the speed control of the Vector control.
- If the protective function (E.OSD) is activated due to deceleration check, check whether the **Pr.369 Number of encoder pulses** setting is correct.
- When the motor accelerates slowly (as a reference, when the frequency increment is less than 2 Hz/s), the protective function may not be activated even when the motor does not decelerate.

Parameters referred to

Pr.285 Overspeed detection frequency ☞ page 450 Pr.369 Number of encoder pulses ☞ page 365

5.9 Troubleshooting in the speed control

Sensorless Vector PM

No.	Condition	Possible cause	Countermeasure
		Motor wiring is incorrect.	 Check the wiring. Select V/F control (set "9999" in Pr.80 Motor capacity or Pr.81 Number of motor poles, and "40" in Pr.800 Control method selection) and check the motor rotation direction. When the SF-V5RU (1500 r/min series) motor is used, set Pr.19 Base frequency voltage to 170 V (340 V) for the 3.7 kW motor or lower, and to 160 V (320 V) for the motor whose capacity is higher than 3.7 kW, and set Pr.3 Base frequency to 50 Hz. When a forward signal is input, rotation in the counterclockwise direction as viewed from the motor shaft direction is correct. (If the motor rotates clockwise, the phase sequence of the inverter secondary side wiring is incorrect.)
	The motor does not	Encoder type selection switch (Vector control compatible option) is incorrect.	Check the encoder specifications. Check the encoder type selection switch of differential/complementary (Vector control compatible option).
1	rotate. (Vector control)	The wiring of the encoder is incorrect.	When using the system where the motor shaft can be rotated by an external force other than the motor without any safety troubles at Vector control setting, rotate the motor counterclockwise and check if FWD is indicated. If REV is indicated, the phase sequence of the encoder is incorrect. Check the wiring, and set Pr.359 Encoder rotation direction in accordance with the motor specification. (Refer to page 365.) If the clockwise direction is forward as viewed from the motor shaft side, set Pr.359 = "100". If the counterclockwise direction is forward as viewed from the motor shaft side, set Pr.359 = "101".
		The parameter setting and the number of encoder pulses used are different.	If the parameter setting value is lower than the number of encoder pulses used, the motor does not rotate. Set Pr.369 Number of encoder pulses correctly. (Refer to page 365.)
		Encoder power specifications are incorrect. Alternatively, power is not input.	Check the encoder power specifications (5 V/12 V/15 V/24 V), and input the external power supply. When the encoder output is the differential line driver type, only 5 V can be input. Make the voltage of the external power supply the same as the encoder output voltage, and connect the external power supply between PG and SD.
		Speed command from the controller is different from the actual speed. The speed command is affected by noise.	Check that the speed command sent from the controller is correct. (Take EMC measures.) Lower the setting of Pr.72 PWM frequency selection.
2	Motor does not run at the correct speed. (Command speed	The setting for the number of encoder pulses is incorrect.	Check the Pr.369 setting (under Vector control). (Refer to page 365.)
	and actual speed differ.)	The command speed and the speed recognized by the inverter are different.	Adjust the bias and gain (Pr.125, Pr.126, C2 (Pr.902) to C7 (Pr.905)) of the speed command again.
		The motor constant varies due to increase in the motor temperature.	Enable the online auto tuning at startup (set Pr.95 (Pr.574) = "1") (under Real sensorless vector control). (Refer to page 362.) To perform the online auto tuning at startup for a lift, use a brake sequence function for the brake opening timing at a start.
3	The speed does not accelerate to the	Torque shortage. The torque limit is operating.	Raise the torque limit. (Refer to the torque limit for speed control on page 114.) Increase the capacity. Capacitation of the land in house.
	command speed.	Only P (proportional) control is performed.	Speed deviation occurs under P (proportional) control when the load is heavy. Select PI control.

No.	Condition	Possible cause	Countermeasure
		Speed command varies.	 Check that the speed command sent from the controller is correct. (Take EMC measures.) Set Pr.72 lower. Set Pr.822 Speed setting filter 1 higher. (Refer to page 316.)
4	Motor speed fluctuates.	Torque shortage.	Raise the torque limit. (Refer to the torque limit for speed control on page 114.)
		Speed control gain is not suitable for the machine. (Resonance occurs.)	Adjust Pr.820 Speed control P gain 1 and Pr.821 Speed control integral time 1.
	Hunting (vibration or	Speed control gain is too high.	Set Pr.820 lower and Pr.821 higher.
5	acoustic noise) occurs in the motor or the machine.	Torque control gain is too high.	Set Pr.824 Torque control P gain 1 (current loop proportional gain) lower.
		Motor wiring is incorrect.	Check the wiring.
6	Acceleration/ deceleration time is	Torque shortage.	Raise the torque limit. (Refer to the torque limit for speed control on page 114.)
	different from the setting.	Load inertia is too high.	Set acceleration/deceleration time suitable for the load.
		Speed control gain is not suitable for the machine.	• Adjust Pr.820 and Pr.821 .
7	Machine movement is unstable.	Response is slow because of the inverter's acceleration/ deceleration time setting.	Set the optimum acceleration/deceleration time.
8	Rotation ripple occurs during the	High carrier frequency is affecting the motor rotation.	• Set Pr.72 lower.
	low-speed operation.	Speed control gain is too low.	• Set Pr.820 higher.

Parameters referred to

Pr.72 PWM frequency selection page 184
Pr.80 Motor capacity, Pr.81 Number of motor poles page 97
Pr.125 Terminal 2 frequency setting gain frequency, Pr.126 Terminal 4 frequency setting gain frequency page 318
Pr.359 Encoder rotation direction, Pr.369 Number of encoder pulses page 365
Pr.822 Speed setting filter 1 page 316
Pr.824 Torque control P gain 1 (current loop proportional gain) page 149

MEMO

CHAPTER 6 Torque Control

6.1	Torque control	136
6.2	Setting procedure of Real sensorless vector control (torque control)	141
6.3	Setting procedure for Vector control (torque control)	142
6.4	Torque command	143
6.5	Speed limit	147
6.6	Torque control gain adjustment	149
6.7	Troubleshooting in torque control	151

6 Torque Control


Purpose	Parameter to set			Refer to page
Torque command source selection or torque command value setting	Torque command	P.D400 to P.D402, P.G210, P.H704	Pr.801, Pr.803 to Pr.806	143
To prevent the motor from overspeeding	Speed limit	P.H410 to P.H412	Pr.807 to Pr.809	147
To raise precision of torque control	Torque control gain adjustment	P.G213, P.G214, P.G313, P.G314	Pr.824, Pr.825, Pr.834, Pr.835	149


6.1 Torque control

This chapter explains the torque control under Real sensorless vector control or Vector control.


- Under torque control, output torque is controlled to output the torque as commanded.
- Motor rotation speed is steady when the motor output torque and load torque are balanced. Thus, motor speed during torque control is determined by the load.
- Under torque control, motor speed accelerates so motor output torque does not exceed motor load.
 In order to prevent the motor from overspeeding, set a speed limit.
 (Speed control is performed instead of torque control during speed limit.)
- If speed limit is not set, speed limit value setting is regarded as 0 Hz and torque control is not enabled.

♦ Block diagram

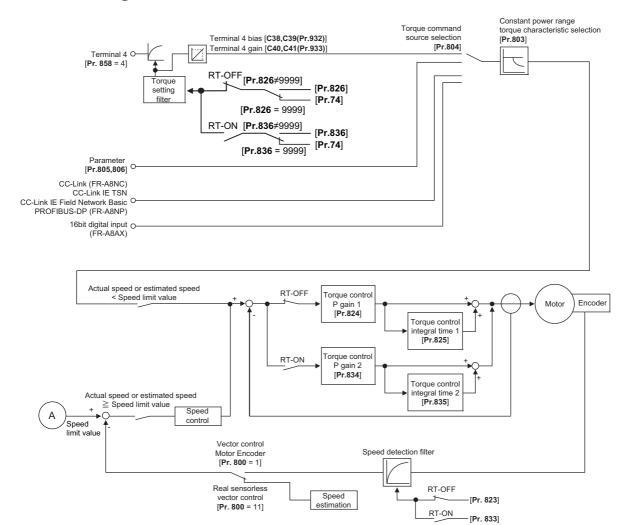


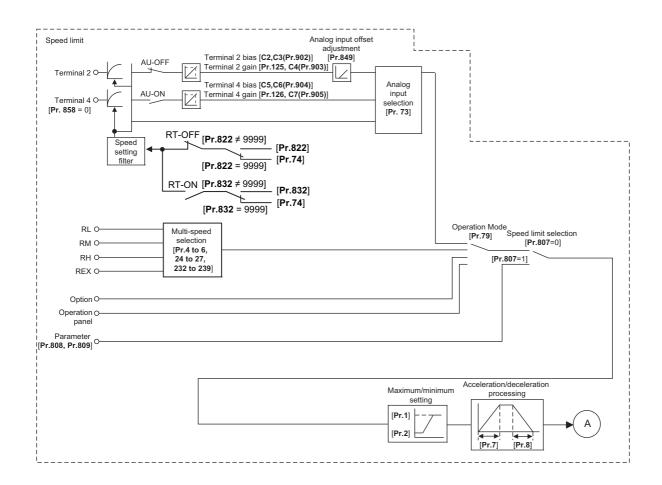

◆ Operation transition

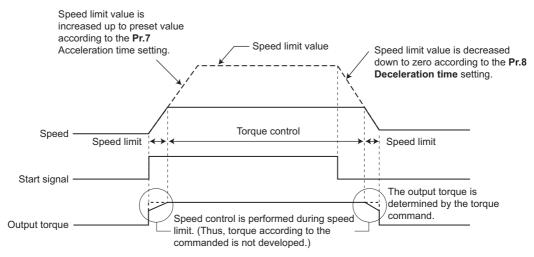

• If the setting value of **Pr.7 and Pr.8** is "0", turning OFF the start signal enables speed control, and the output torque is controlled by the torque limit value.

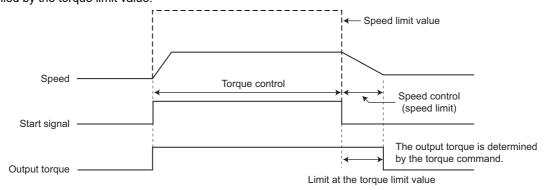


Item	Description		
Start signal	External operation	STF, STR signal	
Start Signal	PU operation	RUN key of the operation panel	
Torque command	Select the method to give the torque command, and give the torque command.		
Speed limit	Select the method to give the speed limit command, and input the speed limit value.		

◆ Operation example

Torque control is possible when actual rotation speed does not exceed the speed limit value.

When the speed reaches or exceeds the speed limit value, speed limit is activated, torque control is stopped, and speed control is performed.

The operation is as follows.

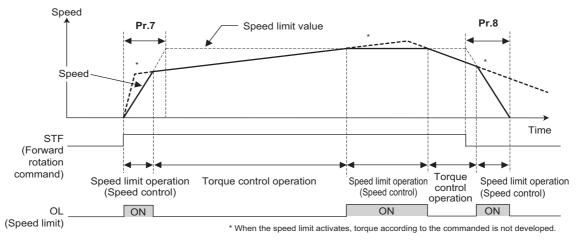

• At the STF signal ON, the speed limit value is raised in accordance with the setting of Pr.7.

- Speed control is performed when the actual speed exceeds the speed limit value.
- · At the STF signal OFF, the speed limit value is lowered in accordance with the setting of Pr.8.
- Under torque control, the actual operation speed is a constant speed when the torque command and load torque are balanced.
- The direction of motor torque generation is determined by a combination of the input torque command polarity and the start signal, as given in the following table.

Polarity of torque	Torque generation direction			
command	STF signal ON	STR signal ON		
+ torque command	Forward direction (forward power driving / reverse regenerative driving)	Reverse direction (forward regenerative driving / reverse power driving)		
- torque command	Reverse direction (forward regenerative driving / reverse power driving)	Forward direction (forward power driving / reverse regenerative driving)		



- Once the speed limit is activated, speed control is performed and internal torque limit (Pr.22 Torque limit level) is enabled.
 (Initial value) In this case, it may not be possible to return to torque control.
 Torque limit should be external torque limit (terminal 4). (Refer to page 114.)
- Under torque control, perform linear acceleration/deceleration (**Pr.29** = "0" (initial value)). When acceleration/deceleration patterns other than the linear acceleration/deceleration are selected, the protective function of the inverter may be activated. (Refer to page 201.)
- Performing pre-excitation (LX signal and X13 signal) under torque control may start the motor running at a low speed even
 when the start signal (STF or STR) is not input. This product with the start command ON may also rotate the motor at a low
 speed when the speed limit value is set to zero. Confirm that the motor running does not cause any safety problems before
 performing pre-excitation.
- Under Real sensorless vector control, torque control is not available for regenerative driving in a low-speed range (about 10 Hz or lower) or light-load operation in a low-speed range (about 5 Hz or lower and about 20% or lower of the rated torque).

6.2 Setting procedure of Real sensorless vector control (torque control)

Sensorless

Operating procedure

- **1.** Perform wiring properly. (Refer to the Instruction Manual (Connection).)
- **2.** Make the motor setting (**Pr.71**). (Refer to page 340.)
 Set **Pr.71** Applied motor to "0" (standard motor) or "10" (constant-torque motor).
- **3.** Set the motor overheat protection (**Pr.9**). (Refer to page 238.)
- **4.** Set the motor capacity and the number of motor poles (**Pr.80**, **Pr.81**). (Refer to page 97.) Operation does not start when the setting value is "9999" (initial value).
- **5.** Set the rated motor voltage and frequency (**Pr.83**, **Pr.84**). (Refer to page 345.)
- Select the control method (Pr.800). (Refer to page 97.)
 Select Pr.800 Control method selection = "11" (torque control) or "12" (speed/torque switchover) to enable torque control.
- 7. Set the torque command (Pr.804). (Refer to page 143.)
- Set the speed limit (**Pr.807**). (Refer to page 147.)
- **9.** Perform the offline auto tuning (**Pr.96**). (Refer to page 345.)
- **10.** Set the acceleration time to "0" (Pr.7). (Refer to page 196.)
- **11.** Perform the test operation.

As required

- Select online auto tuning (Pr.95). (Refer to page 362.)
- Adjust the torque control gain manually. (Refer to page 149.)

• NOTE

- During Real sensorless vector control, offline auto tuning must be performed properly before starting operations.
- The carrier frequency is limited during Real sensorless vector control. (Refer to page 184.)
- Torque control is not available in a low-speed (about 10 Hz or lower) regenerative range, or with a low speed and light load (about 5 Hz or lower and rated torque about 20% or lower).
- Performing pre-excitation (LX signal and X13 signal) under torque control may start the motor running at a low speed even when the start signal (STF or STR) is not input. This product with the start command ON may also rotate the motor at a low speed when the speed limit value is set to zero. Confirm that the motor running does not cause any safety problems before performing pre-excitation.
- Switching between the forward rotation command (STF) and reverse rotation command (STR) must not be performed during operations under torque control. An overcurrent trip (E.OC[]) or opposite rotation deceleration fault (E.11) will occur.
- If starting may occur while the motor is coasting under Real sensorless vector control, the frequency search must be set for the automatic restart after instantaneous power failure function (**Pr.57** ≠ "9999", **Pr.162** = "10").
- When Real sensorless vector control is applied, there may not be enough torque provided in the ultra low-speed range of about 2 Hz or lower.

Generally, the speed control range is as follows.

For power driving, 1:200 (2, 4 or 6 poles) (available at 0.3 Hz or higher when the rating is 60 Hz), 1:30 (8 or 10 poles) (available at 2 Hz or higher when the rating is 60 Hz).

For regenerative driving, 1:12 (2 to 10 poles) (available at 5 Hz or higher when the rating is 60 Hz).

- To give the constant torque command in the constant output range, set "1" in **Pr.803 Constant output range torque** characteristic selection. (Refer to page 143.)
- For the settings for the SF-V5RU, refer to page 365.

6.3 Setting procedure for Vector control (torque control)

Vector

Operating procedure

- **1.** Perform secure wiring. (Refer to the Instruction Manual (Connection).) Install a Vector control compatible option.
- 2. Set the motor and the encoder (Pr.71, Pr.359, Pr.369). (Refer to page 340, page 365.)
- 3. Set the overheat protection of the motor (**Pr.9**). (Refer to page 238.)

 When using the SF-V5RU or a motor equipped with a thermal sensor, set **Pr.9** = 0 A. For details on connecting a motor equipped with a thermal sensor, refer to the Instruction Manual (Connection).
- **4.** Set the motor capacity and the number of motor poles (**Pr.80**, **Pr.81**). (Refer to page 97.) V/F control is performed when the setting is "9999" (initial value).
- **5.** Set the rated motor voltage and frequency (**Pr.83**, **Pr.84**). (Refer to page 345.)
- Select the control method (Pr.800). (Refer to page 97.)
 Select Pr.800 Control method selection = "1" (torque control) or "2" (speed/torque switchover) to enable torque control.
- 7. Set the torque command (Pr.804). (Refer to page 143.)
- **8.** Set the speed limit (**Pr.807**). (Refer to page 147.)
- **9.** Set the acceleration time to "0" (**Pr.7**). (Refer to page 196.)
- **10.** Perform the test operation.

As required

- Perform offline auto tuning (Pr.96). (Refer to page 345.)
- Select online auto tuning (Pr.95). (Refer to page 362.)
- · Adjust the torque control gain manually. (Refer to page 149.)

NOTE

- Under Vector control, the magnetic flux observer is enabled to estimate or measure the flux within the motor using the current running through the motor and the inverter output voltage. This improves the torque accuracy since the flux of a motor can be accurately estimated and optimum characteristics can be obtained without being affected by temperature change in the second resistor
- Performing pre-excitation (LX signal and X13 signal) under torque control may start the motor running at a low speed even
 when the start signal (STF or STR) is not input. This product with the start command ON may also rotate the motor at a low
 speed when the speed limit value is set to zero. Confirm that the motor running does not cause any safety problems before
 performing pre-excitation.
- The carrier frequency is limited during Vector control. (Refer to page 184.)
- Torque control is not available under the Vector control with PM motors.
- To give the constant torque command in the constant output range, set "1" in **Pr.803 Constant output range torque** characteristic selection. (Refer to page 143.)
- For the settings for the SF-V5RU, refer to page 365.

6.4 Torque command


Sensorless Vector

For torque control selection, the torque command source can be selected.

Pr.	Name	Initial value	Setting range	Description	
801 H704	Output limit level	9999	0% to 400%	Set the torque current limit level.	
			9999	The torque limit setting value is used for limiting the torque current level.	
803 G210	Constant output range torque characteristic selection	0	0, 10	Constant motor output command	In the torque command setting, select torque command for the constant output area.
			1	Constant torque command	
			2	The torque is constant unless the output limit of the torque current is reached. (The torque current is limited.)	
804 D400	Torque command source selection	0	0	Torque command given by analog input via terminal 4	
			1	Torque command (-400% to 400%) given by the parameter setting (Pr.805 or Pr.806)	
			3	Torque command via communication*1	
			4	12/16-bit digital input (FR-A8AX)	
			5	Torque command via communication*1	
			6		
805 D401	Torque command value (RAM)	1000%	600% to 1400%	Writes the torque command value in RAM. Regards 1000% as 0%, and set torque command by an offset of 1000%.	
806 D402	Torque command value (RAM, EEPROM)	1000%	600% to 1400%	Writes the torque command value in RAM and EEPROM Regards 1000% as 0%, and set torque command by an offset of 1000%.	

^{*1} Torque commands can be input via CC-Link, CC-Link IE TSN, CC-Link IE Field Network Basic, and PROFIBUS-DP communication. CC-Link and PROFIBUS-DP communication are unavailable when the Vector control compatible options is installed.

◆ Control block diagram

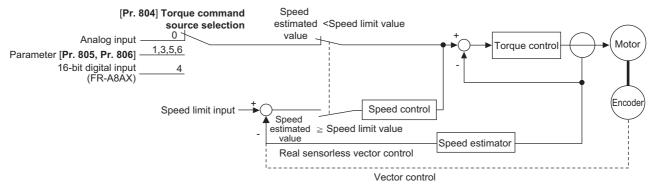


NOTE

When the torque command exceeding the torque limit value (**Pr.22**, **Pr.810**, **Pr.812** to **Pr.817**) is given, the output torque is within the torque limit value. (Refer to page 136.)

◆ Torque command given by analog input (terminal 4) (Pr.804 = "0" (initial value))

- Torque commands are given by voltage (current) input via terminal 4.
- Set Pr.858 Terminal 4 function assignment = "4" to give the torque command via terminal 4.

 Torque commands given by analog inputs can be calibrated by the calibration parameters C38 (Pr.932) to C41 (Pr.933)
(Refer to page 323.)




◆ Torque command given by parameter (Pr.804 = "1")

• Set Pr.805 Torque command value (RAM) or Pr.806 Torque command value (RAM, EEPROM) to set the torque command value.

For Pr.805 or Pr.806, regard 1000% as 0%, and set torque command by offset from 1000%.

The following diagram shows relation between the Pr.805 or Pr.806 setting and the actual torque command value.

To change the torque command value frequently, write it in Pr.805. Writing values in Pr.806 frequently will shorten the life
of the EEPROM.

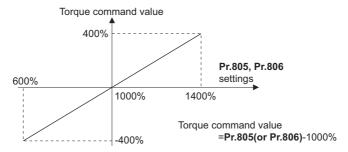



- When the torque command is set by **Pr.805** (RAM), powering OFF the inverter erases the changed parameter value. Therefore, the parameter set value is the one saved by **Pr.806** (EEPROM) when the power is turned back on.
- If giving torque command by parameter setting, set the speed limit value properly to prevent overspeeding. (Refer to page 147.)

◆ Torque command via communication (Pr.804 = "3, 5, or 6")

- Set the torque command value via CC-Link (FR-A8NC / PLC function), CC-Link IE TSN, CC-Link IE Field Network Basic, and PROFIBUS-DP (FR-A8NP) communication.
- For speed limit when "3 or 5" is set in **Pr.804**, **Pr.807 Speed limit selection** becomes invalid and **Pr.808 Speed limit** and **Pr.809 Reverse-side speed limit** become valid for speed limit. (When **Pr.544 CC-Link extended setting** = "0, 1, 12, 100, or 112")
- Pr.807 is valid when the extended cyclic setting of CC-Link communication is quadruple or octuple.

Pr.804 setting	Torque command input	Setting range	Setting increments	Required condition	
1	Torque command by Pr.805 or Pr.806 *1			_	
3	 Torque command by remote register (RWw1 or RWwC) Torque command by Pr.805 or Pr.806*2 	600 to 1400 (-400% to 400%)	1%	FR-A8NC is installed, CC-Link	
5	 Torque command by remote register (RWw1 or RWwC) Torque command by Pr.805 or Pr.806*2 	-32768 to 32767 (complement of 2) (-327.68% to 327.67%)*3	0.01%*3	IE TSN or CC-Link IE Field Network Basic is used, or FR- A8NP is installed.	
6	Torque command by Pr.805 or Pr.806 *1	,			

- *1 They can also be set using the operation panel or parameter unit.
- *2 When the FR-A8NP is installed, the torque command can be set only by Pr.805 or Pr.806.
- *3 On the operation panel or parameter unit, the setting range is "673 to 1327 (-327% to 327%)" and the setting increment is 1%.



- For the details of the CC-Link communication, refer to the FR-A8NC E kit Instruction Manual. For the details of the CC-Link IE TSN or CC-Link IE Field Network, refer to the Instruction Manual (Communication). For the details of the PROFIBUS-DP communication, refer to the FR-A8NP E kit Instruction Manual.
- · For details of the setting using the PLC function, refer to the PLC Function Programming Manual.
- · CC-Link and PROFIBUS-DP communication are unavailable when the Vector control compatible options is installed.

◆ Torque command given by 16-bit digital input (Pr.804 = "4")

 Give the torque command by 12-bit or 16-bit digital input using FR-A8AX (plug-in option) under Real sensorless vector control.



For details of the setting using the FR-A8AX, refer to the FR-A8AX E kit Instruction Manual.

Changing the torque characteristic of the constant-power range (Pr.801, Pr.803)


- According to the motor's characteristics, the torque decreases at the frequency equal to or higher than the base frequency.
 To give the constant torque command at the speed equal to or higher than the base frequency, set "1" in Pr.803 Constant output range torque characteristic selection.
- Torque in a low-speed range is constant during torque control regardless of the setting of **Pr.803**. However, when "2" is set in **Pr.803** under Real sensorless vector control, the torque may not be kept constant in the low-speed range due to a condition such as the **Pr.801** setting.


Pr.803 setting	Torque characteristic in constant-power range			
F1.003 Setting	Torque characteristic	Output limit		
0 (initial value), 10	Constant motor output	_		
1	Constant torque	Unlimited		
2	Constant torque	Limited		

To avoid overload or overcurrent of the inverter or motor, use Pr.801 Output limit level to limit the torque current in the
constant power range.

Pr.801 setting	Description			
0% to 400%	Set the torque current limit level.			
9999	The torque limit setting value (Pr.22 , Pr.812 to Pr.817 , etc.) is used for limiting the torque current.			



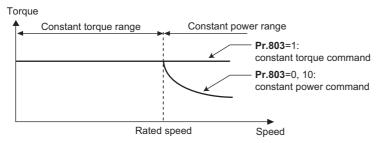

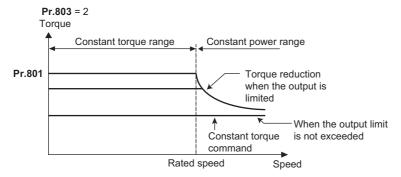

Parameters referred to
Pr.858 Terminal 4 function assignment page 315
Calibration parameter C38 (Pr.932) to C41 (Pr.933) (terminal 4 bias, gain torque) page 323

6.5 Speed limit

Sensorless Vector


When operating under torque control, motor overspeeding may occur if the load torque drops to a value less than the torque command value, etc. Set the speed limit value to prevent overspeeding.

If the actual speed reaches or exceeds the speed limit value, the control method switches from torque control to speed control, preventing overspeeding.

Pr.	Pr. Name		value ^{*1}	Setting	Description
· · · ·	Name	Gr.1	Gr.2	range	Description
807				0	Uses the speed command during speed control as the speed limit.
H410	Speed limit selection	0		1	Sets the speed limits for forward and reverse directions individually by using Pr.808 and Pr.809 .
808 H411	Speed limit	60 Hz	50 Hz	0 to 400 Hz	Sets speed limit.
809 H412 Reverse-side speed limit		9999 0 t		0 to 400 Hz	Sets the speed limit when the load has reversed the motor rotation opposite to the torque polarity.
11412				9999	Pr.808 setting value is effective.


^{*1} Gr.1 and Gr.2 are the parameter initial value groups. (Refer to page 52).

◆ Control block diagram

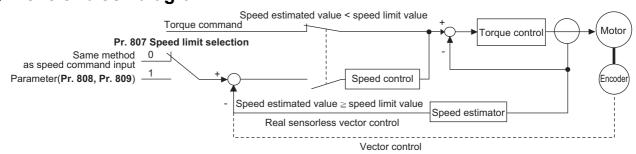

◆ Using the speed command during speed control (Pr.807 = "0" (initial value))

- Speed limit is set by the same method as speed setting during speed control (speed setting by the operation panel, multispeed setting, plug-in option, etc.).
- When the start signal turns ON, the limit level increases from 0 Hz to the set speed by taking the time set in Pr.7
 Acceleration time. When the start signal turns OFF, the limit level at the time decreases to the operation start level of Pr.10 DC injection brake operation frequency, by taking the time set in Pr.8 Deceleration time.

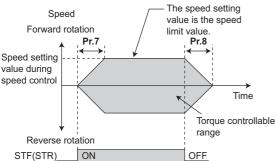





- · The second acceleration/deceleration time can be set.
- When speed limit command exceeds Pr.1 Maximum frequency setting, the speed limit value becomes Pr.1 setting. When speed limit command falls below Pr.2 Minimum frequency setting, the speed limit value becomes Pr.2 setting. Also, the speed limit command is smaller than Pr. 13 Starting frequency, the speed limit value becomes 0 Hz.
- To use analog inputs to perform speed limit, calibrate analog input terminals 2 and 4. (Refer to page 318.)
- To use analog inputs to perform speed limit, turn OFF the external signals (RH, RM, RL). If any of the external signals (RH, RM, RL) is ON, speed limit by multi-speed are enabled.


◆ Speed limit by parameters (Pr.807 = "1")

- Following the polarity change in the torque command, the polarity of the speed limit value changes. This prevents the speed from increasing in the torque polarity direction. (When the torque command value is 0, the polarity of the speed limit value is positive.)
- When Pr.807 Speed limit selection = "0", the setting during speed control is applied for the speed limit. When Pr.807 Speed limit selection = "1", Pr.808 Speed limit is applied for the speed limit.
- When the load has reversed the rotation opposite to the torque polarity, the setting of Pr.809 Reverse-side speed limit
 is applied for the speed limit. (The speed limit value and reverse-side speed limit value are limited at Pr.1 Maximum
 frequency.)

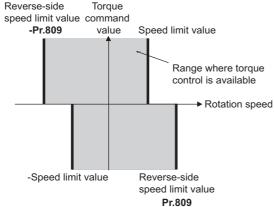

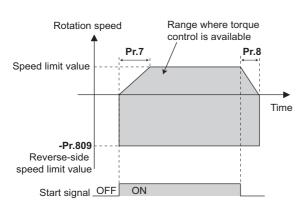



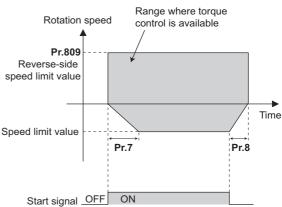

When the torque command value is negative



- During the speed limit operation, "SL" is displayed on the operation panel and the OL signal is output.
- For the OL signal, set "3" (positive logic) or "103" (negative logic) in one of **Pr.190 to Pr.196 (Output terminal function selection)** to assign the function to the output terminal. Changing the terminal assignment using **Pr.190 to Pr.196** may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.1 Maximum frequency, Pr.2 Minimum frequency page 253

Pr.4 to Pr.6, Pr.24 to Pr.27, Pr.232 to Pr.239 (multi-speed operation) page 234

Pr.7 Acceleration time, Pr.8 Deceleration time page 19

Pr.13 Starting frequency page 207

Pr.190 to Pr.196 (Output terminal function selection) page 292

6.6 Torque control gain adjustment

Sensorless Vector PM

Operation is normally stable enough in the initial setting, but some adjustments can be made if abnormal vibration, noise or overcurrent occur for the motor or machinery.

Pr.	Name	Initial value	Setting range	Description
824 G213	Torque control P gain 1 (current loop proportional gain)	100%	0% to 500%	Set the current loop proportional gain.
825 G214	Torque control integral time 1 (current loop integral time)	5 ms	0 to 500 ms	Set current loop integral compensation time.
834 G313	Torque control P gain 2 (current loop proportional gain)	9999	0% to 500%	Set the current loop proportional gain when RT signal is ON.
GS13			9999	The Pr.824 setting is applied to the operation.
835 G314	Torque control integral time 2 (current loop integral time)	9999	0 to 500 ms	Set the current loop integral compensation time when RT signal is ON.
G314			9999	The Pr.825 setting is applied to the operation.

Current loop proportional (P) gain adjustment (Pr.824)

- The 100% current loop proportional gain is equivalent to 1000 rad/s during Real sensorless vector control or PM sensorless vector control, and to 1400 rad/s during Vector control.
- For ordinary adjustment, try to set within the range of 50% to 500%.
- · Set the proportional gain for during torque control.
- If setting value is large, changes in current command can be followed well and current fluctuation relative to external
 disturbance is smaller. If the setting value is however too large, it becomes unstable and high frequency torque pulse is
 produced.

◆ Current control integral time adjustment (Pr.825)

- · Set the integral time of current control during torque control.
- Torque response increases if set small; current however becomes unstable if set too small.
- If the setting value is small, it produces current fluctuation toward disturbance, decreasing time until it returns to original current value.

◆ Using two types of gain (Pr.834, Pr.835)

- Use Pr.834 Torque control P gain 2 (current loop proportional gain) and Pr.835 Torque control integral time 2
 (current loop integral time) if the gain setting needs to be switched according to application or if multiple motors are switched by a single inverter.
- Pr.834 and Pr.835 is enabled when the second function selection (RT) signal is turned ON.



- The RT signal is a second function selection signal which also enables other second functions. (Refer to page 334.)
- To assign the RT signal, set "3" in any parameter from Pr.178 to Pr.189 (Input terminal function selection).

♦ Adjustment procedure

Adjust if any of phenomena such as unusual vibration, noise, current or overcurrent is produced by the motor or machinery.

Change the Pr.824 setting while checking the conditions.

2. If it cannot be adjusted well, change the **Pr.825** setting, and perform step **1** again.

	Adjustment method						
	Set Pr.824 lower and Pr.825 longer. First, lower Pr.824 and then check of there is still any abnormal vibration, noise or current from the motor. If it still requires improvement, make Pr.825 longer.						
Pr.824	Pr.824 Lower the setting by 10% each time and set a value that is approximately 80% to 90% of the setting immediately before the abnormal noise or current improves. If set too low, current ripple is produced and produces a sound from the motor that synchronizes with it.						
Pr.825	Lengthen the current setting by doubling it each time and set a value that is approximately 80% to 90% of the setting value, immediately before abnormal noise or current is improved. If set too long, current ripple is produced and produces a sound from the motor that synchronizes with it.						

6.7 **Troubleshooting in torque control**

Sensorless Vector

No.	Condition	Possible cause	Countermeasure
		There is incorrect phase sequence between the motor wiring and encoder wiring.	Check the wiring. (Refer to the Instruction Manual (Connection).)
		Pr.800 Control method selection is not appropriate.	Check the Pr.800 setting. (Refer to page 97.)
		The speed limit value has not been input.	Set the speed limit value. (If speed limit value is not input, it becomes 0 Hz by default and the motor does not run.)
1	Torque control does not operate properly.	Torque command varies.	 Check that the torque command sent from the controller is correct. Set Pr.72 PWM frequency selection lower. Set Pr.826 Torque setting filter 1 higher.
		The torque command and the torque recognized by the inverter are different.	Re-calibrate C38 (Pr.932) Terminal 4 bias command (torque/magnetic flux), C39 (Pr.932) Terminal 4 bias (torque/magnetic flux), C40 (Pr.933) Terminal 4 gain command (torque/magnetic flux), and C41 (Pr.933) Terminal 4 gain (torque/magnetic flux). (Refer to page 323.)
2	When a small torque command is given, the motor rotates in a direction opposite to the start signal.	Torque offset calibration is inaccurate.	• Re-calibrate C38 (Pr.932) and C39 (Pr.932). (Refer to page 323.)
3	Torque control cannot operate normally during acceleration/ deceleration. The motor vibrates. • Speed limit is operating. (Speed limit may operate because the speed limit value will increase or decrease according to acceleration/ deceleration time setting of Pr.7 and Pr.8 when Pr.807 = "0".)		Set the acceleration/deceleration time shorter. Alternatively, set "0" for the acceleration/deceleration time. (Forward/reverse rotation speed limit at this time is the value at a constant speed.)
4	Output torque is nonlinear for the torque command.	Torque shortage.	Reset Pr.854 Excitation ratio to the initial value.

Parameters referred to

Pr.72 PWM frequency selection page 184
Pr.178 to Pr.189 (Input terminal function selection) page 328
Pr.800 Control method selection page 97
Pr.807 Speed limit selection page 147
C38 (Pr.932) to C41 (Pr.933) (torque setting voltage (current) bias/gain) page 323

MEMO

CHAPTER 7 Adjustment during Real sensorless vector control, Vector control, PM sensorless vector control

7.1	Speed detection filter	154
7.2	Excitation ratio	155
7.3	Gain adjustment of current controllers for the d axis and the g axis	156

Adjustment during Real sensorless vector control, Vector control, PM sensorless vector control

Purpose	Parameter to set			Refer to page
To stabilize speed feedback signal	Speed detection filter	P.G215, P.G315	Pr.823, Pr.833	154
To change excitation ratio	Excitation ratio	P.G217	Pr.854	155

7.1 Speed detection filter

Vector

Set the time constant of primary delay filter for speed feedback signal.

Speed loop response is reduced. Under ordinary circumstances, therefore, use the initial value as it is.

Pr.	Name	Initial value	Setting range	Description
823			0	Without filter
G215 ^{*1} Speed detection filter	Speed detection filter 1	0.001 s	0.001 to 0.01 s	Set the time constant of primary delay filter for speed feedback signal.
833 G315*1 Speed detection filter 2 9999	9999	0 to 0.01 s	Second function of Pr.823 (enabled when the RT signal is ON)	
			9999	Same as Pr.823 setting

^{*1} The setting is available when a Vector control compatible option is installed.

Stabilizing speed detection (Pr.823, Pr.833)

- Speed loop response is reduced. Under ordinary circumstances, therefore, use the initial value as it is.
 If there is speed ripple due to high frequency disturbance, adjust until speed stabilizes by gradually raising the setting.
 Speed is oppositely destabilized if the setting value is too large.
- · This setting is valid under Vector control only.

♦ Employing multiple primary delay filters

• Use **Pr.833** if changing filter according to application. **Pr.833** is enabled when the Second function selection (RT) signal is turned ON.

NOTE


- The RT signal is the Second function selection signal. The RT signal also enables other second functions. (Refer to page 334.)
- The RT signal is assigned to the terminal RT in the initial status. Set "3" in one of **Pr.178 to Pr.189 (Input terminal function selection)** to assign the RT signal to another terminal.

7.2 Excitation ratio

Sensorless Vector

The excitation ratio can be lowered to enhance efficiency for light loads. (Motor magnetic noise can be reduced.)

Pr.	Name	Initial value	Setting range	Description
854 G217	Excitation ratio	100%	0% to 100%	Set an excitation ratio when there is no load.

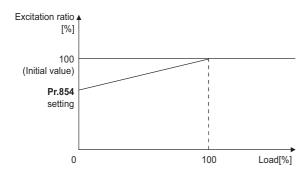



• When excitation ratio is reduced, output torque startup is less responsive.

7.3 Gain adjustment of current controllers for the d axis and the q axis

PM Vector

The gain of the current controller can be adjusted.

Pr.	Name	Initial value	Setting range	Description
824 G213	Torque control P gain 1 (current loop proportional gain)	100%	0% to 500%	The proportional gain of the current controller is set.
825 G214	Torque control integral time 1 (current loop integral time)	5 ms	0 to 500 ms	The integral time of the current controller is set.

- Use **Pr.824 Torque control P gain 1 (current loop proportional gain)** to adjust the proportional gain of current controllers for the d axis and the q axis. The 100% gain is equivalent to 1000 rad/s. Setting this parameter higher improves the trackability for current command changes. It also reduces the current fluctuation caused by external disturbances.
- Use **Pr.825 Torque control integral time 1 (current loop integral time)** to set the integral time of current controllers for the d axis and the q axis. If the setting value is small, it produces current fluctuation against external disturbances, decreasing time until it returns to original current value.



• Pr.834 Torque control P gain 2 (current loop proportional gain) and Pr.835 Torque control integral time 2 (current loop integral time) are valid when the RT signal turns ON.

In this case, replace them for Pr.824 and Pr.825 in the description above.

CHAPTER 8 (E) Environment Setting **Parameters**

8.1	Clock	158
8.2	Reset selection / disconnected PU detection / PU stop selection	161
8.3	PU display language selection	164
8.4	Buzzer control	165
8.5	PU contrast adjustment	166
8.6	Automatic frequency setting / key lock operation selection	167
8.7	Frequency change increment amount setting (standard model)	169
8.8	RUN key rotation direction selection	170
8.9	Multiple rating setting	171
8.10	Parameter write selection	173
8.11	Password	
8.12	Free parameter	178
8.13	Setting multiple parameters by batch	179
8.14	Extended parameter display and user group function	181
8.15	PWM carrier frequency and Soft-PWM control	184
8.16	Inverter parts life display	186
8.17	Maintenance timer alarm	
8.18	Current average value monitor signal	191

(E) Environment Setting Parameters

Purpose	Pa	Parameter to set			
To set the time	Clock	P.E020 to P.E022	Pr.1006 to Pr.1008	158	
To set a limit for the reset function. To shut off output if the operation panel disconnects. To force deceleration to stop on the operation panel.	Reset selection/ disconnected PU detection/PU stop selection/reset limit	P.E100 to P.E102, P.E107	Pr.75	161	
To select the display language of the parameter unit	PU display language selection	P.E103	Pr.145	164	
To control the buzzer of the parameter unit or LCD operation panel	PU buzzer control	P.E104	Pr.990	165	
To adjust the LCD contrast of the parameter unit or LCD operation panel	PU contrast adjustment	P.E105	Pr.991	166	
To set the frequency automatically. To disable the operation panel.	Operation panel operation selection	P.E200	Pr.161	167	
To change the frequency change increments which changes when using the setting dial of the operation panel	Frequency change increment amount setting	P.E201	Pr.295	169	
To determine which direction the motor rotates when the RUN key on the operation panel is pressed.	RUN key rotation direction selection	P.E202	Pr.40	170	
To use the regeneration unit to increase the motor braking torque	Regenerative brake selection	P.E300, P.G107	Pr.30, Pr.70	442	
To change the overload current rating specification	Multiple rating setting	P.E301	Pr.570	171	
To prevent parameter rewriting	Parameter write disable selection	P.E400	Pr.77	173	
To restrict parameters with a password	Password	P.E410, P.E411	Pr.296, Pr.297	175	
To use parameters freely	Free parameter	P.E420, P.E421	Pr.888, Pr.889	178	
To change parameter settings for a PM motor by batch	PM parameter initialization	P.E430	Pr.998	104	
To set multiple parameters by batch	Automatic parameter setting	P.E431	Pr.999	179	
To display the required parameters	Applicable parameter display and user group function	P.E440 to P.E443	Pr.160, Pr.172 to Pr.174	181	
To reduce the motor noise and EMI	PWM carrier frequency changing	P.E600 to P.E602	Pr.72, Pr.240, Pr.260	184	
	Inverter parts life display	P.E700 to P.E706, P.E708	Pr.255 to Pr.259, Pr.506, Pr.507, Pr.509	186	
To understand the maintenance time of inverter parts and peripheral devices	Environmental impact diagnosis function	P.E709	Pr.198	186	
	Maintenance output function	P.E710, P.E711	Pr.503, Pr.504	190	
	Current average monitor	P.E720 to P.E722	Pr.555 to Pr.557	191	

8.1 Clock

The time can be set. The time can only be updated while the inverter power is ON.

The real time clock function is enabled using an optional LCD operation panel (FR-LU08).

Pr.	Name	Initial value	Setting range	Description
1006 E020	Clock (year)	2000 (year)	2000 to 2099 ^{*1}	Set the year.
1007 E021	Clock (month, day)	101 (January 1)	101 to 131, 201 to 228, (229), 301 to 331, 401 to 430, 501 to 531, 601 to 630, 701 to 731, 801 to 831, 901 to 930, 1001 to 1031, 1101 to 1130, 1201 to 1231	Set the month and day. 1000's and 100's digits: Month (1 (January) to 12 (December)). 10's and 1's digits: Day (1 to the last day of the month (28, 29, 30, or 31)). For December 31, set "1231".
1008 E022	Clock (hour, minute)	0 (00:00)	0 to 59, 100 to 159, 200 to 259, 300 to 359, 400 to 459, 500 to 559, 600 to 659, 700 to 759, 800 to 859, 900 to 959, 1000 to 1059, 1100 to 1159, 1200 to 1259, 1300 to 1359, 1400 to 1459, 1500 to 1559, 1600 to 1659, 1700 to 1759, 1800 to 1859, 1900 to 1959, 2000 to 2059, 2100 to 2159, 2200 to 2259, 2300 to 2359	Set the hour and minute using the 24-hour clock. 1000's and 100's digits: 0 to 23 hours, 10's and 1's digits: 0 to 59 minutes. For 23:59, set "2359".

^{*1} The setting range is "2010 to 2099" when the CC-Link IE TSN communication is used for time synchronization.


♦ Simple clock function

• When the current year, month, day, hour and minute are set in the parameters above, the inverter internal clock starts ticking. The set date and time can be checked by reading the parameters.



- The time data of the internal clock is saved in the inverter's EEPROM every 10 minutes.
- The clock does not run while the control circuit power is OFF. The clock needs to be set every time after turning ON the inverter power.

Real time clock function

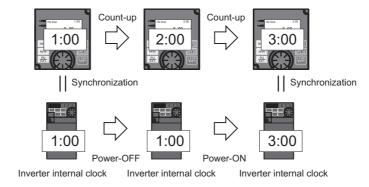

- When the FR-LU08 is connected to the inverter, the internal clock of the inverter can be synchronized with the clock in the FR-LU08 (Real time clock function). The FR-LU08 with battery (CR1216) backup can keep its clock function running even if the main power of the inverter is turned OFF. (The inverter internal clock stops running when the inverter power is turned OFF.)
- To adjust the clock in the FR-LU08, set Pr.1006 to Pr.1008 on the FR-LU08.



- Time synchronization between the inverter internal clock and the clock in the FR-LU08 is performed every one minute.
- If the FR-LU08 clock is reset due to dead battery for example, the data in the inverter internal clock is used.

◆ Time synchronization via CC-Link IE TSN communication (Ethernet model / safety communication model)

• The internal clocks of connected devices on the CC-Link IE TSN Network can be synchronized.



- The clock of the inverter is adjusted every minute according to the received clock data. (The clock of the inverter is not synchronized when the received clock data is out of range.)
- For information about sending clock data, refer to the Instruction Manual of the CC-Link IE TSN master module.

8.2 Reset selection / disconnected PU detection / PU stop selection

The reset input acceptance, disconnected PU connector detection function, and PU stop function can be selected.

Pr.	Name	Initial value	Setting range	Description
75	Reset selection/ disconnected PU	[E800(-E)] 14	[E800(-E)] 0 to 3, 14 to 17	In the initial setting, the reset command input is always enabled, the inverter operation continues even when PU is disconnected, the operation can be stopped on the PU, and the reset limit function is disabled.
73	detection/PU stop	[E800-SCE] 10014	[E800-SCE] 0 to 3, 14 to 17, 10000 to 10003, 10014 to 10017	In the initial setting, the reset command input is always enabled, the inverter operation continues even when PU is disconnected, the operation can be stopped on the PU, and the reset limit function is enabled.
			0	Reset input is always enabled.
E100	E100 Reset selection 0	0	1	Reset input is enabled only when the protective function is activated.
E101	Disconnected PU	0	0	Operation continues even when the PU is disconnected.
EIVI	detection	U	1	The inverter output is shut off when the PU is disconnected.
E102	PU stop selection 1	1	0	The inverter decelerates to stop when the STOP key on the PU is pressed in PU operation mode. (The PU stop function is disabled.)
E102			1	The inverter decelerates to stop when the STOP key on the PU is pressed in any operation mode of the PU, external, or Network. (The PU stop function is enabled.)
E107	Reset limit	[E800(-E)] 0	0	Disabled
E107	Reset IIIIII	[E800-SCE] 10	10 [E800-SCE]	Enabled

The parameters above do not return to their initial values even if Parameter clear/All parameter clear is executed.

Pr.75 setting	Reset input	Operation after PU disconnection is detected	PU stop function	Reset limit
0	Always enabled.	Operation continues.	Disabled	
1	When the protective function is activated.	Operation continues.	Disabled	
2	Always enabled.	Inverter output shutoff	Disabled	
3	When the protective function is activated.	Inverter output shutoff	Disabled	- Disabled
14	Always enabled.	Operation continues.	Enabled	Disabled
15	When the protective function is activated.	Operation continues.	Enabled	
16	Always enabled.	Inverter output shutoff	Enabled	
17	When the protective function is activated.	Inverter output shutoff	Enabled	
10000	Always enabled.	Operation continues.	Disabled	
10001	When the protective function is activated.	Operation continues.	Disabled	
10002	Always enabled.	Inverter output shutoff	Disabled	
10003	When the protective function is activated.	Inverter output shutoff	Disabled	- Enabled
10014	Always enabled.	Operation continues.	Enabled	Enabled
10015	When the protective function is activated.	Operation continues.	Enabled	
10016	Always enabled.	Inverter output shutoff	Enabled	
10017	When the protective function is activated.	Inverter output shutoff	Enabled	

◆ Reset selection (P.E100)

• While **P.E100** = "1", or **Pr.75** = "1, 3, 15, 17, 10001, 10003, 10015, or 10017", the reset command input is enabled (using the RES signal or through communication) only when the protective function is activated.



- When the RES signal is input during operation, the motor coasts since the inverter being reset shuts off the output. Also, the cumulative values of electronic thermal O/L relay and regenerative brake duty are cleared.
- When "reset input always enabled" is selected, the reset key on the PU is enabled only when the protective function is activated

Disconnected PU detection (P.E101) (standard model only)

• When the inverter detects that the PU connector is disconnected from the inverter for 1 second or more while **P.E101** = "1" or **Pr.75** = "2, 3, 16, 17, 10002, 10003, 10016, or 10017", the PU disconnection ("E.PUE") indication is displayed and the inverter output is shut off.



- · When the PU has been disconnected before power-ON, the output is not shut off.
- · To restart the inverter operation, confirm that the PU is connected before reset.
- When the inverter detects that the PU is disconnected during PU JOG operation while **P.E101** or **Pr.75** is set to continue the inverter operation even when the PU is disconnected, the inverter decelerates the motor to stop.
- During RS-485 communication operation via the PU connector, the Reset selection function and the PU stop selection function
 are enabled but the Disconnected PU detection function is disabled. (The communication is checked according to Pr.122 PU
 communication check time interval.)
- · PU disconnection detection function is unavailable for the Ethernet model and the safety communication model.

◆ PU stop selection (P.E102)

- The inverter operation can be stopped in any operation mode (PU, External, or Network) by pressing the STOP/RESET key on the operation panel.
- When the inverter is stopped by the PU stop function, "PS" is displayed on the operation panel. However, the Fault signal is not output.
- When **P.E102** = "0", or **Pr.75** = "0 to 3 or 10000 to 10003", only the inverter in the PU operation mode decelerates to stop by pressing the STOP/RESET key.




 The inverter decelerates to stop (PU stop function) also when the start command is input using a device which has the command source (set in Pr.551) and then the STOP/RESET key is pressed on a PU which does not have the command source.

(Example) When the operation panel has the command source and the stop command is input using a USB (FR Configurator2), the PU stop function is activated.

♦ How to restart the inverter which has been stopped in the External operation mode by using the STOP/RESET key on the PU ("PS" (PU stop) warning reset method)

- PU stop release method for operation panel
 - **1.** After completion of deceleration stop, turn OFF the STF and STR signals.

Press the PU/EXT key three times (the PS warning is reset) when Pr.79 Operation mode selection = "0" (initial value) or "6".
When Pr.79 = "2, 3, or 7", the PU stop warning can be cleared with one keystroke.

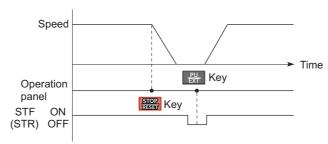

Stop/restart example for External operation

• The inverter can be restarted by performing the reset operation (by turning OFF and ON the power or inputting the RES signal).



• Even when **Pr.250 Stop selection** ≠ "9999" is set and coasting stop is selected, using the PU stop function in the External operation mode does not provide coasting stop but deceleration stop.

◆ Reset limit (P.E107) (for the safety communication model only)

• When "10" is set in **P.E107** or any value from "10000 to 10003, 10014 to 10017" is set in **Pr.75**, the reset command input (using the STOP/RESET key or the RES signal) is disabled when the protective function (E.SAF) is activated. Turn ON the power supply of the inverter again to reset the inverter.



 When a communication option is installed, reset is enabled when the protective function (E.SAF) is activated regardless of P.E107 or Pr.75 setting.

CAUTION

Do not perform a reset while a start signal is being input. Doing so will cause a sudden start of the motor, which
is dangerous.

Parameters referred to

Pr.79 Operation mode selection page 212

Pr.250 Stop selection page 440

Pr.551 PU mode operation command source selection 🖙 page 223

8.3 PU display language selection

The display language of the parameter unit (FR-PU07) can be selected.

Pr.	Name	Initial value	Setting range	Description
			0	Japanese
			1	English
			2	German
145	PU display language		3	French
E103	selection	_	4	Spanish
			5	Italian
			6	Swedish
			7	Finnish

8.4 Buzzer control

The key sound and buzzer of the LCD operation panel (FR-LU08) or parameter unit (FR-PU07) can be turned ON/OFF.

Pr.	Name	Initial value	Setting range	Description
990		1	0	Turns the key sound and buzzer OFF.
E104		1	1	Turns the key sound and buzzer ON.



• When the buzzer is set to ON, a warning sound will be audible when a fault occurs.

8.5 PU contrast adjustment

Contrast of the LCD display on the LCD operation panel (FR-LU08) or the parameter unit (FR-PU07) can be adjusted. Decreasing the setting value lowers the contrast.

Pr.	Name	Initial value	Setting range	Description
991 E105	PU contrast adjustment	58	0 to 63	0: Low → 63: High

This parameter can be selected from among simple mode parameters only when the LCD operation panel (FR-LU08) or the parameter unit (FR-PU07) is connected to the inverter.

8.6 Automatic frequency setting / key lock operation selection

Turing the setting dial or pressing the UP/DOWN key on the operation panel enables frequency setting without pressing the SET key.


The key operation of the operation panel can be disabled.


Pr.	Name	Initial value	Setting range	Description	
			0	Automatic frequency setting disabled	Key lock function
161 Frequency setting/key lock		1	Automatic frequency setting enabled	disabled.	
E200	E200 operation selection	U	10	Automatic frequency setting disabled	Key lock function
		11	11	Automatic frequency setting enabled	enabled.

◆ Automatic frequency setting (Pr.161 = "1 or 11")

- To set the frequency using the operation panel when **Pr.161** = "0" (initial value) or "10", change the frequency value using the setting dial or the UP/DOWN key, and press the SET key to confirm the setting (the value is stored in the RAM and EEPROM).
- When **Pr.161** = "1 or 11", the automatic frequency setting is enabled. After the frequency value is changed using the setting dial or the UP/DOWN key, the value indicated is stored in the RAM. If the frequency value has not been changed for 10 seconds, the value is stored in the EEPROM.

 When the automatic frequency setting is disabled (Pr.161 = "0 (initial value) or 10")



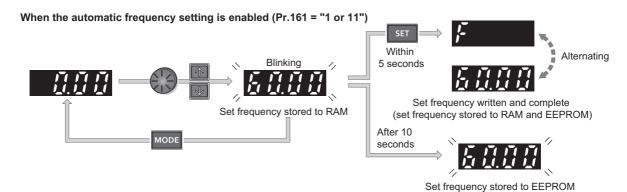

NOTE

- If the operation panel does not have the operation command source (**Pr.551** = "2, 3, or 9999" (with USB and/or PU connection)), the frequency cannot be set using the operation panel.
- If the operation mode is changed to one in which the inverter does not operate according to the frequency set on the operation
 panel after the frequency value is stored in the RAM but before it is stored in the EEPROM, the value is not stored in the
 EEPROM.
- If the power is OFF or the inverter is reset after the frequency value is stored in the RAM but before it is stored in the EEPROM, the value is not stored in the EEPROM.
- When setting the frequency by turning the setting dial, the frequency goes up to the set value of **Pr.1 Maximum frequency**. Be aware of what frequency **Pr.1** is set to, and adjust the setting of **Pr.1** according to the application.

◆ Disabling the setting dial and keys on the operation panel (by holding down the MODE key for 2 seconds)

- Operation using the setting dial and keys of the operation panel can be disabled to prevent parameter changes, unexpected starts or frequency changes.
- Set Pr.161 to "10 or 11" and then press the MODE key for 2 seconds to disable setting dial or key operations.
- When the setting dial and key operation are disabled, "HOLD" appears on the operation panel. If setting dial or key operation is attempted while dial and key operations are disabled, "HOLD" appears. (After no setting dial or key operation for 2 seconds, the display returns to the monitoring screen.)
- To enable the setting dial and key operation again, press the MODE key for 2 seconds.



- · Even if setting dial and key operations are disabled, the monitor indicator and STOP/RESET key are enabled.
- The PU stop warning cannot be reset by using keys while the key lock function is enabled.



8.7 Frequency change increment amount setting (standard model)

When setting the set frequency with the setting dial of the operation panel, the frequency changes in 0.01 Hz increments in the initial status. Setting this parameter to increase the frequency increment amount that changes when the setting dial is rotated can improve usability.

Pr.	Name	Initial value	Setting range	Description
			0	Function disabled
005	-		0.01	
	Frequency change increment amount setting	0	0.10	The minimum change width when the set frequency is
	morement amount setting		1.00	changed with the setting dial can be set.
			10.00	

Basic operation

• When **Pr.295** ≠ "0", the minimum increment when the set frequency is changed with the setting dial can be set. For example, when **Pr.295** = 1.00 Hz, one click (one dial gauge) of the setting dial changes the frequency in increments of 1.00 Hz, such as 1.00 Hz → 2.00 Hz → 3.00 Hz.

When Pr.295="1.00"





- When machine speed display is selected in Pr.53 Frequency / rotation speed unit switchover, the minimum increments of
 change are determined by Pr.295 as well. Note that the setting value may differ as speed setting changes the set machine
 speed and converts it to the speed display again.
- For Pr.295, the increments are not displayed.
- The **Pr.295** setting is enabled only for the changes to the set frequency. It does not apply to the settings of other parameters related to frequency.
- When 10 is set, the frequency setting changes in 10 Hz increments. Be cautious of excessive speed (when Automatic frequency setting enabled).

Parameters referred to

Pr.53 Frequency / rotation speed unit switchover page 268

8.8 **RUN** key rotation direction selection

The rotation direction of the motor when the RUN key on the operation panel is pressed can be selected.

Pr.	Name	Initial value	Setting range	Description
40	RUN key rotation direction selection	0	0	Forward rotation
E202	Kon key rotation direction selection		1	Reverse rotation

8.9 Multiple rating setting

Two rating types of different rated current and permissible load can be selected. The optimal inverter rating can be selected according to the application, enabling equipment to be downsized.

Pr.	Name	Initial value	Setting range	Description (overload current rating, surrounding air temperature)
570		2	1	LD rating. 120% for 60 seconds, 150% for 3 seconds (inverse-time characteristics) at surrounding air temperature of 50°C.
E301 ^{*1}	multiple rating setting	2	2	ND rating. 150% for 60 seconds, 200% for 3 seconds (inverse-time characteristics) at surrounding air temperature of 50°C.

^{*1} Available for the three-phase power input model only.

◆ Changing the parameter initial values and setting ranges

• When inverter reset and all parameter clear are performed after setting **Pr.570**, the parameter initial values are changed according to each rating, as shown below.

Pr.	Nome	Pr.57	0 setting	Refer to	
Pr.	Name	1	2 (initial value)	page	
0	Torque boost	*1	*1	426	
7	Acceleration time	*1	*1	196	
8	Deceleration time	*1	*1	196	
9	Electronic thermal O/L relay	LD rated current*2	ND rated current*2*3	238	
12	DC injection brake operation voltage	*1	*1	434	
22	Stall prevention operation level	120%	150%	114, 256	
44	Second acceleration/deceleration time	*1	*1	196	
48	Second stall prevention operation level	120%	150%	256	
56	Current monitoring reference	LD rated current*2	ND rated current*2	279	
150	Output current detection level	120%	150%	304	
165	Stall prevention operation level for restart	120%	150%	403	
557	Current average value monitor signal output reference current	LD rated current*2	ND rated current*2	191	
874	OLT level setting	120%	150%	114	
893	Energy saving monitor reference (motor capacity)	LD rated motor capacity*2	ND rated motor capacity*2	286	

^{*1} Initial values differ depending on the rating as follows.

FR-E820-[]	FR-E840-[]	ED E840 II FR-E820S-	Pr.0	Pr.0 (%)		Pr.7, Pr.8, Pr.44 (s)		Pr.12 (%)	
FK-E020-[]		0	ND	LD	ND	LD	ND	LD	
0008 (0.1)	_	0008 (0.1)	6	6	5	5	6	6	
0015 (0.2)	_	0015 (0.2)	6	6	5	5	6	4	
0030 (0.4)	0016 (0.4)	0030 (0.4)	6	6	5	5	4	4	
0050 (0.75)	0026 (0.75)	0050 (0.75)	6	4	5	5	4	4	
0080 (1.5)	0040 (1.5)	0080 (1.5)	4	4	5	5	4	4	
0110 (2.2)	0060 (2.2)	0110 (2.2)	4	4	5	5	4	4	
0175 (3.7)	0095 (3.7)	_	4	3	5	10	4	4	
0240 (5.5)	0120 (5.5)	_	3	3	10	10	4	4	
0330 (7.5)	0170 (7.5)	_	3	2	10	15	4	2	

FR-E860-[]	Pr.0 (%)		Pr.7, Pr.8, Pr.44 (s)		Pr.12 (%)	
1 K-L000-[]	ND	LD	ND	LD	ND	LD
0017 (0.75)	5	3	5	5	1	1
0027 (1.5)	3	3	5	5	1	1
0040 (2.2)	3	2	5	5	1	1
0061 (3.7)	2	2	5	10	1	1
0090 (5.5)	2	2	10	10	1	1
0120 (7.5)	2	1	10	15	1	1

^{*2} The rated current and motor capacity values differ depending on the inverter capacity. Refer to the inverter rated specifications in the Instruction Manual (Connection).

3	The initial value for the lower is set to the 85%	FR-E820-0050(0.75K) or lower of the inverter rated current.	r, FR-E840-0026(0.75K)	or lower, FR-E860-0017(0.75K), and FR-E820S-0050(0.75I

8.10 Parameter write selection

Whether to enable the parameter write or not can be selected. Use this function to prevent parameter values from being rewritten by misoperation.

Pr.	Name	Initial value	Setting range	Description
77	Parameter write selection	0	0	Parameter write is enabled only during stop.
			1	Parameter writing is disabled.
E400			2	Parameter writing is enabled in any operation mode regardless of the operation status.

• **Pr.77** can be set at any time regardless of the operation mode or operation status. (Setting through communication is unavailable except for the Ethernet communication between the inverter and FR Configurator2.)

◆ Parameter write enabled only during stop (Pr.77 = "0" (initial value))

- · Parameters can be written only during a stop in the PU operation mode.
- The following parameters can always be written regardless of the operation mode or operation status.

Pr.	Name	
4 to 6	(Multi-speed setting high-speed, middle-speed, low-speed)	
22	Stall prevention operation level	
24 to 27	(Multi-speed setting speed 4 to speed 7)	
52	Operation panel main monitor selection	
54	FM terminal function selection	
55	Frequency monitoring reference	
56	Current monitoring reference	
72 ^{*1}	PWM frequency selection	
75	Reset selection/Disconnected PU detection/PU stop selection	
77	Parameter write selection	
79 ^{*2}	Operation mode selection	
129	PID proportional band	
130	PID integral time	
133	PID action set point	
134	PID differential time	
158	AM terminal function selection	
160	User group read selection	
232 to 239	(Multi-speed setting speed 8 to speed 15)	
240 ^{*1}	Soft-PWM operation selection	
241	Analog input display unit switchover	
268	Monitor decimal digits selection	
275 ^{*1}	Stop-on contact excitation current low-speed scaling factor	
290	Monitor negative output selection	
295	Frequency change increment amount setting	
296, 297	(Password setting)	
306	Analog output signal selection	
310	Analog meter voltage output selection	
340 ^{*2}	Communication startup mode selection	
416, 417	(PLC)	
442 to 445	(Ethernet communication)	
496, 497	(Remote output)	
498	PLC function flash memory clear	

Pr.	Name		
550 ^{*2}	NET mode operation command source selection		
551 ^{*2}	PU mode operation command source selection		
555 to 557	(Current average value monitoring)		
675	User parameter auto storage function selection		
759	PID unit selection		
774 to 776	(Operation panel monitor item selection)		
805	Torque command value (RAM)		
806	Torque command value (RAM, EEPROM)		
866	Torque monitoring reference		
888, 889	(Free parameter)		
891 to 899	(Energy saving monitoring)		
C0 (900)	FM terminal calibration		
C1 (901)	AM terminal calibration		
990	PU buzzer control		
991	PU contrast adjustment		
992	Operation panel setting dial push monitor selection		
997	Fault initiation		
998 ^{*2}	PM parameter initialization		
999 ^{*2}	Automatic parameter setting		
1006	Clock (year)		
1007	Clock (month, day)		
1008	Clock (hour, minute)		
1020	Trace operation selection		
1124	Station number in inverter-to-inverter link		
1125	Number of inverters in inverter-to-inverter link system		
1150 to 1199	(PLC function user parameters)		
1399, 1424 to 1432, 1434 to 1457	(Ethernet communication)		
1480 to 1485	(Load characteristics fault)		

^{*1} Writing during operation is enabled in PU operation mode, but disabled in External operation mode.

Parameter write disabled (Pr.77 = "1")

- Parameter write, Parameter clear, and All parameter clear are disabled. (Parameter read is enabled.)
- The following parameters can be written even if **Pr.77** = "1".

Pr.	Name				
22	Stall prevention operation level				
75	Reset selection/Disconnected PU detection/PU stop selection				
77	Parameter write selection				
79 ^{*1}	Operation mode selection				
160	User group read selection				
296	Password lock level				

Pr.	Name		
297	Password lock/unlock		
496, 497	(Remote output)		
805	Torque command value (RAM)		
806	Torque command value (RAM, EEPROM)		
997	Fault initiation		
1020	Trace operation selection		

^{*1} Writing during operation is disabled. To change the parameter setting value, stop the operation.

▶ Parameter write enabled during operation (Pr.77 = "2")

- These parameters can always be written.
- The following parameters cannot be written during operation even if **Pr.77** = "2". To change the parameter setting value, stop the operation.

Pr.	Name				
23	Stall prevention operation level compensation				
23	factor at double speed				
40	RUN key rotation direction selection				
48	Second stall prevention operation level				
60	Energy saving control selection				
61	Reference current				
66	Stall prevention operation reduction starting				
	frequency				
71	Applied motor				
79	Operation mode selection				
80	Motor capacity				
81	Number of motor poles				
82	Motor excitation current				
83	Rated motor voltage				
84	Rated motor frequency				
90 to 94	(Motor constant)				
95	Online auto tuning selection				
96	Auto tuning setting/status				
178 to 196	(Input and output terminal function selection)				
261	Power failure stop selection				
277	Stall prevention operation current switchover				
289	Inverter output terminal filter				
292	Automatic acceleration/deceleration				
293	Acceleration/deceleration separate selection				
298	Frequency search gain				
313 to 322	(Extended output terminal function selection)				
329	Digital input unit selection				
415	Inverter operation lock mode setting				
418	Extension output terminal filter				
450	Second applied motor				
451	Second motor control method selection				
453	Second motor capacity				
454	Number of second motor poles				

Pr.	Name		
455	Second motor excitation current		
456	Rated second motor voltage		
457	Rated second motor frequency		
458 to 462	(Second motor constant)		
463	Second motor auto tuning setting/status		
507	Display ABC relay contact life		
541	Frequency command sign selection		
560	Second frequency search gain		
570	Multiple rating setting		
574	Second motor online auto tuning		
631	Inverter output fault detection enable/disable selection		
639, 640	(Brake sequence)		
673	SF-PR slip amount adjustment operation selection		
699	Input terminal filter		
702	Maximum motor frequency		
706, 707, 711, 712, 717, 721, 724, 725, 1412	(PM motor tuning)		
720, 737	(Motor starting resistance tuning compensation coefficient 2)		
738 to 746, 1413	(Second PM motor tuning)		
800	Control method selection		
858	Terminal 4 function assignment		
859	Torque current/Rated PM motor current		
860	Second motor torque current/Rated PM motor current		
998	PM parameter initialization		
999	Automatic parameter setting		
1002	Lq tuning target current adjustment coefficient		

8.11 Password

Registering a 4-digit password can restrict access to parameters (reading/writing).

Pr.	Name	Initial value	Setting range	Description
296 E410	Password lock level	9999	0 to 6, 99, 100 to 106, 199	Password protection enabled. Setting the access (reading/writing) restriction level to parameters locked with a password enables writing to Pr.297 .
			9999	No password protection
	Password lock/unlock	9999	1000 to 9998	Input a 4-digit password to lock parameters, or input the valid password to unlock the locked parameters.
297 E411			(0 to 5)*1	Number of failed password attempts (read only, displayed after any of "100 to 106, or 199" is set in Pr.296 and a password to lock parameters is input).
			9999 ^{*1}	No password protection

These parameters can be set when **Pr.160 User group read selection** = "0". However, when **Pr.296** \neq 9999 (password lock is set), **Pr.297** can always be set, regardless of the setting in **Pr.160**.

◆ Parameter reading/writing restriction level (Pr.296)

• The access (reading/writing) restriction level to parameters in the PU operation mode or NET operation mode can be selected with **Pr.296**.

Pr.296 setting	PU operation mode operation command*3		NET operation mode operation command*4			
			RS-485 communication / PLC function*7		via communication option	
	Read*1	Write*2	Read	Write*2	Read	Write*2
9999	0	0	0	0	0	0
0, 100 ^{*6}	×	×	×	×	×	×
1, 101	0	×	0	×	0	×
2, 102	0	×	0	0	0	0
3, 103	0	0	0	×	0	×
4, 104	×	×	×	×	0	×
5, 105	×	×	0	0	0	0
6, 106	0	0	×	×	0	×
99, 199	Only the parameters registered in the user group can be read/written. (For the parameters not registered in the user group, the restriction level when "4 or 104" is set applies.)*5					

o: Enabled, x: Disabled

- *1 If the parameter reading is restricted by the setting of **Pr.160 User group read selection**, those parameters cannot be read even when "o" is indicated.
- *2 If the parameter writing is restricted by the setting of **Pr.77 Parameter write selection**, those parameters cannot be written even when "o" is indicated.
- *3 Access from the command source in the PU operation mode (the operation panel in the initial setting) is restricted. (For the PU operation mode command source selection, refer to page 223.)
- *4 Access from the command source in the Network operation mode (the RS-485 communication or a communication option in the initial setting) is restricted. (For the NET operation mode command source selection, refer to page 223.)
- *5 Read/write is enabled only for the simple mode parameters registered in the user group when **Pr.160** = "9999". **Pr.296** and **Pr.297** are always read/write enabled whether registered to a user group or not.
- *6 If a communication option is installed, the Option fault (E.OPT) occurs, and the inverter output shuts off.
- *7 The PLC function user parameters (Pr.1150 to Pr.1199) can be written and read by the PLC function regardless of the Pr.296 setting.

◆ Locking parameters with a password (Pr.296, Pr.297)

- The procedure of locking parameters with a password is as follows.
 - 1. Set the parameter reading/writing restriction level to enable the password protection. (Set a value other than "9999" in **Pr.296**.)

Pr.296 setting	Allowable number of failed password attempts	Pr.297 readout	
0 to 6, or 99	Unlimited	Always 0	
100 to 106, 199*1	Limited to 5 times	Number of failed password attempts (0 to 5)	

^{*1} Although "0 or 9999" can be input in **Pr.297**, the value is invalid. (The display cannot be changed.)

- *1 If an invalid password is input 5 times while any of "100 to 106, or 199" is set in **Pr.296**, the password is locked up afterward (the locked parameters cannot be unlocked even with the valid password). All parameter clear is required to reset the password. (After All parameter clear is performed, the parameters are returned to their initial values.)
- **2.** Write a 4-digit number (1000 to 9998) to **Pr.297** as a password (writing is disabled when **Pr.296** = "9999"). After a password is set, parameters are locked and access (reading/writing) to the parameters is limited at the level set in **Pr.296** until the valid password is input to unlock the locked parameters.



- After a password is set, the Pr.297 readout is always any of "0 to 5".
- "LOCD" appears when a password-protected parameter is attempted to be read/written.
- Even if a password is set, the parameters which are written by the inverter, such as parameters related to the life check of inverter parts, are overwritten as needed.

◆ Unlocking the locked parameters (Pr.296, Pr.297)

- · There are two ways to unlock the locked parameters.
- Enter the password in **Pr.297**. When a valid password is input, the locked parameters can be unlocked. When an invalid password is input, an error indication appears and the parameters cannot be unlocked. If an invalid password is input 5 times while any of "100 to 106, or 199" is set in **Pr.296**, the locked parameters cannot be unlocked afterward even with the valid password (the password is locked up).
- · Perform All parameter clear.



- If the password is forgotten, it can be reset by performing All parameter clear, but the other parameters are also reset.
- All parameter clear cannot be performed during the inverter operation.
- When using FR Configurator2 in the PU operation mode, do not set "0, 4, 5, 99, 100, 104, 105, or 199" (parameter read is disabled) in **Pr.296**. Doing so may cause abnormal operation.
- The means to reset the password varies according to how the reset command is sent (from the operation panel, through RS-485 communication, or via a communication option).

	Operation panel	RS-485 communication	Communication option
All parameter clear	0	0	0
Parameter clear	×	×	0

- o: Password reset enabled, x: Password reset disabled
- To perform Parameter clear or All parameter clear via a communication option, refer to the Instruction Manual of each option. (For details of the operation panel, refer to page 19. For details of RS-485 communication, refer to the Instruction Manual (Communication).)

♦ Access to parameters according to the password status

Parameter			disabled / Parameters cked	Parameters locked	Password locked up	
		Pr.296 = "9999", Pr.297 = "9999"	Pr.296 ≠ "9999", Pr.297 = "9999"	Pr.296 ≠ "9999", Pr.297 = "0 to 4" (read value)	Pr.296 = "100 to 106, 199" Pr.297 = "5" (read value)	
Pr.296	Read	o*1	0	0	0	
P1.290	Write o*1		o*1	×	×	
Pr.297	Read	o*1	0	0	0	
P1.291	Write	×	0	0	o*3	
Pr.CLR (Parame	write eter clear)	0	0	×*4	×*4	
ALL.C write (All parameter clear)		0	0	o*2	o*2	

o: Enabled. x: Disabled

- *1 Reading/writing is disabled if reading is restricted by the **Pr.160** setting. (Reading is available in the Network operation mode regardless of the **Pr.160** setting.)
- *2 All parameter clear cannot be performed during the operation.
- *3 Inputting a password is possible but the locked-up password cannot be unlocked or reset even with the valid password.
- *4 Parameter clear can be performed only via a communication option.

Pr.77 Parameter write selection ☐ page 173

8.12 Free parameter

Any number within the setting range of 0 to 9999 can be input.

For example, these numbers can be used:

- · As a unit number when multiple units are used.
- As a pattern number for each operation application when multiple units are used.
- As the year and month of introduction or inspection.

Pr.	Name	Initial value	Setting range	Description
888 E420	Free parameter 1	9999	0 to 9999	Any value can be input. The settings are retained even if the inverter power is turned
889 E421	Free parameter 2	ee parameter 2 9999 0 to 9999		OFF.



• Pr.888 and Pr.889 do not influence the operation of the inverter.

8.13 Setting multiple parameters by batch

The setting of particular parameters is changed by batch, such as communication parameters for connection with the Mitsubishi Electric human machine interface (GOT), the parameters for the rated frequency (50/60 Hz) setting, or the parameters for acceleration/deceleration time increment.

Multiple parameters are changed automatically. Users do not have to consider each parameter number (automatic parameter setting).

Pr.	Name	Initial value	Setting range	Description		
999 E431	Automatic parameter setting	9999*1	10	GOT initial setting (PU connector)	"Controller Type" in GOT: FREQROL 500/700/800, SENSORLESS SERVO	
			12	GOT initial setting (PU connector)	"Controller Type" in GOT: FREQROL 800 (Automatic Negotiation)	
			20	50 Hz rated frequency		
			21	60 Hz rated frequency		
			9999	No action		

^{*1} The read value is always "9999".

◆ Automatic parameter setting (Pr.999)

• Select which parameters to automatically set from the following table, and set them in **Pr.999**. Multiple parameter settings are changed automatically. Refer to page 179 for the list of parameters that are changed automatically.

Pr.999 setting		Description	Operation in the automatic parameter setting mode		
10	connection with a	ts the communication parameters for the GOT a PU connector ("Controller Type" in GOT: 700/800, SENSORLESS SERVO)	"AUTO"→"GOT"→Write "1".		
12	Automatically sets the communication parameters for the GOT connection with a PU connector ("Controller Type" in GOT: FREQROL 800 (Automatic Negotiation))		"AUTO"→"GOT"→Write "2".		
20	50 Hz rated frequency	Sets the related parameters of the rated	"AUTO"→"F50"→Write "1".		
21	60 Hz rated frequency	frequency according to the power supply frequency	_		

• NOTE

- If the automatic setting is performed with **Pr.999** or the automatic parameter setting mode, the settings including the changed parameter settings (changed from the initial setting) will be automatically changed. Before performing the automatic setting, confirm that changing the parameters will not cause any problem.
- "AUTO" is displayed on the operation panel also when the user group function is used (**Pr.160** = "1"). However, if **Pr.999** is not registered in the group, the automatic setting cannot be performed (write error (Er1) occurs).

◆ GOT initial setting (PU connector) (Pr.999 = "10, 12")

Pr.	Name	Initial value	Pr.999 = "10"	Pr.999 = "12"	Refer to page
79	Operation mode selection	0	1	1	212
118	PU communication speed	192	192	1152	
119	PU communication stop bit length / data length	1	10	0	
120	PU communication parity check	2	1	1	la stavistica Manais
121	PU communication retry count	1	9999	9999	Instruction Manual (Communication)
122	PU communication check time interval	9999	9999	9999	
123	PU communication waiting time setting	9999	0 ms	0 ms	
124	PU communication CR/LF selection	1	1	1	
340	Communication startup mode selection	0	0	0	222
414	PLC function operation selection	0	_	2*1	416
549	Protocol selection	0	0	0	Instruction Manual (Communication)

^{*1} The setting is changed when **Pr.414** = "0" (initial setting).

■ Initial setting with the GOT2000 series

- When "FREQROL 500/700/800, SENSORLESS SERVO" is selected for "Controller Type" in the GOT setting, set **Pr.999** = "10" to configure the GOT initial setting.
- When "FREQROL 800 (Automatic Negotiation)" is selected for "Controller Type" in the GOT setting, the GOT automatic connection can be used. When "FREQROL 800 (Automatic Negotiation)" is selected for "Controller Type" in the GOT setting and the GOT automatic connection is not used, set **Pr.999** = "12" to configure the GOT initial setting. (Refer to the Instruction Manual (Communication).)

■ Initial setting with the GOT1000 series

• Set Pr.999 = "10" to configure the GOT initial setting.



- · Always perform an inverter reset after the initial setting.
- For the details of connection with GOT, refer to the Instruction Manual of GOT.

◆ Rated frequency (Pr.999 = "20" (50 Hz) or "21" (60 Hz))

Pr.	Name	Initial	value ^{*1}	Pr.999 = "21"	Pr.999 = "20"	Refer to
PI.	Name	Gr.1	Gr.2	P1.999 - 21	P1.999 - 20	page
3	Base frequency	60 Hz	50 Hz	60 Hz	50 Hz	428
4	Multi-speed setting (high speed)	60 Hz	50 Hz	60 Hz	50 Hz	234
20	Acceleration/deceleration reference frequency	60 Hz	50 Hz 60 Hz		50 Hz	196
53	Frequency / rotation speed unit switchover	0		0		268
55	Frequency monitoring reference	60 Hz	50 Hz	60 Hz	50 Hz	279
66	Stall prevention operation reduction starting frequency	60 Hz	50 Hz	60 Hz	50 Hz	256
125	Terminal 2 frequency setting gain frequency	60 Hz	50 Hz	60 Hz	50 Hz	- 318
126	Terminal 4 frequency setting gain frequency	60 Hz	50 Hz	60 Hz	50 Hz	310
390	% setting reference frequency	60 Hz	50 Hz	60 Hz	50 Hz	*2
505	Speed setting reference	60 Hz	50 Hz	60 Hz	50 Hz	268
808	Speed limit	60 Hz	50 Hz	60 Hz	50 Hz	147

^{*1} Gr.1 and Gr.2 are the parameter initial value groups. (Refer to page 52).

^{*2} Refer to the Instruction Manual (Communication).



• When the plug-in option FR-A8AX is used, **Pr.301 BCD input gain** and **Pr.303 BIN input gain** are not set automatically.

8.14 Extended parameter display and user group function

Use this parameter to select a group of parameters to be displayed on the operation panel.

Pr.	Name	Initial value	Setting range	Description
460	Heer are up reed		9999	Only simple mode parameters are displayed.
160 E440	User group read selection	0	0	Displays simple mode and extended parameters.
	SCICOLIOII		1	Only parameters registered in user groups are displayed.
172 E441	User group registered display/batch clear	0	(0 to 16)	Displays the number of parameters that are registered in the user groups. (Read-only)
E441	display/batch clear		9999	Batch clear of user group registrations
173 E442	User group registration	9999 ^{*1}	0 to 1999, 9999	Sets the parameter number to register for the user group.
174 E443	User group clear	9999 ^{*1}	0 to 1999, 9999	Sets the parameter number to clear from the user group.

^{*1} The read value is always "9999".

♦ Display of simple mode parameters and extended parameters (Pr.160)

- When **Pr.160** = "9999", only the simple mode parameters can be displayed on the operation panel. (For the simple mode parameters, refer to the parameter list on page 53.)
- With the initial value (**Pr.160** = "0", simple mode parameters and extended parameters can be displayed.



- When a plug-in option in installed on the inverter, the option parameters can also be read.
- Every parameter can be read regardless of the Pr.160 setting when reading parameters via communication.
- When the LCD operation panel (FR-LU08) or parameter unit (FR-PU07) is installed, Pr.15 Jog frequency, Pr.16 Jog acceleration/deceleration time, C42 (Pr.934) PID display bias coefficient, C43 (Pr.934) PID display bias analog value, C44 (Pr.935) PID display gain coefficient, C45 (Pr.935) PID display gain analog value, and Pr.991 PU contrast adjustment are displayed as simple mode parameters.

♦ User group function (Pr.160, Pr.172 to Pr.174)

- The user group function is a function for displaying only the parameters required for a setting.
- A maximum of 16 parameters from any of the parameters can be registered in a user group. When Pr.160 = "1", reading/ writing is enabled only for the parameters registered in user groups. (Parameters not registered in user groups can no longer be read.)
- To register a parameter in a user group, set the parameter number in Pr.173.
- To clear a parameter from a user group, set the parameter number in **Pr.174**. To batch clear all the registered parameters, set **Pr.172** = "9999".

◆ Registering a parameter in a user group (Pr.173)

• To register Pr.3 in a user group

Operating procedure

1. Power ON

Make sure the motor is stopped.

2. Changing the operation mode

Press the PU/EXT key to choose the PU operation mode. The PU LED turns ON.

3. Selecting the parameter setting mode

Press the MODE key to choose the parameter setting mode. (The parameter number read previously appears.)

4. Selecting a parameter

Turn the setting dial or press the UP/DOWN key until "P.173" (Pr.173) appears.

Parameter read

Press the SET key. "9999" appears.

6. Parameter registration

Turn the setting dial or press the UP/DOWN key until "3" (Pr.3) appears. Press the SET key to register the parameter.

"3" blinks.

To continue adding parameters, repeat steps 5 and 6.

◆ Clearing a parameter from a user group (Pr.174)

· To delete Pr.3 from a user group.

Operating procedure

1. Power ON

Make sure the motor is stopped.

2. Changing the operation mode

Press the PU/EXT key to choose the PU operation mode. The PU LED turns ON.

3. Selecting the parameter setting mode

Press the MODE key to choose the parameter setting mode. (The parameter number read previously appears.)

4. Selecting a parameter

Turn the setting dial or press the UP/DOWN key until "P.174" (Pr.174) appears.

5. Parameter read

Press the SET key. "9999" appears.

6. Clearing the parameter

Turn the setting dial or press the UP/DOWN key until "3" (**Pr.3**) appears. Press the SET key to delete the parameter. "3" blinks.

To continue deleting parameters, repeat steps 5 and 6.

NOTE

- Pr.77 Parameter write selection, Pr.160, Pr.296 Password lock level, Pr.297 Password lock/unlock, and Pr.991 PU contrast adjustment can always be read regardless of the user group setting. (For Pr.991, only when the FR-LU08 or the FR-PU07 is connected.)
- Pr.77, Pr.160, Pr.172 to Pr.174, Pr.296, and Pr.297 cannot be registered in a user group.
- When **Pr.174** is read, "9999" is always displayed. "9999" can be written, but it does not function.
- Pr.172 is disabled if set to a value other than "9999".

Parameters referred to

Pr.77 Parameter write selection ☞ page 173
Pr.296 Password lock level, Pr.297 Password lock/unlock ☞ page 175
Pr.991 PU contrast adjustment ☞ page 166

8.15 PWM carrier frequency and Soft-PWM control

The motor sound can be changed.

Pr.	Name	Initial value	Setting range	Description
72 E600	PWM frequency selection	1	0 to 15	The PWM carrier frequency can be changed. The setting value represents the frequency in kHz. Note that "0" indicates 0.7 kHz, "15" indicates 14.5 kHz.
240	Soft-PWM operation	1	0	Soft-PWM control disabled.
E601	selection	1	1	Soft-PWM control enabled.
260	PWM frequency automatic	10	0	PWM carrier frequency automatic reduction function disabled
E602	switchover	10	10	PWM carrier frequency automatic reduction function enabled

♦ Changing the PWM carrier frequency (Pr.72)

- The PWM carrier frequency of the inverter can be changed.
- Changing the PWM carrier frequency can be effective for avoiding the resonance frequency of the mechanical system or motor, as a countermeasure against EMI generated from the inverter, or for reducing leakage current caused by PWM switching.
- Under Real sensorless vector control, Vector control, and PM sensorless vector control, the following carrier frequencies
 are used.

Pr.72 setting	Carrier frequency (kHz)
0 to 5	2
6 to 9	6*1
10 to 13	10 ^{*1}
14, 15	14*1

^{*1} The carrier frequency is automatically changed to 2 kHz in the low-speed range (lower than 3 Hz) under Real sensorless vector control, or in the low-speed range (lower than 10% of the rated motor frequency) under PM sensorless vector control.



• The carrier frequency may be automatically lowered in the low-speed range (lower than about 10 Hz) for the ND rating, and over the entire speed range for the LD rating.

Motor noise increases, but not to the point of failure.

◆ Soft-PWM control (Pr.240)

- Soft-PWM control is a function that changes the motor noise from a metallic sound into an inoffensive, complex tone.
- Setting Pr.240 = "1" will enable the Soft-PWM control.
- To enable the Soft-PWM control, set Pr.72 to 5 kHz or less.

♦ PWM carrier frequency automatic reduction function (Pr.260)

- Setting **Pr.260** = "10" (initial value) will enable the PWM carrier frequency auto-reduction function. If a heavy load is continuously applied while the inverter carrier frequency is set to 3 kHz or higher (**Pr.72** ≥ "3"), the carrier frequency is automatically reduced to prevent occurrence of the inverter overload trip (electronic thermal O/L relay function) (E.THT). Motor noise increases, but not to the point of failure.
- When the carrier frequency automatic reduction function is used, operation with the carrier frequency set to 3 kHz or higher
 (Pr.72 ≥ 3) automatically reduces the carrier frequency for heavy-load operation as shown below.

Pr.260 setting	Pr.570 setting	Carrier frequency automatic reduction operation
10	1 (LD)	The carrier frequency will reduce automatically with continuous operation of 85% of the inverter rated current or higher.
10	2 (ND)	The carrier frequency will reduce automatically with operation of 170% of the inverter ND rated current or higher (only in a low-speed range).
0	1 (LD)	Without carrier frequency automatic reduction (Perform continuous operation with the carrier frequency set to 2 kHz or lower or with less than 85% of the inverter rated current for the ND rating.)
	2 (ND)	Without carrier frequency automatic reduction



- Reducing the PWM carrier frequency is effective as a countermeasure against EMI from the inverter or for reducing leakage current, but doing so increases the motor noise.
- When the PWM carrier frequency is set to 1 kHz or lower (**Pr.72** ≤ 1), the increase in the harmonic current causes the fast-response current limit to activate before the stall prevention operation, which may result in torque shortage. In this case, disable the fast-response current limit in **Pr.156 Stall prevention operation selection**.

Parameters referred to

Pr.156 Stall prevention operation selection ☞ page 256
Pr.570 Multiple rating setting ☞ page 171
Pr.800 Control method selection ☞ page 97

8.16 Inverter parts life display


The degree of deterioration of the control circuit capacitor, main circuit capacitor, cooling fan, and inrush current limit circuit can be diagnosed on the monitor. When a part approaches the end of its life, an alarm can be output by self diagnosis to prevent a fault. (Note that the life diagnosis of this function should be used as a guideline only, the life values are theoretical calculations.)

Pr.	Name	Initial value	Setting range	Description
198 E709	Display corrosion level	1	1 to 3	Displays the corrosion level of the control circuit board. Read-only. (Available only for the FR-E8[[]-[]-60 (with coating).)
255 E700	Life alarm status display	0	(0 to 879)	Displays whether or not the life alarm output level is reached for the following parts: the control circuit capacitor, main circuit capacitor, cooling fan, inrush current limit circuit, relay contacts of terminals A, B, and C, inverter module, and control circuit board. Readonly.
256 E701	Inrush current limit circuit life display	100%	(0% to 100%)	Displays the deterioration degree of the inrush current limit circuit. Read-only.
257 E702	Control circuit capacitor life display	100%	(0% to 100%)	Displays the deterioration degree of the control circuit capacitor. Read-only.
258 E703	Main circuit capacitor life display	100%	(0% to 100%)	Displays the deterioration degree of the main circuit capacitor. Read-only. The value measured by Pr.259 is displayed.
259 E704	Main circuit capacitor life measuring	0	0, 1, (2, 3, 8, 9)	Setting "1" and turning the power supply OFF starts the measurement of the main circuit capacitor life. If the setting value of Pr.259 becomes "3" after turning the power supply ON again, it means that the measurement is completed. The deterioration degree is read to Pr.258 .
506 E705	Display estimated main circuit capacitor residual life	100%	(0% to 100%)	Displays the estimated residual life of the main circuit capacitor. Read-only.
507 E706	Display ABC relay contact life	100%	0% to 100%	Displays the degree of deterioration of the relay contacts of terminals A, B, and C.
509 E708	Display power cycle life	100%	(0% to 100%)	Displays the degree of deterioration of the inverter module. Read-only.

◆ Life alarm display and signal output (Y90 signal, Pr.255)



- In the life diagnosis of the main circuit capacitor, the Life alarm (Y90) signal is not output unless measurement by turning OFF
 the power supply is performed.
- Pr.255 Life alarm status display and the Life alarm (Y90) signal can be used to check whether or not the life alarm output level is reached for the following parts: the control circuit capacitor, main circuit capacitor, cooling fan, inrush current limit circuit, relay contacts of terminals A, B, and C, inverter module, or control circuit board.

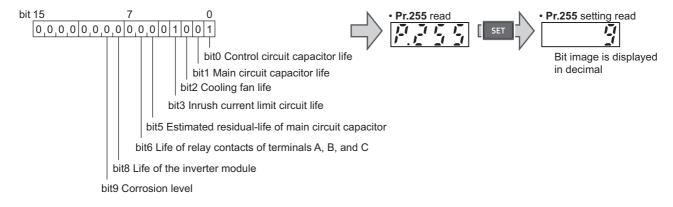

• When the parts have reached the life alarm output level, the corresponding bits of **Pr.255** turns ON. The ON/OFF state of the bits can be checked with **Pr.255**. The following table shows examples.

Pr.	Pr.255		bit 8	bit 7	bit 6	bit 5	bit 4	bit 3	bit 2	bit 1	bit 0	Remarks
Decimal	Binary	bit 9	DIL 0	Dit 7	DIL 6	Dit 3	DIL 4	DIL 3	DIL 2	DIL I	DIL U	Remarks
879	1101101111	0	0	×	0	0	×	0	0	0	0	All parts have reached alarm output level.
5	101	×	×	×	×	×	×	×	0	×	0	Control circuit capacitor and cooling fan have reached alarm output level.
0	0	×	×	×	×	×	×	×	×	×	×	No parts have reached alarm output level.

- o: Parts reaching alarm output level x: Parts not reaching alarm output level
 - The Life alarm (Y90) signal turns ON when the warning level is reached for either of the following: the control circuit capacitor life, main circuit capacitor life, cooling fan life, inrush current limit circuit life, the estimated residual-life of the main circuit capacitor, relay contacts of terminals A, B, and C, inverter module, or control circuit board.
 - For the terminal used for the Y90 signal, set "90" (positive logic) or "190" (negative logic) in any parameter from **Pr.190 to Pr.196 (Output terminal function selection)**.



- Changing the terminal assignment using Pr.190 to Pr.196 (Output terminal function selection) may affect the other functions. Set parameters after confirming the function of each terminal.
- For replacement of each part, contact the nearest Mitsubishi FA center.

◆ Life display of the inrush current limit circuit (Pr.256)

- · The life of the inrush current limit circuit (relay, contactor and inrush resistor) is displayed in Pr.256.
- The number of contact (relay, contactor, thyristor) ON times is counted, and it is counted down from 100% (0 time) every 1%/10,000 times. When the counter reaches 10% (900,000 times), bit 3 of Pr.255 is turned ON (set to 1) and the Y90 signal is also output as an alert.

◆ Life display of the control circuit capacitor (Pr.257)

- The deterioration degree of the control circuit capacitor is displayed in Pr.257.
- In the operating status, the control circuit capacitor life is calculated from the energization time and temperature, and is counted down from 100%. When the counter goes down from 10%, bit 0 of **Pr.255** is turned ON (set to 1) and the Y90 signal is also output as an alert.

◆ Life display of the main circuit capacitor (Pr.258, Pr.259)



- For accurate life measurement of the main circuit capacitor, wait three hours or longer after turning OFF. The temperature left in the main circuit capacitor affects measurement.
- · The deterioration degree of the main circuit capacitor is displayed in Pr.258.
- With the main circuit capacitor capacity at factory shipment as 100%, the capacitor life is displayed in Pr.258 every time
 measurement is made. When the measured value falls to 85% or lower, bit 1 of Pr.255 turns ON and the Y90 signal is also
 output as an alert.
- Measure the capacitor capacity according to the following procedure and check the deterioration degree of the capacitor capacity.
 - **1.** Check that the motor is connected and at a stop.
 - 2. Set "1" (measuring start) in Pr.259.
 - **3.** Switch the power OFF. The inverter applies DC voltage to the motor to measure the capacitor capacity while the inverter is OFF.
 - **4.** After confirming that the LED of the operation panel is OFF, power ON again.

5. Check that "3" (measurement complete) is set in **Pr.259**, read **Pr.258**, and check the deterioration degree of the main circuit capacitor.

Pr.259	Description	Remarks			
0	No measurement	Initial value			
1	Start measurement	Measurement starts when the power supply is switched OFF.			
2	During measurement				
3	Measurement complete	Only displayed and connet he set			
8	Forced end	Only displayed and cannot be set.			
9	Measurement error				

NOTE

- When the main circuit capacitor life is measured under the following conditions, "forced end" (**Pr.259** = "8"), or "measurement error" (**Pr.259** = "9") may occur, or the status may remain in "measurement start" (**Pr.259** = "1"). To perform measurement, first eliminate the following conditions. Under the following conditions, even if "measurement complete" (**Pr.259** = "3") is reached, measurement cannot be performed correctly.
 - FR-HC2 or FR-XC is connected.
 - DC power supply is connected to the terminals P/+ and N/-.
 - The power supply is switched ON during measurement.
 - The motor is not connected to the inverter.
 - The motor is running (coasting).
 - The motor capacity is smaller than the inverter capacity by two ranks or more.
 - The inverter output is shut off or a fault occurred while the power was OFF.
 - The inverter output is shut off with the MRS signal.
 - The start command is given while measuring.
 - The applied motor setting is incorrect.
- Operation environment: Surrounding air temperature (annual average of 40°C (free from corrosive gas, flammable gas, oil
 mist, dust and dirt)).
 - Output current: 80% of the inverter rating
- Since repeated inrush currents at power ON will shorten the life of the converter circuit, frequent starts and stops of the magnetic contactor must be avoided.

∴ WARNING

• When measuring the main circuit capacitor capacity (**Pr.259** = "1"), the DC voltage is applied to the motor for about 1 second at power OFF. Never touch the motor terminal, etc. right after powering OFF to prevent an electric shock.

♦ Life display of the cooling fan

- If a cooling fan speed of less than the specified speed is detected, Fan alarm "FN" is displayed on the operation panel or the parameter unit. As an alert output, bit 2 of **Pr.255** turns ON (set to 1), and the Y90 signal and Alarm (LF) signal are also output.
- For the terminal used for the LF signal, set "98" (positive logic) or "198" (negative logic) in any parameter from **Pr.190 to Pr.196 (Output terminal function selection)**.



- When the inverter is mounted with two or more cooling fans, "FN" is displayed even only one of the fans is detected.
- Changing the terminal assignment using Pr.190 to Pr.196 (Output terminal function selection) may affect the other functions. Set parameters after confirming the function of each terminal.

Display estimated main circuit capacitor residual life (Pr.506)

- Even when the power supply cannot be turned OFF, the remaining life of the main circuit capacitor can be estimated without stopping the operation. Note that the remaining life of the main circuit capacitor estimated by this function is theoretical, and should be used as a guideline only.
- The estimated residual life of the main circuit capacitor is displayed in Pr.506.

• The remaining life of the main circuit capacitor is calculated from the energization time and the inverter output power (100% = Start of service life). When the remaining life of the main circuit capacitor falls below 10%, bit 5 of **Pr.255 Life alarm** status display turns ON and a warning is output by the Y90 signal.

◆ Life display of the relay contacts of terminals A, B, and C (Pr.507)

- The degree of deterioration of the relay contacts of terminals A, B, and C is displayed in Pr.507.
- The number of times the contacts of relay turn ON is counted down from 100% (0 time) by 1% (500 times). When the counter reaches 10% (45,000 times), bit 6 of **Pr.255** turns ON and a warning is output by the Y90 signal.
- · Any value can be set in Pr.507.

◆ Life display of the inverter module (Pr.509)

- The degree of deterioration of the inverter module is displayed in Pr.509.
- The degree of deterioration of the inverter module is determined by the change in the surrounding air temperature of the module. (The degree is counted down from 100% (no deterioration).) When the remaining life of the inverter module falls below 15%, bit 8 of **Pr.255** turns ON and a warning is output by the Y90 signal.

◆ Environmental impact diagnosis function (corrosion level display) (Pr.198)

- · The risk of the inverter's corrosive damage (degree of corrosion) can be checked by using a metal corrosion sensor.
- The degree of corrosion is monitored using the metal corrosion sensor (the degree is counted up from level 1). Use Pr.198
 to check the corrosion level. When level 3 is reached, bit 9 of Pr.255 turns ON and a warning is output by the Y90 signal.
- · The following table shows the details of the corrosion level.


Level	Possibility of danger	Definition	Remaining design life (estimation) ^{*1}	Warning output
1	0% to 5%	Corrosion that may affect the inverter is very unlikely to occur.	_	Not output
2	6% to 24%	Corrosion that may affect the inverter is likely to occur. Users should improve the environment (by a filter or ventilation).	Corrosive damage may cause faults of the inverter in a period 16 times as long as the service life so far.	Not output
3	25% to 100%	Corrosion that may affect the inverter is very likely to occur. Users should improve the environment (by a filter or ventilation). Consider replacing the inverter early as required.	Corrosive damage may cause faults of the inverter in a period 4 times as long as the service life so far.	Output

^{*1} Means the remaining service life from when the level is reached. For example, a fault may occur after 4 months if level 3 is reached in a month, and after 12 years if level 3 is reached in 3 years.

8.17 Maintenance timer alarm

The Maintenance timer (Y95) signal is output when the inverter's cumulative energization time reaches the time period set with the parameter. "MT" is displayed on the operation panel. This can be used as a guideline for the maintenance time of peripheral devices.

Pr.	Name	Initial value	Setting range	Description
503 E710	Maintenance timer	0	0 (1 to 9998)	Displays the inverter's cumulative energization time in increments of 100 hours (read-only). Writing the setting of "0" clears the cumulative energization time while Pr.503 = "1 to 9998". (Writing is disabled when Pr.503 = "0".)
504 E711	Maintenance timer warning	9999	0 to 9998	Set the cumulative energization time in 100 hours which triggers the Maintenance timer (Y95) signal output.
E/11	output set time		9999	Without the function

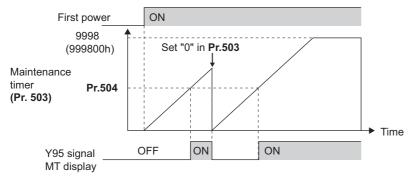

Operation example of the maintenance timer

- The cumulative energization time of the inverter is stored in the EEPROM every hour and displayed in **Pr.503** in 100 h increments. The number indication on **Pr.503** stopped at 9998 (999,800 hours).
- When the value in **Pr.503** reaches the time (100 h increments) set in **Pr.504**, the Maintenance timer (Y95) signal is output, and also "MT" is displayed on the operation panel.
- For the terminal used for the Y95 signal output, assign the function by setting "95" (positive logic) or "195" (negative logic) in any parameter from **Pr.190 to Pr.196 (Output terminal function selection)**.




- The cumulative energization time is counted every hour. Energization time of less than 1 h is not counted.
- Changing the terminal assignment using Pr.190 to Pr.196 (Output terminal function selection) may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.190 to Pr.196 (Output terminal function selection) page 292

8.18 Current average value monitor signal


The output current average value during constant-speed operation and the maintenance timer value are output to the Current average monitor (Y93) signal as a pulse. The output pulse width can be used in a device such as the I/O unit of a programmable controller as a guideline for the maintenance time for mechanical wear, belt stretching, or deterioration of devices with age. The pulse is repeatedly output during constant-speed operation in cycles of 20 seconds to the Current average monitor (Y93) signal.

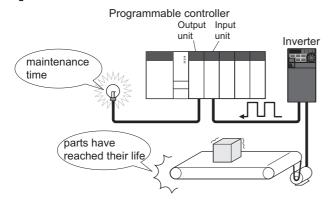

Pr.	Name	Initial value	Setting range	Description
555 E720	Current average time	1 s	0.1 to 1 s	Set the time for calculating the average current during start pulse output (1 second).
556 E721	Data output mask time	0 s	0 to 20 s	Set the time for not obtaining (masking) transitional state data.
557 E722	Current average value monitor signal output reference current	Inverter rated current	0 to 500 A	Set the reference (100%) for outputting the output current average value signal.

♦ Operation example

- The pulse output of the Current average monitor (Y93) signal is indicated below.
- For the terminal used for the Y93 signal output, assign the function by setting "93" (positive logic) or "193" (negative logic) in any parameter of **Pr.190**, **Pr.191**, **Pr.193** to **Pr.196** (Output terminal function selection). (This cannot be assigned by setting in **Pr.192** ABC terminal function selection.)

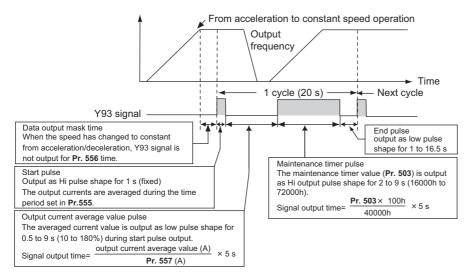

◆ Pr.556 Data output mask time setting

• Immediately after acceleration/deceleration is shifted to constant-speed operation, the output current is unstable (transitional state). Set the time for not obtaining (masking) transitional state data in **Pr.556**.

◆ Pr.555 Current average time setting

• The output current average is calculated during start pulse (1 second) HIGH output. Set the time for calculating the average current during start pulse output in **Pr.555**.

 
Pr.557 Current average value monitor signal output reference current setting

Set the reference (100%) for outputting the output current average value signal. The signal output time is calculated with the following formula.

The output time range is 0.5 to 9 seconds. When the output current average value is less than 10% of the setting value in **Pr.557**, the output time is 0.5 second, and when it is more than 180%, the output time is 9 seconds.

For example, when Pr.557 = 10 A and the output current average value is 15 A:


 $15 \text{ A}/10 \text{ A} \times 5 \text{ s} = 7.5 \text{ s}$, thus the Current average monitor signal maintains LOW output for 7.5 seconds.



♦ Pr.503 Maintenance timer output


After LOW output of the output current value is performed, HIGH output of the maintenance timer value is performed. The maintenance timer value output time is calculated with the following formula.

 The output time range is 2 to 9 seconds. When **Pr.503** is less than 16000 hours, the output time is 2 seconds. When it is more than 72000 hours, the output time is 9 seconds.





- · Masking of the data output and sampling of the output current are not performed during acceleration/deceleration.
- If constant speed changes to acceleration or deceleration during start pulse output, it is judged as invalid data, and HIGH output in 3.5 seconds intervals is performed for the start pulse and LOW output in 16.5 seconds intervals is performed for the end signal. After the start pulse output is completed, minimum 1-cycle signal output is performed even if acceleration/deceleration is performed.

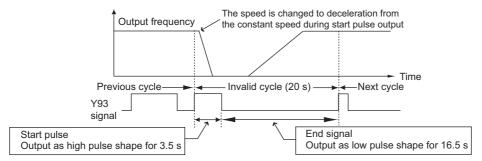

- If the output current value (inverter output current monitor) is 0 A at the completion of the 1-cycle signal output, no signal is output until the next constant-speed state.
- · Under the following conditions, the Y93 signal is output with LOW output in 20 seconds intervals (no data output).
 - When acceleration or deceleration is operating at the completion of the 1-cycle signal output
 - When automatic restart after instantaneous power failure (**Pr.57 Restart coasting time** ≠ "9999") is set, and the 1-cycle signal output is completed during the restart operation.
 - When automatic restart after instantaneous power failure (Pr.57 ≠ "9999") is set, and the restart operation was being performed at the completion of data output masking.
- Changing the terminal assignment using **Pr.190 to Pr.196 (Output terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.57 Restart coasting time page 403, page 408

Pr.190 to Pr.196 (Output terminal function selection) page 292

Pr.503 Maintenance timer page 190

MEMO

CHAPTER 9 (F) Settings for Acceleration/ **Deceleration**

9.1	Setting the acceleration and deceleration time	196
9.2	Acceleration/deceleration pattern	
9.3	Remote setting function	
9.4	Starting frequency and start-time hold function	207
9.5	Minimum motor speed frequency at the motor start up	208
9.6	Shortest acceleration/deceleration (automatic acceleration/deceleration)	209

9 (F) Settings for Acceleration/Deceleration

Purpose	Par	ameter to set		Refer to page
To set the motor acceleration/ deceleration time	Acceleration/deceleration time	P.F000 to P.F003, P.F010, P.F011, P.F020 to P.F022, P.F040, P.F070, P.F071, P.G264	Pr.7, Pr.8, Pr.16, Pr.20, Pr.21, Pr.44, Pr.45, Pr.147, Pr.611, Pr.791, Pr.792, Pr.1103	196
To set the acceleration/deceleration pattern suitable for an application	Acceleration/deceleration pattern	P.F100	Pr.29	201
To command smooth speed transition with terminals	Remote setting function	P.F101	Pr.59	203
To set the starting frequency	Starting frequency and start- time hold	P.F102, P.F103	Pr.13, Pr.571	207, 208
To set optimum acceleration/ deceleration time automatically	Automatic acceleration/ deceleration	P.F500, P.F510 to P.F513, P.A110	Pr.61 to Pr.63, Pr.292, Pr.293	209

9.1 Setting the acceleration and deceleration time

The following parameters are used to set motor acceleration/deceleration time.

Set a larger value for a slower acceleration/deceleration, or a smaller value for a faster acceleration/deceleration.

For the acceleration time at automatic restart after instantaneous power failure, refer to **Pr.611 Acceleration time at a restart** (page 403, page 408).


		Initial v	value ^{*1}	2	2	
Pr.	Name	Gr.1	Gr.2	Setting range		Description
20 F000	Acceleration/deceleration reference frequency	60 Hz	50 Hz	1 to 590 Hz	Set the frequency that is the basis of acceleration/ deceleration time. As acceleration/deceleration time, set time required to change the frequency from stop status Hz) to the frequency set in Pr.20 and vice versa.	
21	Acceleration/deceleration time			0	Increment: 0.1 s	Select the increment for the
F001	increments	0		1	Increment: 0.01 s	acceleration/deceleration time setting.
16 F002	Jog acceleration/deceleration time	0.5 s		0 to 3600 s	change the frequency	eceleration time (time required to from stop status (0 Hz) to the and vice versa) for JOG operation.
611 F003	Acceleration time at a restart	9999		0 to 3600 s		me (time required to change the tatus (0 Hz) to the frequency set in
F003				9999	Standard acceleration time (for example, Pr.7) is applied the acceleration time at restart. Refer to page 403, page 4	
7	Accoloration time					ation time (time required to change the
F010				0 to 3600 s	frequency from stop status (0 Hz) to the frequency set in Pr.20).	
8		5 s*2			Set the motor deceleration time (time required to change the	
F011	Deceleration time	10 s*2		0 to 3600 s	frequency from the free Hz)).	equency set in Pr.20 to stop status (0
44	Second acceleration/	5 s ^{*2}	0 to 3600 s		Set the acceleration/deceleration time used while the RT	
F020	deceleration time	10 s ^{*3}		0 10 3000 \$	signal is ON.	
45	Second deceleration time	9999		0 to 3600 s	Set the deceleration ti	me used while the RT signal is ON.
F021	Coona accordancii tiiic	0000		9999		applies to the deceleration time.
147 F022	Acceleration/deceleration time switching frequency	9999		0 to 590 Hz		ere the acceleration/deceleration time et in Pr.44 and/or Pr.45 .
1 022	switching frequency			9999	Function disabled.	
791	Acceleration time in low-speed	• 9999		0 to 3600 s	Set the acceleration time in a low-speed range (less than 1 10 of the rated motor frequency).	
F070	range			9999	The acceleration time set in Pr.7 is applied. (While the RT signal is ON, the second function is enabled.)	
792	Deceleration time in low-speed			0 to 3600 s	Set the deceleration time in a low-speed range (less than 1/10 of the rated motor frequency).	
F071	range	9999		9999	The deceleration time set in Pr.8 is applied. (While the RT signal is ON, the second function is enabled.)	
1103 F040	Deceleration time at emergency stop	5 s		0 to 3600 s	Set the motor deceleration time at a deceleration by turning ON the X92 signal.	

^{*1} Gr.1 and Gr.2 are the parameter initial value groups. (Refer to page 52.)

^{*2} Initial value for the FR-E820-0175(3.7K) or lower, FR-E840-0095(3.7K) or lower, FR-E860-0061(3.7K) or lower, and FR-E820S-0110(2.2K) or lower.

 $^{^{*}3}$ Initial value for the FR-E820-0240(5.5K) or higher, FR-E840-0120(5.5K) or higher, and FR-E860-0090(5.5K) or higher.

◆ Control block diagram

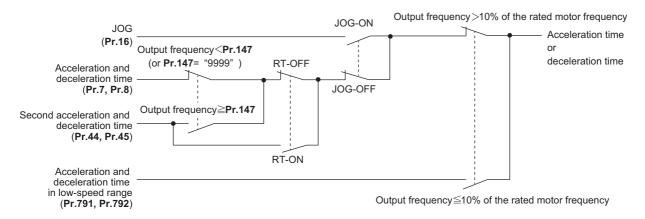


◆ Acceleration time setting (Pr.7, Pr.20)

- Use Pr.7 Acceleration time to set the acceleration time required to change the frequency to the frequency set in Pr.20
 Acceleration/deceleration reference frequency from stop status.
- · Set the acceleration time according to the following formula.

Acceleration time setting = **Pr.20** setting × (Acceleration time to change the frequency from stop status to maximum frequency) / (Maximum frequency - **Pr.13** setting)

• For example, the following calculation is performed to find the setting value for **Pr.7** when increasing the output frequency to the maximum frequency of 50 Hz in 10 seconds with **Pr.20** = 60 Hz (initial value) and **Pr.13** = 0.5 Hz.

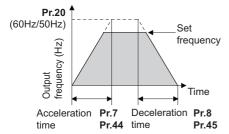

◆ Deceleration time setting (Pr.8, Pr.20)

- Use Pr.8 Deceleration time to set the deceleration time required to change the frequency from the frequency set in Pr.20
 Acceleration/deceleration reference frequency to stop status.
- · Set the deceleration time according to the following formula.

Deceleration time setting = **Pr.20** setting × (Deceleration time to change the frequency from maximum frequency to stop status) / (Maximum frequency - **Pr.10** setting)

• For example, the following calculation is used to find the setting value for **Pr.8** when decreasing the output frequency from the maximum frequency of 50 Hz in 10 seconds with **Pr.20** = 120 Hz and **Pr.10** = 3 Hz.

Pr.8 setting = 120 Hz × 10 s / (50 Hz - 3 Hz) ≈ 25.5 s



- If the acceleration/deceleration time is set, the actual motor acceleration/deceleration time cannot be made shorter than the shortest acceleration/deceleration time determined by the mechanical system J (moment of inertia) and motor torque.
- If the **Pr.20** setting is changed, the **Pr.125** and **Pr.126** (frequency setting signal gain frequency) settings do not change. Set **Pr.125** and **Pr.126** to adjust the gains.
- Under PM sensorless vector control, if the protective function (E.OLT) is activated due to insufficient torque in the low-speed range, set longer acceleration/deceleration times only in the low-speed range in Pr.791 Acceleration time in low-speed range and Pr.792 Deceleration time in low-speed range.

Changing the minimum increment of the acceleration/deceleration time (Pr.21)

- Use **Pr.21** to set the minimum increment of the acceleration/deceleration time.
 - Setting value "0" (initial value): minimum increment 0.1 s
 - Setting value "1": minimum increment 0.01 s
- Pr.21 setting allows the minimum increment of the following parameters to be changed.
 - Pr.7, Pr.8, Pr.16, Pr.44, Pr.45, Pr.791, Pr.792, Pr.1103


NOTE

- · Pr.21 setting does not affect the minimum increment setting of Pr.611 Acceleration time at a restart.
- The operation panel provides a 4-digit readout (including the number of decimal places) on a value of parameters. Therefore, a value of "100" or larger is set/displayed only in increments of 0.1 second even if **Pr.21** = "1".
- When **Pr.21** is set to "0" after the time is set in 0.01 s increments while **Pr.21** is set to "1", the value is displayed in increments of 0.1 second (rounded down to one decimal place). However, the value for the acceleration/deceleration time setting can be set in increments of 0.01 second.

Setting multiple acceleration/deceleration times (RT signal, Pr.44, Pr.45, and Pr.147)

- **Pr.44 and Pr.45** are applied when the RT signal is ON or when the output frequency is equal to or higher than the frequency set in **Pr.147 Acceleration/deceleration time switching frequency**.
- Even at the frequency lower than the Pr.147 setting, turning ON the RT signal switches the acceleration/deceleration time
 to the second acceleration/deceleration time. The priority of the signals and settings is as follows: RT signal > Pr.147
 setting.
- · When "9999" is set in Pr.45, the deceleration time becomes equal to the acceleration time (Pr.44).
- While the Pr.147 setting is equal to or less than the setting of Pr.10 DC injection brake operation frequency or the Pr.13
 Starting frequency, the time used as the acceleration/deceleration time switches to the time set in Pr.44 (Pr.45) when the output frequency reaches or exceeds the Pr.10 or Pr.13 setting.

Pr.147 setting	Acceleration/deceleration time	Description
9999 (initial value)	Pr.7, Pr.8	Acceleration/deceleration time is not automatically changed.
0.00 Hz	Pr.44, Pr.45	Second acceleration/deceleration time is applied from the start.
0.01 Hz ≤ Pr.147 ≤ Set frequency	Output frequency < Pr.147: Pr.7, Pr.8 Pr.147 ≤ Output frequency: Pr.44, Pr.45	Acceleration/deceleration time is automatically changed.
Set frequency < Pr.147	Pr.7, Pr.8	Not changed as the frequency has not reached the switchover frequency.

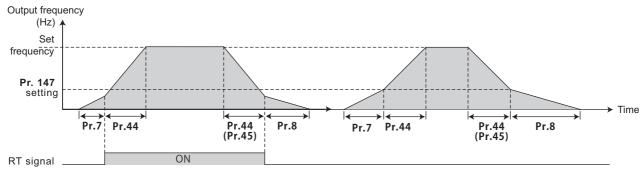


NOTE

- The reference frequency during acceleration/deceleration depends on the **Pr.29 Acceleration/deceleration pattern** selection setting. (Refer to page 201.)
- The RT signal can be assigned to an input terminal by setting **Pr.178 to Pr.189 (Input terminal function selection)**. Changing the terminal assignment may affect other functions. Set parameters after confirming the function of each terminal.
- The RT signal is the Second function selection signal which also enables other second functions. (Refer to page 334.)

◆ Setting the acceleration/deceleration time in the low-speed range (Pr.791, Pr.792)

If torque is required in the low-speed range (less than 10% of the rated motor frequency) under PM sensorless vector
control, set the Pr.791 Acceleration time in the low-speed range and Pr.792 Deceleration time in low-speed range
settings higher than the Pr.7 Acceleration time and Pr.8 Deceleration time settings so that the mild acceleration/
deceleration is performed in the low-speed range. (When the RT signal is turned ON, the second acceleration/deceleration
time is prioritized.)

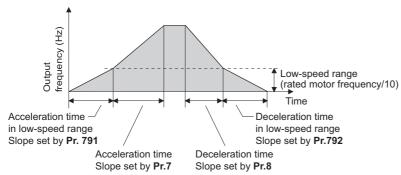




• Set Pr.791 (Pr.792) to a value larger than the Pr.7 (Pr.8) setting. If set as Pr.791 < Pr.7, the operation is performed as Pr.791 = Pr.7. If set as Pr.792 < Pr.8, the operation is performed as Pr.792 = Pr.8.

◆ Emergency stop function (Pr.1103)

- When the Emergency stop (X92) signal is ON, the deceleration stop is performed according to the settings in the **Pr.1103**Deceleration time at emergency stop and **Pr.815 Torque limit level 2**.
- To input the X92 signal, set "92" in any parameter from **Pr.178 to Pr.189 (Input terminal function selection)** to assign the function to a terminal.
- The X92 signal is a normally closed input (NC contact input) when it is input via an external input terminal, and a normally open input (NO contact input) when it is input via communication.
- "PS" is displayed on the operation panel during activation of the emergency stop function.

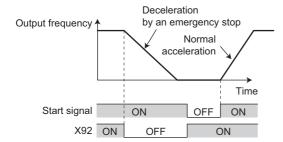



The X92 signals can be assigned to an input terminal by setting Pr.178 to Pr.189 (Input terminal function selection).
 Changing the terminal assignment may affect other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.3 Base frequency page 428
Pr.10 DC injection brake operation frequency page 434
Pr.29 Acceleration/deceleration pattern selection page 201

Pr.125, Pr.126 (frequency setting gain frequency) □ page 318 Pr.178 to Pr.189 (Input terminal function selection) □ page 328


9.2 Acceleration/deceleration pattern

The acceleration/deceleration pattern can be set according to the application.

Pr.	Name	Initial value	Setting range	Description	
00	Acceleration/deceleration pattern selection	Acceleration/deceleration pattern		0	Linear acceleration/deceleration
29 F100			0	1	S-pattern acceleration/deceleration A
1 100			2	S-pattern acceleration/deceleration B	


◆ Linear acceleration/deceleration (Pr.29 = "0" (initial value))

 • When the frequency is changed for acceleration, deceleration, etc. during inverter operation, the output frequency is changed linearly (linear acceleration/deceleration) to reach the set frequency without straining the motor and inverter. Linear acceleration/deceleration has a uniform frequency/time slope.



◆ S-pattern acceleration/deceleration A (Pr.29 = "1")

- Use this when acceleration/deceleration is required for a short time until a high-speed area equal to or higher than the base frequency, such as for the main shaft of the machine.
- The acceleration/deceleration pattern has the Pr.3 Base frequency (Pr.84 Rated motor frequency under PM motor control) (fb) as the point of inflection in an S-pattern curve, and the acceleration/deceleration time can be set to be suitable for the motor torque reduction in the constant-power operation range at the base frequency (fb) or more.

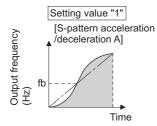

· Acceleration/deceleration time calculation method when the set frequency is equal to or higher than the base frequency

Acceleration time $t = (4/9) \times (T/fb^2) \times f^2 + (5/9) \times T$ Where T is the acceleration/deceleration time (s), f is the set frequency (Hz), and fb is the base frequency (rated motor frequency)

• Reference (0 Hz to set frequency) of acceleration/deceleration time when Pr.3 = 60 Hz


Acceleration/deceleration time (s)	Set frequency (Hz)				
Acceleration/deceleration time (s)	60	120	200	400	
5	5	12	27	102	
15	15	35	82	305	



• For the acceleration/deceleration time setting of the S-pattern acceleration/deceleration A, set the time to **Pr.3** (**Pr.84** under PM sensorless vector control) instead of **Pr.20 Acceleration/deceleration reference frequency**.

◆ S-pattern acceleration/deceleration B (Pr.29 = "2")

 • This is useful for preventing collapsing stacks such as on a conveyor. S-pattern acceleration/deceleration B can reduce the impact during acceleration/deceleration by accelerating/decelerating while maintaining an S-pattern from the present frequency (f2) to the target frequency (f1).





- When the RT signal turns ON during acceleration or deceleration with the S-pattern acceleration/deceleration B enabled, a pattern of acceleration or deceleration changes to linear at the moment.
- When acceleration/deceleration time (such as Pr.7 and Pr.8) is set to "0 s" under Real sensorless vector control, linear
 acceleration and deceleration are performed for the S-pattern acceleration/deceleration (Pr.29 = "1 or 2").
- Set linear acceleration/deceleration (**Pr.29** = "0" (initial setting)) when torque control is performed under Real sensorless vector control. When acceleration/deceleration patterns other than the linear acceleration/deceleration are selected, the protective function of the inverter may be activated.



Pr.3 Base frequency page 428

Pr.7 Acceleration time, Pr.8 Deceleration time, Pr.20 Acceleration/deceleration reference frequency 3 page 196

9.3 Remote setting function


Even if the operation panel is located away from the enclosure, contact signals can be used to perform continuous variablespeed operation, without using analog signals.


		Initial	Setting		Description	
Pr.	Name	value	range	RH, RM, RL signal function	Frequency setting storage	Deceleration to the main speed or lower
			0	Multi-speed setting	_	
			1	Remote setting	Enabled	
			2	Remote setting	Disabled	
59 F101	Remote function	Remote function selection	Remote setting	Disabled (Turning OFF the STF/STR signal clears the remotely- set frequency.)	Not available	
1.101	Sciodion		11	Remote setting	Enabled	
			12	Remote setting	Disabled	
			13	Remote setting	Disabled (Turning OFF the STF/STR signal clears the remotely- set frequency.)	Available

♦ Remote setting function

• When **Pr.59** ≠ "0" (remote setting enabled), the functions of the signals are as shown in the following table.

Signal name	Function	Description
STF/STR	Forward/Reverse	The inverter accelerates the motor in the forward or reverse direction up to the main speed or to the frequency stored by the remote setting function.
RH	Acceleration	The set frequency increases according to the Pr.44 setting.
RM	Deceleration	The set frequency decreases according to the Pr.45 setting.
RL	Clear	The set frequency is cleared and the main speed is applied.
Terminal 2 (analog signal)	Main speed	The setting of the main speed is used as a base. The main speed is increased by the RH signal and decreased by the RM signal.

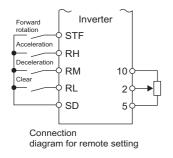

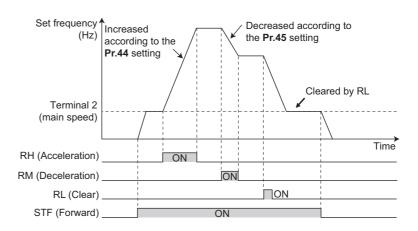

♦ Main speed


· The main speed used in the remote setting corresponds with each of the following operation modes.

Operation mode	Main speed
PU operation mode / NET operation mode	Digital setting
External operation mode / PU/External combined operation mode 2 (Pr.79 = "4")	Analog input
PU/External combined operation mode 1 (Pr.79 = "3")	Analog input via terminal 4 (AU signal ON)

Acceleration/deceleration operation


• The output frequency changes as follows when the set frequency is changed by the remote setting function.

Frequency	Time setting	Description			
Set frequency	Pr.44/Pr.45	The set frequency increases/decreases by remote setting according to the Pr.44/Pr.45 setting.			
Output frequency	Pr.7/Pr.8	The output frequency increases/decreases by the set frequency according to the Pr.7/Pr.8 setting.			

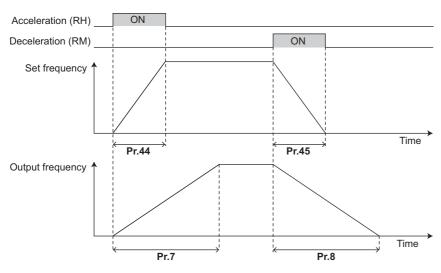

- NOTE
 - · If the time setting of the output frequency is longer than the time setting of the set frequency, the motor accelerates/decelerates according to the time setting of the output frequency.
 - Deceleration to the main speed or lower

By setting Pr.59 = "11 to 13", the speed can be decelerated to the frequency lower than the main speed (set by the External operation frequency (except multi-speed setting) or PU operation frequency).

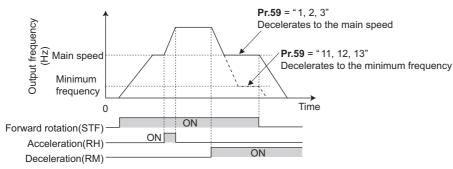

- Regardless of whether the remote setting is enabled or disabled, the acceleration/deceleration time set for the output frequency can be changed to the second acceleration/deceleration time by turning ON the RT signal.
- The acceleration/deceleration time setting of the set frequency is fixed at the Pr.44/Pr.45 setting.

Frequency setting storage

The remotely set frequency is stored, held, or cleared according to the Pr.59 setting. When the inverter is turned ON again and the operation is resumed, the setting shown in the parentheses will be applied.


Pr.59 setting	Power OFF	STF/STR signal OFF
1, 11	Stored (stored frequency)	Held (stored frequency)
2, 12	Cleared (main speed)	Held (stored frequency)
3, 13	Clear (main speed)	Cleared (main speed)

· Storage conditions

The remotely-set frequency is stored at the point when the start signal (STF or STR) turns OFF. The remotely-set frequency is stored every minute after turning OFF (ON) the RH and RM signals together. Every minute, the frequency is overwritten in the EEPROM if the latest frequency is different from the previous one when comparing the two. This cannot be written using the RL signal.




- When switching the start signal from ON to OFF, or changing frequency by the RH or RM signal frequently, set the frequency setting value storage function (write to EEPROM) invalid (**Pr.59** = "2, 3, 12, 13"). If the frequency setting value storage function is valid (**Pr.59** = "1, 11"), the frequency is written to EEPROM frequently, and this will shorten the life of the EEPROM.
- The range of frequency changeable using the acceleration (RH) signal and the deceleration (RM) signal is 0 to the maximum frequency (set in Pr.1 or Pr.18). Note that the maximum value of set frequency is equal to the total of the main speed and the maximum frequency.

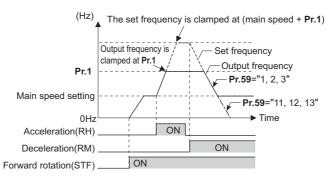


- Even if the start signal (STF or STR) is OFF, turning ON the RH or RM signal varies the preset frequency.
- The RH, RM, or RL signal can be assigned to an input terminal by setting Pr.178 to Pr.189 (Input terminal function selection). Changing the terminal assignment may affect other functions. Set parameters after confirming the function of each terminal.
- The inverter can be used in the Network operation mode.
- The remote setting function is invalid during JOG operation and PID control operation.
- · The multi-speed operation function is invalid when remote setting function is selected.

When the setting frequency is "0"

• Even when the remotely-set frequency is cleared by turning ON the clear (RL) signal after turning OFF (ON) both the RH and RM signals, the inverter operates at the remotely-set frequency stored in the last operation if power is reapplied before one minute has elapsed since turning OFF (ON) both the RH and RM signals.

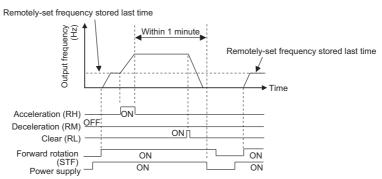

• When the remotely-set frequency is cleared by turning ON the clear (RL) signal after turning OFF (ON) both the RH and RM signals, the inverter operates at the frequency in the remotely-set frequency cleared state if power is reapplied before one minute has elapsed since turning OFF (ON) both the RH and RM signals.

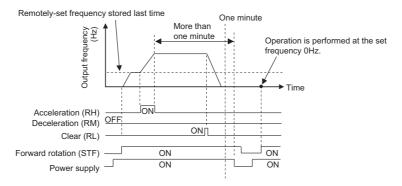

∴ CAUTION

· When using the remote setting function, set the maximum frequency again according to the machine.

Parameters referred to

Pr.1 Maximum frequency, Pr.18 High speed maximum frequency page 253

Pr.7 Acceleration time, Pr.8 Deceleration time, Pr.44 Second acceleration/deceleration time, Pr.45 Second deceleration time acceleration time, Pr.45 Second deceleration time are page 196

Pr.178 to Pr.189 (Input terminal function selection) page 328

9.4 Starting frequency and start-time hold function

Magnetic flux Sensorless Vector


It is possible to set the starting frequency and hold the set starting frequency for a certain period of time.

Set these functions when a starting torque is needed or the motor drive at start needs smoothing.

Pr.	Name	Initial value	Setting range	Description
13 F102	Starting frequency	0.5 Hz	0 to 60 Hz	Set the starting frequency at which the start signal is turned ON.
571	Holding time at a start	9999	0 to 10 s	Set the holding time of the frequency set in Pr.13 .
F103	Holding time at a start	9999	9999	The holding function at start is disabled.

♦ Starting frequency setting (Pr.13)

- The frequency at start can be set in the range of 0 to 60 Hz.
- · Set the starting frequency at which the start signal is turned ON.

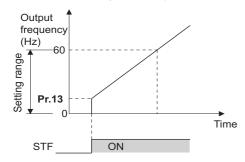


NOTE

• The inverter does not start if the frequency setting signal has a value lower than that of **Pr.13**.

For example, while **Pr.13** = 5 Hz, the inverter output starts when the frequency setting signal reaches 5 Hz.

◆ Start-time hold function (Pr.571)

- This function holds during the period set in Pr.571 and the output frequency set in Pr.13 Starting frequency.
- · This function performs initial excitation to smooth the motor drive at a start.

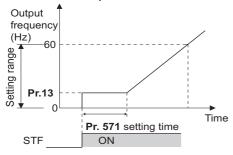

NOTE

- When **Pr.13** = 0 Hz, the starting frequency is held at 0.01 Hz.
- · When the start signal was turned OFF during start-time hold, deceleration is started at that point.
- At switching between forward rotation and reverse rotation, the starting frequency is valid but the start-time hold function is disabled.

⚠CAUTION

• Note that when **Pr.13** is set to a value equal to or lower than the setting of **Pr.2 Minimum frequency**, simply turning ON the start signal runs the motor at the frequency set in **Pr.2** even if the command frequency is not given.

Parameters referred to

Pr.2 Minimum frequency page 253

9.5 Minimum motor speed frequency at the motor start up

PM

Set the frequency where the PM motor starts running.


Set the deadband in the low-speed range to eliminate noise and offset deviation when setting a frequency with analog input.

Pr.	Name	Initial value	Setting range	Description
13 F102	Starting frequency	Minimum frequency / minimum rotations per minute	0 to 60 Hz	Set the frequency where the motor starts running.

◆ Starting frequency setting (Pr.13)

- The frequency where the PM motor starts running can be set in the range of 0 to 60 Hz.
- When the frequency command specifies the frequency less than the one set in Pr.13 Starting frequency, the PM motor is stopped.

When the frequency command specifies the frequency equal to the set frequency or higher, the PM motor accelerates according to the setting of **Pr.7 Acceleration time**.

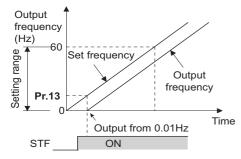

• NOTE

- Under induction motor control (under V/F control, Advanced magnetic flux vector control, Real sensorless vector control, and Vector control), the output starts at the frequency set in Pr.13. Under PM sensorless vector control, the output always starts at 0.01 Hz.
- The inverter does not start if the frequency setting signal has a value lower than that of **Pr.13**. For example, while **Pr.13** = 20 Hz, the inverter output starts when the frequency setting signal reaches 20 Hz.

^CAUTION

• Note that when **Pr.13** is set to a value equal to or lower than **Pr.2 Minimum frequency**, simply turning ON the start signal runs the motor at the frequency set in **Pr.2** even if the command frequency is not given.

Parameters referred to

Pr.2 Minimum frequency page 253 Pr.7 Acceleration time page 196

9.6 Shortest acceleration/deceleration (automatic acceleration/deceleration)

Magnetic flux Sensorless Vector

The inverter can be operated with the same conditions as when the appropriate value is set to each parameter even when acceleration/deceleration time and V/F pattern are not set. This function is useful for operating the inverter without setting detailed parameters.

Pr.	Name	Initial value	Setting range	Description	
292 F500 A110	Automatic acceleration/ deceleration	0	0	Normal operation	
			1	Shortest acceleration/deceleration (without brakes)	
			11	Shortest acceleration/deceleration (with brakes)	
71110			7, 8	Brake sequence 1, 2 (Refer to page 370.)	
61 F510	Reference current	9999	0 to 500 A	Set the reference current during shortest acceleration/ deceleration.	
F510			9999	Rated output current value reference of the inverter	
62	Reference value at	9999	0% to 400%	Set the speed limit value during shortest acceleration.	
F511	acceleration		9999	The limit value is 150% (120% for the LD rating).	
63	Reference value at	9999	0% to 400%	Set the speed limit value during shortest deceleration.	
F512	deceleration		9999	The limit value is 150% (120% for the LD rating).	
293 F513	Acceleration/deceleration separate selection	0	0	Shortest acceleration/deceleration for both acceleration and deceleration	
			1	Shortest acceleration/deceleration for acceleration only	
			2	Shortest acceleration/deceleration for deceleration only	

◆ Shortest acceleration/deceleration (Pr.292 = "1, 11", Pr.293)

- Set this parameter to accelerate/decelerate the motor at the shortest time. This function is useful when the motor needs to be accelerated/decelerated at a shorter time, such as for a machine, but the designed value of the machine constant is not known.
- At acceleration/deceleration, this function adjusts the motor to accelerate/decelerate with the maximum inverter output
 torque using the Pr.7 Acceleration time and Pr.8 Deceleration time setting as reference. (Pr.7 and Pr.8 settings are not
 changed.)
- Use Pr.293 Acceleration/deceleration separate selection to apply the shortest acceleration/deceleration to one of acceleration and deceleration only.
 - When "0" (initial value) is set, the shortest acceleration/deceleration is performed for both acceleration and deceleration.
- · Set "11" in Pr.292 when a brake resistor or brake unit is connected. The deceleration time can further be shortened.
- When the shortest acceleration/deceleration is selected under V/F control and Advanced magnetic flux vector control, the stall prevention operation level during acceleration/deceleration becomes 150% (adjustable using Pr.61 to Pr.63). The setting of Pr.22 Stall prevention operation level and stall level by analog input are used only during a constant speed operation.

Under Real sensorless vector control and Vector control, the torque limit level (**Pr.22**, etc.) is applied during acceleration/deceleration. The adjustments by **Pr.61 to Pr.63** are disabled.

- · It is inappropriate to use for the following applications.
 - Machines with large inertia (10 times or more), such as a fan. Since stall prevention operation is activated for a long time, this type of machine may be shut off due to motor overloading, etc.
 - When the inverter is always operated at a specified acceleration/deceleration time.



- Even if automatic acceleration/deceleration has been selected, inputting the JOG signal (JOG operation) or RT signal (Second
 function selection) during an inverter stop switches to the normal operation and give priority to JOG operation or second
 function selection. Note that during operation, an input of JOG and RT signal does not have any influence even when the
 automatic acceleration/deceleration is enabled.
- Since acceleration/deceleration is made with the stall prevention operation being activated, the acceleration/deceleration speed always varies according to the load conditions.
- By setting Pr.7 and Pr.8 appropriately, it is possible to accelerate/decelerate with a shorter time than when selecting the shortest acceleration/deceleration.
- The shortest acceleration/deceleration is enabled when the operation starts with the RT signal OFF while this function and the stop-on-contact control are both enabled. (Stop-on-contact control is not enabled when the RT and RL signals are turned ON during operation.)
- The shortest acceleration/deceleration is disabled when the operation starts after the RT signal is turned ON during a stop
 while this function and the stop-on-contact control are both enabled. (Stop-on-contact control is enabled by turning ON the RL
 signal.)

Shortest and optimum acceleration/deceleration mode adjustment (Pr.61 to Pr.63)

• The application range can be expanded by setting the parameters for adjustment of Pr.61 to Pr.63.

Pr.	Name	Setting range	Description
61	Reference current	0 to 500 A	Set the rated motor current value such as when the motor capacity and inverter capacity differ. Set the reference current (A) of the stall prevention operation level during acceleration/ deceleration.
		9999 (initial value)	The rated inverter current value is the reference.
62 63	Reference value at acceleration Reference value at deceleration	0% to 400%	Used to change the reference level of acceleration and deceleration. Set the stall prevention operation level (percentage of current value of Pr.61) during acceleration/deceleration.
		9999 (initial value)	Stall prevention operation level is 150% for the shortest acceleration/deceleration.



- When Real sensorless vector control or Vector control is selected with the shortest acceleration/deceleration, Pr.61 to Pr.63
 are invalid
- Even if **Pr.61 to Pr.63** are set once, changing the setting to other than the shortest acceleration/deceleration (**Pr.292** ≠ "1 or 11") automatically resets to the initial setting (9999). Set **Pr.61 to Pr.63** after setting **Pr.292**.

Parameters referred to

Pr.7 Acceleration time, Pr.8 Deceleration time page 196
Pr.22 Stall prevention operation level page 256
Pr.22 Torque limit level page 114

CHAPTER 10 (D) Operation Command and Frequency Command

10.1	Operation mode selection	212
10.2	Startup of the inverter in Network operation mode at power-ON	222
10.3	Start command source and frequency command source during communication operation	223
10.4	Reverse rotation prevention selection	231
10.5	JOG operation	232
10.6	Operation by multi-speed setting	234

10 (D) Operation Command and Frequency Command

Purpose	Parameter to set			Refer to page
To select the operation mode	Operation mode selection	P.D000	Pr.79	212
To start up the inverter in Network operation mode at power-ON	Communication startup mode selection	P.D000, P.D001	Pr.79, Pr.340	222
To select the command source during communication operation	Operation and speed command sources during communication operation, command source selection	P.D010 to P.D013	Pr.338, Pr.339, Pr.550, Pr.551	223
To prevent the motor from rotating reversely	Reverse rotation prevention selection	P.D020	Pr.78	231
To change the setting resolution of the torque limit	Set resolution switchover	P.D030	Pr.811	268
To perform JOG (inching) operation	JOG operation	P.D200, P.F002	Pr.15, Pr.16	232
To control the frequency with combinations of terminals	Multi-speed operation	P.D301 to P.D315	Pr.4 to Pr.6, Pr.24 to Pr.27, Pr.232 to Pr.239	234
To select the torque command method during torque control	Torque command source selection	P.D400 to P.D402	Pr.804 to Pr.806	143

10.1 Operation mode selection

Select the operation mode of the inverter.

The mode can be changed among operation using external signals (External operation), operation by the operation panel (PU operation), combined operation of PU operation and External operation (External/PU combined operation), and Network operation (via RS-485 communication or Ethernet communication, or when a communication option is used).

Pr.	Name	Initial value	Setting range	Description
79 D000	Operation mode selection	0	0 to 4, 6, 7	Selects the operation mode.

The following table lists valid and invalid commands in each operation mode.

Pr.79 setting		LED indicator ■: OFF □: ON	Refer to page		
0 (initial value)	PU/EXT key selection of the pressing the PU/EXT key. At power ON, the inverter is	PU operation mode PU EXT NET External operation mode PU EXT NET NET NET operation mode PU EXT NET NET NET	216		
	Operation mode	Frequency command	Start command	PU operation	
1	Fixed at PU operation mode.	Sent from the operation panel	Input using the RUN key on the operation panel	mode PU EXT NET	217
2	Fixed at External operation mode. However, the inverter operation mode can also be changed to the Network operation mode.	Sent using external signals (input via terminal 2 or 4, using the JOG signal, using the multi-speed setting function, etc.).	Sent using external signals (via terminal STF or STR).	External operation mode PU EXT NET NET operation mode PU EXT NET	216
3	External/PU combined operation mode 1	Sent from the operation panel or sent using external signals (input using the multi-speed setting function or via terminal 4).*1	Sent using external signals (via terminal STF or STR).	External/PU combined operation mode	217
4	External/PU combined operation mode 2	Sent using external signals (input via terminal 2 or 4, using the JOG signal, using the multi-speed setting function, etc.).	Input using the RUN key on the operation panel	■ PU ■ EXT NET	217
6	Operation mode switchover Switching from among the P operation.	PU operation mode PU EXT NET External operation	218		
7	External operation mode (Pt X12 signal ON: Switchover t operation). X12 signal OFF: Switchover	mode PU EXT NET NET operation mode PU EXT NET	218		

^{*1} The following is the frequency commands listed in descending order of priority when "3" is set in **Pr.79**: Multi-speed setting function (RL/RM/RH/REX signal) > PID control (X14 signal) > terminal 4 analog input (AU signal) > digital input from the operation panel.

◆ Operation mode basics

- The operation mode specifies the source of the start command and the frequency command for the inverter.
- · Basic operation modes are as follows.

External operation

For giving a start command and a frequency command with an external potentiometer or switches which are


mode: connected to the control circuit terminal.

PU operation mode: For giving a start command and a frequency command with the operation panel.

Network operation mode For giving a start command and a frequency command via RS-485 communication or Ethernet

(NET operation mode): communication, or using a communication option.


• The operation mode can be selected from the operation panel or with the communication instruction code.

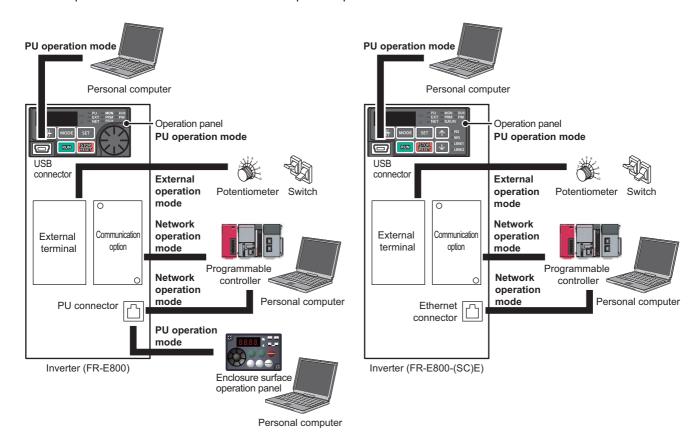



- There is a choice of two settings, "3" and "4", for the External/PU combined operation mode. The startup method differs according to the setting value.
- In the initial setting, the PU stop selection (function to stop the inverter operation by pressing the STOP/RESET key on the operation panel) is enabled even in the operation mode other than the PU operation mode. (Refer to **Pr.75** on page 161.)

◆ Operation mode switching method

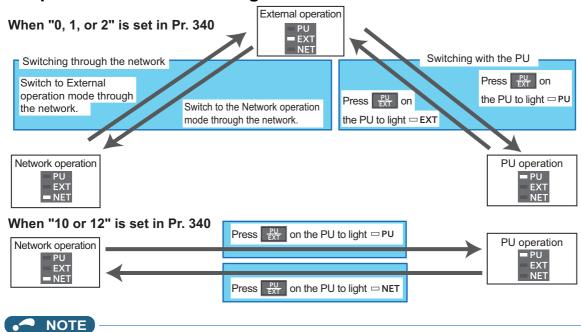

• For details on switching by external terminals, refer to the following pages.

PU operation external interlock (X12 signal) 🖙 page 218

PU/External operation switchover (X16 signal) 🖙 page 219

PU/NET operation switchover (X65 signal), External/NET operation switchover (X66 signal) 등 page 220

Pr.340 Communication startup mode selection page 222

♦ Operation mode selection flow


Referring to the following table, select the basic parameter settings or terminal wiring related to the operation mode.

Method to give	Method to give		Operation method			
start command	frequency setting command	Parameter setting	Start command	Frequency setting		
	External signals (input via terminal 2 or 4, using the JOG signal, using the multi-speed setting function, etc.)	Pr.79 = "2" (Fixed at External operation mode)	Turn ON terminal STF/STR.	Turn ON a terminal used for frequency setting.		
External signals (via terminal STF/	Operation panel	Pr.79 = "3" (External/PU combined operation mode 1)	Turn ON terminal STF/STR.	Digital setting		
STR)	USB connector	Pr.79 = "3" (External/PU combined operation mode 1)	Turn ON terminal STF/STR.	Digital setting		
	Communication (PU connector / Ethernet connector)	Pr.338 = "1" Pr.340 = "1"	Turn ON terminal STF/STR.	Transmit a frequency command via communication.		
	Communication (via communication option)	Pr.338 = "1" Pr.340 = "1"	Turn ON terminal STF/STR.	Transmit a frequency command via communication.		
Operation panel (RUN key)	External signals (input via terminal 2 or 4, using the JOG signal, using the multi-speed setting function, etc.)	Pr.79 = "4" (External/PU combined operation mode 2)	Press the RUN key.	Turn ON a terminal used for frequency setting.		
	Operation panel	Pr.79 = "1" (Fixed at PU operation mode)	Press the RUN key.	Digital setting		
	USB connector Communication (PU connector / Ethernet connector / communication option)	Not available				
Communication	External signals (input via terminal 2 or 4, using the JOG signal, using the multi-speed setting function, etc.)	Pr.339 = "1" Pr.340 = "1"	Transmit a start command via communication	Turn ON a terminal used for frequency setting.		
(PU connector / Ethernet connector)	USB connector Communication (via communication option)	Not available				
	Communication (PU connector / Ethernet connector)	Pr.340 = "1"	Transmit a start command via communication	Transmit a frequency command via communication.		
Communication (via communication option)	External signals (input via terminal 2 or 4, using the JOG signal, using the multi-speed setting function, etc.)	Pr.339 = "1" Pr.340 = "1"	Transmit a start command via communication	Turn ON a terminal used for frequency setting.		
	USB connector Communication (PU connector / Ethernet connector)	Not available				
	Through communication (via communication option)	Pr.340 = "1"	Transmit a start command via communication	Transmit a frequency command via communication.		

◆ External operation mode (Pr.79 = "0 (initial value) or 2")

- Select the External operation mode when the start command and the frequency command are applied from a frequency setting potentiometer, start switch, etc. which are provided externally and connected to the control circuit terminals of the inverter.
- Generally, parameter change cannot be performed in the External operation mode. (Some parameters can be changed. Refer to page 173,)
- When **Pr.79** = "0 or 2", the inverter starts up in the External operation mode at power-ON. (When using the Network operation mode, refer to page 222.)

- When parameter changing is seldom necessary, setting "2" fixes the operation mode to the External operation mode.
 When frequent parameter changing is necessary, setting "0" (initial value) allows the operation mode to be changed easily to the PU operation mode by pressing the PU/EXT key on the operation panel. After switching to the PU operation mode, always return to the External operation mode.
- The STF or STR signal is used as a start command. The input voltage or current via terminal 2 or 4, multi-speed setting signal, or JOG signal is used as a frequency command.

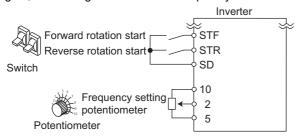


◆ PU operation mode (Pr.79 = "1")

- Select the PU operation mode when giving start and frequency commands by only the key operation of the operation panel.
- When **Pr.79** ="1", the inverter starts up in the PU operation mode at power-ON. The mode cannot be changed to other operation modes.
- When the PU operation mode is selected, the PU operation mode (PU) signal can be output.
 For the terminal used for the PU signal, set "10" (positive logic) or "110" (negative logic) in any parameter from Pr.190 to Pr.196 (Output terminal function selection).



◆ PU/External combined operation mode 1 (Pr.79 = "3")


- Select the PU/External combined operation mode 1 when giving a frequency command from the operation panel and giving a start command with the external start switches.
- Set "3" in Pr.79. The mode cannot be changed to other operation modes.
- When the frequency commands are given using the multi-speed setting signals (external signals), they have a higher priority than the frequency commands given from the PU. When the AU signal is ON, inputting the command signals via terminal 4 is enabled.

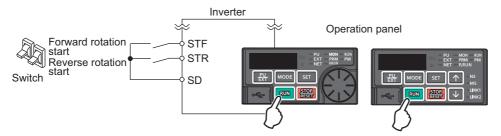

◆ PU/External combined operation mode 2 (Pr.79 = "4")

• Select the PU/External combined operation mode 2 when giving a frequency command from the external potentiometer, or multi-speed and JOG signals, and giving a start command by key operation of the operation panel.

• Set "4" in Pr.79. The mode cannot be changed to other operation modes.

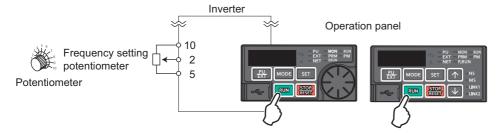

◆ Operation mode switchover during operation (Pr.79 = "6")

 During operation, the inverter operation mode can be switched from among the PU, External, and Network (Network operation mode is selectable via RS-485 communication or Ethernet communication, or when a communication option is used).

Operation mode switchover	Operation/operating status
External operation→PU operation	Use the operation panel to change the operation mode to the PU operation mode. The direction of motor rotation does not change due to the operation mode change from the External operation mode. The previous setting of frequency which has been set using a potentiometer (frequency command) is taken over. (However, note that the setting disappears when the power is turned OFF or when the inverter is reset.)
External operation→NET operation	 Give the command through communication to change the operation mode to the Network operation mode. The direction of motor rotation does not change due to the operation mode change from the External operation mode. The previous setting of frequency which has been set using a potentiometer (frequency command) is taken over. (However, note that the setting disappears when the power is turned OFF or when the inverter is reset.)
PU operation→External operation	Press the key on the operation panel to change the operation mode to the External operation mode. • The direction of operation is determined by external input signals used in the External operation mode. • The setting frequency is determined by the external frequency command signal.
PU operation→NET operation	Give the command through communication to change the operation mode to the Network operation mode. • The direction of motor rotation and the frequency setting does not change due to the operation mode change from the PU operation mode.
NET operation→External operation	Give the command through communication to change the operation mode to the External operation mode. • The direction of operation is determined by external input signals used in the External operation mode. • The setting frequency is determined by the external frequency command signal.
NET operation→PU operation	Use the operation panel to change the operation mode to the PU operation mode. • The direction of motor rotation and the frequency setting does not change due to the operation mode change from the Network operation mode.

◆ PU operation interlock (Pr.79 = "7")

- The operation mode can be forcibly switched to the External operation mode by turning OFF the PU operation external
 interlock (X12) signal. This function will be usable in a case where the inverter does not reply to external command signals
 during operation due to the operation mode accidentally unswitched from the PU operation mode to the External operation
 mode.
- To input the X12 signal, set "12" in any parameter from **Pr.178 to Pr.184 (Input terminal function selection)** to assign the function. (For details on **Pr.178 to Pr.184**, refer to page 328.)
- Set Pr.79 = "7" (PU operation interlock).
- If the X12 signal is not assigned, the function of the MRS signal is switched to the PU operation interlock signal from MRS (output stop).

X12 (MRS) signal	Function/Operation					
A12 (WKS) Signal	Operation mode	Parameter writing ^{*1}				
ON	Switching of the operation mode (External, PU, and NET) is enabled. The signal is OFF during External operation.	Enabled.				
OFF	Operation mode is forcefully changed to the External operation mode. External operation is enabled. Switching to the PU or NET operation mode from the External operation mode is disabled.	Disabled except for Pr.79 .				

^{*1} Depends on the Pr.77 Parameter write selection setting and other parameter write conditions. (Refer to page 173.)

• Functions/operations by X12 (MRS) signal ON/OFF

Operatii	ng status		Operation		Switching to PU or
Operation mode	Status	X12 (MRS) signal	mode	Operating status	NET operation mode
	During stop	ON→OFF ^{*1}		If frequency and start commands are given	Disabled
PU/NET	During running	ON→OFF*1	External ^{*2}	from external source, the inverter runs by those commands.	Disabled
	During stop	OFF→ON		During stop	Enabled
External	During stop	ON→OFF	External*2	During stop	Disabled
External	During	OFF→ON	External	Running→Output stop	Disabled
	running	ON→OFF		Output stop→Running	Disabled

^{*1} The mode is switched to the External operation mode regardless of the ON/OFF state of the start signal (STF/STR). Thus, the motor runs under the External operation mode when the X12 (MRS) signal turns OFF while the STF or STR signal is ON.

• NOTE

- The operation mode cannot be switched to the PU operation mode with the start signal (STF/STR) ON state even if the X12 (MRS) signal turns ON.
- If the MRS signal is ON and **Pr.79** is written to a value other than "7" when the MRS signal is used as the PU interlock signal, the MRS signal will act as a regular MRS function (output stop). Also, when **Pr.79** = "7", the MRS signal becomes the PU interlock signal.
- The logic of the signal follows the **Pr.17 MRS/X10 terminal input selection** setting also when the MRS signal is used as the PU operation interlock signal. When **Pr.17** = "2 to 5", ON and OFF in the table above are reversed.
- Changing the terminal assignment using **Pr.178 to Pr.184 (Input terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

Switching operation mode by external signal (X16 signal)

- When External operation and the operation from the operation panel are used together, the PU operation mode and External operation mode can be switched during a stop (during motor stop, start command OFF) by using the PU/External operation switchover (X16) signal.
- When **Pr.79** = "0, 6, or 7", switching between the PU operation mode and External operation mode is possible. (When **Pr.79** ="6", switchover is enabled during operation.)
- To input the X16 signal, set "16" in any parameter from **Pr.178 to Pr.184 (Input terminal function selection)** to assign the function to a terminal.

Dr 7	70 potting	X16 signal status a	nd operation mode	Remarks	
Pr.79 setting		ON (External) OFF (PU)		Remarks	
() (initial value)		External operation mode	PU operation mode	Switching among the External, PU, and NET operation modes is enabled.	
1		PU operation mode		Fixed at PU operation mode.	
2	2 External operation mode		e	Fixed at External operation mode (Switching to NET operation mode enabled).	
3, 4		External/PU combined	operation mode	Fixed at External/PU combined operation mode.	
6		External operation mode	PU operation mode	Switching among the External, PU, and NET operation mode is enabled during operation.	
7	X12 (MRS) External operation ON PU operation mode		PU operation mode	Switching among the External, PU, and NET operation mode is enabled (signal is OFF in the External operation mode).	
X12 (MRS) OFF		External operation mode		Fixed at External operation mode (forcibly switched to External operation mode).	

NOTE

- The operation mode is determined by the setting of **Pr.340 Communication startup mode selection** and the ON/OFF state of the X65 and X66 signals. (For the details, refer to page 220.)
- The priority of Pr.79 and Pr.340 and signals is Pr.79 > X12 > X66 > X65 > X16 > Pr.340.
- Changing the terminal assignment using **Pr.178 to Pr.189 (Input terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

^{*2} When a fault occurs, the inverter can be reset by pressing the STOP/RESET key on the operation panel.

◆ Switching the operation mode by external signals (X65, X66 signals)

- When **Pr.79** = "0, 2 or 6", the PU operation mode and External operation modes can be changed to the Network operation mode during a stop (during motor stop, start command OFF) by the PU/NET operation switchover (X65) signal, or the External/NET operation switchover (X66) signal. (When **Pr.79** = "6", switchover is enabled during operation.)
- To switch between the Network operation mode and the PU operation mode
 - **1.** Set **Pr.79** = "0 (initial value) or 6".
 - 2. Set Pr.340 Communication startup mode selection = "10".
 - **3.** Set "65" in any parameter from **Pr.178 to Pr.184** to assign the PU/NET operation switchover (X65) signal to a terminal.
 - **4.** When the X65 signal is ON, the PU operation mode is selected. When the X65 signal is OFF, the NET operation mode is selected.

Pr.340	Pr.79 setting		X65 sig	nal state	Remarks	
setting F1.7		79 Setting	ON (PU)	OFF (NET)	Remarks	
	0 (initia	al value)	PU operation mode ^{*1}	NET operation mode*2	_	
	1		PU operation mode		Fixed at PU operation mode.	
	2		NET operation mode		Fixed at NET operation mode.	
	3, 4		External/PU combined	operation mode	Fixed at External/PU combined operation mode.	
10	6		PU operation mode ^{*1}	NET operation mode ^{*2}	The operation mode can be changed during operation.	
	7	X12 (MRS) ON	Switching between the External operation mode and PU operation mode is enabled.*2		The signal is OFF during operation in the External operation mode.	
		X12 (MRS) OFF	External operation mod	е	The operation mode is forcibly switched to the External operation mode.	

^{*1} When the X66 signal is ON, the NET operation mode is selected.

- To switch between the Network operation mode and the External operation mode
 - 1. Set Pr.79 = "0 (initial value), 2, 6, or 7". (When Pr.79 = "7" and the X12 (MRS) signal is ON, the operation mode can be switched.)
 - 2. Set Pr.340 Communication startup mode selection = "0" (initial value) or "1".
 - 3. Set "66" in one of **Pr.178 to Pr.184** to assign the NET-External operation switching signal (X66) to a terminal.
 - **4.** When the X66 signal is ON, the NET operation mode is selected. When the X66 signal is OFF, the External operation mode is selected.

Pr.340	Pr.79 setting		X66 sigı	nal state	Remarks	
setting			ON (NET)	OFF (External)	Remarks	
	0 (initial value)		NET operation mode*1 External operation mode*2		_	
	1		PU operation mode		Fixed at PU operation mode.	
	2		NET operation mode *1 External operation mode		Switching to PU operation mode is disabled.	
0 (initial	3, 4		External/PU combined	operation mode	Fixed at External/PU combined operation mode.	
value), 1	6		NET operation mode ^{*1} External operation mode ^{*2}		The operation mode can be changed during operation.	
	7	X12 (MRS) ON	NET operation mode ^{*1}	External operation The signal is OFF during operation in the E operation mode.		
		X12 (MRS) OFF	External operation mode		The operation mode is forcibly switched to the External operation mode.	

^{*1} When **Pr.550 NET mode operation command source selection** = "0" (communication option control source) and no communication option is connected, the External operation mode is selected.

^{*2} When the X16 signal is OFF, the PU operation mode is selected. Also, when "0" is set for **Pr.550 NET mode operation command source selection** and the communication option is not connected (communication option is the command source), the PU operation mode is selected. When the X16 signal is ON, the External operation mode is selected.

^{*2} When the X16 signal is OFF, the PU operation mode is selected. Also, when the X65 signal is assigned, the operation mode follows the ON/OFF state of the X65 signal.



- The priority of Pr.79 and Pr.340 and signals is as follows: Pr.79 > X12 > X66 > X65 > X16 > Pr.340.
- Changing the terminal assignment using **Pr.178 to Pr.184 (Input terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.15 Jog frequency page 232
Pr.4 to Pr.6, Pr.24 to Pr.27, Pr.232 to Pr.239 multi-speed operation page 234
Pr.75 Reset selection/disconnected PU detection/PU stop selection page 161
Pr.161 Frequency setting/key lock operation selection page 167
Pr.178 to Pr.189 (Input terminal function selection) page 328
Pr.190 to Pr.196 (Output terminal function selection) page 292
Pr.340 Communication startup mode selection page 222
Pr.550 NET mode operation command source selection page 223

10.2 Startup of the inverter in Network operation mode at power-ON

When power is switched ON or when power comes back ON after an instantaneous power failure, the inverter can be started up in the Network operation mode.

After the inverter starts up in the Network operation mode, parameter writing and operation can be commanded from programs. Set this mode when performing communication operation using the RS-485 terminals or a communication option.

Pr.	Name	Initial value	Setting range	Description
79 D000	Operation mode selection	0	0 to 4, 6, 7	Selects the operation mode. (Refer to page 212.)
	Communication startup mode selection	[E800]	0	The inverter starts up in an operation mode selected in Pr.79 .
340			1	The inverter starts up in the Network operation mode.
		[E800-(SC)E] 10	10	The inverter starts up in the Network operation mode. The operation mode can be changed between the PU operation mode and Network operation mode from the operation panel.

◆ Selecting the operation mode for power-ON (Pr.340)

• Depending on the Pr.79 and Pr.340 settings, the operation mode at power-ON (reset) changes as described below.

Pr.340 setting	Pr.79 setting	Operation mode at power-ON, at power restoration, or after a reset	Operation mode switching		
	0 (initial value)	External operation mode	Switching among the External, PU, and NET operation modes is enabled 11		
	1	PU operation mode	Fixed at PU operation mode.		
	2	External operation mode	Switching between the External and NET operation modes is enabled. Switching to PU operation mode is disabled.		
0	3, 4	External/PU combined operation mode	Operation mode switching is disabled.		
U	6	External operation mode	Switching among the External, PU, and NET operation mode is enabled during operation.		
	7	X12 (MRS) signal ON: External operation mode	Switching among the External, PU, and NET operation modes is enabled*1		
	,	X12 (MRS) signal OFF: External operation mode	Fixed at External operation mode (forcibly switched to External operation mode).		
	0	NET operation mode			
	1	PU operation mode			
	2	NET operation mode			
	3, 4	External/PU combined operation mode			
1	6	NET operation mode	Same as Pr.340 = "0".		
	7	X12 (MRS) signal ON: NET operation mode			
	,	X12 (MRS) signal OFF: External operation mode			
	0	NET operation mode	Switching between the PU and NET operation mode is enabled.*2		
	1	PU operation mode	Same as Pr.340 = "0".		
	2	NET operation mode	Fixed at NET operation mode.		
10	3, 4	External/PU combined operation mode	Same as Pr.340 = "0".		
	6	NET operation mode	Switching between the PU and NET operation mode is enabled during operation.*2		
	7	External operation mode	Same as Pr.340 = "0".		

^{*1} The operation mode cannot be directly changed between the PU operation mode and Network operation mode.

Parameters referred to

Pr.57 Restart coasting time ☐ page 403, page 408 Pr.79 Operation mode selection ☐ page 212

^{*2} Switching between the PU and NET operation modes is available with the PU/EXT key on the operation panel and the X65 signal.

10.3 Start command source and frequency command source during communication operation

The start and frequency commands can be given via communication using the external signals. The command source in the PU operation mode can also be selected.

Pr.	Name	Initial value	Setting range	Description
338	Communication		0	Start command source is communication.
D010	operation command source	0	1	Start command source is external.
			0	Frequency command source is communication.
339	Communication speed		1	Frequency command source is external.
D011	command source	0	2	Frequency command source is external. (When there is no external input, the frequency command given via communication is valid, and the frequency command given via terminal 2 is invalid.)
	NET mode operation command source selection	9999	0	The communication option is the command source in the NET operation mode.
			2*1	The PU connector is the command source in the NET operation mode.
550 D012			5 ^{*2}	The Ethernet connector is the command source in the NET operation mode.
			9999	The communication option is recognized automatically. Normally, the PU connector or Ethernet connector is the command source. When the communication option is installed, the communication option is the command source.
			2 ^{*1}	The PU connector is the command source in the PU operation mode.
	PU mode operation		3	The USB connector is the command source in the PU operation mode.
551	command source	9999	4	The operation panel is the command source in the PU operation mode.
D013	selection		9999	The USB is recognized automatically. Normally, the operation panel is the command source. When the USB is connected, the USB connector is the command source.

- *1 Available for the standard model only.
- *2 Available for the Ethernet model and the safety communication model only.

Selection of command source in the network (NET) operation mode (Pr.550)

- Any of the PU connector, the Ethernet connector, or the communication option can be specified for the command source in the NET operation mode.
- For example, whether or not the communication option is installed, set **Pr.550** = "2" to write parameters or give the start and frequency commands using the PU connector through communication in the NET operation mode.



• In the initial setting, "9999" (communication option automatic recognition) is set for **Pr.550**. Thus, if the communication option is installed, parameters cannot be written or the start and frequency commands cannot be sent by communications through the PU connector or the Ethernet connector. (Monitoring or parameter reading can be performed.)

♦ Selection of the command source of the PU operation mode (Pr.551)

- Any of the PU connector, operation panel, or USB connector can be specified for the command source in the PU operation
- Set **Pr.551** to write parameters or execute the start and frequency commands through communication in the PU operation mode: **Pr.551** = "2" when using the PU connector, and **Pr.551** = "3" or "9999" when using the USB connector.



- The PU operation mode has a higher priority when **Pr.550** = "2" (NET mode using the PU connector) and **Pr.551** = "2" (PU mode using the PU connector). For this reason, if the communication option is not mounted, switching to the Network operation mode is no longer possible.
- · Changed setting values are enabled at power-ON or inverter reset.

· Standard model

Pr.550	Pr.551	Operation USB		PU c	onnector	Communication	Remarks
setting	setting	panel	connector	Operation option*1	RS-485 communication	option	Kemarks
	2	×	×	PU	PU ^{*2}	NET ^{*3}	
	3	×	PU	×	×	NET ^{*3}	
0	4	PU	×	×	×	NET ^{*3}	
	9999 (initial value)	PU ^{*4}	PU ^{*4}	PU ^{*4}	×	NET*3	
	2	×	×	PU	PU ^{*2}	×	Switching to NET operation mode disabled
2	3	×	PU	×	NET	×	
2	4	PU	×	×	NET	×	
	9999 (initial value)	PU ^{*4}	PU ^{*4}	PU ^{*4}	NET	×	
	2	×	×	PU	PU ^{*2}	NET ^{*3}	
		,	× PU	×	×	NET*3	With communication option
	3	^			NET	×	Without communication option
9999 (initial	4	PU	×	×	×	NET*3	With communication option
value)	4	PU	^	^	NET	×	Without communication option
	9999 (initial	DU*4	DU*4	DU*4	×	NET*3	With communication option
	value)	PU ^{*4} PU ^{*4}	PU "	PU*4	NET	×	Without communication option

• Ethernet model / Safety communication model

D., 550	D., 554					
Pr.550 setting	Pr.551 setting	Operation panel	USB connector	Ethernet connector	Communication option	Remarks
	3	×	PU	×	NET*3	
0	4	PU	×	×	NET*3	
	9999 (initial value)	PU ^{*4}	PU ^{*4}	×	NET*3	
	3	×	PU	NET	×	
5	4	PU	×	NET	×	
	9999 (initial value)	PU ^{*4}	PU ^{*4}	NET	×	
	3	×	PU	×	NET*3	With communication option
				NET	×	Without communication option
9999		PU		×	NET*3	With communication option
(initial value)	4		×	NET	×	Without communication option
	0000 (initial			×	NET*3	With communication option
	9999 (initial value)	PU ^{*4}	PU ^{*4}	NET	×	Without communication option

PU: Enabled in PU operation mode, NET: Enabled in Network operation mode, x: Not available

- *1 When the enclosure surface operation panel (FR-PA07) is used.
- *2 The MODBUS RTU protocol cannot be used in the PU operation mode.

- *3 If the communication option is not installed, switching to the NET operation mode is not possible.
- *4 When **Pr.551** = "9999", the priority of the PU control source is defined as follows: USB connector > PU connector / Ethernet connector > operation panel.

♦ Controllability through communication

				Co	ntrollability in	each operation	on mode	
Command interface	Condition	ltem	PU operation	External operation	Combined operation mode 1 (Pr.79 = "3")	Combined operation mode 2 (Pr.79 = "4")	NET operation (when the PU/Ethernet connector is used)	NET operation (via option)
	Pr.551 = "4" or	Operation command (start, stop)	0	Δ*3	Δ*3	0	Δ*3	Δ*3
	Pr.551 = "9999"	Frequency setting	0	×	0	×	×	×
	(USB / PU	Monitor	0	0	0	0	0	0
	connector is not connected)	Parameter write	0	×	0	0	×	×
	connected)	Parameter read	° ×*8	° x*8	° x*8	° ×*8	o **8	° x*8
Operation panel		Inverter reset Operation command	Δ*3	Δ*3	Δ*3	Δ*3	Δ*3	Δ*3
		(start, stop)						
	Other than the	Frequency setting	×	×	×	×	×	×
	above	Monitor	0	0	0	0	0	0
		Parameter write Parameter read	×	×	×	×	×	×
		Inverter reset	×*8	×*8	×*8	×*8	×*8	×*8
		Operation command	0	Δ*3	Δ*3	0	_	Δ*3
	Pr.551 = "2" or	(start, stop) Frequency setting	0	×	0	0	_	×
	Pr.551 = "9999"	Monitor	0	0	0	0	0	0
	(USB is not	Parameter write	0	×	0	0	_	×
PU	connected)	Parameter read	0	0	0	0	0	0
connector		Inverter reset	0	0	0	0	_	0
(operation option)*1	Other than the above	Operation command (start, stop)	Δ*3	Δ*3	Δ*3	Δ*3	Δ*3	Δ*3
		Frequency setting	×	×	×	×	×	×
		Monitor	0	0	0	0	0	0
		Parameter write	×	×	×	×	×	×
		Parameter read	0	0	0	0	0	0
		Inverter reset	0	0	0	0	0	0
		Operation command (start, stop)	0	Δ*3	Δ*3	0	_	Δ*3
		Frequency setting	0	×	0	0	—	×
	Pr.551 = "2" (PU)	Monitor	0	0	0	0	0	0
	, ,	Parameter write	o*5	×*6	o*5	o*5	_	×
		Parameter read	0	0	0	0	0	0
		Inverter reset	0	0	0	0	_	0
	Pr.551 ≠ "2" and either of the	Operation command (start, stop)	×	×	×	×	o* 4	_
	following:	Frequency setting	×	×	×	×	0	_
PU	• Pr.550 = "2" • Pr.550 = "9999"	Monitor	0	0	0	0	0	0
connector	(communication	Parameter write	×*6	×*6	x*6	x*6	0	
(RS-485)*2	option is not	Parameter read	0	0	0	0	0	0
	installed)	Inverter reset	×	×	×	×	0	_
		Operation (start) command	×	×	×	×	_	×
	Others the set	Operation (stop) command	×	×	×	×	_	×
	Other than the above	Frequency setting	×	×	×	×	_	×
	above	Monitor	0	0	0	0	0	0
		Parameter write	×	×	×	×	_	×
		Parameter read	0	0	0	0	0	0
		Inverter reset	×	×	×	×	-	×

				Co	ntrollability in	each operation	on mode	
Command interface	Condition	Item	PU operation	External operation	Combined operation mode 1 (Pr.79 = "3")	Combined operation mode 2 (Pr.79 = "4")	NET operation (when the PU/Ethernet connector is used)	NET operation (via option)
		Operation command (start, stop)	0	×	×	0	×	×
		Frequency setting	0	×	0	×	×	×
	Pr.551 = "3, 9999"	Monitor	0	0	0	0	0	0
		Parameter write	o*5	×*6	0	0	x*6	x*6
		Parameter read	0	0	0	0	0	0
USB		Inverter reset	0	0	0	0	0	0
connector		Operation command (start, stop)	×	×	×	×	×	×
	Other than the	Frequency setting	×	×	×	×	×	×
	above	Monitor	0	0 *0	0	0 *0	0	0 *0
		Parameter write	×*6	×*6	×*6	x*6	×*6	×*6
		Parameter read	0	0	0	0	0	0
		Inverter reset	0	0	0	0	0	0
		Operation command (start, stop)	×	×	×	×	_	o* 4
	Pr.550 = "0, 9999"	Frequency setting	×	×	×	×	_	o* 4
		Monitor	0	0	0	0	0	0
		Parameter write	×*6	×*6	×*6	x*6	_	o*5
		Parameter read	0	0	0	0	0	0
Option		Inverter reset	×	×	×	×	×*6	0
Орион		Operation command (start, stop)	×*6	×*6	x*6	×*6	x*6	_
		Frequency setting	×*6	x*6	×*6	x*6	×*6	_
	Other than the	Monitor	0	0	0	0	0	0
	above	Parameter write	×*6	×*6	×*6	×*6	_	0
		Parameter read	0	0	0	0	0	0
		Inverter reset	×*6	×*6	×*6	×*6	×*6	_
		Operation command (start, stop)	×	×	×	×	0	_
	Pr.550 = "5" or Pr.550 = "9999"	Frequency setting	×	×	×	×	0	_
	(communication	Monitor	0	0	0	0	0	0
	option is not	Parameter write	×*6	×	x*6	×*6	o*5	_
	installed)	Parameter read	0	0	0	0	0	0
Ethernet		Inverter reset	×	×	×	×	o*7	_
connector		Operation command (start, stop)	×	×	×	×	_	×
		Frequency setting	×	×	×	×	_	×
	Other than the	Monitor	0	0	0	0	0	0
	above	Parameter write	×	×	×	×	_	×*6
		Parameter read	0	0	0	0	0	0
		Inverter reset	×	×	×	×		×
External control		Operation command (start, stop)	×	0	0	×	×*4	x*4
circuit terminal	-	Frequency setting Inverter reset	x	0	Δ*8	0	x *4	x*4
		miverior reset	<u> </u>	<u> </u>	~	<u> </u>	<u> </u>	Ÿ

- o: Controllable, ×: Uncontrollable, Δ: Partially controllable, —: No function
 - *1 Operation when the enclosure surface operation panel (FR-PA07) is used.
 - *2 RS-485 communication via PU connector
 - *3 Only PU stop is enabled. "PS" is displayed on the operation panel during PU stop. The operation follows the **Pr.75 Reset selection/ disconnected PU detection/PU stop selection** setting. (Refer to page 161.)
 - *4 The operation follows the Pr.338 Communication operation command source and Pr.339 Communication speed command source settings. (Refer to page 223.)
 - *5 Writing of some parameters may be disabled by the **Pr.77 Parameter write selection** setting and the operating condition. (Refer to page 173.)

- *6 Some parameters are write-enabled independently of the operation mode and command source presence/absence. Writing is also enabled when **Pr.77** = "2". (Refer to page 173.) Parameter clear is disabled.
- *7 At occurrence of communication error, the inverter cannot be reset.
- *8 The inverter can be reset by using the multi-speed operation function and analog input (terminal 4).

Operation when a communication error occurs

Standard model

			Operation in	each operation	n mode at erroi	occurrences	
Fault type	Condition	PU operation	External operation	Combined operation mode 1 (Pr.79 = "3")	Combined operation mode 2 (Pr.79 = "4")	NET operation (via PU connector)*4	NET operation (via option)*4
Inverter fault	_	Stop					
	Pr.551 = "2"	Stop/ continued*2	Continued		Stop/ continued*2	_	Continued
Communication error at PU connector	Pr.551 ≠ "2" and either of the following: • Pr.550 = "2" • Pr.550 = "9999" (communication option is not installed)	Continued				Stop/ continued*2	_
	Other than the above	Continued				_	Continued
Communication error at USB	Pr.551 = "3, 9999"	Stop/ continued*2 Continued Stop/ continued*2 Continued					
connector	Other than the above	Continued					
Communication error at	Pr.550 = "0, 9999"	Continued	Continued			_	Stop/ continued*4
communication option	Other than the above	Continued					

• Ethernet model / Safety communication model

			Operation in	each operation	n mode at error	occurrences	
Fault type	Condition	PU operation	External operation	operation mode 1		combined NET operation mode 2 (via Ethernet r.79 = "4") connector)*4	
Inverter fault	_	Stop					
Communication error at USB	Pr.551 = "3, 9999"	Stop/ continued ^{*2}	Continued		Stop/ continued*2	Continued	
connector	Other than the above	Continued					
Communication error at Ethernet connector	Pr.550 = "5" or Pr.550 = "9999" (communication option is not installed)	Continued		Stop/ continued*2	_		
	Other than the above	Continued				_	Continued
Communication error at	Pr.550 = "0, 9999"	Continued				_	Stop/ continued*4
communication option	Other than the above	Continued					

- *1 Selectable with Pr.75 Reset selection/disconnected PU detection/PU stop selection.
- *2 Selectable with Pr.122 PU communication check time interval, Pr.548 USB communication check time interval, Pr.1431 Ethernet signal loss detection function selection, Pr.1432 Ethernet communication check time interval, and Pr.1457 Extended setting for Ethernet signal loss detection function selection.
- *3 In the PU JOG operation mode, operation always stops when the PU is disconnected. The operation at a PU disconnection fault (E.PUE) occurrence is as set in Pr.75 Reset selection/disconnected PU detection/PU stop selection.
- *4 The operation depends on the communication option setting.

◆ Selecting the command interface in the Network operation mode (Pr.338, Pr.339)

Selecting a command interface is required for the following two types of commands: the operation command using the start
signals and the signals related to the inverter function selection, and the speed command using signals related to the
frequency setting.

• The following table shows the command interface for each function in the Network operation mode, determined by the parameter settings: an external terminal or a communication interface (PU connector, Ethernet connector, or communication option).

Pr.338 C	Communication operation command source		0: NET			1: EXT	•									
Pr.339	Communication speed command source	0: NET	1: EXT	2: EXT	0: NET	1: EXT	2: EXT	Remarks								
. ,	etting through communication	NET	_	NET	NET	_	NET									
Terminal 2		_	EXT	_	_	EXT	_									
Terminal 4	Low-speed operation command/Remote setting	_	EXT		_	EXT										
RL*1	(setting clear)/Stop-on-contact selection 0	NET	EXT		NET	EXT		EXT		EXT		EXT		EXT		Pr.59 = "0" (multi-speed), Pr.59
RM ^{*1}	Middle-speed operation command/Remote setting (deceleration)	NET	EXT		NET	EXT		≠ "0" (remote), Pr.270 ="1" (stopon-contact)								
RH*1	High-speed operation command/ Remote setting (acceleration)	NET	EXT		NET	EXT		,								
RT ^{*1}	Second function selection/ Stop-on-contact selection 1	NET			EXT			Pr.270 = "1" (stop-on-contact)								
AU ^{*1}	Terminal 4 input selection	_	Comb	oined	_	Comb	ined									
JOG ^{*1}	Jog operation selection	_	•		EXT											
OH*1	External thermal relay input	EXT			•											
REX ^{*1}	15-speed selection	NET	EXT		NET	EXT		Pr.59 ="0" (multi-speed)								
X10 ^{*1}	Inverter run enable	EXT														
X12*1	PU operation external interlock	EXT														
X13 ^{*1}	External DC injection brake operation start	NET			EXT											
X14 ^{*1}	PID control valid	NET	EXT		NET	EXT										
BRI ^{*1}	Brake opening completion	NET			EXT											
X16 ^{*1}	PU/External operation switchover	EXT														
X18 ^{*1}	V/F switchover	NET			EXT											
LX ^{*1}	Pre-excitation	NET			EXT											
	Output stop			EXT			Pr.79 ≠ "7"									
MRS ^{*1}	PU operation interlock	EXT						Pr.79 = "7". When X12 signal is not assigned.								
STP (STOP)*1	Start self-holding selection	_			EXT											
MC ^{*1}	Control mode switchover	NET			EXT											
TL*1	Torque limit selection	NET			EXT											
JOG2 ^{*1}		NET			EXT											
X37 ^{*1}	Traverse function selection	NET			EXT											
X42*1	Torque bias selection 1	NET			EXT											
X43 ^{*1}	Torque bias selection 2	NET			EXT											
TRG ^{*1}	Trace trigger input	Comb	ined		EXT											
TRC*1	Trace sampling start/end	Comb			EXT											
SQ ^{*1}	Sequence start		or NET		EXT			Pr.414 = "1": Valid when there is external or network input. Pr.414 = "2": External.								
X51 ^{*1}	Fault clear	Comb	oined		EXT											
STF*1	Forward rotation command	NET			EXT											
STR*1	Reverse rotation command	NET			EXT											
RES*1	Inverter reset	EXT														
X65 ^{*1}	PU/NET operation switchover	EXT														
X66 ^{*1}	External/NET operation switchover	EXT														
X67 ^{*1}	Command source switchover	EXT														
X72*1	PID P control switchover	NET	EXT		NET	EXT										
X74*1	Magnetic flux decay output shutoff	NET			EXT											
X92 ^{*1}	Emergency stop	Comb	ined		EXT											
ハガム	Linergonoy stop	Comb	, ii iou					1								

[Explanation of Terms in Table] EXT: External terminal only

NET: Communication interface only

Combined: Either external terminal or communication interface

—: Neither external terminal nor communication interface



- The communication interface selection is determined by the setting of Pr.550 and Pr.551.
- The settings of **Pr.338** and **Pr.339** can be changed during operation when **Pr.77** = "2". Note that the changed setting is applied after the inverter has stopped. Until the inverter has stopped, the previous setting of the interface for the operation command and the speed command in the Network operation mode is valid.

Changing the command interface using a signal input via external terminal (X67 signal)

- In the Network operation mode, the command interface for the operation command and the speed command can be changed using the Command source switchover (X67) signal. This method may be useful to use both external terminal and communication interface by using a different interface according to the command type.
- For the X67 signal, set "67" to any parameter from **Pr.178 to Pr.184 (Input terminal function selection)** to assign the function to a control terminal.
- When the X67 signal is OFF, the command interface for the operation command and the speed command is the control
 terminal

X67 signal state	Interface for the operation command	Interface for the speed command		
Signal not assigned	Determined by Pr.338 setting	Determined by Pr.339 setting		
ON	Determined by F1.336 Setting			
OFF	Control terminal only			



- The ON/OFF state of the X67 signal is applied only during a stop. When the terminals are switched during operation, the ON/OFF state is reflected after a stop.
- When the X67 is OFF, a reset via communication is disabled.
- Changing the terminal assignment using **Pr.178 to Pr.184 (Input terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.59 Remote function selection ☐ page 203 Pr.79 Operation mode selection ☐ page 212

10.4 Reverse rotation prevention selection

This function can prevent reverse rotation fault resulting from the incorrect input of the start signal.

Pr.	Name	Initial value	Setting range	Description
70	Daviena natatian		0	Both forward and reverse rotations allowed
78 D020	Reverse rotation prevention selection	0	1	Reverse rotation disabled
D020	prevention selection		2	Forward rotation disabled

- Set this parameter to limit the motor rotation to only one direction.
- This parameter is valid for all of the RUN key of the operation panel, the start signals (STF, STR signals) via external terminals, and the forward and reverse rotation commands through communication.

10.5 JOG operation

The frequency and acceleration/deceleration time for JOG operation can be set.

JOG operation can be used for conveyor positioning, test operation, etc.


Pr.	Name	Initial value	Setting range	Description
15 D200	Jog frequency	5 Hz	0 to 590 Hz	Set the frequency for JOG operation.
16 F002	Jog acceleration/ deceleration time	0.5 s	0 to 3600 s	Set the motor acceleration/deceleration time during JOG operation. The acceleration/deceleration time is a period of time that the inverter takes to increase/decrease the output frequency to the frequency set in Pr.20 Acceleration/deceleration reference frequency *1. The acceleration/deceleration times cannot be set separately.

These parameters can be selected from among simple mode parameters when the LCD operation panel (FR-LU08) or the parameter unit (FR-PU07) is connected to the inverter.

*1 60 Hz is initially set in Pr.20 in Group 1, and 50 Hz in Group 2. (Refer to page 52).

◆ JOG operation by inputting signals (JOG signal and JOG2 signal)

- Operation can be started and stopped by the start signals (STF and STR signals) when the Jog operation selection (JOG) signal or Jog operation selection 2 (JOG2) signal is ON. (For the operation method, refer to page 46.)
- The JOG signal can be input only via a control terminal. For the JOG signal, set "5" to any parameter from **Pr.178 to Pr.184** (Input terminal function selection)to assign the function to a control terminal.
- The JOG2 signal can be input via a control terminal or via communication. For the JOG2 signal, set "30" to any parameter from **Pr.178 to Pr.189 (Input terminal function selection)** to assign the function to a control terminal.
- Use the JOG acceleration/deceleration time function (**Pr.16**) to set the acceleration/deceleration time for JOG operation.

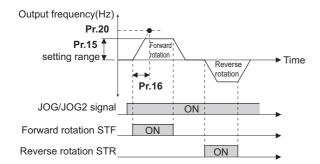

JOG operation using the operation panel

• When the operation panel is in the JOG operation mode, the motor jogs only while a key for start command is pressed. (For the operation method, refer to page 47.)

• NOTE

- The reference frequency during acceleration/deceleration depends on the Pr.29 Acceleration/deceleration pattern selection setting. (Refer to page 201.)
- The Pr.15 setting should be equal to or higher than the Pr.13 Starting frequency setting.
- Changing the terminal assignment using **Pr.178 to Pr.189 (Input terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.
- During JOG operation, the second acceleration/deceleration function using the RT signal is disabled. (Other second functions are enabled (refer to page 334).)
- When Pr.79 Operation mode selection = "4", JOG operation is started by one push of the RUN key on the operation panel and stopped by the STOP/RESET key.
- This function is invalid when Pr.79 = "3".



10

Pr.20 Acceleration/deceleration reference frequency, Pr.21 Acceleration/deceleration time increments page 196 Pr.29 Acceleration/deceleration pattern selection page 201 Pr.79 Operation mode selection page 212 Pr.178 to Pr.189 (Input terminal function selection) page 328

10.6 Operation by multi-speed setting


Use these parameters to change among pre-set operation speeds with the terminals. The speeds are pre-set with parameters. Any speed can be selected by simply turning ON/OFF the contact signals (RH, RM, RL, and REX signals).


D.	Name	Initial	value ^{*1}	Catting games	Description
Pr.	Name	Gr.1	Gr.2	Setting range	Description
4 D301	Multi-speed setting (high speed)	60 Hz	50 Hz	0 to 590 Hz	Sets the frequency when RH is ON.
5 D302	Multi-speed setting (middle speed)	30 Hz		0 to 590 Hz	Sets the frequency when RM is ON.
6 D303	Multi-speed setting (low speed)	10 Hz		0 to 590 Hz	Sets the frequency when RL is ON.
24 D304	Multi-speed setting (speed 4)				
25 D305	Multi-speed setting (speed 5)				
26 D306	Multi-speed setting (speed 6)				
27 D307	Multi-speed setting (speed 7)				
232 D308	Multi-speed setting (speed 8)				
233 D309	Multi-speed setting (speed 9)		0 to 590 Hz. 9999	Frequency from 4th speed to 15th speed can be set according to the combination of the RH,	
234 D310	Multi-speed setting (speed 10)	9999		0 to 590 HZ, 9999	RM, RL and REX signals. 9999: Not selected
235 D311	Multi-speed setting (speed 11)				
236 D312	Multi-speed setting (speed 12)				
237 D313	Multi-speed setting (speed 13)				
238 D314	Multi-speed setting (speed 14)				
239 D315	Multi-speed setting (speed 15)				

^{*1} Gr.1 and Gr.2 are the parameter initial value groups. (Refer to page 52).

♦ Multi-speed setting (Pr.4 to Pr.6)

• The inverter operates at frequencies set in **Pr.4** when the RH signal is ON, **Pr.5** when the RM signal is ON, or **Pr.6** when the RL signal is ON.

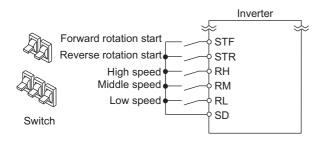

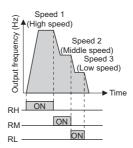



• NOTE

- In the initial setting, if two or more speed switches (signals) are simultaneously turned ON, priority is given to the switch (signal) for the lower speed. For example, when both RH and RM signals turn ON, the RM signal (**Pr.5**) has the higher priority.
- The RH, RM and RL signals are assigned to the terminals RH, RM and RL, respectively, in the initial status. To assign each signal to a different terminal, set "0" (RL signal), "1" (RM signal), or "2" (RH signal) in any of **Pr.178 to Pr.189 (Input terminal function selection)**.

Multi-speed setting for 4th speed or more (Pr.24 to Pr.27, Pr.232 to Pr.239)

- The frequency from 4th speed to 15th speed can be set according to the combination of the RH, RM, RL, and REX signals. Set the frequencies in Pr.24 to Pr.27, Pr.232 to Pr.239. (In the initial status, 4th to 15th speeds are invalid.)
- To input the REX signal, set "8" in any parameter from Pr.178 to Pr.189 (Input terminal function selection) to assign the function.

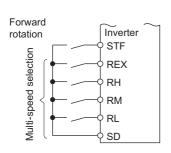

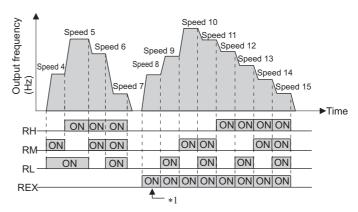

When the RH, RM and RL signals are OFF and the REX signal is ON while "9999" is set to Pr.232 Multi-speed setting (speed 8), the inverter operates at the frequency set in Pr.6.

NOTE

- The priority of the frequency commands given by the external signals are as follows: JOG operation > multi-speed operation > terminal 4 analog input > terminal 2 analog input. (For details on frequency commands given by analog input, refer to page
- · The input compensation of multi-speed setting is enabled when the inverter is in the External operation mode or PU/External combined operation mode (Pr.79 = "3 or 4").
- Multi-speed parameters can also be set during PU operation or External operation.
- The Pr.24 to Pr.27 and Pr.232 to Pr.239 settings have no priority among them.
- When Pr.59 Remote function selection ≠ "0", the multi-speed setting is invalid since the RH, RM, and RL signals are for remote setting.
- · Changing the terminal assignment using Pr.178 to Pr.189 (Input terminal function selection) may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.15 Jog frequency page 232
Pr.59 Remote function selection page 203

Pr.79 Operation mode selection page 212

Pr.178 to Pr.189 (Input terminal function selection) page 328

MEMO

CHAPTER 11 (H) Protective Function Parameters

11.1	Motor overheat protection (electronic thermal O/L relay)	238
11.2	Cooling fan operation selection	245
11.3	Earth (ground) fault detection at start	246
11.4	Inverter output fault detection enable/disable selection	247
11.5	Initiating a protective function	248
11.6	I/O phase loss protection selection	249
11.7	Retry function	250
11.8	Limiting the output frequency (maximum/minimum frequency)	
11.9	Avoiding machine resonance points (frequency jump)	
11.10	Stall prevention operation	256
11.11	Load characteristics fault detection	
11.12	Motor overspeeding detection	266

11 (H) Protective Function Parameters

Purpose	Pa	rameter to set		Refer to page
To protect the motor from overheating	Electronic thermal O/L relay	P.H000, P.H006, P.H010, P.H016	Pr.9, Pr.51, Pr.607, Pr.608	238
To set the overheat protection characteristics for the motor	Free thermal O/L relay	P.H001 to P.H005, P.H011 to P.H015	Pr.600 to Pr.604, Pr.692 to Pr.696	238
To extend the life of the cooling fan	Cooling fan operation selection	P.H100	Pr.244	245
To detect an earth (ground) fault at start	Earth (ground) fault detection at start	P.H101	Pr.249	246
To detect a fault on the output side of the inverter	Inverter output fault detection enable/disable selection	P.H182	Pr.631	247
To initiate an inverter protective function	Fault initiation	P.H103	Pr.997	248
To disable the I/O phase loss protective function	I/O phase loss	P.H200, P.H201	Pr.251, Pr.872	249
To restart using the retry function when the protective function is activated	Retry operation	P.H300 to P.H303	Pr.65, Pr.67 to Pr.69	250
To set the upper and lower limits of the output frequency	Maximum/minimum frequency	P H400 to P H402		253
To prevent the motor from overspeeding under torque control	Speed limit	P.H410 to P.H412	Pr.807 to Pr.809	147
To avoid overdriving the motor during speed control	Overdriving prevention	P.H415 to P.H417	Pr.285, Pr.853, Pr.873	130
To operate avoiding resonance points	Frequency jump	P.H420 to P.H425, P.H429	Pr.31 to Pr.36, Pr.552	254
To limit the output current so that the inverter protective function does not activate	Stall prevention	P.H500, P.H501, P.H600, P.H610, P.H611, P.H630, P.H631, P.M430, P.T040	Pr.22, Pr.23, Pr.48, Pr.66, Pr.154, Pr.156, Pr.157, Pr.277, Pr.858	256
To limit the torque during speed control	Torque limit	P.H500, P.H700 to P.H704, P.H710, P.H720, P.H721, P.H730, P.T040, P.G210	Pr.22, Pr.801, Pr.803, Pr.810, Pr.812 to Pr.817, Pr.858, Pr.874	114
To monitor for load faults	Load characteristics fault detection	P.H520 to P.H527, P.H531 to P.H535	Pr.1480 to Pr.1492	261
To shut off output if the operation panel disconnects	Overspeed detection level	P.H800	Pr.374	266
To shut off output if the operation panel disconnects	Deceleration check	P.H880	Pr.690	131

11.1 Motor overheat protection (electronic thermal O/L relay)

Set the current of the electronic thermal relay function to protect the motor from overheating. Such settings provide the optimum protective characteristic considering the low cooling capability of the motor during low-speed operation.

Pr.	Name	Initial value	Setting range	Description
9 H000	Electronic thermal O/L relay	Inverter rated current*1	0 to 500 A	Set the rated motor current.
600	First free thermal reduction	9999	0 to 590 Hz	
H001	frequency 1	9999	9999	
601	First free thermal reduction	100%	1% to 100%	The electronic thermal O/L relay operation level can
H002	ratio 1	100 70	9999	be changed to match the motor temperature
602	First free thermal reduction	9999	0 to 590 Hz	characteristics with the combination of these three
H003	frequency 2	9999	9999	points (Pr.600, Pr.601), (Pr.602, Pr.603), (Pr.604,
603	First free thermal reduction	100%	1% to 100%	Pr.9).
H004	ratio 2	100 70	9999	9999: Free thermal O/L relay invalid
604	First free thermal reduction	9999	0 to 590 Hz	
H005	frequency 3	9999	9999	
607 H006	Motor permissible load level	150%	110% to 250%	Set the permissible load according to the motor characteristics.
51	Second electronic thermal O/L	9999	0 to 500 A	Enabled when the RT signal is ON. Set the rated motor current.
H010	relay		9999	Second electronic thermal O/L relay invalid
692	Second free thermal reduction	9999	0 to 590 Hz	
H011	frequency 1	9999	9999	
693	Second free thermal reduction	100%	1% to 100%	The electronic thermal O/L relay operation level can
H012	ratio 1	100%	9999	be changed to match the motor temperature
694	Second free thermal reduction	9999	0 to 590 Hz	characteristics with the combination of these three
H013	frequency 2	9999	9999	points (Pr.692, Pr.693), (Pr.694, Pr.695), (Pr.696,
695	Second free thermal reduction	100%	1% to 100%	Pr.51) when the RT signal is ON.
H014	ratio 2	100%	9999	9999: Second free thermal O/L relay invalid
696	Second free thermal reduction	9999	0 to 590 Hz	
H015	frequency 3	ਬਬਬਬ	9999	
608	Second motor permissible load	9999	110% to 250%	Set the permissible frequency when the RT signal is ON.
H016 level		ਬਬਬਬ	9999	The Pr.607 setting is applied even when the RT signal is ON.


^{*1} The initial value for the FR-E820-0050(0.75K) or lower, FR-E840-0026(0.75K) or lower, FR-E860-0017(0.75K), and FR-E820S-0050(0.75K) or lower is set to the 85% of the inverter rated current.

◆ Electronic thermal O/L relay operation characteristic for induction motor (Pr.9)

- This function detects the overload (overheat) of the motor and shut off the inverter output by stopping the operation of the transistor at the inverter output side.
- Set the rated current (A) of the motor in **Pr.9 Electronic thermal O/L relay**. (If the motor has both 50 Hz and 60 Hz ratings and the **Pr.3 Base frequency** is set to 60 Hz, set to 1.1 times the 60 Hz rated motor current.)
- Set "0" in **Pr.9** to avoid activating the electronic thermal relay function; for example, when using an external thermal relay for the motor.

(Note that the output transistor protection of the inverter is activated. (E.THT))

 When using the Mitsubishi Electric constant-torque motor, set the constant-torque motor in Pr.71 Applied motor referring to page 340. (This setting enables the 100% constant-torque characteristic in the low-speed range.)

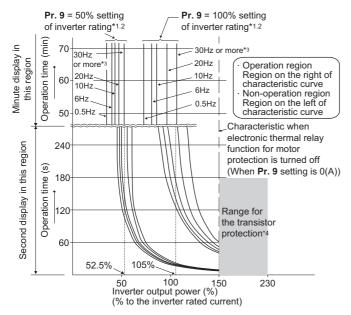

- *1 When setting Pr.9 to a value (current value) of 50% of the inverter rated current
- *2 The % value denotes the percentage to the rated inverter current. It is not the percentage to the rated motor current.
- *3 When the electronic thermal relay function dedicated to the Mitsubishi Electric constant-torque motor is set, this characteristic curve applies to operation at 6 Hz or higher. (For selection of the operation characteristic, refer to page 340.)
- *4 Transistor protection is activated depending on the temperature of the heat sink. The protection may be activated even with less than 150% depending on the operating conditions.




- The internal accumulated heat value of the electronic thermal relay function is reset to the initial value by the inverter's power reset or reset signal input. Avoid unnecessary reset and power-OFF.
- Install an external thermal relay (OCR) between the inverter and motors to operate several motors, a multi-pole motor or a
 dedicated motor with one inverter. When setting an external thermal relay, note that the current indicated on the motor rating
 plate is affected by the line-to-line leakage current. The cooling effect of the motor drops during low-speed operation. Use a
 motor with built-in thermal protector. (For details of the line-to-line leakage current, refer to the Instruction Manual
 (Connection).)
- When the difference between the inverter and motor capacities is large and the set value is small, the protective characteristics of the electronic thermal relay function will be deteriorated. Use an external thermal relay in such cases.
- · A dedicated motor cannot be protected by an electronic thermal O/L relay. Use an external thermal relay.
- The transistor protection thermal O/L relay is activated early when the Pr.72 PWM frequency selection setting is increased.

◆ Electronic thermal O/L relay when using PM motor (Pr.9)

- This function detects the overload (overheat) of the motor and shut off the inverter output by stopping the operation of the transistor at the inverter output side.
- Set the rated current (A) of the motor in Pr.9 Electronic thermal O/L relay.
- Set "0" in Pr.9 to avoid activating the electronic thermal relay function; for example, when using an external thermal relay
 for the motor.

(Note that the output transistor protection of the inverter is activated. (E.THT))

· Operational characteristic of the electronic thermal relay function

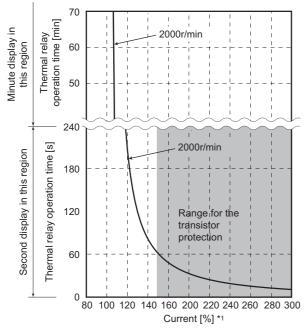


Protective function activated area: the area right of the characteristic curve Normal operation area: the area left of the characteristic curve

*1 The % value denotes the percentage to the rated motor current.



- The internal accumulated heat value of the electronic thermal relay function is reset to the initial value by the inverter's power reset or reset signal input. Avoid unnecessary reset and power-OFF.
- · When using a PM motor, set the free thermal parameters (Pr.600 to Pr.604) in accordance with the motor characteristic.
- The transistor protection thermal O/L relay is activated early when the Pr.72 PWM frequency selection setting is increased.

◆ Set two types of electronic thermal O/L relays (Pr.51)

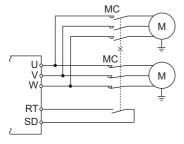

- These settings are used when rotating two motors with different rated current separately by a single inverter. (When rotating two motors together, use an external thermal relay.)
- Set the rated motor current for the second motor in Pr.51 Second electronic thermal O/L relay.

• While the RT signal is ON, the setting values of **Pr.51** is referred to provide thermal protection. (While the RT signal is ON, the setting values of **Pr.9** is referred to provide thermal protection under PM sensorless vector control.)

Pr.450	Pr.9	Pr.51	RT sigr	nal OFF	RT signal ON	
Second applied motor	Electronic thermal O/L relay	Second electronic thermal O/L relay	First motor	Second monitor	First motor	Second monitor
		9999	×	×	×	×
9999	0	0	×	×	×	×
		0.01 to 500 (0.1 to 3600)	×	Δ	×	0
		9999	0	×	0	×
9999	Other than 0	0	0	×	Δ	×
		0.01 to 500 (0.1 to 3600)	0	Δ	Δ	0
		9999	×	×	×	×
Other than 9999	0	0	×	×	×	×
		0.01 to 500 (0.1 to 3600)	×	Δ	×	0
		9999	0	Δ	Δ	0
Other than 9999	Other than 0	0	0	×	Δ	×
		0.01 to 500 (0.1 to 3600)	0	Δ	Δ	0


- : Values are accumulated by using the output current.
 Δ: Values are accumulated by assuming the output current is 0 A (cooling processing).
- ×: Electronic thermal O/L relay does not operate.



- The RT signal is the Second function selection signal. The RT signal also enables other second functions. (Refer to page 334.)
- For the RT signal, set "3" in any parameter from Pr.178 to Pr.189 (Input terminal function selection) to assign the function.

◆ Motor permissible load level (Pr.607, Pr.608)

The electronic thermal O/L relay operation characteristic can be changed by setting the permissible load level according to the motor characteristics.

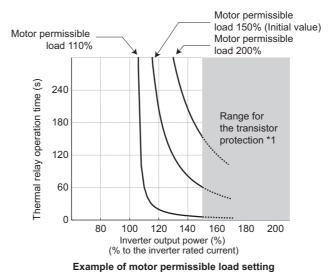


*1 Depending on the settings of **Pr.607** and **Pr.608**, this thermal protection may not be provided as set, as an inverter overload trip (electronic thermal relay function) (E.THT) may be activated before the thermal protection.

(when Pr.9="100% of the inverter rating")

◆ Electronic thermal O/L relay pre-alarm (TH) and warning signal (THP signal)

• If the accumulated electronic thermal value reaches 85% of the **Pr.9** or **Pr.51** setting, electronic thermal O/L relay function pre-alarm (TH) is displayed and the electronic thermal O/L relay pre-alarm (THP) signal is output. If the value reaches 100% of the **Pr.9** setting, the motor thermal protection (E.THM/E.THT) is activated to shut off the inverter output. The inverter output is not shut off with the TH display.

 
• For the terminal used for the THP signal output, set "8" (positive logic) or "108" (negative logic) in any parameter from **Pr.190 to Pr.196 (Output terminal function selection)**.



NOTE


• Changing the terminal assignment using **Pr.190 to Pr.196 (Output terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

 ◆ External thermal relay input (OH signal, E.OHT)



External thermal relay input connection diagram

 - The External thermal relay input (OH) signal is used when using the external thermal relay or the thermal protector built into the motor to protect the motor from overheating.
- · When the thermal relay is activated, the inverter output is shut off by the external thermal relay (E.OHT).
- To input the OH signal, set "7" in any parameter from **Pr.178 to Pr.189 (Input terminal function selection)** to assign the function.
- · Vector-control-dedicated motors (SF-V5RU) are equipped with thermal protectors.



Connecting the SF-V5RU thermal protector

*1 Connect the recommended 2 W 1 kΩ resistor between terminals PC and OH. (Refer to the Instruction Manual (Connection).)





• Changing the terminal assignment using **Pr.178 to Pr.189 (Input terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

Overheat protection to match the characteristic of the motor (Pr.600 to Pr.604, Pr.692 to Pr.696)


- · The activation level of the electronic thermal O/L relay can be varied to match the motor temperature characteristic.
- The electronic thermal O/L relay operation level can be set with the combination of three points (**Pr.600**, **Pr.601**), (**Pr.602**, **Pr.603**), (**Pr.604**, **Pr.9**). Two or more points are required for setting.

• The electronic thermal O/L relay operation level can be set with the combination of three points (**Pr.692**, **Pr.693**), (**Pr.696**, **Pr.51**) when the RT signal is ON.

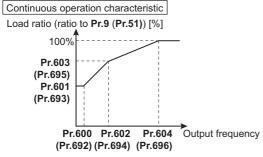

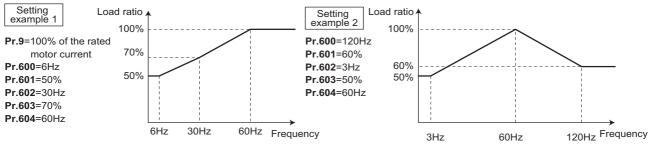

• When setting **Pr.600**, **Pr.602**, **Pr.604** (**Pr.692**, **Pr.694**, **Pr.696**) to the same frequency, the following graph's upper level is applied.

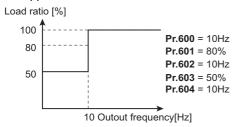



• Make sure to set the parameters according to the temperature characteristic of the motor used.

Parameters referred to

Pr.71 Applied motor page 340

Pr.72 PWM frequency selection page 184

Pr.178 to Pr.189 (Input terminal function selection) 🖅 page 328

Pr.190 to Pr.196 (Output terminal function selection) page 292

11.2 Cooling fan operation selection

A cooling fan is built into the inverter can be controlled.

Pr.	Name	Initial value	Setting range	Description
244	Cooling fan		0	Cooling fan ON/OFF control disabled. (The cooling fan is always ON at power ON.) A cooling fan operates at power ON.
H100	operation selection	1	1	Cooling fan ON/OFF control enabled. The fan is always ON while the inverter is running. During a stop, the inverter status is monitored and the fan switches ON/OFF according to the temperature.

◆ Cooling fan always ON (Pr.244 = "0")

- When **Pr.244** = "0", the cooling fan operates at power ON. If the fan stops at this time, the inverter finds that the fan operation is faulty and the indication of the "FN" (Fan alarm) is displayed on the operation panel. The Fan fault output (FAN) signal and the Alarm (LF) signal are output.
- For the terminal used for the FAN signal output, set "25" (positive logic) or "125" (negative logic) in any parameter from **Pr.190 to Pr.196 (Output terminal function selection)**, and for LF signal, set "98" (positive logic) or "198" (negative logic)".

◆ Cooling fan operation control (Pr.244 = "1" (initial value))

• The cooling fan operation is controlled when **Pr.244** = "1". When the inverter is running, the cooling fan operates constantly. When the inverter is stopped, the cooling fan operates depending on the temperature of the inverter heat sink. If the fan stops although it meets the conditions for running, fan operation is regarded as faulty, "FN" is displayed on the operation panel, and the FAN signal and LF signals are output.

◆ Cooling fan operation command (Y206) signal

- The Cooling fan operation command (Y206) signal can be output when the inverter cooling fan meets the conditions for running. The function can be used when the fan installed on the enclosure is synchronized with the inverter cooling fan.
- The Y206 signal indicates the operating command condition of the inverter cooling fan depending on the power supply ON/ OFF or the **Pr.244** settings. The signal does not indicate the actual operation of the cooling fan. (The signal is output even if the cooling fan is stopped due to a fault.)
- To use the Y206 signal, set "206" (positive logic) or "306" (negative logic) in one of **Pr.190 to Pr.196 (Output terminal function selection)** to assign function to an output terminal.

NOTE

- The cooling fan is installed on the FR-E820-0080(1.5K) or higher, FR-E840-0040(1.5K) or higher, FR-E860-0027(1.5K) or higher, and FR-E820S-0080(1.5K) or higher.
- Changing the terminal assignment using **Pr.190 to Pr.196 (Output terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.190 to Pr.196 (Output terminal function selection) page 292

11.3 Earth (ground) fault detection at start

Select whether to make earth (ground) fault detection at start. When enabled, earth (ground) fault detection is performed immediately after a start signal input to the inverter.

Pr.	Name	Initial	value ^{*1}	Setting range	Description
	Name	Gr.1	Gr.2	Setting range	Description
249 Earth (ground) fai H101 start	Earth (ground) fault detection at	0	1	0	Earth (ground) fault detection at start disabled
	start	U		1	Earth (ground) fault detection at start enabled

^{*1} Gr.1 and Gr.2 are the parameter initial value groups. (Refer to page 52).

- If a ground fault is detected at start while **Pr.249** = "1", the output-side earth (ground) fault overcurrent (E.GF) is displayed and the outputs are shut off.
- · When the Pr.72 PWM frequency selection setting is high, enable the ground fault detection at start.



- Because the detection is performed at start, output is delayed for approx. 20 ms every start.
- Use Pr.249 to enable/disable ground fault detection at operation start.

11.4 Inverter output fault detection enable/disable selection

Faults occurred on the output side (load side) of the inverter (inverter output fault (E.10)) can be detected during operation.

Pr.	Name	Initial value	Setting range	Description
631	Inverter output fault detection	0	0	Output fault detection disabled
H182	enable/disable selection		1	Output fault detection enabled

11.5 Initiating a protective function

A fault (protective function) is initiated by setting the parameter.

This function can be used to check how the system operates at activation of a protective function.

Pr.	Name	Initial value	Setting range	Description
997 H103 Fault initiation	9999		The setting range is the same with the one for fault data codes of the inverter (which can be read through communication). Written data is no stored in EEPROM.	
11100			9999	The read value is always "9999". The protective function is not activated with this setting.

- To initiate a fault (protective function), set the assigned number of the protective function to be initiated in Pr.997.
- · The value set in Pr.997 is not stored in EEPROM.
- When the protective function is activated, the inverter output is shut off and the inverter displays the fault indication and outputs a Fault (ALM) signal.
- The latest fault in the fault history is displayed while the fault initiation function is in operation. After a reset, the fault history goes back to the previous status. (The protective function generated by the fault is not saved in the fault history.)
- · Perform inverter reset to cancel the protective function.
- For the selectable parameter by **Pr.997** and the corresponding protective functions, refer to the Instruction Manual (Maintenance).



- If a protective function is already operating, no fault can be activated by Pr.997.
- The retry function is disabled when a protective function has been initiated by the fault initiation function.
- If a fault occurs after a protective function has been activated, the protective function indication does not change. The fault is not saved in the fault history either.

11.6 I/O phase loss protection selection

The output phase loss protection function, which stops the inverter output if one of the three phases (U, V, W) on the inverter's output side (load side) is lost, can be disabled.

The input phase loss protective function on the inverter input side (R/L1, S/L2, T/L3) can be disabled.

Pr.	Name	Initial value	Setting range	Description
251	Output phase loss		0	Output phase loss protection disabled
H200 protection selection	'	1	Output phase loss protection enabled	
872	Input phase loss	1	0	Input phase loss protection disabled
H201 ^{*1}	protection selection	1	1	Input phase loss protection enabled

^{*1} Available for the three-phase power input model only.

◆ Output phase loss protection selection (Pr.251)

• When Pr.251 is set to "0", output phase loss protection (E.LF) becomes invalid.

♦ Input phase loss protection selection (Pr.872)

• When **Pr.872** is set to "1", Input phase loss (E.ILF) protection is activated if one of three phases is detected to be lost for 1 second continuously.



- When several motors are connected, output phase loss cannot be detected even if the wiring to one motor loses phase.
- In the case of R/L1, S/L2 phase loss, the input phase loss protection does not operate, and the inverter output is shut off.
- If an input phase loss continues for a long time, the lives of converter section and capacitor of the inverter become shorter.
- If the load is light or during a stop, lost phase cannot be detected because detection is performed based on the fluctuation of bus voltage. Large unbalanced phase-to-phase voltage of the three-phase power supply may also cause input phase loss protection (E.ILF).
- · Phase loss cannot be detected during regeneration load operation.

《 Parameters referred to 》

Pr.261 Power failure stop selection page 414

11.7 Retry function

This function allows the inverter to reset itself and restart at activation of the protective function (fault indication). The retry generating protective functions can also be selected.

When the automatic restart after instantaneous power failure function is selected (**Pr.57 Restart coasting time** ≠ "9999"), the restart operation is also performed after a retry operation as well as after an instantaneous power failure. (For restart operation, refer to page 403 and page 408 for selection.)

Pr.	Name	Initial value	Setting range	Description
65 H300	Retry selection	Retry selection 0 to 5 Faults which trigger the retry operation can be selected.		Faults which trigger the retry operation can be selected.
			0	The retry function disabled.
67	67 Number of retries at fault	0	1 to 10	Set the number of retries at a fault occurrence. A fault output is not provided during the retry operation.
H301	H301 occurrence		101 to 110	Set the number of retries at a fault occurrence. (The setting value minus 100 is the number of retries.) A fault output is provided during the retry operation.
68 H302	Retry waiting time 1 s 0.1 to 600 s		0.1 to 600 s	Set the time delay from when an inverter fault occurs until the retry operation starts.
69 H303	Retry count display erase	0	0	Setting "0" clears the retry success counter ("retry success" means that the inverter successfully restarts).

◆ Setting the retry function (Pr.67, Pr.68)

- When the inverter protective function is operating (fault indication), the retry function automatically cancels (resets) the protective function after the time set in **Pr.68**. The retry function then restarts the operation from the starting frequency.
- The retry function is enabled when the **Pr.67** setting is other than "0". Set the number of retries at activation of the protective function in **Pr.67**.


Pr.67 setting	Fault output during retry operation	Retry count
0	_	No retry function
1 to 10	Not available	1 to 10 times
101 to 110	Available	1 to 10 times

- When retries fail consecutively more than the number of times set in **Pr.67**, a retry count excess (E.RET) occurs, resulting in an inverter retries. (Refer to the Retry failure example.)
- Use **Pr.68** to set the waiting time from a protective function activation to a retry in the range of 0.1 to 600 s.
- During retry operation, the During retry (Y64) signal is ON. For the Y64 signal, set "64" (positive logic) or "164" (negative logic) in any parameter from **Pr.190 to Pr.196 (Output terminal function selection)** to assign the function.

◆ Retry count check (Pr.69)

• Reading the **Pr.69** value provides the cumulative number of successful restart times made by retries. The cumulative count in **Pr.69** increases by 1 when a retry is successful. Retry is regarded as successful when normal operation continues without a fault for the **Pr.68** setting multiplied by four or longer (3.1 seconds at the shortest). (When retry is successful, the cumulative number of retry failures is cleared.)

· Writing "0" in Pr.69 clears the cumulative count.

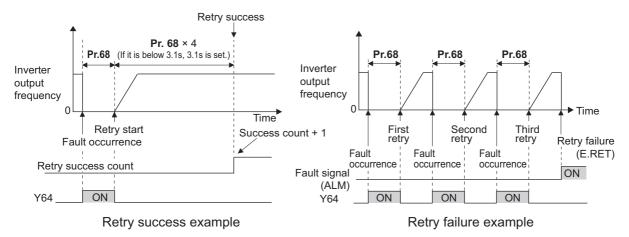

Selecting retry generating faults (Pr.65)

• Using **Pr.65**, the fault that causes a retry is selectable. The faults not described in the following table do not enable the retry function. (For the details of faults, refer to the Instruction Manual (Maintenance).) • indicates the faults selected for retry.

Retry-		Pr.65 setting					
triggering fault	0	1	2	3	4	5	
E.OC1	•	•		•	•	•	
E.OC2	•	•		•	•		
E.OC3	•	•		•	•	•	
E.OV1	•		•	•	•		
E.OV2	•		•	•	•		
E.OV3	•		•	•	•		
E.THM	•						
E.THT	•						
E.UVT	•				•		
E.BE	•				•		
E.GF	•				•		
E.OHT	•						
E.OLT	•				•		
E.OPT	•				•		
E.OP1	•				•		
E.PE	•				•		
E.MB1	•				•		

Retry-	Pr.65 sett			setting		
triggering fault	0	1	2	3	4	5
E.MB2	•				•	
E.MB3	•				•	
E.MB4	•				•	
E.MB5	•				•	
E.MB6	•				•	
E.MB7	•				•	
E.OS	•				•	
E.OSD	•				•	
E.CDO	•				•	
E.USB	•				•	
E.ILF	•				•	
E.PID	•				•	
E.SOT	•	•		•	•	•
E.LUP	•				•	
E.LDN	•				•	
E.EHR	•				•	
E.10	•				•	

NOTE

- Use the retry function only when the operation can be resumed after resetting a protective function activation. Making a retry against the protective function, which is activated by an unknown condition, will lead the inverter and motor to be faulty. Identify and remove the cause of the protective function activation before restarting the operation.
- If the retry function operates during PU operations, the operating conditions (forward/reverse rotation) are stored; and operations resume after retry reset.
- Only the fault details for the first fault that occurred during retry are stored in the fault history.
- The reset by the retry function does not clear the accumulated data of the electronic thermal O/L relay, regenerative brake duty, etc. (This is different from power supply reset or reset by RES signal.)
- When the parameter storage device fault (control circuit board) (E.PE) is occurring and reading of the retry-function-related parameters is not possible, retry cannot be operated.
- Changing the terminal assignment using Pr.190 to Pr.196 (Output terminal function selection) may affect the other functions. Set parameters after confirming the function of each terminal.

⚠CAUTION

• When the retry function is set enabled, stay away from the motor and machine in the case of an output shutoff. The motor and machine will start suddenly (after the reset time has elapsed) after the shutoff. When the retry function has been selected, apply the CAUTION sticker(s), which are found in the Inverter Safety Guideline enclosed with the inverter, to easily visible places.

Parameters referred to

Pr.57 Restart coasting time page 403, page 408


11.8 Limiting the output frequency (maximum/minimum frequency)

Motor speed can be limited. Clamp the upper and lower limits of the output frequency.

Pr.	Name	Initial value	Setting range	Description
1 H400	Maximum frequency	120 Hz	0 to 120 Hz	Set the upper limit of the output frequency.
2 H401	Minimum frequency	0 Hz	0 to 120 Hz	Set the lower limit of the output frequency.
18 H402	High speed maximum frequency	120 Hz	0 to 590 Hz	Set when operating at 120 Hz or higher.

Setting the maximum frequency (Pr.1, Pr.18)

- Set **Pr.1 Maximum frequency** to the upper limit of the output frequency. If the value of the frequency command given is higher than the setting, the output frequency is clamped at the maximum frequency.
- To operate at a frequency higher than the 120 Hz, adjust the upper output frequency limit with **Pr.18 High speed maximum frequency**. (When setting a frequency in **Pr.18**, the **Pr.1** setting automatically changes to the frequency set in **Pr.18**. Also, when a frequency is set in **Pr.1**, the **Pr.18** setting automatically changes to the frequency set in **Pr.1**.)

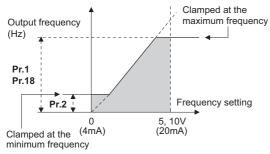

◆ Setting the minimum frequency (Pr.2)

- · Set Pr.2 Minimum frequency to the lower limit of the output frequency.
- If the set frequency is Pr.2 or less, the output frequency is clamped at Pr.2 (does not fall below Pr.2).

NOTE

- To operate with a frequency higher than 60 Hz using frequency-setting analog signals, change the **Pr.125 (Pr.126) (frequency setting gain)** setting. Simply changing the **Pr.1 and Pr.18** settings does not enable the operation at a frequency higher than 60 Hz.
- Under Real sensorless vector control and PM sensorless vector control, the upper and lower limits are for the commanded frequency. The final output frequency that is decided by each control may exceed the lower or upper limits.
- When Pr.15 Jog frequency is equal to or less than Pr.2, the Pr.15 setting takes precedence.
- If a jump frequency that exceeds the setting of Pr.1 (Pr.18) is set, the maximum frequency setting is the set frequency. If the
 jump frequency is less than the setting of Pr.2, the jump frequency is the set frequency. (The set frequency can be equal to or
 less than the frequency lower limit.) When stall prevention is activated to decrease the output frequency, the output frequency
 may drop to Pr.2 or below.

∴ CAUTION

• Note that when **Pr.2** is set to any value equal to or higher than **Pr.13 Starting frequency**, simply turning ON the start signal runs the motor at the frequency set in **Pr.2** even if the command frequency is not given.

Parameters referred to

Pr.13 Starting frequency page 207, page 208

Pr.15 Jog frequency page 232

Pr.125 Terminal 2 frequency setting gain frequency, Pr.126 Terminal 4 frequency setting gain frequency 🖙 page 318


11.9 Avoiding machine resonance points (frequency jump)

When it is desired to avoid resonance attributable to the natural frequency of a mechanical system, these parameters allow resonant frequencies to be jumped.

Pr.	Name	Initial value	Setting range	Description	
31 H420	Frequency jump 1A		0 to 590 Hz,		
32 H421	Frequency jump 1B				
33 H422	Frequency jump 2A	9999		1A to 1B, 2A to 2B, 3A to 3B are frequency jumps	
34 H423	Frequency jump 2B		9999	9999: Function disabled	
35 H424	Frequency jump 3A				
36 H425	Frequency jump 3B				
552	Eroguanov iuma ranga	9999	0 to 30 Hz	Set the jump range for the frequency jumps (6-point jump).	
H429	H429 Frequency jump range		9999	3-point jump	

3-point frequency jump (Pr.31 to Pr.36)

- Up to three areas may be set, with the jump frequencies set to either the top or bottom point of each area.
- The settings of frequency jumps 1A, 2A, 3A are jump points, and operation is performed at these frequencies in the jump areas.

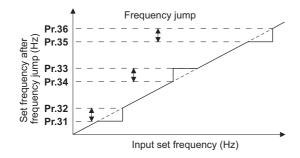

Example 1) To fix the frequency to 30 Hz in the range of 30 Hz to 35 Hz, set 35 Hz in Pr.34 and 30 Hz in Pr.33.


Example 2) To jump the frequency to 35 Hz in the range of 30 Hz to 35 Hz, set 35 Hz in Pr.33 and 30 Hz in Pr.34.

Pr.33: 35 Hz --- **Pr.34**: 30 Hz ---

◆ 6-point frequency jump (Pr.552)


- A total of six jump areas can be set by setting the common jump range for the frequencies set in Pr.31 to Pr.36.
- When frequency jump ranges overlap, the lower limit of the lower jump range and the upper limit of the upper jump range are used.

• When the set frequency decreases and falls within the jump range, the upper limit of the jump range is the set frequency. When the set frequency increases and falls within the jump range, the lower limit of the jump range is the set frequency.

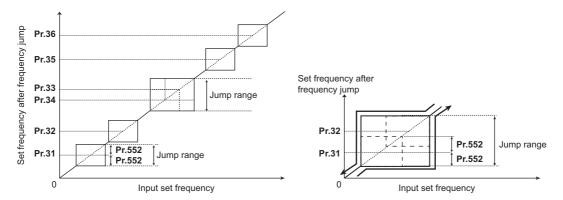

NOTE

- During acceleration/deceleration, the frequency within the set area is valid.
- If the setting ranges of individual groups (1A and 1B, 2A and 2B, 3A and 3B) overlap, Parameter write error (Er1) occurs.
- Setting Pr.552 = "0" disables frequency jumps.
- If a jump frequency that exceeds the setting of **Pr.1** (**Pr.18**) **Maximum frequency** is set for the 3-point frequency jump, the maximum frequency setting is the set frequency. If the jump frequency is less than the setting of **Pr.2 Minimum frequency**, the jump frequency is the set frequency. (The set frequency can be equal to or less than the frequency lower limit.) Example with 6-point frequency jump

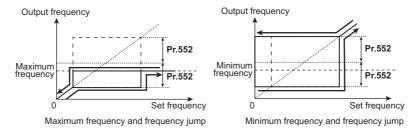

Parameters referred to

Pr.1 Maximum frequency, Pr.2 Minimum frequency, Pr.18 High speed maximum frequency □ page 253

11.10 Stall prevention operation

Magnetic flux

This function monitors the output current and automatically changes the output frequency to prevent the inverter from shutting off due to overcurrent, overvoltage, etc. It can also limit the stall prevention and fast-response current limit operation during acceleration/deceleration and power/regenerative driving.

This function is disabled under Real sensorless vector control and PM sensorless vector control.


- · Stall prevention:
 - If the output current exceeds the stall prevention operation level, the output frequency of the inverter is automatically changed to reduce the output current. Also, the second stall prevention function can limit the output frequency range in which the stall prevention function is enabled.
- · Fast-response current limit: If the current exceeds the limit value, the output of the inverter is shut off to prevent an overcurrent.

D.	Nama	Initial	value ^{*1}	Catting range	Parameter them	
Pr.	Name	Gr.1	Gr.2	Setting range	Description	
22	Stall prevention			0	Stall prevention operation disabled.	
H500	operation level	150%		0.1% to 400%*2	Set the current limit at which the stall prevention operation starts.	
156 H501	Stall prevention operation selection	0		0 to 31, 100, 101	Enable/disable the stall prevention operation and the fast-response current limit operation.	
				0	Second stall prevention operation disabled.	
48 H600	Second stall prevention operation level	9999		0.1% to 400% ^{*2}	The stall prevention operation level can be changed using the RT signal.	
				9999	Same as Pr.22.	
23	Stall prevention operation level	. 9999		0% to 200%	The stall operation level when running at high speeds above the rated frequency can be reduced.	
H610	compensation factor at double speed	3333		9999	Stall prevention operation disabled at double speed.	
66 H611	Stall prevention operation reduction starting frequency	60 Hz	50 Hz	0 to 590 Hz	Set the frequency at which the stall operation level reduction starts.	
154	Voltage reduction		•	1	Does not suppress the overvoltage protective function	
H631	selection during stall prevention operation	1		11	Suppresses the overvoltage protective function	
157 M430	OL signal output timer	0 s		0 to 25 s	Set the OL signal output start time when stall prevention is activated.	
IVI43U	W1430			9999	No OL signal output.	
277 H630	Stall prevention			0	Stall prevention is activated when the output current exceeds the stall prevention operation level.	
	operation current switchover			1	Stall prevention is activated when the output torque (current equivalent to the torque) exceeds the stall prevention operation level.	

^{*1} Gr.1 and Gr.2 are the parameter initial value groups. (Refer to page 52).

^{*2} The upper limit of stall prevention operation is limited internally to the following. 150% (LD rating), 200% (ND rating)

Setting of stall prevention operation level (Pr.22)

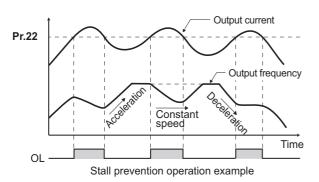

- For Pr.22 Stall prevention operation level, set the ratio
 of the output current to the inverter's rated current at which
 the stall prevention operation is activated. Normally, use
 this parameter in the initial setting.
- Stall prevention operation stops acceleration (makes deceleration) during acceleration, makes deceleration during constant speed, and stops deceleration during deceleration.
- When the stall prevention operation is performed, the Overload warning (OL) signal is output.

NOTE

- A continuous overloaded condition may activate a protective function such as motor overload trip (electronic thermal O/L relay function) (E.THM).
- When **Pr.156** has been set to activate the fast response current limit (initial value), the **Pr.22** setting should not be higher than 170%. Such setting prevents torque generation.
- When Real sensorless vector control or Vector control is selected using **Pr.800 Control method selection**, **Pr.22** serves as the torque limit level.

◆ Disabling the stall prevention operation and fast-response current limit according to operating conditions (Pr.156)

• Referring to the following table, enable/disable the stall prevention operation and the fast-response current limit operation, and also set the operation at OL signal output.

	Pr.156 setting	Fast-response current limit o: enabled	Stall p	Stall prevention operation selection ○: enabled •: disabled		
		•: disabled	Acceleration	Constant speed	Deceleration	●: stopped*1
0 (initia	al value)	0	0	0	0	0
1		•	0	0	0	0
2		0	•	0	0	0
3		•	•	0	0	0
4		0	0	•	0	0
5		•	0	•	0	0
6		0	•	•	0	0
7		•	•	•	0	0
8		0	0	0	•	0
9		•	0	0	•	0
10		0	•	0	•	0
11		•	•	0	•	0
12		0	0	•	•	0
13		•	0	•	•	0
14		0	•	•	•	0
15		•	•	•	•	*2
16		0	0	0	0	•
17		•	0	0	0	•
18		0	•	0	0	•
19		•	•	0	0	•
20		0	0	•	0	•
21		•	0	•	0	•
22		0	•	•	0	•
23		•	•	•	0	•
24		0	0	0	•	•
25		•	0	0	•	•
26		0	•	0	•	•
27		•	•	0	•	•
28		0	0	•	•	•
29		•	0	•	•	•
30		0	•	•	•	•
31		•	•	•	•	_*2
100 ^{*3}	Power driving	0	0	0	0	0
100	Regenerative driving	•	•	•	•	_*2
101 ^{*3}	Power driving	•	0	0	0	0
101	Regenerative driving	•	•	•	•	_*2

^{*1} When "operation stop at OL signal output" is selected, the fault output "E.OLT" (stop due to stall prevention) is displayed, and operation stops.

• NOTE

- When the load is heavy or the acceleration/deceleration time is short, stall prevention operates and acceleration/deceleration may not be performed according to the time set. Set the **Pr.156** and stall prevention operation level to the optimum values.
- For lift applications, make settings to disable the fast-response current limit. Otherwise, the torque may be insufficient, causing the load to drop.


^{*2} The OL signal and E.OLT are not output because fast-response current limit and stall prevention are not operating.

^{*3} Setting values "100, 101" can be individually set for power driving and regenerative driving. The setting value "101" disables the fast-response current limit during power driving.

Adjusting the stall prevention operation signal and output timing (OL signal, Pr.157)

- If the output current exceeds the stall prevention operation level and stall prevention is activated, or the fast-response current limit is enabled, Overload warning (OL) signal turns ON for 100 ms or more. The output signal turns OFF when the output current falls to the stall prevention operation level or less.
- Pr.157 OL signal output timer can be used to set whether to output the OL signal immediately, or whether to output it after a certain time period has elapsed.
- This function also operates during regeneration avoidance operation ("OLV" (overvoltage stall)).
- For the OL signal, set "3" (positive logic) or "103" (negative logic) in any parameter from **Pr.190 to Pr.196 (Output terminal function selection)** to assign the function to the output terminal.


Pr.157 setting	Description
0 (initial value)	Output immediately.
0.1 to 25	Output after the set time (s).
9999	Not output.

 




- If the stall prevention operation has lowered the output frequency to 1 Hz and kept the level for 3 seconds, the stall prevention stop (E.OLT) is activated to shut off the inverter output.
- Changing the terminal assignment using **Pr.190 to Pr.196 (Output terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

◆ Setting for stall prevention operation in the high-frequency range (Pr.22, Pr.23, Pr.66)

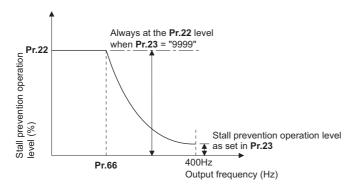

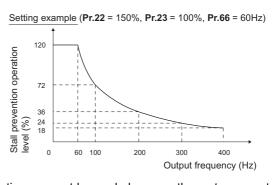

- When operating at the rated motor frequency or higher, acceleration may not be made because the motor current does not increase. Also, when operating in the high-frequency range, the current flowing to the locked motor becomes less than the rated output current of the inverter. Even if the motor is stopped, the protective function does not operate (OL). In a case like this, the stall prevention level can be reduced in the high-frequency range to improve the motor's operating characteristics. This is useful when operating up to the high speed range, such as when using a centrifuge. Normally, set Pr.66 Stall prevention operation reduction starting frequency to 60 Hz, and Pr.23 Stall prevention operation level compensation factor at double speed to 100%.
- · Calculation formula for stall prevention operation level

Stall prevention operation level (%) in the high-frequency range = A + B ×
$$\left[\frac{Pr.22 - A}{Pr.22 - B} \right]$$
 × $\left[\frac{Pr.23 - 100}{100} \right]$

Where,
$$A = \frac{\text{Pr.66 (Hz)} \times \text{Pr.22 (\%)}}{\text{Output frequency (Hz)}}$$
, $B = \frac{\text{Pr.66 (Hz)} \times \text{Pr.22 (\%)}}{400 \text{ Hz}}$

• When Pr.23 = "9999" (initial value), the stall prevention operation level is constant at the Pr.22 level up to 590 Hz.

◆ Protecting equipment and limiting the load by the torque limit (Pr.277)

- Set Pr.277 Stall prevention operation current switchover = "1" to enable the torque limit.
- If the output torque (current equivalent to the torque) exceeds the stall prevention operation level, the output torque is limited by adjusting the output frequency. The stall prevention operation level in such a case is based on the rating torque of the motor.



- The torque limit cannot work properly when two or more motors are driven by one inverter.
- In the constant power range (Pr.3 Base frequency), the torque limit is activated at the torque less than the stall prevention
 operation level, since the magnetic flux decreases.
- · When the torque limit is activated during regenerative driving, the output frequency is increased up to the maximum frequency.
- The toque limit is not activated at the frequency of 5 Hz or less during deceleration.
- When using the torque limit under V/F control, note the following points:
 - Use the inverter whose capacity is the same as that of the motor.
 - The stall prevention operation level (torque limit level) is based on the rating torque of the motor whose capacity is the same as that of the inverter.
 - When a large value is set in Pr.0 Torque boost, the torque limit may be activated in the low-speed range.
 - If more accurate torque limit is required, select Advanced magnetic flux vector control.

Setting two stall prevention operation levels (Pr.48)

- · Turning ON the RT signal enables Pr.48 Second stall prevention operation level.
- To input the RT signal, set "3" in any parameter from **Pr.178 to Pr.189 (Input terminal function selection)** to assign the function.



- Changing the terminal assignment using **Pr.178 to Pr.189 (Input terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.
- The RT signal is the Second function selection signal which also enables other second functions. (Refer to page 334).

◆ Further prevention of a trip (Pr.154)

• Set **Pr.154** = "11" when the overvoltage protective function (E.OV[]) is activated during stall prevention operation in an application with large load inertia. Note that turning OFF the start signal (STF/STR) or varying the frequency command during stall prevention operation may delay the acceleration/deceleration start.

- Do not set the stall prevention operation current too low.
 - Doing so will reduce the generated torque.
- · Be sure to perform the test operation.
 - Stall prevention operation during acceleration may extend the acceleration time.
 - Stall prevention operation during constant-speed operation may cause sudden speed changes.
 - Stall prevention operation during deceleration may extend the deceleration time.

Parameters referred to

Pr.22 Torque limit level page 114

Pr.178 to Pr.184 (Input terminal function selection) page 328

Pr.190 to Pr.196 (Output terminal function selection) page 292

11.11 Load characteristics fault detection

This function is used to monitor whether the load is operating in normal condition by storing the speed/torque relationship in the inverter to detect mechanical faults or for maintenance. When the load operating condition deviates from the normal range, the protective function is activated or the warning is output to protect the inverter or the motor.


Pr.	Name	Initial	value ^{*1}	Setting	Description
PI.	Name	Gr.1	Gr.2	range	Description
				0	Load characteristics measurement mode does not start. (Measurement of load characteristics complete without fault.)
1480	Load characteristics	0		1	Load characteristics measurement mode is started.
H520	measurement mode	ŭ		2, 3, 4, 5, 81, 82, 83, 84, 85	The load characteristics measurement status is displayed. (Read-only)
1481 H521	Load characteristics load reference 1	9999			
1482 H522	Load characteristics load reference 2	9999			Lload to get the reference value of permal load characteristics
1483 H523	Load characteristics load reference 3	9999		0% to 400%	Used to set the reference value of normal load characteristics. 8888: The present load status is written as reference status. 9999: The load reference is invalid.
1484 H524	Load characteristics load reference 4	9999			occo. The load releasing is invalid.
1485 H525	Load characteristics load reference 5	9999			
1486 H526	Load characteristics maximum frequency	60 Hz	50 Hz	0 to 590 Hz	Used to set the upper frequency limit of the load characteristics fault detection range.
1487 H527	Load characteristics minimum frequency	6 Hz		0 to 590 Hz	Used to set the lower frequency limit of the load characteristics fault detection range.
1488 H531	Upper limit warning detection width	20%		0% to 400%	Used to set the detection range of when the upper limit load fault warning is output.
11331	Width			9999	Function disabled
1489 H532	Lower limit warning detection width	20%		0% to 400%	Used to set the detection range of when the lower limit load fault warning is output.
H332	Width			9999	Function disabled
1490 H533	Upper limit fault detection width	9999		0% to 400%	Used to set the detection range of when output is shut-off when the upper limit load fault occurs.
пооо	Width			9999	Function disabled
1491 H534	Lower limit fault detection width	9999		0% to 400%	Used to set the detection range of when output is shut-off when the lower limit load fault occurs.
11034	widti			9999	Function disabled
1492 H535	Load status detection signal delay time / load reference measurement waiting time	1 s		0 to 60 s	Used to set the waiting time after the load fault is detected until warning output or output shutoff. In the load characteristics measurement mode, set the waiting time after the load measurement frequency is reached until the load reference is set.

^{*1} Gr.1 and Gr.2 are the parameter initial value groups. (Refer to page 52).

♦ Load characteristics reference setting (Pr.1481 to Pr.1487)

• Use **Pr.1481 to Pr.1485** to set the reference value of load characteristics.

• Use Pr.1486 Load characteristics maximum frequency and Pr.1487 Load characteristics minimum frequency to set the output frequency range for load fault detection.

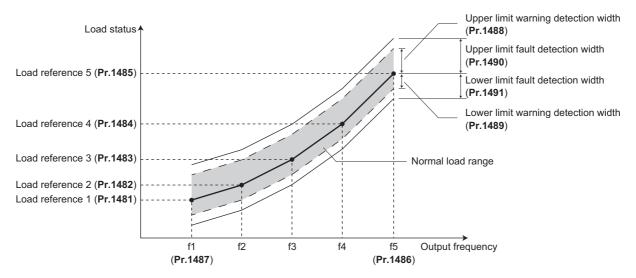

Automatic measurement of the load characteristics reference (Load characteristics measurement mode) (Pr.1480)




- Perform measurement under actual environment with the motor connected.
- Set Pr.1487 Load characteristics minimum frequency to a value higher than the Pr.13 Starting frequency setting.
- Setting **Pr.1480 Load characteristics measurement mode** = "1" enables automatic measurement of the load characteristics reference. (Load characteristics measurement mode)
- Use **Pr.1486** and **Pr.1487** to set the frequency band for the measurement, and set **Pr.1480** = "1". After setting, when the inverter is started, the measurement starts. (When the value set in **Pr.1486** is equal to or smaller than the value set in **Pr.1487**, the measurement does not start.)
- The automatically measured load characteristics reference is written in Pr.1481 to Pr.1485.
- After the measurement is started, read **Pr.1480** to display the status of the measurement. If "8" appears in the tens place, the measurement has not properly completed.

Read value of Pr.1480		Status				
Tens place	Ones place	Status				
_	1	During measurement from the starting point to Point 1				
_	2	During measurement from Point 1 to Point 2				
_	3	During measurement from Point 2 to Point 3				
_	4	During measurement from Point 3 to Point 4				
_	5	During measurement from Point 4 to Point 5				
_	0	Normal completion				
8	1 to 5	Termination of measurement by an activation of a protective function, Inverter reset, turning ON of MRS signal, turning OFF of the start command, or timeout. (The value in the ones place represents the above-mentioned measurement point.)				

While measuring automatically, the During load characteristics measurement (Y213) signal is output. For the Y213 signal, assign the function by setting "213" (positive logic) or "313" (negative logic) in any of in any parameter from Pr.190 to Pr.196 (Output terminal function selection).

• Setting "8888" in **Pr.1481 to Pr.1485** enables fine adjustment of load characteristics. When setting **Pr.1481 to Pr.1485** = "8888" during operation, the load status at that point is set in the parameter (only when the set frequency is within ±2 Hz of the frequency of the measurement point, and the SU signal is ON).



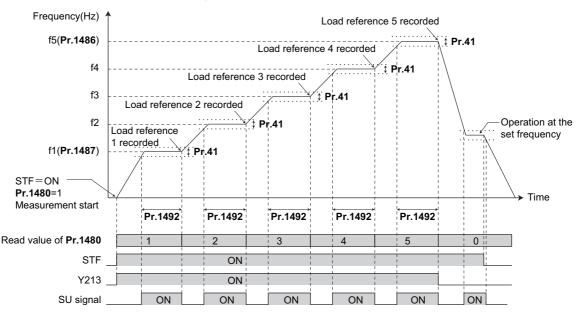

NOTE

- Even if the load measurement is not properly completed, the load characteristics fault is detected based on the load characteristics found by the already-completed portion of the measurement.
- · During the load characteristics measurement, the load characteristics fault detection is not performed.
- During the load characteristics measurement, linear acceleration/deceleration is performed even if the S-pattern acceleration/ deceleration is set.
- Changing the terminal assignment using Pr.190 to Pr.196 (Output terminal function selection) may affect the other functions. Set parameters after confirming the function of each terminal.

◆ Setting the load characteristics reference manually (Pr.1481 to Pr.1485)

- Set Pr.1480 Load characteristics measurement mode = "0" (initial value).
- Set **Pr.1486** and **Pr.1487** to specify the frequency band for the measurement, and calculate the frequency as the load characteristics reference (f2 to f4) using the following table.
- Start the inverter operation, and set **Pr.1481** = "8888" during operation at the frequency of the load characteristics reference 1 (f1). The load status at that point is set in **Pr.1481** (only when the set frequency is within ±2 Hz of the frequency of the measurement point, and the SU signal is ON).
- Set load references in Pr.1482 to Pr.1485 in the same way as Pr.1481.

Reference	Frequency	Load reference
Load characteristics reference 1	f1: load characteristics minimum frequency (Pr.1487)	Pr.1481
Load characteristics reference 2	f2 = (f5 - f1)/4 + f1	Pr.1482
Load characteristics reference 3	f3 = (f5 - f1)/2 + f1	Pr.1483
Load characteristics reference 4	f4 = (f5 - f1) × 3/4 + f1	Pr.1484
Load characteristics reference 5	f5: load characteristics maximum frequency (Pr.1486)	Pr.1485




- When inputting values directly in Pr.1481 to Pr.1485 under V/F control, input the load meter monitored values at the frequency
 of each load characteristics reference.
- When inputting values directly in Pr.1481 to Pr.1485 under Advanced magnetic flux vector control, Real sensorless vector control, or PM sensorless vector control, input the load meter monitored values at the frequency of each load characteristics reference

♦ Setting example

- The load characteristics are calculated from the parameter setting and the output frequency.
- A setting example is as follows. The reference value is linearly interpolated from the parameter settings. For example, the reference when the output frequency is 30 Hz is 26%, which is linearly interpolated from values of the reference 2 and the reference 3.

Reference	Frequency	Load reference
Load characteristics reference 1	f1: Load characteristics minimum frequency (Pr.1487) = 10 Hz	Pr.1481 = 15%
Load characteristics reference 2	f2 = (f5 - f1)/4 + f1 = 22.5 Hz	Pr.1482 = 20%
Load characteristics reference 3	f3 = (f5 - f1)/2 + f1 = 35 Hz	Pr.1483 = 30%
Load characteristics reference 4	f4 = (f5 - f1) × 3/4 + f1 = 47.5 Hz	Pr.1484 = 60%
Load characteristics reference 5	f5: Load characteristics maximum frequency (Pr.1486) = 60 Hz	Pr.1485 = 100%

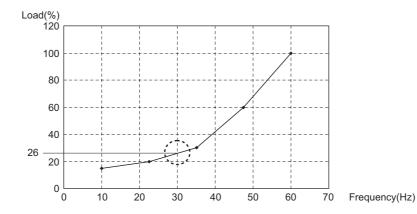


NOTE

 When the load reference is not set for five points, the load characteristics value is determined by linear interpolation of the set load reference values only. If there is only one load reference setting, the set load reference is used as the load reference all through the range.

◆ Load fault detection setting (Pr.1488 to Pr.1491)

- When the load is deviated from the detection width set in Pr.1488 Upper limit warning detection width, the Upper limit warning detection (LUP) signal is output. When the load is deviated from the detection width set in Pr.1489 Lower limit warning detection width, the Lower limit warning detection (LDN) signal is output. At the same time, the Load fault warning (LDF) appears on the operation panel.
- For the LUP signal, assign the function by setting "211" (positive logic) or "311" (negative logic) in any parameter from Pr.190 to Pr.196 (Output terminal function selection). For the LDN signal, assign the function by setting "212" (positive logic) or "312" (negative logic) in any parameter from Pr.190 to Pr.196 (Output terminal function selection).
- When the load is deviated from the detection width set in Pr.1490 Upper limit fault detection width, the protective
 function (E.LUP) is activated and the inverter output is shut off. When the load is deviated from the detection width set in
 Pr.1491 Lower limit fault detection width, the protective function (E.LDN) is activated and the inverter output is shut off.

• To prevent the repetitive on/off operation of the signal due to load fluctuation near the detection range, **Pr.1492 Load** status detection signal delay time / load reference measurement waiting time can be used to set the delay time. Even when a fault is detected out of the detection range once, the warning is not output if the characteristics value returns to the normal range from a fault state within the output delay time.

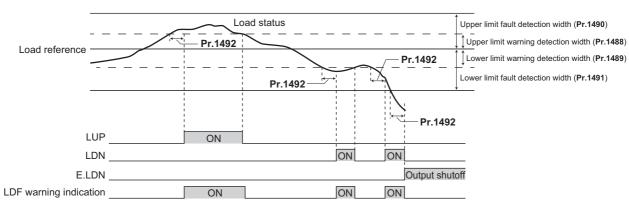

NOTE

• Changing the terminal assignment using **Pr.190 to Pr.196 (Output terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.41 Up-to-frequency sensitivity [37] page 301
Pr.190 to Pr.196 (Output terminal function selection) [37] page 292

11.12 Motor overspeeding detection


Sensorless Vector PM

The Overspeed occurrence (E.OS) is activated when the motor speed exceeds the overspeed detection level. This function prevents the motor from accidentally speeding over the specified value, due to an error in parameter setting, etc.

Pr.	Name	Initial value	Setting range	Description
			0 to 590 Hz	If the motor rotation speed exceeds the speed set in Pr.374 , overspeed (E.OS) occurs, and the inverter output is shut off.
374 H800	Overspeed detection level	9999	9999	If the speed exceeds the speed calculated by adding 20 Hz to the maximum frequency (Pr.1 , Pr.18) during encoder feedback control, Real sensorless vector control, or Vector control, E.OS occurs. During PM sensorless vector control, E.OS occurs when the speed exceeds the speed calculated by adding 10 Hz to the maximum motor frequency*1.

 ^{*1} The motor maximum frequency is set in **Pr.702 Maximum motor frequency**. When **Pr.702** = "9999" (initial value), the value set in **Pr.84 Rated motor frequency** is used as the maximum motor frequency.





NOTE

Motor speed

• During the encoder feedback control operation or under Vector control, the motor speed is compared against **Pr.374**. Under Real sensorless vector control or PM sensorless vector control, the output frequency is compared against **Pr.374**.

CHAPTER 12 (M) Item and Output Signal for Monitoring

12.1	Speed indication and its setting change to rotations per minute	268
12.2	Monitor item selection on operation panel or via communication	270
12.3	Monitor display selection for terminals FM and AM	279
12.4	Adjustment of terminal FM and terminal AM	283
12.5	Energy saving monitoring	286
12.6	Output terminal function selection	292
12.7	Output frequency detection	301
12.8	Output current detection function	304
12.9	Output torque detection function	306
12.10	Remote output function	307

12 (M) Item and Output Signal for Monitoring

Purpose	F	Parameter to set					
To display the motor speed (the number of rotations per minute). To switch the unit of measure to set the operation speed from frequency to motor speed.	Speed indication and its setting change to rotations per minute	P.M000, P.M001, P.M003	Pr.37, Pr.53, Pr.505	268			
To change the item monitored on the operation panel	Operation panel monitor item selection clearing the cumulative value during monitoring	P.M020 to P.M023, P.M030, P.M031, P.M044, P.M050 to P.M052, P.M100 to P.M104	Pr.52, Pr.170, Pr.171, Pr.268, Pr.290, Pr.563, Pr.564, Pr.774 to Pr.776, Pr.891, Pr.992, Pr.1106 to Pr.1108	270			
To change the monitor item whose data is output via terminal FM or AM	Terminal FM/AM function selection	P.M040 to P.M042, P.M044, P.M300, P.M301	Pr.54, Pr.55, Pr.56, Pr.158, Pr.290, Pr.866	279			
To adjust the output via terminal FM or AM	Terminal FM/AM calibration	P.M310, P.M320, P.M321, P.M390	Pr.867, C0 (Pr.900), C1 (Pr.901), Pr.1200	283			
To check the effects of energy saving	Energy saving monitoring	P.M023, P.M100, P.M200 to P.M207, P.M300, P.M301	Pr.52, Pr.54, Pr.158, Pr.891 to Pr.899	286			
To assign functions to the output terminals	Output terminal function assignment	P.M400, P.M404, P.M405, P.M410 to P.M416, P.M420 to P.M422, P.M431, P.M451 to P.M454	Pr.190 to Pr.196, Pr.289, Pr.313 to Pr.322	292			
To detect the output frequency	Up-to-frequency sensitivity Output frequency detection Low speed detection	P.M440 to P.M443, P.M446	Pr.41 to Pr.43, Pr.865 to Pr.870	301			
To detect the output current	Output current detection Zero current detection	P.M433, P.M460 to P.M464	Pr.150 to Pr.153, Pr.166, Pr.167	304			
To detect the output torque	Output torque detection	P.M470	Pr.864	306			
To use the remote output function	Remote output	P.M500 to P.M502	Pr.495 to Pr.497	307			

12.1 Speed indication and its setting change to rotations per minute

The frequency monitored or set on the operation panel can be changed to the motor speed or the machine speed.

Pr.	Name	Initial	value ^{*1}	Satting range	Description					
PI.	Name	Gr.1	Gr.2	Setting range	Description					
37 M000	Speed display Frequency / rotation	1800		0.01 to 9998 ^{*2}	Set a number for the speed of machine operated at the speed (frequency) set in Pr.505 .					
50	Frequency / rotation			0	Frequency displayed					
53 M003	speed unit	0		1	Rotation speed displayed					
WIOOS	switchover			4	Machine speed displayed					
505 M001	Speed setting reference	60 Hz	50 Hz	1 to 590 Hz*2	Set the reference speed (frequency) for Pr.37 .					

^{*1} Gr.1 and Gr.2 are the parameter initial value groups. (Refer to page 52).

The setting range of Pr.1 (Pr.18) is not limited when the machine speed display is not selected. To display the machine speed, set values which satisfy the formula.

◆ Displayed unit switchover (Pr.37, Pr.53, and Pr.505)

• The rotation speed or machine speed can be displayed for monitoring or used for parameter setting instead of the frequency by using **Pr.53**.

^{*2} The setting ranges of Pr.1 (Pr.18), Pr.37, and Pr.505 are limited so that the following formula is satisfied.
Pr.1 (Pr.18) × Pr.37 / Pr.505< 8388.607

· To display the machine speed, set Pr.37 to the value which corresponds to the speed of machine operated at the frequency set in Pr.505.

For example, when Pr.505 is set to 60 Hz and Pr.37 is set to "1000", the operation panel indicates "1000" as the monitor value of machine speed while the output frequency is 60 Hz. "500" is displayed while the output frequency is 30 Hz.

• The operation panel indicates the upper 4 digits when the rotation speed or machine speed is displayed. For example, when the internal value "1770.950" is monitored, the operation panel indicates "1770".

Pr.53 setting	Output frequency indication	Set frequency indication	Running speed indication	Frequency setting	Parameter setting
0 (initial value)	0.01 Hz	0.01 Hz	1 r/min ^{*1}	0.01 Hz	0.01 Hz
1	1 r/min*1	1 r/min*1	1 r/min ^{*1}	1 r/min ^{*1}	1 r/min ^{*1}
4	0.001 (machine speed*1)	0.001 (machine speed ^{*1})	1 (machine speed*1)	0.001 (machine speed ^{*1})	0.01 Hz

Motor speed r/min conversion formula: frequency × 120 / number of motor poles (Pr.81 or Pr.454)

Machine speed conversion formula: Pr.37 × frequency / Pr.505

The item set in Pr.505 is consistently a frequency (Hz).

When Pr.81 (Pr.454) = "9999", the number of motor poles is regarded as 4.

NOTE

- · The inverter's output frequency is displayed as synchronous speed under V/F control. The displayed value is "actual motor speed" + "motor slip". When Advanced magnetic flux vector control, Real sensorless vector control, or PM sensorless vector control is selected, the actual motor speed (estimated value by motor slip calculation) is used. When the encoder feedback control or Vector control is selected, the actual motor speed from the encoder is used.
- To change the main monitor of the operation panel (operation panel main display), refer to Pr.52.
- Since the panel display of the operation panel is in 4 digits, the monitor value of more than "9999" is displayed as "----". Display the frequency on the operation panel when a value equal to or more than 10000 r/min needs to be monitored or set.
- · The displayed machine speed is the value converted from the frequency. Therefore, the setting value and read value may fluctuate due to rounding during the conversion.
- · When the FR-A8ND is connected, the frequency display (setting) is used regardless of the Pr.53 setting.

♠ CAUTION

Make sure to set the running speed and the number of motor poles. Otherwise, the motor might run at extremely high speed, damaging the machine.

Parameters referred to

Pr.1 Maximum frequency page 253

Pr.52 Operation panel main monitor selection ☐ page 270

Pr.81 Number of motor poles page 97
Pr.800 Control method selection page 97

12.2 Monitor item selection on operation panel or via communication

The monitor item to be displayed on the operation panel can be selected.

Pr.	Name	Initial value	Setting range	Description
52 M100	Operation panel main monitor selection	0 (output frequency)	0, 5 to 14, 17 to 20, 23 to 25, 32, 33, 35, 38, 40 to 42, 44, 45, 50 to 57, 61, 62, 67, 83, 91, 97, 100*1	Select the monitor item to be displayed on the operation panel. Refer to page 271 for the monitor item selection.
774 M101	Operation panel monitor selection 1		1 to 3, 5 to 14, 17 to 20, 23 to	Each of the initial monitor items displayed on the operation
775 M102	Operation panel monitor selection 2	9999	25, 32, 33, 35, 38, 40 to 42, 44,	panel in the monitor mode (output frequency, output current, and output voltage) can be switched to a user-designated
776 M103	Operation panel monitor selection 3		45, 50 to 57, 61, 62, 67, 83, 91, 97, 100, 9999*1	item. 9999: Follows the Pr.52 setting.
992 M104	Operation panel setting dial push monitor selection	0 (set frequency)	0 to 3, 5 to 14, 17 to 20, 23 to 25, 32, 33, 35, 38, 40 to 42, 44, 45, 50 to 57, 61, 62, 67, 91, 97, 100	Select the monitor item displayed on the operation panel at the time when the setting dial is pressed. (Available for the standard model only.)
			0	Set "0" to clear the watt-hour meter.
170 M020	Watt-hour meter clear	9999	10	Set "10" to monitor the cumulative power in the range of 0 to 9999 kWh via communication.
			9999	Set "9999" to monitor the cumulative power in the range of 0 to 65535 kWh via communication.
563	Energization time carrying-	0	(0 to 65535)	The number of times that the cumulative energization time
M021	over times		(Read-only)	exceeded 65535 hours is displayed (read-only). Value is displayed in 1 increments (an integer).
268	Monitor decimal digits	9999	1	Value is displayed in 0.1 increments.
M022	selection		9999	No function
891 M023	Cumulative power monitor digit shifted times	9999	0 to 4	Set the number of digits to move the decimal point of the cumulative energy monitored value to the left. The readout peaks out at the upper limit of readout.
	argit omitou umoo		9999	The function of moving the decimal point is not available. The readout is reset to 0 when it exceeds the upper limit.
171			0	Set "0" to clear the operation hour meter.
M030	Operation hour meter clear	9999	9999	The readout is always 9999. Nothing changes when "9999" is set.
564 M031	Operating time carrying- over times	0	(0 to 65535) (Read-only)	The number of times that the operating time reaches 65535 hours is displayed. Read-only.
290 M044	Monitor negative output selection	0	0, 1, 4, 5, 8, 9, 12, 13	Set the availability of negative signal output via terminal AM, through communication, and to the FR-A8AY. (Refer to page 278.)
1106 M050	Torque monitor filter	9999	0 to 5 s	The filter time constant is selectable for monitoring of the torque. A larger setting results in slower response.
			9999	0.3 s filter
1107 M051	Running speed monitor filter	9999	0 to 5 s	The filter time constant is selectable for monitoring of the running speed. A larger setting results in slower response.
			9999	0.08 s filter
1108 M052	Excitation current monitor filter	9999	0 to 5 s	The filter time constant is selectable for monitoring of the motor excitation current. A larger setting results in slower response.
			9999	0.3 s filter

^{*1} The setting range differs depending on the model. For more information, refer to Monitor item list.

♦ Monitor item list (Pr.52, Pr.774 to Pr.776, Pr.992)

- Use Pr.52, Pr.774 to Pr.776, or Pr.992 to select the monitor item to be displayed on the operation panel.
- Refer to the following table to find the setting value for each monitoring. The value in the Pr. setting column is set in each of the parameters for monitoring (**Pr.52**, **Pr.774 to Pr.776**, and **Pr.992**) to determine the monitor item. The value in the Communication column is the monitor code for communication. (The items marked with "—" cannot be selected. The circle (o) in the Negative indication (-) column denotes that the monitored item can be indicated with minus sign during monitoring via the communication option.

			Co	mmunicatio	า	Nogotivo	
Monitor item	Incremen t and unit	Pr. setting	Monitor code 1*1	Monitor code 2*2	Monitor number	Negative indicatio n (-)*4	Description
Output frequency (speed)*17	0.01 Hz*16	1/0/100	H01	40201	1	0	The inverter output frequency is displayed.
Output current*8*9*17	0.01 A	2/0/100	H02	40202	2		The inverter output current effective value is displayed.
Output voltage ^{*8*17}	0.1 V	3/0/100	H03	40203	3		The inverter output voltage is displayed.
Fault indication	_	0/100	_	_	_		Each of the last 10 faults is displayed individually.
Set frequency / motor speed setting	0.01 Hz*16	5 ^{*5}	H05	40205	5		The set frequency is displayed.
Operation speed	1 (r/min)	6 ^{*5}	H06	40206	6	0	The motor speed is displayed (depending on the Pr.53 setting). (Refer to page 268.)
Motor torque	0.1%	7*5	H07	40207	7	0	The motor torque is displayed as a percentage (0% under V/F control), considering the rated torque as 100%.
Converter output voltage*8	0.1 V	8 ^{*5}	H08	40208	8		The DC bus voltage value is displayed.
Regenerative brake duty	0.1%	9*5	H09	40209	9		Brake duty set in Pr.70 for the regeneration unit set in Pr.30 is displayed.
Electronic thermal O/L relay load factor	0.1%	10 ^{*5}	Н0А	40210	А		The motor thermal cumulative value is displayed, considering the thermal operation level as 100%.
Output current peak value*8	0.01 A	11 ^{*5}	Н0В	40211	В		The peak value of output current, which is constantly stored, is displayed. (It is reset with every startup of the inverter.)
Converter output voltage peak value ^{*8}	0.1 V	12 ^{*5}	Н0С	40212	С		The DC bus voltage peak value, which is constantly stored, is displayed. (It is reset with every startup of the inverter.)
Input power	0.01 kW	13 ^{*5}	H0D	40213	D		The power at the inverter input side is displayed.
Output power*9	0.01 kW	14 ^{*5}	H0E	40214	E		The power at the inverter output side is displayed.
Load meter	0.1%	17	H11	40217	11		Torque current is displayed as a percentage, considering Pr.56 setting value as 100%. (0% is displayed under the control mode other than V/F control.)
Motor excitation current*8	0.01 A	18	H12	40218	12		The motor excitation current is displayed.
Position pulse*10	_	19	H13	40219	13		The position pulse of the encoder is displayed. (The output voltage is displayed when a vector control option is not installed.)
Cumulative energization time *6	1h	20	H14	40220	14		The cumulative energization time since the inverter shipment is displayed. The number of times an integrated value has reached the maximum value of 65535 hours can be checked in Pr.563 .
Actual operation time*6*7	1 h	23	H17	40223	17		The cumulative operation time is displayed. The number of times an integrated value has reached the maximum value of 65535 hours can be checked in Pr.564 . Use Pr.171 to reset the cumulative operation time. (Refer to page 277.)

		_	Co	mmunicatio		Negative	
Monitor item	Incremen t and unit	Pr. setting	Monitor code 1*1	Monitor code 2*2	Monitor number	indicatio n (-)*4	Description
Motor load factor	0.1%	24	H18	40224	18		The output current value is displayed as a percentage, considering the inverter rated current value as 100%. Readout (%) = present output current value / inverter rated current value × 100
Cumulative energy ^{*8}	0.01 kWh	25	H19	40225	19		The cumulative energy based on the monitored output power is displayed. Use Pr.170 to reset it. (Refer to page 276.)
Torque command	0.1%	32	H20	40232	20	0	The torque command value adjusted with Vector control is displayed.
Torque current command	0.1%	33	H21	40233	21	0	The command value of the current for torque is displayed.
Feedback pulse*10	_	35	H23	40235	23		The number of pulses fed back from the encoder in one cycle of the sampling is displayed (kept displayed during a stop). (The output voltage is displayed when a vector control option is not installed.) The sampling time period varies depending on the Pr.369 Number of encoder pulses setting. 1050 or less: 1 s, 1051 to 2100: 0.5 s, 2101 to 4096: 0.25 s
Trace status	1	38	H26	40238	26		The trace status is displayed. (Refer to page 418.)
PLC function user monitor 1		40	H28	40240	28		The user-designated monitor item is displayed using the PLC function.
PLC function user monitor 2	Increment set in the	41	H29	40241	29		Each value of the following special registers is displayed.
PLC function user monitor 3	register SD1215	42	H2A	40242	2A		SD1216: displayed with the setting value "40", SD1217: displayed with the setting value "41", SD1218: displayed with the setting value "42" (Refer to the PLC Function Programming Manual.)
Station number (PU)	1	44	H2C	40244	2C		The station number of the inverter enabling communication via the PU connector is displayed. (Available only for the standard model.)
Station number (CC-Link)	1	45	H2D	40245	2D		The station number of the inverter enabling CC- Link communication is displayed. ("0" is displayed when the FR-A8NC is not installed.)
Power saving effect	Increment and unit	50	H32	40250	32		The energy saving effect monitoring is enabled. The item to monitor is selectable from among
Cumulative energy saving	vary depending on the parameter settings.	51	H33	40251	33		the saved power, the average energy saving, and the energy cost savings. Some of them can be displayed as a percentage according to the parameter settings. (Refer to page 286.)
PID set point	0.1%	52	H34	40252	34		The set point, measured value, and deviation
PID measured value	0.1%	53	H35	40253	35		during PID control operation is displayed. (Refer to page 389.)
PID deviation	0.1%	54	H36	40254	36	0	, ,
Input terminal status	_	*1Q	H0F*11	40215 ^{*11}	F		The ON/OFF state of the input terminals on the inverter is displayed. (Refer to page 275 for details of indication on the operation panel.)
Output terminal status	_	55 ^{*18}	H10 ^{*12}	40216 ^{*12}	10		The ON/OFF state of the output terminals on the inverter is displayed. (Refer to page 275 for details of indication on the operation panel.)
Option input terminal status*10	_	56	_	_	_		The ON/OFF state of the input terminals on the digital input option (FR-A8AX) is displayed on the operation panel. (Refer to page 275 for details.)
Option output terminal status*10	_	57	_	_	_		The ON/OFF state of the output terminals on the digital output option (FR-A8AY) or the relay output option (FR-A8AR) is displayed on the operation panel. (Refer to page 275 for details.)

			Co	mmunication	1	Negative	
Monitor item	Incremen t and unit	Pr. setting	Monitor code 1*1	Monitor code 2*2	Monitor number *3	indicatio n (-)*4	Description
Option input terminal status 1 (for communication)*1	_	_	H3A ^{*13}	40258 ^{*13}	3A		The ON/OFF state of the input terminals X0 to X15 on the digital input option (FR-A8AX) is monitored via communication.
Option input terminal status 2 (for communication)*1	_	_	H3B ^{*14}	40259 ^{*14}	3В		The ON/OFF state of the input terminal DY on the digital input option (FR-A8AX) is monitored via communication.
Option output terminal status (for communication)*1	_	_	H3C* ¹⁵	40260 ^{*15}	3C		The ON/OFF state of the output terminals on the digital output option (FR-A8AY) or the relay output option (FR-A8AR) is monitored via communication.
Motor thermal load factor	0.1%	61	H3D	40261	3D		The accumulated heat value of the motor thermal O/L relay is displayed. The Motor overload trip (electronic thermal relay function) (E.THM) occurs at 100%.
Inverter thermal load factor	0.1%	62	Н3Е	40262	3E		The accumulated heat value of the inverter thermal O/L relay is displayed. The Inverter overload trip (electronic thermal relay function) (E.THT) occurs at 100%.
PID measured value 2	0.1%	67	H43	40267	43		The PID measured value is displayed while the PID control is enabled (Pr.128 ≠ "0"), even if PID control operating conditions are not satisfied. (Refer to page 389.)
32-bit cumulative energy (lower 16 bits)	1 kWh	_	H4D	40277	4D		
32-bit cumulative energy (upper 16 bits)	1 kWh	-	H4E	40278	4E		The upper or lower 16 bits of the 32-bit cumulative energy is displayed on each
32-bit cumulative energy (lower 16 bits)	0.01 kWh	_	H4F	40279	4F		indication. Monitoring via communication is available.
32-bit cumulative energy (upper 16 bits)	0.01 kWh	_	H50	40280	50		
BACnet valid APDU counter	1	83	H53	40283	53		The count of valid APDU detection is displayed. (Available only for the FR-E800-EPA and FR-E800-SCEPA.)
PID manipulated amount	0.1%	91	H5B	40291	5B	0	The PID control manipulated amount is displayed. (Refer to page 389.)
Dancer main set speed	0.01 Hz*16	97	H61	40297	61		The set speed for main speed during the dancer control operation is displayed.

- *1 The monitor code is used for the Mitsubishi inverter protocol, CC-Link, CC-Link IE TSN, and CC-Link IE Field Network Basic.
- *2 The monitor code is used for the MODBUS RTU, MODBUS/TCP, and BACnet/IP.
- *3 The monitor number is used for the EtherNet/IP and PROFINET.
- *4 Indication with a minus sign is not possible via RS-485 communication (Mitsubishi inverter protocol or MODBUS RTU).
- *5 To monitor the item on the LCD operation panel (FR-LU08) in the monitor mode, use **Pr.774 to Pr.776** or the monitor function of the FR-LU08 for setting.
- *6 The cumulative energization time and actual operation time are accumulated from 0 to 65535 hours, then cleared, and accumulated again from 0.
- *7 The actual operation time does not increase if the cumulative running time before power OFF is less than an hour.
- *8 Since each readout of the output voltage and output current displayed on the operation panel is a 4-digit number, a value of more than "9999" is displayed as "----".
- *9 The inverter regards the output current which is less than the specified current level (5% of the rated inverter current) as 0 A. Therefore, each readout of an output current and output power may show "0" if a too small-capacity motor is used as contrasted with the inverter capacity and the output current falls below the specified value.
- *10 Available when the plug-in option is connected.

*11 The details of bits for the input terminal status are as follows. (1: ON state, 0: OFF state of a terminal on the inverter. "—" denotes an indefinite (null) value.)

b15	Standa	ard mode	el												b0
-	-	-	-	-	RES	-	MRS	-	RH	RM	RL	-	-	STR	STF
b15	Ethern	et mode													b0
-	-	-	-	-	-	-	-	-	-	-	-	-	-	DI1	DI0
b15	Safety	commu	nication	model											b0
-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

*12 The details of bits for the output terminal status are as follows. (1: ON state, 0: OFF state of a terminal on the inverter. "—" denotes an indefinite (null) value.)

b15	Standa	ard mode	el												b0
-	-	-	-	-	-	-	-	SO	-	ABC	FU	-	-	-	RUN
b15	Ethern	et mode	·I												b0
-	-	-	-	-	-	-	-	SO	-	ABC	-	-	-	-	-
b15	Safety c	ommuni	cation m	nodel	•		•	·			•				b0
-	-	-	-	-	-	-	-	-	-	ABC	-	-	-	-	-

*13 The details of bits for the option input terminal status 1 are as follows. (1: ON state, 0: OFF state of a terminal on the FR-A8AX.) Every bit is 0 (OFF) when the option is not installed.

b15															b0
X15	X14	X13	X12	X11	X10	X9	X8	X7	X6	X5	X4	Х3	X2	X1	X0

*14 The details of bits for the option input terminal status 2 are as follows. (1: ON state, 0: OFF state of a terminal on the FR-A8AX. "—" denotes an indefinite (null) value.) Every bit is 0 (OFF) when the option is not installed.

b15															b0	
-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	DY	ĺ


*15 The details of bits for the option output terminal status are as follows. (1: ON state, 0: OFF state of a terminal on the FR-A8AY/A8AR. "—" denotes an indefinite (null) value.) Every bit is 0 (OFF) when the option is not installed.

b15															b0
-	-	1	1	1	1	RA3	RA2	RA1	Y6	Y5	Y4	Y3	Y2	Y1	Y0


^{*16} The increment varies depending on the Pr.53 setting. (Refer to page 268).

◆ Monitor display for operation panel (Pr.52, Pr.774 to Pr.776)

 - When **Pr.52** = "0" (initial value), the monitoring of output frequency, output current, output voltage and fault display can be selected in sequence by pressing the SET key.
- The Load meter, motor excitation current and motor load factor are displayed on the second monitor (output current) position, among the monitors set in **Pr.52**. Other monitors are displayed in the third monitor (output voltage) position.
- The monitor displayed at power ON is the first monitor (the output frequency monitor, according to the initial value). Display the monitor you want to display on the first monitor and hold down the SET key for 1 second. To return to the output frequency monitor, display the output frequency monitor and hold down the SET key for 1 second.



 For example, when **Pr.52** = "20" (cumulative energization time), the monitor is displayed on the operation panel as shown below.



^{*17} The monitored values are retained even if an inverter fault occurs. Resetting clears the retained values.

^{*18} Parameter setting is not valid to set the item as the main monitor item on the LCD operation panel (FR-LU08). Use the monitor function of the FR-LU08 for the setting.

• **Pr.774** sets the output frequency monitor, **Pr.775** sets the output current monitor, and **Pr.776** sets the monitor description to be displayed at the output voltage monitor position. When **Pr.774** to **Pr.776** = "9999" (initial value), the **Pr.52** setting value is used.



- On the operation panel, the Hz LED is lit while displaying the output frequency, the Hz LED blinks when displaying the set frequency.
- · When the operation panel is used, the displayed units are Hz and A only, and the others are not displayed.

Displaying the set frequency during stop (Pr.52)

• When **Pr.52** = "100", the set frequency is displayed during stop, and output frequency is displayed during running. (The Hz LED blinks during stop and is lit during operation.)

Pr.52 setting	Status	Output frequency	Output current	Output voltage	Fault monitor
0	During running/stop	Output frequency			
100	During stop	Set frequency*1	Output current	Output voltage	Fault monitor
100	During running	Output frequency			

^{*1} Displays the frequency that is output when the start command is ON. The value considers the maximum/minimum frequency and frequency jumps. It is different from the frequency setting displayed when **Pr.52** = "5".



- During an error, the output frequency at error occurrence appears.
- · During output shutoff by the MRS signal, the values displayed are the same as during a stop.
- · During offline auto tuning, the tuning state monitor takes priority.

◆ Operation panel setting dial push display (Pr.992) (only for the standard model)

- · Use Pr.992 to select the monitor that appears when the setting dial on the operation panel is pushed.
- When **Pr.992** = "0 (initial value)", keep pressing the setting dial when in PU operation mode or External/PU combined operation mode 1 (**Pr.79 Operation mode selection** = "3") to show the presently set frequency.
- When Pr.992 = "100", the set frequency is displayed during stop, and output frequency is displayed during running.

Pr.992 setting	Status	Monitor displayed by the setting dial push
0	During running/stop	Set frequency
100	During stop	Set frequency ^{*1}
100	During running	Output frequency

^{*1} Displays the frequency that is output when the start command is ON. The value considers the maximum/minimum frequency and frequency jumps. It is different from the frequency setting displayed when **Pr.992** = "5".


◆ Monitoring I/O terminals on the operation panel (Pr.52, Pr.774 to Pr.776, Pr.992)

- When Pr.52 (Pr.774 to Pr.776, Pr.992) = "55 to 57", the I/O terminal state can be monitored on the operation panel.
- · When a terminal is ON, the corresponding LED segment is ON. The center LED segments are always ON.

Pr.52, Pr.774 to Pr.776, Pr.992 setting	Monitor item	Monitor description
55	I/O terminal status	Displays the I/O terminal ON/OFF state of the inverter.
56 ^{*1}	Option input terminal status	Displays input terminal ON/OFF state of the digital input option (FR-A8AX)
57 ^{*1}	Option output terminal status	Displays output terminal ON/OFF state of the digital output option (FR-A8AY) or the relay output option (FR-A8AR).

^{*1} The setting value "56 or 57" can be set even if the option is not installed. All are OFF when the option is not connected.


· On the I/O terminal monitor, the upper LEDs indicate the input terminal status, and the lower LEDs indicate the output terminal status.

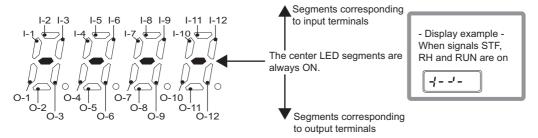


Input terminal						
Symbol	FR-E800	FR-E800-E	FR-E800-SCE			
I-1	RL	_	_			
I-2	RM	_	_			
I-3	RH	_	_			
I-4	_	_	_			
I-5	_	_	_			
I-6	_	_	_			
I-7	MRS	_	_			
I-8	RES	_	_			
I-9	STF	DI0	_			
I-10	STR	DI1	_			
I-11	_	_	_			
I-12	_	_	_			

Output terminal							
Symbol	FR-E800	FR-E800-E	FR-E800-SCE				
O-1	A,B,C	A,B,C	A,B,C				
O-2	_	_	_				
O-3	RUN	_	_				
O-4	_	_	_				
O-5	_	_	_				
O-6	_	_	_				
O-7	FU	_	_				
O-8	SO	SO	_				
O-9	_	_	_				
O-10	_	_	_				
O-11	_	_	_				
O-12	_	_	_				

· The decimal point of the last digit on the LED is lit for the input option terminal monitor.

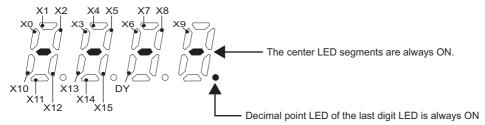

· The decimal point of the second last digit on the LED is lit for the output option terminal monitor.

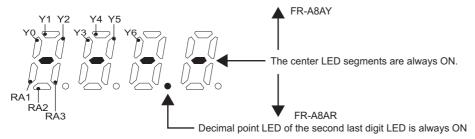

Monitoring and resetting cumulative power (Pr.170, Pr.891)

- When the cumulative power is monitored (Pr.52 = "25"), the output power monitor value is added up and is updated in 100 ms increments.
- · The values are stored in EEPROM every 10 minutes. The values are also stored in EEPROM at power OFF or inverter
- · Increments and ranges of monitoring on the operation panel or via communication are as follows.

Operation pa	anel ^{*1}	Via communication			
Range Increment		Rai	Increment		
Kaliye	Range Increment		Pr.170 = "9999"	mcrement	
0 to 99.99 kWh	0.01 kWh		0.4- 05505 14415		
100.0 to 999.9 kWh	0.1 kWh	0 to 9999 kWh	0 to 65535 kWh (initial value)	1 kWh	
1000 to 9999 kWh	1 kWh		(IIIIIai value)		

- *1 Power is measured in the range of 0 to 99999.99 kWh, and displayed in 4 digits. After the watt-hour meter (cumulative power counter) reaches "99.99" (999.99 kWh), the meter displays values in 0.1 increments such as "100.0" (1000.0 kWh). Use **Pr.891** to shift the decimal point position when the monitored value becomes equal to or higher than 10000 kWh.
- The decimal point position on the watt-hour meter can be shifted to left. The number of digits to be shifted is equal to the setting of **Pr.891 Cumulative power monitor digit shifted times**. For example, when **Pr.891** = "2", the cumulative power value 1278.56 kWh is displayed as 12.78 (in 100 kWh increments) on the operation panel, or displayed as 12 on a display used for monitoring via communication.
- When **Pr.891** = "0 to 4", the meter stops at the maximum number. When **Pr.891** = "9999", the meter returns to 0 and the counting starts again.
- The cumulative power can be monitored as 32-bit data via communication by setting **Pr.52** = "77 to 80". The maximum monitored value is 42949672 kWh in 1 kWh increments or 42949672.94 kWh in 0.01 kWh increments. **Pr.891** setting is invalid while 32-bit cumulative power is monitored. (For details on communication for 32-bit cumulative power monitor, refer to the Instruction Manual (Communication) or the Instruction Manual of the communication option.)
- Writing "0" in Pr.170 clears the cumulative power monitor.



• When Pr.170 is read just after "0" has been written in Pr.170, the setting "9999" or "10" is displayed.

♦ Monitoring cumulative energization time (Pr.563)

- When the cumulative energization time is selected as a monitor item (**Pr.52** = "20"), the counter of cumulative energization time since the inverter shipment accumulated every hour is displayed.
- One hour is displayed as "0.001", and the value is counted up to "65.53".
- The EEPROM is updated every minute until the cumulative energization time reaches one hour, and then the EEPROM is updated every 10 minutes. The EEPROM is also updated at power OFF.
- When the cumulative energization time counter reaches 65535, it starts from 0 again. The number of times the cumulative energization time counter reaches 65535 can be checked with **Pr.563**.



• The cumulative energization time does not increase if the power is turned OFF after less than an hour.

◆ Actual operation time monitoring (Pr.171, Pr.564)

- On the actual operation time monitoring (**Pr.52** = "23"), the inverter running time is added up every hour. (Time is not added up during a stop.)
- One hour is displayed as "0.001", and the value is counted up to "65.53".
- The values are stored in EEPROM every 10 minutes. The EEPROM is also updated at power OFF.
- When the cumulative energization time counter reaches 65535, it starts from 0 again. The number of times the actual operation time counter reaches 65535 can be checked with **Pr.564**.
- Setting "0" in Pr.171 clears the actual operation time meter.



- The actual operation time does not increase if the cumulative running time before power OFF is less than an hour.
- Once "0" is set in Pr.171, the setting of Pr.171 is always turned to "9999" afterwards. Setting "9999" does not clear the actual
 operation time meter.

♦ Hiding the decimal places for the monitors (Pr.268)

• The numerical figures after a decimal point displayed on the operation panel may fluctuate during analog input, etc. The decimal places can be hidden by selecting the decimal digits with **Pr.268**.

Pr.268 setting	Description
9999 (initial value)	No function
0	For the first or second decimal places (0.1 increments or 0.01 increments) of the monitor, numbers in the first decimal place and smaller are rounded to display an integral value (1 increments). The monitor value equal to or smaller than 0.99 is displayed as 0.
1	When monitoring with the second decimal place (0.01 increments), the 0.01 decimal place is dropped and the monitor displays the first decimal place (0.1 increments). When monitoring with the first decimal place, the display will not change.



• The number of readout digits of the cumulative energization time (**Pr.52** = "20"), actual operation time (**Pr.52** = "23"), cumulative energy (**Pr.52** = "25"), and cumulative energy saving (**Pr.52** = "51") does not change.

Enabling display of negative numbers during monitoring (Pr.290)

• Negative values can be used for indication via terminal AM (analog voltage output), on communication options, and via terminal AM0 (of the FR-A8AY). To check which items can be monitored with indication of negative numbers, refer to Monitor description list (on page 271).

Pr.290 setting	Negative numbers indication (via terminal AM)	Negative numbers indication (via communication option)*1	Negative numbers indication (via terminal AM0) (with the FR-A8AY)
0 (initial value)	_	_	_
1	Enabled	_	_
4	_	Enabled	_
5	Enabled	Enabled	_
8	_	_	Enabled
9	Enabled	_	Enabled
12	_	Enabled	Enabled
13	Enabled	Enabled	Enabled

^{-:} Negative numbers indication disabled (positive only)

^{*1} Negative numbers indication is disabled via RS-485 communication (Mitsubishi inverter protocol or MODBUS RTU).



- When indication with negative numbers is enabled for the output via terminal AM/AM0 (analog voltage output), the output is within the range of -10 to +10 VDC. Connect the meter with which output level is matched.
- · The operation panel displays only unsigned numbers.

◆ Monitor filter (Pr.1106 to Pr.1108)

• The response level (filter time constant) of the following monitor indicators can be adjusted. Increase the setting when a monitor indicator is unstable, for example.

Pr.	Monitor number	Monitor indicator name	
	7	Motor torque	
1106	17	Load meter	
1100	32	Torque command	
	33	Torque current command	
1107	6	Motor speed	
1108	18	Motor excitation current	

Parameters referred to

Pr.53 Frequency / rotation speed unit switchover ☐ page 268

Pr.55 Frequency monitoring reference, Pr.56 Current monitoring reference, Pr.866 Torque monitoring reference 🖙 page 279

12.3 Monitor display selection for terminals FM and AM

For the standard model, monitored values are output in either of the following: analog voltage (terminal AM) in the AM type inverters (FR-E800-4 and FR-E800-5) or pulse train (terminal FM) in the FM type inverter (FR-E800-1).

The signal (monitor item) to be output to terminal FM and terminal AM can be selected.

Dr	Pr. Name		value ^{*1}	Setting range	Description	
FI.	Name	Gr.1	Gr.2	Setting range	Description	
54 M300 ^{*2}	FM terminal function selection	- 1 (output frequency)		1 to 3, 5 to 14, 17, 18, 21, 24, 32, 33, 50, 52, 53, 61, 62, 67, 70, 97	Select the item monitored via terminal FM.	
158 M301 ^{*3}	AM terminal function selection			1 to 3, 5 to 14, 17, 18, 21, 24, 32, 33, 50, 52 to 54, 61, 62, 67, 70, 91, 97	Select the item monitored via terminal AM.	
55 M040 ^{*4}	Frequency monitoring reference	60 Hz 50 Hz		0 to 590 Hz	Set the full-scale value when the output frequency monitor value is output via terminal FM or AM.	
56 M041 ^{*4}	Current monitoring reference	Inverter rated current		0 to 500 A	Set the full-scale value when the output current monitor value is output via terminal FM or AM.	
866 M042	Torque monitoring reference	150%		0% to 400%	Set the full-scale value when the torque monitor value is output via terminal FM or AM.	
290 M044	Monitor negative output selection			0, 1, 4, 5, 8, 9, 12, 13	Set the availability of negative values for indication via terminal AM, via communication, and via terminal AM0 (of the FR-A8AY). (Refer to page 278.)	

^{*1} Gr.1 and Gr.2 are the parameter initial value groups. (Refer to page 52).

◆ Monitor description list (Pr.54, Pr.158)

- Set the type of monitor to be output through terminal FM (pulse train output) in **Pr.54 FM terminal function selection**. Terminal FM is provided in the FM type inverter.
- Set **Pr.158 AM terminal function selection** for monitoring via terminal AM (analog voltage output). Negative signals can be output via terminal AM (in the range of -10 to +10 VDC). The circle in the Negative output column indicates that the output of negative signals is available via terminal AM. (To enable or disable the negative output, refer to page 270.) Terminal AM is provided in the AM type inverter.
- Refer to the following table and select the item to be monitored. (Refer to page 271 for the list of monitor items.)

Monitor item	Increment and unit	Pr.54 (FM), Pr.158 (AM) setting	Terminal FM/AM full-scale value	Negative output	Remarks
Output frequency	0.01 Hz	1	Pr.55	0	
Output current*1	0.01 A	2	Pr.56		
Output voltage	0.1 V	3	200 V class: 400 V, 400 V class: 800 V, 575 V class: 1000 V		
Frequency setting value	0.01 Hz	5	Pr.55		
Motor speed	1 (r/min)	6	Pr.55 or the value converted with the Pr.37 or Pr.81 (Pr.454) value from Pr.55.	0	Refer to page 268 for the monitoring of the operation speed.
Motor torque	0.1%	7	Pr.866	0	
Converter output voltage*1	0.1 V	8	200 V class: 400 V, 400 V class: 800 V, 575 V class: 1000 V		
Regenerative brake duty	0.1%	9	Brake duty decided by Pr.30 , Pr.70 .		

^{*2} The setting is available only for the FR-E800-1.

^{*3} The setting is available only for the FR-E800-4 and FR-E800-5.

^{*4} For the Ethernet model and the safety communication model, the setting is available only when the plug-in option (FR-A8AY) is installed.


Monitor item	Increment and unit	Pr.54 (FM), Pr.158 (AM) setting	Terminal FM/AM full-scale value	Negative output	Remarks
Electronic thermal O/L relay load factor	0.1%	10	Electronic thermal O/ L relay (100%)		
Output current peak value	0.01 A	11	Pr.56		
Converter output voltage peak value	0.1 V	12	200 V class: 400 V, 400 V class: 800 V, 575 V class: 1000 V		
Input power	0.01 kW	13	Inverter rated power × 2		
Output power*1	0.01 kW	14	Inverter rated power × 2		
Load meter	0.1%	17	Pr.866		
Motor excitation current	0.01 A	18	Pr.56		
Reference voltage output	_	21	_		Terminal FM: 1440 pulse/s is output. Terminal AM: Output is 10 V.
Motor load factor	0.1%	24 200%			
Torque command	0.1%	32	Pr.866	0	
Torque current command	0.1%	33	Pr.866	0	
Energy saving effect	Increment and unit vary depending on the parameter settings.	50	Inverter capacity		For the information of the power saving effect monitoring, refer to page 286.
PID set point	0.1%	52	100%		
PID measured value	0.1%	53	100%		Refer to page 389 for the PID
PID deviation	0.1%	54 ^{*2}	100%	0	control.
Motor thermal load factor	0.1%	61	Motor thermal activation level (100%)		
Inverter thermal load factor	0.1%	62	Inverter thermal activation level (100%)		
PID measured value 2	0.1%	67	100%		Refer to page 389 for the PID control.
PLC function analog output	0.1%	70	100%	0	Enabled when Pr.414 ≠ "0". Refer to page 416 for the PLC function.
PID manipulated amount	0.1%	91 ^{*2}	100%	0	Refer to page 389 for the PID control.
Dancer main speed setting	0.01 Hz.	97	Pr.55		For details on dancer control, refer to page 396.

^{*1} The inverter regards the output current which is less than the specified current level (5% of the rated inverter current) as 0 A. Therefore, each readout of an output current and output power may show "0" if a too small-capacity motor is used as contrasted with the inverter capacity and the output current falls below the specified value.


◆ Frequency monitor reference (Pr.55)

- Enter the full scale value of a meter used to monitor the output frequency, frequency setting value, or dancer main speed setting via terminal FM or terminal AM.
- For the FM type inverter, enter the full-scale value of the meter corresponding to a pulse train of 1440 pulses/s output via terminal FM. Enter the frequency value (for example, 60 Hz or 120 Hz) at full scale of the meter (1 mA analog meter) installed between terminal FM and terminal SD. Pulse speed is proportional to the output frequency of the inverter. (The maximum pulse train output is 2400 pulses/s.)

^{*2} The setting is available only in **Pr.158** (terminal AM).

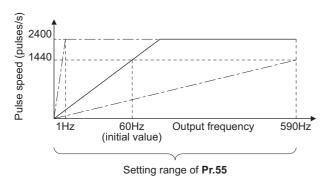

• Enter the full-scale value of the meter corresponding to a voltage of 10 VDC output via terminal AM. Enter the current value (for example, 60 Hz or 120 Hz) at full scale of the meter (10 VDC voltmeter) installed between terminal AM and terminal 5. Output voltage is proportional to the frequency. (The maximum output voltage is 10 VDC.)

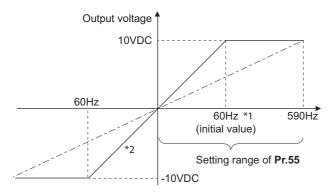

- *1 Differs depending on the parameter initial value group. (60/50 Hz)
- *2 Output of negative signals enabled when **Pr.290 Monitor negative output selection** = "1, 5, 9, or 13".

◆ Current monitor reference (Pr.56)

- Enter the full scale value of a meter used to monitor the output current, the output current peak value, or the motor excitation current via terminal FM or terminal AM.
- For the FM type inverter, enter the full-scale value of the meter corresponding to a pulse train of 1440 pulses/s output via terminal FM. Enter the current value at full scale of the meter (1 mA analog meter) installed between terminal FM and terminal SD. Pulse speed is proportional to the output current monitored. (The maximum pulse train output is 2400 pulses/s.)
- Enter the full-scale value of the current meter corresponding to a voltage of 10 VDC output via terminal AM. Enter the current value at full scale of the meter (10 VDC voltmeter) installed between terminal AM and terminal 5. Output voltage is proportional to the output current monitored. (The maximum output voltage is 10 VDC.)


♦ Torque monitor reference (Pr.866)


- · Enter the full-scale value of the meter used to monitor the output torque via terminal FM or terminal AM.
- For the FM type inverter, enter the full-scale value of the torque meter corresponding to a pulse train of 1440 pulses/s output via terminal FM. Enter the torque value at full scale of the meter (1 mA analog meter) installed between terminal FM and terminal SD. Pulse speed is proportional to the torque monitored. (The maximum pulse train output is 2400 pulses/s.)
- Enter the full-scale value of the torque meter corresponding to a voltage of 10 VDC output via terminal AM. Enter the torque value at full scale of the meter (10 VDC voltmeter) installed between terminal AM and terminal 5. Output voltage is proportional to the torque monitored. (The maximum output voltage is 10 VDC.)

♦ Terminal FM pulse train output

- The maximum pulse train output of terminal FM is 8 VDC 2400 pulses/s.
 The pulse width can be adjusted on the operation panel by using the calibration parameter C0 (Pr.900) FM terminal calibration.
- A 1 mA full-scale DC ammeter or a digital meter can be used to give commands (such as inverter output frequency command).

FM output circuit

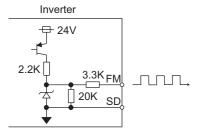

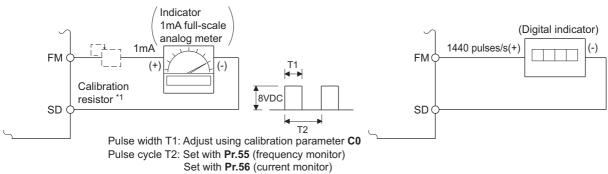

- *1 Not required when calibrating with operation panel.
 - Use a calibration resistor when the indicator (frequency meter) needs to be calibrated by a neighboring device because the indicator is located far from the inverter.
 - However, the frequency meter needle may not deflect to full-scale if the calibration resistor is connected. In this case, use the resistor and operation panel together.
- $^{\star}2$ In the initial setting, 1 mA full-scale and 1440 pulses/s terminal FM are used at 60 Hz.

12.4 Adjustment of terminal FM and terminal AM


By using the operation panel, you can adjust (calibrate) terminal FM and terminal AM to full-scale deflection.

Pr.	Name	Initial value	Setting range	Description
C0 (900) M310*1*2	FM terminal calibration	_	_	Calibrates the scale of the meter connected to terminal FM.
C1 (901) M320*1*3	AM terminal calibration	_	_	Calibrates the scale of the analog meter connected to terminal AM.
867 M321 ^{*3}	AM output filter	0.01 s	0 to 5 s	Set a filter for output via terminal AM.
1200 M390 ^{*3}	AM output offset calibration	3000	2700 to 3300	Calibrates the scale of the meter when the analog output is 0.

- *1 On the LCD operation panel used as the command source, the parameter number in parentheses appears instead of that starting with the letter C.
- *2 The setting is available only for the FR-E800-1.
- *3 The setting is available only for the FR-E800-4 and FR-E800-5.

◆ Terminal FM calibration (C0 (Pr.900)) (FM type only)

- The output via terminal FM is set to the pulse output. By setting **C0** (**Pr.900**), the meter connected to the inverter can be calibrated by parameter setting without use of a calibration resistor.
- The pulse train output via terminal FM can be used for digital display on a digital counter. The output is 1440 pulses/s at full scale. (Refer to page 279 for the full-scale value of each monitor item.)

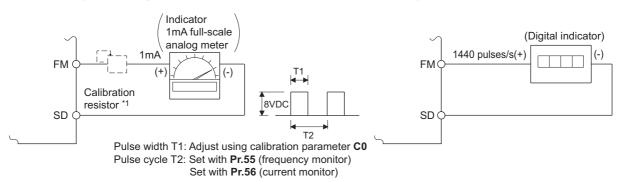

- *1 Not required when calibrating with operation panel.
 - Use a calibration resistor when the indicator (frequency meter) needs to be calibrated by a neighboring device because the indicator is located far from the inverter.
 - However, the frequency meter needle may not deflect to full-scale if the calibration resistor is connected. In this case, perform calibration using the operation panel.
- *2 In the initial setting, 1 mA full-scale and 1440 pulses/s terminal FM are used at 60 Hz.
- · Calibrate the output via terminal FM in the following procedure.
 - 1. Connect an indicator (frequency meter) across terminals FM and SD on the inverter. (Note the polarity. Terminal FM is positive.)
 - **2.** When a calibration resistor has already been connected, adjust the resistance to "0" or remove the resistor.
 - 3. Set a monitor item in Pr.54 FM terminal function selection. (Refer to page 279.)

 When the output frequency or inverter output current is selected on the monitor, set the output frequency or current value at which the output signal will be 1440 pulses/s, using Pr.55 Frequency monitoring reference or Pr.56 Current monitoring reference beforehand. Normally, at 1440 pulses/s the meter deflects to full-scale.
 - 4. If the meter needle does not point to maximum even at maximum output, calibrate it with C0 (Pr.900).



- When outputting an item such as the output current, which cannot reach a 100% value easily by operation, set Pr.54 to "21" (reference voltage output) and calibrate. A pulse train of 1440 pulses/s are output via terminal FM.
- When **Pr.310** Analog meter voltage output selection = "21", the output via terminal AM cannot be calibrated. For details of **Pr.310**, refer to the FR-A8AY E kit Instruction Manual.
- The wiring length to terminal FM should be 200 m at maximum.
- The initial value of the calibration parameter **C0** (**Pr.900**) is set to 1 mA full-scale and 1440 pulses/s terminal FM pulse train output at 60 Hz. The maximum pulse train output of terminal FM is 2400 pulses/s.
- When connecting a frequency meter between terminals FM and SD and monitoring the output frequency, it is necessary to change **Pr.55** to the maximum frequency, since the FM terminal output will be saturated at the initial value when the maximum frequency reaches 100 Hz or greater.

Calibration procedure for terminal FM when using the operation panel

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- Changing the operation mode
 Press the PU/EXT key to choose the PU operation mode. The PU LED turns ON.
 - Calibration is also possible in the External operation mode.
- 3. Selecting the parameter setting mode

 Press the MODE key to choose the parameter setting mode. (The parameter number read previously appears.)
- **4.** Calibration parameter selection

 Turn the setting dial until "C..." appears. Press the SET key to display "C---".
- **5.** Selecting a parameter

Turn the setting dial until "C0" (C0 (Pr.900) FM terminal calibration) appears. Press the SET key to enable the parameter setting.

The monitored value of the item (initially the output frequency) selected by **Pr.54 FM terminal function selection** will appear.

6. Pulse output via terminal FM

If stopped, press the RUN key to start the inverter operation. (To monitor the output frequency, motor connection is not required.)

When a monitor that does not require inverter operation is set in **Pr.54**, calibration is also possible during a stop status.

7. Scale adjustment

Turn the setting dial to move the meter needle to a desired position.

8. Setting completed

Press the SET key to confirm the setting. The monitor indicator blinks.


- Turn the setting dial to read another parameter.
- Press the SET key to return to the "C---" display.
- · Press the SET key twice to show the next parameter.



- Calibration can also be made for External operation. Set the frequency in the External operation mode, and make calibration in the above procedure.
- Calibration can be performed during operation.

◆ Terminal AM calibration (C1 (Pr.901)) (AM type only)

• Terminal AM is initially set to provide a 10 VDC output in the full-scale state of the corresponding monitor item. The calibration parameter C1 (Pr.901) AM terminal calibration allows the output voltage ratio (gains) to be adjusted according to the meter scale. Note that the maximum output voltage is 10 VDC.

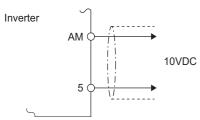

- · Calibrate the output via terminal AM in the following procedure.
 - **1.** Connect a 0-10 VDC indicator (frequency meter) across terminal AM and terminal 5 on the inverter. (Note the polarity. Terminal AM is positive.)
 - 2. Set a monitor item in **Pr.158 AM terminal function selection**. (Refer to page 279.)

 When the output frequency or inverter output current is selected on the monitor, set the output frequency or current value at which the output signal is 10 V, using **Pr.55** or **Pr.56** beforehand.
 - 3. If the meter needle does not point to maximum even at maximum output, calibrate it with C1 (Pr.901).

• NOTE

- When outputting an item such as the output current, which cannot reach a 100% value easily by operation, set **Pr.158** to "21" (reference voltage output) and calibrate. A voltage of 10 VDC is output via terminal AM.
- When **Pr.306 Analog output signal selection** = "21", the output via terminal AM cannot be calibrated. For details of **Pr.306**, refer to the FR-A8AY E kit Instruction Manual.
- Use **Pr.290 Monitor negative output selection** to enable negative signal output via terminal AM. The output voltage range is -10 to +10 VDC. Calibrate the maximum positive value output via terminal AM.

◆ Calibration when 0 V is output via terminal AM (Pr.1200)

- When 0 is output via terminal AM, use **Pr.1200 AM output offset calibration** to calibrate the meter. If the meter needle does not point to 0 while 0 is output via terminal AM, set a value in **Pr.1200** so that the needle points to 0.
- Set a larger value in **Pr.1200** when the needle points a minus output voltage while the 0 is output via terminal AM. Set a smaller value in **Pr.1200** when the needle points a plus output voltage while the 0 is output via terminal AM.

◆ Adjusting the response of terminal AM (Pr.867)

- Use Pr.867 to adjust the output voltage response of the terminal AM in the range of 0 to 5 seconds.
- Increasing the setting stabilizes the output via terminal AM more but reduces the response level. (Setting "0" sets the response level to 6 ms.)

Parameters referred to

Pr.54 FM terminal function selection page 270
Pr.55 Frequency monitoring reference page 270
Pr.56 Current monitoring reference page 270
Pr.158 AM terminal function selection page 270
Pr.290 Monitor negative output selection page 270

12.5 Energy saving monitoring

From the power consumption estimated value during commercial power supply operation, the energy saving effect by use of the inverter can be monitored and output.

52 bytes Operation panel main monitor selection 1 Operation panel monitor selection 1 Control panel monitor selection 1 Selection 1 Selection 2 Refer to page 70. Selection 3 Se	Pr.	Name	Initial value	Setting range	Description			
Propertion panel monitor selection 1 Propertion panel monitor selection 2 Propertion panel monitor selection 3 Propertion panel setting dial push monitor selection 4 Propertion selection 4 Prop			· ·					
Minumas Minumas Minumas Minumas Minumas Minumas			frequency)					
Minumark Selection 2 Selection 3 Selection 4 Selection 5 Selection 6 Sel			9999		0, 0			
Operation panel monitor Operation panel monitor	-							
M300 ⁻¹ Selection 1 (output 158 M. terminal function selection 1 (output 158 M. terminal function selection 1 (output 159 M. terminal function of moving the decimal point is not available. The readout peaks out at the upper limit of readout is reset to 0 when it exceeds the upper limit of readout in the present of 0 when it exceeds the upper limit of readout in reset (a page 240). Set the load factor for the commercial power supply operation. The setting is used for calculating the energy saving in the energy saving multiplied by the power consumption dup per imper limit of average energy saving in the energy saving meanity i		dial push monitor	0 (set frequency)					
158 M301 M			` '		50: Energy saving effect monitoring			
Cumulative power monitor digit shifted times								
times Power saving rate reference value Power unit cost	891	monitor digit shifted	9999	0 to 4	monitored value. The readout peaks out at the upper limit of			
892 M200Load factor100%30% to 150%The setting is used for calculation of the estimated power consumption during commercial power supply operation by being multiplied by the power consumption rate (page 290).893 M201Energy saving monitor reference (motor capacity)Inverter rated capacity0.1 to 30 kWSet the motor capacity (pump capacity). Setting this parameter is required for calculating the rate of saved power, the rate of average energy saving, and the commercial powers.894 M202Control selection during commercial power-supply operation0Discharge damper control (fan)895 M203Power saving rate reference value00Consider the commercial power supply drive (fixed value)896 M204Power unit cost99990Consider the commercial power as 100%.896 M204Power unit cost99990Set the power unit cost. Setting this parameter is required for displaying the energy cost savings in the energy saving monitoring.897 M205Power saving monitor average time9999No function898 M206Power saving cumulative monitor clear1 to 1000 hSet the number of hours for averaging is 30 minutes.898 M206Power saving cumulative monitor clear0Clear the cumulative monitor value1 1 1 1 1 1 2 2 3 4<				9999	·			
893 M201 capacity) reference (motor capacity) Inverter rate of capacity 0.1 to 30 kW is required for calculating the rate of saved power, the rate of average energy saving, and the commercial power. 894 M202 commercial power-supply operation Control selection during commercial power-supply operation 0 Discharge damper control (fan) 895 M203 Power saving rate reference value 0 Consider the commercial power supply drive (fixed value) 896 M204 Power unit cost 9999 1 Consider the power set in Pr.893 as 100% 896 M204 Power unit cost 9999 No function 897 M205 Power saving monitor average time 0 The time period for averaging is 30 minutes. 899 Power saving cumulative monitor clear 9999 No function 898 M206 Power saving cumulative monitor clear 0 The time period for averaging is 30 minutes. 899 M206 Power saving cumulative monitor value 1 Hold the cumulative monitor value 899 M207 Operation time rate (estimated value) 0% to 100% Setting this parameter is required for calculating the annual energy saving. Set an annual operating rate (considering a 24-hours-a-day and 365-days-a-year operation as 100%).		Load factor	100%	30% to 150%	The setting is used for calculation of the estimated power consumption during commercial power supply operation by			
Control selection during commercial power-suply operation 1		reference (motor		0.1 to 30 kW	is required for calculating the rate of saved power, the rate of			
M202commercial power-supply operation01Intertedripper control (pump)895 M203Power saving rate reference value0Commercial power supply drive (fixed value)896 M204Power unit cost9999No function896 M204Power unit cost9999No function897 M205Power saving monitor average time9999No function898 M206Power saving cumulative monitor clear9999No function899 M206Power saving cumulative monitor clear0The time period for averaging is 30 minutes.899 M206Power saving cumulative monitor clear9999No function899 M207Power saving cumulative monitor clear0Clear the cumulative monitor value1 9999Hold the cumulative monitor value1 10 9999Continue accumulation (upper limit communication data is 9999) Continue accumulation (upper limit communication data is 65535)899 M207Operation time rate (estimated value)9999Setting this parameter is required for calculating the annual energy saving. Set an annual operating rate (considering a 24-hours-a-day and 365-days-a-year operation as 100%).	894			0	Discharge damper control (fan)			
M202 895 M203supply operation2 Valve control (pump) 3 Commercial power supply drive (fixed value)895 M203Power saving rate reference value99990 2099Consider the commercial power as 100%. 10 9999No function896 M204Power unit cost9999No function897 M205Power saving monitor average time9999No function897 M205Power saving monitor average time9999No function898 M206Power saving cumulative monitor clear9999No function899 M206Power saving cumulative monitor clear0 9999Clear the cumulative monitor value1 10 9999Hold the cumulative monitor value10 10 9999Continue accumulation (upper limit communication data is 999)899 M207Operation time rate (estimated value)9999Own 100%Setting this parameter is required for calculating the annual energy saving. Set an annual operating rate (considering a 24- hours-a-day and 365-days-a-year operation as 100%).		commercial power-	0	1	Inlet damper control (fan)			
Power saving rate reference value	M202			2	Valve control (pump)			
Power saving rate reference value				3	Commercial power supply drive (fixed value)			
M203reference value9999No function896 M204Power unit cost9999No function896 M204Power unit costSet the power unit cost. Setting this parameter is required for displaying the energy cost savings in the energy saving monitoring.897 M205Power saving monitor average time0The time period for averaging is 30 minutes.898 M206Power saving cumulative monitor clear0Clear the number of hours for averaging.9999No function1Hold the cumulative monitor value1Hold the cumulative monitor value1Hold the cumulative monitor value10Continue accumulation (upper limit communication data is 9999)2Continue accumulation (upper limit communication data is 65535)899Operation time rate (estimated value)0% to 100%Setting this parameter is required for calculating the annual energy saving. Set an annual operating rate (considering a 24-hours-a-day and 365-days-a-year operation as 100%).		_	9999	0	Consider the commercial power as 100%.			
Power unit cost 9999 No function Set the power unit cost. Setting this parameter is required for displaying the energy cost savings in the energy saving monitoring. 9999 No function				1	Consider the power set in Pr.893 as 100%			
896 M204Power unit cost99990 to 500displaying the energy cost savings in the energy saving monitoring.897 M205Power saving monitor average time9999No function898 M206Power saving cumulative monitor clear9999No function898 M206Power saving cumulative monitor clear0Clear the cumulative monitor value10 10 9999Continue accumulation (upper limit communication data is 9999)899 M207Continue accumulation (upper limit communication data is 65535)899 M207Operation time rate (estimated value)9999Setting this parameter is required for calculating the annual energy saving. Set an annual operating rate (considering a 24-hours-a-day and 365-days-a-year operation as 100%).				9999	No function			
Power saving monitor average time Power saving cumulative monitor clear Power saving cumulative monitor value 1 Hold the cumulative monitor value 10 Continue accumulation (upper limit communication data is 9999) Continue accumulation (upper limit communication data is 65535) Power saving cumulative monitor value 10 Continue accumulation (upper limit communication data is 9999) Setting this parameter is required for calculating the annual energy saving. Set an annual operating rate (considering a 24-hours-a-day and 365-days-a-year operation as 100%).		Power unit cost	9999	0 to 500	displaying the energy cost savings in the energy saving			
Power saving monitor average time 1 to 1000 h 9999 1 to 1000 h 9999 No function Clear the cumulative monitor value Hold the cumulative monitor value Hold the cumulative monitor value Continue accumulation (upper limit communication data is 9999) Continue accumulation (upper limit communication data is 65535) Power saving cumulative monitor value Continue accumulation (upper limit communication data is 65535) Setting this parameter is required for calculating the annual energy saving. Set an annual operating rate (considering a 24-hours-a-day and 365-days-a-year operation as 100%).				9999				
M205average time9999Set the number of nours for averaging.898 M206Power saving cumulative monitor clear0Clear the cumulative monitor value1Hold the cumulative monitor value10Continue accumulation (upper limit communication data is 9999)20Continue accumulation (upper limit communication data is 9999)30Continue accumulation (upper limit communication data is 9999)40Continue accumulation (upper limit communication data is 9999)40Continue accumulation (upper limit communication data is 9999)40Continue accumulation (upper limit communication data is 9999	1		9999		The time period for averaging is 30 minutes.			
898 M206Operation time rate (estimated value)9999No function9999No function10 10 10 100Continue accumulation (upper limit communication data is 9999)10 10 10 10 10Continue accumulation (upper limit communication data is 9999)10 10 10 10 10 10 10 10 10 10 1010 10					5 5			
898 M206Power saving cumulative monitor clear1Hold the cumulative monitor value10Continue accumulation (upper limit communication data is 9999)20Continue accumulation (upper limit communication data is 65535)20Operation time rate (estimated value)9999Setting this parameter is required for calculating the annual energy saving. Set an annual operating rate (considering a 24-hours-a-day and 365-days-a-year operation as 100%).								
Power saving cumulative monitor clear 10 Continue accumulation (upper limit communication data is 9999) Setting this parameter is required for calculating the annual energy saving. Set an annual operating rate (considering a 24-hours-a-day and 365-days-a-year operation as 100%).		•	9999					
M206monitor clear999910Continue accumulation (upper limit communication data is 9999)899Continue accumulation (upper limit communication data is 65535)899Operation time rate (estimated value)0% to 100%Setting this parameter is required for calculating the annual energy saving. Set an annual operating rate (considering a 24-hours-a-day and 365-days-a-year operation as 100%).								
899 Operation time rate (estimated value) 9999 65535) Setting this parameter is required for calculating the annual energy saving. Set an annual operating rate (considering a 24-hours-a-day and 365-days-a-year operation as 100%).				10	1.11			
899 Operation time rate (estimated value) Own to 100% energy saving. Set an annual operating rate (considering a 24-hours-a-day and 365-days-a-year operation as 100%).				9999	`			
9999 No function		1 -	9999	0% to 100%	energy saving. Set an annual operating rate (considering a 24-			
				9999	No function			

 $^{^{\}star}1$ The setting is available only for the FR-E800-1.

 $^{^{*}2}$ The setting is available only for the FR-E800-4 and FR-E800-5.

◆ Energy saving monitoring list

• The items in the energy saving effect monitoring (items which can be monitored when "50" is set in **Pr.52**, **Pr.54**, **Pr.158**, **Pr.774** to **Pr.776**, and **Pr.992**) are listed below.

(The items which can be monitored via terminal FM (**Pr.54** setting) and via terminal AM (**Pr.158** setting) are limited to [1 Power saving] and [3 Average power saving].)

	Energy saving	Description and formula	Unit and	Parameter setting			
	monitor item		increment	Pr.895	Pr.896	Pr.897	Pr.899
1	Power saving	It is defined as the difference between the estimated value of the required power during commercial power supply operation and the input power calculated with the inverter. [Power required for commercial power supply operation] - [Input power]	0.01 kW	9999			
2	Power saving rate	It is defined as the power saving expressed as a percentage. The rate of the power saving with respect to the estimated input power for the commercial power supply operation is determined using the following formula. [1 Power saving] Power during commercial power supply operation	0.1%	0	_	9999	
		The rate of the power saving with respect to the Pr.893 setting is determined using the following formula. [1 Power saving] Pr.893 × 100		1			
3	Average power saving	It is defined as the average hourly energy saving during a monitoring time (set in Pr.897). $\frac{\sum ([1 \text{ Power saving}] \times \Delta t)}{\text{Pr.897}}$	0.01 kWh	9999			_
ΙΔ.	Average power saving rate	It is defined as the average hourly energy saving expressed as a percentage. The rate of the average hourly energy saving with respect to the estimated input power for the commercial power supply operation is determined using the following formula. $\frac{\sum \left(\left[2 \text{ Power saving rate}\right] \times \Delta t\right)}{\text{Pr.897}} \times 100$	0.1%	0	9999	0 to 1000 h	
		The rate of the average hourly energy saving with respect to the Pr.893 setting is determined using the following formula. [3 Average power saving] Pr.893		1			
5	Average power cost savings	It is defined as a monetary value of the average hourly energy saving, determined using the following formula. [3 Average power saving] × Pr.896 setting	0.01/0.1	_	0 to 500		

• The items in the cumulative energy saving monitoring (items which can be monitored when "51" is set in **Pr.52**, **Pr.774 to Pr.776**, and **Pr.992**) are listed below.

(The digit of the cumulative energy saving monitored value can be moved to the right according to the setting of **Pr.891 Cumulative power monitor digit shifted times**.)

	Energy saving	Description and formula	Unit and	Parameter setting				
	monitor item	Description and formula	increment	Pr.895	Pr.896	Pr.897	Pr.899	
6	Power saving amount	It is defined as a cumulative energy saving during monitoring, determined by multiplying the saved power by the number of inverter operating hours. $\Sigma \ (\text{[1 Power saving]} \times \Delta t)$	0.01 kWh ^{*1*2}	_	9999		9999	
7	Power cost savings	It is defined as a monetary value of the cumulative energy saving. [6 Power saving amount] × Pr.896 setting	0.01 ^{*1}	_	0 to 500			
8	Annual power saving amount	It is defined as an estimated annual energy saving. [6 Power saving amount] Operation time during power saving accumulation Variable Vari	0.01 kWh ^{*1*2}	_	9999	_	0% to	
9	Annual power cost savings	It is defined as a monetary value of annual energy saving. [8 Annual power saving amount] × Pr.896 setting	0.01 ^{*1}	_	0 to 500		10070	

^{*1} For monitoring via communication, the increments are 1 in no units. For example, a value "10.00 kWh" is converted into "10" for communication data.

^{*2} On the LCD operation panel, a readout is displayed in units of kilowatt-hours (kW).



- The operation panel have a 4-digit display. This means, for example, that a monitored value up to "99.99" is displayed in 0.01 increments and a monitor value of 1000 or more is displayed in 0.1 increments as "100.0". The maximum monitored value displayed is "9999".
- The maximum monitored value via communication is 65535 when **Pr.898 Power saving cumulative monitor clear** = "9999". The maximum monitored value on monitoring in 0.01 increments is "655.35", and that on monitoring in 0.1 increments is "6553.5".

◆ Power saving real-time monitoring ([1 Power saving], [2 Power saving rate])

- During [1 Power saving] monitoring, an energy saving effect (power difference) of using the inverter as compared to the commercial power supply operation is calculated and displayed on the main monitor.
- In the following cases, the monitored value of [1 Power saving] is "0".

The result of calculating the saved power is negative value.

DC injection brake works.


The motor is not connected with the inverter (monitored value of output current is 0 A).

On [2 Power saving rate] monitoring, the rate of the saved power considering the consumed power (estimate) during the
power supply operation as 100% is displayed when Pr.895 Power saving rate reference value is set to "0". When Pr.895
is set to "1", the rate of the saved power with respect to the setting of Pr.893 Energy saving monitor reference (motor
capacity) that is referenced as 100% is displayed.

Average power saving monitoring ([3 Average power saving], [4 Average power saving rate], [5 Average power cost savings])

- The average power saving monitors are displayed by setting a value other than 9999 in **Pr.897 Power saving monitor** average time.
- · On [3 Average power saving] monitoring, the average hourly energy saving every preset time period is displayed.


• When the setting of **Pr.897** is changed, when the inverter is powered ON, or when the inverter is reset, the averaging is restarted. The Energy saving average value updated timing (Y92) signal is inverted every time the averaging is restarted.

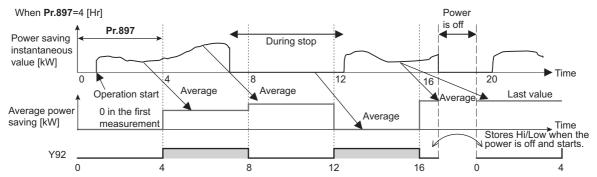

- On [4 Average power saving rate] monitoring, the average hourly monitored value of [2 Power saving rate]) is displayed when Pr.895 Power saving rate reference value is set to "0 or 1".
- On [5 Average power cost savings] monitoring, a monetary value of the average hourly energy saving ([3 Average power saving] × Pr.896 setting) is displayed when the unit price, power cost per kilowatt (hour), is set in Pr.896 Power unit cost.

◆ Cumulative energy saving monitoring ([6 Power saving amount], [7 Power cost saving], [8 Annual power saving amount], [9 Annual power cost savings])

- The digit of the cumulative energy monitored value can be moved to the right by the number set in **Pr.891 Cumulative power monitor digit shifted times**. For example, when **Pr.891** = "2", the cumulative power value 1278.56 kWh is displayed as 12.78 (in 100 kWh increments) on the operation panel, or displayed as 13 on a display used for monitoring via communication. When **Pr.891** = "0 to 4" and the cumulative energy reaches more than the upper limit of readout, the readout peaks out at the upper limit, which indicates that moving digit is necessary. When **Pr.891** = "9999" and the cumulative energy reaches more than the upper limit of readout, cumulative value is reset to 0 and the metering restarts. The readout of other items in the cumulative energy saving monitoring peaks out at the upper limit of readout.
- With the monitored value of **[6 Power saving amount]**, a cumulative energy saving during a desired time period can be measured. Follow this procedure.
 - 1. Set "10" or "9999" in Pr.898 Power saving cumulative monitor clear.
 - **2.** Change the setting of **Pr.898** to "0" when you want to start measuring the energy saving. The cumulative value is cleared and the cumulative energy saving meter restarts.
 - **3.** Change the setting of **Pr.898** to "1" when you want to stop measuring the energy saving. The meter stops and the cumulative value is fixed.

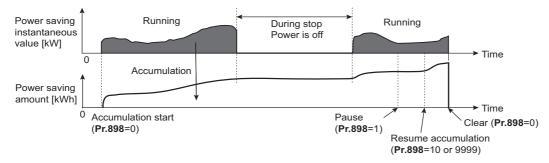


NOTE

• The cumulative value of energy saving is refreshed every hour. This means that the last cumulative value is displayed at a restart of the inverter and the cumulative meter restarts if the time elapsed between turning OFF and re-turning ON of the inverter is shorter than an hour. (In some cases, the cumulative energy value may decrease.)

◆ Estimated input power for the commercial power supply operation (Pr.892, Pr.893, Pr.894)

- Select the pattern of the commercial power supply operation from among four patterns (discharge damper control (fan), suction damper control (fan), valve control (pump) and commercial power drive), and set it in Pr.894 Control selection during commercial power-supply operation.
- Set the motor capacity (pump capacity) in Pr.893 Energy saving monitor reference (motor capacity).
- Refer to the following graph to find the rate of power consumption (%) during commercial power supply operation based on the selected pattern and the rate of motor rotations per minute with respect to the rated speed (the result of dividing the present output frequency by **Pr.3 Base frequency** setting).

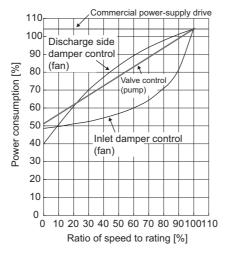

• The estimated input power (kW) for the commercial power supply operation is calculated from the motor capacity set in **Pr.893**, the setting of **Pr.892 Load factor**, and the rate of power consumption using the following formula.



• If the output frequency rises to the setting of **Pr.3 Base frequency** or higher, it stays at a constant value because the rotations per minute cannot rise higher than the power supply frequency during commercial power supply operation.

◆ Annual energy saving and its monetary value (Pr.899)

- When the operation time rate (ratio of the time period in year when the inverter drives the motor) [%] is set in **Pr.899**, the annual energy saving effect can be estimated.
- When the inverter is operated in specific patterns, the estimate annual energy saving can be calculated by measuring the energy saving in a certain period.
- Refer to the following procedure to set the operation time rate.
 - **1.** Estimate the average operation time per day (h/day).
 - **2.** Calculate the operation days per year (days/year) using the following formula: Average operation days per month × 12 (months).
 - **3.** Calculate the annual operation time (h/year) from values determined in Step 1 and Step 2, using the following formula.

Annual operation time (h/year) = average time (h/day) × number of operation days (days/year)

4. Calculate the operation time rate using the following formula, and set it in **Pr.899**.

Operation time rate (%) =
$$\frac{\text{Annual operation time (h/year)}}{24 \text{ (h/day)} \times 365 \text{ (days/year)}} \times 100(\%)$$



Setting example for operation time rate: In the case where the average operation time per day is about 21 hours and the average operation days per month is 16 days.

Annual operation time = 21 (h/day) × 16 (days/month) × 12 (months) = 4032 (h/year)

Operation time rate (%) =
$$\frac{4032 \text{ (h/year)}}{24 \text{ (h/day)} \times 365 \text{ (days/year)}} \times 100(\%) = \frac{46.03\%}{24 \text{ (h/day)}}$$

Therefore, set 46.03% in Pr.899.

· Calculate the annual energy saving from the value of [3 Average power saving] cumulated according to the setting of Pr.899 Operation time rate (estimated value).

· When the power cost per hour is set in Pr.896 Power unit cost, the annual energy cost savings can be monitored. The annual energy cost savings is determined by calculation using the following formula.

Annual power cost saving = annual power saving amount (kWh/year) × Pr.896



· During regenerative driving, substitute the output power during the commercial power supply operation for the saved power (therefore, input power = 0).

Parameters referred to

Pr.3 Base frequency page 428
Pr.52 Operation panel main monitor selection page 270
Pr.54 FM terminal function selection page 279
Pr.158 AM terminal function selection page 279

12.6 Output terminal function selection

Use the following parameters to change the functions of the open collector output terminals and relay output terminals.

Pr.	Name		Initial value	Signal name	Setting range		
190 M400	RUN terminal function selection	For open	0	RUN (Inverter running)	0, 1, 3, 4, 7, 8, 11 to 16, 20, 25, 26, 30 to 35, 39 to 41, 44 to 48, 57, 64, 70, 80, 81, 90 to 93, 95, 96, 98 to 101, 103, 104, 107, 108, 111 to 116, 120, 125, 126, 130 to 135, 139 to 141, 144 to		
191 M404	NET Y2 output selection	terminal	4	FU (Output frequency detection)	148, 157, 164, 170, 180, 181, 190 to 193, 195, 196, 198, 199, 206, 211 to 213, 242, 306, 311 to 313, 342, 9999*1		
192 M405	A,B,C terminal function selection			ALM (Fault)	0, 1, 3, 4, 7, 8, 11 to 16, 20, 25, 26, 30 to 35, 39 to 41, 44 to 48, 57, 64, 70, 80 to 82, 90, 91, 95, 96, 98 to 101, 103, 104, 107, 108, 111 to 116, 120, 125, 126, 130 to 135, 139 to 141, 144 to 148, 157, 164, 170, 180 to 182, 190, 191, 195, 196, 198, 199, 206, 211 to 213, 242, 306, 311 to 313, 342, 9999*1		
193 M451	NET Y1 output selection				0, 1, 3, 4, 7, 8, 11 to 16, 20, 25, 26, 30 to 35, 39 to 41, 44 to 48, 57, 64, 70, 80, 81, 90 to 93, 95,		
194 M452	NET Y2 output selection	Virtual output terminal for		No function	98 to 101, 103, 104, 107, 108, 111 to 116, 120, 125, 126, 130 to 135, 139 to 141, 144 to 148, 157, 164, 170, 180, 181, 190 to 193, 195, 198, 199, 206, 211 to 213, 242, 306, 311 to 313, 342,		
195 M453	NET Y3 output selection	communication 99	9999				
196 M454	NET Y4 output selection	·			9999*1		
313 M410 ^{*2}	DO0 output selection		9999	No function			
314 M411 ^{*2}	DO1 output selection		9999	No function			
315 M412 ^{*2}	DO2 output selection		9999	No function	0, 1, 3, 4, 7, 8, 11 to 16, 20, 25, 26, 30 to 35, 39 to 41, 44 to 48, 57, 64, 70, 80, 81, 90 to 93, 95,		
316 M413 ^{*2}	DO3 output selection		9999	No function	96, 98 to 101, 103, 104, 107, 108, 111 to 116, 120, 125, 126, 130 to 135, 139 to 141, 144 to 148, 157, 164, 170, 180, 181, 190 to 193, 195,		
317 M414 ^{*2}	DO4 output selection	For terminal on	9999	No function	196, 198, 199, 206, 211 to 213, 242, 306, 311 to 313, 342, 9999*1		
318 M415 ^{*2}	DO5 output selection	the option	9999	No function	0.0, 0.12, 0000		
319 M416*2	DO6 output selection		9999	No function			
320 M420 ^{*2}	RA1 output selection		0	RUN (Inverter running)			
321 M421 ^{*2}	RA2 output selection		1	SU (Up to frequency)	0, 1, 3, 4, 7, 8, 11 to 16, 20, 25, 26, 30 to 35, 39 to 41, 44 to 48, 57, 64, 70, 80, 81, 90, 91, 95, 96,		
322 M422 ^{*2}	RA3 output selection		4	FU (Output frequency detection)	98, 99, 206, 211 to 213, 242, 9999*1		

Pr.	Name	Initial value	Setting range	Description	
289	Inverter output terminal	9999	5 to 50 ms	Set the time delay for the output terminal response.	
M431	filter	3333	9999	No filtering of the output terminal.	

^{*1} The setting range differs depending on the model. For the details, refer to Output signal list.

^{*2} The setting is available when the PLC function is enabled. (**Pr.313 to Pr.315** are always available for settings in the Ethernet model and the safety communication model.)

◆ Assignment of output signals

- The signals can be assigned to the open collector output terminals (2 terminals) and relay output terminal (1 terminal), which are provided as the output terminals of the inverter. (The open collector output terminals are provided only with the standard model.)
- The signals can be output via communication, or assigned to the extension terminals of the plug-in option (FR-A8AY or FR-A8AR).

Pr.	Terminal		put terminal terminal)	Output via	Option output termi	erminal (physical inal) ^{*2}
F1.	name	FR-E800	FR-E800- (SC)E	communication*1	FR-A8AY	FR-A8AR
190	RUN	0	_	0	_	_
191	FU	0	_	0	_	_
192	A,B,C	0	0	0	_	_
193	NET Y1	_	_	0	_	_
194	NET Y2	_	_	0	_	_
195	NET Y3	_	_	0	_	_
196	NET Y4	_	_	0	_	_
313	DO0	_	_	0	0	_
314	DO1	_	_	0	0	_
315	DO2	_	_	0	0	_
316	DO3	_	_	_	0	_
317	DO4	_	_	_	0	_
318	DO5	_	_	_	0	_
319	DO6	_	_	_	0	_
320	RA1	_	_	_	_	0
321	RA2	_	_	_	_	0
322	RA3	_	_	_	_	0

o: Assignment/output available, -: Assignment/output unavailable (no function)

♦ Output signal list

- A function listed below can be set to each output terminal.
- Refer to the following table and set the parameters. (0 to 99, 200 to 299: Positive logic, 100 to 199, 300 to 399: Negative logic)

Set	tting	Signal			Related	
Positive logic	Negative logic	name	Function	Operation	parameter	Refer to page
0	100	RUN	Inverter running	Output during operation when the inverter output frequency reaches Pr.13 Starting frequency or higher.	_	296
1	101	su	Up to frequency *1	Output when the output frequency reaches the set frequency.	Pr.41	301
3	103	OL	Overload warning	Output while the stall prevention function works.	Pr.22, Pr.23, Pr.66, Pr.154	256
4	104	FU	Output frequency detection	Output when the output frequency reaches the frequency set in Pr.42 (Pr.43 during reverse rotation) or higher.	Pr.42, Pr.43	301
7	107	RBP	Regenerative brake prealarm	Output when the regenerative brake duty reaches 85% of the setting of Pr.70 .	Pr.70	442
8	108	THP	Electronic thermal O/L relay pre-alarm	Output when the cumulative electronic thermal O/L relay value reaches 85% of the trip level. (The electronic thermal O/L relay function (E.THT/E.THM) is activated when the value reaches 100%.)	Pr.9	238
11	111	RY	Inverter operation ready	Output when the reset process is completed after powering ON the inverter or when the inverter is ready to start operation with the start signal ON or during operation.	_	296

^{*1} The communication protocol affects which terminal can be used. For details, refer to the Instruction Manual (Communication) or the Instruction Manual of the communication option.

^{*2} Refer to the Instruction Manual of the option for details on the option output terminals.

Set	tting		Related			
Positive	Negative	Signal name	Function	Operation	parameter	Refer to page
logic 12	logic 112	Y12	Output current detection	Output when the output current is higher than the Pr.150 setting for the time set in	Pr.150, Pr.151	304
12	112	112	Output current detection	Pr.151 or longer. Output when the output current is lower than	11.100, 11.101	304
13	113	Y13	Zero current detection	the Pr.152 setting for the time set in Pr.153 or longer.	Pr.152, Pr.153	304
14	114	FDN	PID lower limit	Output when the input value is lower than the lower limit set for the PID control operation.	Pr.127 to	
15	115	FUP	PID upper limit	Output when the input value is higher than the upper limit set for the PID control operation.	Pr.134, Pr.575 to Pr.577	380
16	116	RL	PID forward/reverse rotation output	Output during forward rotation operation in the PID control operation.		
20	120	BOF	Brake opening request	Output to release the brake while the brake sequence function is enabled.	Pr.278 to Pr.285, Pr.292	370
25	125	FAN	Fan fault output	Output when a fan fault occurs.	Pr.244	245
26	126	FIN	Heat sink overheat pre- alarm	Output when the heat sink temperature rises to 85% of temperature at which the protective function of the Heat sink overheat is activated.	_	Instruction Manual (Maintenance)
30	130	Y30	Forward rotation output (output for a Vector control compatible option)*2	Output while a motor rotates in forward direction.		299
31	131	Y31	Reverse rotation output (output for a Vector control compatible option)*2	Output while a motor rotates in reverse direction.	_	299
32	132	Y32	Regenerative status output (output for a Vector control compatible option)*2	Output while a motor is in a regenerative braking state under Vector control.		299
33	133	RY2	Operation ready 2	Output while pre-excitation is enabled or during normal operation under Real sensorless vector control, Vector control, or PM sensorless vector control.	_	296
34	134	LS	Low speed detection	Output when the output frequency drops to the Pr.865 setting or lower.	Pr.865	301
35	135	TU	Torque detection	Output when the motor torque is higher than the Pr.864 setting.	Pr.864	306
39	139	Y39	Start time tuning completion	Output when the start-time tuning complete.	Pr.95, Pr.574	362
40	140	Y40	Trace status	Output during trace operation.	Pr.1020, Pr.1022 to Pr.1047	418
41	141	FB	Speed detection	Output when the actual motor rotations per minute (estimate) reaches the setting of Pr.42 .	Pr.42	301
44	144	RUN2	Inverter running 2	Output while the Forward rotation command signal or Reverse rotation command signal is ON. Output during deceleration even while the Forward rotation command signal or Reverse rotation command signal is OFF	_	296
45	145	RUN3	Inverter running and start command ON Output while the inverter is running or while the start command signal is ON.			296
46	146	Y46	During deceleration at occurrence of power failure	Output when the power-failure deceleration function is activated. (The signal output is retained until the function stops.)	Pr.261	414
47	147	PID	During PID control activated	Output during the PID control operation.	Pr.127 to Pr.134, Pr.575 to Pr.577	380

Setting Signal		0:1			D.J.A. J	
Positive logic	Negative logic	name	Function	Operation	Related parameter	Refer to page
48	148	Y48	PID deviation limit	Output when the absolute deviation value exceeds the limit value.	Pr.127 to Pr.134, Pr.553, Pr.554	380
57	157	IPM	During PM sensorless vector control	Output while the operation is performed under PM sensorless vector control.	Pr.71 to Pr.80, Pr.998	104
64	164	Y64	During retry	Output during retry operation.	Pr.65 to Pr.69	250
70	170	SLEEP	PID output interruption	Output while PID output suspension function is activated.	Pr.127 to Pr.134, Pr.575 to Pr.577	380
80	180	SAFE	Safety monitor output	Output while the safety stop function is activated.		Instruction Manual
81	181	SAFE2	Safety monitor output 2	Output when no internal safety circuit failure exists.	_	(Functional Safety)
82	182	Y82	BACnet binary output	Enables output from the Binary Output object for BACnet communication. This signal can be assigned to Pr.192 only. (The setting is available only for the FR-E800-EPA and the FR-E800-SCEPA.)	Pr.549	Instruction Manual (Communication)
90	190	Y90	Life alarm	Output when the life check function detects the part approaching the end of its life.	Pr.198, Pr.255 to Pr.259, Pr.506, Pr.507, Pr.509	186
91	191	Y91	Fault output 3 (Power- OFF signal)	Output when the Fault occurs due to an inverter circuit fault or connection fault.	_	300
92	192	Y92	Energy saving average value updated timing	Switches between ON and OFF every time the average energy saving is updated during the energy saving monitoring. This signal cannot be assigned to any of the relay output terminal (Pr.192, Pr.320 to Pr.322).	Pr.52, Pr.54, Pr.158, Pr.891 to Pr.899	286
93	193	Y93	Current average monitor	Output in pulses for transmission of the average current value and the maintenance timer value. This signal cannot be assigned to any of the relay output terminal (Pr.192, Pr.320 to Pr.322).	Pr.555 to Pr.557	191
95	195	Y95	Maintenance timer	Output when the value of Pr.503 reaches the Pr.504 setting or higher.	Pr.503, Pr.504	190
96	196	REM	Remote output	Output via a terminal by setting a proper number in a relative parameter.	Pr.495 to Pr.497	307
98	198	LF	Alarm	Output when an Alarm fault (fan fault or a communication error) occurs.	Pr.121, Pr.244	Instruction Manual (Communication) , 245
99	199	ALM	Fault	Output when the inverter's protective function is activated to stop the power output (when the Fault occurs). The signal output stops when the inverter reset starts.	_	299
206	306	Y206	Cooling fan operation command	Output when the cooling fan operation is commanded.	Pr.244	245
211	311	LUP	Upper limit warning detection	Output when the load fault upper limit warning is detected.		
212	312	LDN	Lower limit warning detection Output when the load fault lower limit warning is detected. Pr.1480 to Pr.1492		261	
213	313	Y213	During load characteristics measurement	Output during measurement of the load characteristics.	. 1.1 7 3£	
242	342	LNK	Output when the inverter receives a response from all the slave inverters during initial communication, or when the inverter returns a response to the master. (Available for the Ethernet model and the safety communication model only.)			Instruction Manual (Communication)
9999		_	No function	<u> </u>	-	-


- *1 Note that changing the frequency setting with an analog signal or the setting dial on the operation panel may cause the turning ON and OFF of Up to frequency (SU) signal depending on its changing speed and the timing of the speed change determined by the acceleration/deceleration time setting. (The signal state changing does not occur when the acceleration/deceleration time is set to 0 second.)
- *2 Available when the plug-in option is connected.



- One function can be assigned to more than one terminal.
- The function works during the terminal conducts when the parameter setting is any of "0 to 99, 200 to 299", and the function works during the terminal does not conduct when the setting is "100 to 199, 300 to 399".
- Changing the terminal assignment using Pr.190 to Pr.196 (Output terminal function selection) may affect the other functions. Set parameters after confirming the function of each terminal.
- Do not assign the signal to terminals A, B, and C which frequently changes its state between ON and OFF. Otherwise, the life
 of the relay contact may be shortened.

◆ Adjusting the output terminal response level (Pr.289)

• The responsivity of the output terminals can be delayed in a range between 5 to 50 ms. (The following is the operation example of the RUN signal.)

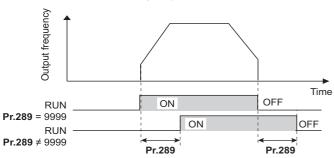




- When Pr.157 OL signal output timer is set for the Overload warning (OL) signal output, the OL signal is output after the time
 period calculated by adding the Pr.289 setting to the Pr.157 setting elapsed.
- The signal output for the PLC function (see page 416) and the remote output signal via BACnet communication are not affected by the **Pr.289** setting (not filtered for responsivity).

◆ Inverter operation ready signals (RY, RY2 signals) and inverter running signals (RUN, RUN2, RUN3 signals)

- When the inverter is ready for operation, the Inverter operation ready (RY) signal turns ON (and stays ON during operation).
- When the inverter output frequency reaches the setting of **Pr.13 Starting frequency** or higher, the inverter running signals (RUN, RUN2 signals) turn ON. The signals are OFF while the inverter is stopped or during the DC injection brake operation.

• The Inverter running and start command ON (RUN3) signal is ON while the inverter is running or while the start command signal is ON (When the start command signal is ON, the RUN3 signal is ON even while the inverter's protective function is activated or while the MRS signal is ON.) The RUN3 signal is ON even during the DC injection brake operation, and the signal is OFF when the inverter stops.

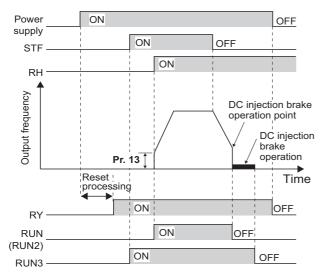

· The ON/OFF state of each signal according to the inverter operating status is shown in the matrix below.


Output	Start signal Start signal		ON		Inverter output shutoff ^{*2}			t after er failure Inverter	
signal	OFF (inverter stopped)	ON (inverter stopped)	(inverter running)	brake operation	Start signal ON	Start signal OFF	Start signal ON	Start signal OFF	running after restart
RY*3	ON	ON	ON	ON	OFF		ON ^{*1}		ON
RY2	OFF	OFF	OFF	OFF	OFF		OFF		OFF
RUN	OFF	OFF	ON	OFF	OFF		OFF		ON
RUN2	OFF	OFF	ON	OFF	OFF		OFF		ON
RUN3	OFF	ON	ON	ON	ON	OFF	ON	OFF	ON

- *1 The signal is OFF during power failure or undervoltage.
- *2 This means the state during a fault occurrence or while the MRS signal is ON, etc.
- *3 The signal is OFF while power is not supplied to the main circuit.

■ Operation under Real sensorless vector control, Vector control, and PM sensorless vector control


- When the inverter is ready for operation, the Inverter operation ready (RY) signal turns ON (and stays ON during operation).
- When the inverter output frequency reaches the setting of **Pr.13 Starting frequency** or higher, the Inverter running (RUN) turns ON. The signal is OFF during an inverter stop, during the DC injection brake operation, during tuning at start-up, or during pre-excitation.
- The Inverter running 2 (RUN2) signal is ON while the inverter is running or while the start command signal is ON. (When the inverter's protective function is activated or the MRS signal is ON, the RUN2 signal turns OFF.)
- The Inverter running and start command ON (RUN3) signal is ON while the inverter is running or while the start command signal is ON.
- The RUN2 and RUN3 signals are also ON when the start command signal is ON or during pre-excitation with the speed command value 0. (However, the RUN2 signal is OFF during pre-excitation with the LX signal ON.)

• The Operation ready 2 (RY2) signal turns ON when the pre-excitation starts. The signal is ON during pre-excitation even while the inverter is stopped. The signal is OFF during the inverter output shutoff.

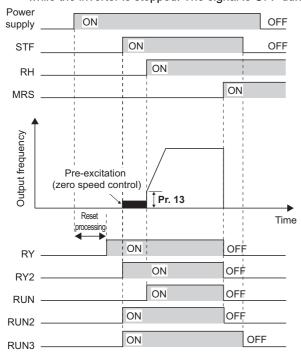

NOTE

 • When pre-excitation works with the Pre-excitation (LX) signal ON, the RY2 signal turns ON after 100 ms from the time the LX signal turns ON. (When online auto tuning at start-up is selected (**Pr.95** = "1"), the time the signal turns ON is delayed by the tuning time.)



• The ON/OFF state of each signal according to the inverter operating status is shown in the matrix below.

	Start	, Start signal		Start LX signal injection		Inverter output shutoff*4		Automatic restart after instantaneous power failure		
Output signal	al OFF g pre- ON pre-	ing brake		During coa		coasting Start	Inverter running			
oigiidi	(inverter stopped)	excitation)	(inverter running)	excitation)	(during pre- excitation)	Start signal ON	Start signal OFF	Start signal ON	signal OFF	after restart
RY*5	ON	ON	ON	ON	ON	OFF		ON ^{*2}		ON
RY2	OFF	ON	ON	ON ^{*3}	ON	OFF		OFF		ON
RUN	OFF	OFF	ON	OFF	OFF	OFF		OFF		ON
RUN2	OFF	ON	ON	OFF	OFF	OFF		OFF		ON
RUN3	OFF	ON	ON	ON	ON	ON	OFF	ON	OFF	ON

- *1 When the start signal is ON and the frequency command is 0 Hz, such state is designated as "during zero speed control".
- *2 The signal is OFF during power failure or undervoltage.
- *3 The signal turns ON after 100 ms from the time the LX signal turns ON.
- *4 This means the state during a fault occurrence or while the MRS signal is ON, etc.
- $^{\star}5$ The signal is OFF while power is not supplied to the main circuit.
- To use the RY, RY2, RUN, RUN2, or RUN3 signal, set the corresponding number selected from the following table in any of **Pr.190 to Pr.196 (Output terminal function selection)** to assign the function to an output terminal.


Output signal	Pr.190 to Pr.196 settings				
Output signal	Positive logic	Negative logic			
RY	11	111			
RY2	33	133			
RUN	0	100			
RUN2	44	144			
RUN3	45	145			



• The RUN signal (positive logic) is initially assigned to the terminal RUN (standard models only).

◆ Forward rotation output (Y30) signal and Reverse rotation output (Y31) signal

- Under Vector control, the Forward rotation output (Y30) signal or the Reverse rotation output (Y31) signal is output according to the actual rotation direction of the motor.
- During pre-excitation (zero-speed or servo-lock function ON) in the speed or torque control mode, the Y30 and Y31 signals
 are OFF.
- To use the Y30 signal, set "30 (positive logic)" or "130 (negative logic)" in any of **Pr.190 to Pr.196 (Output terminal function selection)** to assign the function to an output terminal.
- To use the Y31 signal, set "31 (positive logic)" or "131 (negative logic)" in any of **Pr.190 to Pr.196 (Output terminal function selection)** to assign the function to an output terminal.

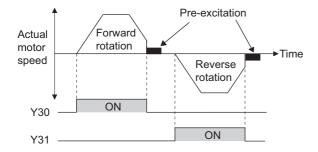


№ NOTE

- The Y30 and Y31 signals are always OFF under V/F control, Advanced magnetic flux vector control, Real sensorless vector control, and PM sensorless vector control.
- If the motor is rotated by an external force while the inverter is stopped, the Y30 and Y31 signals remain OFF.

◆ Regenerative status output (Y32) signal

- When the motor gets in a regenerative braking (dynamic braking) state under Vector control, the Regenerative status output (Y32) signal turns ON. Once the signal turns ON, the signal is retained ON for at least 100 ms.
- · The signal is OFF during an inverter stop or during pre-excitation.
- To use the Y32 signal, set "32 (positive logic)" or "132 (negative logic)" in any of **Pr.190 to Pr.196 (Output terminal function selection)** to assign the function to an output terminal.

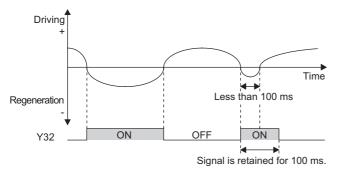




 The Y32 signal is always OFF under V/F control, Advanced magnetic flux vector control, Real sensorless vector control, and PM sensorless vector control.

◆ Fault output (ALM) signal

• The fault signal (ALM signal) is output when an inverter protective function is activated.

• The ALM signal is assigned to the terminals A, B, and C in the initial status.

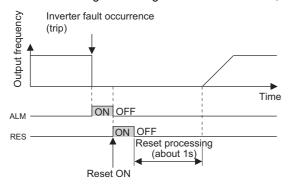



• For details of the inverter faults, refer to the Instruction Manual (Maintenance).

◆ Input power shutoff like magnetic contactor (Y91 signal)

- The Fault output 3 (Y91) signal is output when a fault originating in the inverter circuit or a connection fault occurs.
- To use the Y91 signal, set "91" (positive logic) or "191" (negative logic) in any parameter from **Pr.190 to Pr.196 (Output terminal function selection)** to assign the function to an output terminal.
- The following is the list of faults that output the Y91 signal. (For the details of faults, refer to the Instruction Manual (Maintenance).)

Fault type
Inrush current limit circuit fault (E.IOH)
CPU fault (E.CPU)
CPU fault (E.6)
CPU fault (E.7)
Parameter storage device fault (control circuit board) (E.PE)
Parameter storage device fault (main circuit board) (E.PE2)
Output side earth (ground) fault overcurrent (E.GF)
Output phase loss (E.LF)
Brake transistor alarm detection (E.BE)
Internal circuit fault (E.13)

◆ Changing the special relay function for the PLC function

• For the PLC function, the function of special relays (SM1225 to SM1234) can be changed by setting **Pr.313 to Pr.322**. (For the details of the PLC function, refer to the PLC Function Programming Manual.)

Parameters referred to

Pr.13 Starting frequency page 207, page 208

12.7 Output frequency detection


If the inverter output frequency which reaches a specific value is detected, the relative signal is output.

Pr.	Name	Initial	value ^{*1}	Setting	Description		
FI.	Name	Gr.1	Gr.2	range	Description		
41 M441	Up-to-frequency sensitivity	10%		10%		0% to 100%	Set the level where the SU signal turns ON.
42 M442	Output frequency detection	6 Hz		0 to 590 Hz	Set the frequency at which the FU (or FB) signal turns ON.		
43 M443	Output frequency detection for reverse	9999		0 to 590 Hz	Set the frequency at which the FU (or FB) signal turns ON only while the motor rotates in reverse direction.		
IVITTO	rotation			9999	The frequency same as the Pr.42 setting is set.		
865 M446	Low speed detection	1.5 Hz		0 to 590 Hz	Set the frequency at which the LS signal turns ON.		
870 M400	Speed detection hysteresis	0 Hz		0 to 15 Hz	Set the hysteresis width for the detected frequency.		

^{*1} Gr.1 and Gr.2 are the parameter initial value groups. (Refer to page 52).

Setting the notification zone of the output frequency reaching the set point (SU signal, Pr.41)


- · The Up to frequency (SU) signal is output when the output frequency reaches the set frequency.
- Set the value in the range of 1% to 100% in Pr.41 to determine tolerance for the set frequency (considered as 100% point).
- It may be useful to use this signal to start operating related equipment after checking that the set frequency has been reached.
- To use the SU signal, set "1" (positive logic) or "101" (negative logic) in one of **Pr.190 to Pr.196 (Output terminal function selection)** to assign function to an output terminal.

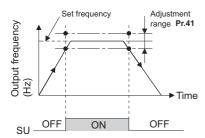

◆ Output frequency detection (FU (FB) signal, Pr.42, Pr.43)

- The Output frequency detection (FU) signal and the Speed detection (FB) signal are output when the output frequency reaches or exceeds the **Pr.42** setting.
- The FU signal is useful for applying or releasing electromagnetic brake, etc.
- The FU signal is output when the output frequency (frequency command) reaches the set frequency. The FB signal is
 output when the detected actual speed (estimated speed under Real sensorless vector control, or feedback value under
 Vector control) of the motor reaches the set frequency. The FU signal and the FB signal are output at the same manner
 under V/F control or Advanced magnetic flux vector control or during the encoder feedback control operation.
- The frequency detection dedicated to motor rotation in reverse direction is enabled by setting the frequency in **Pr.43**. This setting is useful when the timing of the electromagnetic braking during forward rotation operation (for example, during lifting up in the lifts operation) is different from that during reverse rotation operation (lifting down).

• When **Pr.43** ≠ "9999", the **Pr.42** setting is for the forward rotation operation and the **Pr.43** setting is for the reverse rotation operation.

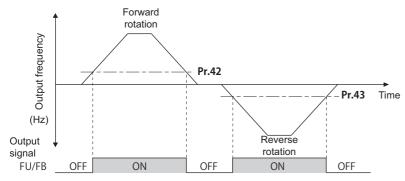


• To use each signal, set the corresponding number selected from the following table in any parameter from **Pr.190 to Pr.196 (Output terminal function selection)** to assign the function to an output terminal.

Output signal	Pr.190 to Pr.	Related Parameter	
Output Signal	Positive logic	Negative logic	Related Parallieter
FU	4	104	42. 43
FB	41	141	42, 43

◆ Low speed detection (LS signal, Pr.865)

 - When the output frequency drops to the setting of Pr.865 Low speed detection or lower, the Low speed detection (LS) signal is output.
- The fault "E.OLT" displays and the inverter output shuts off if the torque limit operation causes the frequency to drop to the
 frequency set in Pr.865 and the output torque to surpass the value set in Pr.874 OLT level setting for three seconds or
 longer in the speed control mode under Real sensorless vector control or PM sensorless vector control.
- To use the LS signal, set "34" (positive logic) or "134" (negative logic) in any parameter from **Pr.190 to Pr.196 (Output terminal function selection)** to assign the function to the output terminal.




◆ Speed detection hysteresis (Pr.870)

Setting the hysteresis width for the detected frequency prevents chattering of the Speed detection (FB) signal. When an output frequency fluctuates, the following signals may chatter (turns ON and OFF repeatedly).

- Up to frequency (SU) signal
- · Speed detection (FB) signal
- · Low speed detection (LS) signal

Setting hysteresis to the detected frequency prevents chattering of these signals.

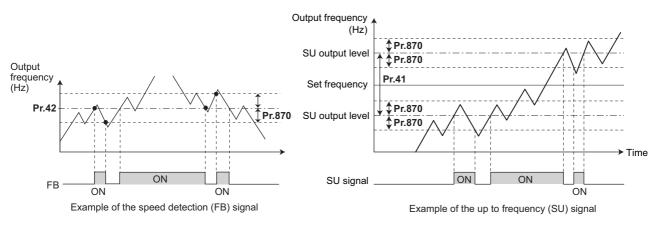



- All signals are OFF during the DC injection brake operation and during tuning at start-up.
- The reference frequency in comparison with the set frequency differs depending on the control method.

Control method or function	Reference frequency					
Control method of function	FU	FB, SU, LS				
V/F control	Output frequency	Output frequency				
Advanced magnetic flux vector control	Output frequency before the slip compensation	Output frequency before the slip compensation				
Real sensorless vector control	Frequency command value	Estimated frequency (actual motor speed)				
Encoder feedback control	Frequency converted from actual motor speed	Frequency converted from actual motor speed				
Vector control	Frequency command value	Frequency converted from actual motor speed				
PM sensorless vector control	Frequency command value	Estimated frequency (actual motor speed)				

- Setting a higher value in Pr.870 causes a lower responsivity of the signals for frequency detection (SU, FB, and LS signals).
- The logic (ON/OFF switching) of the LS signal is the reverse of that of the FB signal.
- Changing the terminal assignment using **Pr.190 to Pr.196 (Output terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.190 to Pr.196 (Output terminal function selection) page 292 Pr.874 OLT level setting page 114

12.8 Output current detection function


If the inverter output current which reaches a specific value is detected, the relative signal is output via an output terminal.

Pr.	Name	Initial value	Setting range	Description
150 M460	Output current detection level	150%	0% to 400%	Set the level to detect the output current. Consider the value of the rated inverter current as 100%.
151 M461	Output current detection signal delay time	0 s	0 to 10 s	Set the timing to detect the output current. Enter the delay time between the time when the output current reaches the set current or higher and the time when the Output current detection (Y12) signal is output.
152 M462	Zero current detection level	5%	0% to 400%	Set the level to detect the zero current. Consider the value of the inverter rated current as 100%.
153 M463	Zero current detection time	0.5 s	0 to 10 s	Set the time from the time when the output current drops to the Pr.152 setting or lower to the time when the Zero current detection (Y13) signal is output.
166	Output current detection		0 to 10 s	Set the retention time period during which the Y12 signal is ON.
M433	signal retention time	0.1 s	9999	The Y12 signal is retained ON. The signal turns OFF at the next start-up of the inverter.
167 M464	Output current detection operation selection	0	0, 1, 10, 11	Select the inverter operation at the time when the Y12 signal and the Y13 signal turn ON.

Output current detection (Y12 signal, Pr.150, Pr.151, Pr.166, Pr.167)

- The output current detection function is useful for overtorque detection.
- If the inverter output during inverter running remains higher than the **Pr.150** setting for the time set in **Pr.151** or longer, the Output current detection (Y12) signal is output from the inverter's open collector or the relay output terminal.
- · When the Y12 signal turns ON, the ON state is retained for the time set in Pr.166.
- When Pr.166 = "9999", the ON state is retained until the next start-up of the inverter.
- Setting Pr.167 = "1" while the Y12 signal is ON does not cause the fault E.CDO. The Pr.167 setting becomes valid after the Y12 signal is turned OFF.
- To use the Y12 signal, set "12" (positive logic) or "112" (negative logic) in any parameter from **Pr.190 to Pr.196 (Output terminal function selection)** to assign the function to the output terminal.
- Use **Pr.167** to select the inverter operation at the time when Y12 signal turns ON, whether the inverter output stops or the inverter operation continues.


Pr.167 setting	When the Y12 signal turns ON	When the Y13 signal turns ON
0 (initial value)	Operation continues.	Operation continues.
1	Operation stops by fault (E.CDO).	Operation continues.
10	Operation continues.	Operation stops by fault (E.CDO).
11	Operation stops by fault (E.CDO).	Operation stops by fault (E.CDO).

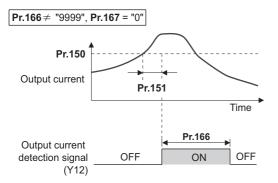

♦ Zero current detection (Y13 signal, Pr.152, Pr.153)

- If the inverter output during inverter running remains higher than the **Pr.152** setting for the time set in **Pr.153** or longer, the Zero current detection (Y13) signal is output from the inverter's open collector or the relay output terminal.
- Once the Zero current detection (Y13) signal turns ON, the signal is retained ON for at least 0.1 seconds.

- · If the inverter output current drops to zero, slippage due to gravity may occur, especially in a lift application, because the motor torque is not generated. To prevent this, the Y13 signal can be output from the inverter to apply the mechanical brake at zero current output.
- To use the Y13 signal, set "13" (positive logic) or "113" (negative logic) in any parameter from Pr.190 to Pr.196 (Output terminal function selection) to assign the function to the output terminal.
- · Use Pr.167 to select the inverter operation at the time when Y13 signal turns ON, whether the inverter output stops or the inverter operation continues.

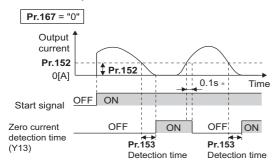

* When the output is restored to the Pr.152 level, the Y13

NOTE

- · This function is enabled during online or offline auto tuning.
- · The response time of the Y12 and Y13 signals is approximately 0.1 seconds. However, the response time varies according to the load condition.
- When **Pr.152** = "0", the zero current detection function is disabled.
- · Changing the terminal assignment using Pr.190 to Pr.196 (Output terminal function selection) may affect the other functions. Set parameters after confirming the function of each terminal.

- The setting of the zero current detection level should not be too low, and the setting of the zero current detection time should not be too long. Doing so may cause the signal for the zero current detection not to be output when the output current is very low and the motor torque is not generated.
- · A safety backup such as an emergency brake must be provided to prevent machines or equipment in hazardous conditions even if the Zero current detection is used.

Parameters referred to

Online auto tuning page 362
Offline auto tuning page 345, page 355

Pr.190 to Pr.196 (Output terminal function selection) page 292

12.9 Output torque detection function


Magnetic flux Vector Sensorless PM

If the motor torque which reaches a specific value is detected, the relative signal is output.

The signal is useful for applying or releasing electromagnetic brake, etc.

Pr.	Name	Initial value	Setting range	Description
864 M470	Torque detection	150%	0% to 400%	Set a value of the torque at which the TU signal turns ON.

- The Torque detection (TU) signal turns ON when the motor output torque reaches the value of torque set in **Pr.864** or higher. The TU signal turns OFF when the motor output torque drops lower than the set value.
- Pr.864 is not available under V/F control.
- To use the TU signal, set "35" (positive logic) or "135" (negative logic) in one of **Pr.190 to Pr.196 (Output terminal** function selection) to assign the function to the output terminal.

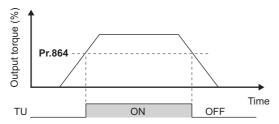

NOTE

 Changing the terminal assignment using Pr.190 to Pr.196 (Output terminal function selection) may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.190 to Pr.196 (Output terminal function selection) ☐ page 292

12.10 Remote output function

The signal can be turned ON or OFF via the output terminal on the inverter as if the terminal is the remote output terminal for a programmable controller.

Pr.	Name	Initial value	Setting range	Description		
			0	Remote output data is cleared when the inverter power is turned OFF.	Remote output data is cleared	
495	Remote output selection		1	Remote output data is retained even after the inverter power is turned OFF.	during an inverter reset.	
M500	Remote output selection	O	10	Remote output data is cleared when the inverter power is turned OFF.	Remote output data is retained	
			11	Remote output data is retained even after the inverter power is turned OFF.	during an inverter reset.	
496 M501	Remote output data 1	0	0 to 4095	Set a decimal number to enter a binary number in every bit corresponding to each of the output terminals of the inverter or communication.		
497 M502	Remote output data 2 0 0		0 to 4095	Set a decimal number to enter a binary number in every bit corresponding to each of the output terminals of the option FR-A8A FR-A8AR, or communication.		

◆ Remote output setting (REM signal, Pr.496, Pr.497)

- The signal assigned to each of the output terminal can be turned ON or OFF according to the settings of **Pr.496** and **Pr.497**. The signal assigned to each of the remote output terminal can be turned ON or OFF through communication.
- To use the Remote output (REM) signal, set "96" (positive logic) or "196" (negative logic) in any parameter from **Pr.190 to Pr.192 (Output terminal function selection)** to assign the function to the terminal.
- Refer to the following figures to check correspondences between the bit and the actual terminal. When "1" is set in the bit
 corresponding to the terminal to which the REM signal assigned by setting a number in Pr.496 and Pr.497 each, the signal
 turns ON (or OFF in negative logic setting). Also, setting "0" allows the signal to turn OFF (or ON in negative logic setting).
- For example, when **Pr.190 RUN terminal function selection** = "96" (positive logic) and "1" (H01) is set in **Pr.496**, the REM signal assigned to terminal RUN turns ON.

Pr.496

b11											b0
* 1	*	* 1	*1	*	*	ABC	FU	*	*	*1	RUN

Pr.497


b11											b0
*1	*1	RA3 *3	RA2 *3	RA1 *3	Y6 *2	Y5 *2	Y4 *2	Y3 *2	Y2 *2	Y1 *2	Y0 *2

- *1 Any value
- *2 Y0 to Y6 are available by installing the output-extending option (FR-A8AY) or via communication.
- *3 RA1 to RA3 are available by installing the relay output option (FR-A8AR) or via communication.

◆ Remote output data retention (REM signal, Pr.495)

- When the inverter power is reset (or a power failure occurs) while **Pr.495** = "0 (initial value) or 10", the REM signal setting is cleared. (The ON/OFF state of the signal assigned to each terminal is determined by the settings in **Pr.190** to **Pr.192**.) The settings in **Pr.496** and **Pr.497** are reset to "0".
- When Pr.495 = "1 or 11", the remote output data is stored in EEPROM before the inverter power is turned OFF. This means
 that the signal output setting after power restoration is the same as that before the power was turned OFF. However, when
 Pr.495 = "1", the data during an inverter reset (terminal reset or reset request via communication) is not saved.

• When Pr.495 = "10 or 11", the remote output data in the signal before the reset is stored even during an inverter reset.

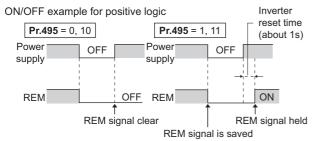

Signal condition during a reset



* When **Pr.495** = "1", the signal condition saved in EEPROM (condition of the last power OFF) is applied.



- The output terminal to which the REM signal is not assigned by using **Pr.190** to **Pr.192** does not turn ON or OFF when "1 or 0" is set in bit corresponding to each of the terminals by using **Pr.496** and **Pr.497**. (ON/OFF command affects only the terminal to which the REM signal is assigned.)
- If the power supply is turned OFF during an inverter reset, the remote output data is not stored even when **Pr.495** = "1 or 11".

Parameters referred to

Pr.190 to Pr.196 (Output terminal function selection) page 292

CHAPTER 13 (T) Multi-Function Input Terminal Parameters

13.1	Analog input selection	310
13.2	Analog input terminal (terminal 4) function assignment	315
13.3	Response level of analog input and noise elimination	316
13.4	Frequency setting voltage (current) bias and gain	318
13.5	Torque (magnetic flux) setting current (voltage) bias and gain	323
13.6	Input terminal function selection	328
13.7	Inverter output shutoff	332
13.8	Selecting the condition to activate the Second function selection (RT) signal	334
13.9	Start signal operation selection	336

13 (T) Multi-Function Input Terminal Parameters

Purpose	Para	meter to set		Refer to page
To inverse the rotation direction with the voltage/current analog input selection (terminals 2 and 4)	Analog input selection	P.T000, P.T001	Pr.73, Pr.267	310
To assign functions to analog input terminals	Terminal 4 function assignment	P.T040	Pr.858	315
To eliminate noise on analog inputs	Analog input filter	P.T002 to P.T007	Pr.74, Pr.822, Pr.826, Pr.832, Pr.836, Pr.849	316
To adjust analog input frequency/voltage (current) (calibration)	Frequency setting voltage (current) bias and gain	P.T200 to P.T203, P.T400 to P.T403, P.M043	Pr.125, Pr.126, Pr.241, C2 to C7 (Pr.902 to Pr.905)	318
To adjust analog input torque/voltage (current) (calibration)	Torque setting voltage (current) bias and gain	P.T410 to P.T413, P.M043	Pr.241, C38 to C41 (Pr.932, Pr.933)	323
To assign functions to input terminals	Input terminal function selection	P.T700 to P.T711, P.T740	Pr.178 to Pr.189, Pr.699	328
To change the input specification (NO/NC contact) of input signals	Output stop signal (MRS) / Inverter run enable signal (X10) input selection	P.T720	Pr.17	332
To assign start and forward/reverse commands to different signals	Start signal (STF/STR) operation selection	P.G106	Pr.250	336


13.1 Analog input selection

The functions to switch the analog input terminal specifications and forward/reverse rotation by the input signal polarity are selectable.

Pr.	Name	Initial value	Setting range		Description
73 T000	Analog input selection	1	0, 1, 10, 11	Switch 2: V (initial status)	The terminal 2 input specification (0 to 5 V, 0 to 10 V, 0 to 20 mA) is selectable. Also the reversible
1000			6, 16	Switch 2: I	operation setting is selectable.
267	•	0	0	Switch 4: I (initial status)	Terminal 4 input, 4 to 20 mA
T001		0	1	Switch 4 - V	Terminal 4 input, 0 to 5 V
			2		Terminal 4 input, 0 to 10 V

◆ Analog input specification selection

• For terminals 2 and 4 used for analog input, the voltage input (0 to 5 V, 0 to 10 V) and current input (0 to 20 mA) are selectable. To change the input specification, change the setting of **Pr.73 (Pr.267)** and the voltage/current input selection switch (switch 2 or switch 4).

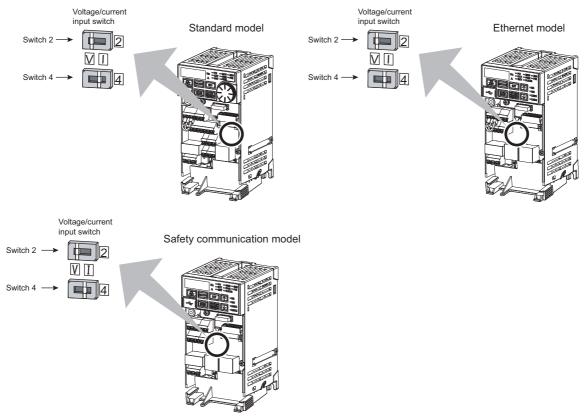

Switch s	tate	Input specification	Input terminal	Rated specification
Switch 2	I	Current input	Terminal 2	For voltage input, the input resistance is $10\pm1~k\Omega$ and the
Switch 2	V	Voltage input (initial status)	Tellilliai Z	maximum permissible voltage is 20 VDC.
Curitoh 4	I	Current input (initial status)	Terminal 4	For current input, the input resistance is 245±5 Ω and the
Switch 4	V	Voltage input	reminai 4	maximum permissible current is 30 mA.

- · Change the setting of the voltage/current input selection switch to change the rated specification of terminal 2 or 4.
- Set **Pr.73** (**Pr.267**) and the voltage/current input selection switch according to the analog signal input. The incorrect settings shown in the following table cause a failure. The inverter does not operate properly with other incorrect settings.

Setting causing a failure		Operation	
Switch setting	Terminal input	Operation	
I (current input)	Voltage input	Causes an analog signal output circuit failure in an external device (due to increased loads on the signal output circuit of the external device).	
V (voltage input)	Current input	Causes an input circuit failure in the inverter (due to an increased output power in the analog signal output circuit of an external device).	

Set Pr.73 and the voltage/current input selection switch according to the following table.

Pr.73 setting	Terminal 2 input	Switch 2	Reversible operation
0	0 to 10 V	V	
1 (initial value)	0 to 5 V	V	Disabled
6	0 to 20 mA	I	
10	0 to 10 V	V	
11	0 to 5 V	V	Enabled
16	0 to 20 mA	I	

• When the Terminal 4 input selection (AU) signal is turned ON, terminal 4 is used to set the main speed. In this case, terminal 2 is not used to set the main speed.

• Set Pr.267 and the voltage/current input selection switch according to the following table.

Pr.267 setting	Terminal 4 input	Switch 4	Reversible operation
0 (initial value)	4 to 20 mA	I	Data main and but Br 72
1	0 to 5 V	V	Determined by Pr.73 setting
2	0 to 10 V	V	Setting




- · To enable terminal 4, turn ON the AU signal.
- · Set the parameters and the switch settings so that they agree. Incorrect setting may cause a fault, failure, or malfunction.
- Use Pr.125 (Pr.126) (frequency setting gain) to change the maximum output frequency at the input of the maximum output frequency command voltage (current). At this time, the command voltage (current) need not be input. Also, the acceleration/ deceleration time, which is a slope up/down to the acceleration/deceleration reference frequency, is not affected by the change in Pr.73 setting.
- To input frequency through terminal 4, set "0" (initial value) in Pr.858.
- Always calibrate the input after changing the voltage/current input signal with Pr.73 (Pr.267) and the voltage/current input selection switch.

◆ Running with analog input voltage

- For the frequency setting signal, input 0 to 5 VDC (or 0 to 10 VDC) between terminals 2 and 5. The 5 V (10 V) input is the maximum output frequency.
- The power supply 5 V (10 V) can be input by either using the internal power supply or preparing an external power supply. The internal power supply is 5 VDC output via terminal 10.

Terminal	Inverter internal power source voltage	Frequency setting resolution	Pr.73 (terminal 2 input voltage)
10	5 VDC	0.030/60 Hz	0 to 5 VDC input

- To supply the 10 VDC input to terminal 2, set "0 or 10" in Pr.73. (The initial value is 0 to 5 V.)
- Set "1 (0 to 5 VDC)" or "2 (0 to 10 VDC)" in **Pr.267** and set the voltage/current input selection switch to "V" in order to input voltage through terminal 4. Turning ON the AU signal activates the terminal 4 input.

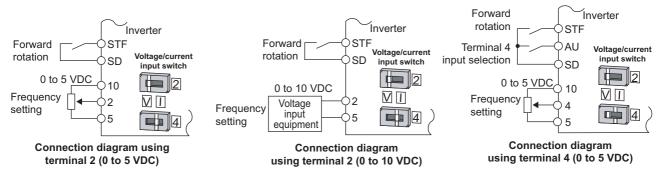




• The wiring length of terminal 10, 2, and 5 should be 30 m at maximum.

♦ Running with analog input current


• For constant pressure or temperature control with fans, pumps, or other devices, automatic operation is available by setting the regulator output signal 4 to 20 mADC to between terminals 4 and 5.

• To use terminal 4, the AU signal needs to be turned ON.

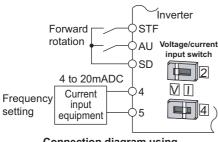

Connection diagram using terminal 4 (4 to 20mADC)


• Set "6 or 16" in **Pr.73** and set the voltage/current input selection switch to I in order to input current through terminal 2. In this case, the AU signal does not need to be turned ON.

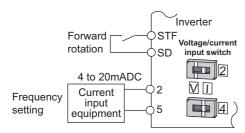

Connection diagram using terminal 2 (4 to 20mADC)

Performing forward/reverse rotation with the analog input (reversible operation)

- The reversible operation by terminal 2 (terminal 4) is enabled by setting "10, 11, or 16" in Pr.73 and adjusting Pr.125 (Pr.126) Terminal 2 frequency setting gain frequency (Terminal 4 frequency setting gain frequency), C2 (Pr.902) Terminal 2 frequency setting bias frequency to C7 (Pr.905) Terminal 4 frequency setting gain.
- The following shows the reversible operation by terminal 2 (0 to 5 V) input.
 - 1) Set "11" in Pr.73 to enable the reversible operation. Set the frequency at maximum analog input in Pr.125.
 - 2) Set 1/2 of the C4 (Pr.903) setting value in C3 (Pr.902).
 - 3) Reverse operation is performed when 0 to 2.5 VDC is input, and forward rotation when 2.5 to 5 VDC.

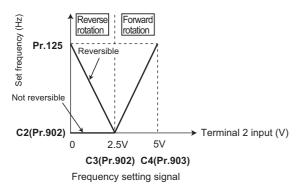

Example of reversible operation

NOTE

- Note that the reverse rotation operation is performed when analog input stops (only the start signal is input) while the reversible operation is set.
- When the reversible operation is enabled, the reversible operation by terminal 4 is performed in the initial setting (reverse operation is performed when 0 to 4 mA is input, and forward operation when 4 to 20 mA).

13.2 Analog input terminal (terminal 4) function assignment

The analog input terminal 4 function can be set and changed with parameters.

Pr.	Name	Initial value	Setting range	Description
858 T040	Terminal 4 function assignment	0	0, 4, 6, 9999	Select the terminal 4 function.

- For terminal 4 used for analog input, the frequency (speed) command, torque command, and other similar commands are usable. The functions available are different depending on the control method and control mode as shown in the following table. (For the details of the control methods, refer to page 97.)
- · Functions of terminal 4 under different control modes

Pr.858	V/F control,	Real sensorless vector control, Vector control, PM sensorless vector control			
setting	Advanced magnetic flux vector control	Speed control	Torque control		
0 (initial value)	Frequency command (AU signal-ON)	Speed command (AU signal-ON)	Speed limit (AU signal-ON)		
4	_	Torque limit (Pr.810 = "1")	Torque command (Pr.804 = "0")		
6	_	Torque bias input (Pr.840 = "1, 2, or 3")	_		
9999	_	_	_		

-: No function

Parameters referred to


Advanced magnetic flux vector control page 102
Real sensorless vector control page 97
Pr.804 Torque command source selection page 143
Pr.810 Torque limit input method selection page 114

13.3 Response level of analog input and noise elimination

The response level and stability of frequency command / torque command using the analog input signal (terminal 2 or 4) can be adjusted.

Pr.	Name	Initial value	Setting range	Description
74 T002	Input filter time constant	1	0 to 8	Set the primary delay filter time constant to the analog input command. If the setting is too large, response becomes slow.
822 T003	Speed setting filter 1	ed setting filter 1 9999		Set the primary delay filter time constant to the external speed command (analog input command).
1003			9999	As set in Pr.74 .
826 T004	Torque setting filter 1	9999	0 to 5 s	Set the primary delay filter time constant to the external torque command (analog input command).
1004			9999	As set in Pr.74 .
832 T005	Speed setting filter 2	9999	0 to 5 s, 9999	Second function of Pr.822 (enabled when the RT signal is ON)
836 T006	Torque setting filter 2	9999	0 to 5 s, 9999	Second function of Pr.826 (enabled when the RT signal is ON)
849 T007	Analog input offset adjustment	100%	0% to 200%	Set offset for the analog speed input (terminal 2). The motor is prevented from rotating due to noise in the analog input or other factors when a zero speed command is given.

♦ Block diagram

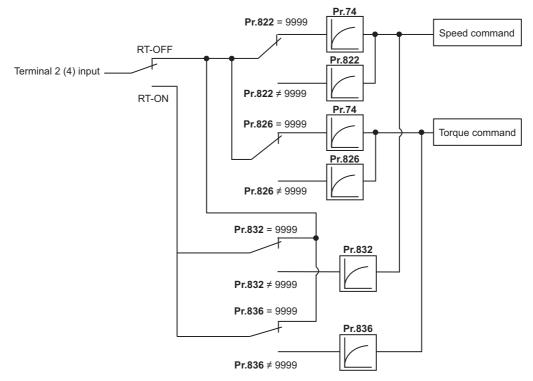

◆ Analog input time constant (Pr.74)

- · Use this parameter to eliminate noise on the frequency setting circuit.
- Increase the filter time constant if the operation is unstable due to noise or other factors.
 If the setting is too large, response becomes slow. (The time constant can be between 0 and 8, which are about 2 ms to 1 s.)

◆ Analog speed command input time constant (Pr.822, Pr.832)

- Use Pr.822 Speed setting filter 1 to set the primary delay filter time constant to the external speed command (analog input command). Increase the setting of the time constant to allow delays in follow-up of the speed command or when the analog input voltage is unstable.
- Use Pr.832 Speed setting filter 2 to change the time constant to use one inverter to switch operation between two or more
 motors.
- Pr.832 Speed setting filter 2 is enabled when the RT signal is ON.

Analog torque command input time constant (Pr.826, Pr.836)

- Use Pr.826 Torque setting filter 1 to set the primary delay filter time constant to the external torque command (analog input command). Increase the setting of the time constant to allow delays in follow-up of the torque command or when the analog input voltage is unstable.
- Use Pr.836 Torque setting filter 2 to change the time constant to use one inverter to switch operation between two or more motors.
- Pr.836 Torque setting filter 2 is enabled when the RT signal is ON.

Analog speed command input offset adjustment (Pr.849)

- Use this parameter to set a range in which the motor is stopped for prevention of incorrect motor operation in a very low speed rotation when the speed command is an analog input (voltage/current) via terminal 2.
- · Example) Voltage command given

The voltage range is offset according to the setting in **Pr.849 Analog input offset adjustment**, assuming that 100% corresponds to zero.


100% < **Pr.849** Positive side

100% > Pr.849 Negative side

The detailed calculation of the offset voltage is as follows:

Offset voltage [V] = Voltage at the time of 100% (5 V or 10 V^{*1}) × (**Pr.849** - 100) / 100

*1 It depends on the Pr.73 setting.

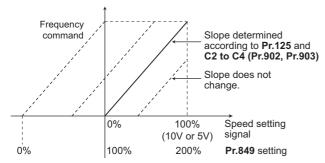



• The analog input filter is invalid (no filter) during PID control operation.

Parameters referred to

Pr.73 Analog input selection page 310

Pr.125, C2 to C4 (Pr.902, Pr.903) (bias and gain of the terminal 2 frequency setting) F page 318

13.4 Frequency setting voltage (current) bias and gain

The magnitude (slope) of the output frequency can be set as desired in relation to the frequency setting signal (0 to 5 VDC, 0 to 10 VDC, or 4 to 20 mA). Use **Pr.73 Analog input selection (Pr.267 Terminal 4 input selection)** and the voltage/current input selection switch to switch among input of 0 to 5 VDC, 0 to 10 V, and 0 to 20 mA. (Refer to page 310.)

Pr.	Name	Initial value*2		Setting		Description
PI.	Name	Gr.1	Gr.2	range	Description	
C2 (902) T200 ^{*1}	Terminal 2 frequency setting bias frequency	0 Hz		0 to 590 Hz	Set the bias frequency for the terminal 2 input.	
C3 (902) T201 ^{*1}	Terminal 2 frequency setting bias	0%		0% to 300%	Set the converted % of the bias voltage (current) for the termina 2 input.	
125 (903) T202 T022 ^{*1}	Terminal 2 frequency setting gain frequency	60 Hz	50 Hz	0 to 590 Hz	Hz Set the gain (maximum) frequency for the terminal 2 input.	
C4 (903) T203 ^{*1}	Terminal 2 frequency setting gain	100%		0% to 300%		
C5 (904) T400*1	Terminal 4 frequency setting bias frequency	0 Hz	0 to 590 Hz Set the bias frequency for the terminal 4 input.		for the terminal 4 input.	
C6 (904) T401 ^{*1}	Terminal 4 frequency setting bias	20%		0% to 300%	Set the converted % of the bias current (voltage) for the terminal 4 input.	
126 (905) T402 T042 ^{*1}	Terminal 4 frequency setting gain frequency	60 Hz	50 Hz	0 to 590 Hz	z Set the gain (maximum) frequency for the terminal 4 input.	
C7 (905) T403*1	Terminal 4 frequency setting gain	100%		0% to 300%	Set the converted % of the gain current (voltage) for the terminal 4 input.	
241	Analog input display unit	0		0	% display Select the unit for analog input display.	
M043	switchover	Ü		1	V/mA display	

^{*1} On the LCD operation panel used as the command source, the parameter number in parentheses appears instead of that starting with the letter C.

Relationship between the analog input terminal function and the calibration parameter

· Calibration parameter according to the terminal 4 function

Pr.858	Terminal function	Calibration parameter				
setting reminal function		Bias setting	Gain setting			
0 (initial value)	Frequency command	C5 (Pr.904) Terminal 4 frequency setting bias frequency C6 (Pr.904) Terminal 4 frequency setting bias	Pr.126 Terminal 4 frequency setting gain frequency C7 (Pr.905) Terminal 4 frequency setting gain			
4	Torque limit	C38 (Pr.932) Terminal 4 bias command (torque/magnetic flux) C39 (Pr.932) Terminal 4 bias (torque/magnetic flux)	C40 (Pr.933) Terminal 4 gain command (torque/magnetic flux) C41 (Pr.933) Terminal 4 gain (torque/magnetic flux)			
6	Torque bias input	C38 (Pr.932) Terminal 4 bias command (torque/magnetic flux), C39 (Pr.932) Terminal 4 bias (torque/magnetic flux)	C40 (Pr.933) Terminal 4 gain command (torque/magnetic flux) C41 (Pr.933) Terminal 4 gain (torque/magnetic flux)			
9999	No function	_	_			

◆ Changing the frequency for the maximum analog input (Pr.125, Pr.126)


• Use **Pr.125** (**Pr.126**) to change the frequency setting (gain) for the maximum analog input voltage (current). (**C2** (**Pr.902**) to **C7** (**Pr.905**) settings need not be changed.)


◆ Analog input bias/gain calibration (C2 (Pr.902) to C7 (Pr.905))

- The "bias" and "gain" functions serve to adjust the relationship between a setting input signal and the output frequency. A
 setting input signal is such as a 0 to 5 VDC, 0 to 10 VDC, or 4 to 20 mADC signal externally input to set the output
 frequency.
- Set the bias frequency of the terminal 2 input using C2 (Pr.902). (It is initially set to the frequency at 0 V.)

^{*2} Gr.1 and Gr.2 are the parameter initial value groups. (Refer to page 52).

- Use Pr.125 to set the output frequency to the frequency command voltage (current) set by Pr.73 Analog input selection.
- Set the bias frequency of the terminal 4 input using C5 (Pr.904). (It is initially set to the frequency at 4 mA.)
- · Use Pr.126 to set the output frequency to the 20 mA input of the frequency command current (4 to 20 mA).

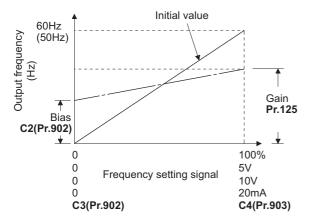

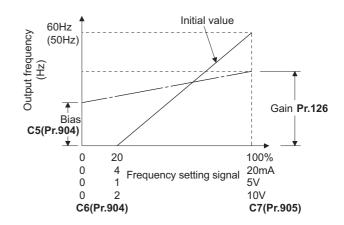

· There are three methods to adjust the bias/gain frequency setting voltage (current).

Adjustment by applying voltage (current) between terminals 2 and 5 (4 and 5) to set the voltage (current) at the bias/gain frequency. page 320

Adjustment by selecting the voltage (current) at the bias/gain frequency without applying voltage (current) between terminals 2 and 5 (4 and 5). Figure 321

Adjustment by changing the frequency without adjusting the voltage (current). Frage 322



• Always calibrate the input after changing the voltage/current input signal with **Pr.73** (**Pr.267**) and the voltage/current input selection switch.

♦ Display unit changing for analog input (Pr.241)

- The analog input display unit (%/V/mA) can be changed for analog input bias/gain calibration.
- Depending on the terminal input specification setting of Pr.73 (Pr.267) and the voltage/current input switch, the unit of the displayed value of C3 (Pr.902), C4 (Pr.903), C6 (Pr.904) and C7 (Pr.905) changes as shown below:

Analog command (via terminal 2 or 4) (depending on the settings of Pr.73 (Pr.267) and the voltage/current input selection switch)	Pr.241 = "0 (initial value)"	Pr.241 = "1"
0 to 5 V input	0% to 100% (0.1%)	0 to 5 V (0.01 V)
0 to 10 V input	0% to 100% (0.1%)	0 to 10 V (0.01 V)
0 to 20 mA input	0% to 100% (0.1%)	0 to 20 mA (0.01 mA)

◆ Frequency setting voltage (current) bias/gain adjustment method

■ Adjustment by applying voltage (current) between terminals 2 and 5 (4 and 5) to set the voltage (current) at the bias/gain frequency (Example of adjustment at the gain frequency)

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- **2.** Changing the operation mode

 Press the PU/EXT key to choose the PU operation mode. The PU LED turns ON.
- **3.** Selecting the parameter setting mode

 Press the MODE key to choose the parameter setting mode. (The parameter number read previously appears.)
- **4.** Calibration parameter selection

 Turn the setting dial or press the UP/DOWN key until "C..." appears. Press the SET key to display "C---".
- 5. Selecting a parameter

 Turn the setting dial or press the UP/DOWN key until "C4" (C4 (Pr.903) Terminal 2 frequency setting gain) appears for terminal 2, or "C7" (C7 (Pr.905) Terminal 4 frequency setting gain) for terminal 4.
- **6.** Analog voltage (current) display
 Press the SET key to display the analog voltage (current) value (%) currently applied to terminal 2 (terminal 4).
 Do not touch the setting dial and UP/DOWN key until calibration is completed.
- **7.** Voltage (current) application
 Apply a 5 V (20 mA). (Turn the external potentiometer connected between terminals 2 and 5 (terminals 4 and 5) to a desired position.)
- **8.** Setting completed

 Press the SET key to confirm the setting. The analog voltage (current) value (%) blinks when it is applied.
- Turn the setting dial or press the UP/DOWN key to read another parameter.
- Press the SET key to return to the "C---" display.
- · Press the SET key twice to show the next parameter.

■ Adjustment by selecting the voltage (current) at the bias/gain frequency without applying voltage (current) between terminals 2 and 5 (4 and 5) (Example of adjustment at the gain frequency)

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- **2.** Changing the operation mode

 Press the PU/EXT key to choose the PU operation mode. The PU LED turns ON.
- **3.** Selecting the parameter setting mode

 Press the MODE key to choose the parameter setting mode. (The parameter number read previously appears.)
- **4.** Calibration parameter selection

 Turn the setting dial or press the UP/DOWN key until "C..." appears. Press the SET key to display "C---".
- 5. Selecting a parameter

 Turn the setting dial or press the UP/DOWN key until "C4" (C4 (Pr.903) Terminal 2 frequency setting gain) appears for terminal 2, or "C7" (C7 (Pr.905) Terminal 4 frequency setting gain) for terminal 4.
- **6.** Analog voltage (current) display

 Press the SET key to display the analog voltage (current) value (%) currently applied to terminal 2 (terminal 4).
- 7. Analog voltage (current) adjustment
 After the setting dial is turned or the UP/DOWN key is pressed, the gain voltage (current) value (%) currently set to the parameter appears.
 Turn the setting dial or press the UP/DOWN key until the gain voltage (current) to be adjusted appears.
- **8.** Setting completed Press the SET key to confirm the setting. The analog voltage (current) value (%) blinks when it is applied.
- Turn the setting dial or press the UP/DOWN key to read another parameter.
- Press the SET key to return to the "C---" display.
- · Press the SET key twice to show the next parameter.

NOTE

• The present frequency setting bias/gain setting can be checked by pressing the setting dial or pressing the UP/DOWN key one time after step 6. The setting cannot be checked after step 7.

■ Adjustment by changing the frequency without adjusting the voltage (current) (Example of changing the gain frequency from 60 Hz to 50 Hz)

Operating procedure

1. Selecting the parameter

Turn the setting dial or press the UP/DOWN key until "P.125" (**Pr.125**) appears for terminal 2, or "P.126" (**Pr.126**) for terminal 4.

Press the SET key to show the present set value. (60.00 Hz)

2. Changing the maximum frequency

Turn the setting dial or press the UP/DOWN key to change the value to "50.00". (50.00 Hz)

Press the SET key to confirm the setting. "50.00" blinks.

3. Selecting the mode and the monitor item

Press the MODE key three times to select the monitor mode and to monitor a frequency.

4. Start

Turn ON the start switch (STF/STR signal), and turn the frequency setting potentiometer clockwise slowly to full. (Refer to steps 2 and 3 in page 36.)

The motor is operated at 50 Hz.

• NOTE

- If the frequency meter (display meter) connected to terminal FM or terminal AM of the standard model does not indicate exactly 60 Hz, set the calibration parameter C0 or C1. (Refer to page 283.)
- If the voltage (current) values at the gain and bias frequencies are too close to each other, an error "Er3" may be indicated.
- Changing C4 (Pr.903) or C7 (Pr.905) (gain adjustment) will not change Pr.20.
- To set the value to 120 Hz or higher, the **Pr.18 High speed maximum frequency** needs to be 120 Hz or higher. (Refer to page 253.)
- Use the calibration parameter C2 (Pr.902) or C5 (Pr.904) to set the bias frequency. (Refer to page 318.)

• Be cautious when setting any value other than "0" as the bias frequency at 0 V (0 mA). Even if a speed command is not given, simply turning ON the start signal will start the motor at the preset frequency.

Parameters referred to

Pr.1 Maximum frequency, Pr.18 High speed maximum frequency \$\sigma \text{page 253}\$ Pr.20 Acceleration/deceleration reference frequency \$\sigma \text{page 196}\$

Pr.73 Analog input selection, Pr.267 Terminal 4 input selection page 310

Pr.79 Operation mode selection page 212

Pr.858 Terminal 4 function assignment F page 315

13.5 Torque (magnetic flux) setting current (voltage) bias and gain

Sensorless Vector PM

The magnitude (slope) of the torque can be set as desired in relation to the torque setting signal (0 to 5 VDC, 0 to 10 VDC, or 0 to 20 mA).

Use Pr.267 Terminal 4 input selection to switch among input 0 to 5 VDC, 0 to 10 VDC, and 0 to 20 mA. (Refer to page 310.)

Pr.	Name	Initial value	Setting range		Description
C38 (932) T410 ^{*1}	Terminal 4 bias command (torque/ magnetic flux)	0%	0% to 400%	Set the bias torque (magnetic flux) for the terminal 4 input.	
C39 (932) T411 ^{*1}	Terminal 4 bias (torque/magnetic flux)	0%	0% to 300%	Set the converted % of the bias current (voltage) for the terminal 4 input.	
C40 (933) T412 ^{*1}	Terminal 4 gain command (torque/ magnetic flux)	150%	0% to 400%	Set the gain (maximum) torque (magnetic flux) for the terminal 4 input.	
C41 (933) T413 ^{*1}	Terminal 4 gain (torque/magnetic flux)	100%	0% to 300%	Set the converted % of the gain current (voltage) for the terminal 4 input.	
241	Analog input display unit	0	0	% display	Select the unit for analog input
M043	switchover		1	V/mA display	display.

^{*1} On the LCD operation panel used as the command source, the parameter number in parentheses appears instead of that starting with the letter C.

Changing the function of analog input terminal

• In the initial setting, terminal 4 is used for analog input of the speed command (speed limit). To use the analog input terminal to input the torque command, torque limit, or magnetic flux command, set **Pr.858 Terminal 4 function assignment** to change the function. (Refer to page 315.)

Relationship between the analog input terminal function and the calibration parameter

· Calibration parameter according to the terminal 4 function

Pr.858	Terminal function	Calibration	n parameter	
setting	Terminal function	Bias setting	Gain setting	
0 (initial value)	Frequency (speed) command / speed limit	C5 (Pr.904) Terminal 4 frequency setting bias frequency C6 (Pr.904) Terminal 4 frequency setting bias	Pr.126 Terminal 4 frequency setting gain frequency C7 (Pr.905) Terminal 4 frequency setting gain	
4	Torque limit	C38 (Pr.932) Terminal 4 bias command (torque/magnetic flux) C39 (Pr.932) Terminal 4 bias (torque/ magnetic flux)	C40 (Pr.933) Terminal 4 gain command (torque/magnetic flux) C41 (Pr.933) Terminal 4 gain (torque/ magnetic flux)	
6	Torque bias input	C38 (Pr.932) Terminal 4 bias command (torque/magnetic flux), C39 (Pr.932) Terminal 4 bias (torque/magnetic flux)	C40 (Pr.933) Terminal 4 gain command (torque/magnetic flux) C41 (Pr.933) Terminal 4 gain (torque/magnetic flux)	
9999	No function	_	_	


◆ Changing the torque for the maximum analog input (C40 (Pr.933))

• Use C40 (Pr.933) to change the torque setting (gain) for the maximum analog input current (voltage).

◆ Analog input bias/gain calibration (C38 (Pr.932) to C41 (Pr.933))

- The "bias"/"gain" function can adjust the relation between the torque and the torque limit setting input signal. Examples of setting input signals are 0 to 5 VDC, 0 to 10 VDC, or 0 to 20 mADC, and they are externally input.
- Set the bias torque of the terminal 4 input using C38 (Pr.932). (The initial value is the torque for 0 mA.)

• Use C40 (Pr.933) to set the torque to the 20 mA input of the torque command current (0 to 20 mA).

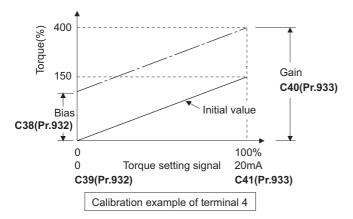

There are three methods to adjust the bias/gain for torque setting current (voltage).
 Adjustment by applying current (voltage) between terminals 4 and 5 to set the current (voltage) at the bias/gain torque.
 page 325

Adjustment by selecting the current (voltage) at the bias/gain torque without applying current (voltage) between terminals 4 and 5. Figure 326

Adjustment by changing the torque without adjusting the current (voltage). Frage 327



 Always calibrate the input after changing the voltage/current input signal with Pr.267 and the voltage/current input selection switch.

◆ Display unit changing for analog input (Pr.241)

- The analog input display unit (%/V/mA) can be changed for analog input bias/gain calibration.
- Depending on the terminal input specification setting of **Pr.73** (**Pr.267**), the units of the displayed values of **C39** (**Pr.932**) and **C41** (**Pr.933**) change as shown below:

Analog command (via terminal 4) (depending on the Pr.267 setting)	Pr.241 = "0" (initial value)	Pr.241 = "1"	
0 to 5 V input	0% to 100% (0.1%)	0 to 5 V (0.01 V)	
0 to 10 V input	0% to 100% (0.1%)	0 to 10 V (0.01 V)	
0 to 20 mA input	0% to 100% (0.1%)	0 to 20 mA (0.01 mA)	

◆ Torque setting current (voltage) bias/gain adjustment method

■ Adjustment by applying current (voltage) between terminals 4 and 5 to set the current (voltage) at the bias/gain torque

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- **2.** Changing the operation mode

 Press the PU/EXT key to choose the PU operation mode. The PU LED turns ON.
- **3.** Selecting the parameter setting mode

 Press the MODE key to choose the parameter setting mode. (The parameter number read previously appears.)
- **4.** Calibration parameter selection

 Turn the setting dial or press the UP/DOWN key until "C..." appears. Press the SET key to display "C---".
- 5. Selecting a parameter
 Turn the setting dial or press the UP/DOWN key until "C41" (C41 (Pr.933) Terminal 4 gain (torque/magnetic flux))
 appears.
- **6.** Displaying analog current (voltage) value

 Press the SET key to display the analog current (voltage) value (%) currently applied to terminal 4.

 Do not touch the setting dial and UP/DOWN key until calibration is completed.
- **7.** Applying current (voltage)
 Apply a 20 mA (5 V). (Turn the external potentiometer connected between terminals 4 and 5 to a desired position.)
- **8.** Setting completed

 Press the SET key to confirm the setting. The analog current (voltage) value (%) blinks when it is applied.
- · Turn the setting dial or press the UP/DOWN key to read another parameter.
- Press the SET key to return to the "C---" display.
- Press the SET key twice to show the next parameter.

■ Adjustment by selecting the current (voltage) at the bias/gain torque without applying current (voltage) between terminals 4 and 5

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- **2.** Changing the operation mode

 Press the PU/EXT key to choose the PU operation mode. The PU LED turns ON.
- 3. Selecting the parameter setting mode

 Press the MODE key to choose the parameter setting mode. (The parameter number read previously appears.)
- **4.** Calibration parameter selection

 Turn the setting dial or press the UP/DOWN key until "C..." appears. Press the SET key to display "C---".
- 5. Selecting a parameter

 Turn the setting dial or press the UP/DOWN key until "C41" (C41 (Pr.933) Terminal 4 gain (torque/magnetic flux)) appears.
- **6.** Displaying analog current (voltage) value

 Press the SET key to display the analog current (voltage) value (%) currently applied to terminal 4.
- 7. Analog current (voltage) adjustment After the setting dial is turned or the UP/DOWN key is pressed, the gain current (voltage) value (%) currently set to the parameter appears. Turn the setting dial or press the UP/DOWN key until the gain current (voltage) to be adjusted appears.
- **8.** Setting completed

 Press the SET key to confirm the setting. The analog current (voltage) value (%) blinks when it is applied.
- Turn the setting dial or press the UP/DOWN key to read another parameter.
- Press the SET key to return to the "C---" display.
- Press the SET key twice to show the next parameter.



• The present torque setting bias/gain setting can be checked by pressing the setting dial or pressing the UP/DOWN key one time after step 6. The setting cannot be checked after step 7.

■ Adjustment by changing the torque without adjusting the current (voltage) (Example of changing the gain torque from 150% to 130%)

Operating procedure

1. Selecting the parameter

Turn the setting dial or press the UP/DOWN key until "C40" (Pr.933) appears.

Press the SET key to show the present set value. (150.0%)

2. Torque setting change

Turn the setting dial or press the UP/DOWN key to change the value to "130.0". (130.0%) Press the SET key to confirm the setting. "130.0" blinks.

3. Selecting the mode and the monitor item

Press the MODE key three times to select the monitor mode and to monitor a frequency.

4. Start

Turn ON the start switch (STF or STR) to apply a voltage across terminals 4 and 5. Operation is performed with 130% torque.

NOTE

- If the current (voltage) values at the gain and bias torques are too close to each other, an error ("Er3") may be indicated.
- Use the calibration parameter C38 (Pr.932) to set the bias torque. (Refer to page 323.)

^CAUTION

• When setting a value other than "0" as the bias torque, note that simply turning ON the start signal will supply torque to the motor even if a torque command is not given.

Parameters referred to

Pr.20 Acceleration/deceleration reference frequency page 196
Pr.267 Terminal 4 input selection page 310
Pr.79 Operation mode selection page 212
Pr.858 Terminal 4 function assignment page 315

13.6 Input terminal function selection

Use the following parameters to select or change the input terminal functions.

Pr.	Name	Initial value	Initial signal	Setting range		
178 T700	STF/DI0 terminal function selection 60		STF (Forward rotation command)	0 to 5, 7, 8, 10, 12 to 16, 18, 23 to 27, 30, 37, 42, 43, 46, 47, 50, 51, 60, 62, 65 to 67, 72, 74, 92, 9999		
179 T701	STR/DI1 terminal function selection	61	STR (Reverse rotation command)	0 to 5, 7, 8, 10, 12 to 16, 18, 23 to 27, 30, 37, 42, 43, 46, 47, 50, 51, 61, 62, 65 to 67, 72, 74, 92, 9999		
180 T702	RL terminal function selection	0	RL (Low-speed operation command)			
181 T703	RM terminal function selection	1	RM (Middle-speed operation command)			
182 T704	RH terminal function selection	2	RH (High-speed operation command)	0 to 5, 7, 8, 10, 12 to 16, 18, 23 to 27, 30, 37, 42, 43, 46, 47, 50, 51, 62, 65 to 67, 72, 74, 92,		
183 T709	MRS terminal function selection	24	MRS (Output stop)	9999*3		
184	RES terminal	62 ^{*1}	RES (Inverter reset)			
T711	function selection	9999 ^{*2}	No function			
185 T751	NET X1 input selection	9999	No function			
186 T752	NET X2 input selection	9999	No function			
187 T753	NET X3 input selection	9999	No function	0 to 4, 8, 13 to 15, 18, 23, 24, 26, 27, 30, 37, 42, 43, 46, 47, 50, 51, 72, 74, 92, 9999		
188 T754	NET X4 input selection	9999	No function			
189 T755	NET X5 input selection	9999	No function			

Pr.	Name	Initial value	Setting range	Description
699	Input terminal filter	9999	5 to 50 ms	Set the time delay for the input terminal response.
T740	T740	3333	9999	No filter for the input terminal

^{*1} The initial value is for standard models.

♦ Input terminal function assignment

- Signals can be input to the inverter by using physical terminals (except for the FR-E800-SCE) or via communication.
- Use the following parameters to assign functions to input terminals. Check the terminal available for each parameter.

Pr.	Terminal	External inpu	Input via		
FI.	name	FR-E800 FR-E800-		FR-E800-SCE	communication*1
178	STF/DI0	∘ (STF)	∘ (DI0)	_	Forward rotation command only
179	STR/DI1 ○ (STR) ○ (DI1) —		_	Reverse rotation command only	
180	RL	0	_	_	0
181	RM	0	_	_	0
182	RH	0	_	_	0
183	MRS	0	_	_	0
184	RES	0	_	_	0
185	NET X1	_	_	_	0
186	NET X2	_	_	_	0
187	NET X3	_	_	_	0
188	NET X4	_	_	_	0
189	NET X5	_	_	_	0

o: Assignment/input available, —: Assignment/input unavailable (no function)

^{*2} The initial value is for the Ethernet model and the safety communication model.

^{*3} The setting range differs depending on the model. For more information, refer to the parameters available for each signal.

*1 The communication protocol affects which terminals can be used. For details, refer to the Instruction Manual (Communication) or the Instruction Manual of each communication option.

♦ Input signal list

• Refer to the following table and set the parameters.

Setting	Signal name	Functio	Related parameter	Refer to page		
		Pr.59 = "0" (initial value)	ow-speed operation command	Pr.4 to Pr.6, Pr.24 to Pr.27, Pr.232 to Pr.239	234	
0	RL	Pr.59 ≠ "0"*1 Re	emote setting (setting clear)	Pr.59	203	
		Pr.270 = "1, 11"*2 Sto	op-on-contact selection 0	Pr.270, Pr.275, Pr.276	375	
1	RM	Pr.59 = "0" (initial value)	iddle-speed operation	Pr.4 to Pr.6, Pr.24 to Pr.27, Pr.232 to Pr.239	234	
•	TXIVI	Pr.59 ≠ "0"*1 Re	emote setting (deceleration)	Pr.59	203	
2	RH	Pr.59 = "0" (initial value)	gh-speed operation command	Pr.4 to Pr.6, Pr.24 to Pr.27, Pr.232 to Pr.239	234	
		Pr.59 ≠ "0" ^{*1} Re	emote setting (acceleration)	Pr.59	203	
3	RT	Second function selection		Pr.44 to Pr.48, Pr.51, Pr.450 to Pr.463, Pr.569, Pr.832, Pr.836, etc.	334	
		Pr.270 = "1, 11"*2	op-on-contact selection 1	Pr.270, Pr.275, Pr.276	375	
4	AU	Terminal 4 input selection		Pr.267	310	
5	JOG	Jog operation selection		Pr.15, Pr.16	232	
7	ОН	External thermal relay input*3		Pr.9	238	
8	REX	15-speed selection (Combination with RH)	h multi-speeds of RL, RM, and	Pr.4 to Pr.6, Pr.24 to Pr.27, Pr.232 to Pr.239	234	
10	X10	Inverter run enable (FR-XC/FR-HC2	/FR-CV connection)	Pr.17, Pr.30, Pr.70	442	
12	X12	PU operation external interlock		Pr.79	212	
13	X13	External DC injection brake operation	n start	Pr.10 to Pr.12	434	
14	X14	PID control valid	Pr.127 to Pr.134, Pr.575 to Pr.577	380		
15	BRI	Brake opening completion	Pr.278 to Pr.285	370		
16	X16	PU/External operation switchover (Ex	Pr.79, Pr.340	212 97		
18	X18	,	V/F switchover (V/F control with X18-ON)			
23	LX	Pre-excitation		Pr.850	434	
24	MRS	Output stop		Pr.17	332	
25	STP (STOP)	Start self-holding selection		Pr.250	336	
26	MC	Control mode switchover		Pr.800	97	
27	TL	Torque limit selection		Pr.815	114	
30	JOG2	Tuesday function colortion		Pr.15, Pr.16	232	
37 12	X37 X42	Traverse function selection Torque bias selection 1		Pr.592 to Pr.597 Pr.840 to Pr.845	378 126	
+2 13	X42 X43	Torque bias selection 2		Pr.840 to Pr.845	126	
+3 16	TRG	Trace trigger input		Pr.1020 to Pr.1047	418	
1 7	TRC	Trace sampling start/end		Pr.1020 to Pr.1047	418	
50	SQ	Sequence start		Pr.414	414	
51	X51	Fault clear		Pr.414	414	
60	STF	Forward rotation command (assignal (Pr.178) only)	ble to the STF terminal	Pr.250	336	
61	STR	Reverse rotation command (assigna (Pr.179) only)	ble to the STR terminal	Pr.250	336	
62	RES	Inverter reset	Pr.75	161		
35	X65	PU/NET operation switchover (PU o	peration with X65-ON)	Pr.79, Pr.340	212	
66	X66	External/NET operation switchover (NET operation with X66-ON)	Pr.79, Pr.340	212	
67	X67	Command source switchover (commenabled with X67-ON)	nand by Pr.338 or Pr.339	Pr.338, Pr.339	223	
72	X72	PID P control switchover		Pr.127 to Pr.134, Pr.575 to Pr.577	380	
74	X74	Magnetic flux decay output shutoff		Pr.850	434	
92	X92	Emergency stop		Pr.1103	196	

Setting	Signal name	Function	Related parameter	Refer to page
9999	-	No function	_	_

- *1 When Pr.59 Remote function selection ≠ "0", functions of the RL, RM, and RH signals are changed as shown in the table.
- *2 When Pr.270 Stop-on-contact control selection = "1 or 11", functions of the RL and RT signals are changed as shown in the table.
- *3 The OH signal is activated when the relay contact is open.



- The same function can be assigned to two or more terminals. In this case, the logic of terminal input is OR.
- The priorities of the speed commands are defined as follows: JOG > multi-speed setting (RH, RM, RL, REX) > PID (X14).
- When the Inverter run enable (X10) signal is not assigned, or when the PU operation external interlock (X12) signal is not assigned while **Pr.79 Operation mode selection** = "7", the MRS signal performs the same function.
- The same terminals are used to assign the multi-speed (7-speed) setting and the remote setting. The multi-speed setting and the remote setting cannot be assigned separately.
- When the terminal assignment is changed using **Pr.178 to Pr.189 (Input terminal function selection)**, wiring may be mistaken due to different terminal name and signal contents, or may affect other functions. Set parameters after confirming the function of each terminal.

Parameters available for each signal

· The following table shows the parameters to which the signals are assigned.


Setting	Signal	FR-E800			FR-E800-E			FR-E800- SCE	
value	value name	Pr.178	Pr.179	Pr.180 to Pr.184	Pr.185 to Pr.189	Pr.178	Pr.179	Pr.180 to Pr.189	Pr.180 to Pr.189
0	RL	0	0	0	0	0	0	0	0
1	RM	0	0	0	0	0	0	0	0
2	RH	0	0	0	0	0	0	0	0
3	RT	0	0	0	0	0	0	0	0
4	AU	0	0	0	0	0	0	0	0
5	JOG	0	0	0	_	0	0	_	_
7	ОН	0	0	0	_	0	0	_	_
8	REX	0	0	0	0	0	0	0	0
10	X10	0	0	0	_	0	0	_	_
12	X12	0	0	0	_	0	0	_	_
13	X13	0	0	0	0	0	0	0	0
14	X14	0	0	0	0	0	0	0	0
15	BRI	0	0	0	0	0	0	0	0
16	X16	0	0	0	_	0	0	_	_
18	X18	0	0	0	0	0	0	0	0
23	LX	0	0	0	0	0	0	0	0
24	MRS	0	0	0	0	0	0	0	0
25	STP (STOP)	0	0	0	_	0	0	_	_
26	MC	0	0	0	0	0	0	0	0
27	TL	0	0	0	0	0	0	0	0
30	JOG	0	0	0	0	0	0	0	0
37	X37	0	0	0	0	0	0	0	0
42	X42	0	0	0	0	0	0	0	0
43	X43	0	0	0	0	0	0	0	0
46	TRG	0	0	0	0	0	0	0	0
47	TRC	0	0	0	0	0	0	0	0
50	SQ	0	0	0	0	0	0	0	0
51	X51	0	0	0	0	0	0	0	0
60	STF	0	_	_	_	0	_	_	_
61	STR	_	0	_	_	_	0	_	_
62	RES	0	0	0	_	0	0	_	_
65	X65	0	0	0	_	0	0	_	_
66	X66	0	0	0	_	0	0	_	_
67	X67	0	0	0	_	0	0	_	_
72	X72	0	0	0	0	0	0	0	0

Setting	Signal		ı	FR-E800		FR-E800-E			FR-E800- SCE
value	value name	Pr.178	Pr.179	Pr.180 to Pr.184	Pr.185 to Pr.189	Pr.178	Pr.179	Pr.180 to Pr.189	Pr.180 to Pr.189
74	X74	0	0	0	0	0	0	0	0
92	X92	0	0	0	0	0	0	0	0
9999	No function	0	0	0	0	0	0	0	0

o: Assignment available, -: Assignment unavailable (no function)

♦ Adjusting the response of input terminals (Pr.699)

• Response of the input terminals (physical terminals) can be delayed in a range between 5 to 50 ms. (The following is the operation example of the STF signal.)

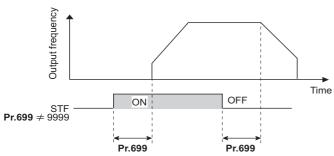

NOTE

- The Pr.699 setting is invalid (no filter) for the following signals.
 - Input signals which are already in the ON state when the power is turned ON
 - Input signals used for the PLC function
 - Output stop (MRS) signal


13.7 Inverter output shutoff

The inverter output can be shut off with the MRS signal. The logic of the MRS signal can also be selected.

Pr.	Nama	Name Initial value Setting range		Desci	iption	
FI.	Name			MRS signal input	X10 signal input ^{*1}	
			0		Normally open input	
		1		Normally open input	Normally closed input (NC contact input specification)	
			2	Normally closed input (NC	Normally open input	
17 T720	MRS/X10 terminal input selection	0	3	contact input specification)	Normally closed input (NC contact input specification)	
			4	External terminal: Normally	Normally open input	
			5	closed input (NC contact input specification) Communication: Normally open input	Normally closed input (NC contact input specification)	

^{*1} Refer to page 442 for the details of the X10 signal.

◆ Output shutoff signal (MRS signal)

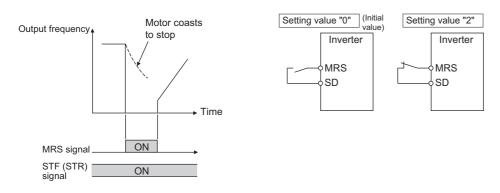

- When the Output stop (MRS) signal is turned ON while operating the inverter, the inverter output is instantaneously shut
 off.
- To input the MRS signal, set "24" in any parameter from **Pr.178 to Pr.189 (Input terminal function selection)** to assign the function.
- The response time of the MRS signal is within 2 ms (except for the FR-E800-SCE).
- · The MRS signal is used in the following cases.

Application	Description
To stop the motor using a mechanical brake (e.g. electromagnetic brake)	The inverter output is shut off when the mechanical brake operates.
To provide interlock to disable the motor operation by the inverter	With the MRS signal ON, the motor cannot be driven by the inverter even if the start signal is input to the inverter.
To coast the motor to a stop	When the start signal is turned OFF, the inverter decelerates the motor to a stop in the preset deceleration time, but when the MRS signal is turned ON, the motor coasts to a stop.

◆ MRS signal logic inversion (Pr.17 = "2")

• When **Pr.17** = "2 or 3", the input specification of the MRS signal is changed to normally closed (NC contact). The inverter will shut off the output when the MRS signal is turned OFF (when the contact is opened).

◆ Assigning a different action for each MRS signal input via communication and external terminal (Pr.17 = "4 or 5")

• When **Pr.17** = "4 or 5", the MRS signal input from an external terminal is normally closed (NC contact), and the MRS signal input from communication is normally open (NO contact). This function is useful to perform operation via communication while keeping the ON state of the MRS signal input from the external terminal.

External MRS	Communication MRS	Pr.17 setting				
LAternal Willo	Communication wiks	0, 1	2, 3	4, 5		
OFF	OFF	Operation enabled	Output shutoff	Output shutoff		
OFF	ON	Output shutoff	Output shutoff	Output shutoff		
ON	OFF	Output shutoff	Output shutoff	Operation enabled		
ON	ON	Output shutoff	Operation enabled	Output shutoff		

◆ Operation when PU operation interlock enabled (Pr.79 = "7")

- When the X12 signal is not assigned to any input terminal while the PU operation interlock is enabled (**Pr.79** = "7"), the MRS signal is used as the X12 signal. The logic for the MRS signal used as the X12 signal is changed by the **Pr.17** setting.
- The operation when the PU operation interlock is enabled (Pr.79 = "7") is as follows.

Pr.17 setting	MRS signal	X12 signal	MRS function	X12 function
	Assigned	Not assigned	PU operation interlock (NO contact)	—
0, 1	Not assigned	Assigned	_	PU operation interlock (NO contact)
	Assigned	Assigned	Output shutoff (NO contact)	PO operation interiock (NO contact)
	Assigned	Not assigned	PU operation interlock (NC contact)	—
2 to 5	Not assigned	Assigned	— DLI apparation interlock (N	
	Assigned	Assigned	Output shutoff (NC contact)	PU operation interlock (NO contact)

NOTE

- · When using an external terminal to input the MRS signal, the MRS signal shuts off the output in any of the operation modes.
- The MRS signal is valid regardless of whether it is input through the external terminal or via network (except for the FR-E800-SCE), but when the MRS signal is used as the Inverter run enable (X10) signal, input the signal through the external terminal.
- When the terminal assignment is changed using Pr.178 to Pr.189 (Input terminal function selection), wiring may be
 mistaken due to different terminal name and signal contents, or may affect other functions. Set parameters after confirming
 the function of each terminal.

Parameters referred to

Pr.79 Operation mode selection page 212

Pr.178 to Pr.189 (Input terminal function selection) page 328


13.8 Selecting the condition to activate the Second function selection (RT) signal

The second function can be selected using the RT signal.

- Turning ON the Second function selection (RT) signal enables the second functions. For the RT signal, set "3" in any parameter from **Pr.178 to Pr.189 (Input terminal function selection)** to assign the function.
- The following are the examples of the applications of the second functions.
 - Switching between regular use and emergency use
 - Switching between heavy load and light load
 - Changing the acceleration/deceleration time by break point acceleration/deceleration
 - Switching characteristics of main motor and sub motor

Connection diagram example for the second function

Example of the second acceleration/deceleration time

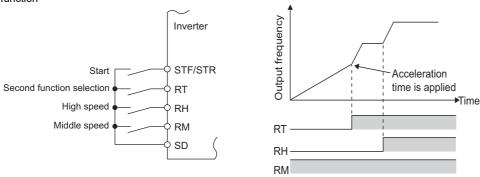

• When the RT signal is ON, second functions are selected. The following table shows the functions which can be changed to the second function.

Function	First function parameter number	Second function parameter number	Refer to page
Torque boost	Pr.0	Pr.46	426
Base frequency	Pr.3	Pr.47	428
Acceleration time	Pr.7	Pr.44	196
Deceleration time	Pr.8	Pr.44, Pr.45	196
Electronic thermal O/L relay	Pr.9	Pr.51	
Free thermal	Pr.600 to Pr.604	Pr.692 to Pr.696	238
Motor permissible load level*1	Pr.607	Pr.608	
Stall prevention	Pr.22	Pr.48	256
Applied motor *1	Pr.71	Pr.450	340
Motor constant*1	Pr.80 to Pr.84, Pr.90 to Pr.94, Pr.298, Pr.702, Pr.706, Pr.707, Pr.711, Pr.712, Pr.717, Pr.721, Pr.724, Pr.725, Pr.859, Pr.1412	Pr.453 to Pr.462, Pr.560, Pr.738 to Pr.746, Pr.860, Pr.1413	345, 355
Speed control gain (Advanced magnetic flux vector)*1	Pr.89	Pr.569	102
Offline auto tuning ^{*1}	Pr.96	Pr.463	345, 355
Online auto tuning*1	Pr.95	Pr.574	362
Motor control method *1	Pr.800	Pr.451	97
Speed control gain	Pr.820, Pr.821	Pr.830, Pr.831	121
Analog input filter	Pr.822, Pr.826	Pr.832, Pr.836	316
Speed detection filter	Pr.823	Pr.833	154
Torque control gain	Pr.824, Pr.825	Pr.834, Pr.835	149

^{*1} The function can be changed by switching the RT signal ON/OFF while the inverter is stopped. If a signal is switched during operation, the operation method changes after the inverter stops. (**Pr.450** ≠ 9999)



• Changing the terminal assignment using **Pr.178 to Pr.189 (Input terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.178 to Pr.189 (Input terminal function selection) F page 328

13.9 Start signal operation selection

Operation of the start signal (STF/STR) can be selected.


Select the stopping method (deceleration stop or coasting) at turn-OFF of the start signal.


Use this function to stop a motor with a mechanical brake at turn-OFF of the start signal.


				Des	scription		
Pr.	Name	Initial value	Initial value Setting range Start signal (STF/STR)		Stop operation (Refer to page 440.)		
			0 to 100 s	STF signal: Forward rotation start STR signal: Reverse rotation start	Ü		
250 G106	Stop selection	9999	1000 to 1100 s	STF signal: Start signal STR signal: Forward/reverse rotation signal	is turned OFF. When set to 1000 to 1100 s, the motor will coast to stop after the time period calculated by subtracting 1000 s from the time set in Pr.250 .		
			9999	STF signal: Forward rotation start STR signal: Reverse rotation start	The motor is decelerated to a stop		
			8888	STF signal: Start signal STR signal: Forward/reverse rotation signal	when the start signal is turned OFF.		

◆ 2-wire type (STF signal, STR signal)

 - The following figure shows the 2-wire type connection.
- As an initial setting, the forward/reverse rotation signals (STF/STR) acts as both start and stop signals. Either one turned
 ON will be enabled, and the operation will follow that signal. The motor will decelerate to a stop when both are turned OFF
 (or both are turned ON) during the operation.
- The frequency can be set by inputting 0 to 10 VDC between the speed setting input terminals 2 and 5, or with **Pr.4 to Pr.6**Multi-speed setting (high speed, middle speed, and low speed). (For the multi-speed operation, refer to page 234.)
- By setting **Pr.250** = "1000 to 1100, 8888", the STF signal input becomes the start command and the STR signal input becomes the forward/reverse command.

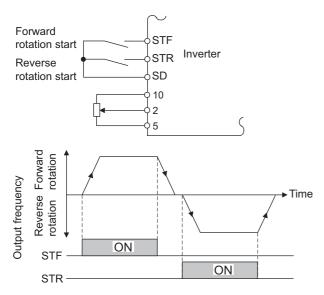



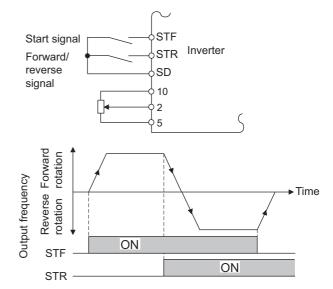


2-wire type connection example (Pr.250 = "8888")

• NOTE

- By setting **Pr.250** = "0 to 100, 1000 to 1100", the motor will coast to a stop when the start command is turned OFF. (Refer to page 440.)
- The STF and STR signals are assigned to Pr.178 STF/DI0 terminal function selection and Pr.179 STR/DI1 terminal function selection in the initial status. The STF signal can be assigned to only Pr.178 STF/DI0 terminal function selection, and the STR signal can be assigned to only Pr.179 STR/DI1 terminal function selection.

▶ 3-wire type (STF signal, STR signal, STP (STOP) signal)

- The following figure shows the 3-wire type connection.
- · The self-holding function is enabled when the STP (STOP) signal is turned ON. In such case, the forward/reverse signal is simply used as a start signal. (The STP (STOP) signal can be input via an external terminal only.)
- For the STP (STOP) signal, set "25" in any parameter from Pr.178 to Pr.184 (Input terminal function selection) to assign the function.
- Even if a start signal (STF or STR) is turned ON and then OFF, the start command remains valid and the motor operation continues. To change the rotation direction, turn the STR (STF) signal ON once and then OFF.
- In order to decelerate the motor to a stop, turn OFF the STP (STOP) signal once.

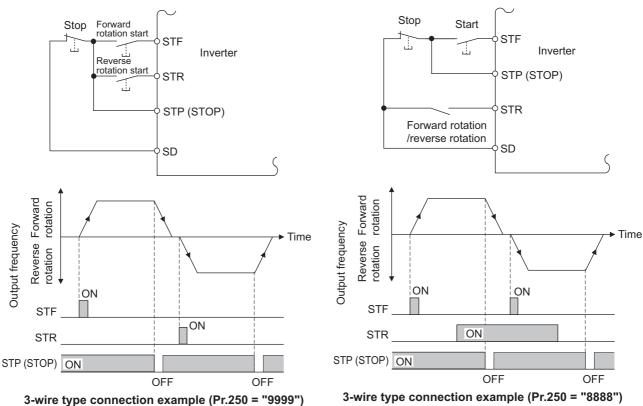

3-wire type connection example (Pr.250 = "8888")

. ■ NOTE

- When the JOG operation is enabled by turning ON the JOG signal, the STP (STOP) signal will be disabled.
- · Even when the output is stopped by turning ON the MRS signal, the self-holding function is not canceled.

◆ Start signal selection

STF	STR	Pr.250 setting and inverter condition					
317	SIK	0 to 100 s, 9999	1000 to 1100 s, 8888				
OFF	OFF	Stop	Stop				
OFF	ON	Reverse rotation	Stop				
ON	OFF	Forward rotation	Forward rotation				
ON	ON	Stop	Reverse rotation				

Parameters referred to

Pr.4 to Pr.6 (multi-speed setting) page 234

Pr.178 to Pr.189 (Input terminal function selection) page 328

MEMO

CHAPTER 14 (C) Motor Constant Parameters

14.1	Applied motor	340
14.2	Offline auto tuning	
14.3	Offline auto tuning for a PM motor (motor constant tuning)	355
14.4	Online auto tuning	362
14.5	Parameter settings for a motor with encoder	365
14.6	Signal loss detection of encoder signals	368

14 (C) Motor Constant Parameters

Purpose		Parameter to set		Refer to page
To select the motor to be used	Applied motor	P.C100, P.C200	Pr.71, Pr.450	340
To maximize the performance of the induction motor	Offline auto tuning	P.C100 to P.C105, P.C107, P.C108, P.C110, P.C120 to P.C126, P.C182, PC188, P.C200 to P.C205, P.C207, P.C208, P.C210, P.C220 to P.C226, P.C282, P.C288	Pr.9, Pr.51, Pr.71, Pr.80 to Pr.84, Pr.90 to Pr.94, Pr.96, Pr.450, Pr.453 to Pr.463, Pr.707, Pr.717, Pr.720, Pr.724, Pr.737, Pr.741, Pr.744, Pr.745, Pr.859, Pr.860	345
To maximize the performance of the PM motor	PM motor offline auto tuning	P.C100 to P.C108, P.C110, P.C120, P.C122, P.C123, P.C126, P.C130 to P.C133, P.C135, P.C150, P.C182, P.C185, P.C200 to P.C208, P.C210, P.C220, P.C222, P.C223, P.C226, P.C230 to P.C233, P.C235, P.C282, P.C285	Pr.9, Pr.51, Pr.71, Pr.80, Pr.81, Pr.83, Pr.84, Pr.90, Pr.92, Pr.93, Pr.96, Pr.450, Pr.453, Pr.454, Pr.456 to Pr.458, Pr.460, Pr.461, Pr.463, Pr.702, Pr.706, Pr.707, Pr.711, Pr.712, Pr.717, Pr.721, Pr.724, Pr.725, Pr.738 to Pr.746, Pr.859, Pr.860, Pr.1002, Pr.1412, Pr.1413	355
To perform high accuracy operation without being affected by temperature and high-torque/ultra-low speed	Online auto tuning	P.C111, P.C211	Pr.95, Pr.574	362
To use the motor with encoder	Encoder specifications	P.C140, P.C141	Pr.359, Pr.369	365
To detect loss of encoder signals	Signal loss detection	P.C148	Pr.376	368

14.1 Applied motor

By setting the applied motor type, the thermal characteristic appropriate for the motor can be selected.

When using a constant-torque or PM motor, the electronic thermal O/L relay function is set according to the motor.

When the Advanced magnetic flux vector control, Real sensorless vector control, Vector control, or PM sensorless vector control is selected, the motor constant necessary for control (for SF-PR, SF-PR-SC, SF-JR, SF-HR, SF-JRCA, SF-HRCA, SF-V5RU (1500 r/min series), GM-[], GM-DZ, or GM-DP) is also selected at the same time.

Pr.	Name	Initial value	Setting range	Description
71 C100	Applied motor	0	0, 3, 5, 6, 10, 13, 15, 16, 20, 23, 30, 33, 40, 43, 50, 53, 70, 73, 1800, 1803, 8090, 8093, 9090, 9093*1	By selecting a motor, the thermal characteristic and motor constant of each motor are set.
450 C200	Second applied motor	9999	0, 3, 5, 6, 10, 13, 15, 16, 20, 23, 30, 33, 40, 43, 50, 53, 70, 73, 1800, 1803, 8090, 8093, 9090, 9093*1	Set this parameter when using the second motor (the same specifications as Pr.71).
			9999	The function is disabled.

 $^{^{\}star}1 \quad \text{The setting range for the 575 V class is "0, 3, 5, 6, 10, 13, 15, 16, 30, 33, 8090, 8093, 9090, and 9093"}.$

♦ Motor settings (200/400 V class)

• Refer to the following list and set the parameters according to the applied motor.

Pr.71	Pr.450	Motor		tant value range when performing		thermal O/L function
	11.400	Motor	offli	ne auto tuning (increment)	Standard	Constant- torque
0 (Pr.71 in	nitial value)	Standard motor (such as SF-JR)			0	
10		Constant-torque motor (such as SF-JRCA)				0
20		Mitsubishi Electric standard efficiency motor (SF-JR 4P 1.5 kW or lower)				0
30		Mitsubishi Electric vector control dedicated motor (SF-V5RU (1500 r/min series))	• 0 to 500 A,	5) and Pr.859 (Pr.860) 9999 (0.01 A)		0
40		Mitsubishi Electric high-efficiency motor SF-HR	• 0 to 50 Ω,	8), Pr.91 (Pr.459) 9999 (0.001 Ω)	0	
50		Mitsubishi Electric constant-torque motor SF-HRCA	• 0 to 6000 r	0), Pr.93 (Pr.461) (Induction motor) nH, 9999 (0.1 mH) 0), Pr.93 (Pr.461) (PM motor)		0
		Mitsubishi Electric high-performance energy-saving motor SF-PR		H, 9999 (0.01 mH)		0
70		Mitsubishi Electric high-performance energy-saving motor with encoder SF-PR-SC	Pr.706 (Pr.7	%, 9999 (0.1%) 38) nV (rad/s), 9999 (0.1 mV/(rad/s))		0
		Mitsubishi Electric geared motor GM-[]				0
1800 ^{*1}		Mitsubishi Electric inverter-driven geared motor for encoder feedback control GM-DZ, GM-DP				0
8090		IPM motor				0
9090		SPM motor				0
3		Standard motor (such as SF-JR)			0	
13		Constant-torque motor (such as SF-JRCA)				0
23		Mitsubishi Electric standard efficiency motor (SF-JR 4P 1.5 kW or lower)				0
33		Mitsubishi Electric vector control dedicated motor (SF-V5RU (1500 r/min series))				0
43		Mitsubishi Electric high-efficiency motor SF-HR	Dr 92 /Dr 45	E\ Dr 050 (Dr 060\ Dr 00 (Dr 450\	0	
53		Mitsubishi Electric constant-torque motor SF-HRCA	Pr.91 (Pr.45	5), Pr.859 (Pr.860), Pr.90 (Pr.458), 9), Pr.92 (Pr.460), Pr.93 (Pr.461), 2), Pr.706 (Pr.738)		0
70		Mitsubishi Electric high-performance energy-saving motor SF-PR		ta value 0 to 65534, 9999 (1)		0
73		Mitsubishi Electric high-performance energy-saving motor with encoder SF-PR-SC				0
		Mitsubishi Electric geared motor GM-[]				0
1803		Mitsubishi Electric inverter-driven geared motor for encoder feedback control GM-DZ, GM-DP				0
3093		IPM motor				0
9093		SPM motor		I		0
5		Standard motor	Wye Pr.82 (Pr.455) and Pr.859 (Pr.860) • 0 to 500 A, 9999 (0.01 A)		0	
15		Constant-torque motor	connection	Pr.90 (Pr.458), Pr.91 (Pr.459), Pr.92 (Pr.460) and Pr.93 (Pr.461)		0
6		Standard motor	Delta connection	• 0 to 50 Ω, 9999 (0.001 Ω) Pr.94 (Pr.462)	0	
16 	9999	Constant-torque motor	-5504011	• 0 to 500 Ω, 9999 (0.01 Ω)		0
	(initial value)	No second applied motor				

^{*1} To perform offline auto tuning for the 400 V class 0.1 kW Mitsubishi Electric geared motor (GM-[]), set "1803" in Pr.71 (Pr.450).



 Regardless of the Pr.71 (Pr.450) setting, offline auto tuning can be performed according to Pr.96 (Pr.463) Auto tuning setting/status. (Refer to page 345 for offline auto tuning.)

◆ Motor settings (575 V class)

• Refer to the following list and set the parameters according to the applied motor.

Pr.71	Pr.450	Motor	Motor cons	tant value range when performing		thermal O/L unction	
P1.71	P1.450	WIOLOT	offl	ne auto tuning (increment)	Standard	Constant- torque	
0 (Pr.71 in	itial value)	Standard motor	• 0 to 500 A	55), Pr.859 (Pr.860) , 9999 (0.01 A)	0		
10		Constant-torque motor	• 0 to 50 Ω,	i8), Pr.91 (Pr.459) 9999 (0.001 Ω) i0), Pr.93 (Pr.461) (Induction motor)		0	
30		Vector control dedicated motor	• 0 to 6000 Pr.92 (Pr.46	mH, 9999 (0.1 mH) 60), Pr.93 (Pr.461) (PM motor)		0	
8090		IPM motor	Pr.94 (Pr.46	• 0 to 650 mH, 9999 (0.01 mH) Pr.94 (Pr.462) • 0% to 100%, 9999 (0.1%)		0	
9090		SPM motor	Pr.706 (Pr.7			0	
3		Standard motor			0		
13		Constant-torque motor	,	55), Pr.859 (Pr.860), Pr.90 (Pr.458),		0	
33		Vector control dedicated motor	,	i9), Pr.92 (Pr.460), Pr.93 (Pr.461), i2), Pr.706 (Pr.738)		0	
8093		IPM motor		ta value 0 to 65534, 9999 (1)		0	
9093		SPM motor		. ,		0	
5		Standard motor	Wye	Pr.82 (Pr.455) and Pr.859 (Pr.860) • 0 to 500 A, 9999 (0.01 A)	0		
15		Constant-torque motor	connection	connection Pr.90 (Pr.458), Pr.91 (Pr.459), Pr.92 (Pr.460) and Pr.93 (Pr.461) • 0 to 50 Ω, 9999 (0.001 Ω)		0	
6		Standard motor	Delta connection Pr.94 (Pr.461) - 0 to 50 Ω, 9999 (0.001 Ω) - 0 to 50 Ω, 9999 (0.001 Ω) - 0 to 50 Ω, 9999 (0.001 Ω) - 0 to 500 Ω, 9999 (0.01 Ω)		0		
16		Constant-torque motor				0	
_	9999 (initial value)	No second applied motor					



• Regardless of the **Pr.71 (Pr.450)** setting, offline auto tuning can be performed according to **Pr.96 (Pr.463) Auto tuning** setting/status. (Refer to page 345 for offline auto tuning.)

◆ Using two types of motors (RT signal, Pr.450)

- When using two types of motors with one inverter, set Pr.450 Second applied motor.
- The setting value "9999" (initial value) disables the second motor.
- If Pr.450 ≠ 9999, the following parameters will be enabled by turning ON the Second function selection (RT) signal.

Function	RT signal ON (second motor)	RT signal OFF (first motor)		
Electronic thermal O/L relay	Pr.51	Pr.9		
Applied motor	Pr.450	Pr.71		
Control method selection	Pr.451	Pr.800		
Motor capacity	Pr.453	Pr.80		
Number of motor poles	Pr.454	Pr.81		
Motor excitation current	Pr.455	Pr.82		
Rated motor voltage	Pr.456	Pr.83		
Rated motor frequency	Pr.457	Pr.84		
Motor constant (R1)	Pr.458	Pr.90		
Motor constant (R2)	Pr.459	Pr.91		
Motor constant (L1)/d-axis inductance (Ld)	Pr.460	Pr.92		
Motor constant (L2)/q-axis inductance (Lq)	Pr.461	Pr.93		
Motor constant (X)	Pr.462	Pr.94		
Auto tuning setting/status	Pr.463	Pr.96		
Frequency search gain	Pr.560	Pr.298		
Online auto tuning selection	Pr.574	Pr.95		
Induced voltage constant (phi f)	Pr.738	Pr.706		
Motor Ld decay ratio	Pr.739	Pr.711		
Motor Lq decay ratio	Pr.740	Pr.712		
Starting resistance tuning compensation coefficient 1	Pr.741	Pr.717		
Starting resistance tuning compensation coefficient	Pr.737	Pr.720		
Starting magnetic pole position detection pulse width	Pr.742	Pr.721		
Maximum motor frequency	Pr.743	Pr.702		
Motor inertia (integer)	Pr.744	Pr.707		
Motor inertia (exponent)	Pr.745	Pr.724		
Motor protection current level	Pr.746	Pr.725		
Torque current/Rated PM motor current	Pr.860	Pr.859		

NOTE

- The RT signal is the Second function selection signal. The RT signal also enables other second functions. (Refer to page 334.)
- For the RT signal, set "3" in any parameter from Pr.178 to Pr.189 (Input terminal function selection) to assign the function.
- Changing the terminal assignment using **Pr.178 to Pr.189 (Input terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

◆ Automatic change of torque boost for the SF-PR motor (200/400 V class)

When the SF-PR motor is selected (Pr.71 = "70 or 73"), the Pr.0 Torque boost setting is automatically changed to enable output of the 6 Hz 150% torque under V/F control by setting Pr.81 Number of motor poles according to the number of the SF-PR motor poles.



- When selecting the automatic change of torque boost for the SF-PR motor, set Pr.14 Load pattern selection = "0 (initial value)".
- When the **Pr.0** setting is changed from its initial value, the automatic change is not performed.

◆ Automatic change of Pr.0 Torque boost and Pr.12 DC injection brake operation voltage (200/400 V class)

• When initial values are set in **Pr.0** and **Pr.12**, the **Pr.0** and **Pr.12** settings are automatically changed to the values in the following table by changing the **Pr.71** setting.

	Inverter			Pr.0 value (%) after automatic change												
			Standard Constant-		SF-PR ^{*3}											
FR-E820-[]	FR-E840-[]	FR-E820S-[]	mot			que or ^{*2}	Pr.81 7 6"	[±] "2, 4,	Pr.8 ⁻ "2"	1 =	Pr.8 ⁻ "4"	1 =	Pr.8 ⁻ "6"	1 =	GM	-[] ^{*4}
			ND	LD	ND	LD	ND	LD	ND	LD	ND	LD	ND	LD	ND	LD
0008(0.1K)	_	0008(0.1K)	6	6	6	6	4	4	4	4	4	4	4	4	6	6
0015(0.2K)	_	0015(0.2K)	6	6	6	6	4	4	4	4	4	4	4	4	6	6
0030(0.4K)	0016(0.4K)	0030(0.4K)	6	6	6	6	4	4	4	7.4	4	6	4	6.4	6	4
0050(0.75K)	0026(0.75K)	0050(0.75K)	6	4	6	4	4	3	7.4	5.8	6	5	6.4	3.7	4	5
0080(1.5K)	0040(1.5K)	0080(1.5K)	4	4	4	4	3	2.5	5.8	6	5	4.5	3.7	3.3	5	4
0110(2.2K)	0060(2.2K)	0110(2.2K)	4	4	4	4	2.5	2.5	6	6.4	4.5	4.5	3.3	4.2	4	4.5
0175(3.7K)	0095(3.7K)	_	4	3	4	2	2.5	2	6.4	4.5	4.5	3.7	4.2	3.3	4.5	3.7
0240(5.5K)	0120(5.5K)	_	3	3	2	2	2	2	4.5	4.4	3.7	4.5	3.3	3.8	3.7	4.5
0330(7.5K)	0170(7.5K)	_	3	2	2	2	2	1.5	4.4	3.5	4.5	3.3	3.8	3.5	4.5	3.3

	Inverter					Pr.12 value (%) after automatic change							
FR-E820-[]	FR-E840-[]	FR-E820S-[]		dard tor ^{*1}	tor	stant- que or ^{*2}	SF-I	PR ^{*3}	GM	-[] ^{*4}			
			ND	LD	ND	LD	ND	LD	ND	LD			
0008(0.1K)	_	0008(0.1K)	6	6	6	6	4	4	6	6			
0015(0.2K)	_	0015(0.2K)	6	4	6	4	4	4	6	4			
0030(0.4K)	0016(0.4K)	0030(0.4K)	4	4	4	4	4	4	4	4			
0050(0.75K)	0026(0.75K)	0050(0.75K)	4	4	4	4	4	2.5	4	4			
0080(1.5K)	0040(1.5K)	0080(1.5K)	4	4	4	4	2.5	2.5	4	4			
0110(2.2K)	0060(2.2K)	0110(2.2K)	4	4	4	4	2.5	2.5	4	2.5			
0175(3.7K)	0095(3.7K)	_	4	4	4	2	2.5	2	2.5	2			
0240(5.5K)	0120(5.5K)	_	4	4	2	2	2	2	2	2			
0330(7.5K)	0170(7.5K)	_	4	2	2	2	2	1.5	2	1.5			

- *1 **Pr.71** = "0, 3, 5, 6, 20, 23, 40, or 43" (standard motor)
- *2 **Pr.71** = "10, 13, 15, 16, 50, or 53" (constant-torque motor)
- *3 **Pr.71** = "70 or 73" (SF-PR)
- *4 **Pr.71** = "1800 or 1803" (GM-[])

NOTE

- When the Pr.0 and Pr.12 settings are changed from their initial values, the automatic change is not performed.
- When the SF-PR motor is selected (Pr.71 = "70 or 73"), the output current may become large due to a small load by setting Pr.81 Number of motor poles according to the number of the SF-PR motor poles.
- · When the SF-PR motor is used, the output current tends to increase compared with the case where the SF-JR or SF-HR motor is used. Depending on the load conditions, the output current may increase even though the torque boost value has been automatically changed. When the protective function such as the electronic thermal O/L relay (E.THT, E.THM) or stall prevention (OL, E.OLT) is activated, adjust the Pr.0 Torque boost according to the load.

∴ CAUTION

· Make sure to set this parameter correctly according to the motor used. Incorrect setting may cause the motor and the inverter to overheat and burn.

Parameters referred to

Pr.0 Torque boost page 426

Pr.12 DC injection brake operation voltage page 434

Pr.14 Load pattern selection page 430
Pr.96 Auto tuning setting/status page 345

Pr.178 to Pr.189 (Input terminal function selection) page 328

14.2 Offline auto tuning

Magnetic flux Sensorless Vector

The offline auto tuning enables the optimal operation of a motor.

• Under Advanced magnetic flux vector control, Real sensorless vector control, or Vector control, automatic measurement of motor constants (offline auto tuning) enables optimal operation of motors even when motor constants vary, when a motor of another company is used, or when the wiring distance is long.

For the offline auto tuning for a PM motor, refer to page 355.

Pr.	Name	Initial value	Setting range	Description			
71 C100	Applied motor	0	0, 3, 5, 6, 10, 13, 15, 16, 20, 23, 30, 33, 40, 43, 50, 53, 70, 73, 1800*5, 1803, 8090, 8093, 9090, 9093*1	By selecting a motor, the thermal characteristic and motor constant of each motor are set.			
80 C101	Motor capacity	9999	0.1 to 30 kW 9999	Set the applied motor capacity. V/F control			
81 C102	Number of motor poles	9999	2, 4, 6, 8, 10, 12	Set the number of motor poles.			
9 C103	Electronic thermal O/L relay	Inverter rated current*2	9999 0 to 500 A	V/F control Set the rated motor current.			
83 C104	Rated motor voltage	200/400/ 575 V*3	0 to 1000 V	Set the rated motor voltage (V).			
84	Rated motor	0000	10 to 400 Hz	Set the rated motor frequency (Hz).			
C105	frequency	9999	9999	The setting value of Pr.3 Base frequency is used.			
707 C107	Motor inertia (integer)	9999	10 to 999, 9999	Set the motor inertia. 9999: The constant value of Mitsubishi Electric motor (SF-PR,			
724 C108	Motor inertia (exponent)	9999	0 to 7, 9999	SF-PR-SC, SF-JR, SF-HR, SF-JRCA, SF-HRCA, SF-V5RU (1500 r/min series), GM-[], GM-DZ, or GM-DP) is used.			
			0	No offline auto tuning			
96	Auto tuning setting/	0	1	Offline auto tuning is performed without the motor rotating.			
C110	status		11	Offline auto tuning is performed without the motor rotating (under V/F control). (Refer to page 410.)			
90 C120	Motor constant (R1)	9999	0 to 50 Ω, 9999 ^{*4}				
91 C121	Motor constant (R2)	9999	0 to 50 Ω, 9999 ^{*4}				
92 C122	Motor constant (L1)/ d-axis inductance (Ld)	9999	0 to 6000 mH, 9999*4				
93 C123	Motor constant (L2)/ q-axis inductance (Lq)	9999	0 to 6000 mH, 9999*4				
94 C124	Motor constant (X)	9999	0% to 100%, 9999*4	Tuning data (The value measured by offline auto tuning is automatically set.)			
82 C125	Motor excitation current	9999	0 to 500 A, 9999*4	9999: The constant value of Mitsubishi Electric motor (SF-PR, SF-PR-SC, SF-JR, SF-HR, SF-JRCA, SF-HRCA, SF-V5RU			
859 C126	Torque current/ Rated PM motor current	9999	0 to 500 A, 9999*4	(1500 r/min series), GM-[], GM-DZ, or GM-DP) is used.			
717 C182	Starting resistance tuning compensation coefficient 1	9999	0% to 200%, 9999				
720 C188	Starting resistance tuning compensation coefficient	9999	0% to 200%, 9999				

Pr.	Name	Initial value	Setting range	Description
			0 to 32767	The offline auto tuning automatically sets the gain required for the frequency search.
298 A711	Frequency search gain	9999	9999	The constant value of Mitsubishi Electric motor (SF-PR, SF-PR-SC, SF-JR, SF-HR, SF-JRCA, SF-HRCA, SF-V5RU (1500 r/min series), GM-[], GM-DZ, or GM-DP) is used.
450 C200	Second applied motor	9999	0, 3, 5, 6, 10, 13, 15, 16, 20, 23, 30, 33, 40, 43, 50, 53, 70, 73, 1800*5, 1803, 8090, 8093, 9090, 9093*1	Set this parameter when using the second motor (the same specifications as Pr.71). The function is disabled.
453	Second motor		0.1 to 30 kW	Set the capacity of the second motor.
C201	capacity	9999	9999	V/F control
454 C202	Number of second motor poles	9999	2, 4, 6, 8, 10, 12 9999	Set the number of poles of the second motor. V/F control
51 C203	Second electronic thermal O/L relay	9999	0 to 500 A	This function is enabled when the RT signal is ON. Set the rated motor current.
	_	000//00/	9999	Second electronic thermal O/L relay disabled.
456 C204	Rated second motor voltage	200/400/ 575 V ^{*3}	0 to 1000 V	Set the rated voltage (V) of the second motor.
457	Rated second motor	9999	10 to 400 Hz	Set the rated frequency (Hz) of the second motor.
C205	frequency		9999	The Pr.84 Rated motor frequency setting is used.
744 C207 745	Second motor inertia (integer)	9999	10 to 999, 9999	Set the inertia of the second motor. 9999: The constant value of Mitsubishi Electric motor (SF-PR, SF-PR-SC, SF-JR, SF-HR, SF-JRCA, SF-HRCA, SF-V5RU
745 C208	Second motor inertia (exponent)	9999	0 to 7, 9999	(1500 r/min series), GM-[], GM-DZ, or GM-DP) is used.
	, , ,		0	No auto tuning for the second motor.
463 C210	Second motor auto tuning setting/	0	1	Offline auto tuning is performed without the second motor rotating.
02.0	status		11	Offline auto tuning is performed without the second motor rotating (under V/F control). (Refer to page 410.)
458 C220	Second motor constant (R1)	9999	0 to 50 Ω, 9999 ^{*4}	
459 C221	Second motor constant (R2)	9999	0 to 50 Ω, 9999*4	
460 C222	Second motor constant (L1) / d- axis inductance (Ld)	9999	0 to 6000 mH, 9999*4	
461 C223	Second motor constant (L2) / q- axis inductance (Lq)	9999	0 to 6000 mH, 9999 ^{*4}	
462 C224	Second motor constant (X)	9999	0% to 100%, 9999*4	Tuning data of the second motor. (The value measured by offline auto tuning is automatically
455 C225	Second motor excitation current	9999	0 to 500 A, 9999*4	set.) 9999: The constant value of Mitsubishi Electric motor (SF-PR,
860 C226	Second motor torque current/ Rated PM motor current	9999	0 to 500 A, 9999*4	SF-PR-SC, SF-JR, SF-HR, SF-JRCA, SF-HRCA, SF-V5RU (1500 r/min series), GM-[], GM-DZ, or GM-DP) is used.
741 C282	Second motor starting resistance tuning compensation coefficient 1	9999	0% to 200%, 9999	
737 C288	Starting resistance tuning compensation coefficient 2	9999	0% to 200%, 9999	
			0 to 32767	The offline auto tuning automatically sets the gain required for the frequency search of the second motor.
560 A712	Second frequency search gain	9999	9999	The constant value of Mitsubishi Electric motor (SF-PR, SF-PR-SC, SF-JR, SF-HR, SF-JRCA, SF-HRCA, SF-V5RU (1500 r/min series), GM-[], GM-DZ, or GM-DP) is used for the second motor.

- *1 The setting range for the 575 V class is "0, 3, 5, 6, 10, 13, 15, 16, 30, 33, 8090, 8093, 9090, and 9093".
- *2 The initial value for the FR-E820-0050(0.75K) or lower, FR-E840-0026(0.75K) or lower, FR-E860-0017(0.75K), and FR-E820S-0050(0.75K) or lower is set to the 85% of the inverter rated current.
- *3 The initial value differs according to the voltage class (200/400/575 V).
- *4 The setting range and unit change according to the Pr.71 (Pr.450) setting.
- *5 To perform offline auto tuning for the 400 V class 0.1 kW Mitsubishi Electric geared motor (GM-[]), set "1803" in Pr.71 (Pr.450).



- The setting is valid under Advanced magnetic flux vector control, Real sensorless vector control, or Vector control.
- By using the offline auto tuning function, the optimum operation characteristics are obtained for a motor other than Mitsubishi Electric standard efficiency motors (SF-JR 0.2 kW or higher), high-efficiency motors (SF-HR 0.2 kW or higher), Mitsubishi Electric constant-torque motors (SF-JRCA 4P, SF-HRCA 0.2 kW to 7.5 kW), Mitsubishi Electric high-performance energy-serving motor (SF-PR), Mitsubishi Electric high-performance energy-saving motor with encoder (SF-PR-SC), Mitsubishi Electric Vector control dedicated motor (SF-V5RU (1500 r/min series)), Mitsubishi Electric geared motor (GM-[]), or Mitsubishi Electric inverter-driven geared motor for encoder feedback control (GM-DZ, GM-DP), such as an induction motor of other manufacturers or SF-JRC, or with a long wiring length (30 m or longer).
- · Tuning is enabled even when a load is connected to the motor.
- Reading/writing of the motor constants tuned by offline auto tuning are enabled.
- The offline auto tuning status can be monitored on the operation panel.

♦ Before performing offline auto tuning

Check the following points before performing offline auto tuning:

- Check that a value other than "9999" is set in **Pr.80** and **Pr.81**, and Advanced magnetic flux vector control, Real sensorless vector control, or Vector control is selected (with **Pr.800**). (Refer to page 97.)
- · Check that a motor is connected. (Check that the motor is not rotated by an external force during tuning.)
- Select a motor with the rated current equal to or less than the inverter rated current. (Note that the motor rated current should be 0.4 kW or higher (0.1 kW or higher for the 200 V class).) If a motor with substantially low rated current compared with the inverter rated current is used, speed and torque accuracies may deteriorate due to torque ripples, etc. Set the rated motor current to about 40% or higher of the inverter rated current.
- Tuning is not available for a high-slip motor, high-speed motor, or special motor.
- The maximum frequency is 400 Hz.
- Tuning is enabled even when a load is connected to the motor. The motor may run slightly. Fix the motor securely with a mechanical brake, or before tuning, make sure that it is safe even if the motor rotates. (Caution is required especially in vertical lift applications.) Note that even if the motor runs slightly, tuning performance is unaffected.
- Offline auto tuning is not performed correctly when the surge voltage suppression filter (FR-ASF-H/FR-BMF-H) is inserted between the inverter and motor. Be sure to remove it before performing tuning.
- · Make sure to connect the encoder to the motor without coaxial misalignment for Vector control. Speed ratio must be 1:1.

Settings

• To perform tuning, set the following parameters about the motor.

First motor Pr.	Second motor Pr.	Name	Initial value	Description
80	453	Motor capacity	9999 (V/F control)	Set the motor capacity (kW).
81	454	Number of motor poles	9999 (V/F control)	Set the number of motor poles (2 to 12).
800	451	Control method selection	40 (in Pr.800) / 9999 (in Pr.451)	Set this parameter under Advanced magnetic flux vector control, Real sensorless vector control, or Vector control.
9	51	Electronic thermal O/L relay	Inverter rated current	Set the rated motor current (A).
83	456	Rated motor voltage	200/400/575 V ^{*1}	Set the rated motor voltage (V) printed on the motor's rating plate.*2
84	457	Rated motor frequency	9999	Set the rated motor frequency (Hz).*2When the setting is "9999", the Pr.3 Base frequency setting is used.
71	450	Applied motor	0 (standard motor)	Set this parameter according to the motor.*3 Three types of motor constant setting ranges, units and tuning data can be stored according to settings.
96	463	Auto tuning setting/ status	0	Set "1". 1: Tuning is performed without the motor rotating. (Excitation noise occurs at this point.)

^{*1} The initial value differs according to the voltage class (200/400/575 V).

- *2 For the settings for the SF-V5RU, refer to page 365.
- *3 Set **Pr.71 Applied motor** according to the motor to be used and the motor constant setting range. According to the **Pr.71** setting, the range of the motor constant parameter setting values and units can be changed. (For other setting values of **Pr.71**, refer to page 340.)
- · 200/400 V class

			Pr.71 setting			
	Motor	Motor constant parameter mH, %, and A unit setting	Motor constant parameter internal data setting	Motor constant parameter Ω , $m\Omega$, and A unit setting		
Mitsubishi Electric high- performance energy- saving motor	SF-PR					
Mitsubishi Electric high- performance energy- saving motor with encoder	SF-PR-SC	70	73	_		
Mitsubishi Electric Vector control dedicated motor	SF-V5RU (1500 r/min series)	30	33	_		
Mitsubishi Electric geared motor	GM-[]					
Mitsubishi Electric inverter-driven geared motor for encoder feedback control	GM-DZ, GM-DP	1800	1803	_		
Mitsubishi Electric	SF-JR	0 (initial value)	3	_		
standard efficiency motor	SF-JR 4P 1.5 kW or lower	20	23	_		
Mitsubishi Electric high-	SF-HR	40	43	_		
efficiency motor	Others	0 (initial value)	3	_		
NAME - A DESCRIPTION AND A	SF-JRCA 4P	10	13	_		
Mitsubishi Electric constant-torque motor	SF-HRCA	50	53	_		
constant torque motor	Others (SF-JRC, etc.)	10	13	_		
Other manufacturer's standard motor	_	0 (initial value)	3	5 (wye connection motor) 6 (delta connection motor)		
Other manufacturer's constant-torque motor	_	10	13	15 (wye connection motor) 16 (delta connection motor)		

• 575 V class

	Pr.71 setting			
Motor	Motor constant parameter mH, %, and A unit setting	Motor constant parameter internal data setting	Motor constant parameter Ω , m Ω , and A unit setting	
Vector control dedicated motor	30	33	_	
Standard motor	0 (initial value)	3	_	
Constant-torque motor	10	13	_	
Other manufacturer's standard motor	0 (initial value)	3	5 (wye connection motor) 6 (delta connection motor)	
Other manufacturer's constant-torque motor	10	13	15 (wye connection motor) 16 (delta connection motor)	

NOTE

- When Pr.11 DC injection brake operation time = "0" or Pr.12 DC injection brake operation voltage = "0", offline auto tuning is performed at the initial setting of Pr.11 or Pr.12.
- If "wye connection" or "delta connection" is incorrectly selected in **Pr.71**, Advanced magnetic flux vector control, Real sensorless vector control, and Vector control are not performed properly.
- To perform offline auto tuning for the 400 V class 0.1 kW Mitsubishi Electric geared motor (GM-[]), set "1803" in Pr.71 (Pr.450).

For tuning accuracy improvement, set the following parameters when the motor constants are known in advance.

First motor Pr.	Second motor Pr.	Name	Mitsubishi Electric motor (SF-PR, SF-PR- SC, SF-JR, SF-HR, SF- JRCA, SF-HRCA, SF- V5RU, GM-[], GM-DZ, or GM-DP)	Other motors
707	744	Motor inertia (integer)	0000 (initial value)	Motor inertia ^{*1}
724	745	Motor inertia (exponent)	9999 (initial value)	Jm = Pr.707 × 10^(- Pr.724) (kg·m ²)

^{*1} The setting is valid only when a value other than "9999" is set in both Pr.707 (Pr.744) and Pr.724 (Pr.745).

◆ Performing tuning



- Before performing tuning, check the monitor display of the operation panel if the inverter is in the state ready for tuning. The motor starts by turning ON the start command while tuning is unavailable.
- In the PU operation mode, press the RUN key on the operation panel.
 In the External operation, turn ON the start command (STF signal or STR signal). Tuning starts.



- · Satisfy the required inverter start conditions to start offline auto tuning. For example, stop the input of the MRS signal.
- To force tuning to end, use the MRS or RES signal or the STOP/RESET key on the operation panel. (Turning OFF the start signal (STF signal or STR signal) also ends tuning.)
- During offline auto tuning, only the following I/O signals are valid (initial value).
 Input terminals <effective signals>: MRS, RES, STF, STR, S1, and S2
 Output terminals: RUN, FU, FM, AM, ABC, and SO
- When the rotation speed and the output frequency are selected for terminals FM and AM, the progress status of offline auto tuning is output in 15 steps from FM and AM (in the standard model).
- Do not perform ON/OFF switching of the Second function selection (RT) signal during offline auto tuning. Auto tuning will not be performed properly.
- Since the Inverter running (RUN) signal turns ON when tuning is started, pay close attention especially when a sequence which releases a mechanical brake by the RUN signal has been designed.
- When executing offline auto tuning, input the operation command after switching ON the main circuit power (R/L1, S/L2, T/L3) of the inverter.
- While **Pr.79 Operation mode selection** = "7", turn ON the PU operation external interlock (X12) signal for tuning in the PU operation mode.
- During tuning, the monitor is displayed on the operation panel as follows.

Tuning status	Operation panel indication	LCD operation panel (FR-LU08) display
(1) Setting	Hz PU = MON RUN Hz = EXT PRM PM NET P.RUN	AutoTune 12:34 TUNE 1 1 STOP PU PREV NEXT
(2) During tuning	Hz PU MON RUN NET PRM PM NET PRUN	AutoTune 12:34 TUNE STF FWD PU PREV NEXT
(3) Normal completion	Hz PU = MON 20N Hz PRUP PROFO ON NET P.RUN	AutoTune 12:34 TUNE Completed 3 STF STOP PU PREV NEXT

· Note: Offline auto tuning time (with the initial setting)

Offline auto tuning setting	Time
Pr.96 = "1"	About 25 to 100 s. (The time depends on the inverter capacity and motor type.)

• When offline auto tuning ends, press the STOP/RESET key on the operation panel during PU operation. In the External operation mode, turn OFF the start signal (STF signal or STR signal).

This operation resets the offline auto tuning, and the monitor display of the operation panel returns to normal. (Without this operation, next operation cannot be started.)



- The motor constants measured once during offline auto tuning are stored as parameters and their data are held until offline auto tuning is performed again. However, the tuning data is cleared when performing All parameter clear.
- Changing **Pr.71** (**Pr.450**) after tuning completion will change the motor constant. For example, if "3" is set in **Pr.71** after tuning is performed with **Pr.71** = "0", the tuning data becomes invalid. To use the tuned data, set "0" again in **Pr.71**.
- If offline auto tuning has ended in error (see the following table), motor constants are not set. Perform an inverter reset and restart tuning.

Error display	Error cause	Countermeasures
8	Forced end	Set "1" in Pr.96 and retry.
9	Inverter protective function operation	Make the setting again.
91	The current limit (stall prevention) function is activated.	Set the acceleration/deceleration time longer. Set Pr.156 Stall prevention operation selection = "1" .
92	The converter output voltage fell to 75% of the rated voltage.	Check for the power supply voltage fluctuation. Check the Pr.83 Rated motor voltage setting.
93	Calculation error. The motor is not connected.	Check the Pr.83 and Pr.84 settings. Check the motor wiring and make the setting again.

- When tuning is ended forcibly by pressing the STOP/RESET key or turning OFF the start signal (STF or STR) during tuning, offline tuning does not end properly. (The motor constants have not been set.)
 Perform an inverter reset and perform tuning again.
- When the rated power supply of the motor is 200/220 V (400/440 V) 60 Hz, set the rated motor current multiplied by 1.1 in **Pr.9 Electronic thermal O/L relay** after tuning is complete.
- For a motor with a thermal protector or other thermal detection, set "0" (motor overheat protection by inverter invalid) in **Pr.9** to protect the motor from overheating.



- An instantaneous power failure occurring during tuning will result in a tuning error. After power is restored, the inverter starts
 normal operation. Therefore, when the STF (STR) signal is ON, the motor starts forward (reverse) rotation.
- Any fault occurring during tuning is handled as in the normal operation. However, if the retry function is set, no retry is performed.
- The set frequency monitor displayed during the offline auto tuning is 0 Hz.

∴ CAUTION

- · Note that the motor may start running suddenly.
- For performing offline auto tuning with the motor rotating in vertical lift applications, etc., caution is required to avoid falling due to insufficient torque.

♦ Changing the motor constants

- The motor constants can be set directly when the motor constants are known in advance, or by using the data measured during offline auto tuning.
- According to the **Pr.71** (**Pr.450**) setting, the range of the motor constant parameter setting values and units can be changed. The changed settings are stored in the EEPROM as the motor constant parameters.

◆ Changing the motor constants (when setting the Pr.92 and Pr.93 motor constants in units of mH)

· Set Pr.71 as follows.

200/400 V class


Motor	Pr.71 setting	
Mitsubishi Electric high-performance energy-saving motor	SF-PR	70
Mitsubishi Electric high-performance energy-saving motor with encoder	SF-PR-SC	70
Mitsubishi Electric Vector control dedicated motor	SF-V5RU (1500 r/min series)	30
Mitsubishi Electric geared motor	GM-[]	
Mitsubishi Electric inverter-driven geared motor for encoder feedback control	GM-DZ, GM-DP	1800
Mitarchiahi Electric standard officiones contact	SF-JR	0 (initial value)
Mitsubishi Electric standard efficiency motor Mitsubishi Electric high-efficiency motor	SF-JR 4P 1.5 kW or lower	20
INITION LICEUTO HIGH-CHICKING HICKO	SF-HR	40
Mitsubishi Electric constant-torque motor	SF-JRCA 4P	10
ivilisubisiii Electric constant-torque motor	SF-HRCA	50

• 575 V class

Motor	Pr.71 setting
Vector control dedicated motor	30
Standard motor	0 (initial value)
Constant-torque motor	10

• Use the following formula to find the Pr.94 setting value and set a desired value as the motor constant parameter.

The setting value of **Pr.94** =
$$(1 - \frac{M^2}{L1 \times L2}) \times 100(\%)$$

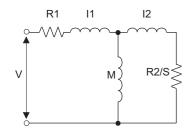

R1: Primary resistance

R2: Secondary resistance

I1: Primary leakage inductance

I2: Secondary leakage inductance

M: Excitation inductance

S: Slip

L1= I1+ M: Primary inductance

L2= I2+ M: Secondary inductance

Equivalent circuit diagram of the motor

First motor Pr.	Second motor Pr.	Name	Setting range	Setting increments	Initial value
82	455	Motor excitation current (no load current)	0 to 500 A, 9999	0.01 A	
90	458	Motor constant (R1)	0 to 50 Ω, 9999	0.001 Ω	
91	459	Motor constant (R2)	0 to 50 Ω, 9999	0.001 Ω	
92	460	Motor constant (L1)/d-axis inductance (Ld)	0 to 6000 mH, 9999	0.1 mH	
93	461	Motor constant (L2)/q-axis inductance (Lq)	0 to 6000 mH, 9999	0.1 mH	9999
94	462	Motor constant (X)	0% to 100%, 9999	0.1%	9999
859	860	Torque current/Rated PM motor current	0 to 500 A, 9999	0.01 A	
298	560	Frequency search gain	0 to 32767, 9999	1	
717	741	Starting resistance tuning compensation coefficient 1	0% to 200%	0.1%	
720	737	Starting resistance tuning compensation coefficient 2	0% to 200%	0.1%	

MOTE

• If "9999" is set in the motor constant parameters, tuning data will be invalid and the constant values for Mitsubishi Electric motors (SF-PR, SF-PR-SC, SF-JR, SF-HR, SF-JRCA, SF-HRCA, SF-V5RU (1500 r/min series), GM-[], GM-DZ, GM-DP, and so on) are used.

◆ Changing the motor constants (when setting motor constants in the internal data of the inverter)

- Set Pr.71 as follows.
- 200/400 V class

Motor		Pr.71 setting
Mitsubishi Electric high-performance energy-saving motor	SF-PR	73
Mitsubishi Electric high-performance energy-saving motor with encoder	SF-PR-SC	73
Mitsubishi Electric Vector control dedicated motor	SF-V5RU (1500 r/min series)	33
Mitsubishi Electric geared motor	GM-[]	
Mitsubishi Electric inverter-driven geared motor for encoder feedback control	GM-DZ, GM-DP	1803
	SF-JR	3
Mitsubishi Electric standard efficiency motor	SF-JR 4P 1.5 kW or lower	23
Mitsubishi Electric high-efficiency motor	SF-HR	43
	Others	3
	SF-JRCA 4P	13
Mitsubishi Electric constant-torque motor	SF-HRCA	53
	Other (SF-JRC, etc.)	13
Other manufacturer's standard motor	_	3
Other manufacturer's constant-torque motor	_	13

575 V class

Motor	Pr.71 setting
Vector control dedicated motor	33
Standard motor	3
Constant-torque motor	13
Other manufacturer's standard motor	3
Other manufacturer's constant-torque motor	13

· Set desired values as the motor constant parameters.

First motor Pr.	Second motor Pr.	Name	Setting range	Setting increments	Initial value
82	455	Motor excitation current			
90	458	Motor constant (R1)			
91	459	Motor constant (R2)			
92	460	Motor constant (L1)/d-axis inductance (Ld)	0 to ***, 9999	1	
93	461	Motor constant (L2)/q-axis inductance (Lq)			9999
94	462	Motor constant (X)			9999
859	860	Torque current/Rated PM motor current			
298	560	Frequency search gain	0 to 32767, 9999	1	
717	741	Starting resistance tuning compensation coefficient 1	0% to 200%	0.1%	
720	737	Starting resistance tuning compensation coefficient 2	0% to 200%	0.1%	



- · As the motor constants measured in the offline auto tuning have been converted into internal data (****), refer to the following setting example when making setting. (The value displayed has been converted into a value for internal use. Therefore, simple addition of a value to the displayed value does not bring the desired effect.)
 - Setting example: To slightly increase the Pr.90 value (5%)
 - When "2516" is displayed for **Pr.90**, set 2642 (2516 \times 1.05 = 2641.8) in **Pr.90**.
- If "9999" is set in the motor constant parameters, tuning data will be invalid and the constant values for Mitsubishi Electric motors (SF-PR, SF-PR-SC, SF-JR, SF-HR, SF-JRCA, SF-HRCA, SF-V5RU (1500 r/min series), GM-[], GM-DZ, or GM-DP) are used.

Changing the motor constants (when setting the Pr.92, Pr.93, and Pr.94 motor constants in units of Ω)

· Set Pr.71 as follows.

Applied motor	Pr.71 :	Pr.71 setting		
Applied motor	Wye connection motor	Delta connection motor		
Standard motor	5	6		
Constant-torque motor	15	16		

Set desired values as the motor constant parameters.

Iq = torque current, I100 = rated current, I0 = no load current

$$Iq = \sqrt{1100^2 - 10^2}$$

First motor Pr.	Second motor Pr.	Name	Setting range	Setting increments	Initial value
82	455	Motor excitation current (no load current)	0 to 500 A, 9999	0.01 A	
90	458	Motor constant (r1)	0 to 50 Ω, 9999	0.001 Ω	
91	459	Motor constant (r2)	0 to 50 Ω, 9999	0.001 Ω	
92	460	Motor constant (x1)	0 to 50 Ω, 9999	0.001 Ω	
93	461	Motor constant (x2)	0 to 50 Ω, 9999	0.001 Ω	
94	462	Motor constant (xm)	0 to 500 Ω, 9999	0.01 Ω	9999
859	860	Torque current/Rated PM motor current	0 to 500 A, 9999	0.01 A	0000
298	560	Frequency search gain	0 to 32767, 9999	1	
717	741	Starting resistance tuning compensation coefficient 1	0% to 200%	0.1%	
720	737	Starting resistance tuning compensation coefficient 2	0% to 200%	0.1%	

NOTE

- If "wye connection" or "delta connection" is incorrectly selected in **Pr.71**, Advanced magnetic flux vector control, Real sensorless vector control, and Vector control are not performed properly.
- If "9999" is set in the motor constant parameters, tuning data will be invalid and the constant values for Mitsubishi Electric motors (SF-PR, SF-PR-SC, SF-JR, SF-HR, SF-JRCA, SF-HRCA, SF-V5RU (1500 r/min series), GM-[], GM-DZ, or GM-DP) are used.

◆ Tuning the second motor

- When one inverter switches the operation between two different motors, set the second motor in Pr.450 Second applied motor. (Refer to page 340.) In the initial setting, no second motor is applied.
- Turning ON the RT signal enables the parameter settings for the second motor as follows. For the RT signal, set "3" in any parameter from **Pr.178 to Pr.189 (Input terminal function selection)** to assign the function.

Function	RT signal ON (second motor)	RT signal OFF (first motor)
Motor capacity	Pr.453	Pr.80
Number of motor poles	Pr.454	Pr.81
Motor excitation current	Pr.455	Pr.82
Rated motor voltage	Pr.456	Pr.83
Rated motor frequency	Pr.457	Pr.84
Motor constant (R1)	Pr.458	Pr.90
Motor constant (R2)	Pr.459	Pr.91
Motor constant (L1)/d-axis inductance (Ld)	Pr.460	Pr.92
Motor constant (L2)/q-axis inductance (Lq)	Pr.461	Pr.93
Motor constant (X)	Pr.462	Pr.94
Auto tuning setting/status	Pr.463	Pr.96
Frequency search gain	Pr.560	Pr.298
Starting resistance tuning compensation coefficient 1	Pr.741	Pr.717
Starting resistance tuning compensation coefficient 2	Pr.737	Pr.720



· Changing the terminal assignment using Pr.178 to Pr.189 (Input terminal function selection) may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.1 Maximum frequency page 253
Pr.9 Electronic thermal O/L relay page 238
Pr.71 Applied motor page 340
Pr.156 Stall prevention operation selection page 256
Pr.178 to Pr.189 (Input terminal function selection) page 328
Pr.190 to Pr.196 (Output terminal function selection) page 292
Pr.800 Control method selection page 97

14.3 Offline auto tuning for a PM motor (motor constant tuning)

PM

The offline auto tuning enables the optimal operation of a PM motor.

• Automatic measurement of motor constants (offline auto tuning) enables optimal operation of motors for PM sensorless vector control even when motor constants vary or when the wiring distance is long.

For the offline auto tuning under Advanced magnetic flux vector control, Real sensorless vector control, and Vector control, refer to page 345.

Pr.	Name	Initial value	Setting range	Description
71 C100	Applied motor	0	0, 3, 5, 6, 10, 13, 15, 16, 20, 23, 30, 33, 40, 43, 50, 53, 70, 73, 1800, 1803, 8090, 8093, 9090, 9093*1	By selecting a motor, the thermal characteristic and motor constant of each motor are set.
80	Motor capacity	9999	0.1 to 30 kW	Set the applied motor capacity.
C101	motor supusity	0000	9999	V/F control
81	Number of motor poles	9999	2, 4, 6, 8, 10, 12	Set the number of motor poles.
C102	· ·		9999	V/F control
9 C103	Electronic thermal O/L relay	Inverter rated current*2	0 to 500 A	Set the rated motor current.
83 C104	Rated motor voltage	200/400/ 575 V ^{*3}	0 to 1000 V	Set the rated motor voltage (V).
84	Rated motor frequency	9999	10 to 400 Hz	Set the rated motor frequency (Hz).
C105	Nated motor frequency	3333	9999	Inverter internal data is used.
702	Maximum motor frequency	9999	0 to 400 Hz	Set the permissible speed (frequency) of the motor.
C106	. ,		9999	The Pr.84 setting is used.
707 C107	Motor inertia (integer)	9999	10 to 999, 9999	Set the motor inertia.
724 C108	Motor inertia (exponent)	9999	0 to 7, 9999	9999: Inverter internal data is used.
	Auto tuning setting/status		0	No offline auto tuning
96		0	1	Offline auto tuning is performed without the motor rotating.
C110		ŭ	11	Offline auto tuning is performed without the motor rotating (under V/F control).
90 C120	Motor constant (R1)	9999	0 to 50 Ω, 9999 ^{*4}	
92 C122	Motor constant (L1)/d-axis inductance (Ld)	9999	0 to 500 mH, 9999 ^{*4}	Tuning data (The value measured by offline auto tuning is automatically set.)
93 C123	Motor constant (L2)/q-axis inductance (Lq)	9999	0 to 500 mH, 9999 ^{*4}	9999: Inverter internal data is used.
859 C126	Torque current/Rated PM motor current	9999	0 to 500 A, 9999*4	
706	Induced voltage constant	9999	0 to 5000 mV (rad/s)*4	Set this parameter according to the PM motor specifications.
C130	(phi f)	3333	9999	The value calculated from the parameter setting for motor constant is used.
1412	Motor induced voltage	9999	0 to 2	Set the exponent n when the induced voltage constant phi f (Pr.706) is multiplied by 10 ⁿ .
C135	constant (phi f) exponent		9999	No exponent setting

Pr.	Name	Initial value	Setting range	Description
711 C131	Motor Ld decay ratio	9999	0% to 100%, 9999	
712 C132	Motor Lq decay ratio	9999	0% to 100%, 9999	Tuning data (The value measured by offline auto tuning is
717 C182	Starting resistance tuning compensation coefficient 1	9999	0% to 200%, 9999	automatically set.) 9999: Inverter internal data is used.
721 C185	Starting magnetic pole position detection pulse width	9999	0 to 6000 µs, 9999	
725 C133	Motor protection current level	9999	100% to 500% 9999	Set the maximum current (OCT) level of the motor. 200%
1002 C150	Lq tuning target current adjustment coefficient	9999	50% to 150% 9999	Adjust the target current during tuning.
450 C200	Second applied motor	9999	0, 3, 5, 6, 10, 13, 15, 16, 20, 23, 30, 33, 40, 43, 50, 53, 70, 73, 1800, 1803, 8090, 8093, 9090, 9093*1	Set this parameter when using the second motor (the same specifications as Pr.71). The function is disabled.
453 C201	Second motor capacity	9999	0.1 to 30 kW 9999	Set the capacity of the second motor. V/F control
454 C202	Number of second motor poles	9999	2, 4, 6, 8, 10, 12 9999	Set the number of poles of the second motor. V/F control
51 C203	Second electronic thermal O/L relay	9999	0 to 500 A 9999	Set the rated current of the second motor. The second electronic thermal O/L relay is disabled.
456 C204	Rated second motor voltage	200/400/ 575 V ^{*3}	0 to 1000 V	Set the rated voltage (V) of the second motor.
457 C205	Rated second motor frequency	9999	10 to 400 Hz 9999	Set the rated frequency (Hz) of the second motor. Inverter internal data is used.
743 C206	Second motor maximum frequency	9999	0 to 400 Hz 9999	Set the permissible speed (frequency) of the second motor. The Pr.457 setting is used.
744 C207	Second motor inertia (integer)	9999	10 to 999, 9999	Set the motor inertia of the second motor.
745 C208	Second motor inertia (exponent)	9999	0 to 7, 9999	9999: Inverter internal data is used.
	(* F)		0	No auto tuning for the second motor.
463 C210	Second motor auto tuning setting/status	0	1	Offline auto tuning is performed without the second motor rotating.
	3		11	Offline auto tuning is performed without the second motor rotating (under V/F control).
458 C220	Second motor constant (R1)	9999	0 to 50 Ω, 9999 ^{*4}	
460 C222	Second motor constant (L1) / d-axis inductance (Ld)	9999	0 to 500 mH, 9999*4	Tuning data of the second motor. (The value measured by offline auto tuning is automatically
461 C223	Second motor constant (L2) / q-axis inductance (Lq)	9999	0 to 500 mH, 9999*4	set.) 9999: Inverter internal data is used.
860 C226	Second motor torque current/Rated PM motor current	9999	0 to 500 A, 9999*4	
738	Second motor induced	9999	0 to 5000 mV (rad/s)*4	Set this parameter according to the PM motor specifications.
C230	voltage constant (phi f)	J333	9999	The value calculated from the parameter setting for motor constant is used.
1413 C235	Second motor induced voltage constant (phi f)	9999	0 to 2	Set the exponent n when the induced voltage constant phi f (Pr.738) is multiplied by 10 ⁿ .
	exponent		9999	No exponent setting

Pr.	Name	Initial value	Setting range	Description
739 C231	Second motor Ld decay ratio	9999	0% to 100%, 9999	
740 C232	Second motor Lq decay ratio	9999	0% to 100%, 9999	Tuning data of the second motor. (The value measured by offline auto tuning is automatically
741 C282	Second motor starting resistance tuning compensation coefficient 1	9999	0% to 200%, 9999	set.) 9999: Inverter internal data is used.
742 C285	Second motor magnetic pole detection pulse width	9999	0 to 6000 µs, 9999	
746	Second motor protection	9999	100% to 500%	Set the maximum current (OCT) level of the second motor.
C233	current level	שששש	9999	200%

- *1 The setting range for the 575 V class is "0, 3, 5, 6, 10, 13, 15, 16, 30, 33, 8090, 8093, 9090, and 9093".
- *2 The initial value for the FR-E820-0050(0.75K) or lower, the FR-E840-0026(0.75K) or lower, the FR-E860-0017(0.75K), and the FR-E820S-0050(0.75K) or lower is set to the 85% of the inverter rated current.
- *3 The initial value differs according to the voltage class (200/400/575 V).
- *4 The setting range and unit change according to the Pr.71 (Pr.450) setting.

Point P

- The settings are valid under PM sensorless vector control.
- The offline auto tuning enables the operation with IPM motors and SPM motors. (When a PM motor is used, always perform offline auto tuning.)
- · Tuning is enabled even when a load is connected to the motor.
- Reading/writing of the motor constants tuned by offline auto tuning are enabled.
- The offline auto tuning status can be monitored on the operation panel.

Before performing offline auto tuning

Check the following points before performing offline auto tuning:

- Check that PM sensorless vector control is selected. (Refer to page 97.)
- · Check that a motor is connected. (Check that the motor is not rotated by an external force during tuning.)
- The rated motor current should be equal to or less than the inverter rated current. (Note that the motor rated current should be 0.4 kW or higher (0.1 kW or higher for the 200 V class).)
 - If a motor with substantially low rated current compared with the inverter rated current, however, is used, speed and torque accuracies may deteriorate due to torque ripples, etc. Set the rated motor current to about 40% or higher of the inverter rated current.
- The maximum frequency under PM sensorless vector control is 400 Hz.
- Tuning is enabled even when a load is connected to the motor. The motor may run slightly. Fix the motor securely with a mechanical brake, or before tuning, make sure that it is safe even if the motor rotates. (Caution is required especially in vertical lift applications.) Note that even if the motor runs slightly, tuning performance is unaffected.
- · Tuning may be disabled depending on the motor characteristics.

♦ Settings

• To perform tuning, set the following parameters about the motor.

First motor Pr.	Second motor Pr.	Name	Setting
80	453	Motor capacity	Motor capacity (kW)
81	454	Number of motor poles	Number of motor poles (2 to 12)
9	51	Electronic thermal O/L relay	Rated motor current (A)
84	457	Rated motor frequency	Rated motor frequency (Hz)
83	456	Rated motor voltage	Rated motor voltage (V)
71	450 Applied motor	8090, 8093 (IPM motor),	
' '	450	Applied motor	9090, 9093 (SPM motor)*1
96	463	Auto tuning setting/status	1

*1 Set **Pr.71 Applied motor** according to the motor to be used. According to the **Pr.71** setting, the range of the motor constant parameter setting values and units can be changed. (For other setting values of **Pr.71**, refer to page 340.)

Motor	Pr.71 sett	ing	
WIOTOI	Motor constant parameter Ω, mH, and A unit setting	Motor constant parameter internal data setting	
IPM motor	8090	8093	
SPM motor	9090	9093	

· For tuning accuracy improvement, set the following parameters when the motor constants are known in advance.

First motor Pr.	Second motor Pr.	Name	Setting
702	743	Maximum motor frequency	Maximum motor frequency (Hz)
707	744	Motor inertia (integer)	Motor inertia ^{*1}
724	745	Motor inertia (exponent)	$Jm = Pr.707 \times 10^{(-Pr.724)} (kg \cdot m^2)$
725	746	Motor protection current level	Maximum current level of the motor (%)

*1 The setting is valid only when a value other than "9999" is set in both Pr.707 (Pr.744) and Pr.724 (Pr.745).

Performing tuning



- Before performing tuning, check the monitor display of the operation panel if the inverter is in the state ready for tuning. The
 motor starts by turning ON the start command while tuning is unavailable.
- In the PU operation mode, press the RUN key on the operation panel.
 In the External operation, turn ON the start command (STF signal or STR signal). Tuning starts.



- · Satisfy the required inverter start conditions to start offline auto tuning. For example, stop the input of the MRS signal.
- To force tuning to end, use the MRS or RES signal or the STOP/RESET key on the operation panel. (Turning OFF the start signal (STF signal or STR signal) also ends tuning.)
- During offline auto tuning, only the following I/O signals are valid (initial value).
 Input terminals <effective signals>: MRS, RES, STF, STR, S1, and S2
 Output terminals: RUN, FM, AM, ABC, and SO
- When the rotation speed and the output frequency are selected for terminals FM and AM, the progress status of offline auto tuning is output in 15 steps from FM and AM (in the standard model).
- Do not perform ON/OFF switching of the Second function selection (RT) signal during offline auto tuning. Auto tuning will not be performed properly.
- A motor with 14 or more poles cannot be tuned.
- Since the Inverter running (RUN) signal turns ON when tuning is started, pay close attention especially when a sequence which releases a mechanical brake by the RUN signal has been designed.
- When executing offline auto tuning, input the operation command after switching ON the main circuit power (R/L1, S/L2, T/L3)
 of the inverter.
- While **Pr.79 Operation mode selection** = "7", turn ON the PU operation external interlock (X12) signal for tuning in the PU operation mode.
- Setting offline auto tuning (Pr.96 = "1") will make pre-excitation invalid.

• During tuning, the monitor is displayed on the operation panel as follows.

Tuning status	Operation panel indication	LCD operation panel (FR-LU08) display
(1) Setting	Hz PU MON RUN HZ EXT PRM PPM NET P.RUN	AutoTune 12:34 TUNE 1 STOP PU PREV NEXT
(2) During tuning	Hz PU MON RUN PU HZ EXT PRM PM NET PRUN	AutoTune 12:34 TUNE
(3) Normal completion	Hz PU MON AUN Hz EXT PRIPOSM NET PRUN	AutoTune 12:34 TUNE

When offline auto tuning ends, press the STOP/RESET key on the operation panel during PU operation. In the External
operation, turn OFF the start signal (STF signal or STR signal). This operation resets the offline auto tuning, and the
monitor display of the operation panel returns to normal. (Without this operation, next operation cannot be started.)



- The motor constants measured once during offline auto tuning are stored as parameters and their data are held until offline auto tuning is performed again. However, the tuning data is cleared when performing All parameter clear.
- Changing **Pr.71** after tuning completion will change the motor constant. For example, if the **Pr.71** setting is changed to "8093" after tuned with **Pr.71** = "8090", the tuning data become invalid. To use the tuned data, set "8090" again in **Pr.71**.
- If offline auto tuning has ended in error (see the following table), motor constants are not set.

 Perform an inverter reset and perform tuning again.

Error display	Error cause	Countermeasures
8	Forced end	Set "1" in Pr.96 (Pr.463) and retry.
9	Inverter protective function operation	Make the setting again.
92	The converter output voltage fell to 75% of the rated voltage.	Check for the power supply voltage fluctuation. Check the Pr.83 Rated motor voltage setting.
93	Calculation error. The motor is not connected.	Check the motor wiring and make the setting again.

• When tuning is ended forcibly by pressing the STOP/RESET key or turning OFF the start signal (STF or STR) during tuning, offline tuning does not end properly. (The motor constants have not been set.)

Perform an inverter reset and perform tuning again.

NOTE

- An instantaneous power failure occurring during tuning will result in a tuning error.
 After power is restored, the inverter starts normal operation. Therefore, when the STF (STR) signal is ON, the motor starts forward (reverse) rotation.
- Any fault occurring during tuning is handled as in the normal operation. However, if the retry function is set, no retry is performed even when a protective function that performs a retry is activated.
- The set frequency monitor displayed during the offline auto tuning is 0 Hz.

∴ CAUTION

· Note that the motor may start running suddenly.

◆ Parameters updated by tuning results after tuning

First motor Pr.	Second motor Pr.	Name	Description
90	458	Motor constant (R1)	Resistance per phase
92	460	Motor constant (L1)/d-axis inductance (Ld)	d-axis inductance
93	461	Motor constant (L2)/q-axis inductance (Lq)	q-axis inductance
711	739	Motor Ld decay ratio	d-axis inductance decay ratio
712	740	Motor Lq decay ratio	q-axis inductance decay ratio
717	741	Starting resistance tuning compensation coefficient 1	
721	742	Starting magnetic pole position detection pulse width	
859	860	Torque current/Rated PM motor current	
96	463	Auto tuning setting/status	

◆ Tuning adjustment (Pr.1002)

 The overcurrent protective function may be activated during Lq tuning for an easily magnetically saturated motor (motor with a large Lq decay ratio). In such case, adjust the target flowing current used for tuning with Pr.1002 Lq tuning target current adjustment coefficient.

Changing the motor constants

- The motor constants can be set directly when the motor constants are known in advance, or by using the data measured during offline auto tuning.
- According to the **Pr.71 (Pr.450)** setting, the range of the motor constant parameter setting values and units can be changed. The changed settings are stored in the EEPROM as the motor constant parameters.

Changing the motor constants (when setting motor constants in units of Ω, mH, or A)

· Set Pr.71 as follows.

Motor	Pr.71 setting
IPM motor	8090
SPM motor	9090

Set desired values as the motor constant parameters.

First motor Pr.	Second motor Pr.	Name	Setting range	Setting increments	Initial value
90	458	Motor constant (R1)	0 to 50 Ω, 9999	0.001 Ω	
92	460	Motor constant (L1)/d-axis inductance (Ld)	0 to 500 mH, 9999	0.01 mH	
93	461	Motor constant (L2)/q-axis inductance (Lq) 0 to 500 mH, 999		0.01 mH	9999
706	738	Induced voltage constant (phi f)	0 to 5000 mV (rad/s), 9999	0.1 mV (rad/s)	9999
859	860	orque current/Rated PM motor current 0 to 500 A, 9999		0.01 A	
1412	1413	Motor induced voltage constant (phi f) exponent	0 to 2, 9999	1	

NOTE

- If "9999" is set in the motor constant parameters, tuning data will be invalid and the inverter internal constant is used.
- To change a motor induced voltage constant of PM motors, the setting in Pr.706 Induced voltage constant (phi f) or Pr.738
 Second motor induced voltage constant (phi f) must be changed. If the constant after the change exceeds the setting range of Pr.706 or Pr.738 (0 to 5000 mV (rad/s)), set Pr.1412 Motor induced voltage constant (phi f) exponent or Pr.1413
 Second motor induced voltage constant (phi f) exponent. Set a value in the exponent n in the formula, Pr.706 (Pr.738) × 10ⁿ [mV (rad/s)], to set the induced voltage constant (phi f).
- When Pr.71 (Pr.450) = "8093 or 9093", or Pr.1412 (Pr.1413) = "9999", the motor induced voltage constant is as set in Pr.706 (Pr.738). (No exponent setting)

Changing the motor constants (when setting a motor constants in the internal data of the inverter)

· Set Pr.71 as follows.

Motor	Pr.71 setting
IPM motor	8093
SPM motor	9093

· Set desired values as the motor constant parameters.

First motor Pr.	Second motor Pr.	Name	Setting range	Setting increments	Initial value
90	458	Motor constant (R1)			
92	460	Motor constant (L1)/d-axis inductance (Ld)			
93	461	Motor constant (L2)/q-axis inductance (Lq)	0 to ***. 9999	1	9999
706	738	Induced voltage constant (phi f)	010 , 9999	1	9999
859	860	Torque current/Rated PM motor current			
1412	1413	Motor induced voltage constant (phi f) exponent			



- As the motor constants measured in the offline auto tuning have been converted into internal data (****), refer to the following setting example when making setting. (The value displayed has been converted into a value for internal use. Therefore, simple addition of a value to the displayed value does not bring the desired effect.)
 Setting example: to slightly increase the Pr.90 value (5%)
 - When "2516" is displayed for **Pr.90**, set 2642 (2516 \times 1.05 = 2641.8) in **Pr.90**.
- If "9999" is set in the motor constant parameters, tuning data will be invalid and the inverter internal constant is used.
- To change a motor induced voltage constant of PM motors, the setting in Pr.706 Induced voltage constant (phi f) or Pr.738
 Second motor induced voltage constant (phi f) must be changed. If the constant after the change exceeds the setting range of Pr.706 or Pr.738 (0 to 5000 mV (rad/s)), set Pr.1412 Motor induced voltage constant (phi f) exponent or Pr.1413

 Second motor induced voltage constant (phi f) exponent. Set a value in the exponent n in the formula, Pr.706 (Pr.738) × 10ⁿ [mV (rad/s)], to set the induced voltage constant (phi f).
- When Pr.71 (Pr.450) = "8093 or 9093", or Pr.1412 (Pr.1413) = "9999", the motor induced voltage constant is as set in Pr.706 (Pr.738). (No exponent setting)

Parameters referred to

Pr.9 Electronic thermal O/L relay page 238

Pr.71 Applied motor page 340

Pr.178 to Pr.189 (Input terminal function selection) 🖙 page 328

14.4 Online auto tuning

Magneticiflux Sensorless Vector

If online auto tuning is selected under Advanced magnetic flux vector control, Real sensorless vector control, or Vector control, favorable torque accuracy is retained by adjusting temperature even when the resistance value varies due to increase in the motor temperature.

Pr.	Name	Initial value	Setting range	Description
95	Online auto tuning selection	0	0	Online auto tuning is not performed at startup.
C111	Online auto turning selection	0	1	Online auto tuning is performed at startup.
574 C211	Second motor online auto tuning	0	0, 1	Select online auto tuning for the second motor. (The settings are the same as those in Pr.95 .)
717	Starting registance tuning		9999	100%
C182	3 11 11 3		0% to 200%	R1 compensation coefficient for start-time tuning
720	Starting registance tuning	9999	9999	100%
C188	Starting resistance tuning compensation coefficient		0% to 200%	R2 compensation coefficient for start-time tuning
741	Second motor starting registance		9999	100%
C282	Second motor starting resistance tuning compensation coefficient 1	9999	0% to 200%	R1 compensation coefficient for start-time tuning (for the second motor)
737	Starting registance tuning		9999	100%
C288	Starting resistance tuning compensation coefficient 2	9999	0% to 200%	R2 compensation coefficient for start-time tuning (for the second motor)

◆ Online auto tuning at startup (Pr.95/Pr.574 = "1")

- By promptly tuning the motor status at startup, accurate operation without being affected by motor temperature is achieved.

 Also high torque can be provided at very low speed and stable operation is possible.
- · Make sure to perform offline auto tuning before performing online auto tuning.

Operating procedure

- **1.** Perform offline auto tuning. (Refer to page 345.)
- 2. Check that Pr.96 Auto tuning setting/status = "3" (offline auto tuning completion) and values other than "9999" are set in Pr.717 (Pr.741) and Pr.720 (Pr.737).
- **3.** Set **Pr.95 Online auto tuning selection** = "1" (online auto tuning at start). Online auto tuning is enabled at the next start.
- **4.** Check that the following parameters are set before starting operation.

Pr.	Description					
9	Rated motor current or electronic thermal O/L relay					
71	Applied motor					
80	Motor capacity (with the rated motor current equal to or less than the inverter rated current)*1					
81	Number of motor poles					

^{*1} If a motor with substantially low rated current compared with the inverter rated current is used, speed and torque accuracies may deteriorate due to torque ripples, etc. Set the rated motor current to about 40% or higher of the inverter rated current.


5. In the PU operation mode, press the RUN key on the operation panel. In the External operation, turn ON the start command (STF signal or STR signal).



- To perform the online auto tuning at startup for a lift, consider using a brake sequence function for the brake opening timing at a start. The tuning takes about 500 ms at the most after starting. However, during this time, it is possible that not enough torque is provided and caution is required to prevent the object from dropping. (Refer to page 370).
- · Perform online auto tuning at startup when the motor is stopped.
- The online auto tuning is disabled when the MRS signal is being input, the setting speed is **Pr.13 Starting frequency** or lower (V/F control, Advanced magnetic flux vector control), an inverter fault is occurring, or the inverter's startup condition is not satisfied.
- Online auto tuning does not operate during deceleration and restart from DC injection brake operation.
- · It is disabled during JOG operation.
- If automatic restart after instantaneous power failure is selected, automatic restart is prioritized. (Online auto tuning at startup is not performed during frequency search.)
- · Zero current detection and output current detection are enabled during online auto tuning.
- The RUN signal is not output during online auto tuning. The RUN signal is turned ON at operation startup.
- If the time between the inverter stop and restart is within 4 seconds, tuning is performed at startup but its result will not be applied.

Start-time tuning completion (Y39) signal

- The start-time tuning completion (Y39) signal can be output when the start-time tuning completes.
- To use the Y39 signal, set "39" (positive logic) or "139" (negative logic) in any parameter from **Pr.190 to Pr.196 (Output terminal function selection)** to assign the function to an output terminal.

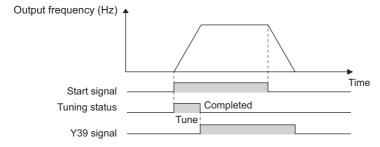



• Changing the terminal assignment using **Pr.190 to Pr.196 (Output terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

◆ Tuning the second motor (Pr.574)

- When one inverter switches the operation between two different motors, set the second motor in Pr.450 Second applied motor. (In the initial setting, no second motor is applied. (Refer to page 340.))
- · Perform tuning using Pr.574 Second motor online auto tuning.
- Pr.574 is enabled when the Second function selection (RT) signal is turned ON.

Pr.	Description
450	Applied motor
453	Motor capacity (with the rated motor current equal to or less than the inverter rated current)*1
454	Number of motor poles

*1 If a motor with substantially low rated current compared with the inverter rated current is used, speed and torque accuracies may deteriorate due to torque ripples, etc. Set the rated motor current to about 40% or higher of the inverter rated current.



- The RT signal is the Second function selection signal. The RT signal also enables other second functions. (Refer to page 328.)
 To use the RT signal, set "3" in any parameter from Pr.178 to Pr.189 (Input terminal function selection) to assign the function to an input terminal.
- Changing the terminal assignment using **Pr.178 to Pr.189 (Input terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

Pr.71 Applied motor page 340
Pr.80 Motor capacity page 97, page 345, page 355
Pr.81 Number of motor poles page 97, page 345, page 355
Pr.96 Auto tuning setting/status page 345, page 355
Pr.178 to Pr.189 (Input terminal function selection) page 328
Pr.190 to Pr.196 (Output terminal function selection) page 292
Pr.800 Control method selection page 97

14.5 Parameter settings for a motor with encoder

◆ Parameters for the encoder (Pr.359, Pr.369)

• Set the encoder specifications.

Pr.	Name	Initial value	Setting range	Description
359	Encoder rotation direction	101	100	Set when using a motor (encoder) for which forward rotation is clockwise (CW) viewed from the shaft.
C141	Encoder rotation direction 101		101	Set when using a motor for which forward rotation (encoder) is counterclockwise (CCW) viewed from the shaft.
369 C140	Number of encoder pulses	1024	2 to 4096	Set the number of encoder pulses. Set the number of pulses before it is multiplied by 4.

The parameters above can be set when the FR-A8AP E kit Vector control compatible option is installed.

◆ Parameter settings for the motor under Vector control

Motor model		Pr.9 Electronic thermal O/L relay	Pr.71 Applied motor	Pr.80 Motor capacity	Pr.81 Number of motor poles	Pr.359 Encoder rotation direction	Pr.369 Number of encoder pulses
Mitsubishi Electric high- performance energy-saving motor with encoder	SF-PR-SC	Rated motor current*4	70	Motor capacity	Number of motor poles	101 (initial value)	2048
Mitsubishi Electric Vector control dedicated motor	SF-V5RU (1500 r/ min series)	0*3	30	Motor capacity	4	101 (initial value)	2048
Mitsubishi Electric	GM-DP	Rated motor current	1800	Motor capacity	4	101 (initial value)	1024 (initial value)
inverter-driven geared motor for encoder feedback control	GM-DZ	Rated motor current	1800 (1803)*1	Motor capacity	4	101 (initial value)	1024 (initial value)
Mitsubishi	SF-JR	Rated motor current	0 (initial value)	Motor capacity	Number of motor poles	101 (initial value)	1024 (initial value)
Electric standard efficiency motor	SF-JR 4P 1.5 kW or lower	Rated motor current	20	Motor capacity	4	101 (initial value)	1024 (initial value)
Mitsubishi Electric high-	SF-HR	Rated motor current	40	Motor capacity	Number of motor poles	101 (initial value)	1024 (initial value)
efficiency motor	Others	Rated motor current	0 (3)*1	Motor capacity	Number of motor poles	*2	*2
Mitsubishi	SF-JRCA 4P	Rated motor current	10	Motor capacity	4	101 (initial value)	1024 (initial value)
Electric constant-torque	SF-HRCA	Rated motor current	50	Motor capacity	Number of motor poles	101 (initial value)	1024 (initial value)
motor	Others	Rated motor current	10 (13) ^{*1}	Motor capacity	Number of motor poles	*2	*2
Other manufacturer's standard motor	_	Rated motor current	0 (3)*1	Motor capacity	Number of motor poles	*2	*2
Other manufacturer's constant-torque motor	_	Rated motor current	10 (13) ^{*1}	Motor capacity	Number of motor poles	*2	*2

- *1 Offline auto tuning is required. (Refer to page 345.)
- *2 Set this parameter according to the motor.
- *3 Use the thermal protector input provided with the motor.
- *4 When using a motor equipped with a thermal protector, set "0" to protect the motor from overheating.
- · When using the inverter with the SF-V5RU (1500 r/min series), refer to the following table to set Pr.83 Rated motor voltage and Pr.84 Rated motor frequency.

Matau	SF-V5RU					
Motor capacity	20	0 V	400 V			
capacity	Pr.83 (V)	Pr.84 (Hz)	Pr.83 (V)	Pr.84 (Hz)		
1.5 kW	188	50	345	50		
2.2 kW	188	50	360	50		
3.7 kW	190	50	363	50		
5.5 kW	165	50	322	50		

♦ Combination with the Vector control dedicated motor

When using the inverter with a Vector control dedicated motor, refer to the following table.

• Combination with the SF-V5RU (ND rating)

Voltage		200 V class		400 V class				
Rated speed		1500 r/min						
Base frequency			50	Hz				
Maximum speed		3000 r/min						
Motor capacity	Motor frame Motor model		Inverter model FR-E820-[]	Motor frame No.	Motor model	Inverter model FR-E840-[]		
1.5 kW	90L	SF-V5RU1K	0110(2.2K)	90L	SF-V5RUH1K	0060(2.2K)		
2.2 kW	100L	SF-V5RU2K	0175(3.7K)	100L	SF-V5RUH2K	0060(2.2K)		
3.7 kW	112M	SF-V5RU3K	0240(5.5K)	112M	SF-V5RUH3K	0095(3.7K)		
5.5 kW	132S	SF-V5RU5K	0330(7.5K)	132S	SF-V5RUH5K	0170(7.5K)		

14.6 Signal loss detection of encoder signals

V/F Magnetic flux Vector

Signal loss detection (E.ECT) is activated to shut off the inverter output when the encoder signal is lost during encoder feedback control or under Vector control.

Pr.	Name	Initial value	Setting range	Description
376	Encoder signal loss	0	0	Signal loss detection disabled
C148 ^{*1}	detection enable/disable selection		1	Signal loss detection enabled

^{*1} The setting is available when a Vector control compatible plug-in option is installed.

CHAPTER 15 (A) Application Parameters

15.1	Proke aggregation function	270
	Brake sequence function	
15.2	Stop-on-contact control	375
15.3	Traverse function	378
15.4	PID control	380
15.5	Calibration of PID display	393
15.6	Dancer control	396
15.7	Automatic restart after instantaneous power failure / flying start with an induction motor	403
15.8	Automatic restart after instantaneous power failure / flying start with a PM motor	408
15.9	Offline auto tuning for a frequency search	410
15.10	Power failure time deceleration-to-stop function	414
15.11	PLC function	416
15 12	Trace function	∆ 18

15 (A) Application Parameters

Purpose	Parameter to set					
To stop the motor with a mechanical brake (operation timing of mechanical brake)	Brake sequence function	P.A100 to P.A107, P.F500, P.A108, P.A109	Pr.278 to Pr.285, Pr.292, Pr.639, Pr.640	370		
To stop the motor with a mechanical brake (vibration control at stop-on-contact)	Stop-on-contact control	P.A200, P.A205, P.A206	Pr.270, Pr.275, Pr.276	375		
To strengthen or weaken the frequency at a constant cycle	Traverse operation	P.A300 to P.A305	Pr.592 to Pr.597	378		
To perform process control, such as for the pump flow volume and air volume	PID control	P.A601 to P.A604, P.A607, P.A610 to P.A615, P.A621 to P.A625	Pr.127 to Pr.134, Pr.553, Pr.554, Pr.575 to Pr.577, Pr.609, Pr.610, Pr.1015	380		
	PID display adjustment	P.A630 to P.A633	C42 to C45 (Pr.934, Pr.935)	393		
To control the dance roll for winding/ unwinding	Dancer control	P.A601, P.A602, P.A610, P.A611, P.A613 to P.A615, P.A624, P.A625, P.F020 to P.F021	Pr.44, Pr.45, Pr.128 to Pr.134, Pr.609, Pr.610	396		
	Automatic restart after instantaneous power failure / flying start function for induction motors	P.A700 to P.A703, P.A710, P.F003	Pr.57, Pr.58, Pr.162, Pr.165, Pr.299, Pr.611	403		
To restart without stopping the motor at instantaneous power failure	Frequency search accuracy improvement (V/F control, offline auto tuning)	P.A700, P.A711, P.A712, P.C110, P.C210	Pr.96, Pr.162, Pr.298, Pr.463, Pr.560	410		
	Automatic restart after instantaneous power failure / flying start function for PM motors	P.A700, P.A702, P.F003	Pr.57, Pr.162, Pr.611	408		
To decelerate the motor to a stop at power failure	Power failure time deceleration-to-stop function	P.A730	Pr.261	414		
To operate with sequence program	PLC function	P.A800, P.A801, P.A804, P.A805, P.A810 to P.A859	Pr.414, Pr.415, Pr.498, Pr.675, Pr.1150 to Pr.1199	416		
To store the operating status of the inverter in the RAM in the inverter	status of the Trace function		Pr.1020, Pr.1022 to Pr.1047	418		

15.1 **Brake sequence function**

Magneticiflux Sensorless Vector

This function outputs operation timing signals of the mechanical brake from the inverter, such as for lift applications.


This function is useful in preventing load slippage at a start due to poor mechanical brake timing and overcurrent alarm in stop status and enable secure operation.

Pr.	Name	Initial value	Setting range	Description
278 A100	Brake opening frequency	3 Hz	0 to 30 Hz	Set the frequency value calculated by adding approx. 1.0 Hz to the rated slip frequency. This can be set only when Pr.278 ≤ Pr.282 .
279 A101	Brake opening current	130%	0% to 400%	Set between 50% and 90% because load slippage is more likely to occur when a start setting is too low. The inverter rated current is regarded as 100%, or the rated motor torque is regarded as 100%. (According to Pr.639 setting)

Pr.	Name	Initial value	Setting range	Description
280 A102	Brake opening current detection time	0.3 s	0 to 2 s	Generally set between 0.1 and 0.3 s.
281 A103	Brake operation time at start	0.3 s	0 to 5 s	Set the mechanical delay time until braking eases. When Pr.292 = "8", set the value calculated by adding approx. 0.1 to 0.2 s to the mechanical delay time until braking eases.
282 A104	Brake operation frequency	6 Hz	0 to 30 Hz	Turn OFF the Brake opening request (BOF) signal and set the frequency for operating the electromagnetic brake. Generally, set the value calculated by adding 3 to 4 Hz to the Pr.278 setting value. This can be set only when Pr.282 ≥ Pr.278 .
283 A105	Brake operation time at stop	0.3 s	0 to 5 s	When Pr.292 = "7", set the value calculated by adding 0.1 s to the mechanical delay time until the brake closes. When Pr.292 = "8", set the value calculated by adding to approx. 0.2 to 0.3 s to the mechanical delay time until the brake closes.
284	Deceleration detection function selection	0	0	Deceleration detection function disabled
A106			1	The protective function is activated when the deceleration speed of the deceleration operation is not normal.
285 A107	-		0 to 30 Hz	E.MB1 (Brake sequence fault) occurs when the difference between the detection frequency and output frequency exceeds the setting value under encoder feedback control.
			9999	Overspeed detection disabled
			0	Normal operation
292 F500	Automatic acceleration/	0	1, 11	Operation with the shortest acceleration/deceleration time. (Refer to page 209.)
F300	deceleration		7	Brake sequence mode 1
			8	Brake sequence mode 2
639	Brake opening current	0	0	Brake opening by output current
A108	selection	ŭ	1	Brake opening by motor torque
640	Brake operation frequency		0	Brake closing operation by frequency command
A109	selection	0	1	Brake closing operation by the actual motor rotation speed (estimated value)

^{*1} The speed deviation excess detection frequency is used under Vector control or PM sensorless vector control. (Refer to page 130 for details.)

Connection diagram

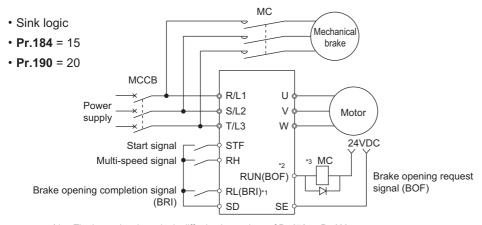

- *1 The input signal terminals differ by the settings of **Pr.178 to Pr.189**.
- *2 The output signal terminals differ by the settings of **Pr.190 to Pr.196**.
- *3 Be careful of the permissible current of the built-in transistors on the inverter. (24 VDC 0.1 A)

NOTE

- The automatic restart after instantaneous power failure function does not operate when brake sequence is selected.
- To use this function, set the acceleration/deceleration time to 1 second or higher.
- Changing the terminal assignment using **Pr.178 to Pr.189 (Input terminal function selection)** or Pr.190 to Pr.196 (Output terminal function selection) may affect the other functions. Set parameters after confirming the function of each terminal.

Setting the brake sequence operation

Set Pr.292 Automatic acceleration/deceleration = "7 or 8 (braking sequence operation)".
 To ensure sequence operation, it is recommended to use with Pr.292 = "7" (with brake opening completion signal input).


- Set "15" in any parameter from **Pr.178 to Pr.189 (Input terminal function selection)**, and assign the Brake opening completion (BRI) signal to the input terminal.
- Set "20" (positive logic) or "120" (negative logic) in any parameter from **Pr.190 to Pr.196 (Output terminal function selection)**, and assign the brake opening request signal (BOF) to the output terminal.
- Use **Pr.639 Brake opening current selection** to select whether the output current or the motor torque is used as a reference for the brake opening operation.
- Under Real sensorless vector control or Vector control, use **Pr.640 Brake operation frequency selection** to select whether the frequency command or the actual motor speed (estimated value) is used as a reference for brake closing operation. If the brake operation timing is different from the motor speed because of the load, set **Pr.640** = "1 (brake operation with the actual motor speed (estimated value))".
- Under Advanced magnetic flux vector control or encoder feedback control, the frequency command is used as a reference for brake operation regardless of the **Pr.640** setting.



· Under torque control, the brake sequence function is disabled.

◆ Operation with brake opening completion signal input (Pr.292 = "7")

- When the start signal is input to the inverter, the inverter starts running, and when the output frequency reaches the
 frequency set in Pr.278 Brake opening frequency and the output current or the motor torque is equal to or greater than
 the Pr.279 Brake opening current setting, the brake opening request signal (BOF) is output after the time set in Pr.280
 Brake opening current detection time. The Brake opening completion (BRI) signal is input, and the output frequency is
 increased to the set speed after the set time in Pr.281 Brake operation time at start.
- When the inverter decelerates to the frequency set in Pr.282 Brake operation frequency during deceleration, the inverter turns OFF the brake opening request signal (BOF) and decelerates further to the frequency set in Pr.278. After electromagnetic brake operation completes and the inverter recognizes the turn OFF of the BRI signal, the inverter holds the frequency set in Pr.278 for the time set in Pr.283 Brake operation time at stop. And after the time set in Pr.283 passes, the inverter decelerates again. The inverter outputs is shut off when the frequency reaches Pr.13 Starting frequency setting or 0.5 Hz, whichever is lower.

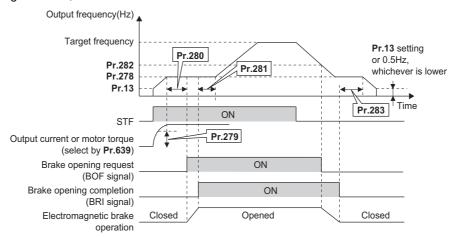


◆ Operation without Brake opening completion (Pr.292 = "8") signal input

When the start signal is input to the inverter, the inverter starts running, and when the output frequency reaches the
frequency set in Pr.278 Brake opening frequency and the output current or the motor torque is equal to or greater than
the Pr.279 Brake opening current setting, the brake opening request signal (BOF) is output after the time set in Pr.280
Brake opening current detection time.

After the BOF signal is output, the output frequency is increased to the set speed after the set time in **Pr.281 Brake** operation time at start.

• When the inverter decelerates to the frequency set to **Pr.282 Brake operation frequency** during deceleration, the inverter turns OFF the brake opening request signal (BOF) and decelerates further to the frequency set in **Pr.278**. And after the time set in **Pr.283 Brake operation time at stop** passes, the inverter decelerates again. The inverter output is shut off when the frequency reaches **Pr.13 Starting frequency** setting or 0.5 Hz, whichever is lower.

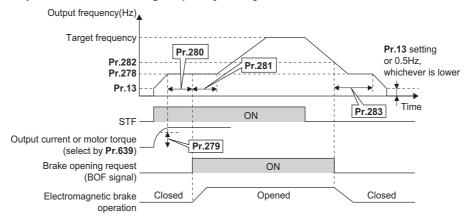

NOTE

• Even if the brake sequence operation has been selected, inputting the JOG signal (JOG operation) during an inverter stop changes the operation method to normal operation and give a priority to the JOG operation. Note that the JOG signal input by the brake sequence function is invalid during operation.


◆ Protective function

• If one of the following faults occurs while the brake sequence function is enabled, the inverter enters a fault status, shuts off output, and turns OFF the brake opening request signal (BOF).

Fault indication	Description
E.MB1	When (detection frequency) - (output frequency) > Pr.285 during encoder feedback control. (Overspeed detection function) When Pr.285 = "9999", overspeed is not detected.
E.MB2	When deceleration is not normal during deceleration operation from the set frequency to the frequency set in Pr.282 (when Pr.284 = "1") (except stall prevention operation). When Pr.284 = "0", deceleration is not detected.
E.MB3	When the BOF signal turned ON while the motor is at a stop. (Load slippage prevention function)
E.MB4	When 2 seconds or more have elapsed after the start command (forward or reverse rotation) is input, but the BOF signal does not turn ON.
E.MB5	When 2 seconds or more have elapsed after the BOF signal turned ON, but the BRI signal does not turn ON.
E.MB6	When the inverter had turned ON the brake opening request signal (BOF), but the BRI signal turned OFF.
E.MB7	When 2 seconds or more have elapsed after the BOF signal turned OFF at a stop, but the BRI signal does not turn OFF.

№ NOTE

- During deceleration, inverter output is shut OFF when the frequency reaches **Pr.13 Starting frequency** or 0.5 Hz, whichever is lower. For **Pr.278 Brake opening frequency**, set a frequency equal to or higher than the **Pr.13** setting or 0.5 Hz.
- Pr.285 Overspeed detection frequency is valid under encoder feedback control (used with the Vector control compatible
 option) even if a value other than "7 or 8" is set in Pr.292 Automatic acceleration/deceleration.
- Setting Pr.278 too high activates the stall prevention and may cause E.MB4.
- E.MB4 occurs when the time period calculated by adding **Pr.280** to the acceleration time from **Pr.13** to **Pr.278** reaches or exceeds 2 seconds.

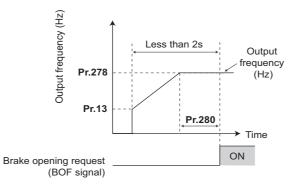

Parameters referred to

Pr.13 Starting frequency page 207

 
Pr.178 to Pr.189 (Input terminal function selection) page 328 Pr.190 to Pr.196 (Output terminal function selection) page 292

15.2 Stop-on-contact control

Magnetic flux Sensorless


To ensure accurate positioning at the upper limit, etc. of a lift, stop-on-contact control causes the mechanical brake to close while the motor creates a holding torque to keep the load in contact with a mechanical stopper, etc.

This function suppresses vibration that is likely to occur when the load is stopped upon contact in lift applications, thereby ensuring reliable and highly accurate positioning stop.




Pr.	Name	Initial value	Setting range	Description
6 D303	Multi-speed setting (low speed)	10 Hz	0 to 590 Hz	Set the output frequency for stop-on-contact control.
22 H500	Stall prevention operation level	150%	0% to 400%	Set the stall prevention operation level for stop-on-contact control.
48 H600	Second stall prevention operation level	9999	0% to 400%, 9999	The smaller value set in either Pr.22 or Pr.48 has priority.
070			0	Normal operation
270 A200		0	1	Stop-on-contact control
7200	Selection		11	Stop-on-contact control (E.OLT is invalid)
275	Stop-on contact excitation current low-speed scaling	9999	0% to 300%	Set the force (holding torque) for stop-on-contact control. Normally, set the scaling factor between 130% to 180%.
A205	factor		9999	Not compensated.
276 A206	PWM carrier frequency at stop- on contact	PWM carrier frequency at stop-		Set a PWM carrier frequency for stop-on-contact control. For Real sensorless vector control, the carrier frequency is always 2 kHz when the setting value is "0 to 5" and always 6 kHz when the setting value is "6 to 9". (Valid at the output frequency of 3 Hz or less.)
			9999	As set in Pr.72 PWM frequency selection.

♦ Connection and operation example

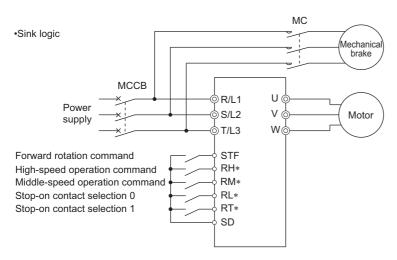

* The input terminal used differs according to the Pr.180 to Pr.189 settings.

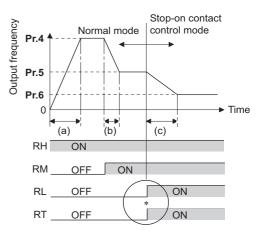

- Goes into stop-on-contact control mode when both RL and RT switch on.
 RL and RT may be switched on in any order with any time difference
- (a): Acceleration time(Pr.7)
- (b): Deceleration time(Pr.8)
- (c): Second deceleration time(Pr.44/Pr.45)

♦ Setting the stop-on-contact control

- Make sure that the inverter is in External or Network operation mode. (Refer to page 212.)
- · Select either Real sensorless vector control (speed control) or Advanced magnetic flux vector control.
- Set "1 or 11" in Pr.270 Stop-on-contact control selection.
- Set the output frequency for stop-on-contact control in Pr.6 Multi-speed setting (low speed).
 Set the frequency as low as possible (about 2 Hz). If a frequency higher than 30 Hz is set, it operates with 30 Hz.
- When both the RT and RL signals are switched ON, the inverter enters the stop-on-contact control, and operation is performed at the frequency set in **Pr.6** independently of the preceding speed.
- Setting **Pr.270** = "11" disables stall prevention stop (E.OLT) during stop-on-contact control (with both RL and RT signals ON).



- By increasing the Pr.275 setting, the low-speed (stop-on-contact) torque increases, but overcurrent fault (E.OC[]) may occur
 or the machine may oscillate in stop-on-contact status.
- The stop-on-contact function is different from the servo-lock function, and if used to stop or hold a load for an extended period, this function can cause the motor to overheat. After a stop, immediately switch to a mechanical brake to hold the load.
- Under the following operating conditions, the stop-on-contact function is invalid:
 PU operation (Pr.79), JOG operation (JOG signal), PU + External operation (Pr.79), PID control function operation (Pr.128),
 Remote setting function operation (Pr.59), Automatic acceleration/deceleration operation (Pr.292), Start time tuning

◆ Function switching of stop-on-contact control selection

Main functions		RL or RT is OFF or both OFF.)	Stop-on-contact control (Both RL and RT are ON.)		
Main functions	Real sensorless vector Advanced magnetic flux control vector control		Real sensorless vector control	Advanced magnetic flux vector control	
Output frequency	Multi-speed, 0 to 5 V, 0 to	10 V, 4 to 20 mA, etc.	Pr.6 setting		
Stall prevention operation level	_	Pr.22 setting	_	The smaller value set in either Pr.22 or Pr.48	
Torque limit level	Pr.22 setting	_	Pr.22 setting	_	
Excitation current low-speed scaling factor	_	_		d by Pr.275 (0% to 300%) ion.	
Carrier fraguency	Dr. 70 potting		When output frequency is 3 Hz or lower,		
Carrier frequency	Pr.72 setting		Pr.276 setting (Pr.72 when Pr.276 = "9999")		
Fast-response current limit	_	Enabled	_	Disabled	

◆ Set frequency and validity of the stop-on-contact control (Pr.270 = "1 or 11")

- The following table lists the frequencies set when the input terminals (RH, RM, RL, RT, JOG) are selected together.
- Stop-on-contact control is disabled when remote setting function is selected (**Pr.59** = 1 to 3).

	In	put sig	nal	Set	Stop-on-contact	
RH	RM	RL	RT	JOG	frequency	control
ON					Pr.4	
	ON				Pr.5	
		ON			Pr.6	
			ON		*1	
				ON	Pr.15	
ON	ON				Pr.26	
ON		ON			Pr.25	
ON			ON		Pr.4	
ON				ON	Pr.15	
	ON	ON			Pr.24	
	ON		ON		Pr.5	
	ON			ON	Pr.15	
		ON	ON		Pr.6	Enabled
		ON		ON	Pr.15	
			ON	ON	Pr.15	
		ON	ON	ON	Pr.15	

	In	put sig	nal	Set	Stop-on-contact	
RH	RM	RL	RT	JOG	frequency	control
	ON		ON	ON	Pr.15	
	ON	ON		ON	Pr.15	
	ON	ON	ON		Pr.6	Enabled
ON			ON	ON	Pr.15	
ON		ON		ON	Pr.15	
ON		ON	ON		Pr.6	Enabled
ON	ON			ON	Pr.15	
ON	ON		ON		Pr.26	
ON	ON	ON			Pr.27	
	ON	ON	ON	ON	Pr.15	
ON		ON	ON	ON	Pr.15	
ON	ON		ON	ON	Pr.15	
ON	ON	ON		ON	Pr.15	
ON	ON	ON	ON		Pr.6	Enabled
ON	ON	ON	ON	ON	Pr.15	
					*1	

^{*1} By 0 to 5 V (0 to 10 V), 4 to 20 mA input



• Changing the terminal assignment using Pr.178 to Pr.189 (Input terminal function selection) may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.4 to Pr.6, Pr.24 to Pr.27 (multi-speed setting) page 234

Pr.15 Jog frequency 🖅 p

Pr.15 Jog frequency Fpage 232
Pr.22 Stall prevention operation level, Pr.48 Second stall prevention operation level level page 256
Pr.22 Torque limit level page 114
Pr.59 Remote function selection page 203
Pr.72 PWM frequency selection page 184
Pr.79 Operation mode selection page 212
Pr.95 Online auto tuning selection page 362
Pr.128 PID action selection page 380
Pr.178 to Pr.189 (Input terminal function selection) page 328
Pr.292 Automatic acceleration/deceleration page 209


Pr.292 Automatic acceleration/deceleration 🖙 page 209

15.3 Traverse function

The traverse operation, which oscillates the frequency at a constant cycle, is available.

Pr.	Name	Initial value	Setting range	Description
			0	Traverse function invalid
592 A300	Traverse function selection	0	1	Traverse function valid only in External operation mode
A	selection		2	Traverse function valid regardless of the operation mode
593 A301	Maximum amplitude amount	10%	0% to 25%	Level of amplitude during traverse operation
594 A302	Amplitude compensation amount during deceleration	10%	0% to 50%	Compensation amount during amplitude inversion (from acceleration to deceleration)
595 A303	Amplitude compensation amount during acceleration	10%	0% to 50%	Compensation amount during amplitude inversion (from deceleration to acceleration)
596 A304	Amplitude acceleration time	5 s	0.1 to 3600 s	Time period of acceleration during traverse operation
597 A305	Amplitude deceleration time	5 s	0.1 to 3600 s	Time period of deceleration during traverse operation

- Setting Pr.592 Traverse function selection = "1 or 2" enables the traverse function.
- Assigning the Traverse function selection (X37) signal to the input terminal enables the traverse function only when the
 X37 signal is ON. (When the X37 signal is not assigned, the traverse function is always available.) To input the X37 signal,
 set "37" in any parameter from Pr.178 to Pr.189 (Input terminal function selection) to assign the function to a terminal.

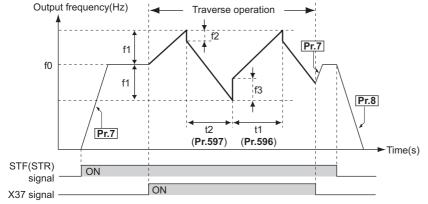

- f0: set frequency
- f1: amplitude amount from the set frequency $(f0 \times Pr.593/100)$
- f2: compensation amount at transition from acceleration to deceleration (f1 × **Pr.594**/100)
- f3: compensation amount at transition from deceleration to acceleration (f1 × **Pr.595**/100)
- t1: time from acceleration during traverse operation (Time from (f0 f1) to (f0 + f1)) (Pr.596)
- t2: time from deceleration during traverse operation (Time from (f0 + f1) to (f0 f1)) (Pr.597)
- The motor accelerates to the set frequency f0 according to the normal **Pr.7 Acceleration time** at turn ON of the start command (STF or STR).
- When the output frequency reaches f0 and the X37 signal turns ON, the inverter begins traverse operation and accelerates to f0 + f1. The acceleration time at this time is according to the **Pr.596** setting. (If the X37 signal turns ON before the output frequency reaches f0, traverse operation begins after the output frequency reaches f0.)
- After the inverter accelerates the motor to f0 + f1, this is compensated with f2 (f1 × **Pr.594**), and the motor decelerates to f0 f1. The deceleration time at this time is according to the **Pr.597** setting.
- After the inverter decelerates the motor to f0 f1, this is compensated with f3 (f1 × Pr.595), and the motor accelerates again
 to f0 + f1.
- When the X37 signal turns OFF during traverse operation, the inverter accelerates/decelerates the motor to f0 according to the normal acceleration/deceleration time (**Pr.7**, **Pr.8**). If the start command (STF or STR) is turned OFF during traverse operation, the inverter decelerates the motor to a stop according to the normal deceleration time (**Pr.8**).



- If the set frequency (f0) and traverse operation parameters (**Pr.593 to Pr.597**) are changed during traverse operation, this is applied in operations after the output frequency reaches f0 before the change was made.
- If the output frequency exceeds **Pr.1 Maximum frequency** or **Pr.2 Minimum frequency** during traverse operation, the output frequency is clamped at the maximum/minimum frequency when the set pattern exceeds the maximum/minimum frequency. (The output frequency is not clamped at minimum frequency during JOG operation.)
- When the traverse function and S-pattern acceleration/deceleration (**Pr.29** ≠ "0") are selected, S-pattern acceleration/deceleration deceleration operation occurs only in the range operated at the normal acceleration/deceleration time (**Pr.7**, **Pr.8**). Acceleration/deceleration during traverse operation is performed linearly.
- If stall prevention activates during traverse operation, traverse operation stops and normal operation begins. When stall prevention operation is completed, the inverter accelerates/decelerates to f0 at the normal acceleration/deceleration time (Pr.7, Pr.8). After the output frequency reaches f0, the traverse operation begins again.
- If the value of the amplitude inversion compensation amount (**Pr.594**, **Pr.595**) is too large, an overvoltage trip or stall prevention occurs, and pattern operation cannot be performed as set.
- Changing the terminal assignment using Pr.178 to Pr.189 (Input terminal function selection) may affect the other functions.
 Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.29 Acceleration/deceleration pattern selection page 201
Pr.178 to Pr.189 (Input terminal function selection) page 328
Pr.190 to Pr.196 (Output terminal function selection) page 292

15.4 PID control

Process control such as flow rate, air volume or pressure are possible on the inverter.


A feedback system can be configured and PID control can be performed with the set point and feed back values set by analog input signals (terminals 2 and 4) or using parameter values given via communication or by the PLC function.

Pr.	Name	Initial value	Setting range	Description
127	PID control automatic	9999	0 to 590 Hz	Set the value at which control is automatically switched to PID control.
A612	switchover frequency		9999	No PID control automatic switchover function
128 A610	PID action selection	0	0, 20, 21, 50, 51, 60, 61, 1000, 1001, 1010, 1011, 2000, 2001, 2010, 2011	Select how to input the deviation value, measured value and set point, and forward and reverse action.
			40 to 43	Refer to page 396.
129 A613	PID proportional band	100%	0.1% to 1000%	If a narrow proportional band is set (small parameter setting value), the manipulated amount changes considerably by slight changes in the measured value. As a result, response improves as the proportional band becomes narrower, though stability worsens as shown by the occurrence of hunting. Gain Kp=1/proportional band
			9999	No proportional control
130 A614	PID integral time	1 s	0.1 to 3600 s	With deviation step input, this is the time (Ti) used for obtaining the same manipulated amount as proportional band (P) by only integral (I) action. Arrival to the set point becomes quicker the shorter an integral time is set, though hunting is more likely to occur.
			9999	No integral control
131 A601	PID upper limit	9999	0% to 100%	Set the upper limit. The FUP signal is output when the feedback value exceeds this setting. The maximum input (20 mA/5 V/10 V) of the measured value is equivalent to 100%.
			9999	No function
132 A602	PID lower limit	9999	0% to 100%	Set the lower limit. The FDN signal is output when the measured value falls below the setting range. The maximum input (20 mA/5 V/ 10 V) of the measured value is equivalent to 100%.
			9999	No function
133	PID action set point	9999	0% to 100%	Set the set point during PID control.
A611	1 12 dollors out point	0000	9999	Set point set by Pr.128 .
134 A615	PID differential time	9999	0.01 to 10 s	With deviation ramp input, this is the time (Td) used for obtaining the manipulated amount only by proportional action (P). Response to changes in deviation increase greatly as the differential time increases.
			9999	No differential control
553	PID deviation limit	9999	0% to 100%	The Y48 signal is output when the absolute value of the deviation exceeds the deviation limit value.
A603			9999	No function
554 A604	PID signal operation selection	0	0 to 3, 10 to 13	The action when the upper or lower limit for a measured value input is detected or when a limit for the deviation is detected can be selected. The operation for PID output suspension function can be selected.
575 A621	Output interruption detection time	1 s	0 to 3600 s	When the output frequency after PID calculation stays less than the Pr.576 setting for the time set in Pr.575 or more, the inverter operation is suspended.
			9999	No output interruption function
576 A622	Output interruption detection level	0 Hz	0 to 590 Hz	Set the frequency at which output interruption is performed.
577 A623	Output interruption cancel level	1000%	900% to 1100%	Level at which the PID output suspension function is released. Set "Pr.577 - 1000%".
			2	The set point or deviation value is input through terminal 2.
609	PID set point/deviation	2	3	The set point or deviation value is input through terminal 4.
A624	input selection	2	4	The set point or deviation value is input via communication.
			5	The set point or deviation value is input by the PLC function.

Pr.	Name	Initial value	Setting range	Description
			2	The measured value is input through terminal 2.
610	PID measured value	3	3	The measured value is input through terminal 4.
A625	input selection	3	4	The measured value is input via communication.
			5	The measured value is input by the PLC function.
			0	The integral stops when the manipulated amount is limited. The range is ±100% for the manipulated amount.
1015 A607		0	1	The integral does not stop when the manipulated amount is limited. The range is ±100% for the manipulated amount.
			2	The integral stops when the manipulated amount is limited. The range is ±100% for the manipulated amount.


◆ Basic configuration of PID control

 ■ Pr.128 = "50, 51, 1010, 1011, 2010, 2011" (deviation input)



Kp: Proportionality constant Ti: Integral time S: Operator Td: Differential time

 ■ Pr.128 = "20, 21" (measured value input)




Kp: Proportionality constant Ti: Integral time S: Operator Td: Differential time

◆ PID action outline

■ PI action

PI action is a combination of proportional action (P) and integral action (I), and applies a manipulated amount according to the size of the deviation and transition or changes over time.

[Example of action when the measured value changes in a stepped manner]

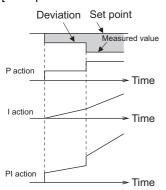


(Note) PI action is the result of P and I actions being added together.

■ PD action

PD action is a combination of proportional action (P) and differential action (D), and applies a manipulated amount according to the speed of the deviation to improve excessive characteristics.

^{*1} Set "0" to **Pr.858 Terminal 4 function assignment**. When **Pr.858** ≠ "0", PID control is invalid.


[Example of action when the measured value changes proportionately]

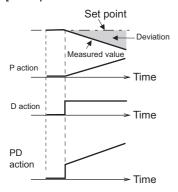

(Note) PD action is the result of P and D actions being added together.

■ PID action


PID action is a combination of PI and PD action, which enables control that incorporates the respective strengths of these actions.

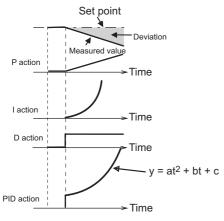

(Note) PID action is the result of all P, I and D actions being added together.


■ Reverse action

 When deviation X = (set point - measured value) is a plus value, the manipulated amount (output frequency) is increased, and when the deviation is a minus value, the manipulated amount is decreased.



■ Forward action

 When deviation X = (set point - measured value) is a minus value, the manipulated amount (output frequency) is increased, and when the deviation is a plus value, the manipulated amount is decreased.




Relationship between deviation and manipulated amount (output frequency)

PID action setting	Deviation			
FID action setting	Plus	Minus		
Reverse action	7	ע		
Forward action	Zi .	71		

◆ Connection diagram

- Sink logic
- Pr.128 = "20"
- Pr.182 = "14"
- Pr.190 = "15"
- Pr.191 = "14"
- Pr.192 = "16"

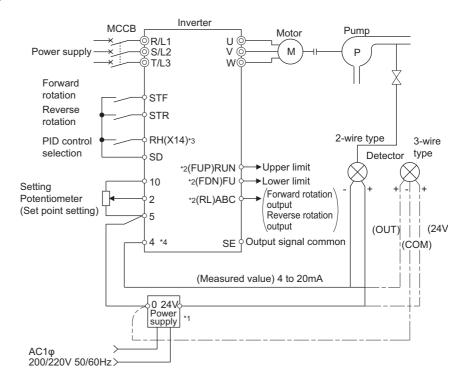

- *1 Prepare a power supply matched to the power supply specifications of the detector.
- *2 The applied output terminals differ by the settings of Pr.190 to Pr.196 (Output terminal function selection).
- *3 The applied input terminals differ by the settings of **Pr.178 to Pr.189 (Input terminal function selection)** Assigning the PID control valid (X14) signal to an input terminal enables PID control to be performed only when the X14 signal is turned ON.
- *4 The AU signal need not be input

◆ Selection of deviation value, measured value and set point input method, and PID action method (Pr.128, Pr.609, Pr.610)

• Using **Pr.128**, select the input method for the PID set point, measured value detected by the meter, and externally calculated deviation. Also, select forward or reverse action.

• Switch the power voltage/current specifications of terminals 2 and 4 by Pr.73 Analog input selection or Pr.267 Terminal 4 input selection to match the specification of the input device. After changing the Pr.73 or Pr.267 settings, check the voltage/current input selection switch. Incorrect setting may cause a fault, failure, or malfunction. (Refer to page 310 for the setting.)

Pr.128 setting	Pr.609 Pr.610	PID action	Set point input	Measured value input	Deviation input
0		PID invalid	_	_	_
20	Invalid	Reverse action	Terminal 2 or Pr.133 *1	Terminal 4	
21		Forward action	Terminal 2 or Pr.133	Terriniai 4	_
40 to 43	Enabled	Dancer control	For details on dancer control	, refer to page 396.	
50		Reverse action			0 + *2
51	Invalid	Forward action	_	_	Communication*2
60	IIIVallu	Reverse action	*2	*2	
61		Forward action	Communication*2	Communication*2	_
1000		Reverse action		According to Pr.610	
1001		Forward action	According to Pr.609*1	According to F1.010	_
1010		Reverse action		_	According to Pr.609
1011		Forward action	_		
2000		Reverse action (without		According to Pr.610	
2000	Enabled	frequency reflected)	According to Pr.609 *1		_
2001		Forward action (without	According to P1.609		
2001		frequency reflected)			
2010		Reverse action (without			
		frequency reflected)	_		According to Pr.609
2011		Forward action (without			
		frequency reflected)			

^{*1} When **Pr.133** ≠ "9999", the **Pr.133** setting is valid.

• The set point/deviation input method can also be flexibly selected by **Pr.609 PID set point/deviation input selection** and the measured value input method can be selected by **Pr.610 PID measured value input selection**. Selection by **Pr.609** and **Pr.610** is valid when **Pr.128** = "1000 to 2011".

Pr.609 to Pr.610 settings	Input method
2	Terminal 2 ^{*3}
3	Terminal 4 ^{*3}
4	Communication ^{*4}
5	PLC function

^{*3} When the same input method has been selected for the set point and measured value at **Pr.609** and **Pr.610**, set point input is invalid. (Inverter runs at set point 0%)

^{*4} CC-Link, CC-Link IE TSN, CC-Link IE Field Network Basic, and BACnet/IP is available. For details on communication, refer to the Instruction Manual of each option.



• When terminals 2 and 4 are selected for deviation input, perform bias calibration using C3 (Pr.902) and C6 (Pr.904) to prevent a minus voltage from being entered as the deviation input signal. Input of a minus voltage might damage devices and the inverter.

^{*2} CC-Link, CC-Link IE TSN, CC-Link IE Field Network Basic, and BACnet/IP is available. For the details of each communication, refer to the FR-A8NC E kit Instruction Manual or the Instruction Manual (Communication).

• The following shows the relationship between the input values of the analog input terminals and set point, measured value and deviation. (Calibration parameter initial values)

Input terminal	Input	Rel	lationship with analo	g input	Calibration parameter
iliput terililiai	specification*5	Set point Result		Deviation	Cambration parameter
	0 to 5 V	0 V = 0% 5 V = 100%	0 V = 0% 5 V = 100%	0 V = 0% 5 V = 100%	
Terminal 2	0 to 10 V	0 V = 0% 10 V = 100%	0 V = 0% 10 V = 100%	0 V = 0% 10 V = 100%	Pr.125, C2 to C4 (Pr.902, Pr.903)
	0 to 20 mA	0 mA = 0% 20 mA = 100%	0 mA = 0% 20 mA = 100%	0 mA = 0% 20 mA = 100%	
	0 to 5 V	0 to 1 V = 0% 5 V = 100%	0 to 1 V = 0% 5 V = 100%	0 V = -20% 1 V = 0% 5 V = 100%	
Terminal 4	0 to 10 V	0 to 2 V = 0% 10 V = 100%	0 to 2 V = 0% 10 V = 100%	0 V = -20% 2 V = 0% 10 V = 100%	Pr.126, C5 to C7 (Pr.904, Pr.905)
	0 to 20 mA	0 to 4 mA = 0% 20 mA = 100%	0 to 4 mA = 0% 20 mA = 100%	0 mA = -20% 4 mA = 0% 20 mA = 100%	

^{*5} Can be changed by Pr.73 Analog input selection, Pr.267 Terminal 4 input selection and the voltage/current input switch. (Refer to page 310.)



• Always calibrate the input after changing the voltage/current input specification with **Pr.73 and Pr.267**, and the voltage/current input selection switch.

◆ PID input method according to the operation mode

- · The input methods of the set point, measured value, and deviation differ depending on the operation mode as follows.
- · Set point input

PID action	n selection	Command	Command PU operation		operation	
Pr.128	Pr.609	source	External operation	BACnet/IP	Other communication*1	PLC function
60, 61	_			ANALOG VALUE 310	Communication (PID set point)*4	_
1000, 1001	4	Communication		Pr.133 setting / ANALOG VALUE 310 ^{*3}	Pr.133 setting / Communication (PID set point)*3*4	
1000, 1001	5	PLC function	_	_	_	Pr.133 setting / SD1248*2*3
20, 21	_	Pr.133 setting /	Pr.133 setting / External	Pr.133 setting / External		
1000, 1001	2, 3	External	External terminal*3	terminal*3	terminal*3	_

- *1 CC-Link, CC-Link IE TSN, and CC-Link IE Field Network Basic are available.
- *2 Input value is "0" when the PLC function is disabled. PID control is disabled when bit 0 of SD1255 is "0".
- *3 When $Pr.133 \neq "9999"$, the Pr.133 setting is used for the set point.
- *4 When communication is not specified for the command source in the Network operation mode or when the speed command source is other than communication, the set point cannot be input via communication. Instead, it can be input via an external terminal (PID control is enabled).

Measured value input

PID action	n selection	Command	PU operation	Network operation		
Pr.128	Pr.610	source	External operation	BACnet/IP	Other communication*5	PLC function
60, 61	_		PID control disabled		Communication (PID	
1000, 1001	4	Communication	(terminal 4)*6	ANALOG VALUE 311	measured value)*6	_
1000, 1001	5	PLC function	_	_	_	SD1249 ^{*7}
20, 21	_					
1000, 1001	2, 3	External	External terminal*8	External terminal*8	External terminal*8	_

^{*5} CC-Link, CC-Link IE TSN, and CC-Link IE Field Network Basic are available.

- *6 The item in the parentheses can be always monitored by the measured value monitor.
- *7 Input value is "0" when the PLC function is disabled. PID control is disabled when bit 0 of SD1255 is "0".
- The measured value is input via the external terminal set in Pr.610.
- · Deviation input

PID action	selection	Command PU operation		Network		
Pr.128	Pr.609	source	External operation	BACnet/IP	Other communication*9	PLC function
60, 61	_				Communication (DID	
1010, 1011	4	Communication	PID control disabled	ANALOG VALUE 312	Communication (PID deviation)	_
70, 71	_					
1010, 1011	5	PLC function	_	_	_	SD1248 ^{*10}
1010, 1011	2, 3	External	External terminal*11	External terminal*11	External terminal*11	_

- *9 CC-Link, CC-Link IE TSN, and CC-Link IE Field Network Basic are available.
- *10 Input value is "0" when the PLC function is disabled. PID control is disabled when bit 0 of SD1255 is "0".
- *11 The deviation is input via the external terminal set in Pr.609.

Input/output signals

- Assigning the PID control valid signal (X14) to the input terminal by Pr.178 to Pr.189 (Input terminal function selection) enables PID control to be performed only when the X14 signal is turned ON. When the X14 signal is OFF, regular inverter running is performed without PID action. (When the X14 signal is not assigned, PID control is enabled only by setting **Pr.128** ≠ "0".)
- · Input signal

Signal	Function	Pr.178 to Pr.189 setting	Description
X14	PID control valid	14	When this signal is assigned to the input terminal, PID control is enabled when this signal is ON.
X72	PID P control switchover	72	Only the proportional term is valid when this signal is turned ON. (Integral and differential values are reset.)

· Output signal

Signal	Function	Pr.190 to Pr.196 setting		Description
Olgilai	Tunction	Positive logic	Negative logic	Description
FUP	PID upper limit	15	115	Output when the measured value signal exceeds Pr.131 PID upper limit.
FDN	PID lower limit	14	114	Output when the measured value signal falls below Pr.132 PID lower limit .
RL	PID forward/reverse rotation output	16	116	"Hi" is output when the output display of the operation panel is forward rotation (the RUN LED is ON) and "Low" is output when the display is reverse rotation (the RUN LED blinks) and stop (the RUN LED is OFF).
PID	During PID control activated	47	147	Turns ON during PID control. When the PID calculation result is reflected to the output frequency (Pr.128 < "2000"), the PID signal turns OFF at turn OFF of the start signal. When the PID calculation result is not reflected to the output frequency (Pr.128 ≥ "2000"), the PID signal turns ON during PID calculation regardless of the start signal status.
Y48	PID deviation limit	48	148	Output when the absolute deviation value exceeds the limit value set in Pr.553 PID deviation limit.
SLEEP	PID output interruption	70	170	Set Pr.575 Output interruption detection time \neq "9999". This signal turns ON when the PID output suspension function is activated.


NOTE

· Changing the terminal functions with Pr.178 to Pr.189 and Pr.190 to Pr.196 may affect other functions. Set parameters after confirming the function of each terminal.

PID automatic switchover control (Pr.127)

• The system can be started up more quickly by starting up without PID control activated.

• When **Pr.127 PID control automatic switchover frequency** is set, the startup is made without PID control until the output frequency reaches the **Pr.127** setting. Once the PID control starts, the PID control is continued even if the output frequency drops to **Pr.127** setting or lower.

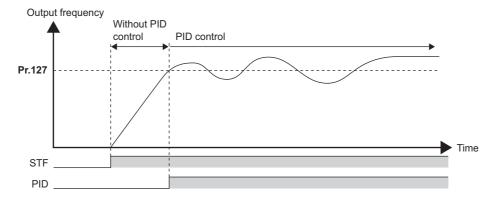

Operation selection and sleep function stop selection when a value error is detected (FUP signal, FDN signal, Y48 signal, Pr.554)

- Using Pr.554 PID signal operation selection, set the action when the measured value input exceeds the upper limit
 (Pr.131 PID upper limit) or lower limit (Pr.132 PID lower limit), or when the deviation input exceeds the permissible value
 (Pr.553 PID deviation limit).
- Choose whether to output the signals (FUP, FDN, Y48) only or to activate the protective function to output the inverter shutoff.
- · The stop action when the inverter output is shut off by the sleep function can be selected.


Pr.554 setting	Inverter operation						
Pr.554 Setting	At FUP/FDN signal output ^{*1}	At Y48 signal output ^{*1}	At sleep operation start				
0 (initial value)	Signal output only	Signal output only					
1	Signal output + output shutoff (E.PID)	Signal output only	Cocata to aton				
2	Signal output only	Signal output + output shutoff (E.PID)	Coasts to stop				
3	Signal output + output shutoff (E.PID)	Signal output + output silutoii (E.PID)					
10	Signal output only	Signal output only					
11	Signal output + output shutoff (E.PID)	Signal output only	Deceleration step				
12	Signal output only	Signal output + output shutoff (E.PID)	Deceleration stop				
13	Signal output + output shutoff (E.PID)	Signal output + output situtoii (E.PID)					


^{*1} When each of **Pr.131**, **Pr.132** and **Pr.553** settings corresponding to each of the FUP, FDN and Y48 signals is "9999" (no function), signal output and protective function are not available.

◆ PID output suspension function (sleep function) (SLEEP signal, Pr.575 to Pr.577)

- When a status where the output frequency after PID calculation is less than **Pr.576 Output interruption detection level** has continued for the time set in **Pr.575 Output interruption detection time** or longer, inverter running is suspended. This allows the amount of energy consumed in the inefficient low-speed range to be reduced.
- When the deviation (set point measured value) reaches the PID output shutoff release level (Pr.577 setting value -1000%)
 while the PID output suspension function is activated, the PID output suspension function is released, and PID control
 operation is automatically restarted.
- Whether to allow motor to coast to a stop or perform a deceleration stop when sleep operation is started can be selected using **Pr.554**.
- While the PID output suspension function is activated, the PID output interruption (SLEEP) signal is output. During this time, the Inverter running (RUN) signal turns OFF and the During PID control activated (PID) signal turns ON.

• For the terminal used for the SLEEP signal, set "70" (positive logic) or "170" (negative logic) in any parameter from **Pr.190** to **Pr.196 (Output terminal function selection)**.

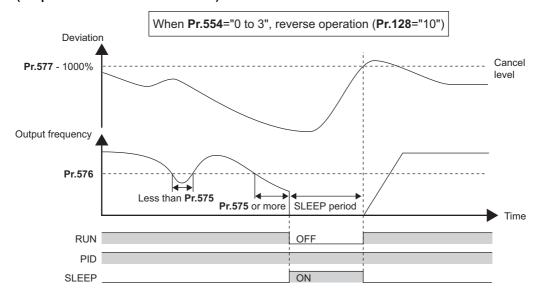

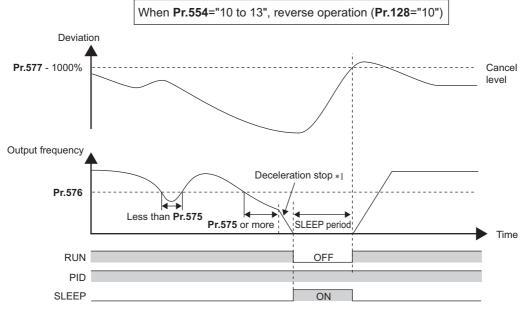

^{*1} When the PID output shutoff release level is reached during a deceleration stop, output shutoff is released, operation is re-accelerated and PID control is continued. During deceleration, **Pr.576 Output interruption detection level** is invalid.

◆ Integral stop selection when the frequency is limited (Pr.1015)

- The operation for the integral term can be selected when the frequency or the manipulated amount is limited during PID control.
- · The manipulation range can be selected.

Pr.1015 setting	Pr.1015 setting Operation at limited frequency		
0 (initial value)	Integral stop	1000/ 1- 11000/	
1	Integral does not stop.*1	-100% to +100%	
2	Integral stop	0% to 100%	

^{*1} When the frequency reaches the upper limit, or when the PID manipulated amount reaches 100%, the integral stops and the integral term is retained. When the frequency decreases, the integral does not stop until the manipulated amount reaches -100%, regardless of the output frequency.



· While the integral stop is selected, the integral stop is enabled when any of the following conditions is met.

Integral stop conditions

- The frequency reaches the upper or lower limit.
- The manipulated amount reaches plus or minus 100% (Pr.1015 = "0").
- The manipulated amount reaches 0% or 100% (Pr.1015 = "2").

◆ PID monitor function

- This function displays the PID control set point, measured value and deviation on the operation panel, and can output these from the terminals FM and AM.
- An integral value indicating a negative % can be displayed on the deviation monitor. 0% is displayed as 1000. (These values cannot be output on the deviation monitor from terminals FM.)
- Set the following values to Pr.52 Operation panel main monitor selection, Pr.774 to Pr.776 (Operation panel monitor selection), Pr.992 Operation panel setting dial push monitor selection, Pr.54 FM terminal function selection and Pr.158 AM terminal function selection for each monitor.

Dovernator	Monitor description	Minimum increment	Monitor range				
Parameter Setting			Terminal FM	Terminal AM	Operation panel	Remarks	
52	PID set point					"0" is displayed at all times when PID control	
53	PID measured value	0.1%	0% to 100% ^{*1}			is based in deviation input.	
67	PID measured value 2	0.1%	0% to 100%*1			Displays PID measured value even if the PID control operating conditions are not satisfied while the PID control is enabled. "0" is displayed at all times when PID control is based in deviation input.	
54	PID deviation	0.1%	Setting not available	-100% to 100%*1*2	900% to 1100%	Using Pr.290 Monitor negative output selection, negative values can be output to	
91	PID manipulated amount	0.1%	Setting not available	-100% to 100%* ²	900% to 1100%	the terminal AM. The indicated values are from "900%" to "1100%" on the operation panel. (0% is offset and displayed as "1000%".)	

^{*1} When C42 (Pr.934) and C44 (Pr.935) are set, the minimum increment changes from unit % to no unit, and the monitor range can be changed. (Refer to page 393.)

♦ Adjustment procedure

1. Enable PID control

When **Pr.128** \neq "0", PID control is enabled.


Set the set point, measured value and deviation input methods at Pr.128, Pr.609 and Pr.610.

- **2.** Setting the parameter
 - Adjust the PID control parameters of Pr.127, Pr.129 to Pr.134, Pr.553, Pr.554, Pr.575 to Pr.577.
- **3.** Terminal setting
 - Set the I/O terminals for PID control. (Pr.178 to Pr.189 (Input terminal function selection), Pr.190 to Pr.196 (Output terminal function selection))
- **4.** Turing ON the X14 signal assigned to the input terminal When the X14 signal is assigned to the input terminal, PID control is enabled by the X14 signal turning ON.
- **5.** Operation

^{*2} When the minus value display is set disabled using **Pr.290**, the terminal AM output becomes "0".

◆ Calibration example

(Adjust room temperature to 25°C by PID control using a detector that outputs 4 mA at 0°C and 20 mA at 50°C.)

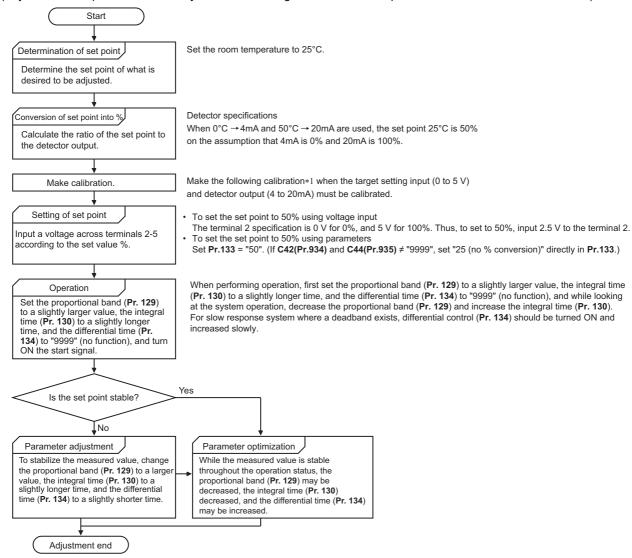

*1 When calibration is required

Calibrate the detector output and set point input by Pr.125, C2 (Pr.902) to C4 (Pr.903) (terminal 2) or Pr.126, C5 (Pr.904) to C7 (Pr.905) (terminal 4). (Refer to page 318.)

When both C42 (Pr.934) and C44 (Pr.935) ≠ "9999", calibrate the detector output and set point input by C42 (Pr.934) and C44 (Pr.935). (Refer to page 393.)

Make calibration in the PU operation mode during an inverter stop.

Calibrating set point input

(Example: To enter the set point on terminal 2)


- 1. Apply the input (for example, 0 V) of set point setting 0% across terminals 2 and 5.
- **2.** Using **C2** (**Pr.902**), enter the frequency (for example, 0 Hz) to be output by the inverter when the deviation is 0%.
- **3.** Using C3 (Pr.902), set the voltage value at 0%.
- **4.** Apply the input (for example, 5 V) of set point setting 100% across terminals 2 and 5.
- **5.** Using **Pr.125**, enter the frequency (for example, 60 Hz) to be output by the inverter when the deviation is 100%.
- **6.** Using **C4 (Pr.903)**, set the voltage value at 100%.





- When the set point is set by using **Pr.133**, the setting frequency of **C2** (**Pr.902**) is equivalent to 0% and the setting frequency of **Pr.125** is equivalent to 100%.
- · Measured value input calibration
 - **1.** Apply the input (for example, 4 mA) of measured value 0% across terminals 4 and 5.
 - 2. Perform calibration by C6 (Pr.904).
 - **3.** Apply the input (for example, 20 mA) of measured value 100% across terminals 4 and 5.
 - 4. Perform calibration by C7 (Pr.905).

NOTE

- Set the frequencies set in C5 (Pr.904) and Pr.126 to each of the same values set in C2 (Pr.902) and Pr.125.
- The display unit for analog input can be changed from "%" to "V" or "mA". (Refer to page 318.)
- The following figure shows the results of having performed the calibration above.

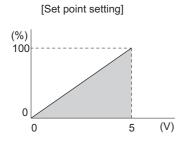

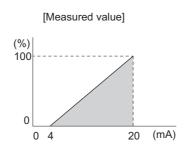

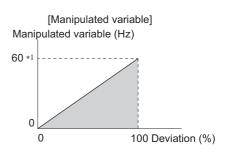

*1 The upper limit of the manipulated amount is the **Pr.125** setting value.

NOTE


- Even if the X14 signal is ON, PID control is stopped and multi-speed or JOG operation is performed when the multi-speed operation (RH, RM, RL, or REX) signal or JOG signal (JOG operation) is input.
- PID control is invalid under the following settings.

Pr.79 Operation mode selection = "6" (Switchover mode)

- To use terminal 4 input in PID control, set "0" (initial value) to **Pr.858 Terminal 4 function assignment**. When a value other than "0", PID control is invalid.
- Changing the terminal functions with Pr.178 to Pr.189 and Pr.190 to Pr.196 may affect other functions. Set parameters after confirming the function of each terminal.
- When PID control is selected, the minimum frequency becomes the frequency of C2 (Pr.902) and the maximum frequency becomes the frequency of Pr.125.

(The Pr.1 Maximum frequency and Pr.2 Minimum frequency settings also are valid.)

- · During PID operation, the remote operation function is invalid.
- When control is switched to PID control during normal operation, the frequency during that operation is not carried over, and the value resulting from PID calculation referenced to 0 Hz becomes the command frequency.

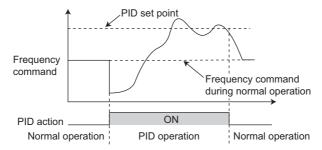

Operation when control is switched to PID control during normal operation

Pr.73 Analog input selection page 310
Pr.79 Operation mode selection page 212
Pr.178 to Pr.189 (Input terminal function selection) page 328
Pr.190 to Pr.196 (Output terminal function selection) page 292
Pr.290 Monitor negative output selection page 279
C2 (Pr.902) to C7 (Pr.905) Frequency setting voltage (current) bias/gain page 318

15.5 Calibration of PID display


When the operation panel or the parameter unit (FR-PU07) is used, the display unit of parameters and monitor items related to PID control can be changed to various units.

Pr.	Name	Initial value	Setting range	Description
759 A600 PID unit selection		0	0 to 43	Change the unit of the PID control-related values that is displayed on the LCD operation panel (FR-LU08) or the parameter unit (FR-PU07).
			9999	Without display unit switching
C42 (934) A630 ^{*1} PID display bias coeffic	PID display bias coefficient	9999	0 to 500	Set the coefficient of the bias side (minimum) of measured value input.
			9999	Displayed in %.
C43 (934) A631 ^{*1}	PID display bias analog value	20%	0% to 300%	Set the converted % of the bias side (minimum) current/voltage of measured value input.
C44 (935) A632 ^{*1} PID display gain co	PID display gain coefficient	9999	0 to 500	Set the coefficient of the gain side (maximum) of measured value input.
			9999	Displayed in %.
C45 (935) A633 ^{*1}	PID display gain analog value	100%	0% to 300%	Set the converted % of the gain side (maximum) current/voltage of measured value input.

^{*1} On the LCD operation panel or the parameter unit used as the command source, the parameter number in parentheses appears instead of that starting with the letter C.

◆ Calibration of PID display bias and gain (C42 (Pr.934) to C45 (Pr.935))

- When both C42 (Pr.934) and C44 (Pr.935) ≠ "9999", the bias and gain values for the set point, measured value and deviation in PID control can be calibrated.
- "Bias"/"gain" function can adjust the relation between PID displayed coefficient and measured value input signal that is externally input. Examples of these measured value input signals are 0 to 5 VDC, 0 to 10 VDC, or 4 to 20 mADC. (The terminals used for measured value input can be selected at **Pr.128**, **Pr.609**, **Pr.610**.)
- Set the value that is displayed when the PID measured value (control amount) is 0% to C42 (Pr.934) and the value that is displayed when the PID measured value (control amount) is 100% to C44 (Pr.935).
- When both C42 (Pr.934) and C44 (Pr.935) ≠"9999" and Pr.133 is set as the set point, the setting of C42 (Pr.934) is treated as 0%, and C44 (Pr.935) as 100%.

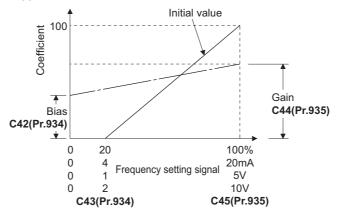

There are three methods to adjust the PID display bias/gain.
 Method to adjust any point by application of a current (voltage) to the measured value input terminal
 Method to adjust any point without application of a current (voltage) to the measured value input terminal
 Method to adjust only the display coefficient without adjustment of current (voltage)

(Refer to page 318 for details, and make the necessary adjustments by considering C7 (Pr.905) as C45 (Pr.935) and Pr.126 as C44 (Pr.935).



- Always calibrate the input after changing the voltage/current input specification with Pr.73 and Pr.267, and the voltage/current
 input selection switch.
- Take caution when the following condition is satisfied because the inverter recognizes the deviation value as a negative (positive) value even though a positive (negative) deviation is given: C42 (PID bias coefficient) > C44 (PID gain coefficient).
 To perform a reverse action, set Pr.128 PID action selection to forward action. Alternatively, to perform a forward action, set Pr.128 to reverse action. In this case, the PID output shutoff release level is (1000 Pr.577).


Pr.934 < Pr.935	(normal setting)	Pr.934 ≥ Pr.935		
Reverse action	Reverse action setting to Pr.128	Reverse action	Forward action setting to Pr.128	
Forward action	Forward action setting to Pr.128	Forward action	Reverse action setting to Pr.128	
PID output shutoff release level	Pr.577 - 1000	PID output shutoff release level	1000 - Pr.577	

(Example) Set the following: **C42 (Pr.934)** = "500", **C43 (Pr.934)** = 20% (4 mA is applied), **C44 (Pr.935)** = "100", and **C45 (Pr.935)** = 100% (20 mA is applied).

When the set point = 400 and the measured value = 360, the deviation is +40 (>0), but the inverter recognizes the deviation as -10% (<0). Because of this, operation amount does not increase in the reverse operation setting.

The operation amount increases when the forward operation is set.

To perform PID output shutoff release at deviation of +40 or higher, set **Pr.577** = "960".

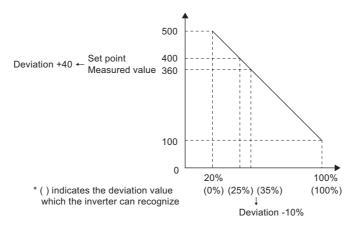

· The display of the following parameters is changed according to the C42 (Pr.934) and C44 (Pr.935) settings.

Pr.	Name		
131	PID upper limit		
132	PID lower limit		
133	PID action set point		
553	PID deviation limit		
577	Output interruption cancel level		

Changing the PID display coefficient of the LCD operation panel (FR-LU08) or the parameter unit (FR-PU07) (Pr.759)

• Use **Pr.759 PID unit selection** to change the unit of the displayed value on the FR-LU08 or the FR-PU07. For the coefficient set in **C42 (Pr.934) to C44 (Pr.935)**, the units can be changed as follows.

Pr.759 setting	Unit indication	Unit name
9999	%	%
0	_	(No indication)
1	K	Kelvin
2	С	Degree Celsius
3	F	Degree Fahrenheit
4	PSI	Pound-force per Square Inch
5	MPa	Mega Pascal
6	kPa	Kilo Pascal
7	Pa	Pascal
8	bar	Bar
9	mbr	Millibar
10	GPH	Gallon per Hour
11	GPM	Gallon per Minute
12	GPS	Gallon per Second
13	L/H	Liter per Hour
14	L/M	Liter per Minute
15	L/S	Liter per Second
16	CFH	Cubic Feet per Hour
17	CFM	Cubic Feet per Minute
18	CFS	Cubic Feet per Second
19	СМН	Cubic Meter per Hour
20	СММ	Cubic Meter per Minute

Pr.759 setting	Unit indication	Unit name
21	CMS	Cubic Meter per Second
22	ftM	Feet per Minute
23	ftS	Feet per Second
24	m/M	Meter per Minute
25	m/S	Meter per Second
26	lbH	Pound per Hour
27	lbM	Pound per Minute
28	lbS	Pound per Second
29	iWC	Inch Water Column
30	iWG	Inch Water Gauge
31	fWG	Feet of Water Gauge
32	mWG	Meter of Water Gauge
33	iHg	Inches of Mercury
34	mHg	Millimeters of Mercury
35	kgH	Kilogram per Hour
36	kgM	Kilogram per Minute
37	kgS	Kilogram per Second
38	ppm	Pulse per Minute
39	pps	Pulse per Second
40	kW	Kilowatt
41	hp	Horse Power
42	Hz	Hertz
43	rpm	Revolution per Minute

15.6 **Dancer control**


PID control is performed using detected dancer roll position as feedback data. The dancer roll is controlled to be at a designated position.

Pr.	Name	Initial value	Setting range	Description			
		5 s ^{*1}		Set the acceleration/de	eceleration time during dancer	control.	
44	Second acceleration/		0 to 3600 s	•	parameter becomes the accel	eration/deceleration	
F020	deceleration time	10 s ^{*2}	0 10 0000 5	time of the main speed.			
				_	perate as the second accelera	tion/deceleration time.	
					me during dancer control.		
45	Second deceleration	0000	0 to 3600 s	main speed.	parameter becomes the decel	eration time of the	
F021	time	9999		· ·	perate as the second deceler	ation time	
			9999	Pr.44 is the decelerati	-		
			0	No PID action			
			40	PID reverse action	Additive method: Fixed		
128			41	PID forward action	Additive method: Fixed		
A610	PID action selection	0	42	PID reverse action	Additive method: Ratio	For dancer control	
			43	PID forward action	Additive method: Ratio		
			Others	Refer to page 380.	Additive metrica. Natio		
			Otricis		al hand is set (small narameter	setting value) the	
					hanges considerably by slight		
			0.1% to	measured value.	g,,,,,	g	
129	PID proportional band	100%	1000%	As a result, response i	improves as the proportional b	and becomes	
A613					lity worsens as shown by the c	eter setting value), the ght changes in the all band becomes the occurrence of hunting. If the distribution of the distributi	
				Gain Kp=1/proportional band			
			9999	No proportional control			
			0.1 to 3600 s		out, this is the time (Ti) used for		
130	DID intogral time	1					
A614	PID integral time	1 s		Arrival to the set point becomes quicker the shorter an integral time is set, though hunting is more likely to occur.			
			9999	No integral control			
			0000	Set the upper limit.			
			00/ +- 4000/	The FUP signal is output when the feedback value exceeds this setting.			
131	PID upper limit	9999	0% to 100%	The maximum input (20 mA/5 V/10 V) of the measured value (terminal 4)			
A601				is equivalent to 100%.			
			9999	No function			
				Set the lower limit.			
400			00/ to 1000/		out when the measured value (terminal 4) falls below	
132 A602	PID lower limit	9999	0% to 100%	the setting range. The maximum input (20 mA/5 V/10 V) of the measured value is equivalent			
AUUZ				to 100%.			
			9999	No function			
133			0% to 100%	Set the set point during	g PID control.		
A611	PID action set point	9999	9999	-	rminal selected by Pr.609		
					put, this is the time (Td) used	for obtaining the	
134			0.01 to 10 s	· '	only by proportional action (P).	-	
A615	PID differential time	9999	0.01 to 10 3	, ,	in deviation increase greatly a	s the differential time	
10.0				increases.			
			9999	No differential control			
			2	The set point is input t			
609	PID set point/deviation	2	3	The set point is input t			
A624	input selection		4	The set point is input v			
			5	The set point is input by the PLC function.			
			2		s input through terminal 2.		
610	PID measured value	3	3		s input through terminal 4.		
A625	input selection	3	4	The measured value is input via communication.			
			5	The measured value is input by the PLC function.			

 $Initial\ value\ for\ the\ FR-E820-0175(3.7K)\ or\ lower,\ FR-E840-0095(3.7K)\ or\ lower,\ FR-E860-0061(3.7K)\ or\ lower,\ and\ FR-E820S-0110(2.2K)\ or\ lower,\ FR-E860-0061(3.7K)\ or\ lower,\ FR-E820S-0110(2.2K)\ or\ lower,\ FR-E860-0061(3.7K)\ or\ lower,\ FR-E820S-0110(2.2K)\ or\ lower,\ FR-E8$

 $^{^{\}star}2 \quad \text{Initial value for the FR-E820-0240(5.5K) or higher, FR-E840-0120(5.5K) or higher, and FR-E860-0090(5.5K) or higher.}$


◆ Block diagram of dancer control

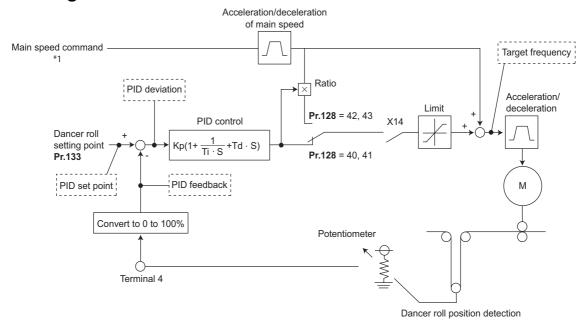

1 The main speed can be selected in all operation modes, External (analog voltage input, multi-speed), PU (digital frequency setting) and Communication.

Outline of dancer control

Dancer control is performed by setting "40 to 43" in Pr.128 PID action selection. The main speed command is the speed command for each operation mode (External, PU, and communication). PID control is performed by the dancer roll position detection signal, and the control result is added to the main speed command. For the main speed acceleration/deceleration time, set the acceleration time to Pr.44 Second acceleration/deceleration time and the deceleration time to Pr.45 Second deceleration time.

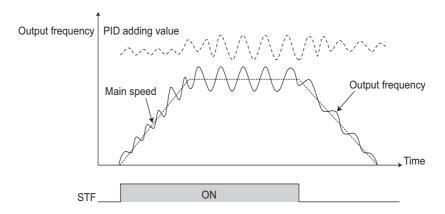


№ NOTE

- Normally, set **Pr.7 Acceleration time** and **Pr.8 Deceleration time** to 0 s. When the **Pr.7 and Pr.8** settings are large, dancer control response becomes slow during acceleration/deceleration.
- If an automatic restart after instantaneous power failure is activated during dancer control, E.OC[] or E.OV[] is likely to occur. In such case, disable the automatic restart after instantaneous power failure function (**Pr.57** = "9999").

◆ Connection diagram

- · Sink logic
- Pr.128 = "41"
- Pr.182 = "14"
- Pr.193 = "14"
- Pr.194 = "15"
- Pr.133 = Set point

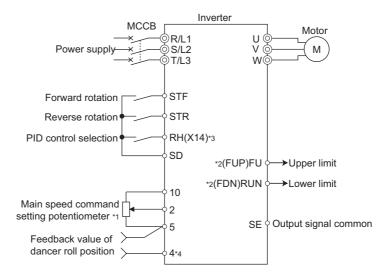

- *1 The main speed command differs according to each operation mode (External, PU, communication).
- *2 The applied output terminals differ by the settings of Pr.190 to Pr.196 (Output terminal function selection).
- *3 The applied input terminals differ by the settings of Pr.178 to Pr.189 (Input terminal function selection).
- *4 The AU signal need not be input.

◆ Dancer control operation selection (Pr.128)

Pr.128 setting	PID action	Additive method	Set point input	Measured value input
0	PID disabled	_	_	_
40	Reverse action	Fixed		
41	Forward action	rixed	Set by Pr.133 or input by terminal selected by Pr.609 *1	Input by terminal selected by Pr.610
42	Reverse action	Ratio		
43	Forward action	Ratio		
Others	Refer to page 380.			

- *1 When **Pr.133** ≠ "9999", the **Pr.133** setting is valid.
- To enable dancer control, set "40 to 43" in Pr.128 PID action selection.
- Dancer control is enabled only when the PID control valid (X14) signal turns ON when "14" is set in one of **Pr.178 to Pr.182** (Input terminal function selection) and X14 signal is assigned. When the X14 signal is not assigned, dancer control is enabled only by the **Pr.128** setting.
- Input the main speed command (External, PU, Communication). Dancer control is also supported by the main speed command in all operation modes.
- Input the set point between the terminals 2 and 5 (the setting can be selected using **Pr.133** or **Pr.609**) and input the measured value signal (dancer roll position detection signal) between the inverter terminals 4 and 5 (the setting can be selected using **Pr.610**).
- The action of Pr.129 PID proportional band, Pr.130 PID integral time, Pr.131 PID upper limit, Pr.132 PID lower limit and Pr.134 PID differential time is the same as PID control action. In the relationship between the control amount (%) and frequency in PID control, 0% is equivalent to the frequencies set in C2 (Pr.902) and 100% is equivalent to the frequencies set in Pr.125.



- When Pr.128 is set to "0" or the X14 signal is OFF, regular inverter running not dancer control is performed.
- Dancer control is enabled by turning ON/OFF the bits of terminals assigned the X14 signal by RS-485 communication or over the network.
- When dancer control is selected, set the PID output suspension function (Pr.575 Output interruption detection time = "9999").

◆ Selection of set point/measured value input method (Pr.609, Pr.610)

- Select the set point input method by Pr.609 PID set point/deviation input selection and the measured value input
 method by Pr.610 PID measured value input selection. Switch the power voltage/current specifications of terminals 2
 and 4 by Pr.73 Analog input selection or Pr.267 Terminal 4 input selection to match the specification of the input
 device
- When **Pr.133 PID action set point** ≠ "9999", **Pr.133** is the set point. When the set point is set at **Pr.133**, the setting frequency of **C2** (**Pr.902**) is equivalent to 0% and the setting frequency of **Pr.125** is equivalent to 100%.

Pr.609, Pr.610 settings	Input method
2	Terminal 2 ^{*1}
3	Terminal 4 ^{*1}
4	Communication*2
5	PLC function

- *1 When the same input method has been selected for the set point and measured value at **Pr.609** and **Pr.610**, set point input is invalid. (Inverter runs at set point 0%)
- *2 CC-Link, CC-Link IE TSN, CC-Link IE Field Network Basic, and BACnet/IP is available. For the details of each communication, refer to the FR-A8NC E kit Instruction Manual or the Instruction Manual (Communication).




- After changing the **Pr.73 or Pr.267** setting, check the voltage/current input selection switch. Incorrect setting may cause a fault, failure or malfunction. (Refer to page 310 for the setting.)
- When terminals 2 and 4 are selected for deviation input, perform bias calibration using C3 (Pr.902) and C6 (Pr.904) to prevent a minus voltage from being entered as the deviation input signal. Input of a minus voltage might damage devices and the inverter.
- The following shows the relationship between the input values of the analog input terminals, and the set point and measured value.

Input terminal	Input	Relationship w	ith analog input	Calibration parameter	
input terminai	specification*3	Set point	Result	Cambration parameter	
	0 to 5 V	0 V = 0% 5 V = 100%	0 V = 0% 5 V = 100%		
Terminal 2	0 to 10 V	0 V = 0% 10 V = 100%	0 V = 0% 10 V = 100%	Pr.125, C2 to C4 (Pr.902, Pr.903)	
	0 to 20 mA	0 mA = 0% 20 mA = 100%	0 mA = 0% 20 mA = 100%		
	0 to 5 V	0 to 1 V = 0% 5 V = 100%	0 to 1 V = 0% 5 V = 100%		
Terminal 4	0 to 10 V	0 to 2 V = 0% 10 V = 100%	0 to 2 V = 0% 10 V = 100%	Pr.126, C5 to C7 (Pr.904, Pr.905)	
	0 to 20 mA	0 to 4 mA = 0% 20 mA = 100%	0 to 4 mA = 0% 20 mA = 100%		

^{*3} Can be changed by Pr.73 and Pr.267 and the voltage/current input switch. (Refer to page 310.)

◆ Selection of additive method for PID calculation result

When ratio is selected as the additive method (Pr.128 = "42, 43"), PID calculation result × (ratio of main speed) is added to the main speed. The ratio is determined by the Pr.125 Terminal 2 frequency setting gain frequency and C2 (Pr.902) Terminal 2 frequency setting bias frequency settings. In the initial status, 0 to 60 Hz is set for 0% to 100%. Thus, 60 Hz main speed is regarded as 100%, and the 30 Hz main speed is regarded as 50%.

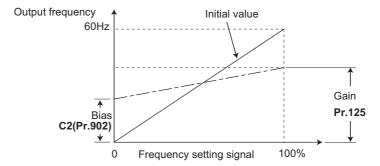



- Even if C4 (Pr.903) is set to other than 100%, the frequency setting signal is treated as 100%.
- Even if C3 (Pr.902) is set to other than 0%, the frequency setting signal is treated as 0%.
- If C2 (Pr.902) is set to other than 0 Hz, the frequency setting signal is 0% at the C2 (Pr.902) frequency setting or below.

◆ Input/output signals

- The following signals can be used by assigning functions to Pr.178 to Pr.189 (Input terminal function selection) and Pr.190 to Pr.196 (Output terminal function selection).
- · Input signal

Signal	Function	Pr.178 to Pr.189 setting	Description
X14	PID control valid	14	When this signal is assigned to the input terminal, PID control is enabled when this signal is ON.
X64	PID forward/reverse action switchover	64	PID control is switched between forward and reverse action without changing parameters by turning ON this signal.
X72	PID P control switchover	72	Only proportional term is valid when this signal is turned ON. (Integral and differential values are reset.)

· Output signal

Signal	Function	Pr.190 to Pr.196 setting		Description	
Sigilal	runction	Positive logic	Negative logic	Description	
FUP	PID upper limit	15	115	Output when the measured value signal exceeds Pr.131 PID upper limit.	
FDN	Lower limit output	14	114	Output when the measured value signal falls below Pr.132 PID lower limit.	
RL	PID forward/reverse rotation output	16	116	"Hi" is output when the output display of the operation panel is forward rotation (the RUN LED is ON) and "Low" is output when the display is reverse rotation (the RUN LED blinks) and stop (the RUN LED is OFF).	
PID	During PID control activated	47	147	Turns ON during PID control.	



 Changing the terminal functions with Pr.178 to Pr.189 and Pr.190 to Pr.196 may affect other functions. Set parameters after confirming the function of each terminal.

◆ PID monitor function

• This function displays the PID control set point and measured value on the operation panel, and can output these from the terminals FM and AM.

Set the following values to Pr.52 Operation panel main monitor selection, Pr.774 to Pr.776 (Operation panel monitor selection), Pr.992 Operation panel setting dial push monitor selection, Pr.54 FM terminal function selection and Pr.158 AM terminal function selection for each monitor.

Parameter	Monitor	Minimum	N	Ionitor rang	е		
Setting	description	increment	Terminal FM	Terminal AM	Operation panel	Remarks	
97	Dancer main set speed	0.01 Hz	0 to 590 Hz			When outputting through terminals FM and AM, the full scale value can be adjusted by Pr.55 Frequency monitoring reference.	




• Refer to page 389 for details on other PID control monitors.

Priority of main speed commands

- The priority of main speed command sources when the speed command source is External is as follows:
 JOG signal > multi-speed setting signal (RL/RM/RH/REX) > 16-bit digital input (option FR-A8AX) > analog input (terminals 2)
- The priority of main speed command sources when "3" is set to **Pr.79 Operation mode selection** is as follows: Multi-speed setting signal (RL/RM/RH/REX) > frequency setting (digital setting by PU or operation panel)
- Even if the remote operation function is selected by **Pr.59 Remote function selection** ≠ "0", compensation of the remote setting frequency against the main speed is ignored. (The value is "0".)
- If the same terminal as an external input terminal having a speed command source (external terminal where a main speed is input) is specified as the measured value input or set point input, the main speed is treated as "0".
- Setting **Pr.73** ≥ 10 enables the polarity reversible operation when the PID manipulated amount is added to the main speed command. (Polarity reversible operation of the main speed command without addition is not possible.)

◆ Adjustment procedure for dancer roll position detection signal

• When the input of terminal 4 is voltage input, 0 V is the lower limit position and 5 V (10 V) is the upper limit position (initial values). When it is current input, 4 mA is the lower limit position and 20 mA is the upper limit position (initial values). When the potentiometer has an output of 0 to 7 V, **C7 (Pr.905)** must be calibrated at 7 V.

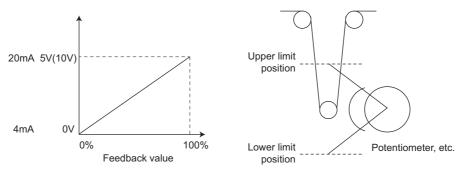

(Example) To execute control at the dancer center position using a 0 to 7 V potentiometer

- 1. Switch the voltage/current input selection switch (switch 4) to "V", set "2" in **Pr.267**, and set terminal 4 input to voltage input.
- **2.** Input 0 V across terminals 4 and 5, and calibrate **C6 (Pr.904)**. (The % display that is indicated at analog calibration is not related to the % of the feedback value.)
- Input 7 V across terminals 4 and 5, and calibrate **C7 (Pr.905)**. (The % display that is indicated at analog calibration is not related to the % of the feedback value.)
- **4.** Set **Pr.133** to "50%".



- After changing the Pr.267 setting, check the voltage/current selection switch. Incorrect setting may cause a fault, failure or malfunction. (Refer to page 310 for the setting.)
- If the Multi-speed operation (RH, RM, RL, or REX) signal, or JOG signal is input during regular PID control, PID control is interrupted. However, at dancer control, these signals are treated as main speed commands, so PID control is continued.
- During dancer control, **Pr.44 and Pr.45** (Second acceleration/deceleration time) is the parameter for setting the acceleration/deceleration time for the main speed command. This function does not work as a second function.
- · When the switchover mode is set by setting "6" to Pr.79, dancer control (PID control) is invalid.
- The acceleration/deceleration action of the main speed command is the same as that when the frequency is increased or decrease by analog input. The SU signal sometimes stays ON even if operation is turned ON/OFF by the start signal. The set frequency monitor is the value "main speed command + PID control" which is constantly changing.
- With the main speed setting frequency setting, acceleration/deceleration is performed for the acceleration/deceleration time set in Pr.45, and with the output frequency setting, acceleration/deceleration is performed for the acceleration/ deceleration time set in Pr.7 and Pr.8. For this reason, with the output frequency, when the time set in Pr.7 and Pr.8 is longer than the time set in Pr.44 and Pr.45, acceleration/deceleration is performed for the acceleration/deceleration time set in Pr.7 and Pr.8.
- The limit of the integral term is the smaller of 100% and the value after conversion of the straight line after interpolation of Pr.1
 Maximum frequency by C2 (Pr.902) and Pr.125 to the PID manipulated amount.

 However, note that the lower limit frequency limits the output frequency, but does not restrict the action of the integral item.

Parameters referred to

Pr.57 Restart coasting time □ page 403
Pr.59 Remote function selection □ page 203
Pr.73 Analog input selection □ page 310
Pr.79 Operation mode selection □ page 212
Pr.78 to Pr. 199 (Input torminal function selection)

Pr.178 to Pr.189 (Input terminal function selection) ☐ page 328 Pr.190 to Pr.196 (Output terminal function selection) ☐ page 292

C2 (Pr.902) to C7 (Pr.905) Frequency setting voltage (current) bias/gain 318

15.7 Automatic restart after instantaneous power failure / flying start with an induction motor

Magnetic flux Sensorless Vector

The inverter can be restarted without stopping the motor operation in the following situations:

- · When an instantaneous power failure occurs during inverter running
- · When the motor is coasting at start

Pr.	Name	Initial value	Setting range	Description
		_	0	Frequency search only performed at the first start
162	Automatic restart after		1	Reduced voltage start only at the first start (no frequency search) or encoder detection frequency search
A700	instantaneous power failure selection	0	10	Frequency search at every start
			11	Reduced voltage start at every start (no frequency search) or encoder detection frequency search
			0	Rotation direction disabled
	Rotation direction		1	Rotation direction detection enabled
299 A701	detection selection at restarting	0	9999	When Pr.78 Reverse rotation prevention selection = "0", with rotation direction detection When Pr.78 Reverse rotation prevention selection = "1 or 2", without rotation direction detection
		9999	0	Coasting time differs according to the inverter capacity.*1
57 A702	Restart coasting time		0.1 to 30 s	Set the time delay for the inverter to perform a restart after restoring power due to an instantaneous power failure.
			9999	No restart
58 A703	Restart cushion time	1 s	0 to 60 s	Set the voltage cushion time for restart.
165 A710	Stall prevention operation level for restart	150%	0% to 400%	Set the stall prevention level at restart operation on the assumption that the inverter rated current is 100%.
611	Acceleration time at a	9999	0 to 3600 s	Set the acceleration time to reach Pr.20 Acceleration/deceleration reference frequency at restart.
F003	restart		9999	Standard acceleration time (for example, Pr.7) is applied as the acceleration time at restart.

^{*1} The coasting time when **Pr.57** = "0" is as shown below. (When **Pr.162** and **Pr.570** are set to the initial value.) 0.5 s for the FR-E860-0027(1.5K) or lower.

 $^{2\} s\ for\ the\ FR-E820-0110(2.2K)\ or\ higher,\ FR-E840-0060(2.2K)\ or\ higher,\ and\ FR-E820S-0110(2.2K).$



- To operate the inverter with the automatic restart after instantaneous power failure function enabled, check the following points.
- Set Pr.57 Restart coasting time = "0".

◆ Setting for the automatic restart after instantaneous power failure operation (Pr.162)

• The **Pr.162** settings and the instantaneous power failure automatic restart operation under each operation mode are as shown in the following table.

Pr.162 setting	Restart operation		V/F control, Advanced magnetic flux vector control vector c		Vector control	
	Operation	Without encoder	With encoder	vector control		
0 (initial value)	At first start	Frequency search	Frequency search			
1	At first start	Reduced voltage start	Encoder detection	Frequency search	Encoder detection frequency search	
40		F	frequency search			
10	At every start	Frequency search	Frequency search			
11	At every start	Reduced voltage start	Encoder detection frequency search			

 $^{1\} s\ for\ the\ FR-E820-0080(1.5K)\ or\ lower,\ FR-E840-0040(1.5K)\ or\ lower,\ FR-E860-0040(2.2K)\ or\ higher,\ and\ FR-E820S-0080(1.5K)\ or\ lower.$


◆ Restart operation with frequency search (Pr.162 ="0 or 10", Pr.299)

- When **Pr.162** = "0 (initial value) or 10", the motor speed is detected at a power restoration so that the motor can re-start smoothly.
- The encoder also detects the rotation direction so that the inverter can re-start smoothly even during the reverse rotation.
- Whether or not to detect the rotation direction can be selected by **Pr.299 Rotation direction detection selection at restarting**. If the motor capacity is different from the inverter capacity, set **Pr.299** = "0" (no rotation direction detection).
- When the rotation direction is detected, the following operation is performed according to Pr.78 Reverse rotation prevention selection setting.


Pr.299 setting		Pr.78 setting				
F1.233 Setting	0	1	2			
9999	0	×	×			
0 (initial value)	×	×	×			
1	0	0	0			

o: With rotation direction detection x: Without rotation direction detection

V/F control, Advanced magnetic flux vector control

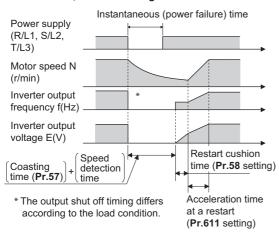

Real sensorless vector control

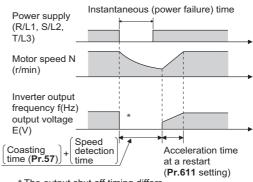

* The output shut off timing differs according to the load condition.




- The rotation speed detection time (frequency search) changes according to the rotation speed of the motor (maximum 1 second).
- When the inverter capacity is two ranks or greater than the motor capacity, the overcurrent protective function (E.OC[]) is sometimes activated and prevents the inverter from restarting.
- If two or more motors are connected to one inverter, this function operates abnormally. (The inverter does not restart successfully.)
- Because a DC injection brake is applied instantaneously at speed detection during a restart, the speed might drop if the moment of inertia (J) of the load is small.
- If reverse operation is detected when "1" (reverse rotation disabled) is set to **Pr.78**, operation decelerates by reverse rotation and then changes to forward rotation when the start command is forward rotation. The inverter does not restart when the start command is reverse rotation.

◆ Restart operation without frequency search (Pr.162 = "1 or 11")

• When **Pr.162** = "1 or 11" while the encoder feedback control is disabled, reduced voltage start is used for the restart operation. In this method, the voltage is raised gradually while keeping the output frequency level at the level before an instantaneous power failure, regardless of the motor's coasting speed.

V/F control, Advanced magnetic flux vector control

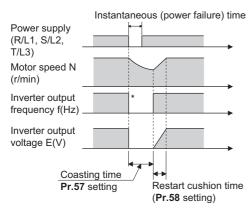

^{*} The output shut off timing differs according to the load condition.




- This restart method uses the output frequency that was active before the instantaneous power failure stored in memory. If the instantaneous power failure time is 0.2 second or more, the output frequency can no longer be stored and held in memory, so the restart is performed from **Pr.13 Starting frequency** (initial value: 0.5 Hz).
- During Real sensorless vector control, the operation is the same as one when Pr.162 = "0 or 10".

Restart operation with encoder detection frequency search (Pr.162 = "1 or 11")

- When "1 or 11" is set in **Pr.162** by encoder feedback control, the inverter is restarted by the motor speed and direction of rotation that were detected by the encoder at the power restoration.
- The Pr.299 Rotation direction detection selection at restarting setting is invalid by encoder detection frequency search.

V/F control, Advanced magnetic flux vector control

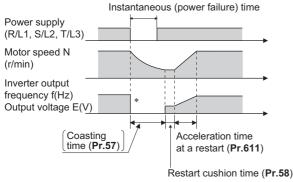

* The output shut off timing differs according to the load condition.

NOTE

- Under Vector control, encoder detection frequency search is used regardless of the Pr.162 setting. The Pr.58 and Pr.299 settings are invalid at this time.
- For the encoder feedback control, refer to page 450.
- During Real sensorless vector control, the operation is the same as one when Pr.162 = "0 or 10".

◆ Restart at every start (Pr.162 = "10 or 11")

• When "10 or 11" is set in **Pr.162**, a restart operation is performed at each start and automatic restart after instantaneous power failure (after the time period set in **Pr.57** elapsed). When "0 (initial value) or 1" is set in **Pr.162**, a restart operation is performed at the first start after a power-ON, and from the second power-ON onwards, a start from the starting frequency is performed.

◆ Automatic restart operation of the MRS (X10) signal

• The restart operation after restoration from output shutoff by the MRS (X10) signal is as shown in the following table according to the **Pr.30** setting.

Pr.30 setting Operation after restoration from output shutoff by the MRS (X10) signal			
2	Restart operation (starting from the coasting speed)		
Other than the above	Starting from Pr.13 Starting frequency.		




- When output is shut off using safety stop function (terminals S1 and S2), the inverter restarts in the same way as when output is shut off by the MRS (X10) signal.
- Operation is selectable as shown in the table above when Pr.162 Automatic restart after instantaneous power failure selection = "0 or 1". When Pr.162 Automatic restart after instantaneous power failure selection = "10 or 11" (automatic restart operation at each start), a restart operation is performed regardless of the setting of Pr.30 Regenerative function selection
- Set "24" in any parameter from Pr.178 to Pr.189 (Input terminal function selection) to assign the output stop (MRS) signal
 to the input terminal, and "10" to assign the Inverter operation enable (X10) signal.

Adjustment of restart coasting time (Pr.57)

- Restart coasting time is the time period from the occurrence of instantaneous power failure until the operation is restarted after power is restored.
 - With frequency search, the motor speed is detected and operation is restarted after the coasting time.
- To enable restart operation, set "0" to **Pr.57 Restart coasting time**. If "0" is set to **Pr.57**, the coasting time is automatically set to the following number of seconds. Generally, this setting does not interfere with inverter operation.

Voltage	Inve	Coasting time (s)	
class	ND	LD	Coasting time (s)
200 V	FR-E820-0080(1.5K) or lower FR-E820S-0080(1.5K) o lower	FR-E820-0050(0.75K) or lower FR-E820S-0050(0.75K) or lower	1
200 V	FR-E820-0110(2.2K) or higher FR-E820S-0110(2.2K)	FR-E820-0080(1.5K) or higher FR-E820S-0080(1.5K) or higher	2
400 V	FR-E840-0040(1.5K) or lower	FR-E840-0026(0.75K) or lower	1
400 V	FR-E840-0060(2.2K) or higher	FR-E840-0040(1.5K) or higher	2
575 V	FR-E860-0027(1.5K) or lower	FR-E860-0017(0.75K)	0.5
313 V	FR-E860-0040(2.2K) or higher	FR-E860-0027(1.5K) or higher	1

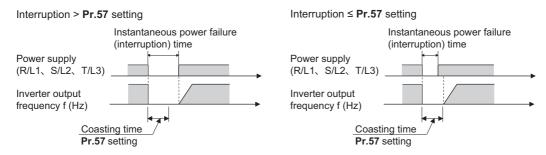

• Inverter operation is sometimes hindered by the size of the moment of inertia (J) of the load, output frequency, or the residual magnetic flux in the motor. Adjust this coasting time within the range 0.1 to 30 seconds to match the load specification.

♦ Restart cushion time (Pr.58)

- The cushion time is the time taken to raise the voltage to the level required for the specified speed after the motor speed detection (output frequency before the instantaneous power failure when **Pr.162** = "1 or 11").
- Normally, the motor runs at the initial value as it is. However, adjust to suit the moment of inertia (J) of the load or the size of the torque.



• Pr.58 is invalid under Real sensorless vector control or Vector control.

◆ Adjustment of restart operation (Pr.165, Pr.611)

- The stall prevention operation level at a restart operation can be set in Pr.165.
- Using **Pr.611**, the acceleration time to reach **Pr.20 Acceleration/deceleration reference frequency** after a restart operation can be set. This can be set individually from the normal acceleration time.



- Pr.165 is invalid under Real sensorless vector control or Vector control.
- Changing the Pr.21 setting does not affect the Pr.611 setting increment.
- Changing the terminal assignment using Pr.178 to Pr.189 (Input terminal function selection) may affect the other functions.
 Set parameters after confirming the function of each terminal.
- The SU and FU signals are not output during the restart. These signals are output after the restart cushion time passes.
- · Restart operation is also performed after the inverter reset is released or after the retry by the retry function occurs.

^CAUTION

When the automatic restart after instantaneous power failure function is selected, the motor suddenly starts
(after reset time passes) when an instantaneous power failure occurs. Stay away from the motor and machinery.
When the automatic restart after instantaneous power failure function has been selected, apply the CAUTION
sticker(s), which are found in the Inverter Safety Guideline enclosed with the inverter, to easily visible places.

Parameters referred to

Pr.7 Acceleration time, Pr.21 Acceleration/deceleration time increments page 196
Pr.13 Starting frequency page 207, page 208
Pr.65, Pr.67 to Pr.69 Retry function page 250
Pr.78 Reverse rotation prevention selection page 231
Pr.178 to Pr.189 (Input terminal function selection) page 328

15.8 Automatic restart after instantaneous power failure / flying start with a PM motor

PM

The inverter can be restarted without stopping the motor operation.


When the automatic restart after instantaneous power failure function is selected, the motor driving is resumed in the following situations:

- · When power comes back ON during inverter driving after an instantaneous power failure
- · When the motor is coasting at start

Pr.	Name	Initial value	Setting range	Description	
		9999	0	No delay	
57 A702	Restart coasting time		0.1 to 30 s	Set the delay time for the inverter to perform a restart after restoring power due to an instantaneous power failure.	
			9999	No restart	
162	Automatic restart after	0	0, 1	Frequency search only performed at the first start	
A700	instantaneous power failure selection		10, 11	Frequency search at every start	
611	Acceleration time at a restart	9999	0 to 3600 s	Set the acceleration time to reach Pr.20 Acceleration/deceleration reference frequency at restart.	
F003			9999	Standard acceleration time (for example, Pr.7) is applied as the acceleration time at restart.	

◆ Selection of restart operation (Pr.162)

- At a power restoration, the encoder detects the motor speed by a frequency search so that the inverter can re-start smoothly.
- The encoder also detects the rotation direction so that the inverter can re-start smoothly even during the reverse rotation.
- When "10 (or 11)" is set in **Pr.162**, a restart operation is performed at each start and automatic restart after instantaneous power failure. When "0 (or 1)" is set in **Pr.162**, a restart operation is performed at the first start after a power-ON, and from the second power-ON onwards, a start from the starting frequency is performed.

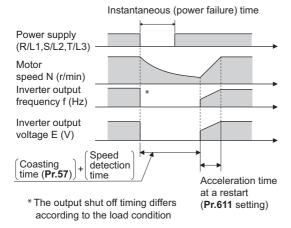

NOTE

- Because a DC injection brake is applied instantaneously at speed detection during a restart, the speed might drop if the moment of inertia (J) of the load is small.
- Restart operation with reduced voltage is not available for PM sensorless vector control.
- · A protective function may be activated for some motor models or at certain running speeds, disabling restarting.

◆ Restart coasting time (Pr.57)

- · Coasting time is the time from the motor speed detection to the restart operation start.
- To enable restart operation, set "0" (no coasting time) in **Pr.57 Restart coasting time**. Generally, this setting does not interfere with inverter operation.

• Inverter operation is sometimes hindered by the size of the moment of inertia (J) of the load or the output frequency. Adjust this coasting time within the range 0.1 to 30 seconds to match the load specification.

♦ Adjustment of restart operation (Pr.611)

• Using **Pr.611**, the acceleration time to reach **Pr.20 Acceleration/deceleration reference frequency** after a restart operation can be set. This can be set individually from the normal acceleration time.



- · Changing the Pr.21 Acceleration/deceleration time increments setting does not affect the Pr.611 setting increment.
- A PM motor is a motor with interior permanent magnets. Regression voltage is generated when the motor coasts at an instantaneous power failure or at a flying start. The inverter's DC bus voltage rises if the motor coasts fast or makes a flying start in this condition.

When using the automatic restart after instantaneous power failure function ($\mathbf{Pr.57} \neq "9999"$), it is recommended to also use the regenerative avoidance function ($\mathbf{Pr.882}$ Regeneration avoidance operation selection = "1") to make startups stable. If the overvoltage protective function (E.OV[]) still occurs with the regeneration avoidance function, also use the retry function ($\mathbf{Pr.67}$).

• When a built-in brake or a regeneration unit is used, the frequency search may not be available at 2200 r/min or higher. The restart operation cannot be performed until the motor speed drops to a frequency where the frequency search is available.

↑CAUTION

• A PM motor is a motor with interior permanent magnets. High voltage is generated at motor terminals while the motor is running.

Do not touch motor terminals and other parts until the motor stops to prevent an electric shock.

• When the automatic restart after instantaneous power failure function is selected, the motor suddenly starts (after reset time passes) when an instantaneous power failure occurs.

Stay away from the motor and machinery.

When the automatic restart after instantaneous power failure function has been selected, apply the CAUTION sticker(s), which are found in the Inverter Safety Guideline enclosed with the inverter, to easily visible places.

Parameters referred to

Pr.13 Starting frequency page 207, page 208
Pr.65, Pr.67 to Pr.69 Retry function page 250
Pr.78 Reverse rotation prevention selection page 231
Pr.882 Regeneration avoidance operation selection page 446

15.9 Offline auto tuning for a frequency search

V/F

Under V/F control, the accuracy of the "frequency search", which is used to detect the motor speed for the automatic restart after instantaneous power failure and flying start, can be improved.

Pr.	Name	Initial value	Setting range	Description	
			0	Frequency search only performed at the first start	
162	Automatic restart after	0	1	Reduced voltage start only at the first start (no frequency search)	
A700	instantaneous power failure selection	U	10	Frequency search at every start	
			11	Reduced voltage start at every start (no frequency search)	
298	Frequency search gain	9999	0 to 32767	The offline auto tuning automatically sets the gain required for the frequency search.	
A711	Frequency search gain	3333	9999	The constant value of Mitsubishi Electric motor (SF-PR, SF-JR, SF-HR, SF-JRCA, SF-HRCA, or GM-[]) is used.	
560	Second frequency	9999	0 to 32767	The offline auto tuning automatically sets the gain required for the frequency search of the second motor.	
A712	search gain	9999	9999	The constant value of Mitsubishi Electric motor (SF-PR, SF-JR, SF-HR, SF-JRCA, SF-HRCA, or GM-[]) is used for the second motor.	
	Auto tuning setting/ status	0	0	No offline auto tuning	
96 C110			1	Offline auto tuning is performed under Advanced magnetic flux vector control, Real sensorless vector control, or PM sensorless vector control. (Refer to page 345 and page 355.)	
			11	Offline auto tuning is performed without the motor rotating (under V/F control).	
90 C120	Motor constant (R1) 9999 0 to 50 Ω, 9999		0 to 50 Ω, 9999	Tuning data (The value measured by offline auto tuning is automatically set.) 9999: The constant value of Mitsubishi Electric motor (SF-PR, SF-JR, SF-HR, SF-JRCA, SF-HRCA, or GM-[]) is used.	
			0	No auto tuning for the second motor.	
463 C210	Second motor auto tuning setting/status	0	1	Offline auto tuning is performed for the second motor. (Refer to page 345 and page 355.)	
J210	tanning contingrounds		11	Offline auto tuning is performed without the second motor rotating (under V/F control).	
458 C220	Second motor constant (R1)	9999	0 to 50 Ω, 9999	Tuning data of the second motor (same as Pr.90)	

◆ Offline auto tuning for a frequency search

• When the frequency search is selected by setting **Pr.162 Automatic restart after instantaneous power failure selection** = "0 or 10", perform offline auto tuning.

♦ Before performing offline auto tuning

Check the following points before performing offline auto tuning:

- · V/F control is selected.
- · Check that a motor is connected. (Check that the motor is not rotated by an external force during tuning.)
- Select a motor with the rated current equal to or less than the inverter rated current. (Note that the motor rated current should be 0.4 kW or higher (0.1 kW or higher for the 200 V class).)
 - If a motor with substantially low rated current compared with the inverter rated current is used, speed and torque accuracies may deteriorate due to torque ripples, etc. Set the rated motor current to about 40% or higher of the inverter rated current.
- · The target motor is other than a high-slip motor, a high-speed motor, or a special motor.
- The motor may rotate slightly even if the offline auto tuning without the motor rotating (**Pr.96 Auto tuning setting/status** = "11") is selected. Fix the motor securely with a mechanical brake, or before tuning, make sure that it is safe even if the motor rotates. (Caution is required especially in vertical lift applications.) Note that even if the motor runs slightly, tuning performance is unaffected.

• Offline auto tuning is not performed correctly when the surge voltage suppression filter (FR-ASF-H/FR-BMF-H) is inserted between the inverter and motor. Be sure to remove them before performing tuning.

Setting

- 1. Set "11" in Pr.96 Auto tuning setting/status.
- 2. Set the rated motor current (initial value is inverted rated current) in **Pr.9 Electronic thermal O/L relay**. (Refer to page 238.)
- 3. Set Pr.71 Applied motor according to the motor to be used.

Mo	Pr.71 setting	
	SF-JR	0 (3)
Mitsubishi Electric standard efficiency motor	SF-JR 4P 1.5 kW or lower	20 (23)
Mitsubishi Electric high-efficiency motor	SF-HR	40 (43)
	Others	0 (3)
	SF-JRCA 4P	10 (13)
Mitsubishi Electric constant-torque motor	SF-HRCA	50 (53)
	Others (SF-JRC, etc.)	10 (13)
Mitsubishi Electric high-performance energy- saving motor	SF-PR	70 (73)
Mitsubishi Electric geared motor	GM-[]	1800 (1803)
Other manufacturer's standard motor	_	0 (3)
Other manufacturer's constant-torque motor	_	10 (13)

Performing tuning



- Before performing tuning, check the monitor display of the operation panel if the inverter is in the state ready for tuning. The motor starts by turning ON the start command while tuning is unavailable.
- In the PU operation mode, press the RUN key on the operation panel.
 In the External operation, turn ON the start command (STF signal or STR signal). Tuning starts. (At this time, excitation noise occurs.)

NOTE

- It takes about 10 seconds for tuning to complete. (The time depends on the inverter capacity and motor type.)
- · Satisfy the required inverter start conditions to start offline auto tuning. For example, stop the input of the MRS signal.
- To force tuning to end, use the MRS or RES signal or the STOP/RESET key on the operation panel. (Turning OFF the start signal (STF signal or STR signal) also ends tuning.)
- During offline auto tuning, only the following I/O signals are valid (initial value).
 Input terminals <effective signals>: MRS, RES, STF, STR, S1, and S2
 Output terminals: RUN, FM, AM, ABC, and SO
- When the rotation speed and the output frequency are selected for terminals FM and AM, the progress status of offline auto tuning is output in 15 steps from FM and AM.
- Do not perform ON/OFF switching of the Second function selection (RT) signal during offline auto tuning. Auto tuning will not be performed properly.
- Since the RUN signal turns ON when tuning is started, pay close attention especially when a sequence which releases a mechanical brake by the RUN signal has been designed.
- When executing offline auto tuning, input the operation command after switching ON the main circuit power (R/L1, S/L2, T/L3) of the inverter.
- While Pr.79 Operation mode selection = "7", turn the PU operation external interlock (X12) signal ON to tune in the PU operation mode.

• During tuning, the monitor is displayed on the operation panel as follows.

Status	Operation panel indication	LCD operation panel (FR-LU08) display
Setting	Hz PU MON RUN Hz EXT PRM PM NET PRUN	AutoTune 12:34 TONE
Tuning in progress	Hz PU -MON -RUN Hz EXT PRM PM NET PRUN	AutoTune 12:34 TUNE
Normal end	Hz PU - MON - JUN Blinking	AutoTune 12:34 TUNE Completed 13 STF STOP PU PREV NEXT

- When offline auto tuning ends, press the STOP/RESET key on the operation panel during PU operation. For External operation, turn OFF the start signal (STF signal or STR signal). This operation resets the offline auto tuning, and the monitor display of the operation panel returns to normal. (Without this operation, next operation cannot be started.)
- · At tuning completion, the tuning results are set in the following parameters:

Parameter	Name		
90	Motor constant (R1)		
298	Frequency search gain		
96	Auto tuning setting/status		



- The motor constants measured once during offline auto tuning are stored as parameters and their data are held until offline auto tuning is performed again. However, the tuning data is cleared when performing All parameter clear.
- If offline auto tuning has ended in error, motor constants are not set.
 Perform an inverter reset and restart tuning.

Error display	Error cause	Countermeasures
8	Forced end	Set "11" in Pr.96 and retry.
9	Inverter protective function operation	Make the setting again.
91	The current limit (stall prevention) function is activated.	Set the acceleration/deceleration time longer. Set Pr.156 Stall prevention operation selection = "1".
92	The converter output voltage fell to 75% of the rated voltage.	Check for the power supply voltage fluctuation.
93	Calculation error. The motor is not connected.	Check the motor wiring and make the setting again.

- When tuning is ended forcibly by pressing the STOP/RESET key or turning OFF the start signal (STF or STR) during tuning, offline tuning does not end properly. (The motor constants have not been set.)
 Perform an inverter reset and restart tuning.
- If the rated power supply of the motor is 200/220 V (400/440 V) 60 Hz, set the rated motor current multiplied by 1.1 in **Pr.9** Electronic thermal O/L relay after tuning is complete.
- For a motor with a thermal protector or other thermal detection, set "0" (motor overheat protection by inverter invalid) in **Pr.9** to protect the motor from overheating.



- An instantaneous power failure occurring during tuning will result in a tuning error. After power is restored, the inverter starts normal operation. Therefore, when the STF (STR) signal is ON, the motor starts forward (reverse) rotation.
- Any fault occurring during tuning is handled as in the normal operation. However, if the retry function is set, no retry is performed.
- The set frequency monitor displayed during the offline auto tuning is 0 Hz.

◆ Tuning the second motor (Pr.463)

- When one inverter switches the operation between two different motors, set the second motor in **Pr.450 Second applied** motor, set **Pr.463 Second motor auto tuning setting/status** = "11", and perform tuning of the second motor.
- Turning ON the RT signal enables the parameter settings for the second motor as shown in the following table.

Function	RT signal ON (second motor)	RT signal OFF (first motor)
Motor constant (R1)	Pr.458	Pr.90
Frequency search gain	Pr.560	Pr.298
Auto tuning setting/status	Pr.463	Pr.96



- To use the RT signal, set "3" in any parameter from **Pr.178 to Pr.189 (Input terminal function selection)** to assign the function to an input terminal.
- Changing the terminal assignment using **Pr.178 to Pr.189 (Input terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.9 Electronic thermal O/L relay □ page 238
Pr.65, Pr.67 to Pr.69 Retry function □ page 250
Pr.71 Applied motor, Pr.450 Second applied motor □ page 340
Pr.79 Operation mode selection □ page 212
Pr.156 Stall prevention operation selection □ page 256
Pr.178 to Pr.189 (Input terminal function selection) □ page 328

15.10 Power failure time deceleration-to-stop function


Magnetic flux Sensorless Vector

This is a function to decelerate the motor to a stop when an instantaneous power failure or undervoltage occurs.

Pr.	Name	Initial value	Setting range	Description
261 Power failure stop A730 selection	Power failure stop	0	0	The inverter output is shut off at an undervoltage or when a power failure occurs.
			1	The inverter decelerates the motor to a stop at an undervoltage or when a power failure occurs.
	U	2	The inverter decelerates the motor to a stop at an undervoltage or when a power failure occurs. The inverter re-accelerates the motor if the power restores during the deceleration.	


◆ Power failure stop function (Pr.261 = "1")

• Even if power is restored during deceleration triggered by a power failure, deceleration stop is continued after which the inverter stays stopped. To restart operation, turn the start signal OFF then ON again.

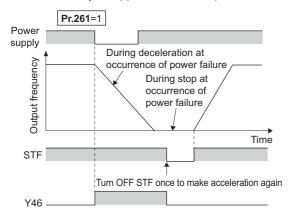

NOTE

 
- If the automatic restart after instantaneous power failure is selected (**Pr.57 Restart coasting time** ≠ "9999") while the power failure time deceleration stop function is set enabled (**Pr.261** = "1"), the power failure time deceleration stop function is disabled.
- When the power failure time deceleration stop function is enabled (Pr.261 = "1"), the inverter does not start even if the power
 is turned ON or inverter reset is performed with the start signal (STF/STR) ON. Turn OFF the start signal once and then ON
 again to make a start.



Continuous operation function at instantaneous power failure (Pr.261 = "2")

 The motor re-accelerates to the set frequency when the power restores during the deceleration triggered by a power failure.

If the power is restored after stoppage by a power failure, a restart operation is performed when automatic restart after instantaneous power failure ($Pr.57 \neq "9999"$) is selected.

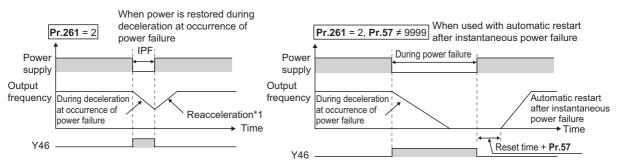

^{*1} Acceleration time depends on Pr.7 (Pr.44)

◆ During deceleration at occurrence of power failure (Y46) signal

- After deceleration by a power failure, the inverter is not restarted even though the start command is input. Check the During deceleration at occurrence of power failure (Y46) signal at a power failure. (For example, when input phase loss protection (E.ILF) occurs.)
- The Y46 signal is turned ON during deceleration at occurrence of power failure and in a stop status after deceleration at occurrence of power failure.
- For the Y46 signal, set "46" (positive logic) or "146" (negative logic) in any parameter from **Pr.190 to Pr.196 (Output terminal function selection)** to assign the function.

NOTE

- · The power failure time deceleration stop function is disabled during a stop or when the breaker is tripped.
- Changing the terminal assignment using **Pr.190 to Pr.196 (Output terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

∴ CAUTION

• Even if the power failure time deceleration-to-stop function is set, some loads might cause the inverter to trip and the motor to coast.

The motor coasts if sufficient regenerative power is not obtained from the motor.

Parameters referred to

Pr.57 Restart coasting time page 403, page 408

Pr.190 to Pr.196 (Output terminal function selection) page 292

15.11 PLC function

The inverter can be run in accordance with a sequence program.

In accordance with the machine specifications, a user can set various operation patterns: inverter movements at signal inputs, signal outputs at particular inverter statuses, and monitor outputs, etc.

Pr.	Name	Initial value	Setting range	Description			
			0	PLC function disabled			
414 A800	PLC function operation selection	0	1, 11	The conditions to enable the SQ depends on the Pr.338 setting.			
A000	Sciodion		2, 12		The SQ signal is enabled by ir external input terminal.	nput from an	
415	Inverter operation lock	0	0	The inverter start command i the sequence program.	is enabled regardless of the op	erating status of	
A801	mode setting	U	1	The inverter start command running.	is enabled only while the seque	ence program is	
	PLC function flash memory clear	0	0, 9696 (0 to 9999)	0: Clears the flash memory fa writing while the flash memo	ault display (no operation after		
						Write	
498				Other than 0 and 9696: Outside the setting range			
A804				0: Normal display			
				1: The flash memory is not of function is enabled.	cleared because the PLC	Read	
				9696: During flash memory of memory fault	clearing operation or flash		
675	User parameter auto		1	Auto storage function enabled			
A805	storage function selection	9999	9999	Auto storage function disabled			
1150 to 1199 A810 to A859	User parameters 1 to User parameters 50	0	0 to 65535	Desired values can be set. Because devices D206 to D255 used by the PLC function can be mutuaccessed, the values set to Pr.1150 to Pr.1199 can be used by the sequence program. The result of performing calculation by a sequence program can also be monitored by Pr.1150 to Pr.1199.		ed by the	

Outline of PLC function

- To enable the PLC function, set a value other than "0" in Pr.414 PLC function operation selection. (The Pr.414 setting change becomes valid after inverter reset.)
- Switch the execution key (RUN/STOP) of the sequence program by turning the SQ signal ON/OFF. The sequence program can be executed by turning the SQ signal ON. To input the SQ signal, set "50" in any of Pr.178 to Pr.189 (Input terminal function selection) to assign the function to a terminal.
- · When "1" is set in Pr.415 Inverter operation lock mode setting, the inverter can be operated only when the sequence program is running. By changing the PLC program status from RUN to STOP during inverter operation, the motor decelerates to stop. To stop the inverter operation at the STOP status of the PLC program while performing auto operation using SD1148 (or SM1200 to 1211) of the PLC program, set Pr.415 = "1".
- · For reading or writing sequence programs, use FR Configurator2 on the personal computer connected to the inverter via RS-485 communication or USB. (When Pr.414 # "0", sequence programs can be read from or written to FR Configurator2.)

▶ Sequence start (SQ) signal

- · Switch the execution key (RUN/STOP) of the sequence program by turning the SQ signal ON/OFF. The sequence program can be executed by turning the SQ signal ON. To input the SQ signal, set "50" in any parameter from Pr.178 to Pr.189 (Input terminal function selection) to assign the function. When the SQ signal is assigned to any parameter from Pr.185 to Pr.189 (Terminal NET X function selection), the sequence program can be executed just by inputing the SQ signal via terminal NET X. (The SQ signal needs not be input via an external terminal.)
- When Pr.414 = "1 or 11", the SQ signal must be input according to the command source (except when the SQ signal is assigned to terminal NET X).

- When Pr.414 = "2 or 12", the SQ signal can be input only via an external input terminal regardless of the Pr.338 setting.
- · The following shows the required conditions to enable the SQ signal.

Pr.414 setting	Pr.338 setting	SQ signal				
F1.414 Setting	F1.556 Setting	Input via an external (physical) terminal	Input via a communication virtual terminal			
	0	ON	ON			
1, 11		_	ON (terminal NET X)			
	1	ON	_			
2, 12	_	ON	_			

^{—:} Not required to enable the SQ signal

◆ User parameter (data register (D)) auto storage function selection

- Setting **Pr.675** = "1" enables the auto storage function for user parameters.
- The user parameter auto storage function is used to store the setting of **Pr.1195 PLC function user parameters 46** (D251) to **Pr.1199 PLC function user parameters 50** (D255) automatically in EEPROM at power OFF or inverter reset.
- The auto storage function is disabled while the inverter performs any of the following.
 Measurement of the main circuit capacitor's life, offline auto tuning, or measurement of load characteristics



• The auto storage function may fail if the EEPROM is accessed by other functions at the same time at power OFF. To ensure the auto storage, provide a power source for the control circuit separately from that of the main circuit.

◆ User parameter reading from EEPROM

• User parameters (Pr.1150 to Pr.1199) are read from RAM or EEPROM according to the settings in Pr.342 Communication EEPROM write selection and Pr.414 PLC function operation selection. When Pr.414 = "11 or 12", RAM data is read regardless of the Pr.342 setting.

Device	Pr.342	Pr.414	Read from	Written to	
	0	0, 1, 2	EEPROM	- EEPROM	
Inverter (via communication),		11, 12	RAM		
FR Configurator2	1	0, 1, 2	RAM	RAM	
	•	11, 12	RAM	IVAIVI	
	0	0, 1, 2	(Differs according to the option type.)	- EEPROM	
Communication option	0	11, 12	RAM		
Communication option	1	0, 1, 2	RAM	RAM	
	•	11, 12	RAM	IVAIVI	
	0	0, 1, 2	EEPROM	EEPROM	
Operation panel	U	11, 12	RAM		
Operation panel	1	0, 1, 2	EEPROM	RAM	
	'	11, 12	RAM	- KAIVI	



• For the details of the PLC function, refer to the PLC Function Programming Manual and the Instruction Manual of FR Configurator2.

15.12 Trace function

- The operating status of the inverter can be traced and temporarily stored in the RAM in the inverter. The data stored in the RAM is deleted when the power supply is turned OFF. (The data is retained at inverter reset.)
- Stored data can be monitored by FR Configurator2, and the status of the inverter can be analyzed.


Pr.	Name	Initial value	Setting range	Description
			0	Without trace operation
1020	Trace operation selection	0	1	Sampling start
A900	Trace operation selection		2	Forced trigger
			3	Sampling stop
1022 A902	Sampling cycle	1	1, 2, 5, 10, 50, 100, 500, 1000	Set the sampling cycle. 1: 1 ms, 2: 2 ms, 5: 5 ms, 10: 10 ms, 50: 50 ms, 100: 100 ms, 500: 500 ms, 1000: 1 s
1023 A903	Number of analog channels	4	1 to 8	Select the number of analog channels for sampling.
1024			0	Manual sampling start
A904	Sampling auto start	0	1	Sampling starts automatically when the power supply is turned ON or at a reset
			0	Fault trigger
4005			1	Analog trigger
1025 A905	Trigger mode selection	0	2	Digital trigger
7303			3	Analog or digital trigger (OR logic)
			4	Both analog and digital triggers (AND logic)
1026 A906	Number of sampling before trigger	90%	0% to 100%	Set the percentage of the pre-trigger sampling time with respect to the overall sampling time.
1027 A910	Analog source selection (1ch)	201		
1028 A911	Analog source selection (2ch)	202		
1029 A912	Analog source selection (3ch)	203	1 to 3, 5 to 14, 17 to 20, 23, 24, 32,	
1030 A913	Analog source selection (4ch)	204	33, 35, 40 to 42, 52 to 54, 61, 62,	Select the analog data (monitor item) for sampling on each
1031 A914	Analog source selection (5ch)	205	67, 83, 91, 97, 201 to 210, 212,	channel.
1032 A915	Analog source selection (6ch)	206	213, 230 to 232, 235 to 238 ^{*1}	
1033 A916	Analog source selection (7ch)	207		
1034 A917	Analog source selection (8ch)	208		
1035 A918	Analog trigger channel	1	1 to 8	Select the analog channel to be the trigger.
1036	Analog trigger operation	0	0	Sampling starts when the value of the analog monitor exceeds the value set at the trigger level (Pr.1037)
A919	selection		1	Sampling starts when the value of the analog monitor falls below the value set at the trigger level (Pr.1037)
1037 A920	Analog trigger level	1000	600 to 1400	Set the level at which the analog trigger turns ON. The trigger level is the value obtained by subtracting 1000 from the set value.

Pr.	Name	Initial value	Setting range	Description	
1038 A930	Digital source selection (1ch)	0			
1039 A931	Digital source selection (2ch)	0			
1040 A932	Digital source selection (3ch)	0			
1041 A933	Digital source selection (4ch)	0	0 to 255	Select the digital data (I/O signal) for sampling on each	
1042 A934	Digital source selection (5ch)	0	0 10 233	channel.	
1043 A935	Digital source selection (6ch)	0			
1044 A936	Digital source selection (7ch)	0			
1045 A937	Digital source selection (8ch)	0			
1046 A938	Digital trigger channel	1	1 to 8	Select the digital channel to be the trigger.	
1047	Digital trigger operation	0	0	Tracing starts when the signal turns ON	
A939	selection	U	1	Tracing starts when the signal turns OFF	

^{*1} The setting range differs depending on the model. For more information, refer to the monitor item list.

Operation outline

- This function is used to sample the status data (analog monitor and digital monitor) of the inverter, trace the sampling data when a trigger (trace start condition) occurs, and stores the resulting trace data.
- When the trace function is set enabled, samplings are collected and the inverter goes into the pre-trigger status.
- In the pre-trigger status, samples are collected, and the trigger standby status is entered when sufficient samples for the number of pre-trigger samples have been collected.
- · When a trigger occurs in the trigger standby status, tracing is started and the trace data is stored.

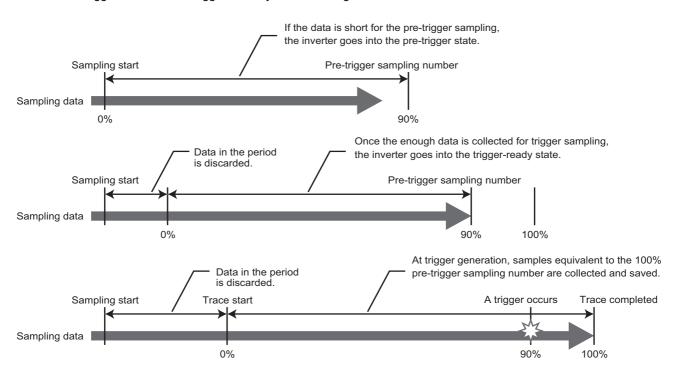

♦ Tracing procedure

1. Prior setting for tracing

Set Pr.1022 Sampling cycle and Pr.1023 Number of analog channels according to the necessary sampling time. Use Pr.1027 to Pr.1034 to set analog sources, and Pr.1038 to Pr.1045 to set digital sources. Set a trigger type in Pr.1025.

2. Tracing

Sampling starts according to the Pr.1020 and Pr.1024 settings.

The trace status can be monitored. (Refer to page 423.)

3. Waveform check

By using FR Configurator2, trace data stored in the internal RAM can be displayed on a computer screen. For details, refer to the Instruction Manual of FR Configurator2.

◆ Selection of sampling time (Pr.1022, Pr.1023)

• The sampling time is determined by the sampling cycle and the number of data acquisition points. The the number of data acquisition points varies depending on the setting in **Pr.1023 Number of analog channels**.

Pr.1023	Memory mo	Number of data	
Number of analog channels	Minimum (Pr.1022 = "1")	Maximum (Pr.1022 = "1000")	acquisition points
1	1704 ms	1704 s	1704
2	1280 ms	1280 s	1280
3	1024 ms	1024 s	1024
4	852 ms	852 s	852
5	728 ms	728 s	728
6	640 ms	640 s	640
7	568 ms	568 s	568
8	512 ms	512 s	512

◆ Analog source (monitor item) selection

• Select the analog sources (monitor items) to be set to Pr.1027 to Pr.1034 from the following table.

Setting value	Monitor item*1	Minus (-) display*2	Trigger level criterion*3	Setting value	Monitor item*1	Minus (-) display*2	Trigger level criterion*3
1	Output frequency/speed		*4	54	PID deviation	0	*4
2	Output current		*4	61	Motor thermal load factor		*4
3	Output voltage		*4	62	Inverter thermal load factor		*4
5	Frequency setting value/motor speed setting		*4	67	PID measured value 2		*4
6	Running speed		*4	83	BACnet valid APDU counter (for the FR-E800-EPA and FR-E800- SCEPA only)		65535
7	Motor torque		*4	91	PID manipulated amount	0	*4
8	Converter output voltage		*4	97	Dancer main set speed		*4
9	Regenerative brake duty		*4	201	*Output frequency		Pr.84
10	Electronic thermal O/L relay load factor		*4	202	*U-phase output current	0	ND rated current
11	Output current peak value		*4	203	*V-phase output current	0	ND rated current
12	Converter output voltage peak value		*4	204	*W-phase output current	0	ND rated current
13	Input power		*4	205	Converter output voltage		400/800/ 1000 V
14	Output power		*4	206	*Output current (all three phases)		ND rated current
17	Load meter		*4	207	*Excitation current (A)		ND rated current
18	Motor excitation current		*4	208	*Torque current (A)		ND rated current
19	Position pulse		65535	209	Terminal 2		100%
20	Cumulative energization time		65535	210	Terminal 4		100%
23	Actual operation time		65535	212	*Excitation current (%)	0	100%
24	Motor load factor		*4	213	*Torque current (%)	0	100%
32	Torque command		*4	230	*Output frequency (signed)	0	Pr.84
33	Torque current command		*4	231	*Motor speed (with sign)	0	*5
35	Feedback pulse		65535	232	*Speed command (with sign)	0	*5

Setting value	Monitor item*1	Minus (-) display*2	Trigger level criterion*3	Setting value	Monitor item*1	Minus (-) display*2	Trigger level criterion*3
40	PLC function user monitor 1	0	*4	235	*Torque command	0	100%
41	PLC function user monitor 2	0	*4	236	*Motor torque	0	100%
42	PLC function user monitor 3	0	*4	237	*Excitation current command	0	100%
52	PID set point		*4	238	*Torque current command	0	100%
53	PID measured value		*4				

^{*1 &}quot;*" shows a monitor item with a high-speed sampling cycle.

◆ Digital source (monitor item) selection

• Select the digital sources (input/output signals) to be set to **Pr.1038 to Pr.1045** from the following table. When a value other than the ones in the following table is set, "0" (OFF) is applied for indication.

^{*2} The monitor items with a circle (o) represents that its monitor value can be indicated with minus sign.

^{*3} Indicates a criterion at 100% when the analog trigger is set.

^{*4} Refer to the full-scale value of terminal FM or AM (on page 279).

^{*5} Rated motor frequency × 120 / number of motor poles

Setting value	Signal name	Pr.	Remarks
0	_	_	
1	STF*1	178	
2	STR*1	179	Input status of an external
5	RL*2	180	input terminal
6	RM ^{*2}	181	For the details of the signals,
7	RH ^{*2}	182	refer to page 328.
9	MRS*2	183	
11	RES*2	184	
21	X0	_	
22	X1	_	
23	X2	_	
24	X3	_	
25	X4	_	
26	X5	_	
27	X6	_	
28	X7	_	Input status of a terminal of
29	X8	_	the FR-A8AX (option)
30	X9	_	
31	X10	_	
32	X11	_	
33	X12	_	
34	X13	_	
35	X14	_	
36	X15	_	
37	DY	_	1

Cotting	Cional			
Setting value	Signal name	Pr.	Remarks	
101	RUN*2	190		
105	FU ^{*2}	191	For the details of the signals, refer to page 292.	
106	A,B,C	192	Total to page 252.	
121	DO0	313		
122	DO1	314		
123	DO2	315		
124	DO3	316	Output status of a terminal of the FR-A8AY (option)	
125	DO4	317	the TR-AOAT (option)	
126	DO5	318		
127	DO6	319		
128	RA1	320		
129	RA2	321	Output status of a terminal of	
130	RA3	322	the FR-A8AR (option)	
152	Forward	_		
	running			
153	Reverse running	_		
154	NET SU	_	Output status of the signal	
155	NET OL	_	(via communication)	
156	NET Y1	193	For the details of the signals,	
159	NET Y2	194	refer to page 292.	
160	NET Y3	195		
161	NET Y4	196		
166	NET ALM	_		
201	NET AU	_		
202	NET STF	_		
203	NET STR	_		
204	NET RL	180		
205	NET RM	181		
206	NET RH	182		
207	NET RT	_	Input status of the signal (via	
208	NET MRS	183	communication)	
209	NET JOG2	_	For the details of the signals, refer to page 328.	
210	NET X1	185		
211	NET X2	186		
212	NET RES	184	1	
213	NET X3	187		
214	NET X4	188		
215	NET X5	189		

^{*1} Fixed to OFF state in the safety communication model.

◆ Trigger setting (Pr.1025, Pr.1035 to Pr.1037, Pr.1046, Pr.1047)

• Set the trigger generating conditions and the trigger target channels.

Pr.1025 setting	Trigger generating conditions	Selection of trigger target channel
0	Tracing starts when inverter enters a fault status (protective function activated)	_
1	Tracing starts when analog monitor satisfies trigger conditions	Pr.1035
2	Tracing starts when digital monitor satisfies trigger conditions	Pr.1046
3	Tracing starts when either of analog or digital monitor satisfies trigger conditions (OR)	Pr.1035, Pr.1046
4	Tracing starts when both of analog or digital monitor satisfies trigger conditions (AND)	Pr.1035, Pr.1046

^{*2} Fixed to OFF state in the Ethernet model and safety communication model.

· Set the trigger generation conditions for the analog monitor.

Pr.1036 setting	Trigger generation conditions	Trigger level setting
0	Sampling starts when the analog data targeted for the trigger exceeds the value specified at the trigger level	Set the trigger level from 600 to
1	Sampling starts when the analog data targeted for the trigger falls below the value specified at the trigger level	1400 (-400% to 400% ^{*1}) in Pr.1037 .

^{*1} In Pr.1037, set the number obtained by adding 1,000 to the trigger level.

· Set the trigger generation conditions for the digital monitor.

Pr.1047 setting	Trigger generation conditions
0	Tracing starts when the digital data targeted for the trigger turns ON
1	Tracing starts when the digital data targeted for the trigger turns OFF

◆ Start of sampling (Pr.1020, Pr.1024)

- Set the trace operation. The trace operation is set in Pr.1020 Trace operation selection.
- · When "1" is set in Pr.1020, sampling starts.
- · When "2" is set in Pr.1020, it is regarded that a trigger occurs (forced trigger), and the sampling stops and the tracing starts.
- · When "3" is set in Pr.1020, sampling stops.
- To start sampling automatically when the power supply at power-ON or at a recovery after an inverter reset, set "1" in Pr.1024 Sampling auto start.

Pr.1020 setting	Operation
0	Sampling standby
1	Sampling start
2	Forced trigger (sampling stop)
3	Sampling stop

◆ Selection of trace operation by input terminal (TRG signal, TRC signal)

- · Trace operation can be selected by signal inputs.
- A forced trigger can be applied when the Trace trigger input (TRG) signal is ON.
- · Sampling is started and stopped by the Trace sampling start/end (TRC) signal turning ON and OFF, respectively.
- To input the TRG signal, set "46" in any of **Pr.178 to Pr.189 (Input terminal function selection)**, and to input the TRC signal, set "47" to assign the function to a terminal.



Changing the terminal assignment using Pr.178 to Pr.189 (Input terminal function selection) may affect the other functions.
 Set parameters after confirming the function of each terminal.

 
♦ Sampling retry

- If any error is found in the trace data, the sampling stops and then restarts (sampling retry).
- If another error is found within a minute from when an error is found, the sampling stops (sampling retry count excess).
- The sampling retry status can be checked by monitoring the trace status.

◆ Monitoring the trace status

• The trace status can be monitored on the operation panel by setting "38" in Pr.52 Operation panel main monitor selection, Pr.774 to Pr.776 (Operation panel monitor selection), or Pr.992 Operation panel setting dial push monitor selection.

The content depends on the digits on the operation panel.



Monitor value	Trace status						
Worldor value	Fourth digit	Third digit	Second digit	First digit			
0 or no display*1	No trace data in internal RAM	Sampling retry not performed	Trigger not detected	Tracing stopped			
1	Trace data in internal RAM	Sampling retry performed	Trigger detected	Trace operation			
2	_	Sampling retry count excess	_	_			

^{*1} The value(s) "0" to the left of the leftmost non-zero value is(are) not shown in the monitor display. For example, if no trace data is in internal RAM, sampling retry is not performed, no trigger is detected, and trace operation is performed, "1" appears. (not "0001")

During trace operation, the Trace status (Y40) signal can be output.
 To use the Y40 signal, set "40" (positive logic) or "140" (negative logic) in one of Pr.190 to Pr.196 (Output terminal function selection) to assign function to an output terminal.



• Changing the terminal assignment using **Pr.190 to Pr.196 (Output terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.52 Operation panel main monitor selection page 270
Pr.178 to Pr.189 (Input terminal function selection) page 310
Pr.190 to Pr.196 (Output terminal function selection) page 292

CHAPTER 16 (G) Control Parameters

16.1	Manual torque boost	426
16.2	Base frequency voltage	428
16.3	Load pattern selection	430
16.4	Energy saving control	432
16.5	SF-PR slip amount adjustment mode	433
16.6	DC injection brake, zero speed control, servo lock, and magnetic flux decay output shutoff	434
16.7	Stop selection	440
16.8	Regenerative brake selection	442
16.9	Regeneration avoidance function	
16.10	Slip compensation	449
16.11	Encoder feedback control	450
16.12	Droop control	452
16.13	Speed smoothing control	453

16 (G) Control Parameters

Purpose	Parameter to set				
To set the starting torque manually	Manual torque boost	P.G000, P.G010	Pr.0, Pr.46	426	
To set the motor constant	Base frequency, base frequency voltage	P.G001, P.G002, P.G011	Pr.3, Pr.19, Pr.47	428	
To select the V/F pattern matching the application	Load pattern selection	P.G003	Pr.14	430	
To perform energy saving operation	Energy saving operation	P.G030	Pr.60	432	
To compensate the motor slip amount when replacing an SF-JR motor with an SF-PR motor	SF-PR slip amount adjustment mode	P.G060, P.G061	Pr.673, Pr.674	433	
To adjust the motor braking torque	DC injection brake, zero speed control, servo lock, and magnetic flux decay output shutoff	P.G100 to P.G103, P.G110, P.B003	Pr.10 to Pr.12, Pr.422, Pr.802, Pr.850	434	
To coast the motor to a stop	Selection of motor stop method	P.G106	Pr.250	440	
To use the regeneration unit to increase the motor braking torque	Regenerative brake selection	P.E300, P.G107, P.T720	Pr.17, Pr.30, Pr.70	442	
To avoid overvoltage fault due to regenerative driving by automatic adjustment of output frequency	Regeneration avoidance function P.G120, P.G121, P.G123 to P.G12		Pr.882, Pr.883, Pr.885, Pr.886, Pr.665	446	
To select the control method	Control method selection	P.G200, P.G300	Pr.800, Pr.451	97	
To secure the low-speed torque by compensating the slip of the motor	Slip compensation	P.G203 to P.G205	Pr.245 to Pr.247	449	
To select the torque characteristic	Constant output range torque characteristic selection P.G210		Pr.803	114, 143	
To adjust the speed control gain	Sheed control dain		Pr.820, Pr.821, Pr.830, Pr.831	121	
To adjust the torque control gain	Torque control gain	P.G213, P.G214, P.G313, P.G314	Pr.824, P.825, Pr.834, P.835	149	
To stabilize speed feedback signal	Speed detection filter	P.G215, P.G315	Pr.823, P.833	154	
To change excitation ratio	Excitation ratio	P.G217	Pr.854	155	
To improve the motor trackability for the speed command changes	Speed feed forward control, model adaptive speed control P.G220 to P.G224, Pr.828, Pr.877 to P.C114 Pr.881		Pr.828, Pr.877 to Pr.881	124	
To make starting torque start-up faster	Torque bias	P.G230 to P.G238	Pr.840 to Pr.848	126	
To make the motor speed constant by the encoder	Encoder feedback control	P.A107, P.C140, P.C141, P.C148, P.G240, P.G241	Pr.285, Pr.359, Pr.367 to Pr.369, Pr.376	450	
To perform frequency control appropriate for load torque	Droop control	P.G400, P.G401	Pr.286, Pr.287	452	
To suppress the machine resonance	Speed smoothing control	P.G410, P.G411	Pr.653, Pr.654	453	
To adjust the speed gain for Advanced magnetic flux vector control	Speed control gain	P.G932, P.G942	Pr.89, Pr.569	102	

16.1 Manual torque boost

V/F

Voltage drop in the low-frequency range can be compensated, improving reduction of the motor torque in the low-speed range.

- Motor torque in the low-frequency range can be adjusted according to the load, increasing the motor torque at the start up.
- By using the RT signal, it is possible to switch between 2 types of torque boost.


Pr.	Name	Initial value	Setting range	Description
0 G000	Torque boost	2% to 6%*1	0% to 30%	Set the output voltage at 0 Hz in %.
46	Second formula hoost	9999	0% to 30%	Set the torque boost value at when the RT signal is ON.
G010			9999	Without the second torque boost

*1 The initial value differs depending on the inverter capacity as follows. For the LD rating (**Pr.570** = "1"), the initial value is changed. (Refer to page 171).

Inverter	Initial value
FR-E820-0050(0.75K) or lower	
FR-E820S-0050(0.75K) or lower	6%
FR-E840-0026(0.75K) or lower	
FR-E860-0017(0.75K)	5%
FR-E820-0080(1.5K) to FR-E820-0175(3.7K) FR-E840-0040(1.5K) to FR-E840-0095(3.7K) FR-E820S-0080(1.5K) or higher	4%
FR-E820-0240(5.5K) or higher FR-E840-0120(5.5K) or higher FR-E860-0027(1.5K) and FR-E860-0040(2.2K)	3%
FR-E860-0061(3.7K) or higher	2%

Starting torque adjustment

- Assuming Pr.19 Base frequency voltage is 100%, set the output voltage at 0 Hz to Pr.0 (Pr.46) in percentage.
- Perform the adjustment of the parameter little by little (approximately 0.5%), and confirm the status of the motor each time. The motor may overheat when the value is set too high. Do not use more than 10% as a guideline.

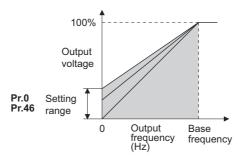

◆ Setting multiple torque boosts (RT signal, Pr.46)

- When changing the torque boost depending on the application or when using single inverter switching between multiple motors, use the second torque boost.
- **Pr.46 Second torque boost** is enabled when the RT signal is ON. To input the RT signal, set "3" in any parameter from **Pr.178 to Pr.189 (Input terminal function selection)** to assign the function.



- The RT signal is the Second function selection signal which also enables other second functions. (Refer to page 334.)
- Set a larger value when the distance between the inverter and the motor is long or when there is not enough motor torque in the low-speed range. It may cause overcurrent trip when it is set too large.
- Setting for Pr.0 and Pr.46 becomes enabled only when the V/F control is selected.
- When the initial value is set in Pr.0, the Pr.0 setting is automatically changed by changing the Pr.71 Applied motor or Pr.81
 Number of motor poles setting. (Refer to page 340.)
- Changing the terminal assignment using **Pr.178 to Pr.189 (Input terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.3 Base frequency, Pr.19 Base frequency voltage ☐ page 428 Pr.71 Applied motor ☐ page 340

Pr.178 to Pr.189 (Input terminal function selection) page 328

16.2 Base frequency voltage

V/F


Use this function to adjust the inverter outputs (voltage, frequency) to match with the motor rating.

Pr. Name	Initial value ^{*1}		Setting range	Description	
FI.	Gr.1 Gr	Gr.2	Setting range	Description	
3 G001	Base frequency	60 Hz	50 Hz	0 to 590 Hz	Set the frequency at the rated motor torque. (50/60 Hz)
			0 to 1000 V	Set the base voltage.	
19 G002	Base frequency voltage	9999	8888	8888	95% of the power supply voltage
3002			9999	Same as the power supply voltage	
47	G011 Second V/F (base frequency)	9999		0 to 590 Hz	Set the base frequency when the RT signal is ON.
G011				9999	Second V/F disabled

^{*1} Gr.1 and Gr.2 are the parameter initial value groups. (Refer to page 52).

♦ Base frequency setting (Pr.3)

- When operating a standard motor, generally set the rated frequency of the motor in **Pr.3 Base frequency**. When the motor operation require switching to the commercial power supply, set the power supply frequency in **Pr.3**.
- When the frequency described on the motor rating plate is "50 Hz" only, make sure to set to 50 Hz. When it is set to 60 Hz, the voltage will drop too much, causing insufficient torque. As a result, the inverter output may be shut off due to overload. A caution is required especially in case of **Pr.14 Load pattern selection** = "1" (variable torque load).
- When using the Mitsubishi Electric constant torque motor, set Pr.3 to 60 Hz.

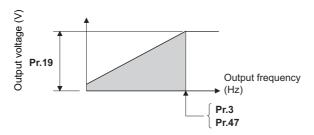

◆ Setting multiple base frequencies (Pr.47)

- To change the base frequency when using a single inverter switching between multiple motors, use Pr.47 Second V/F
 (base frequency).
- **Pr.47** is enabled when the RT signal is ON. To input the RT signal, set "3" in any parameter from **Pr.178 to Pr.189 (Input terminal function selection)** to assign the function.



• The RT signal is the Second function selection signal which also enables other second functions. (Refer to page 334.)

◆ Setting of base frequency voltage (Pr.19)

- Use Pr.19 Base frequency voltage to set the base voltage (for example, rated motor voltage).
- · When it is set lower than the power supply voltage, maximum output voltage of the inverter will be the voltage set in Pr.19.
- Pr.19 can be used in the following cases.
 - (a) When regenerative driving (continuous regeneration, etc.) is performed frequently
 Output voltage will get higher than the specification during the regenerative driving, which may cause overcurrent trip
 (E.OC[]) by the increase in motor current.
 - (b) When the fluctuation of power supply voltage is high When the power supply voltage exceeds the rated voltage of the motor, fluctuation of rotation speed or overheating of motor may occur due to excessive torque or increase in motor current.
- To operate a Vector control dedicated motor (SF-V5RU) with V/F control, the setting is as shown in the following table.

Motor model	Pr.19 setting	Pr.3 setting
SF-V5RU, 3.7 kW or lower	170 V	
SF-V5RU, 5.5 kW or higher	160 V	50 Hz
SF-V5RUH, 3.7 kW or lower	340 V	30 HZ
SF-V5RUH, 5.5 kW or higher	320 V	

• NOTE

- When the operation becomes not possible due to failure in encoder or other reasons under Vector control, set "9999" in Pr.80
 Motor capacity or Pr.81 Number of motor poles to perform V/F control.
- When the Advanced magnetic flux vector control, Real sensorless vector control, Vector control, or PM sensorless vector control is selected, Pr.3, Pr.47, and Pr.19 will become disabled, and Pr.83 and Pr.84 will become enabled.
 However, S-pattern curve with Pr.29 Acceleration/deceleration pattern selection = "1" (S-pattern acceleration/deceleration A) enables Pr.3 or Pr.47. (S-pattern curve under PM sensorless vector control is the rated frequency of the motor.)
- Changing the terminal assignment using **Pr.178 to Pr.189 (Input terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

Parameters referred to

Pr.14 Load pattern selection ☞ page 430
Pr.29 Acceleration/deceleration pattern selection ☞ page 201
Pr.83 Rated motor voltage, Pr.84 Rated motor frequency ☞ page 430
Pr.178 to Pr.189 (Input terminal function selection) ☞ page 328

16.3 Load pattern selection


V/F

Optimal output characteristics (V/F characteristics) for application or load characteristics can be selected.

Pr.	Name	Initial value	Setting range	Description
14 G003 Load pattern selection	0	0	For constant-torque load	
		1	For variable-torque load	
		2	For constant-torque lift (boost at reverse rotation: 0%)	
			3	For constant-torque lift (boost at forward rotation: 0%)

◆ Application for constant-torque load (Pr.14 ="0", initial value)

- · The output voltage will change linearly against the output frequency at the base frequency or lower.
- Set this parameter when driving a load that has constant load torque even when the rotation speed is changed, such as conveyor, dolly, or roll drive.

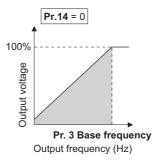


Point P

Select for constant-torque load (setting value "0") even for fan and pump in the following cases.

- · When accelerating a blower with large moment of inertia (J) in a short period of time.
- · When it is a constant-torque load such as rotary pump or gear pump.
- · When the load torque increases in low speed such as screw pump.

◆ Application for variable-torque load (Pr.14 ="1")


- · The output voltage will change in square curve against the output frequency at the base frequency or lower.
- Set this parameter when driving a load with load torque change proportionally against the square of the rotation speed, such as a fan or pump.

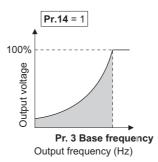

◆ Vertical lift load applications (Pr.14 = "2, 3")

- Set "2" when a vertical lift load is fixed as power driving load at forward rotation and regenerative load at reverse rotation.
- **Pr.0 Torque boost** is valid during forward rotation, and torque boost is automatically changed to "0%" during reverse rotation.
- Set "3" for an elevated load that is in the driving mode during reverse rotation and in the regenerative load mode during forward rotation according to the load weight, e.g. counterweight system.

• **Pr.46 Second torque boost** is enabled when the RT signal is ON. To input the RT signal, set "3" in any parameter from **Pr.178 to Pr.189 (Input terminal function selection)** to assign the function.

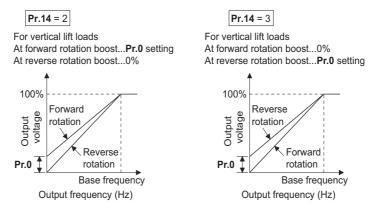



• When torque is continuously regenerated as vertical lift load, it is effective to set the rated voltage in **Pr.19 Base frequency voltage** to prevent trip due to current at regeneration.

Parameters referred to

Pr.0 Torque boost ☞ page 426

Pr.178 to Pr.189 (Input terminal function selection) page 328

16.4 Energy saving control

V/F

The inverter will automatically perform energy saving operation without setting detailed parameters.

This control method is suitable for applications such as fans and pumps.

Pr.	Name	Initial value	Setting range	Description
60	Energy saving	0	0	Normal operation
G030	control selection		9	Optimum excitation control

◆ Optimum excitation control (Pr.60 = "9")

- Setting Pr.60 = "9" will select the Optimum excitation control.
- The Optimum excitation control is a control method to decide the output voltage by controlling the excitation current so the efficiency of the motor is maximized.
- Energy saving operation will be enabled under V/F control.



- In the Optimum excitation control mode, an energy saving effect is not expected when the motor capacity is extremely small compared with the inverter capacity or when multiple motors are connected to a single inverter.
- When the Optimum excitation control mode is selected, the deceleration time may become longer than the setting value. Also, it may cause overvoltage more often compared to constant-torque load characteristics, so set the deceleration time longer.
- When the motor becomes unstable during the acceleration, set the acceleration time longer.
- Output current may increase slightly with the energy saving operation mode or the Optimum excitation control mode since the output voltage is controlled.

16.5 SF-PR slip amount adjustment mode

V/F

- As compared to our conventional SF-JR motor, the slip amount is small for the high-performance energy-saving SF-PR motor. When replacing the SF-JR to the SF-PR, the slip amount is reduced and the rotations per minute increases. Therefore, when the SF-PR is used with the same frequency setting as that of the SF-JR, power consumption may increase as compared to the SF-JR.
- By setting the slip amount adjustment mode, the frequency command can be adjusted to keep the rotations per minute of the SF-PR equivalent to those of the SF-JR for power consumption reduction.

Pr.	Name	Initial value	Setting range	Description
673	SF-PR slip amount adjustment	9999	2, 4, 6	Set the number of SF-PR motor poles.
G060 ^{*1}	operation selection	9999	9999	The slip amount adjustment is disabled.
674 G061 ^{*1}	SF-PR slip amount adjustment gain	100%	0% to 500%	Setting is available for fine adjustment of the slip amount.

- *1 The setting is available only for the 200/400 V class.
- By setting the number of SF-PR motor poles in **Pr.673 SF-PR slip amount adjustment operation selection**, the SF-PR slip amount adjustment mode is activated.
- The SF-PR slip amount adjustment mode is available only under V/F control.
- Use **Pr.674 SF-PR slip amount adjustment gain** to fine-tune the rotations per minute. To reduce the rotations per minute (to increase the compensation frequency), set a larger value in **Pr.674**. To increase the rotations per minute (to reduce the compensation frequency), set a smaller value in **Pr.674**. (Lower rotations per minute reduce the power consumption, and higher rotations per minute increase the power consumption.)

NOTE

- The slip amount adjustment is not available in the following conditions.
 During acceleration/deceleration, during DC injection brake operation, during PID control, during stall prevention operation, during regeneration avoidance operation, during traverse operation, and while the slip compensation is valid (Pr.245).
- The slip amount adjustment is not available when the applicable motor capacity of the inverter is not compatible with the SF-PR. (For the details of the applicable motor capacity, refer to the Instruction Manual (Connection).)

16.6 DC injection brake, zero speed control, servo lock, and magnetic flux decay output shutoff

· Adjust the braking torque and timing to stop the motor using the DC injection brake.

Zero speed control is also available under Real sensorless vector control, and zero speed control and servo lock are selectable under Vector control.

When the DC injection brake operation is used, DC voltage is applied to the motor to prevent rotation of the motor shaft, and when the zero speed control is used, Vector control is performed to keep 0 r/min. Either way, when a motor shaft is rotated by external force, it does not go back to the original position.

When the servo lock control is used, the position of the motor shaft is held. When a motor shaft is rotated by external force, it goes back to the original position.

· Select the magnetic flux decay output shutoff function to decay the magnetic flux before shutting off the output at a stop.

Pr.	Name	Initial value	Setting range	Description
10 G100	DC injection brake operation frequency	3 Hz	0 to 120 Hz	Set the operation frequency for the DC injection brake (zero speed control / servo lock).
11	DC injection broke		0	DC injection brake operation (zero speed control / servo lock) is not applied.
G101	DC injection brake operation time	0.5 s	0.1 to 10 s	Set the operation time for the DC injection brake (zero speed control / servo lock).
			8888	The operation continues while the X13 signal is ON.
12 G110	DC injection brake operation voltage	6% / 4% / 1% ^{*1}	0% to 30%	Set the DC injection brake voltage (torque). When set to "0", the DC injection brake is not applied.
802	Pre-excitation	0	0	Zero speed control
G102	selection	0	1	Servo lock
			0	DC injection brake operation is applied.
850	Brake operation	0	1	Zero speed control (under Real sensorless vector control)
G103	selection	Ü	2	Magnetic flux decay output shutoff (under Real sensorless vector control)
422 B003	Position control gain	10 s ⁻¹	0 to 150 s ⁻¹	Set the position control gain for servo lock.

^{*1} The initial value differs depending on the inverter capacity.


Inverter	Initial value
FR-E820-0015(0.2K) or lower	6%
FR-E820S-0015(0.2K) or lower	0 70
FR-E820-0030(0.4K) or higher	
FR-E840-0016(0.4K) or higher	4%
FR-E820S-0030(0.4K) or higher	
FR-E860-0017(0.75K) or higher	1%

Setting of operating frequency (Pr.10)

 By setting the frequency for DC injection brake operation (zero speed control / servo lock) to Pr.10 DC injection brake operation frequency, DC injection brake operation (zero speed control / servo lock) starts when the frequency reaches the Pr.10 setting during deceleration. • The DC injection brake operation frequency depends on the stopping method.

Motor	Stopping method	Parameter setting		DC injection brake operation frequency
			0.5 Hz or higher in Pr.10	Pr.10 setting
Induction motor	Press the STOP/RESET key on the operation panel.	Pr.11 ≠ "8888"	Lower than 0.5 Hz in Pr.10 , and 0.5 Hz or higher in Pr.13	0.5 Hz
	Turn OFF the STF/STR signal.		Lower than 0.5 Hz in both Pr.10 and Pr.13	Pr.10 or Pr.13 setting, whichever larger
		Pr.11 = "8888"		0.5 Hz
	Set frequency to 0 Hz	_		Pr.13 setting or 0.5 Hz, whichever smaller
	David Har OTOD/DEOFT Lawren	Pr.11 ≠ "0, 8888"		0 Hz
PM motor	Press the STOP/RESET key on the operation panel. Turn OFF the STF/STR signal.	Pr.11 = "0"		Motor coasts at the frequency set in Pr.10 or lower.
	Turi Ori ale Ori /Orix signal.	Pr.11 = "8888"		0.5 Hz
	Set frequency to 0 Hz	_		0 Hz

· The DC injection brake operation frequency will be fixed to 0 Hz under PM sensorless vector control.

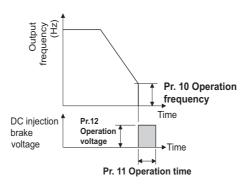

• NOTE

- When executing pre-excitation (zero speed control) under Real sensorless vector control, set **Pr.10 DC injection brake operation frequency** to 0.5 Hz or lower since it may cause motor vibration, etc., at the time of deceleration stop.
- The initial value of Pr.10 will automatically switch to 0.5 Hz under Vector control.

◆ Operation time setting (X13 signal, Pr.11)

- Set the operation time for DC injection brake (zero speed control / servo lock) in Pr.11 DC injection brake operation time.
- · When the motor does not stop due to large load moment (J), increase the setting to ensure the effect.
- When **Pr.11** = "0 s", DC injection brake (zero speed control / servo lock) does not start. (The motor starts to coast when the output frequency drops to the **Pr.10** setting or lower at a stop.)
- When **Pr.11** = "8888", DC injection brake (zero speed control / servo lock) starts when the X13 signal is turned ON. DC injection brake starts when the X13 signal is turned ON even while operating.
- For the X13 signal input, set "13" in any of Pr.178 to Pr.189 to assign the function.

NOTE

- Under Real sensorless vector control, when the X13 signal turns ON while **Pr.11** = "8888", the zero speed control is activated regardless of the **Pr.850 Brake operation selection** setting.
- Under Vector control, zero speed control or servo lock starts depending on the setting of Pr.802.

◆ Setting of operation voltage (torque) (Pr.12)

- Set the percentage against the power supply voltage in **Pr.12 DC injection brake operation voltage**. (The setting is not used for zero speed control or servo lock.)
- The DC injection brake operation is not available when the setting of **Pr.12** is 0%. (The motor starts to coast when the output frequency drops to the **Pr.10** setting or lower at a stop.)
- The Pr.12 setting is disabled under PM sensorless vector control.



 When the setting of Pr.12 is the initial value, the setting corresponding to the motor is set according to the Pr.71 Applied motor setting. (Refer to page 343.) However, when an energy saving motor (SF-HR or SF-HRCA) is used, change the Pr.12 setting as shown below.

Motor capacity	Pr.12 setting
3.7 kW or lower	4%
5.5 kW or higher	3%

• Even if the setting value of **Pr.12** is made larger, braking torque will be limited so the output current will be within the rated current of the inverter.

Braking operation selection under Real sensorless vector control (Pr.850 = "0 or 1")

• The braking operation under Real sensorless vector control can be selected between the DC injection brake operation (initial setting) and zero speed control.

By setting **Pr.850 Brake operation selection** = "1", zero speed control will be performed at the frequency set in **Pr.10 DC injection brake operation frequency** or lower.

Control method	Control mode	Pr.850	Deceleration stop
V/F control	_	_	DC injection brake
Advanced magnetic flux vector control	_	_	DC injection brake
		0	DC injection braking
	Speed	1	Zero speed
Real sensorless vector control	Speed	2	Magnetic flux decay output shutoff
Real sensoness vector control	Torque	0	DC injection braking
		1	Zero speed
	Torque	2	Magnetic flux decay output shutoff
Vector control	Speed	_	Zero speed or servo lock
Vector control	Torque	_	Zero speed
PM sensorless vector control	Speed	_	DC injection brake




- Under Real sensorless vector control, when the X13 signal turns ON while **Pr.11** = "8888", the zero speed control is activated regardless of the **Pr.850** setting.
- When restarting the operation after a brake operation under Real sensorless vector control, set **Pr.850** = "1" (zero speed control). Setting "0" (DC injection brake) may cause a delay of about 2 seconds from the time the start up command is input until it actually is output.


◆ Magnetic flux decay output shutoff and the Magnetic flux decay output shutoff signal (X74 signal, Pr.850 = "2")

- Frequent starts/stops (inching) under Real sensorless vector control may cause an inverter failure or create a difference in operation with the motor. The reason is that some magnetic flux is left in the motor at shutoff of the inverter output. If this is the case, set **Pr.850** = "2" (magnetic flux decay output shutoff) or turn ON the Magnetic flux decay output shutoff (X74) signal to decay the magnetic flux at a stop, and then shut off the output.
- While **Pr.850** = "2", deceleration starts at turning OFF of the start command, and the magnetic flux decay output shutoff is activated when the estimated speed becomes lower than **Pr.10 DC injection brake operation frequency**.
- While the brake sequence function is active, the magnetic flux decay output shutoff is activated when the running frequency drops to 0.5 Hz or **Pr.13 Starting frequency**, whichever is smaller.

• Inverter output voltage shutoff timing when Pr.850 = "2"

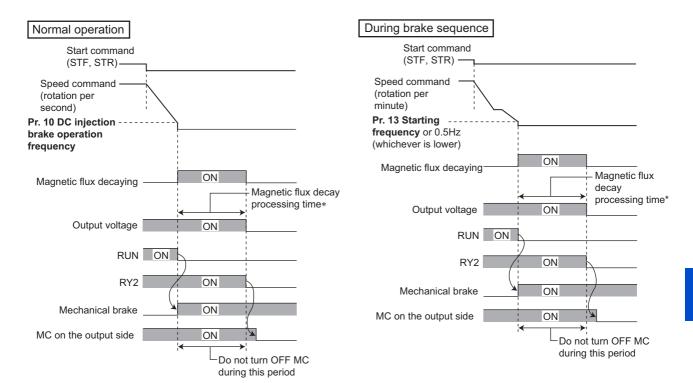

- *1 Maximum processing time of the magnetic flux decay
- Turning ON the Magnetic flux decay output shutoff (X74) signal starts the magnetic flux decay output shutoff regardless of the **Pr.850** setting. For the X74 signal, set "74" in any of **Pr.178 to Pr.189 (Input terminal function selection)** to assign the function.
- · Inverter output shutoff timing with X74 signal

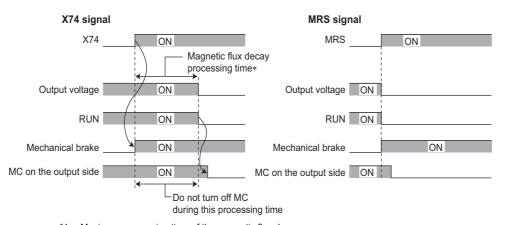

- *1 Maximum processing time of the magnetic flux decay
- Since the torque will decrease at the time of magnetic flux decay output shutoff, set up so the mechanical brake will
 operate.
- The magnetic flux decay output shutoff will be canceled at the time of restart and when the Pre-excitation (LX) signal or External DC injection brake operation start (X13) signal is turned ON.
- If an MC is installed at the inverter's output side, set to open the MC after the operation time of the magnetic flux decay output shutoff elapses. (See below.)

Motor capacity (Pr.80 setting)	2.2 kW or lower	3.7 kW to 11 kW	15 kW to 30 kW
Magnetic flux decay process time	250 ms	500 ms	800 ms



- Under a control other than Real sensorless vector control, the inverter will immediately shutoff the output when the X74 signal is turned ON
- Even under Real sensorless vector control, the inverter will immediately shutoff the output when the X74 signal is turned ON during the automatic restart after instantaneous power failure and online auto tuning during the start up.
- If another output-shutoff trigger (inverter fault, turning ON the MRS signal, etc.) occurs during the magnetic flux decay operation, the magnetic flux decay operation is terminated, and the output is shut off immediately.
- Unlike the MRS signal, voltage is output during the magnetic flux decay output shutoff operation, so take caution on electric shocks
- When the release timing of the mechanical brake is too fast, the motor shaft may be rotated by dropping or external force.
 When the release timing is too late, the overcurrent prevention operation, stall prevention operation, or electronic thermal O/L relay function may be activated. Perform release of the mechanical brake matching the equipment using the Output frequency detection (FU) signal or Output current detection (Y12) signal.
- Changing the terminal assignment using **Pr.178 to Pr.189 (Input terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.

Braking operation selection under Vector control or PM sensorless vector control (Pr.802)

• Use **Pr.802 Pre-excitation selection** to select the braking operation when the pre-excitation is performed from either zero speed control or servo lock.

Pr.802 setting	Pre- excitation	Description
0 (initial value)	Zero speed control	Even under a load, the inverter does not rotate the motor and holds 0 r/min. However, it will not return to its original position when the shaft moves due to external force.
1	Servo lock	Even under a load, the inverter holds the position of the motor shaft. When the shaft moves due to external force, it will return to its original position after the external force is removed. The position loop gain can be adjusted using Pr.422 Position control gain .


• The relation between the DC injection brake operation and pre-excitation operation is as follows.

Control method	Control mode	Pr.802	Pr.850	Deceleration stop	LX-ON	X13-ON (Pr.11 = "8888")
V/F control	_	_	_	DC injection brake	_	DC injection brake
Advanced magnetic flux vector control	_	_	_	DC injection brake	_	DC injection brake
		_	0	DC injection braking	Zoro opend	Zero speed
	Speed	_	1	Zero speed	Zero speed	
Real sensorless vector control		_	2	Magnetic flux decay output shutoff	Zero speed	Zero speed
Real sensoriess vector control	Torque	_	0	DC injection braking	Zero speed	Zero speed
		_	1	Zero speed		
		_	2	Magnetic flux decay output shutoff	Zero speed	Zero speed
	Speed	0	_	Zero speed	Zero speed	Zero speed
Vector control	Speed	1	_	Servo lock	Servo lock	Servo lock
	Torque	_	_	Zero speed	Zero speed	Zero speed
PM sensorless vector control	Speed	_	_	DC injection brake	_	DC injection brake

◆ Pre-excitation signal (LX signal)

• When the Pre-excitation (LX) signal is turned ON while the motor stops under Real sensorless vector control or Vector control, pre-excitation (zero speed control / servo lock) starts.

• To input the LX signal, set "23" in any of Pr.178 to Pr.189 (Input terminal function selection) to assign the function.

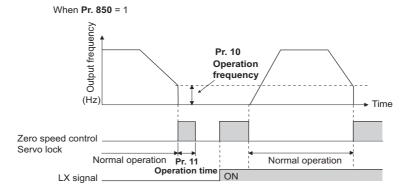

NOTE

- Changing the terminal assignment using Pr.178 to Pr.189 (Input terminal function selection) may affect the other functions. Set parameters after confirming the function of each terminal.
- · Performing pre-excitation (LX signal and X13 signal) under torque control may start the motor running at a low speed even when the start signal (STF or STR) is not input. This product with the start command ON may also rotate the motor at a low speed when the speed limit value is set to zero. Confirm that the motor running does not cause any safety problems before performing pre-excitation.
- · Note that during the pre-excitation operation, a voltage is applied to the motor even when the [RUN] LED on the operation panel or the FWD/REV indicator on the parameter unit is OFF.
- When offline auto tuning (Pr.96 Auto tuning setting/status = "1 or 11") is performed during pre-excitation operation, preexcitation is disabled.
- · When the LX signal is ON and the start signal is OFF at the automatic restart after instantaneous power failure, the motor does not decelerates to stop from the detected motor speed, and pre-excitation (zero speed control / servo lock) is applied.

♠ CAUTION

- Install a mechanical brake to make an emergency stop or to stay stopped for a long time.
- · Wait until the machine stops completely, and fix the motor with a mechanical brake, then turn the LX signal (preexcitation) OFF.

Parameters referred to

Pr.13 Starting frequency page 207, page 208
Pr.71 Applied motor page 340
Pr.80 Motor capacity page 345

Pr.178 to Pr.189 (Input terminal function selection) F page 328

16.7 Stop selection

Select the stopping method (deceleration stop or coasting) at turn-OFF of the start signal.


Coasting can be selected for the cases such that the motor is stopped with a mechanical brake at turn-OFF of the start signal. The operation of the start signal (STF/STR) can be selected. (For the start signal selection, refer to page 336.)

Pr.	Name	Initial	Setting range	Description	on
FI. Name		value	Setting range	Start signal (STF/STR) ^{*1}	Stop operation
	250 G106 Stop selection	0 to 100 s 1000 to 1100 9999 8888	0 to 100 s	STF signal: Forward rotation start STR signal: Reverse rotation start	The motor coasts to a stop after a lapse of the setting time when the start signal is turned OFF.
			1000 to 1100 s	STF signal: Start signal STR signal: Forward/reverse rotation signal	The motor coasts to a stop after a lapse of the (Pr.250 - 1000) seconds when the start signal is turned OFF.
			9999	STF signal: Forward rotation start STR signal: Reverse rotation start	The motor is decelerated to a stop
			8888	STF signal: Start signal STR signal: Forward/reverse rotation signal	when the start signal is turned OFF.

^{*1} For the start signal selection, refer to page 336.


To decelerate the motor to a stop

- Set Pr.250 = "9999 (initial value) or 8888".
- The motor is decelerated to a stop when the start signal (STF/STR) is turned OFF.

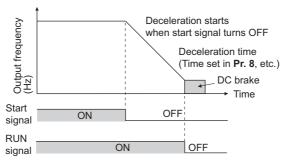

◆ To coast the motor to a stop

- Set the time required to shut off the output after the start signal is turned OFF in **Pr.250**. When "1000 to 1100" is set, output is shut off after a lapse of the (**Pr.250** 1000) seconds.
- The output is shut off after a lapse of the setting time of Pr.250 when the start signal is turned OFF. Motor coasts to a stop.
- · The RUN signal is turned OFF when the output is shut off.

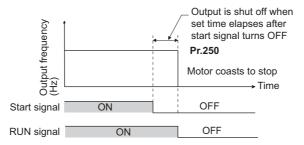



• The stop selection setting is disabled when the following functions are operating.

Power failure stop function (Pr.261)

PU stop (Pr.75)

Deceleration stop due to communication error (Pr.502)

- When Pr.250 ≠ "9999 or 8888", acceleration/deceleration is performed in accordance to the frequency command until the output is shut off by turning OFF the start signal.
- When the restart signal is turned ON during the motor coasting, the operation is resumed from Pr.13 Starting frequency.
- · Even with the setting of coasting to a stop, when the LX signal is turned ON, the motor does not coast but zero speed control or servo lock is applied.

Parameters referred to

Pr.7 Acceleration time, Pr.8 Deceleration time \$\square\$ page 196
Pr.13 Starting frequency \$\square\$ page 207, page 208
Pr.75 Reset selection/disconnected PU detection/PU stop selection \$\square\$ page 161
Pr.261 Power failure stop selection \$\square\$ page 414

Pr.502 Stop mode selection at communication error [37] Instruction Manual (Communication)

16.8 Regenerative brake selection

- When performing frequent start and stop operation, usage rate of the regenerative brake can be increased by using the optional high-duty brake resistor (FR-ABR) or the brake unit (FR-BU2, BU, or FR-BU).
- The multifunction regeneration converter (FR-XC in power regeneration mode) or power regeneration common converter (FR-CV) is used for the continuous operation in the regenerative status. The multifunction regeneration converter (FR-XC in common bus regeneration mode) and high power factor converter (FR-HC2) can also be used to reduce harmonics, improve power factor, and operate continuously during regenerative driving. The multifunction regeneration converter (FR-XC), power regeneration common converter (FR-CV), and high power factor converter (FR-HC2) cannot be used with the FR-E800-SCE.

Pr.	Name	Initial value	Setting range	Desci	ription	
30	Regenerative function	0	0	No regenerative function Brake resistor (MRS, MYS type) Brake unit (FR-BU2) Multifunction regeneration converter (FR-XC) Power regeneration common converter (FR-CV) High power factor converter (FR-HC2)		
E300	selection		1	Brake resistor (MYS type) used High-duty brake resistor (FR-A		
			2	When the automatic restart operation after instantaneous power failure function is enabled while a brake resistor and a regeneration unit is used		
70 G107	Special regenerative brake duty	0%	0% to 100%	Set the %ED of the built-in brake transistor operation.		
		0	0	X10: Normally open input		
			1	X10: Normally closed input (NC contact input specification)	MRS: Normally open input	
			2	X10: Normally open input	MRS: Normally closed input	
17 T720	MRS/X10 terminal input selection		3	X10: Normally closed input (NC contact input specification)	(NC contact input specification)	
			4	X10: Normally open input	External terminal: Normally	
			5	X10: Normally closed input (NC contact input specification)	closed input (NC contact input specification) Communication: Normally open input	

When using the brake resistor (MRS, MYS type), brake unit (FR-BU2), multifunction regeneration converter (FR-XC), power regeneration common converter (FR-CV), and high power factor converter (FR-HC2)

• Set Pr.30 = "0" (initial setting). The Pr.70 setting is invalid. At this time, the regenerative brake duty is as follows.

Inverter	Regenerative brake duty
FR-E820-0015(0.2K) or lower FR-E820S-0015(0.2K) or lower	0%
FR-E820-0030(0.4K) to FR-E820-0175(3.7K) FR-E820S-0030(0.4K) or higher	3%
FR-E820-0240(5.5K) or higher FR-E840-0016(0.4K) or higher	2%

When connecting the converter unit (FR-XC, FR-HC2, or FR-CV), assign the Inverter run enable (X10) signal to a contact input terminal. To ensure coordinated protection of the converter unit, use the Inverter operation enable (X10) signal to shut off the inverter output. Input the Inverter operation enable (RYB/RDY/RDYB) signal of the converter unit. The X10 signal can be input only via an external input terminal. For the terminal used for the X10 signal input, set "10" (X10) in any parameter from Pr.178 to Pr.184 to assign the function.

- ◆ When using the brake resistor (MYS type) at 100% torque, 6%ED (FR-E820-0175(3.7K) only)
- Set Pr.30 = "1".
- Set Pr.70 = "6%".
- ◆ When using the high-duty brake resistor (FR-ABR) (FR-E820-0030(0.4K) or higher, FR-E840-0016(0.4K) or higher)
 - Set Pr.30 = "1".
 - Set Pr.70 = "10%".

When the automatic restart after instantaneous power failure function is enabled


- Set **Pr.30** = "2" to enable the automatic restart after instantaneous power failure function when using the high-duty brake resistor (FR-ABR), brake resistor (MRS, MYS type), brake unit (FR-BU2), multifunction regeneration converter (FR-XC), power regeneration common converter (FR-CV), and high power factor converter (FR-HC2).
- · Set Pr.70 as follows.

Option used	Pr.70 setting	Remarks
FR-ABR	10%	FR-E820-0030(0.4K) or higher FR-E840-0016(0.4K) or higher FR-E820S-0030(0.4K) or higher
MRS type, MYS type	3%	FR-E820-0030(0.4K) to FR-E820-0175(3.7K) FR-E840-0016(0.4K) or higher FR-E820S-0030(0.4K) or higher
MYS type (used at 100% torque / 6%ED)	6%	FR-E820-0175(3.7K)
FR-XC, FR-CV, FR-HC2, FR-BU2	0%	_

- When using the FR-XC or FR-HC2, enable the automatic restart after instantaneous power failure function in both the FR-XC/FR-HC2 and the inverter (**Pr.57 Restart coasting time** ≠ "9999").
- If the FR-XC or FR-HC2 detects the power failure during inverter running, the motor starts to coast since the Inverter operation enable (RYB or RDY) signal turns ON. After the power is restored and the Inverter operation enable (RYB or RDY) signal turns OFF, the inverter detects the motor speed (Pr.162 Automatic restart after instantaneous power failure selection) and restarts operation.

◆ Logic reversing of the Inverter run enable signal (X10 signal, Pr.17)

- Use Pr.17 MRS/X10 terminal input selection to select the X10 signal input specification between normally open (NO contact) and normally closed (NC contact). With the normally closed (NC contact) input specification, the inverter output is shut off by turning OFF (opening) the X10 signal.
- Change the **Pr.17** setting to change the inverter logic (NO/NC contact) according to the logic of the inverter operation enable signal sent from the converter unit.
- The logic of the MRS signal can also be selected by setting Pr.17. Refer to page 332 to select the logic of the MRS signal.
- · The response time of the X10 signal is within 2 ms.

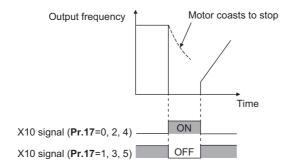

· Relationship between Pr.17 and the Inverter run enable signal of each option unit

Pr.17 setting	Correspondi	ing signals of the c	Operation according to the X10 signal status	
Fi.ir setting	FR-HC2	FR-CV	FR-XC	Operation according to the ATO signal status
0/2/4 (initial values)	RDY (negative logic) (initial setting)	RDYB	RYB	X10-ON: Inverter output shutoff (NO contact)
1, 3, 5	RDY (positive logic)	RDYA	RYA	X10-OFF: Inverter output shutoff (NC contact)

 


- When **Pr.30** = "0 or 2" and the X10 signal is not assigned to an input terminal, the MRS signal can be used as the X10 signal. The logic of the signal depends on that of the MRS signal (normally open input when **Pr.17** = "0 or 1", and normally closed input when **Pr.17** = "2 to 5").
- The MRS signal is valid regardless of whether it is input through the external terminal or via network (except for the FR-E800-SCE), but when the MRS signal is used as the Inverter run enable (X10) signal, input the signal through the external terminal.
- When the terminal assignment is changed with **Pr.178 to Pr.184 (Input terminal function selection)**, wiring may be mistaken due to different terminal name and signal contents, or may affect other functions. Set parameters after confirming the function of each terminal

Regenerative brake duty warning output and the warning signal (RBP signal)

- When the regenerative brake duty reaches 85% of the **Pr.70** setting, "RB" is indicated on the operation panel and the Regenerative brake prealarm signal (RBP) signal is output. When it reaches 100% of the **Pr.70** setting, it will become regenerative overvoltage (E.OV[]).
- The inverter output is not shut off with the warning signal.
- For the terminal to be used for the RBP signal output, set "7" (positive logic) or "107" (negative logic) to one of **Pr.190 to Pr.196 (Output terminal function selection)**, and assign the function.

100%: Regeneration overvoltage protection operation value





- When **Pr.30** = "0" (initial value), "RB" is not indicated.
- Changing the terminal assignment using **Pr.190 to Pr.196 (Output terminal function selection)** may affect the other functions. Set parameters after confirming the function of each terminal.


Connection of a brake resistor other than the FR-ABR, MRS type, and MYS type

A brake resistor can be used with the FR-E820-0030(0.4K) or higher, FR-E840-0016(0.4K) or higher, FR-E860-0017(0.75K) or higher, and FR-E820S-0030(0.4K) or higher.

Use a brake resistor that has resistance and power consumption values higher than the following. Also, the brake resistor must have a sufficient capacity to consume the regenerative power.

Voltage class	Inverter	Minimum resistance (Ω)	Power consumption (kW)
	FR-E820-0030(0.4K)	100	1.5
	FR-E820-0050(0.75K)	80	1.9
	FR-E820-0080(1.5K)	60	2.5
	FR-E820-0110(2.2K)	60	2.5
	FR-E820-0175(3.7K)	40	3.8
200 V class	FR-E820-0240(5.5K)	25	6.1
200 V Class	FR-E820-0330(7.5K)	20	7.6
	FR-E820S-0030(0.4K)	100	1.5
	FR-E820S- 0050(0.75K)	80	1.9
	FR-E820S-0080(1.5K)	60	2.5
	FR-E820S-0110(2.2K)	60	2.5
	FR-E840-0016(0.4K)	371	1.6
	FR-E840-0026(0.75K)	236	2.4
	FR-E840-0040(1.5K)	205	2.8
400 V class	FR-E840-0060(2.2K)	180	3.2
	FR-E840-0095(3.7K)	130	4.4
	FR-E840-0120(5.5K)	94	6.1
	FR-E840-0170(7.5K)	67	8.6
	FR-E860-0017(0.75K)	350	2.4
	FR-E860-0027(1.5K)	300	2.8
575 V class	FR-E860-0040(2.2K)	260	3.3
J. J v class	FR-E860-0061(3.7K)	190	4.5
	FR-E860-0090(5.5K)	140	6.1
	FR-E860-0120(7.5K)	100	8.5

*1 The resistance should be 200 Ω or more at 100% ED. The following shows the brake duty when the resistance is less than 200 Ω .

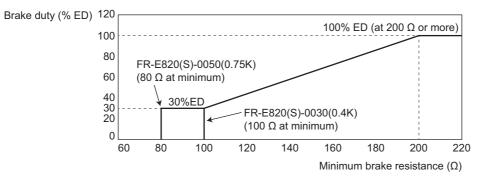

Set parameters as follows:

- Pr.30 Regenerative function selection = "1"
- · Set Pr.70 Special regenerative brake duty according to the amount and frequency of the regenerative driving, and make sure that the resistor can consume the regenerative power properly.
- · When the regenerative brake transistor is damaged, install a thermal relay to prevent overheat and burnout of the brake resistor. (Refer to the Instruction Manual (Connection) to install a thermal relay.) Properly select a thermal relay according to the regenerative driving frequency or the rated power or resistance of the brake resistor.

♠ CAUTION

- · If the resistor selection is incorrect, overcurrent may damage the inverter built-in brake transistor. Besides, the resistor may be burned due to overheat.
- · If the selection of the thermal relay is incorrect, the resistor may be burned due to overheat.

Parameters referred to

page 403, page 408 Pr.57 Restart coasting time 3

Pr.178 to Pr.189 (Input terminal function selection) page 328
Pr.190 to Pr.196 (Output terminal function selection) page 292

16.9 Regeneration avoidance function


The regenerative status can be detected and avoided by raising the frequency.


• The operation frequency is automatically increased to prevent the regenerative operations. This function is useful when a load is forcibly rotated by another fan in the duct.


Pr.	Name	Initial	value	Setting range	Description
	Degeneration	0		0	The regeneration avoidance function is disabled.
882	Regeneration avoidance operation			1	The regeneration avoidance function is always enabled.
G120	selection			2	The regeneration avoidance function is enabled only during constant-speed operation.
		200 V class	400 VDC		Set the bus voltage level to operate the regeneration avoidance operation. When the bus voltage level is set low, it will be harder
883 G121	Regeneration avoidance operation level	400 V class	780 VDC	300 to 1200 V	to generate overvoltage error, but actual deceleration time will be longer.
	levei	575 V class	944 VDC		Set the setting value higher than the (power supply voltage × $\sqrt{2}$) value.
885	Regeneration avoidance	6 Hz		0 to 45 Hz	Set the limit value for frequency to rise when the regeneration avoidance function is activated.
G123	compensation frequency limit value			9999	The frequency limit is disabled.
886 G124	Regeneration avoidance voltage gain	100%		0% to 200%	Adjust the response during the regeneration avoidance operation. Increasing the setting improves the response to
665 G125	Regeneration avoidance frequency gain	100%		0% to 200%	change in the bus voltage. However, the output frequency may become unstable. If setting a smaller value in Pr.886 does not suppress the vibration, set a smaller value in Pr.665 .

◆ Regeneration avoidance operation (Pr.882, Pr.883)

- When the regenerative voltage increases, the DC bus voltage will rise, which may cause an overvoltage fault (E.OV[]). The regenerative status can be avoided by detecting this rise of bus voltage, and raising the frequency when the bus voltage level exceeds **Pr.883 Regeneration avoidance operation level**.
- · The regeneration avoidance operation can be selected to operate constantly or operate only during constant speed.
- The regeneration avoidance function is enabled by setting "1 or 2" in **Pr.882 Regeneration avoidance operation** selection.

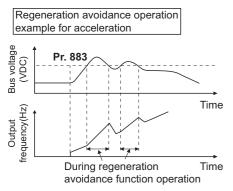

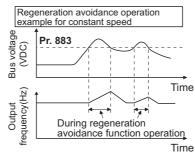

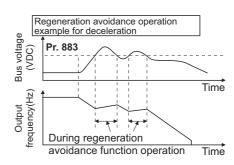




- The slope of frequency rising or lowering by the regeneration avoidance operation will change depending on the regenerative status
- The DC bus voltage of the inverter will be approximately $\sqrt{2}$ times of the normal input voltage. The bus voltage is approx. 311 VDC at an input voltage of 220 VAC (622 VDC at 440 VAC and 813 VDC at 575 VAC). However, it may vary depending on the input power supply waveform.
- Make sure that the setting value of Pr.883 will not get under DC bus voltage level. The frequency will rise with operation of the
 regeneration avoidance function even during operation other than the regenerative operation.
- The stall prevention (overvoltage) (OLV) will be activated only during deceleration, stopping the lowering of output frequency. On the other hand, the regeneration avoidance function will be activated constantly (**Pr.882** = "1") or only at constant speed (**Pr.882** = "2"), and raise the frequency depending on the amount of regeneration.
- When the motor becomes unstable due to the stall prevention (overcurrent) (OLC) during the regeneration avoidance operation, increase the deceleration time or set a lower value in **Pr.883**.

◆ Limiting the regeneration avoidance operation frequency (Pr.885)

- It is possible to assign a limit to the output frequency corrected (rise) by the regeneration avoidance operation.
- Limit of the frequency is output frequency (frequency before regeneration avoidance operation) + Pr.885 Regeneration
 avoidance compensation frequency limit value for during acceleration and constant speed. During deceleration, when
 the frequency increases due to the regeneration avoidance operation and exceeds the limit value, the limit value will be
 retained until the output frequency is reduced to be the half the Pr.885 setting.
- When the frequency that have increased by the regeneration avoidance operation exceeds **Pr.1 Maximum frequency**, it will be limited to the maximum frequency.
- When **Pr.885** = "9999", the regeneration avoidance compensation frequency limit is disabled.
- Set the frequency around the motor rated slip frequency. Increase the setting value if the overvoltage protection function (E.OV[]) is activated at the start of deceleration.

  $\text{Rated motor slip frequency} = \frac{ \text{Synchronized speed at the time of base frequency} - \text{rated rotation speed} }{ \text{Synchronized speed at the time of base frequency} } \times \text{Rated motor frequency}$



♦ Adjusting the regeneration avoidance operation (Pr.665, Pr.886)

- If the frequency becomes unstable during regeneration avoidance operation, decrease the setting of Pr.886 Regeneration
 avoidance voltage gain. On the other hand, if an overvoltage fault occurs due to a sudden regeneration, increase the
 setting.
- If setting a smaller value in **Pr.886** does not suppress the vibration, set a smaller value in **Pr.665** Regeneration avoidance frequency gain.



- During the regeneration avoidance operation, the stall prevention (overvoltage) "OLV" is displayed and the Overload warning (OL) signal is output. Set the operation pattern at an OL signal output using Pr.156 Stall prevention operation selection. Use Pr.157 OL signal output timer to set the OL signal output timing.
- The stall prevention is enabled even during regeneration avoidance operation.
- · The regeneration avoidance function cannot decrease the actual deceleration time for the motor to stop. Since the actual deceleration time is determined by the regenerative power consumption performance, consider using a regeneration unit (FR-BU2, BU, FR-BU, FR-XC, FR-CV, FR-HC2) or brake resistor (FR-ABR, etc.) to decrease the deceleration time.
- When using a regeneration unit (FR-BU2, BU, FR-BU, FR-SC, FR-CV, FR-HC2) or brake resistor (FR-ABR, etc.) to consume the regenerative power at constant speed, set Pr.882 = "0 (initial value)" (the regeneration avoidance function is disabled). When consuming the regenerative power at the time of deceleration with the regeneration unit, etc., set Pr.882 = "2" (enables regeneration avoidance function only at the constant speed).
- · When using the regeneration avoidance function under Vector control, noise may be generated from the motor during deceleration. In such case, adjust the gain. (Refer to page 121.)

Parameters referred to

Pr.1 Maximum frequency page 253
Pr.8 Deceleration time page 253

Pr.22 Stall prevention operation level page 256

16.10 Slip compensation

V/F

Under V/F control, the slip of the motor is estimated from the inverter output current to maintain the rotation of the motor constant.

Pr.	Name	Initial value	Setting range	Description
245 G203	Rated slip	9999	0.01% to 50%	Set the rated motor slip.
G203			0, 9999	No slip compensation
246 G204	Slip compensation time constant	0.5 s	0.01 to 10 s	Set the response time of the slip compensation. Reducing the value improves the response, but the regenerative overvoltage (E.OV[]) error is more likely to occur with a larger load inertia.
247 Constant output range slip G205 compensation selection		9999	0	No slip compensation in the constant power range (frequency range higher than the frequency set in Pr.3).
G205	compensation selection	1	9999	Slip compensation is performed in the constant power range.

Calculate the rated motor slip and set the value in Pr.245 to enable slip compensation.
 Slip compensation is not performed when Pr.245 = "0 or 9999".

Rated slip = Synchronized speed at the time of base frequency - rated rotation speed
Synchronized speed at the time of base frequency × 100 [%]



- When the slip compensation is performed, the output frequency may become larger than the set frequency. Set **Pr.1 Maximum frequency** higher than the set frequency.
- Slip compensation will be disabled in the following conditions:
 Stall prevention (OLC, OLV) operation, regeneration avoidance operation, auto tuning, stop-on-contact control, acceleration/deceleration, encoder feedback control operation

Pr.1 Maximum frequency page 253 Pr.3 Base frequency page 428

16.11 Encoder feedback control

Magnetic flux

This controls the inverter output frequency so that the motor speed is constant to the load variation by detecting the motor speed with the speed detector (encoder) to feed back to the inverter.

A Vector control compatible option is required.

Pr.	Name	Initial value	Setting range	Description
285 A107	Overspeed detection frequency*1	9999	0 to 30 Hz	E.MB1 (Brake sequence fault) occurs when the difference between the detection frequency and output frequency exceeds the setting value under encoder feedback control.
			9999	Overspeed detection is disabled.
359 ^{*2}	Encoder rotation direction 101	101	100	Set when using a motor (encoder) for which forward rotation is clockwise (CW) viewed from the shaft.
C141			101	Set when using a motor for which forward rotation (encoder) is counterclockwise (CCW) viewed from the shaft.
367 ^{*2}	Speed feedback range	9999	0 to 590 Hz	Set the range of speed feedback control.
G240	Speed leedback failige	שששש	9999	The encoder feedback control is disabled.
368 ^{*2} G241	Feedback gain	1	0 to 100	Set when the rotation is unstable or response is slow.
369 ^{*2} C140	Number of encoder pulses	1024	2 to 4096	Set the number of encoder pulses. Set the number of pulses before it is multiplied by 4.
376 ^{*2}	Encoder signal loss detection	0	0	Signal loss detection is disabled.
C148	enable/disable selection	1	1	Signal loss detection is enabled.

- *1 The speed deviation excess detection frequency is used under Vector control or PM sensorless vector control. (Refer to page 130 for details.)
- *2 The setting is available when a Vector control compatible option is installed.

◆ Setting before operation (Pr.359, Pr.369)

 
• Use **Pr.359 Encoder rotation direction** and **Pr.369 Number of encoder pulses** to set the rotation direction and the number of pulses for the encoder.



- Control with correct speed is not possible if the number of poles for the applied motor is incorrect. Check first before operation.
- Encoder feedback control is not possible when the rotation direction setting of the encoder is incorrect. (Operation of the inverter is possible.)
 - Check the indicator on the parameter unit to confirm the direction.

Selection of encoder feedback control (Pr.367)

• When a value other than "9999" is set in **Pr.367 Speed feedback range**, encoder feedback control is enabled. Set a target value (frequency at which stable speed operation is performed) and specify the range around the value. Normally, use the frequency converted from the slip amount (r/min) at the rated motor speed (rated load). If the setting is too large, response becomes slow.



• Example: when the rated speed of a motor (4 poles) is 1740 r/min at 60 Hz

```
Slip Nsp = Synchronous speed - Rated speed
= 1800 - 1740
= 60 (r/min)
Frequency equivalent to slip (fsp) = Nsp × Number of poles/120
= 60 × 4/120
= 2 (Hz)
```

◆ Feedback gain (Pr.368)

- · Set Pr.368 Feedback gain when the rotation is unstable or response is slow.
- Response of the feedback will become slow when the acceleration/deceleration time is long. In such case, increase the setting value of Pr.368.

Pr.368 setting	Description
Pr.368 > 1	Response will become faster but it may cause overcurrent or unstable operation.
1 > Pr.368	Response will become slower but the operation will become more stable.

◆ Overspeed detection (Pr.285)

- To prevent malfunction when the correct pulse signal cannot be detected from the encoder, when
 [detection frequency] [output frequency] > Pr.285
 during encoder feedback control, a protective function (E.MB1) will be activated to shut off the inverter output.
- Overspeed detection is not performed when Pr.285 = "9999".



- · Couple the encoder on the same axis as the motor axis without any mechanical clatter, with speed ratio of 1:1.
- Encoder feedback control is not performed during the acceleration and deceleration to prevent unstable operation such as hunting.
- Encoder feedback control is performed after the output frequency has reached [set frequency] ± [speed feedback range] once.
- When the following status occurs during encoder feedback control operation, the inverter output is not shut off, the output frequency becomes the value obtained by [set frequency] ± [speed feedback range], and tracking of the motor speed is not performed.

When **Pr.376** = "0" and the pulse signal from the encoder is lost due to a break or other reasons When correct pulse signal cannot be detected due to induction noise or other reasons

When the motor is forcefully accelerated (regenerative rotation) or decelerated (motor lock) due to large external force

- Use the Inverter running (RUN) signal when releasing the brake from the motor with a brake. (The brake may not be released when the Output frequency detection (FU) signal is used.)
- Do not turn OFF the external power supply for the encoder during encoder feedback control. Normal encoder feedback control
 will not be possible.

Parameters referred to

Pr.81 Number of motor poles page 97, page 345

16.12 Droop control


Magnetic flux Sensorless Vector PM

This is a function to give droop characteristics to the speed by balancing the load in proportion with the load torque during the Advanced magnetic flux vector control, Real sensorless vector control, Vector control, and PM sensorless vector control. This is effective in balancing the load when multiple inverters are connected.

Pr.	Name	Initial value	Setting range	Description
			0	Normal operation
286 G400	Droop gain	0%	0.1% to 100%	Droop control enabled. Set the droop amount at the time of rated torque as % value of the rated motor frequency.
287 G401	Droop filter time constant	0.3 s	0 to 1 s	Set the time constant of the filter relative to the torque current.

Droop control

- Droop control is enabled under Advanced magnetic flux vector control, Real sensorless vector control, Vector control, and PM sensorless vector control.
- In the droop control, the speed command changes depending on the amount of the current for torque.

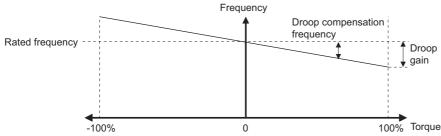

The droop compensation frequency is calculated as follows.

Droop compensation frequency =
$$\frac{\text{Current for torque after filtering}}{\text{Rated torque current}} \times \text{K} \times \frac{\text{Pr.84 Rated motor frequency} \times \text{Pr.286 Droop gain}}{100}$$

When the output frequency is equal to or lower than the rated frequency set in Pr.84: K = 1Rated frequency (Pr.84) When the output frequency is higher than the rated frequency set in **Pr.84**: K =

The droop compensation frequency is limited as follows.

Control	Upper limit	Lower limit
Advanced magnetic flux vector control		0.5 Hz
Real sensorless vector control	400 Hz or Pr.1 Maximum frequency , whichever is smaller	0 Hz
Vector control		0 Hz
(PM sensorless vector control)	Maximum motor frequency or Pr.1 Maximum frequency , whichever is smaller	10% of rated motor frequency

NOTE

Set the droop gain equivalent to the rated slip of the motor.

Rated slip =
$$\frac{\text{Synchronized speed at the time of base frequency - rated rotation speed}}{\text{Synchronized speed at the time of base frequency}} \times 100[\%]$$

· Droop control is disabled in the following conditions: During DC injection brake operation, during PID control, during stall prevention operation, during traverse operation

Pr.1 Maximum frequency page 253
Pr.178 to Pr.189 Input terminal function selection page 328


16.13 Speed smoothing control

Magnetic flux

The output current (torque) of the inverter sometimes becomes unstable due to vibration caused by mechanical resonance. Such vibration can be suppressed by reducing fluctuation of the output current (torque) by changing the output frequency.


Pr.	Name	Initial value	Setting range	Description
653 G410	Speed smoothing control	0%	0% to 200%	Check the effect by increasing and decreasing the value at around 100%.
654 G411	Speed smoothing cutoff frequency	20 Hz	0 to 120 Hz	Set the minimum frequency for the torque variation cycle.

◆ Control block diagram

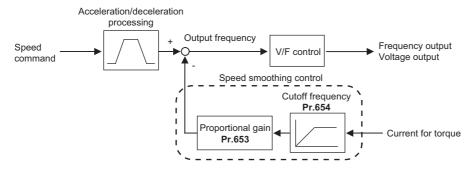

♦ Setting method

 - When vibration caused by mechanical resonance occurs, set 100% in **Pr.653 Speed smoothing control**, perform operation at the frequency with the largest vibration, and check if the vibration is suppressed after few seconds.
- If the setting is not effective, gradually increase the value set in **Pr.653** and repeat the operation to check the effect to determine the most effective value (**Pr.653**).
- If the vibration increases by increasing the value in Pr.653, decrease the value in Pr.653 from 100% to check the effect.
- When the vibrational frequency at which mechanical resonance occurs (during fluctuation of torque, speed, or converter
 output voltage) is measured using an instrument such as a tester, set 1/2 to 1 times of the vibrational frequency in Pr.654
 Speed smoothing cutoff frequency. (Setting the resonance frequency range mitigates vibration more effectively.)





· Depending on the equipment, the vibration may not be suppressed sufficiently or the setting is not effective.

MEMO

CHAPTER 17 Checking and Clearing of Settings

17.1	Parameter clear / All parameter clear	456
17.2	List of parameters changed from the initial values	457
17.3	Fault history clear	458

17 Checking and Clearing of Settings

17.1 Parameter clear / All parameter clear

Point P

- Set "1" to Pr.CL Parameter clear or ALLC All parameter clear to initialize the parameter. (The parameter cannot be cleared when Pr.77 Parameter write selection = "1".)
- Pr.CL does not clear calibration parameters or the terminal function selection parameters.
- Refer to the parameter list on page 52 for parameters cleared with this operation.

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- **2.** Changing the operation mode

 Press the PU/EXT key to choose the PU operation mode. The PU LED turns ON.
- 3. Selecting the parameter setting mode

 Press the MODE key to choose the parameter setting mode. (The parameter number read previously appears.)
- **4.** Selecting the parameter

 Turn the setting dial or press the UP/DOWN key until "Pr.CL" appears for Parameter clear or "ALLC" for All parameter clear, and press the SET key. "0" (initial value) appears.
- **5.** Parameter clear

Turn the setting dial or press the UP/DOWN key to change the value to "1". Press the SET key to confirm the setting. "1" and "Pr.CL" ("ALLC") are displayed alternately after parameters are cleared.

- Turn the setting dial or press the UP/DOWN key to read another parameter.
- · Press the SET key to show the setting again.
- · Press the SET key twice to show the next parameter.

Setting	Description									
	Pr.CL Parameter clear	ALLC All parameter clear								
0	Initial display (Parameters are not cleared.)									
1	The settings of parameters except for calibration parameters and terminal function selection parameters are initialized.	The settings of all the parameters, including calibration parameters and terminal function selection parameters, are initialized.								

NOTE

- "1" and "Er4" are displayed alternately when the operation mode is other than the PU operation mode.
 - 1) Press the PU/EXT key.

 The PU LED turns ON, and "1" appears on the monitor. (When **Pr.79** ="0" (initial value))
 - 2) Press the SET key to clear the parameter.
- · Stop the inverter first. Writing error occurs if parameter clear is attempted while the inverter is running.
- To clear the parameter, the inverter must be in the PU operation mode even if "2" is set to Pr.77.
- For availability of the Parameter clear or All parameter clear operation for each parameter, refer to the parameter list on page 465.

17.2 List of parameters changed from the initial values

Parameters changed from their initial values can be displayed.

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- 2. Selecting the parameter setting mode

 Press the MODE key to choose the parameter setting mode. (The parameter number read previously appears.)
- **3.** Selecting the parameter

 Turn the setting dial or press the UP/DOWN key until "Pr.CH" (Initial value change list) appears, and set the SET key.

 "P.---" blinks and then remains displayed.
- 4. Checking the Initial value change list

 Turn the setting dial or press the UP/DOWN key after blinking stops to display the parameter numbers that have been changed from their initial values in order.
 - When the SET key is pressed with a changed parameter displayed, the parameter settings can be changed as they are. (Parameter numbers are no longer displayed in the list when they are returned to their initial values.) Turn the setting dial or press the UP/DOWN key to display another changed parameter.
 - The indication returns to "P.---" when the last changed parameter is displayed.

• NOTE

- Calibration parameters (C0 (Pr.900) to C7 (Pr.905), C38 (Pr.932) to C45 (Pr.935)) are not displayed even when these are changed from the initial settings.
- Only the simple mode parameters are displayed when the simple mode is set (Pr.160 = "9999").
- Only user groups are displayed when user groups are set (Pr.160 = "1").
- Pr.160 is displayed independently of whether the setting value is changed or not.

17.3 Fault history clear

♦ Fault history clearing procedure

Point P

Set Er.CL Fault history clear = "1" to clear the fault history.

Operating procedure

- **1.** Turning ON the power of the inverter The operation panel is in the monitor mode.
- **2.** Selecting the parameter setting mode

 Press the MODE key to choose the parameter setting mode. (The parameter number read previously appears.)
- **3.** Selecting the parameter

 Turn the setting dial or press the UP/DOWN key until "ER.CL" (Fault history clear) appears. Press the SET key to read the present set value. "0" (initial value) appears.
- **4.** Fault history clear

 Turn the setting dial or press the UP/DOWN key to change the value to "1". Press the SET key to start clearing.

 "1" and "ER.CL" are displayed alternately after the fault history is cleared.
 - Turn the setting dial or press the UP/DOWN key to read another parameter.
 - · Press the SET key to show the setting again.
 - Press the SET key twice to show the next parameter.

CHAPTER 18 Appendix

18.1	For customers replacing the conventional model with this inverter	460
18.2	Specification change	463
18.3	Specification comparison between PM sensorless vector control and induction motor control	464
18.4	Parameters (functions) and instruction codes under different control methods	465

18 Appendix

APPENDIX provides the reference information for use of this product. Refer to APPENDIX as required.

18.1 For customers replacing the conventional model with this inverter

18.1.1 Replacement of the FR-E700 series

♦ Differences and compatibility with the FR-E700 series

Applicable rating Overload current rating Built-in brake transistor V/F control Advanced magnetic flux		FR-E800	FR-E700							
		Two ratings (LD/ND)	Not available (ND only)							
Overload ND rating		150% 60 s, 200% 3 s at surrounding air temperature	e of 50°C							
3 1 3 1 1 3 1 3 1 3 1 3 1 3 1 3 1 3 1 3		120% 60 s, 150% 3 s at surrounding air temperature of 50°C	Not available							
Built-in brake transistor		Provided in FR-E820-0030(0.4K) to 0330(7.5K), FR-E840-0016(0.4K) to 0170(7.5K), FR-E860-0017(0.75K) to 0120(7.5K), FR-E820S-0030(0.4K) to 0110(2.2K)	Provided in FR-E720-030(0.4K) to 330(7.5K), FR-E740-016(0.4K) to 170(7.5K), FR-E720S-030(0.4K) to 110(2.2K)							
_		Soft-PWM control / High carrier frequency PWM cor	ntrol							
V/F control		Available								
		Available								
Control method	General-purpose magnetic flux vector control	Not available	Available							
Real sensorless vector control Vector control		Available	Not available							
		Available	Not available							
	PM sensorless vector control	Available	Not available							
Control mode	Speed control	Available								
Control mode	Torque control	Available	Not available							
Output f	requency	0.2 to 590 Hz (under V/F control) 0.2 to 400 Hz (under other than V/F control)	0.2 to 400 Hz							
Frequency	Terminal 2	0.015 Hz / 0 to 60 Hz (0 to 10 V / 12 bits) 0.03 Hz / 0 to 60 Hz (0 to 5 V / 11 bits) 0.03 Hz / 0 to 60 Hz (0 to 20 mA / 11 bits)	0.06 Hz / 0 to 60 Hz (0 to 10 V / 10 bits) 0.12 Hz / 0 to 60 Hz (0 to 5 V / 9 bits)							
resolution	Terminal 4	0.015 Hz / 0 to 60 Hz (0 to 10 V / 12 bits) 0.03 Hz / 0 to 60 Hz (0 to 5 V / 11 bits) 0.03 Hz / 0 to 60 Hz (0 to 20 mA / 11 bits)	0.06 Hz / 60 Hz (0 to 10 V / 10 bits) 0.12 Hz / 60 Hz (0 to 5 V / 9 bits) 0.06 Hz / 60 Hz (0 to 20 mA / 10 bits)							
resolution Terminal 4 Via terminal FI (pulse output)		1440 pulses/s at full scale (FM type only)	1440 pulses/s at full scale (FR-E700)							
Catput Signal	Via terminal AM (analog output)	-10 to +10 V / 12 bits (AM type only)	0 to +10 V (FR-E700-NA/EC/CHT)							
	Standard equipment	Operation panel installed as standard (not removable 7-segment LED 4-digit display.	e).							
Operation panel	Option	Enclosure surface operation panel (FR-PA07) LCD operation panel (FR-LU08) Parameter unit (FR-PU07(BB))	Enclosure surface operation panel (FR-PA07) Parameter unit (FR-PU07(BB))							
Main circu	it terminals	R, S, T, U, V, W, P, PR, N, P1, earth (ground) (screen	w terminal)							

Ite	em	FR-E800	FR-E700					
	Shape of		Standard control circuit terminal model: screw					
	terminal block	Spring clamp type	type Safety stop function model: Spring clamp type					
Control circuit terminal Contact input Control circuit terminal Analog input Relay output Open collector output Pulse output Analog output Analog output I (FM typen output) Safety input/output CC-Link EtherNet BACnet/ BACnet/ RS-485 USB Mini B cc (Maximu) Control circuit terminal block Standard Ethernet Communication RS-485 USB Surrounding air temperature Standard Copen collector output I (FM typen output) CC-Link EtherNet BACnet/ Mitsubist USB Mini B cc (Maximu) Coo'C or I of 575 V clar Current we soo'C or I of 575 V clar C		Standard model: 7 Ethernet model: 2 Safety communication model: 0	Standard control circuit terminal model: 7 Safety stop function model: 6					
Control circuit	Analog input	2	2					
terminal	Relay output	•	1					
		Standard model: 2 Ethernet model and safety communication model: 0	2					
	Pulse output	1 (FM type only)	1 (FR-E700)					
		1 (AM type only)	1 (FR-E700-NA/EC/CHT)					
		S1, S2, PC, SO, SOC	S1, S2, PC (safety stop function model only)					
Communication RS-485		CC-Link IE TSN, CC-Link IE Field Network Basic, EtherNet/IP, PROFINET, MODBUS/TCP, and BACnet/IP	1 port (FR-E700-NE only) CC-Link IE Field Network Basic and MODBUS/ TCP					
	RS-485	1 port (standard model) Mitsubishi inverter protocol, MODBUS RTU	1 port Mitsubishi inverter protocol, MODBUS RTU					
	USB	Mini B connector: USB bus power available (Maximum SCCR: 500 mA)	Mini B connector: USB bus power unavailable					
Surrounding a	air temperature	200/400 V class: -20°C to +60°C (Derate the rated current when using the inverter in a temperature of 50°C or higher.) 575 V class: -10°C to +60°C (Derate the rated current when using the inverter in a temperature of 50°C or higher.)	-10°C to +50°C					
Storage te	emperature	-40°C to +70°C	-20°C to +65°C					
Plug-ir	option	Dedicated plug-in options (not interchangeable)						
Installa	tion size	Compatible (Use the installation interchange attachr and FR-E740-016(0.4K) to 040(1.5K).)	ment for replacement of the FR-E720-175(3.7K)					
Panel throug	h attachment	Not compatible						
Machine sp	eed display	The rotation speed is displayed when Pr.53 = "1". The machine speed is displayed when Pr.53 = "4". Use Pr.37 and Pr.505 to set the reference for machine speed.	The machine speed is displayed when Pr.37 ≠ "0".					
The state of the s	meter switching	Pr.146 unavailable (PA02 not supported)	Pr.146 available					
Control mo	de selection	V/F control when "40" is set in Pr.800 .	V/F control when "9999" is set in Pr.80 or Pr.81 .					
MRS inpu	t selection	Use Pr.17 to change the input specifications of the MRS and X10 signals.	Use Pr.17 to change the input specification of the MRS signal.					
Offline au	uto tuning	Set Pr.96 = "11" to enable offline auto tuning for V/F control (frequency search for the automatic restart after instantaneous power failure).	Set Pr.96 = "21" to enable offline auto tuning for V/F control (frequency search for the automatic restart after instantaneous power failure).					
Applicat	ole motor	Offline auto tuning is enabled regardless of the Pr.71 setting. Set Pr.71 to a value whose last digit is 3 to change the setting range of the motor constant. Set "10" for the constant-torque motor.	Set Pr.71 to a value whose last digit is 3 to enable offline auto tuning. Set Pr.71 to a value whose last digit is 4 to read offline auto tuning data and change the setting. Set "1" for the constant-torque motor.					
	e of acceleration/ ation time	The setting range cannot be changed from "0 to 3600 s" even when the increment is 0.01 s (Pr.21 = "1").	The setting range can be changed to "0 to 360 s" when the increment is 0.01 s (Pr.21 = "1").					

♦ Installation precautions

- Removal procedure of the front cover is different. (Refer to the Instruction Manual (Connection).)
- Plug-in options of the FR-E700 series are not compatible.

♦ Wiring instructions

- · When the FR-E700 standard control circuit terminal model is replaced, the terminal block type is changed from the screw type to the spring clamp type. Use of blade terminals is recommended.
- To use the PU connector, note that wiring methods are different. (Refer to the Instruction Manual (Connection).)

Replacement of the FR-E500 series 18.1.2

♦ Installation precautions

- Installation size is compatible. (Use the installation interchange attachment for replacement of the FR-E520-3.7K and E540-0.4K to 1.5K.)
- Operation panel (PA02) cannot be used.

18.2 **Specification change**

Check the SERIAL number indicated on the inverter rating plate or packaging. For how to read the SERIAL number, refer to page 12.

18.2.1 Details of changes

◆ Number of connectable units on the CC-Link IE Field Network Basic

Number of connectable units	SERIAL (serial number)
Master: 1 Slave: up to 16 stations (16 stations × 1 group)	□□ 204 ○○○○○ or earlier
Master: 1 Slave: up to 16 stations (16 stations × 4 groups)	□□ 205 ○○○○○ or later

♦ Functions available for the inverters manufactured in May 2020 or later

Item	Change
Mitsubishi Electric geared motor	GM-[]
Plug-in option	FR-A8ND E kit, FR-A8NP E-kit
Stand-alone option	Parameter unit (FR-PU07), LCD operation panel (FR-LU08)
Added parameters	Pr.1499, P.E107 (Pr.75)
Changed parameter setting range	 Setting value "13" added for Pr.52, Pr.54, Pr.158, Pr.774 to Pr.776, Pr.992, and Pr.1027 to Pr.1034 Setting values "1800 and 1803" added for Pr.71 and Pr.450 (for 200/400 V class only) Setting values "10000 to 10003 and 10014 to 10017" added for Pr.75 (for the safety communication model only)

♦ Functions available for the inverters manufactured in August 2020 or later

Item	Change
Mitsubishi Electric Vector control dedicated motor (SF-V5RU (1500 r/min series))	The SF-V5RU 1.5 to 5.5 kW motors can be driven by the FR-E820-0110(2.2K) to 0330(7.5K) inverters. The SF-V5RUH 1.5 to 5.5 kW motors can be driven by the FR-E840-0060(2.2K) to 0170(7.5K) inverters.
Mitsubishi Electric high-performance energy-saving motor with encoder	SF-PR-SC
Mitsubishi Electric inverter-driven geared motor for encoder feedback control	GM-DZ, GM-DP
Plug-in option	FR-A8AP E kit
Added parameters	Pr.284, Pr.359, Pr.367, Pr.368, Pr.369, Pr.376, Pr.422, Pr.552, Pr.600 to Pr.604, Pr.607, Pr.608, Pr.690, Pr.692 to Pr.696, Pr.802, Pr.823, Pr.828, Pr.833, Pr.840 to Pr.848, Pr.854, Pr.873, Pr.877 to Pr.881, P.A107 (Pr.285)
Changed parameter setting range	 Setting value "8888" added for Pr.11 Setting values "19 and 35" added for Pr.52, Pr.774 to Pr.776, Pr.992, and Pr.1027 to Pr.1034 Setting values "30 and 33" added for Pr.71 and Pr.450 Setting values "13, 23, 42, 43, and 74" added for Pr.178 to Pr.189 Setting values "30 to 33 and 130 to 133" added for Pr.190 to Pr.196, and Pr.313 to Pr.319 Setting values "30 to 33" added for Pr.320 to Pr.322 Setting values "0 to 2 and 9" added for Pr.800 Setting value "2" added for Pr.850 Setting value "6" added for Pr.858
Added faults	Signal loss detection (E.ECT) Brake sequence fault (E.MB1 to E.MB3)

18.3 Specification comparison between PM sensorless vector control and induction motor control

Item	PM sensorless vector control	Induction motor control
Applicable motor	IPM motor or SPM motor*1	Induction motor ^{*1}
Starting torque	50%	200% (FR-E820-0175(3.7K) or lower, FR-E840- 0095(3.7K) or lower, FR-E860-0061(3.7K) or lower, FR- E820S-0110(2.2K) or lower) and 150% (FR-E820-0240(5.5K) or higher, FR-E840- 0120(5.5K) or higher, FR-E860-0090(5.5K) or higher) under Real sensorless vector control or Vector control* ²
Startup delay	Startup delay of about 0.1 s for magnetic pole position detection.	No startup delay (when online auto tuning is not performed at startup).
Driving by the commercial power supply	Cannot be driven by the commercial power supply.	Can be driven by the commercial power supply. (Other than vector control dedicated motor.)
Operation during coasting	While the motor is coasting, potential is generated across motor terminals.	While the motor is coasting, potential is not generated across motor terminals.
Torque control	Not available	Real sensorless vector control or Vector control*2

- *1 For the motor capacity, the rated motor current should be equal to or less than the rated inverter current. (Note that the motor rated current should be 0.4 kW or higher (0.1 kW or higher for the 200 V class).)

 If a motor with substantially low rated current compared with the inverter rated current is used, speed and torque accuracies may deteriorate due
- *2 Available when a Vector control compatible option is installed.



• Before wiring, make sure that the motor is stopped. Otherwise you may get an electric shock.

to torque ripples, etc. Set the rated motor current to about 40% or higher of the inverter rated current.

- · Never connect a PM motor to a commercial power supply.
- No slippage occurs with a PM motor because of its characteristic. If an IPM motor, which took over an induction motor, is driven
 at the same speed as for the general-purpose motor, the running speed of the IPM motor becomes faster by the amount of
 the general-purpose motor's slippage. Adjust the speed command to run the IPM motor at the same speed as the induction
 motor, as required.

18.4 Parameters (functions) and instruction codes under different control methods

- *1 Instruction codes are used to read and write parameters in accordance with communication (such as the Mitsubishi inverter protocol). (For details of communication, refer to the Instruction Manual (Communication).)
- *2 Function availability under each control method is shown as follows:
 - o: Available
 - ×: Not available
 - Δ: Available with some restrictions
- *3 For Parameter copy, Parameter clear, and All parameter clear, o indicates the function is available, and × indicates the function is not available.
- *4 Communication parameters that are not cleared by parameter clear or all parameter clear (H5A5A or H55AA) via communication. (For details of communication, refer to the Instruction Manual (Communication).)
- *5 When a communication option is installed, parameter clear (lock release) during password lock (Pr.297 Password lock/unlock ≠ "9999") can be performed only from the communication option.

Notation

Mark	Description	Mark	Description
E800	Available for the standard model.	400V	Available for the 400 V class inverters.
E800-1	Available for the FM type inverter (standard model).	3-phase	Available for the three-phase power input model.
E800-4	Available for the AM (50 Hz) type inverter (standard model).	AP	Available when the FR-A8AP is installed.
E800-5	Available for the AM (60 Hz) type inverter (standard model).	AX	Available when the FR-A8AX is installed.
E800-E	Available for the Ethernet model and the safety communication model.	AY	Available when the FR-A8AY is installed.
FOOD EDA	Available for the Protocol group A (Ethernet model / safety	AR	Available when the FR-A8AR is installed.
E800-EPA	communication model).	NC	Available when the FR-A8NC is installed.
E800-SCE	Available for the safety communication model.	ND	Available when the FR-A8ND is installed.
200V	Available for the 200 V class inverters.	NP	Available when the FR-A8NP is installed.

			struct code [*]		Control method ^{*2}								Parameter		
				70			Vector		Sensorless		PM			ဗ္	
Pr.	Name	Read	Write	Extended	H//	Magneticiflux	Speed	Torque	Speed	Torque	Speed	Copy*3	Clear*3	All clear*3	
0	Torque boost	00	80	0	0	×	×	×	×	×	×	0	0	0	
1	Maximum frequency	01	81	0	0	0	0	0	0	0	0	0	0	0	
2	Minimum frequency	02	82	0	0	0	0	0	0	0	0	0	0	0	
3	Base frequency	03	83	0	0	×	×	×	×	×	×	0	0	0	
4	Multi-speed setting (high speed)	04	84	0	0	0	0	0	0	0	0	0	0	0	
5	Multi-speed setting (middle speed)	05	85	0	0	0	0	0	0	0	0	0	0	0	
6	Multi-speed setting (low speed)	06	86	0	0	0	0	0	0	0	0	0	0	0	
7	Acceleration time	07	87	0	0	0	0	0	0	0	0	0	0	0	
8	Deceleration time	80	88	0	0	0	0	0	0	0	0	0	0	0	
9	Electronic thermal O/L relay	09	89	0	0	0	0	0	0	0	0	0	0	0	
10	DC injection brake operation frequency	0A	8A	0	0	0	0	0	0	0	0	0	0	0	
11	DC injection brake operation time	0B	8B	0	0	0	0	0	0	0	0	0	0	0	
12	DC injection brake operation voltage	0C	8C	0	0	0	×	×	×	×	×	0	0	0	
13	Starting frequency	0D	8D	0	0	0	0	0	0	0	0	0	0	0	
14	Load pattern selection	0E	8E	0	0	×	×	×	×	×	×	0	0	0	
15	Jog frequency	0F	8F	0	0	0	0	0	0	0	0	0	0	0	
16	Jog acceleration/deceleration time	10	90	0	0	0	0	0	0	0	0	0	0	0	
17	MRS/X10 terminal input selection	11	91	0	0	0	0	0	0	0	0	0	0	0	
18	High speed maximum frequency	12	92	0	0	0	0	0	0	0	0	0	0	0	
19	Base frequency voltage	13	93	0	0	×	×	×	×	×	×	0	0	0	
20	Acceleration/deceleration reference frequency	14	94	0	0	0	0	0	0	0	0	0	0	0	
21	Acceleration/deceleration time increments	15	95	0	0	0	0	0	0	0	0	0	0	0	

		Instruction code*1			Control method ^{*2}								Parameter			
							Vec	etor	Sens	orless	PM					
Pr.	Name	Read	Write	Extended	N//E	Magnetic:flux	Speed	Torque	Speed	Torque	Speed	Copy*3	Clear*3	All clear*3		
22	Stall prevention operation level (Torque limit level)	16	96	0	0	0	0	×	0	×	0	0	0	0		
23	Stall prevention operation level compensation factor at double speed	17	97	0	0	0	×	×	×	×	×	0	0	0		
24	Multi-speed setting (speed 4)	18	98	0	0	0	0	0	0	0	0	0	0	0		
25	Multi-speed setting (speed 5)	19	99	0	0	0	0	0	0	0	0	0	0	0		
26	Multi-speed setting (speed 6)	1A	9A	0	0	0	0	0	0	0	0	0	0	0		
27	Multi-speed setting (speed 7)	1B	9B	0	0	0	0	0	0	0	0	0	0	0		
29	Acceleration/deceleration pattern selection	1D	9D	0	0	0	0	0	0	0	0	0	0	0		
30	Regenerative function selection	1E	9E	0	0	0	0	0	0	0	0	0	0	0		
31	Frequency jump 1A	1F	9F	0	0	0	0	0	0	0	0	0	0	0		
32	Frequency jump 1B	20	A0	0	0	0	0	0	0	0	0	0	0	0		
33	Frequency jump 2A	21	A1	0	0	0	0	0	0	0	0	0	0	0		
34	Frequency jump 2B	22	A2	0	0	0	0	0	0	0	0	0	0	0		
35	Frequency jump 3A	23	A3	0	0	0	0	0	0	0	0	0	0	0		
36	Frequency jump 3B	24	A4	0	0	0	0	0	0	0	0	0	0	0		
37	Speed display	25	A5	0	0	0	0	0	0	0	0	0	0	0		
40	RUN key rotation direction selection	28	A8	0	0	0	0	0	0	0	0	0	0	0		
41	Up-to-frequency sensitivity	29	A9	0	0	0	0	×	0	×	0	0	0	0		
42	Output frequency detection	2A	AA	0	0	0	0	Δ	0	Δ	0	0	0	0		
43	Output frequency detection for reverse rotation	2B	AB	0	0	0	0	Δ	0	Δ	0	0	0	0		
44	Second acceleration/deceleration time	2C	AC	0	0	0	0	0	0	0	0	0	0	0		
45	Second deceleration time	2D	AD	0	0	0	0	0	0	0	0	0	0	0		
46	Second torque boost	2E	AE	0	0	×	×	×	×	×	×	0	0	0		
47 48	Second V/F (base frequency)	2F 30	AF B0	0	0	×	×	×	×	×	×	0	0	0		
51	Second stall prevention operation level Second electronic thermal O/L relay	33	B3	0	0	0	×	×	0	×		0	0	0		
52	Operation panel main monitor selection	34	B4	0	0	0	0	0	0	0	0	0	0	0		
53	Frequency / rotation speed unit	35	B5	0	0	0	0	0	0	0	0	0	0	0		
5 4	switchover	20	DC	0	_	_	_	_	_	_	_	_	_	_		
54	FM terminal function selection E800.1	36	B6	0	0	0	0	0	0	0	0	0	0	0		
55	Frequency monitoring reference AY	37	B7	0	0	0	0	0	0	0	0	0	0	0		
56	Current monitoring reference AY	38	B8	0	0	0	0	0	0	0	0	0	0	0		
57	Restart coasting time	39	B9	0	0	0	0	0	0	0	0	0	0	0		
58	Restart cushion time	3A	BA	0	0	0	×	×	×	×	×	0	0	0		
59	Remote function selection	3B	BB	0	0	0	0	0	0	0	0	0	0	0		
60	Energy saving control selection	3C	BC	0	0	0	×	×	×	×	×	0	0	0		
61 62	Reference current Reference value at acceleration	3D 3E	BD BE	0	0	0	0	×	0	×	×	0	0	0		
63	Reference value at acceleration Reference value at deceleration	3E 3F	BF	0	0	0	0	×	0	×	×	0	0	0		
65	Retry selection	эг 41	C1	0	0	0	0	0	0	0	0	0	0	0		
66	Stall prevention operation reduction	42	C2	0	0	0	×	×	×	×	×	0	0	0		
67	starting frequency Number of retries at fault occurrence	43	C3	0	0	0	0	0	0	0	0	0	0	0		
68	Retry waiting time	44	C4	0	0	0	0	0	0	0	0	0	0	0		
69	Retry count display erase	45	C5	0	0	0	0	0	0	0	0	0	0	0		
70	Special regenerative brake duty	46	C6	0	0	0	0	0	0	0	0	0	0	0		
71	Applied motor	47	C7	0	0	0	0	0	0	0	0	0	0	0		
72	PWM frequency selection	48	C8	0	0	0	0	0	0	0	0	0	0	0		
73	Analog input selection	49	C9	0	0	0	0	0	0	0	0	0	×	0		
74	Input filter time constant	4A	CA	0	0	0	0	0	0	0	0	0	0	0		
75	Reset selection/disconnected PU detection/PU stop selection	4B	СВ	0	0	0	0	0	0	0	0	0	×	×		

	Name		struct code [*]		Control method ^{*2}								Parameter		
				_			Vector		Sens	orless	PM				
Pr.		Read	Write	Extended	N/F	Magneticiflux	Speed	Torque	Speed	Torque	Speed	Copy*3	Clear*3	All clear*3	
77	Parameter write selection	4D	CD	0	0	0	0	0	0	0	0	0	0	0	
78	Reverse rotation prevention selection	4E	CE	0	0	0	0	0	0	0	0	0	0	0	
79	Operation mode selection	4F	CF	0	0	0	0	0	0	0	0	0	0	0	
80	Motor capacity	50	D0	0	×	0	0	0	0	0	0	0	0	0	
81	Number of motor poles	51	D1	0	0	0	0	0	0	0	0	0	0	0	
82 83	Motor excitation current Rated motor voltage	52 53	D2 D3	0	o x	0	0	0	0	0	×	0	×	0	
84	Rated motor frequency	53 54	D3	0	×	0	0	0	0	0	0	0	0	0	
89	Speed control gain (Advanced magnetic flux vector)	59	D9	0	×	0	×	×	×	×	×	0	×	0	
90	Motor constant (R1)	5A	DA	0	×	0	0	0	0	0	0	0	×	0	
91	Motor constant (R2)	5B	DB	0	×	0	0	0	0	0	×	0	×	0	
92	Motor constant (L1)/d-axis inductance (Ld)	5C	DC	0	×	0	0	0	0	0	0	0	×	0	
93	Motor constant (L2)/q-axis inductance (Lq)	5D	DD	0	×	0	0	0	0	0	0	0	×	0	
94	Motor constant (X)	5E	DE	0	×	0	0	0	0	0	×	0	×	0	
95	Online auto tuning selection	5F	DF	0	×	0	0	0	0	0	×	0	0	0	
96	Auto tuning setting/status	60	E0	0	×	0	0	0	0	0	0	0	×	0	
117	PU communication station number	11	91	1	0	0	0	0	0	0	0	0	o*4	o*4	
118	PU communication speed	12	92	1	0	0	0	0	0	0	0	0	o*4	o*4	
119	PU communication stop bit length / data length	13	93	1	0	0	0	0	0	0	0	0	o*4	o*4	
120	PU communication parity check	14	94	1	0	0	0	0	0	0	0	0	o*4	o*4	
121	PU communication retry count	15	95	1	0	0	0	0	0	0	0	0	o*4	o*4	
122	PU communication check time interval	16	96	1	0	0	0	0	0	0	0	0	o*4	o*4	
123	PU communication waiting time setting	17	97	1	0	0	0	0	0	0	0	0	o*4	o*4	
124	PU communication CR/LF selection	18	98	1	0	0	0	0	0	0	0	0	o*4	o*4	
125	Terminal 2 frequency setting gain frequency	19	99	1	0	0	0	0	0	0	0	0	×	0	
126	Terminal 4 frequency setting gain frequency	1A	9A	1	0	0	0	0	0	0	0	0	×	0	
127	PID control automatic switchover frequency	1B	9B	1	0	0	0	×	0	×	0	0	0	0	
128	PID action selection	1C	9C	1	0	0	0	×	0	×	0	0	0	0	
129	PID proportional band	1D	9D	1	0	0	0	×	0	×	0	0	0	0	
130	PID integral time	1E	9E	1	0	0	0	×	0	×	0	0	0	0	
131	PID upper limit	1F	9F	1	0	0	0	×	0	×	0	0	0	0	
132	PID lower limit	20	A0	1	0	0	0	×	0	×	0	0	0	0	
133	PID action set point	21	A1	1	0	0	0	×	0	×	0	0	0	0	
134	PID differential time	22	A2	1	0	0	0	×	0	×	0	0	0	0	
145 147	PU display language selection Acceleration/deceleration time switching frequency	2D 2F	AD AF	1	0	0	0	0	0	0	0	0	×	× 0	
150	Output current detection level	32	B2	1	0	0	0	0	0	0	0	0	0	0	
151	Output current detection signal delay time	33	B3	1	0	0	0	0	0	0	0	0	0	0	
152	Zero current detection level	34	B4	1	0	0	0	0	0	0	0	0	0	0	
153	Zero current detection time	35	B5	1	0	0	0	0	0	0	0	0	0	0	
154	Voltage reduction selection during stall prevention operation	36	B6	1	0	0	×	×	×	×	×	0	0	0	
156	Stall prevention operation selection	38	B8	1	0	0	0	×	0	×	0	0	0	0	
157	OL signal output timer	39	В9	1	0	0	0	0	0	0	0	0	0	0	

			struct				Co	ntrol n	nethod	l*2		P	aramet	er
							Vec	etor	Sens	orless	PM			
Pr.	Name	Read	Write	Extended	N//F	Magnetic:flux	Speed	Torque	Speed	Torque	Speed	Copy*3	Clear*3	All clear*3
158	AM terminal function selection E800-4 E800-5	3A	BA	1	0	0	0	0	0	0	0	0	0	0
160	User group read selection	00	80	2	0	0	0	0	0	0	0	0	0	0
161	Frequency setting/key lock operation selection	01	81	2	0	0	0	0	0	0	0	0	×	0
162	Automatic restart after instantaneous power failure selection	02	82	2	0	0	0	0	0	0	0	0	0	0
165	Stall prevention operation level for restart	05	85	2	0	0	×	×	×	×	×	0	0	0
166	Output current detection signal retention time	06	86	2	0	0	0	0	0	0	0	0	0	0
167	Output current detection operation selection	07	87	2	0	0	0	0	0	0	0	0	0	0
168 169	Parameter for manufacturer setting. Do	not s	et.	1	<u> </u>	I	I	I		I	I	I		
170	Watt-hour meter clear	0A	8A	2	0	0	0	0	0	0	0	0	×	0
171	Operation hour meter clear	0B	8B	2	0	0	0	0	0	0	0	×	×	×
172	User group registered display/batch clear	0C	8C	2	0	0	0	0	0	0	0	0	×	×
173	User group registration	0D	8D	2	0	0	0	0	0	0	0	×	×	×
174	User group clear	0E	8E	2	0	0	0	0	0	0	0	×	×	×
178	STF/DI0 terminal function selection	12	92	2	0	0	0	0	0	0	0	0	×	0
179	STR/DI1 terminal function selection	13	93	2	0	0	0	0	0	0	0	0	×	0
180	RL terminal function selection	14	94	2	0	0	0	0	0	0	0	0	×	0
181	RM terminal function selection	15	95	2	0	0	0	0	0	0	0	0	×	0
182	RH terminal function selection	16	96	2	0	0	0	0	0	0	0	0	×	0
183	MRS terminal function selection	17	97	2	0	0	0	0	0	0	0	0	×	0
184	RES terminal function selection	18	98	2	0	0	0	0	0	0	0	0	×	0
185	NET X1 input selection	19	99	2	0	0	0	0	0	0	0	0	×	0
186	NET X2 input selection	1A	9A	2	0	0	0	0	0	0	0	0	×	0
187	NET X3 input selection	1B	9B	2	0	0	0	0	0	0	0	0	×	0
188	NET X4 input selection	1C	9C	2	0	0	0	0	0	0	0	0	×	0
189	NET X5 input selection	1D	9D	2	0	0	0	0	0	0	0	0	×	0
190	RUN terminal function selection	1E	9E	2	0	0	0	0	0	0	0	0	×	0
191	FU terminal function selection	1F	9F	2	0	0	0	0	0	0	0	0	×	0
192	ABC terminal function selection	20	A0	2	0	0	0	0	0	0	0	0	×	0
193	NET Y1 output selection	21	A1	2	0	0	0	0	0	0	0	0	×	0
194	NET Y2 output selection	22	A2	2	0	0	0	0	0	0	0	0	×	0
195	NET Y3 output selection	23	A3	2	0	0	0	0	0	0	0	0	×	0
196	NET Y4 output selection	24	A4	2	0	0	0	0	0	0	0	0	×	0
198	Display corrosion level	26	A6	2	0	0	0	0	0	0	0	×	×	×
232	Multi-speed setting (speed 8)	28	A8	2	0	0	0	0	0	0	0	0	0	0
233	Multi-speed setting (speed 9)	29	A9	2	0	0	0	0	0	0	0	0	0	0
234 235	Multi-speed setting (speed 10) Multi-speed setting (speed 11)	2A 2B	AA AB	2	0	0	0	0	0	0	0	0	0	0
235	Multi-speed setting (speed 11) Multi-speed setting (speed 12)	2B 2C	AC	2	0	0	0	0	0	0	0	0	0	0
237	Multi-speed setting (speed 12)	2D	AD	2	0	0	0	0	0	0	0	0	0	0
238	Multi-speed setting (speed 13)	2E	AE	2	0	0	0	0	0	0	0	0	0	0
239	Multi-speed setting (speed 14)	2F	AF	2	0	0	0	0	0	0	0	0	0	0
240	Soft-PWM operation selection	30	B0	2	0	0	0	0	0	0	0	0	0	0
241	Analog input display unit switchover	31	B1	2	0	0	0	0	0	0	0	0	0	0
244	Cooling fan operation selection	34	B4	2	0	0	0	0	0	0	0	0	0	0
245	Rated slip	35	B5	2	0	×	×	×	×	×	×	0	0	0
246	Slip compensation time constant	36	B6	2	0	×	×	×	×	×	×	0	0	0
		1 1 1					1	1				<u> </u>		

			struct				Co	ntrol n	nethod	l ^{*2}		Р	aramet	er
				_			Vec	ctor	Sens	orless	PM			e
Pr.	Name	Read	Write	Extended	N/N	Magneticiflux	Speed	Torque	Speed	Torque	peeds	Copy*3	Clear*3	All clear*3
247	Constant output range slip compensation selection	37	В7	2	0	×	×	×	×	×	×	0	0	0
249	Earth (ground) fault detection at start	39	В9	2	0	0	0	0	0	0	0	0	0	0
250	Stop selection	ЗА	BA	2	0	0	0	0	0	0	0	0	0	0
251	Output phase loss protection selection	3B	BB	2	0	0	0	0	0	0	0	0	0	0
255	Life alarm status display	3F	BF	2	0	0	0	0	0	0	0	×	×	×
256	Inrush current limit circuit life display	40	C0	2	0	0	0	0	0	0	0	×	×	×
257	Control circuit capacitor life display	41	C1	2	0	0	0	0	0	0	0	×	×	×
258	Main circuit capacitor life display	42	C2	2	0	0	0	0	0	0	0	×	×	×
259	Main circuit capacitor life measuring	43	C3	2	0	0	0	0	0	0	0	0	0	0
260	PWM frequency automatic switchover	44	C4	2	0	0	0	0	0	0	0	0	0	0
261	Power failure stop selection	45 4B	C5	2	0	0	0	0	0	0	0	0	0	0
267 268	Terminal 4 input selection Monitor decimal digits selection	4B 4C	CB	2	0	0	0	0	0	0	0	0	×	0
268	Parameter for manufacturer setting. Do			<u>۷</u>	U	0	0	0	0	0	J	0	0	0
270	Stop-on-contact control selection	4E	CE	2	0	0	0	×	0	×	×	0	0	0
275	Stop-on contact excitation current low-	53	D3	2	×	0	×	×	0	×	×	0	0	0
276	speed scaling factor PWM carrier frequency at stop-on	54	D4	2	×	0	×	×	0	×	×	0	0	0
277	Stall prevention operation current	55	D5	2	0	0	×	×	×	×	×	0	0	0
070	switchover	50	50											
278	Brake opening frequency	56	D6	2	×	0	0	×	0	×	×	0	0	0
279	Brake opening current	57	D7	2	×	0	0	×	0	×	×	0	0	0
280	Brake opening current detection time	58	D8	2	×	0	0	×	0	×	×	0	0	0
281 282	Brake operation time at start	59 5 A	D9	2	×	0	0	×	0	×	×	0	0	0
283	Brake operation frequency Brake operation time at stop	5A 5B	DA DB	2	×	Δ	0	×	0	×	×	0	0	0
284	Deceleration detection function	5C	DC	2	×	Δ	0	×	0	×	×	0	0	0
285	Selection Overspeed detection frequency (Speed deviation excess detection frequency)	5D	DD	2	Δ (×)	Δ (×)	× (°)	×	×	×	× (Δ)	0	0	0
286	Droop gain	5E	DE	2	×	0	0	×	0	×	0	0	0	0
287	Droop filter time constant	5F	DF	2	×	×	0	×	0	×	0	0	0	0
289	Inverter output terminal filter	61	E1	2	0	0	0	0	0	0	0	0	×	0
290	Monitor negative output selection	62	E2	2	0	0	0	0	0	0	0	0	0	0
292	Automatic acceleration/deceleration	64	E4	2	Δ	Δ	Δ	×	Δ	×	×	0	0	0
293	Acceleration/deceleration separate selection	65	E5	2	0	0	0	×	0	×	×	0	0	0
295	Frequency change increment amount setting	67	E7	2	0	0	0	0	0	0	0	0	0	0
296	Password lock level	68	E8	2	0	0	0	0	0	0	0	0	×	0
297	Password lock/unlock	69	E9	2	0	0	0	0	0	0	0	0	o*5	0
298	Frequency search gain	6A	EΑ	2	0	0	×	×	0	0	×	0	×	0
299	Rotation direction detection selection at restarting	6B	ЕВ	2	0	0	×	×	0	×	×	0	0	0
300	BCD input bias AX	00	80	3	0	0	0	0	0	0	0	0	0	0
301	BCD input gain AX	01	81	3	0	0	0	0	0	0	0	0	0	0
302	BIN input bias AX	02	82	3	0	0	0	0	0	0	0	0	0	0
303	BIN input gain AX	03	83	3	0	0	0	0	0	0	0	0	0	0
304	Digital input and analog input compensation enable/disable	04	84	3	0	0	0	0	0	0	0	0	0	0
305	selection AX Read timing operation selection AX	05	85	3	0	0	0	0	0	0	0	0	0	0

Setting for rearo analog output signal selection A				struct				Co	ntrol n	nethod	ı*2		Р	aramet	er
Setting for rearo analog output signal selection A								Vec	ctor	Sens	orless	PM			
Setting for zero analog output W OR ST ST ST ST ST ST ST S	Pr.	Name	Read	Write	Extended	N/N	Magnetic:flux	Speed	Torque	Speed	Torque	Speed	Copy*3	Clear*3	All clear*3
Setting for maximum analog output_X 08 88 3 0 0 0 0 0 0 0 0 0	306	Analog output signal selection AY	06	86	3	0	0	0	0	0	0	0	0	0	0
Analog output signal voltage/current Setting meter voltage output QA 8A 3 0 0 0 0 0 0 0 0 0	307	Setting for zero analog output AY	07	87	3	0	0	0	0	0	0	0	0	0	0
Switchover(iii)	308	0 1 —	80	88	3	0	0	0	0	0	0	0	0	0	0
Selection X Selting for zero analog meter voltage OB 8B 3 O O O O O O O O O	309	switchover <u>AY</u>	09	89	3	0	0	0	0	0	0	0	0	0	0
Setting for maximum analog meter OC 8C 3 0 0 0 0 0 0 0 0 0	310	selection AY	0A	8A	3	0	0	0	0	0	0	0	0	0	0
313 DOO output selection EMPELIAT NC	311	output AY	0B	8B	3	0	0	0	0	0	0	0	0	0	0
314 DOI output selection SBME X NE							0	0	0	0	0	0	0	0	0
315 DO2 output selection					-										
316 DO3 output selection						0							0		
317 DO4 output selection A			-		_										
318 DOS output selection		' -		_											
319 DO6 output selection	-	'			_		0	0	0	0	0	0	0	×	0
RA1 output selection R 14 94 3 0 0 0 0 0 0 0 0 0					_										
RA2 output selection AR 15 95 3 0 0 0 0 0 0 0 0 0					_										
322 RA3 output selection[AR] 16 96 3 0				-											
AMD OV adjustment[AT]	-			_	_										
324 AM1 0mA adjustment AMT 18 98 3 0 0 0 0 0 0 0 0 0															
Digital input unit selection AX D D D S O O O O O O O O O		, —			_										
Sommunication operation command source Sommunication speed command source Sour	-	,	-		_										
Source 20 Ab 3 0 0 0 0 0 0 0 0 0	329	•	10	90	3	0	0	0	0	0	0	0	0		0
Say Source 27 A7 3 0 0 0 0 0 0 0 0 0	338	source	26	A6	3	0	0	0	0	0	0	0	0		o*4
342 Communication EEPROM write selection	339	'	27	A7	3	0	0	0	0	0	0	0	0		
Selection SA	340	Communication startup mode selection	28	A8	3	0	0	0	0	0	0	0	0	o*4	o*4
345 DeviceNet address 10		selection				0	0	0	0	0	0	0	0	0	0
346 DeviceNet baud rate ND 2E AE 3 0 0 0 0 0 0 0 0 0		Communication error count				0	0	0	0	0	0	0	×		
349 Communication reset 31 B1 3 0 0 0 0 0 0 0 0 0	345	DeviceNet address ND	2D	AD	3	0	0	0	0	0	0	0	0		
Selection NC ND NP 31 B1 3 0 0 0 0 0 0 0 0 0	346		2E	ΑE	3	0	0	0	0	0	0	0	0	o*4	o*4
Speed feedback range AP	349		31	B1	3	0	0	0	0	0	0	0	0	o*4	o*4
368 Feedback gain AP		Encoder rotation direction AP				0	0	0	0	×	×	×	0	0	0
Number of encoder pulses AP 45 C5 3 0 0 0 0 0 0 0 0 0		Speed feedback range AP				0	0	×	×	×	×	×	0	0	0
374 Overspeed detection level 4A CA 3 × × 0 0 0 0 0 376 Encoder signal loss detection enable/ disable selection AP 4C CC 3 × × 0 0 × × × 0		Feedback gain AP	44			0	0	×	×	×	×	×	0	0	0
Second Representation Seco		. —													
376 disable selection AP 4C CC 3 X </td <td>374</td> <td></td> <td>4A</td> <td>CA</td> <td>3</td> <td>×</td> <td>×</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td>	374		4A	CA	3	×	×	0	0	0	0	0	0	0	0
414 PLC function operation selection 0E 8E 4 0		disable selection AP													
415 Inverter operation lock mode setting 0F 8F 4 0					-										
416 Pre-scale function selection 10 90 4 0		•			_										
417 Pre-scale setting value 11 91 4 0			-												
418 Extension output terminal filter AY AR 12 92 4 0 0 0 0 0 0 × 0 422 Position control gain 16 96 4 × × 0 × × × × × × 0															
422 Position control gain 16 96 4 × <td></td> <td>_</td> <td></td>		_													
442 Default gateway address 1 E800-E 2A AA 4 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		-													
0 ,		_	-												o*4
443 Default gateway address 2 E800-E 2B AB 4 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		<u> </u>													o*4

			struct code [*]				Co	ntrol n	nethod	l*2		Р	aramet	er
				_			Vec	ctor	Sens	orless	PM			
Pr.	Name	Read	Write	Extended	N//E	Magnetic:flux	Speed	Torque	Speed	Torque	Speed	Copy*3	Clear*3	All clear*3
444	Default gateway address 3 E800-E	2C	AC	4	0	0	0	0	0	0	0	0	o*4	o*4
445	Default gateway address 4 E800-E	2D	AD	4	0	0	0	0	0	0	0	0	o*4	o*4
447	Digital torque command bias AX	2F	AF	4	×	×	×	0	×	0	×	0	0	0
448	Digital torque command gain AX	30	B0	4	×	×	×	0	×	0	×	0	0	0
450	Second applied motor	32	B2	4	0	0	0	0	0	0	0	0	0	0
451	Second motor control method selection	33	B3	4	0	0	0	0	0	0	0	0	0	0
453	Second motor capacity	35	B5	4	×	0	0	0	0	0	0	0	0	0
454 455	Number of second motor poles Second motor excitation current	36 37	B6 B7	4	0	0	0	0	0	0	o ×	0	o ×	0
456	Rated second motor voltage	38	B8	4	×	0	0	0	0	0	0	0	0	0
457	Rated second motor frequency	39	B9	4	×	0	0	0	0	0	0	0	0	0
458	Second motor constant (R1)	3A	BA	4	×	0	0	0	0	0	0	0	×	0
459	Second motor constant (R2)	3B	ВВ	4	×	0	0	0	0	0	×	0	×	0
460	Second motor constant (L1) / d-axis inductance (Ld)	3C	вс	4	×	0	0	0	0	0	0	0	×	0
461	Second motor constant (L2) / q-axis inductance (Lq)	3D	BD	4	×	0	0	0	0	0	0	0	×	0
462	Second motor constant (X)	3E	BE	4	×	0	0	0	0	0	×	0	×	0
463	Second motor auto tuning setting/ status	3F	BF	4	×	0	0	0	0	0	0	0	×	0
495	Remote output selection	5F	DF	4	0	0	0	0	0	0	0	0	0	0
496	Remote output data 1	60	E0	4	0	0	0	0	0	0	0	×	×	×
497	Remote output data 2	61	E1	4	0	0	0	0	0	0	0	×	×	×
498 500	PLC function flash memory clear Communication error execution waiting	62 00	E2 80	5	0	0	0	0	0	0	0	× •	0	0
501	time NC ND NP Communication error occurrence count display NC ND NP	01	81	5	0	0	0	0	0	0	0	×	0	0
502	Stop mode selection at communication error	02	82	5	0	0	0	0	0	0	0	0	0	0
503	Maintenance timer	03	83	5	0	0	0	0	0	0	0	×	×	×
504	Maintenance timer warning output set time	04	84	5	0	0	0	0	0	0	0	0	×	0
505	Speed setting reference	05	85	5	0	0	0	0	0	0	0	0	0	0
506	Display estimated main circuit capacitor residual life	06	86	5	0	0	0	0	0	0	0	×	×	×
507	Display ABC relay contact life	07	87	5	0	0	0	0	0	0	0	×	×	×
509	Display power cycle life	09	89	5	0	0	0	0	0	0	0	×	×	×
541	Frequency command sign selection E800-E NC	29	A9	5	0	0	0	×	0	×	0	0	o*4	o*4
542	Communication station number (CC-Link) NC	2A	AA	5	0	0	0	0	0	0	0	0	o*4	o*4
543	Baud rate selection (CC-Link) NC	2B	AB	5	0	0	0	0	0	0	0	0	o*4	o*4
544	CC-Link extended setting E800-E NC	2C	AC	5	0	0	0	0	0	0	0	0	o*4	o*4
547	USB communication station number	2F	AF	5	0	0	0	0	0	0	0	0	o*4	o*4
548	USB communication check time interval	30	В0	5	0	0	0	0	0	0	0	0	o*4	o*4
549	Protocol selection	31	В1	5	0	0	0	0	0	0	0	0	o*4	o*4
550	NET mode operation command source selection	32	B2	5	0	0	0	0	0	0	0	0	o*4	o*4
551	PU mode operation command source selection	33	ВЗ	5	0	0	0	0	0	0	0	0	o*4	o*4
552	Frequency jump range	34	В4	5	0	0	0	0	0	0	0	0	0	0
553	PID deviation limit	35	B5	5	0	0	0	×	0	×	0	0	0	0

			struct				Co	ntrol n	nethod	 *2		P	aramet	er
							Vec	ctor	Sens	orless	PM			
Pr.	Name	Read	Write	Extended	N/F	Magnetic flux	Speed	Torque	Speed	Torque	Speed	Copy*3	Clear*3	All clear*3
554	PID signal operation selection	36	B6	5	0	0	0	×	0	×	0	0	0	0
555	Current average time	37	В7	5	0	0	0	0	0	0	0	0	0	0
556	Data output mask time	38	B8	5	0	0	0	0	0	0	0	0	0	0
557	Current average value monitor signal output reference current	39	В9	5	0	0	0	0	0	0	0	0	0	0
560	Second frequency search gain	3C	BC	5	0	0	×	×	0	0	×	0	×	0
563	Energization time carrying-over times	3F	BF	5	0	0	0	0	0	0	0	×	×	×
564 569	Operating time carrying-over times Second motor speed control gain	40 45	C0 C5	5 5	o ×	0	° ×	° ×	о х	° ×	o ×	×	×	× •
570	Multiple rating setting 3-phase	46	C6	5	0	0	0	0	0	0	0	0	×	×
571	Holding time at a start	47	C7	5	0	0	0	0	0	0	×	0	0	0
574	Second motor online auto tuning	4A	CA	5	×	0	0	0	0	0	×	0	0	0
575	Output interruption detection time	4B	СВ	5	0	0	0	×	0	×	0	0	0	0
576	Output interruption detection level	4C	CC	5	0	0	0	×	0	×	0	0	0	0
577	Output interruption cancel level	4D	CD	5	0	0	0	×	0	×	0	0	0	0
592	Traverse function selection	5C	DC	5	0	0	0	×	0	×	0	0	0	0
593	Maximum amplitude amount	5D	DD	5	0	0	0	×	0	×	0	0	0	0
594	Amplitude compensation amount during deceleration	5E	DE	5	0	0	0	×	0	×	0	0	0	0
595	Amplitude compensation amount during acceleration	5F	DF	5	0	0	0	×	0	×	0	0	0	0
596	Amplitude acceleration time	60	E0	5	0	0	0	×	0	×	0	0	0	0
597	Amplitude deceleration time	61	E1	5	0	0	0	×	0	×	0	0	0	0
600	First free thermal reduction frequency 1	00	80	6	0	0	0	0	0	0	0	0	0	0
601	First free thermal reduction ratio 1	01	81	6	0	0	0	0	0	0	0	0	0	0
602	First free thermal reduction frequency 2	02	82	6	0	0	0	0	0	0	0	0	0	0
603	First free thermal reduction ratio 2	03	83	6	0	0	0	0	0	0	0	0	0	0
604 607	First free thermal reduction frequency 3 Motor permissible load level	04 07	84 87	6	0	0	0	0	0	0	0	0	0	0
608	Second motor permissible load level	08	88	6	0	0	0	0	0	0	0	0	0	0
609	PID set point/deviation input selection	09	89	6	0	0	0	×	0	×	0	0	0	0
610	PID measured value input selection	0A	8A	6	0	0	0	×	0	×	0	0	0	0
611	Acceleration time at a restart	0B	8B	6	0	0	0	×	0	×	0	0	0	0
631	Inverter output fault detection enable/ disable selection	1F	9F	6	0	0	0	0	0	0	0	×	×	×
639	Brake opening current selection	27	A7	6	×	0	0	×	0	×	×	0	0	0
640	Brake operation frequency selection	28	A8	6	×	×	0	×	0	×	×	0	0	0
653	Speed smoothing control	35	B5	6	0	0	×	×	×	×	×	0	0	0
654	Speed smoothing cutoff frequency	36	В6	6	0	0	×	×	×	×	×	0	0	0
665	Regeneration avoidance frequency gain	41	C1	6	0	0	0	×	0	×	0	0	0	0
673	SF-PR slip amount adjustment operation selection 2007 4007	49	С9	6	0	×	×	×	×	×	×	0	0	0
674	SF-PR slip amount adjustment gain[2007]4007	4A	CA	6	0	×	×	×	×	×	×	0	0	0
675	User parameter auto storage function selection	4B	СВ	6	0	0	0	0	0	0	0	0	0	0
690	Deceleration check time	5A	DA	6	×	×	0	×	×	×	×	0	0	0
692	Second free thermal reduction frequency 1	5C	DC	6	0	0	0	0	0	0	0	0	0	0
693	Second free thermal reduction ratio 1	5D	DD	6	0	0	0	0	0	0	0	0	0	0
694	Second free thermal reduction frequency 2	5E	DE	6	0	0	0	0	0	0	0	0	0	0
695	Second free thermal reduction ratio 2	5F	DF	6	0	0	0	0	0	0	0	0	0	0

			struct code [*]				Co	ntrol n	nethod	*2		Р	aramet	.er
			Jouc				Ved	etor	Sens	orless	PM			
Pr.	Name	Read	Write	Extended	N/F	Magneticiflux	Speed	Torque	Speed	Torque	Speed	Copy*3	Clear*3	All clear*3
696	Second free thermal reduction frequency 3	60	E0	6	0	0	0	0	0	0	0	0	0	0
699	Input terminal filter	63	E3	6	0	0	0	0	0	0	0	0	×	0
702	Maximum motor frequency	02	82	7	×	×	×	×	×	×	0	0	0	0
706	Induced voltage constant (phi f)	06	86	7	×	×	×	×	×	×	0	0	×	0
707	Motor inertia (integer)	07	87	7	×	×	0	×	0	×	0	0	0	0
711	Motor Ld decay ratio	0B	8B	7	×	×	×	×	×	×	0	0	×	0
712	Motor Lq decay ratio	0C	8C	7	×	×	×	×	×	×	0	0	×	0
717	Starting resistance tuning compensation coefficient 1	11	91	7	×	0	0	0	0	0	0	0	×	0
720	Starting resistance tuning compensation coefficient	14	94	7	×	0	0	0	0	0	×	0	×	0
721	Starting magnetic pole position detection pulse width	15	95	7	×	×	×	×	×	×	0	0	×	0
724	Motor inertia (exponent)	18	98	7	×	×	0	×	0	×	0	0	0	0
725	Motor protection current level	19	99	7	×	×	×	×	×	×	0	0	0	0
728	Device instance number (Upper 3 digits)[E800-EPA]	1C	9C	7	0	0	0	0	0	0	0	0	o*4	o*4
729	Device instance number (Lower 4 digits)[E800-EPA]	1D	9D	7	0	0	0	0	0	0	0	0	o*4	o*4
737	Starting resistance tuning compensation coefficient 2	25	A5	7	×	0	0	0	0	0	×	0	×	0
738	Second motor induced voltage constant (phi f)	26	A6	7	×	×	×	×	×	×	0	0	×	0
739	Second motor Ld decay ratio	27	Α7	7	×	×	×	×	×	×	0	0	×	0
740	Second motor Lq decay ratio	28	A8	7	×	×	×	×	×	×	0	0	×	0
741	Second motor starting resistance tuning compensation coefficient 1	29	A9	7	×	0	0	0	0	0	0	0	×	0
742	Second motor magnetic pole detection pulse width	2A	AA	7	×	×	×	×	×	×	0	0	×	0
743	Second motor maximum frequency	2B	AB	7	×	×	×	×	×	×	0	0	0	0
744	Second motor inertia (integer)	2C	AC	7	×	×	0	×	0	×	0	0	0	0
745	Second motor inertia (exponent)	2D	AD	7	×	×	0	×	0	×	0	0	0	0
746	Second motor protection current level	2E	ΑE	7	×	×	×	×	×	×	0	0	0	0
759	PID unit selection	3B	BB	7	0	0	0	×	0	×	0	0	0	0
774	Operation panel monitor selection 1	4A	CA	7	0	0	0	0	0	0	0	0	0	0
775	Operation panel monitor selection 2	4B	СВ	7	0	0	0	0	0	0	0	0	0	0
776	Operation panel monitor selection 3	4C	CC	7	0	0	0	0	0	0	0	0	0	0
779	Operation frequency during communication error	4F	CF	7	0	0	0	0	0	0	0	0	0	0
791	Acceleration time in low-speed range	5B	DB	7	×	×	×	×	×	×	0	0	0	0
792	Deceleration time in low-speed range	5C	DC	7	×	×	×	×	×	×	0	0	0	0
800	Control method selection	00	80	8	0	0	0	0	0	0	0	0	0	0
801	Output limit level	01	81	8	×	×	0	0	0	0	×	0	0	0
802	Pre-excitation selection	02	82	8	×	×	0	×	×	×	×	0	0	0
803	Constant output range torque characteristic selection	03	83	8	×	×	0	0	0	0	×	0	0	0
804	Torque command source selection	04	84	8	×	×	×	0	×	0	×	0	0	0
805	Torque command value (RAM) Torque command value (RAM,	05	85	8	×	×	0	0	0	0	0	×	0	0
806 807	EEPROM) Speed limit selection	06 07	86 87	8	×	×	° ×	0	o ×	0	о х	0	0	0
808	Speed limit Selection Speed limit	07	88	8	×	×	×		×	0	×	0	0	0
808	Reverse-side speed limit	08	89	8	×	×	×	0	×	0	×	0	0	0
810	Torque limit input method selection	09 0A	8A	8	×	×	0	×	0	×	0	0	0	0
811	Set resolution switchover	0B	8B	8	×	×	0	×	0	×	0	0	0	0
011	Cot 1030idtion 3withiovel	טט	טט	٦	1	1	Ĭ	1	Ŭ	<u> </u>	Ŭ	Ŭ	Ĭ	Ŭ

Pr.			code	•			CU	ntrol n	nethot					er
Pr.				_			Vec	ctor	Sens	orless	PM			
	Name	Read	Write	Extended	N/N	Magnetic flux	Speed	Torque	Speed	Torque	peeds	Copy*3	Clear*3	All clear*3
812	Torque limit level (regeneration)	0C	8C	8	×	×	0	×	0	×	0	0	0	0
	Torque limit level (3rd quadrant)	0D	8D	8	×	×	0	×	0	×	0	0	0	0
	Torque limit level (4th quadrant)	0E	8E	8	×	×	0	×	0	×	0	0	0	0
	Torque limit level 2	0F	8F	8	×	×	0	×	0	×	0	0	0	0
816	Torque limit level during acceleration	10	90	8	×	×	0	×	0	×	0	0	0	0
817	Torque limit level during deceleration	11	91	8	×	×	0	×	0	×	0	0	0	0
820	Speed control P gain 1	14	94	8	×	×	0	×	0	×	0	0	0	0
821	Speed control integral time 1	15	95	8	×	×	0	×	0	×	0	0	0	0
822	Speed setting filter 1	16	96	8	×	×	0	0	0	0	0	0	0	0
823	Speed detection filter 1 AP	17	97	8	×	×	0	0	×	×	×	0	0	0
824	Torque control P gain 1 (current loop proportional gain)	18	98	8	×	×	0	0	0	0	0	0	0	0
825	Torque control integral time 1 (current loop integral time)	19	99	8	×	×	0	0	0	0	0	0	0	0
826	Torque setting filter 1	1A	9A	8	×	×	0	0	0	0	0	0	0	0
828	Model speed control gain	1C	9C	8	×	×	0	×	0	×	×	0	0	0
830	Speed control P gain 2	1E	9E	8	×	×	0	×	0	×	0	0	0	0
831	Speed control integral time 2	1F	9F	8	×	×	0	×	0	×	0	0	0	0
832	Speed setting filter 2	20	A0	8	×	×	0	0	0	0	0	0	0	0
833	Speed detection filter 2 AP	21	A1	8	×	×	0	×	×	×	×	0	0	0
834	Torque control P gain 2 (current loop proportional gain)	22	A2	8	×	×	0	0	0	0	0	0	0	0
835	Torque control integral time 2 (current loop integral time)	23	А3	8	×	×	0	0	0	0	0	0	0	0
836	Torque setting filter 2	24	A4	8	×	×	0	0	0	0	0	0	0	0
840	Torque bias selection	28	A8	8	×	×	0	×	0	×	×	0	0	0
841	Torque bias 1	29	A9	8	×	×	0	×	0	×	×	0	0	0
842	Torque bias 2	2A	AA	8	×	×	0	×	0	×	×	0	0	0
843	Torque bias 3	2B	AB	8	×	×	0	×	0	×	×	0	0	0
844	Torque bias filter	2C	AC	8	×	×	0	×	0	×	×	0	0	0
845	Torque bias operation time	2D	AD	8	×	×	0	×	0	×	×	0	0	0
846	Torque bias balance compensation	2E	ΑE	8	×	×	0	×	0	×	×	0	0	0
847	Fall-time torque bias terminal 4 bias	2F	AF	8	×	×	0	×	0	×	×	0	0	0
848	Fall-time torque bias terminal 4 gain	30	B0	8	×	×	0	×	0	×	×	0	0	0
	Analog input offset adjustment	31	B1	8	0	0	0	0	0	0	0	0	0	0
850	Brake operation selection	32	B2	8	×	×	×	×	0	0	×	0	0	0
	Speed deviation time	35	B5	8	×	×	0	×	×	×	Δ	0	0	0
854	Excitation ratio	36	B6	8	×	×	0	0	0	0	×	0	0	0
858	Terminal 4 function assignment	3A	BA	8	0	0	0	0	0	0	0	0	×	0
859	Torque current/Rated PM motor current	3B	ВВ	8	×	0	0	0	0	0	0	0	×	0
860	Second motor torque current/Rated PM motor current	3C	вс	8	×	0	0	0	0	0	0	0	×	0
864	Torque detection	40	C0	8	×	×	0	0	0	0	0	0	0	0
865	Low speed detection	41	C1	8	0	0	0	0	0	0	0	0	0	0
866	Torque monitoring reference	42	C2	8	×	0	0	0	0	0	0	0	0	0
867	AM output filter E800-4 E800-5	43	C3	8	0	0	0	0	0	0	0	0	0	0
870	Speed detection hysteresis	46	C6	8	0	0	0	0	0	0	0	0	0	0
872	Input phase loss protection	48	C8	8	0	0	0	0	0	0	0	0	0	0
	selection 3-phase	10		-										
873	Speed limit AP	49	C9	8	×	×	0	×	×	×	×	0	0	0
874	OLT level setting	4A	CA	8	×	×	0	×	0	×	0	0	0	0
877	Speed feed forward control/model adaptive speed control selection	4D	CD	8	×	×	0	×	0	×	×	0	0	0
878	Speed feed forward filter	4E	CE	8	×	×	0	×	0	×	×	0	0	0

			struct code [*]				Co	ntrol n	nethod	 *2		P	aramet	er
							Vec	ctor	Sens	orless	PM			
Pr.	Name	Read	Write	Extended	N//E	Magneticiflux	Speed	Torque	Speed	Torque	Speed	Copy*3	Clear*3	All clear*3
879	Speed feed forward torque limit	4F	CF	8	×	×	0	×	0	×	×	0	0	0
880	Load inertia ratio	50	D0	8	×	×	0	×	0	×	×	0	0	0
881	Speed feed forward gain	51	D1	8	×	×	0	×	0	×	×	0	0	0
882	Regeneration avoidance operation selection	52	D2	8	0	0	0	×	0	×	0	0	0	0
883	Regeneration avoidance operation level	53	D3	8	0	0	0	×	0	×	0	0	0	0
885	Regeneration avoidance compensation frequency limit value	55	D5	8	0	0	0	×	0	×	0	0	0	0
886	Regeneration avoidance voltage gain	56	D6	8	0	0	0	×	0	×	0	0	0	0
888	Free parameter 1	58	D8	8	0	0	0	0	0	0	0	0	×	×
889	Free parameter 2	59	D9	8	0	0	0	0	0	0	0	0	×	×
891	Cumulative power monitor digit shifted times	5B	DB	8	0	0	0	0	0	0	0	0	0	0
892	Load factor	5C	DC	8	0	0	0	0	0	0	0	0	0	0
893	Energy saving monitor reference (motor capacity)	5D	DD	8	0	0	0	0	0	0	0	0	0	0
894	Control selection during commercial power-supply operation	5E	DE	8	0	0	0	0	0	0	0	0	0	0
895	Power saving rate reference value	5F	DF	8	0	0	0	0	0	0	0	0	0	0
896	Power unit cost	60	E0	8	0	0	0	0	0	0	0	0	0	0
897	Power saving monitor average time	61	E1	8	0	0	0	0	0	0	0	0	0	0
898	Power saving cumulative monitor clear	62	E2	8	0	0	0	0	0	0	0	0	×	0
899	Operation time rate (estimated value)	63	E3	8	0	0	0	0	0	0	0	0	0	0
C0 (900)	FM terminal calibration E800-1	5C	DC	1	0	0	0	0	0	0	0	0	×	0
C1 (901)	AM terminal calibration E800-4 E800-5	5D	DD	1	0	0	0	0	0	0	0	0	×	0
C2 (902)	Terminal 2 frequency setting bias frequency	5E	DE	1	0	0	0	0	0	0	0	0	×	0
C3 (902)	Terminal 2 frequency setting bias	5E	DE	1	0	0	0	0	0	0	0	0	×	0
125 (903)	Terminal 2 frequency setting gain frequency	5F	DF	1	0	0	0	0	0	0	0	0	×	0
C4 (903)	Terminal 2 frequency setting gain	5F	DF	1	0	0	0	0	0	0	0	0	×	0
C5 (904)	Terminal 4 frequency setting bias frequency	60	E0	1	0	0	0	0	0	0	0	0	×	0
C6 (904)	Terminal 4 frequency setting bias	60	E0	1	0	0	0	0	0	0	0	0	×	0
126 (905)	Terminal 4 frequency setting gain frequency	61	E1	1	0	0	0	0	0	0	0	0	×	0
C7 (905)	Terminal 4 frequency setting gain	61	E1	1	0	0	0	0	0	0	0	0	×	0
C38 (932)	Terminal 4 bias command (torque/ magnetic flux)	20	A0	9	×	×	0	0	0	0	0	0	×	0
C39 (932)	Terminal 4 bias (torque/magnetic flux)	20	A0	9	×	×	0	0	0	0	0	0	×	0
C40 (933)	Terminal 4 gain command (torque/ magnetic flux)	21	A1	9	×	×	0	0	0	0	0	0	×	0
C41 (933)	Terminal 4 gain (torque/magnetic flux)	21	A1	9	×	×	0	0	0	0	0	0	×	0
C42 (934)	PID display bias coefficient	22	A2	9	0	0	0	×	0	×	0	0	×	0
C43 (934)	PID display bias analog value	22	A2	9	0	0	0	×	0	×	0	0	×	0
C44 (935)	PID display gain coefficient	23	А3	9	0	0	0	×	0	×	0	0	×	0

			struct				Co	ntrol n	nethod	l*2		P	aramet	er
							Vec	ctor	Sens	orless	PM			m
Pr.	Name	Read	Write	Extended	N//E	Magnetic flux	Speed	Torque	Speed	Torque	Speed	Copy*3	Clear*3	All clear*3
C45 (935)	PID display gain analog value	23	А3	9	0	0	0	×	0	×	0	0	×	0
986	Display safety fault code E800-SCE	56	D6	9	0	0	0	0	0	0	0	×	×	×
990	PU buzzer control	5A	DA	9	0	0	0	0	0	0	0	0	0	0
991	PU contrast adjustment	5B	DB	9	0	0	0	0	0	0	0	0	×	0
992	Operation panel setting dial push monitor selection E800	5C	DC	9	0	0	0	0	0	0	0	0	0	0
997	Fault initiation	61	E1	9	0	0	0	0	0	0	0	×	0	0
998	PM parameter initialization	62	E2	9	0	0	0	0	0	0	0	0	0	0
999	Automatic parameter setting	63	E3	9	0	0	0	0	0	0	0	×	×	0
1002	Lq tuning target current adjustment coefficient	02	82	Α	×	×	×	×	×	×	0	0	0	0
1006	Clock (year)	06	86	Α	0	0	0	0	0	0	0	×	×	×
1007	Clock (month, day)	07	87	Α	0	0	0	0	0	0	0	×	×	×
1008	Clock (hour, minute)	80	88	Α	0	0	0	0	0	0	0	×	×	×
	Integral stop selection at limited frequency	0F	8F	Α	0	0	0	×	0	×	0	0	0	0
1020	Trace operation selection	14	94	Α	0	0	0	0	0	0	0	0	0	0
1022	Sampling cycle	16	96	Α	0	0	0	0	0	0	0	0	0	0
1023	Number of analog channels	17	97	Α	0	0	0	0	0	0	0	0	0	0
1024	Sampling auto start	18	98	Α	0	0	0	0	0	0	0	0	0	0
1025	Trigger mode selection	19	99	Α	0	0	0	0	0	0	0	0	0	0
	Number of sampling before trigger	1A	9A	Α	0	0	0	0	0	0	0	0	0	0
	Analog source selection (1ch)	1B	9B	Α	0	0	0	0	0	0	0	0	0	0
	Analog source selection (2ch)	1C	9C	Α	0	0	0	0	0	0	0	0	0	0
	Analog source selection (3ch)	1D	9D	Α	0	0	0	0	0	0	0	0	0	0
	Analog source selection (4ch)	1E	9E	Α	0	0	0	0	0	0	0	0	0	0
	Analog source selection (5ch)	1F	9F	Α	0	0	0	0	0	0	0	0	0	0
	Analog source selection (6ch)	20	A0	Α	0	0	0	0	0	0	0	0	0	0
	Analog source selection (7ch)	21	A1	Α	0	0	0	0	0	0	0	0	0	0
	Analog source selection (8ch)	22	A2	Α	0	0	0	0	0	0	0	0	0	0
	Analog trigger channel	23	A3	Α	0	0	0	0	0	0	0	0	0	0
	Analog trigger operation selection	24	A4	Α	0	0	0	0	0	0	0	0	0	0
	Analog trigger level	25	A5	Α	0	0	0	0	0	0	0	0	0	0
	Digital source selection (1ch)	26	A6	Α	0	0	0	0	0	0	0	0	0	0
	Digital source selection (2ch)	27 28	A7 A8	A	0	0	0	0	0	0	0	0	0	0
	Digital source selection (3ch) Digital source selection (4ch)	28	A8 A9	A	0	0	0	0	0	0	0	0	0	0
	Digital source selection (5ch)	29 2A	AA	A	0	0	0	0	0	0	0	0	0	0
	Digital source selection (6ch)	2B	AB	Α	0	0	0	0	0	0	0	0	0	0
	Digital source selection (7ch)	2C	AC	Α	0	0	0	0	0	0	0	0	0	0
	Digital source selection (8ch)	2D	AD	Α	0	0	0	0	0	0	0	0	0	0
	Digital trigger channel	2E	AE	Α	0	0	0	0	0	0	0	0	0	0
	Digital trigger operation selection	2F	AF	Α	0	0	0	0	0	0	0	0	0	0
	Deceleration time at emergency stop	03	83	В	0	0	0	0	0	0	0	0	0	0
	Torque monitor filter	06	86	В	0	0	0	0	0	0	0	0	0	0
	Running speed monitor filter	07	87	В	0	0	0	0	0	0	0	0	0	0
1108	Excitation current monitor filter	08	88	В	0	0	0	0	0	0	0	0	0	0
1124	Station number in inverter-to-inverter link[E800-E]	18	98	В	0	0	0	0	0	0	0	0	o*4	o*4
	Number of inverters in inverter-to-inverter link system E800-E	19	99	В	0	0	0	0	0	0	0	0	o*4	o*4
1150	PLC function user parameters 1	32	B2	В	0	0	0	0	0	0	0	0	0	0
	PLC function user parameters 2	33	В3	В	0	0	0	0	0	0	0	0	0	0

			struct code [*]				Co	ntrol n	nethod	J ^{*2}		P	aramet	er
				_			Vec	ctor	Sens	orless	PM			
Pr.	Name	Read	Write	Extended	N/N	Magneticiflux	Speed	Torque	Speed	Torque	Speed	Copy*3	Clear*3	All clear*3
1152	PLC function user parameters 3	34	B4	В	0	0	0	0	0	0	0	0	0	0
1153	PLC function user parameters 4	35	B5	В	0	0	0	0	0	0	0	0	0	0
1154	PLC function user parameters 5	36	В6	В	0	0	0	0	0	0	0	0	0	0
1155	PLC function user parameters 6	37	В7	В	0	0	0	0	0	0	0	0	0	0
1156	PLC function user parameters 7	38	В8	В	0	0	0	0	0	0	0	0	0	0
1157	PLC function user parameters 8	39	B9	В	0	0	0	0	0	0	0	0	0	0
1158	PLC function user parameters 9	3A	BA	В	0	0	0	0	0	0	0	0	0	0
1159	PLC function user parameters 10	3B	BB	В	0	0	0	0	0	0	0	0	0	0
1160	PLC function user parameters 11	3C	BC	В	0	0	0	0	0	0	0	0	0	0
1161 1162	PLC function user parameters 12	3D 3E	BD BE	В	0	0	0	0	0	0	0	0	0	0
1162	PLC function user parameters 13	3F	BF		0	0	0	0	0	0	0	0	0	0
1163	PLC function user parameters 14 PLC function user parameters 15	3F 40	C0	В	0	0	0	0	0	0	0	0	0	0
1165	PLC function user parameters 16	41	C1	В	0	0	0	0	0	0	0	0	0	0
1166	PLC function user parameters 17	42	C2	В	0	0	0	0	0	0	0	0	0	0
1167	PLC function user parameters 18	43	C3	В	0	0	0	0	0	0	0	0	0	0
1168	PLC function user parameters 19	44	C4	В	0	0	0	0	0	0	0	0	0	0
1169	PLC function user parameters 20	45	C5	В	0	0	0	0	0	0	0	0	0	0
1170	PLC function user parameters 21	46	C6	В	0	0	0	0	0	0	0	0	0	0
1171	PLC function user parameters 22	47	C7	В	0	0	0	0	0	0	0	0	0	0
1172	PLC function user parameters 23	48	C8	В	0	0	0	0	0	0	0	0	0	0
1173	PLC function user parameters 24	49	C9	В	0	0	0	0	0	0	0	0	0	0
1174	PLC function user parameters 25	4A	CA	В	0	0	0	0	0	0	0	0	0	0
1175	PLC function user parameters 26	4B	СВ	В	0	0	0	0	0	0	0	0	0	0
1176	PLC function user parameters 27	4C	СС	В	0	0	0	0	0	0	0	0	0	0
1177	PLC function user parameters 28	4D	CD	В	0	0	0	0	0	0	0	0	0	0
1178	PLC function user parameters 29	4E	CE	В	0	0	0	0	0	0	0	0	0	0
1179	PLC function user parameters 30	4F	CF	В	0	0	0	0	0	0	0	0	0	0
1180	PLC function user parameters 31	50	D0	В	0	0	0	0	0	0	0	0	0	0
1181	PLC function user parameters 32	51	D1	В	0	0	0	0	0	0	0	0	0	0
1182	PLC function user parameters 33	52	D2	В	0	0	0	0	0	0	0	0	0	0
1183	PLC function user parameters 34	53	D3	В	0	0	0	0	0	0	0	0	0	0
1184	PLC function user parameters 35	54	D4	В	0	0	0	0	0	0	0	0	0	0
1185	PLC function user parameters 36	55	D5	В	0	0	0	0	0	0	0	0	0	0
1186	PLC function user parameters 37	56	D6	В	0	0	0	0	0	0	0	0	0	0
1187	PLC function user parameters 38	57	D7	В	0	0	0	0	0	0	0	0	0	0
1188	PLC function user parameters 39	58	D8	В	0	0	0	0	0	0	0	0	0	0
1189	PLC function user parameters 40	59	D9	В	0	0	0	0	0	0	0	0	0	0
1190	PLC function user parameters 41	5A	DA	В	0	0	0	0	0	0	0	0	0	0
1191	PLC function user parameters 42	5B	DB	В	0	0	0	0	0	0	0	0	0	0
1192	PLC function user parameters 43	5C	DC	В	0	0	0	0	0	0	0	0	0	0
1193	PLC function user parameters 44	5D	DD	В	0	0	0	0	0	0	0	0	0	0
1194	PLC function user parameters 45	5E	DE	В	0	0	0	0	0	0	0	0	0	0
1195	PLC function user parameters 46	5F	DF	В	0	0	0	0	0	0	0	0	0	0
1196	PLC function user parameters 47	60	E0	В	0	0	0	0	0	0	0	0	0	0
1197	PLC function user parameters 48	61	E1	В	0	0	0	0	0	0	0	0	0	0
1198	PLC function user parameters 49	62	E2	В	0	0	0	0	0	0	0	0	0	0
1199	PLC function user parameters 50	63	E3	В	0	0	0	0	0	0	0	0	0	0
1200	AM output offset calibration E800-4 E800-5	00	80	С	0	0	0	0	0	0	0	0	×	0
1399	Inverter identification enable/disable selection E800-E	63	E3	D	0	0	0	0	0	0	0	0	o*4	o*4
1412	Motor induced voltage constant (phi f) exponent	0C	8C	Е	×	×	×	×	×	×	0	0	×	0

			struct				Co	ntrol n	nethod	l*2		Р	aramet	.er
							Vec	ctor	Sens	orless	PM			e .
Pr.	Name	Read	Write	Extended	N/N	Magnetic flux	Speed	Torque	Speed	Torque	Speed	Copy*3	Clear*3	All clear*3
1413	Second motor induced voltage constant (phi f) exponent	0D	8D	E	×	×	×	×	×	×	0	0	×	0
1424	Ethernet communication network number E800-E	18	98	E	0	0	0	0	0	0	0	0	o*4	o*4
1425	Ethernet communication station number E800-E	19	99	E	0	0	0	0	0	0	0	0	o*4	o*4
1426	Link speed and duplex mode selection E800-E	1A	9A	E	0	0	0	0	0	0	0	0	o*4	o*4
1427	Ethernet function selection 1 E800-E	1B	9B	Е	0	0	0	0	0	0	0	0	o*4	o*4
1428	Ethernet function selection 2 E800-E	1C	9C	Е	0	0	0	0	0	0	0	0	o*4	o*4
1429	Ethernet function selection 3 E800-E	1D	9D	Е	0	0	0	0	0	0	0	0	o*4	o*4
1430	Ethernet function selection 4 E800-E	1E	9E	Е	0	0	0	0	0	0	0	0	o*4	o*4
1431	Ethernet signal loss detection function selection E800-E	1F	9F	Е	0	0	0	0	0	0	0	0	o*4	o*4
1432	Ethernet communication check time interval E800-E	20	A0	Е	0	0	0	0	0	0	0	0	o*4	o*4
1434	IP address 1 (Ethernet) E800-E	22	A2	Е	0	0	0	0	0	0	0	×	o*4	o*4
1435	IP address 2 (Ethernet) E800-E	23	А3	Е	0	0	0	0	0	0	0	×	o*4	o*4
1436	IP address 3 (Ethernet) E800-E	24	A4	Е	0	0	0	0	0	0	0	×	o*4	o*4
1437	IP address 4 (Ethernet) E800-E	25	A5	Е	0	0	0	0	0	0	0	×	o*4	o*4
1438	Subnet mask 1 E800-E	26	A6	Е	0	0	0	0	0	0	0	0	o*4	o*4
1439	Subnet mask 2 E800-E	27	Α7	Е	0	0	0	0	0	0	0	0	o*4	o*4
1440	Subnet mask 3 E800-E	28	A8	Е	0	0	0	0	0	0	0	0	o*4	o*4
1441	Subnet mask 4 E800-E	29	A9	Е	0	0	0	0	0	0	0	0	o*4	o*4
1442	IP filter address 1 (Ethernet) E800-E	2A	AA	Е	0	0	0	0	0	0	0	0	o*4	o*4
1443	IP filter address 2 (Ethernet) E800-E	2B	AB	Е	0	0	0	0	0	0	0	0	o*4	o*4
1444	IP filter address 3 (Ethernet) E800-E	2C	AC	Е	0	0	0	0	0	0	0	0	o*4	o*4
1445	IP filter address 4 (Ethernet) E800-E	2D	AD	Е	0	0	0	0	0	0	0	0	o*4	o*4
1446	IP filter address 2 range specification (Ethernet)[E800-E]	2E	ΑE	E	0	0	0	0	0	0	0	0	o*4	o*4
1447	IP filter address 3 range specification (Ethernet) E800-E	2F	AF	Е	0	0	0	0	0	0	0	0	o*4	o*4
1448	IP filter address 4 range specification (Ethernet) E800-E	30	В0	Е	0	0	0	0	0	0	0	0	o*4	o*4
1449	Ethernet command source selection IP address 1 E800-E	31	В1	E	0	0	0	0	0	0	0	0	o*4	o*4
1450	Ethernet command source selection IP address 2 E800-E	32	B2	E	0	0	0	0	0	0	0	0	o*4	o*4
1451	Ethernet command source selection IP address 3 E800-E	33	ВЗ	E	0	0	0	0	0	0	0	0	o*4	o*4
1452	Ethernet command source selection IP address 4 E800-E	34	B4	Е	0	0	0	0	0	0	0	0	o*4	o*4
1453	Ethernet command source selection IP address 3 range specification E000-E	35	B5	E	0	0	0	0	0	0	0	0	o*4	o*4
1454	Ethernet command source selection IP address 4 range specification E800-E	36	В6	E	0	0	0	0	0	0	0	0	o*4	o*4
1455	Keepalive time E800-E	37	В7	Е	0	0	0	0	0	0	0	0	o*4	o*4
1456	Network diagnosis selection E800-E	38	В8	Е	0	0	0	0	0	0	0	0	o*4	o*4
1457	Extended setting for Ethernet signal loss detection function selection E800-E	39	В9	E	0	0	0	0	0	0	0	0	o*4	o*4
1480	Load characteristics measurement mode	50	D0	E	0	0	0	0	0	0	0	0	0	0

			struct code [*]				Co	ntrol n	nethod	 *2		P	aramet	er
Pr.	Name			ō			Vec	ctor	Sens	orless	PM			ဗ္
Pr.	name	Read	Write	Extended	N/N	Magnetic flux	Speed	Torque	Speed	Torque	Speed	Copy*3	Clear*3	All clear*3
1481	Load characteristics load reference 1	51	D1	Е	0	0	0	0	0	0	0	0	0	0
1482	Load characteristics load reference 2	52	D2	Ε	0	0	0	0	0	0	0	0	0	0
1483	Load characteristics load reference 3	53	D3	Е	0	0	0	0	0	0	0	0	0	0
1484	Load characteristics load reference 4	54	D4	Е	0	0	0	0	0	0	0	0	0	0
1485	Load characteristics load reference 5	55	D5	Е	0	0	0	0	0	0	0	0	0	0
1486	Load characteristics maximum frequency	56	D6	E	0	0	0	0	0	0	0	0	0	0
1487	Load characteristics minimum frequency	57	D7	E	0	0	0	0	0	0	0	0	0	0
1488	Upper limit warning detection width	58	D8	Е	0	0	0	0	0	0	0	0	0	0
1489	Lower limit warning detection width	59	D9	Е	0	0	0	0	0	0	0	0	0	0
1490	Upper limit fault detection width	5A	DA	Е	0	0	0	0	0	0	0	0	0	0
1491	Lower limit fault detection width	5B	DB	Е	0	0	0	0	0	0	0	0	0	0
1492	Load status detection signal delay time / load reference measurement waiting time	5C	DC	E	0	0	0	0	0	0	0	0	0	0
1499	Parameter for manufacturer setting. Do	not s	et.											

MEMO

Warranty

When using this product, make sure to understand the warranty described below.

1. Warranty period and coverage

We will repair any failure or defect (hereinafter referred to as "failure") in our FA equipment (hereinafter referred to as the "Product") arisen during warranty period at no charge due to causes for which we are responsible through the distributor from which you purchased the Product or our service provider. However, we will charge the actual cost of dispatching our engineer for an on-site repair work on request by customer in Japan or overseas countries. We are not responsible for any on-site readjustment and/or trial run that may be required after a defective unit are repaired or replaced.

[Term]

The term of warranty for Product is twelve months after your purchase or delivery of the Product to a place designated by you or eighteen months from the date of manufacture whichever comes first ("Warranty Period"). Warranty period for repaired Product cannot exceed beyond the original warranty period before any repair work.

[Limitations]

- (1) You are requested to conduct an initial failure diagnosis by yourself, as a general rule. It can also be carried out by us or our service company upon your request and the actual cost will be charged.
 - However, it will not be charged if we are responsible for the cause of the failure.

 This limited warranty applies only when the condition, method, environment, etc. of use are in condition.
- (2) This limited warranty applies only when the condition, method, environment, etc. of use are in compliance with the terms and conditions and instructions that are set forth in the instruction manual and user manual for the Product and the caution label affixed to the Product.
- (3) Even during the term of warranty, the repair cost will be charged on you in the following cases;
 - a failure caused by your improper storing or handling, carelessness or negligence, etc., and a failure caused by your hardware or software problem
 - · a failure caused by any alteration, etc. to the Product made on your side without our approval
 - a failure which may be regarded as avoidable, if your equipment in which the Product is incorporated is equipped with a safety
 device required by applicable laws and has any function or structure considered to be indispensable according to a common
 sense in the industry
 - a failure which may be regarded as avoidable if consumable parts designated in the instruction manual, etc. are duly maintained and replaced
 - any replacement of consumable parts (condenser, cooling fan, etc.)
 - a failure caused by external factors such as inevitable accidents, including without limitation fire and abnormal fluctuation of voltage, and acts of God, including without limitation earthquake, lightning and natural disasters
 - a failure generated by an unforeseeable cause with a scientific technology that was not available at the time of the shipment of the Product from our company
 - any other failures which we are not responsible for or which you acknowledge we are not responsible for

2. Term of warranty after the stop of production

- (1) We may accept the repair at charge for another seven (7) years after the production of the product is discontinued. The announcement of the stop of production for each model can be seen in our Sales and Service, etc.
- (2) Please note that the Product (including its spare parts) cannot be ordered after its stop of production.

3 Service in overseas

Our regional FA Center in overseas countries will accept the repair work of the Product; however, the terms and conditions of the repair work may differ depending on each FA Center. Please ask your local FA center for details.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi Electric shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi Electric.
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi Electric products.
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi Electric products.
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Change of Product specifications

Specifications listed in our catalogs, manuals or technical documents may be changed without notice.

6. Application and use of the Product

applications when used.

- (1) For the use of our product, its applications should be those that may not result in a serious damage even if any failure or malfunction occurs in product, and a backup or fail-safe function should operate on an external system to product when any failure or malfunction occurs
- (2) Our product is designed and manufactured as a general purpose product for use at general industries. Therefore, applications substantially influential on the public interest for such as atomic power plants and other power plants of electric power companies, and also which require a special quality assurance system, including applications for railway companies and government or public offices are not recommended, and we assume no responsibility for any failure caused by these

In addition, applications which may be substantially influential to human lives or properties for such as airlines, medical treatments, railway service, incineration and fuel systems, man-operated material handling equipment, entertainment machines, safety machines, etc. are not recommended, and we assume no responsibility for any failure caused by these applications when used. We will review the acceptability of the abovementioned applications, if you agree not to require a specific quality for a specific application. Please contact us for consultation.

Revisions

*The manual number is given on the bottom left of the back cover.

Dec. 2019	*Manual number	Revision
	IB(NA)-0600868ENG-A	First edition
Apr. 2020	IB(NA)-0600868ENG-B	Added
		FR-E820S-0008(0.1K) to 0110(2.2K)(E)(SCE)
		FR-E800-SCE (safety communication model)
		Input power monitor
		Mitsubishi Electric geared motor (GM-[]) Posset selection (discourse start RH data time (RH at a selection (RH 2000 to 40000 to 4
		 Reset selection / disconnected PU detection / PU stop selection (Pr.75 = "10000 to 10003, 10014)
Jun. 2020	IB(NA)-0600868ENG-C	to 10017") Added
Juli. 2020	ID(IVA)-0000000LING-C	Vector control
		Parameter unit (FR-PU07)
		 Pr.284, Pr.359, Pr.367, Pr.368, Pr.369, Pr.376, Pr.422, Pr.552, Pr.600 to Pr.604, Pr.607, Pr.608
		Pr.690, Pr.692 to Pr.696, Pr.802, Pr.823, Pr.828, Pr.833, Pr.840 to Pr.848, Pr.854, Pr.873, Pr.877
		to Pr.881, P.A107 (Pr.285)
		Setting value "8888" for Pr.11 William to "140" to P. 50 P. 7744 P. 770 P. 600 T. P. 4007
		 Setting values "19 and 35" for Pr.52, Pr.774 to Pr.776, Pr.992, and Pr.1027 to Pr.1034
		 Setting values "30 and 33" for Pr.71 and Pr.450 Setting values "13, 23, 42, 43, and 74" for Pr.178 to Pr.189
		Setting values 13, 23, 42, 43, and 74 for Pr. 176 to Pr. 199 Setting values "30 to 33 and 130 to 133" for Pr. 190 to Pr. 196, and Pr. 313 to Pr. 319
		Setting values "30 and 33" for Pr.320 to Pr.322
		Setting values "0 to 2, and 9" for Pr.800
		Setting value "2" for Pr.850
		Setting value "6" for Pr.858
		Edited
		Initial value "0(%)" for C39 (Pr.932)

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN

Model	FR-E800 Instruction Manual (Function)	`
Model code	1A2-P91	_