

# FX-350 Series

Analog/Addressable Fire Alarm Panels





## Table of Contents

<b>1.0</b>	<b>Industry Canada and FCC Notice</b>	<b>8</b>
1.1	Notice for all FX-350 Series Built-In UDACTs Sold in Canada .....	8
<b>2.0</b>	<b>Introduction</b>	<b>10</b>
2.1	Features .....	10
<b>3.0</b>	<b>Conventions</b>	<b>12</b>
3.1	Circuits .....	12
3.2	Zone/Group .....	12
3.3	Display Points .....	12
3.4	Wiring Styles .....	12
<b>4.0</b>	<b>System Components</b>	<b>13</b>
4.1	Panel Models .....	13
4.2	Output Class A converter: four circuits .....	15
4.3	Polarity reversal/city tie .....	15
4.4	Remote Annunciator .....	15
4.5	Smart Relay Module .....	16
4.6	RAM-216 Ancillary Annunciator .....	16
4.7	Panel Components and System Accessories .....	17
4.8	Analog/Addressable Devices .....	18
<b>5.0</b>	<b>Mechanical Installation</b>	<b>19</b>
5.1	Installing the Enclosures .....	19
5.2	BBX-1024DS and BBX-1024DSR Mechanical Installation .....	22
<b>6.0</b>	<b>Installing Adder Modules</b>	<b>23</b>
6.1	Cable and Jumper Connections for Main Board and Adder Modules .....	24
6.2	Connectors and Jumpers on the Main Fire Alarm Board .....	26
6.3	OCAC-304 Output Class A Converter Adder Module .....	26
6.4	Polarity Reversal and City Tie Module (Model PR-300) .....	27
6.5	RAX-332 Display Adder Module .....	27

<b>7.0</b>	<b>Circuits and Devices</b>	<b>28</b>
7.1	Addressable/Analog Devices .....	28
7.2	Analog Devices .....	29
7.3	Contact Inputs .....	29
7.4	Contact Outputs .....	29
<b>8.0</b>	<b>Field Wiring</b>	<b>30</b>
8.1	Main Fire Alarm Board Field Wiring .....	30
8.2	Loop Isolators .....	31
8.3	Loop Operation .....	31
8.4	Indicating (Powered Output) Circuits .....	32
8.5	Indicating Circuit Wiring .....	32
8.6	Dialer Wiring .....	34
8.7	Polarity Reversal and City Tie Module (PR-300) Wiring .....	36
8.8	Auxiliary Power Supplies .....	37
8.9	Power Supply Connections .....	38
8.10	Connecting to a 3G4010 Interface Device for Canada .....	39
8.11	Connecting to a 3G4010CF Interface Device outside Canada .....	40
<b>9.0</b>	<b>System Checkout</b>	<b>41</b>
9.1	Before turning the power "ON" .....	41
9.2	Power-up procedure .....	41
<b>10.0</b>	<b>Troubleshooting</b>	<b>42</b>
<b>11.0</b>	<b>Indicators, Controls and Operations</b>	<b>43</b>
11.1	Common Indicators .....	44
11.2	Common Controls .....	46
11.3	Single Stage Operation .....	47
11.4	Two-Stage Operation .....	48
11.5	Positive Alarm Sequence .....	49
11.6	Enabling or Disabling the Positive Alarm Sequence .....	50
11.7	Input Types .....	50
11.8	Output Types .....	53
11.9	Evacuation Codes .....	53
11.10	Initial Power-up Sequence .....	54
<b>12.0</b>	<b>Remote Annunciator Operation</b>	<b>57</b>
12.1	Conventional Annunciators (RA-1000 Series) .....	57

12.2	Supervision .....	57
12.3	Shared Display Annunciator (RAM-300LCD) .....	57
12.4	Supervision .....	57
<b>13.0</b>	<b>Dialer Operation</b>	<b>58</b>
13.1	Event Reporting .....	58
13.2	Telephone line supervision .....	58
<b>14.0</b>	<b>Appendix A: Compatible Receivers</b>	<b>59</b>
<b>15.0</b>	<b>Appendix B: Reporting</b>	<b>60</b>
<b>16.0</b>	<b>Appendix C: Specifications</b>	<b>62</b>
16.1	FX-350 Series Specifications .....	62
16.2	FX-350 System Modules and Annunciators .....	63
<b>17.0</b>	<b>Appendix D: Power Supply and Battery Calculations</b>	<b>64</b>
<b>18.0</b>	<b>Warranty and Warning Information</b>	<b>66</b>

## List of Figures

Figure 1	Wallbox Dimensions / Mounting the FX-350 – Surface .....	19
Figure 2	Mounting the FX-350 - Flush .....	20
Figure 3	Flush Trim Detail .....	20
Figure 4	Wallbox Dimensions / Mounting the FX-351/FX-353 – Surface /Flush .....	21
Figure 5	BBX-1024DS and BBX-1024DSR Installation Instructions and Dimensions .....	22
Figure 6	Installation of Adder Modules .....	23
Figure 7	Main Fire Alarm Board Cable Connectors and Jumper Locations .....	24
Figure 8	Main Board (3 loop model) Cable Connectors and Jumper Locations .....	25
Figure 9	OCAC-304 Output Class A Converter Adder Modules .....	26
Figure 10	Polarity Reversal and City Tie Module .....	27
Figure 11	Addressable Loop Wiring - Class B or Style 4 .....	30
Figure 12	Addressable Loop Wiring - Class A or Style 6 .....	31
Figure 13	Indicating Circuit – Class B or Style Y Wiring .....	34
Figure 14	Indicating Circuit –Class A or Style Z Wiring .....	34
Figure 15	Dialer Wiring .....	35
Figure 16	Polarity Reversal and City Tie Module Terminal Connection .....	36
Figure 17	Supervision Of Auxiliary Supplies .....	37
Figure 18	Main Power Supply Connections .....	38
Figure 19	Connecting an FX-350 FACP to a 3G4010 Interface Device .....	39
Figure 20	Connecting an FACP to a 3G4010CF Interface Device outside Canada .....	40
Figure 21	LCD Display, LED indicators and control buttons .....	43
Figure 22	Evacuation and Alert Codes .....	54

## List of Tables

Table 1	FX-350 Series Comparison Chart .....	14
Table 2	Settings permitted in CAN/ULCS527 .....	30
Table 3	Loop Wiring Table .....	31
Table 4	Maximum Wiring Distances .....	32
Table 5	Input Types .....	50
Table 6	Output Types .....	53
Table 7	Ademco Contact-ID - FX-350 Series Event Codes .....	60
Table 8	Security Industries Association SIA-DCS - FX-350 Series Event Codes .....	61
Table 9	FX-350 Series Specifications .....	62
Table 10	FX-350 System Modules and Annunciators .....	63
Table 11	FX-350 Batteries .....	65

# 1.0 Industry Canada and FCC Notice

## 1.1 Notice for all FX-350 Series Built-In UDACTs Sold in Canada

Mircom's **FX-350 SERIES BUILT-IN UDACT Communicator** described in this manual is listed by Underwriters Laboratories Canada (ULC) for use in slave application in conjunction with a Listed Fire Alarm Control Panel under Standard ULC-S527-11 (Standard for Control Units for Fire Alarm Systems) and CAN/ULC-S561-13 (Standard for Installation and Services for Fire Signal Receiving Centres and Systems). These Communicators should be installed in accordance with this manual; the Canadian / Provincial / Local Electrical Code; and/or the local Authority Having Jurisdiction (AHJ).

### 1.1.1 Industry Canada Notice

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alteration made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment. Users should ensure for their own protection that the **Earth Ground** connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This is necessary both for proper operation and for protection.



**Attention:** Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate

### 1.1.2 Notice for all FX-350 Series Built-in UDACTs Sold in the U.S.A.



**Notes:** The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

The Label Identification Number for this product is US:1M8AL02BFX350. The 02B represents the REN without a decimal point (e.g., 02B is a REN of 0.2B). For earlier products, the REN is separately shown on the label.

Mircom's **FX-350 SERIES BUILT-IN UDACT Digital Communicator** described in this manual is listed by Underwriters Laboratories Inc. (ULI) for use in slave application in conjunction with a Listed Fire Alarm Control Panel under Standard 864 (Control Units for Fire Protective Signalling Systems). These Communicators comply with the National Fire Protection Association (NFPA) performance requirements for UDACTs and should be installed in accordance with NFPA 72 Chapter 4 (Supervising Station Fire Alarm System). These Communicators should be installed in accordance with this manual; the National Electrical Code (NFPA 70); and/or the local Authority Having Jurisdiction (AHJ).

### 1.1.3 FCC Notice

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the telco transformer of this equipment is a label that contains, among other information, a product identifier in the format US:1M8AL02BFX350. If requested, this number



must be provided to the telephone company. This equipment is capable of seizing the line. This capability is provided in the hardware.

**Type of Service:** The **Communicator** is designed to be used on standard device telephone lines. It connects to the telephone line by means of a standard jack called the USOC RJ-11C (or USOC FJ45S). Connection to telephone company provided coin service (central office implemented systems) is prohibited. Connection to party lines service is subject to state tariffs.

**Telephone Company Procedures:** The goal of the telephone company is to provide you with the best service it can. In order to do this, it may occasionally be necessary for them to make changes in their equipment, operations or procedures. If these changes might affect your service or the operation of your equipment, the telephone company will give you notice, in writing, to allow you to make any changes necessary to maintain uninterrupted service.

In certain circumstances, it may be necessary for the telephone company to request information from you concerning the equipment which you have connected to your telephone line. Upon request of the telephone company, provide the FCC registration number and the ringer equivalence number (REN); both of these items are listed on the equipment label. The sum of all of the REN's on your telephone lines should be less than five in order to assure proper service from the telephone company. In some cases, a sum of five may not be usable on a given line.

**If Problems Arise:** If any of your telephone equipment is not operating properly, you should immediately remove it from your telephone line, as it may cause harm to the telephone network. If the telephone company notes a problem, they may temporarily discontinue service. When practical, they will notify you in advance of this disconnection. If advance notice is not feasible, you will be notified as soon as possible. When you are notified, you will be given the opportunity to correct the problem and informed of your right to file a complaint with the FCC. Contact your telephone company if you have any questions about your phone line. In the event repairs are ever needed on the Communicator, they should be performed by Mircom Technologies Ltd. or an authorized representative of Mircom Technologies Ltd. For information contact Mircom Technologies Ltd. at the address and phone numbers shown on the back page of this document.

## 2.0 Introduction

Mircom's **FX-350** Series Analog/Addressable Fire Alarm Control Panel provides a loop for 60, 126 or three loops for 378 input and output devices, four supervised Class B or A (Style Y or Z) indicating circuits, a full range of auxiliary power supplies, and extensive common control features via its integrated LCD display and push button console. Many of its features are fully configurable utilizing the built-in configuration capability via the front panel display and switches. The panels are available with or without an optional, integrated dialer/modem (except the FX-353 version which always includes the dialer/modem), and is available (FX-351 and FX-353 - in a larger enclosure) with an internal LED display for up to 64 points (32 standard). Optional modules include Polarity Reversal and City Tie, RAX-332 LED Display Adder, and Class A Converter for indicating circuits. Semi-flush or surface mountable enclosures can be used for retrofits and on new installations. This manual covers the following panels:



**Note:** Installation of the FX-350 Series Fire Alarm Control panel should be in accordance with Canadian Electrical Code Part 1, ULC-S524 installation of Fire Alarm System, National Electrical Code NFPA 70 and NFPA 72. Final acceptance subject to the Local Authority Having Jurisdiction (AHJ).

<b>FX-350-60-DR</b>	60 pt addressable FACP (w/ dialer)
<b>FX-351-LW</b>	126 pt addressable FACP (w/ one 32 point LED display)
<b>FX-351-LDW</b>	126 pt addressable FACP (w/ dialer and one 32 point LED display)
<b>FX-351-LDR</b>	126 pt addressable FACP (w/ dialer)
<b>FX-353-LW</b>	378 pt addressable FACP without LED strip (w/ dual loop adder and one 32 point LED display)
<b>FX-353-LDR</b>	378 pt addressable FACP without LED strip (w/ dialer and dual loop adder)
<b>FX-350-60D</b>	60 pt addressable FACP (w/ dialer)
<b>FX-351-LD</b>	126 pt addressable FACP (w/ dialer)

### 2.1 Features

- The FX-350 panels support a loop of 60 or 126 analog devices and up to 3 loops of 378 analog devices, including thermal, ion, photo detectors, and contact input and output devices. Drift compensation and Auto Test features are provided for analog devices.
- Four Power Limited Class B (Style Y) indicating circuits. Each indicating circuit may be configured as Class A (Style Z) using an output Class A converter adder module. Each indicating circuit may be configured as silenceable signal, non-silenceable signal, silenceable strobes, non-silenceable strobes, or relay output. The audible signal may be Steady, Temporal Code, California Code, or March Time. The system provides the necessary protocols to sync strobes from major manufacturers.
- Two-stage, alarm verification, and waterflow retard operations available.
- Configurable Signal Silence Inhibit, Auto Signal Silence, Two-Stage Operation, and One-Man Walk Test. For UL installations, disable Auto Signal Silence.
- Subsequent Alarm, Supervisory, and Trouble operation.
- provides a regulated, supervised 21.1VDC auxiliary power supply @ 500mA max.; unfiltered, unsupervised 24V FWR power supply @ 1.7 A max and a resettable auxiliary power supply @ 300mA max.

- Relay Contacts for Common Alarm, Common Supervisory and Common Trouble all non-disconnectable and Auxiliary Alarm Relay (disconnectable).
- Output for remote trouble indicator and Buzzer (RTI).
- RS-485 Interface for RAM-300LCD Annunciators, RA-1000 Series Remote Annunciators and SRM-312 Smart Relay Modules (max total of 7 remote annunciators).
- Optional Module for City Tie and Polarity Reversal Signaling.
- Extensive transient protection
- With or without built-in UDACT (Digital Alarm Communicator Transmitter)
- Extensive and easy configuration of the panel via the integrated LCD display and keypad
- Remote dial up (with built-in UDACT version) for event log checking and/or configuration changing

## 3.0 Conventions

### 3.1 Circuits

Refers to a physical electrical interface for the analog loop, indicating signals or relays, and common alarm, supervisory, and trouble relay outputs.

### 3.2 Zone/Group

Is a logical concept for a Fire Alarm Protected Area, and will consist of at least one Circuit. Groups are used extensively in the FX-350 to facilitate annunciation of multiple input and output points on the 32 (up to 64) LED display and to facilitate bypassing of inputs and outputs.

### 3.3 Display Points

The FX-350 provides an LCD display to annunciate the status of the system and connected devices. The FX-351 and FX-353 also provides up to 64 LED display points on the panel front in addition to the LCD display. Display points may be assigned to LEDs during configuration to groups of inputs or outputs. There are two LEDs for every display point: one single color (amber) and one dual color (red/amber).

### 3.4 Wiring Styles


The analog loop can be connected in Class B (Style Y) or Class A (Style D) configurations. Changing the indicating circuits to Class A requires an OCAC-304 adder board which will convert four indicating zones from Class B (Style Y) circuits to Class A (Style Z). This is done without reducing the number of circuits.




**Note:** The Model FX-350-60-R and FX-350-60DR panels **DO NOT** recognize any devices with addresses higher than 60.

## 4.0 System Components


### 4.1 Panel Models

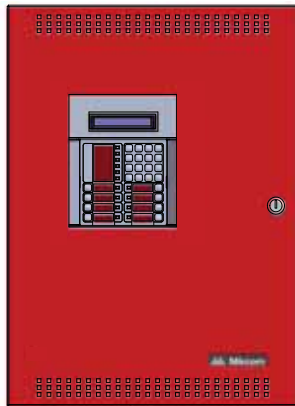

**FX-350-60-DR**  
**UL/**  
**ULC only if configured as**  
**one input zone**

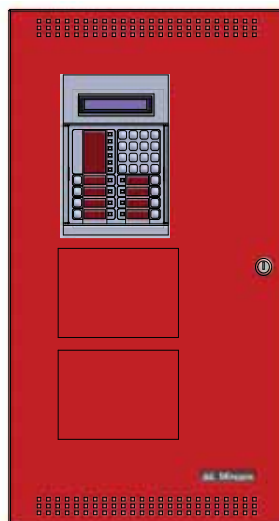

**FX-351-LDR**  
**FX-353-LDR**  
  
**UL/ULC**

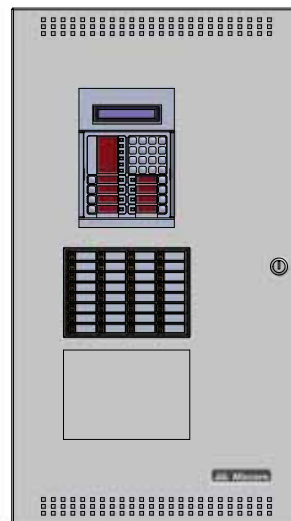

**FX-351-LW**  
**FX-351-LDW**  
**FX-353-LW**  
**UL/ULC**



**FX-350-60D**  
**FX-351-LD**  
  
**UL/ULC**

All FX-350 Series Panels have the following features:

- Multi-zone fire alarm control panel with 2 x 20 LCD display.
- Style Y or Style D analog loop(s).
- Four Power Limited Class B (Style Y) indicating circuits (max 1.7 Amps each - 5 Amps total).
- Dedicated common alarm, supervisory, trouble, and auxiliary alarm relays.
- Additional RAX-332 Display Adders can be added to provide 64 annunciation points per added.
- An optional OCAC-304 Class A converter module may be used to convert the indicating circuits to Class A (Style Z).
- Additional outputs include connections for a RTI remote trouble indicator, PR-300 Reverse Polarity Module, an RS-485 bus for connection of up to seven RAM-300LCDs, SRM-312s and RA-1000 Series annunciators.
- Auxiliary power is available in the form of 24V FWR unfiltered and unsupervised, 24VDC filtered and regulated, and resettable auxiliary power supply.


See Table 1 for the specifics of each panel.

**Table 1 FX-350 Series Comparison Chart**


Model	# of devices	# of analog loops	2 line UDACT Digital Communicator (y/n)	Door Color	# of 32 point LED Displays	Max # of LED Displays	Dual Loop Adder (y/n)
<b>FX-350-60-DR</b>	60	1	y	red	n/a	n/a	n
<b>FX-351-LW</b>	126	1	n	white	1	2	n
<b>FX-351-LDW</b>	126	1	y	white	1	2	n
<b>FX-351-LDR</b>	126	1	y	red	0	2	n
<b>FX-353-LW</b>	378	3	n	white	1	2	y
<b>FX-353-LDR</b>	378	3	y	red	0	2	y
<b>FX-350-60D</b>	60	1	y	purchased separately	purchased separately	2	n
<b>FX-351-LD</b>	126	1	y	purchased separately	purchased separately	2	n

Some models may not be available in all markets. Verify with your local distributor.


## 4.2 Output Class A converter: four circuits

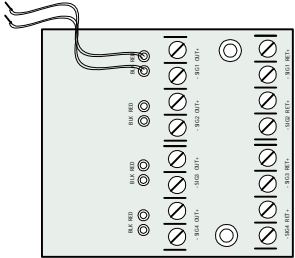	Model	Description
	OCAC-304	Output Class A converter module (four circuits)


## 4.3 Polarity reversal/city tie

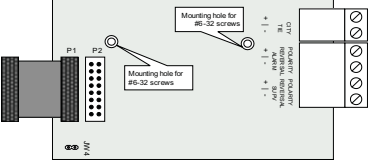	Model	Description
	PR-300	Polarity Reversal and/or City Tie Module


## 4.4 Remote Annunciator

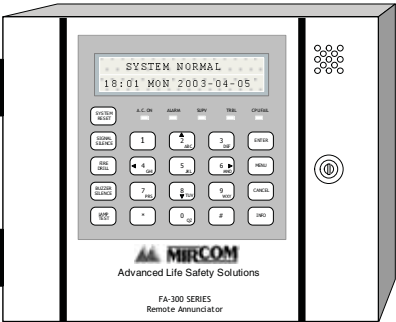	Model	Description
	RAM-300LCDR	Remote Annunciator module, LCD display, white painted box
	RAM-300LCDR	Remote Annunciator Module, LCD display, red painted box

## 4.5 Smart Relay Module

	Model	Description
	SRM-312W	Smart Relay Module (12 relays) with white enclosure
	SRM-312R	Smart Relay Module (12 relays) with red enclosure

## 4.6 RAM-216 Ancillary Annunciator

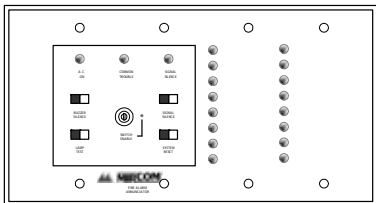	Model	Description
	RAM-216	16 Zone ancillary annunciator



## 4.7 Panel Components and System Accessories

MODEL NO.	DESCRIPTIONS
<b>ALC-252</b>	252 Point Dual Loop Addressable Adder
<b>RAX-332</b>	32 Zone Internal Display Adder (for FX-351 and FX-353 only)
<b>RAM-208/R</b>	8 LED Remote Annunciator
<b>RAM-1016/TZ</b>	Remote Annunciator with 16 bi-colored (red and yellow) LEDs. TZ version has 32 yellow LEDs for trouble indication.
<b>RAM-1032/TZ</b>	Remote Annunciator with 32 bi-colored (red and yellow) LEDs. TZ version has 32 yellow LEDs for trouble indication.
<b>RAX-1048/TZ</b>	Remote Annunciator with 48 bi-colored (red and yellow) LEDs. TZ version has 48 yellow LEDs for trouble indication.
<b>MGD-32</b>	Graphic Annunciator
<b>AGD-048</b>	Graphic Annunciator Adder Driver Board
<b>RTI-1</b>	Remote Trouble Indicator, Buzzer and LED
<b>FA-300-TRB</b>	Trim Ring For Small Enclosure (Black)
<b>FA-UNIV-TRB</b>	Universal Trim Ring For Big Enclosure (Black)
<b>BB-1001(R)</b>	Enclosure for one annunciator, white. R version is red.
<b>BB-1002(R)</b>	Enclosure for two annunciators, white. R version is red.
<b>BB-1003(R)</b>	Enclosure for three annunciators, white. R version is red.
<b>BB-1008(R)</b>	Enclosure for eight annunciators, white. R version is red.
<b>BB-1012(R)</b>	Enclosure for twelve annunciators, white. R version is red.
<b>MP-300</b>	End-of-line resistor plate, 3.9K ohm
<b>BC-160</b>	External Battery Cabinet

## 4.8 Analog/Addressable Devices

Description	Mircom Model
Ionization Smoke Detector (U.S. Model Only)	MIX-3000
Photoelectric Smoke Detector	MIX-3100
* Multi-sensor (photoelectric with supplemental rate-of-rise heat sensor)	MIX-3200
Heat Detector	MIX-3300
Bases	Mircom Model
4 inch Standard Base	MIX-2000
6 inch E-Z Fit Base	MIX-2001
6 inch Base with Relay	MIX-2001R
6 inch Base with Sounder	MIX-2001H
6 inch Base with Temporal Tone Sounder	MIX-2001HT
Ancillary Modules	Mircom Model
Priority Monitor Module	MIX-100P
Mini Priority Monitor Module	MIX-101P
Single Relay Output Module (1 Form C Contacts, 2 Gang Mount)	55000-820
Supervised Control Module	MIX-100S
Isolator c/w Mounting Base	MIX-100X (Kit) 100XH (Isolator) 100XB (Base)
Addressable Duct Detectors	Mircom Model
Ionization Duct Smoke Detector (UL Listed)	MIX-DH3000
Photoelectric Duct Smoke Detector (UL Listed)	MIX-DH3100
Ionization Duct Smoke Detector with relay (UL Listed)	MIX-DH3000R
Photoelectric Duct Smoke Detector with relay (UL Listed)	MIX-DH-3100R
Addressable Pull Stations	Mircom Model
Addressable Single Stage Pull Station	MS-401ID(U)
Addressable Two Stage Pull Station (Canadian Model Only)	MS-402ID
Addressable Single Stage Single Action Pull Station	MS-701ID(U)
Addressable Two Stage Single Action Pull Station	MS-702ID(U)
Addressable Single Stage Dual Action Pull Station	MS-710ID(U)

- \* Unit employs an integral heat sensor; however it must not be used as a regular heat detector. Refer to the product data sheet for detailed functionality, operation and application.  
Manual configuration for the MIX-3200 is NOT PERMITTED. This device must be configured via the AUTO CONFIG.

## 5.0 Mechanical Installation

### 5.1 Installing the Enclosures

Install the FX-350 Series Fire Alarm Panel enclosure as shown below. Mount the enclosure using the four mounting holes and the screws provided.



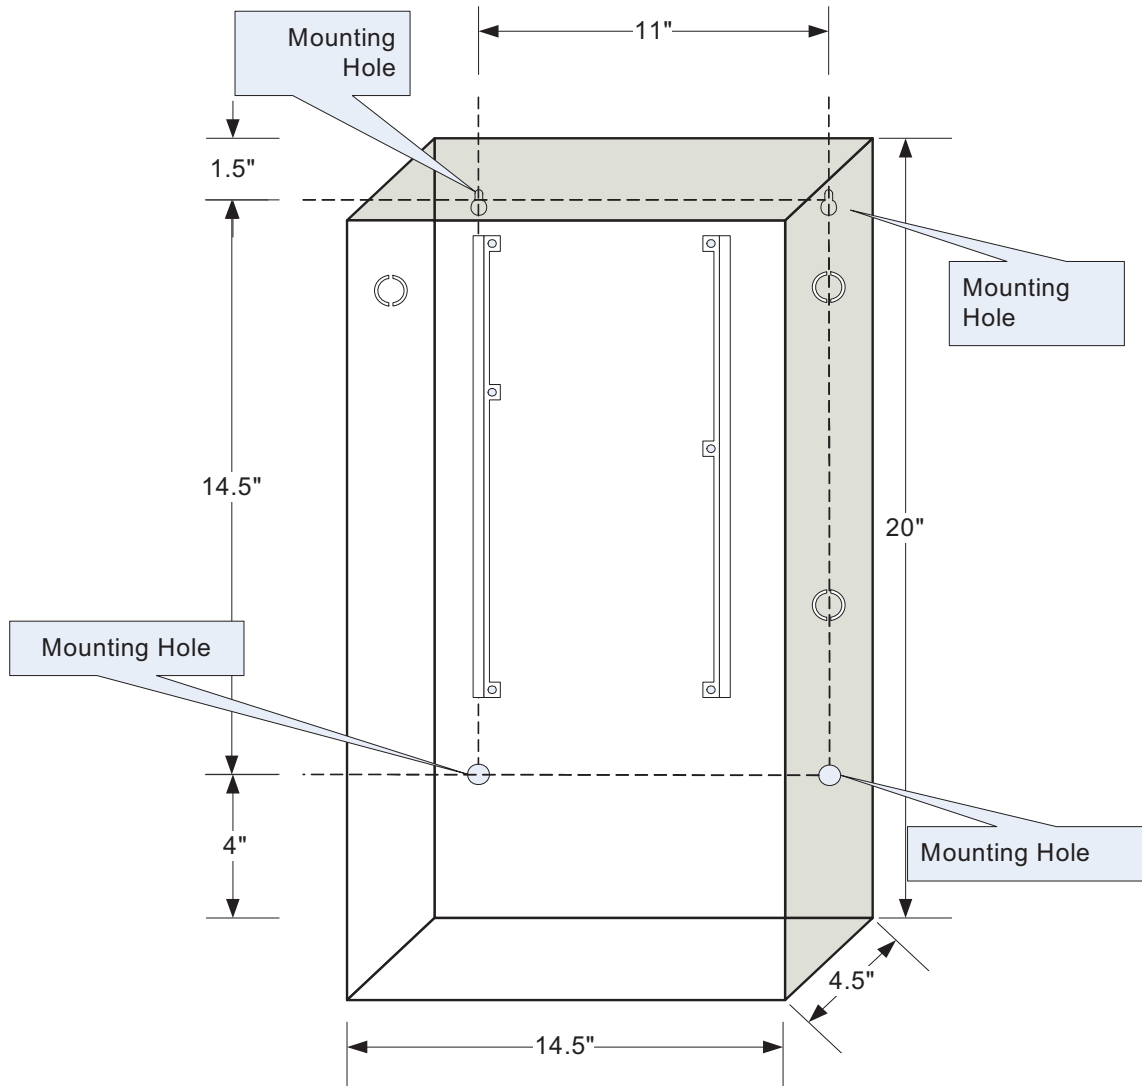


Figure 1 Wallbox Dimensions / Mounting the FX-350 – Surface

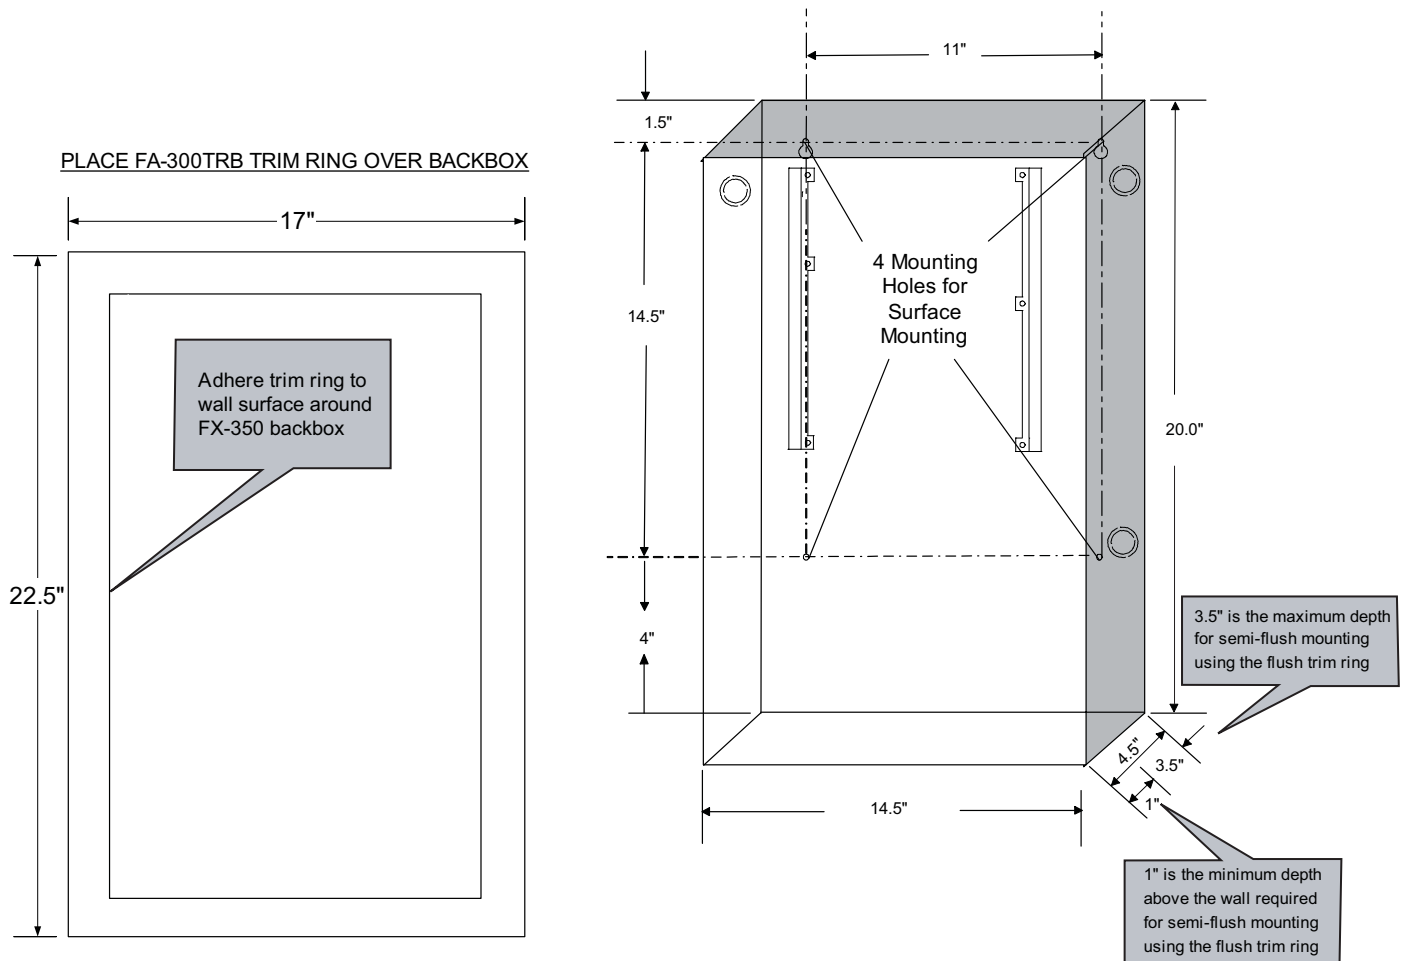


**Figure 2 Mounting the FX-350 - Flush**

Figure 3 below shows a cross-section of the semi-flush mounted backbox and the trim ring. **Make sure to allow a minimum depth of 1" above the wall surface for proper door opening.**

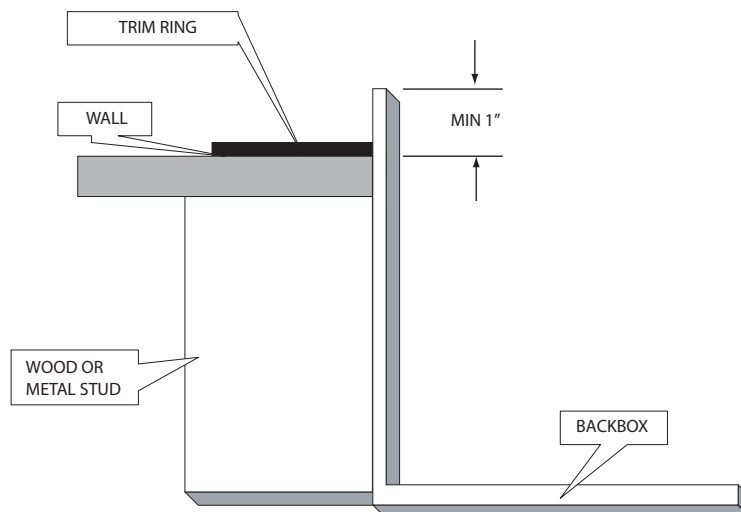

**Figure 3 Flush Trim Detail**

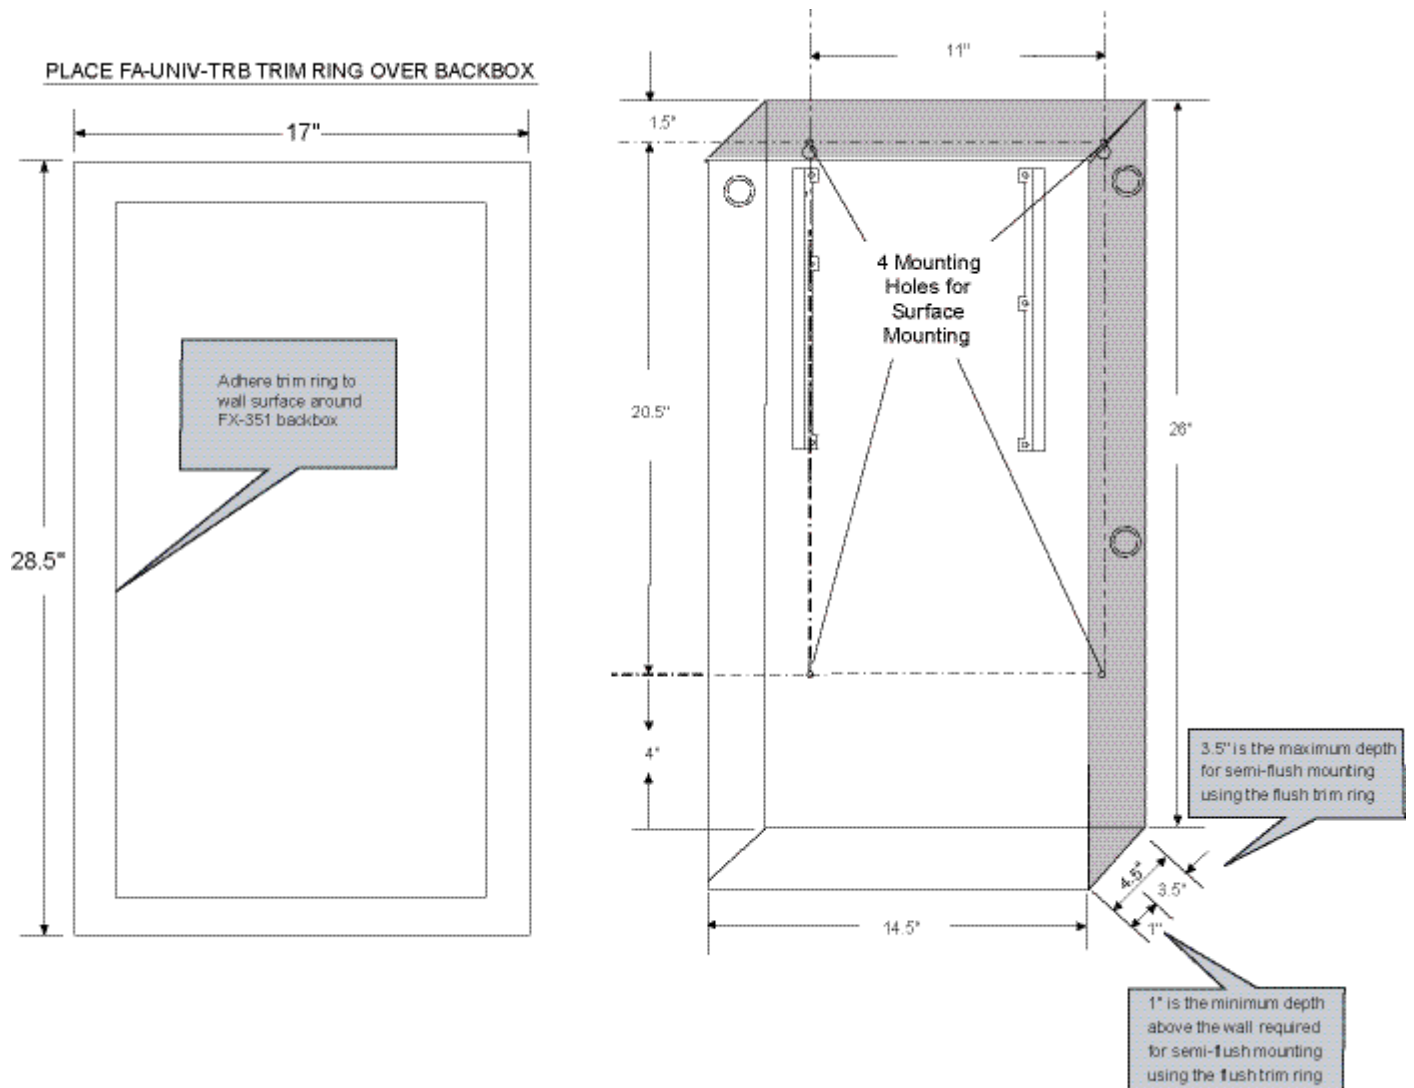

**Figure 4 Wallbox Dimensions / Mounting the FX-351/FX-353 – Surface /Flush**


*i*

**Note:** See Figure 3 for mounting the trim ring.

## 5.2 BBX-1024DS and BBX-1024DSR Mechanical Installation

The BBX-1024DS and BBX-1024DSR are suitable for flush or surface mounting, and have a built-in trim ring.

<b>Dimensions of Enclosure (minus built in trim ring)</b>	14.5" x 4.2" x 26"
<b>Distance between horizontal mounting screws</b>	12"
<b>Distance between vertical mounting screws</b>	23.5"
<b>Complete Dimensions of Enclosures</b>	16.3" x 5.5" x 27.5"

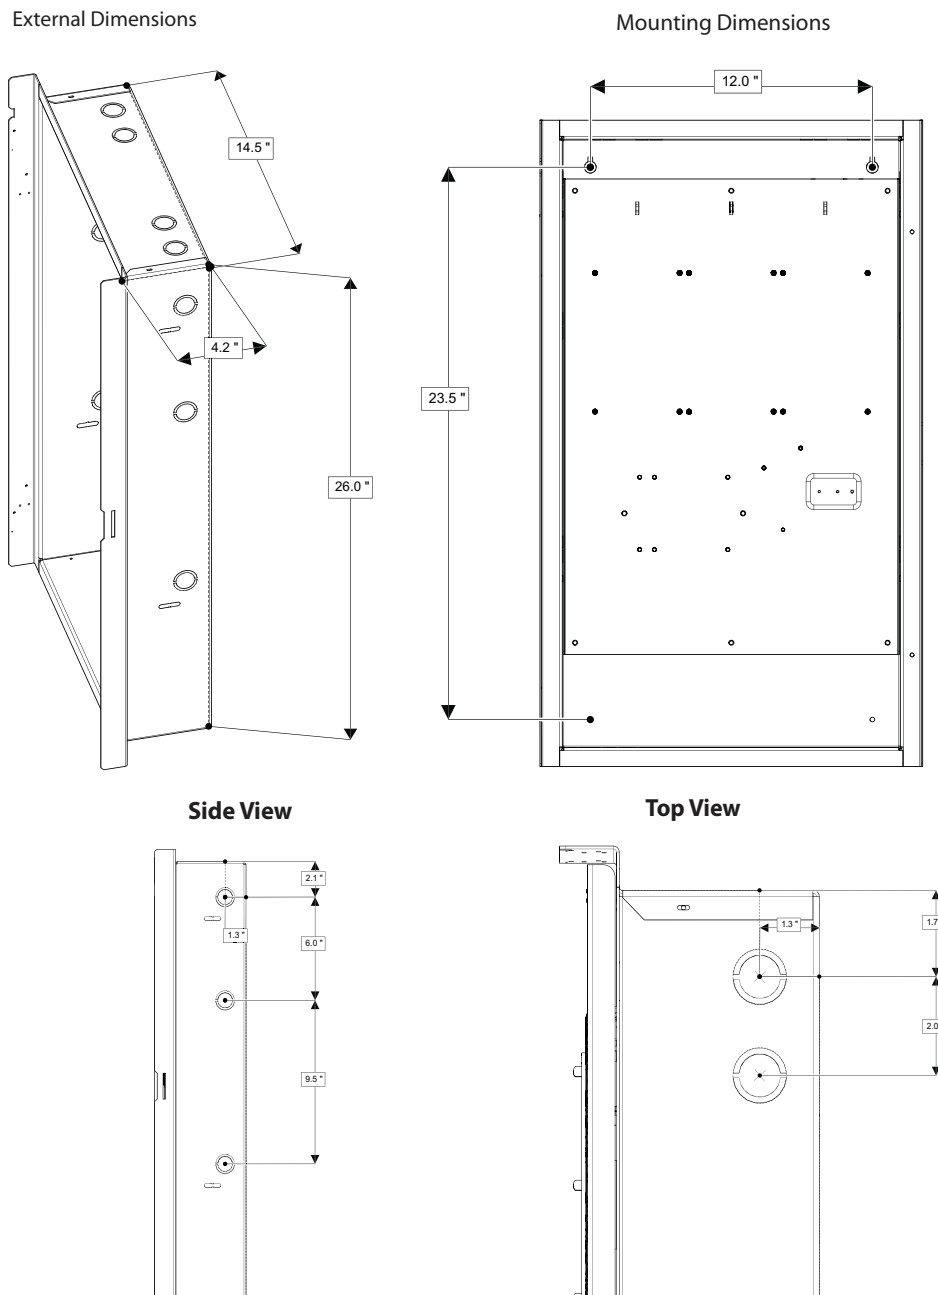

**Figure 5 BBX-1024DS and BBX-1024DSR Installation Instructions and Dimensions**



## 6.1 Cable and Jumper Connections for Main Board and Adder Modules


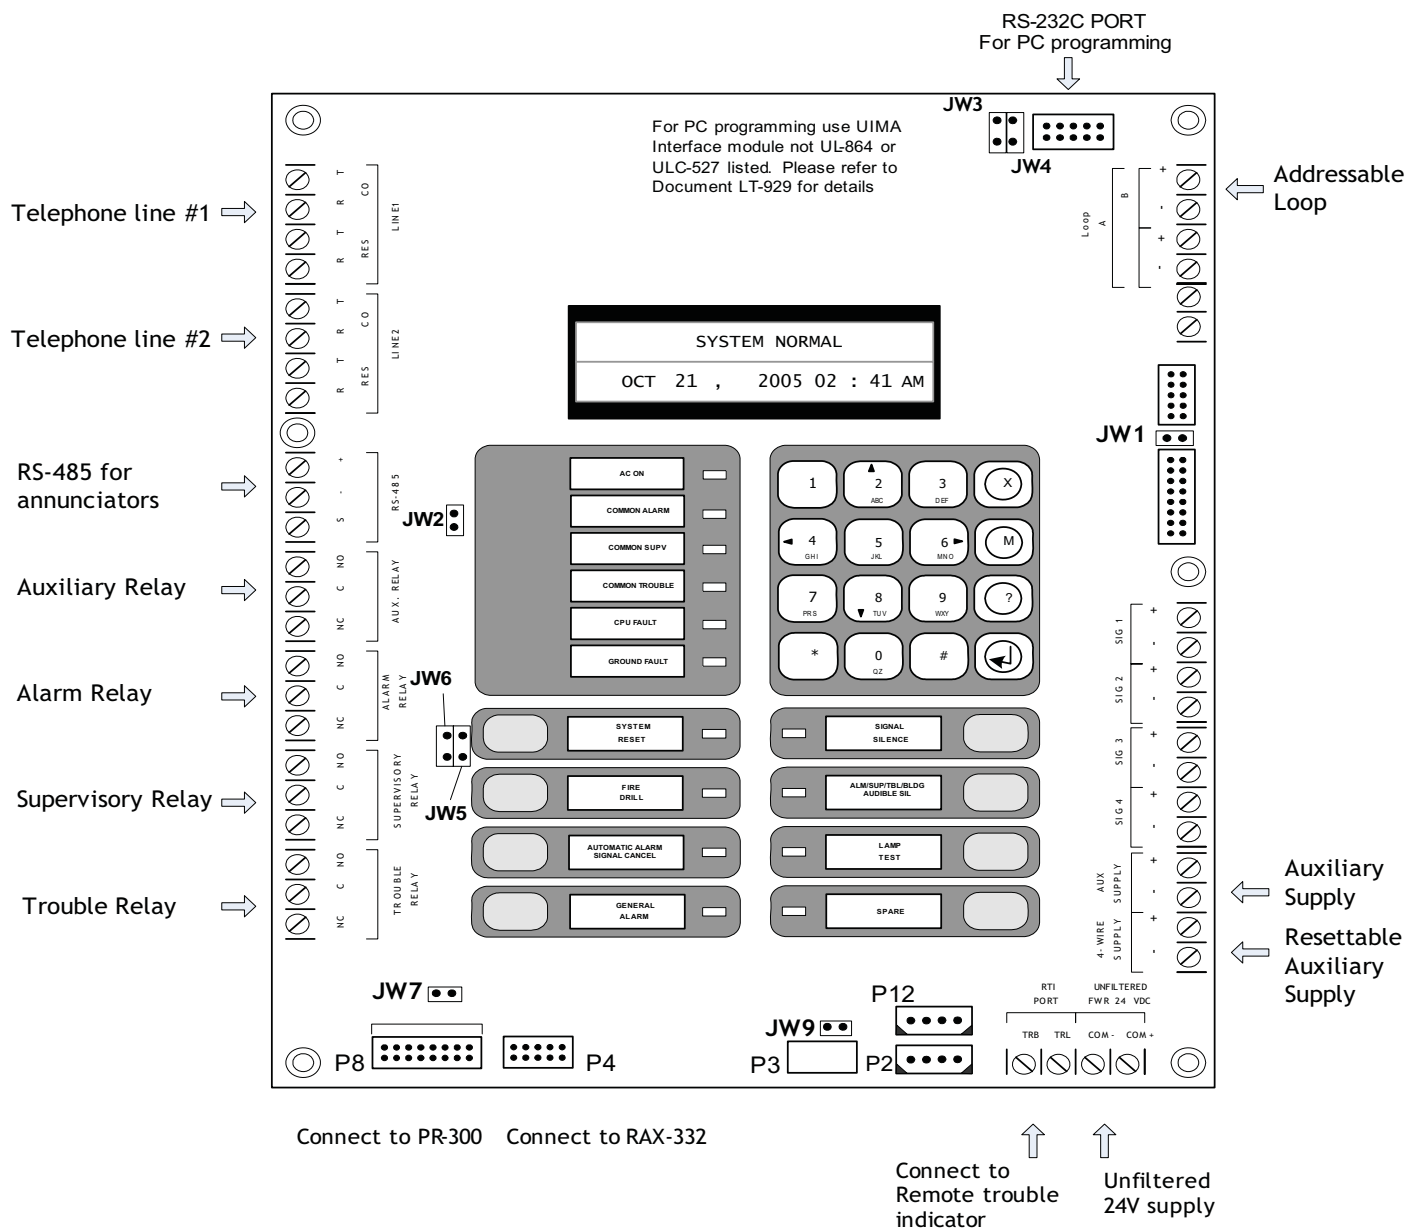


Figure 7 Main Fire Alarm Board Cable Connectors and Jumper Locations



Figure 8 below shows the main board for the 3 loop addressable model. It is the same as the single loop model with two additional addressable loops.

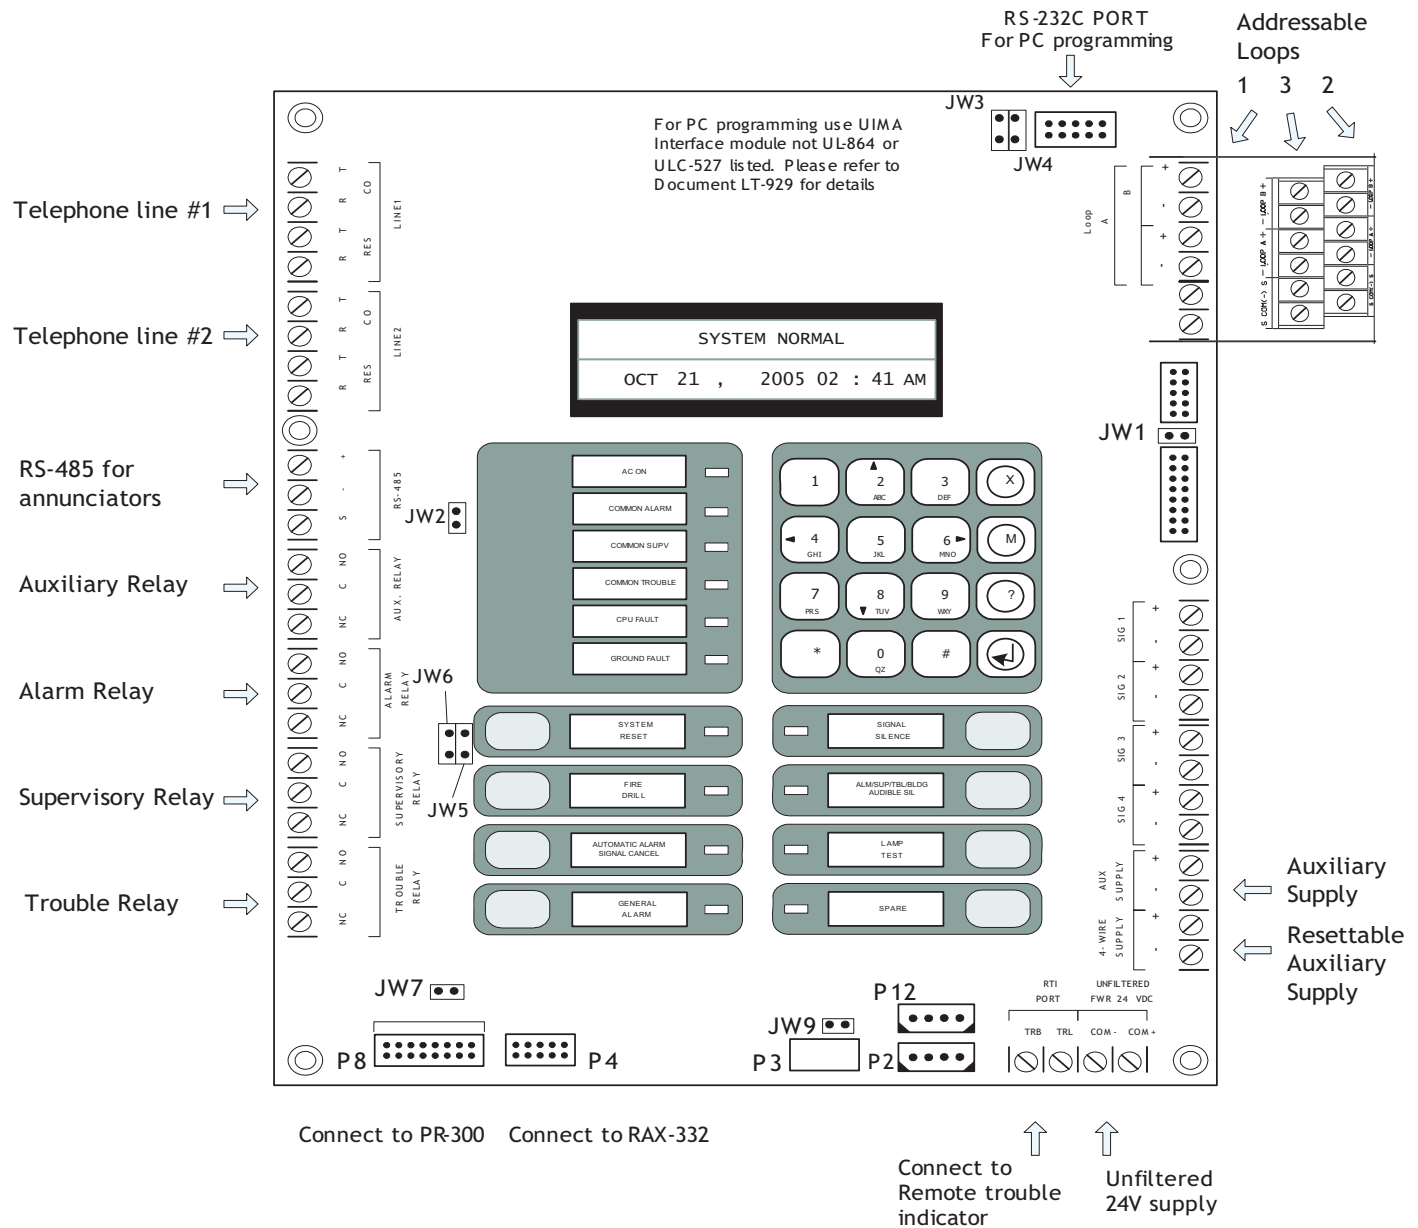


**Figure 8 Main Board (3 loop model) Cable Connectors and Jumper Locations**

## 6.2 Connectors and Jumpers on the Main Fire Alarm Board

- |             |   |
|-------------|---|
| <b>P8</b>   | Cable from <b>P1</b> of the <b>PR-300 Polarity Reversal and City Tie Module</b> connects here. Otherwise not used.  |
| <b>P4</b>   | Cable from connector <b>P1</b> of the <b>RAX-332 Display Adder Module</b> connects here. Otherwise not used.  |
| <b>JW1</b>  | On the Main Fire Alarm Module, this jumper is not used, open.   |
| <b>JW2</b>  | Remove this jumper if a remote annunciator is used.   |
| <b>JW3</b>  | Not used, open.   |
| <b>JW4</b>  | Not used, open.   |
| <b>JW5</b>  | Normally open. Place jumper here and power down (AC and batteries) and power back to restore Master Passcode. After reset, remove jumper and leave normally open. |
| <b>JW6</b>  | Normally open to BLOCK <u>remote</u> configuration via modem. Place jumper here to ALLOW for remote configuration.  |
| <b>JW7</b>  | On the Main Fire Alarm Module, this jumper must be removed if a <b>PR-300 Polarity Reversal and City Tie Module</b> is installed.                                 |
| <b>JW8</b>  | Not used, open.   |
| <b>JW9</b>  | Not used, open.   |
| <b>JW10</b> | Not used, open.   |
| <b>JW11</b> | Not used, open.   |
| <b>JW12</b> | Not used, open.   |

### 6.3 OCAC-304 Output Class A Converter Adder Module

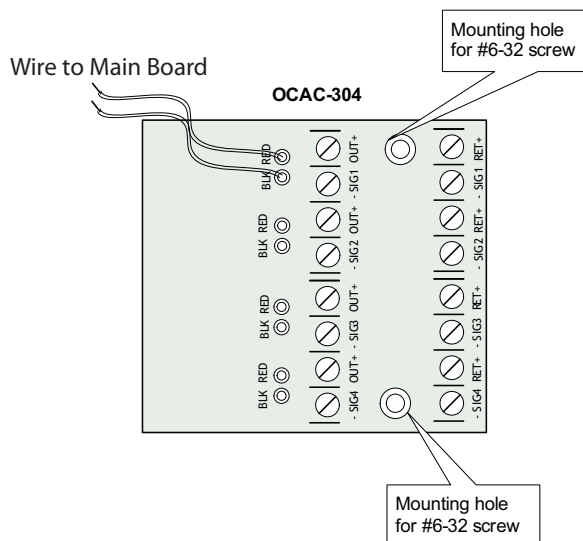


**Figure 9 OCAC-304 Output Class A Converter Adder Modules**

Indicating circuits must be wired from the OCAC-304 to the main Fire Alarm board. For example indicating circuit 1 positive (red wire) and negative (black wire) is wired from the Class A Converter Module to the positive and negative terminals of Indicating circuit 1 on the Main Fire Alarm board.

The actual indicating zone is wired from the SIGNAL OUT positive and negative to the signaling devices and then wired back to the SIGNAL RET positive and negative.

## 6.4 Polarity Reversal and City Tie Module (Model PR-300)

Mount the PR-300 on the left side panel of the backbox with the two screws provided, refer to Figure 10.

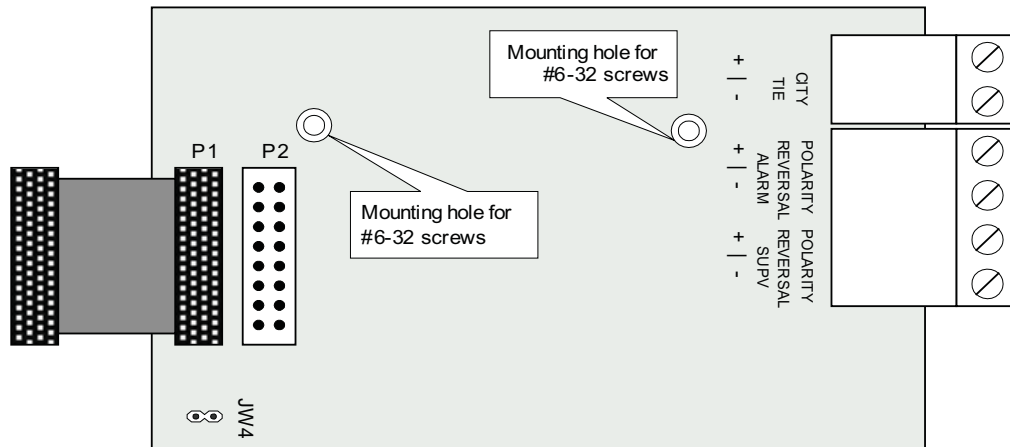

**Figure 10 Polarity Reversal and City Tie Module**

### 6.4.1 PR-300 Cable and Jumper Settings

The following hardware configuration must be performed before installing the PR-300.

- P1** Cable connects to **P8** (bottom left-hand corner) on the **Main Fire Alarm Board**.
- JW4** Not used. Keep jumper intact.

The Alarm Transmit signal to the PR-300 can be programmed to turn OFF when signal silence is active. This allows the City Tie Box to be manually reset. On subsequent alarms the silenceable signals will resound and the City Tie Box will be retriggered.

The Trouble Transmit signal to the PR-300 can be programmed to delay AC power fail 0, 1, 2, or 3 hours if this is the only system trouble.

## 6.5 RAX-332 Display Adder Module

The RAX-332 Display Adder Module is used only with the FX-351 and FX-353 Fire Alarm Panels. No jumpers or other physical configuration steps are required to install this second RAX-332 Display Adder Module. Remove the blank cover plate from the front door and install the RAX-332 with the clear cover in the opening with the hardware provided. Disconnect main and standby power and connect the cable of the second RAX-332 into the open, remaining header of the existing RAX-332. The additional LEDs will be available for configuration as LEDs 33 to 64, when the system power is restored.

## 7.0 Circuits and Devices

### 7.1 Addressable/Analog Devices

The FX-350 supports up to 3 loops of addressable/analog devices. The device loop can be used to connect up to 60, 126 or 378 analog devices and addressable input or output modules on an unshielded twisted pair (UTP). The devices must be compatible with the Mircom device protocol.

The loop interface software continuously supervises the devices on its loop against those found during configuration for the following conditions:

- device missing
- unconfigured device responding
- two or more devices responding to the same address
- wrong device type

A communication or addressing error on a device is reported as a trouble on the associated zone LED if configured.

The addressable loop can be configured for class A or B operation. "T-tapping" is allowed (Refer to device installation documentation for details).

Devices on the loop have an optional LED which normally flashes when the device is polled and goes ON steady when the device is active (alarm for an input device or active for an output device). The flashing of the LED on polling for sensors can be suppressed during configuration. For input or output modules, the LED always flashes when polling. The software limits the maximum number of the devices which can have their LED turned ON when active to fifteen (15).

Certain devices are designed to support an optional external LED, which operates when the LED on the device is activated. Remote/external LEDs must NOT be used on this system. The panel can provide up to 350mA of current to the devices on the loop. A maximum line loss of 5 volts is permitted, so the loop distance, wire size, and maximum number of devices are limited by this constraint.

The devices should be installed using unshielded twisted pair (UTP). The total line drop on the loop must not exceed 5 volts at the last device. The calculations required to determine the maximum permissible loop wiring distance with various combinations of devices is relatively complicated, and when isolators are used, includes a consideration of device inrush currents which must not exceed 20mA for a single isolator. In no case should more than twenty devices be connected to a single isolator. To simplify the calculation process, please utilize the loop calculator program located on the Mircom website at <http://www.mircom.com> in order to determine maximum loop lengths, number of devices, and wire sizes etc.

It is also important to note that the device LEDs present a significant extra load on the loop which must be considered in calculating permissible loop lengths, battery capacities, etc. Please refer to the device Installation Instructions and other documentation provided with the addressable devices, bases, and isolators for further information. **The system will automatically limit the maximum number of device LEDs which can be illuminated to 15.**

## 7.2 Analog Devices

The system supports Mircom MIX-3000 Series photo, ion, multi-sensor and thermal (heat) type analog detectors, as well as contact input and output devices. The detectors may be configured as non-verified or verified alarm inputs. To determine an alarm condition, the system polls the analog device and compares the analog value against stored thresholds for pre-alarm and alarm conditions.

A range of thresholds is provided for each type of analog device (except for contact devices), corresponding to the agency approved range of threshold for a particular device type. Each device can be individually configured to a value in the range of threshold for “day time” and one for the “night time” or after hours operation; i.e. a device may be configured to a low sensitivity for “day time” and high sensitivity at “night time”. The day time threshold will be used unless the after hours operation is active.

### 7.2.1 Drift Compensation

The FX-350 will automatically adjust for gradually increasing affects of dust and other accumulations of dirt in the detectors. It will adjust the thresholds to compensate for a detector going dirty according to the gradual change in the normal clean air value received. When it can no longer compensate for an increasingly dirty detector, a dirty detector trouble is indicated for that device.

### 7.2.2 Auto Test

Periodically each detector is commanded to return an alarm value to test its ability to alarm. If it fails the test, a trouble is indicated on that device.

## 7.3 Contact Inputs

Contact input modules on the addressable/analog device loop may be configured as any of the following input types:

- non-verified alarm inputs
- waterflow inputs
- non-latching supervisory inputs
- latching supervisory inputs
- monitor inputs
- trouble only inputs
- remote switch inputs

## 7.4 Contact Outputs

Contact output modules on the addressable/analog device loop may be configured as any of the following output types:

- signals
- strobes
- relay outputs

Analog devices may be installed with relay or sounder bases. The outputs of these bases are activated when the device active LED turns ON steady in response to an alarm. The command to activate the output is separate from the command that activates the LED and they are not subject to the same restrictions as the LED. Output modules configured as signals are not stroked by software at the current signal rate. When the system commands them to be either in alert or in evacuation, the panel will simply activate them continuously. It is possible to provide stroked operation by connecting the signal power to a conventional signal output which is stroking at the correct rate when the device is active. Depending on the device, the system can detect open and short troubles and report it as an output circuit trouble.

## 8.0 Field Wiring

Table 2 Settings permitted in CAN/ULCS527

NOTICE TO USERS, INSTALLERS, AUTHORITIES HAVING JURISDICTION, AND OTHER INVOLVED PARTIES			
This product incorporates field-programmable software. In order for the product to comply with the requirements in CAN/ULCS527, Standard for Control Units for Fire Alarm Systems, certain programming features or options must be limited to specific values or not used at all as indicated below.			
Program feature or option	Permitted in CAN/ULCS527? (Y/N)	Possible settings\methods	Settings permitted in CAN/ULCS527
FX-350-60-DR	Y	Sequential Display	Fire Alarm panel configured as one zone (common input tag designation).
System Reset and Signal Silence on RAM-208/216	N	JW4 (Orange Wire) Intact = Buzzer silence & Lamp Test local function only. System Reset & Signal Silence are disabled.  Cut Jumper (Orange Wire) to have all remote functions operate.	Leave JW4 intact on RAM-208/216

### 8.1 Main Fire Alarm Board Field Wiring

Wire devices to the addressable loop as shown in Figure 11 for Class B (Style 4) or Figure 12 for Class A (Style 6). Refer to Table 3 for loop wire gauges. **Wire devices to addressable loops 2 and 3, if available, in the same manner.**

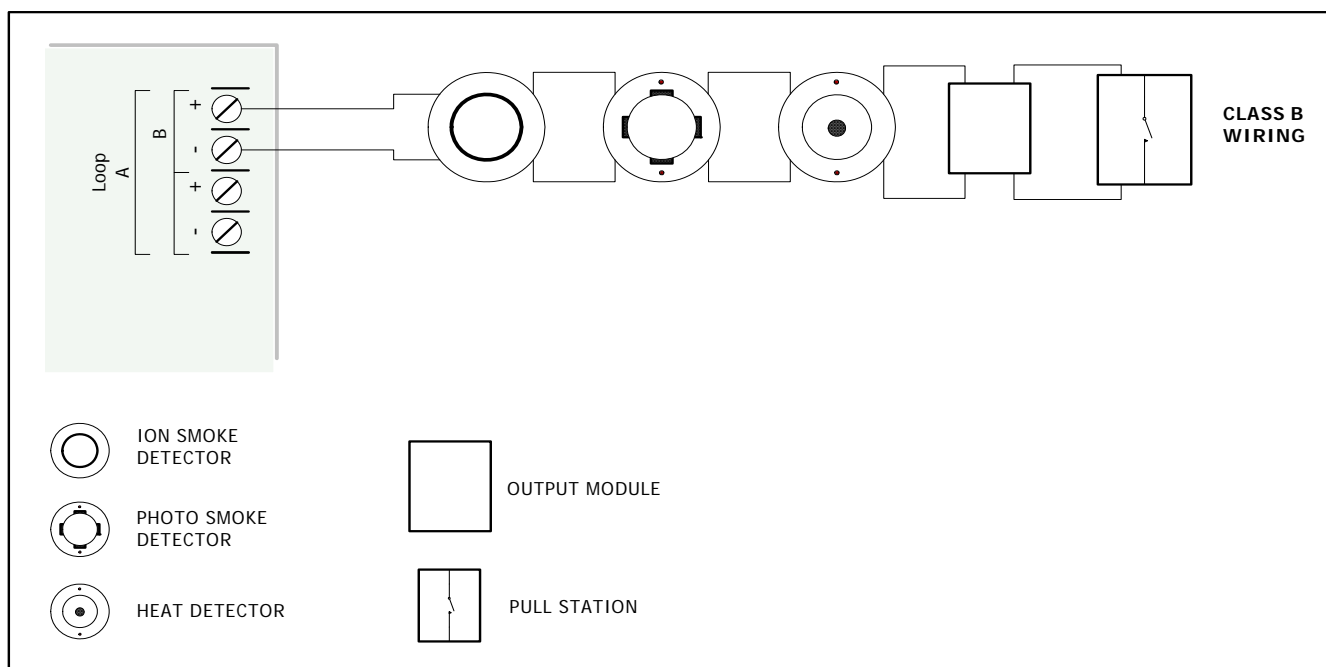


Figure 11 Addressable Loop Wiring - Class B or Style 4

**Table 3 Loop Wiring Table**

UNSHIELDED TWISTED PAIR WIRE GAUGE	LOOP TOTAL (OUT AND IN) WIRE RUN	
AWG	FEET	METRES
12	20,000	6098
14	15,942	4859
16	9960	3036
18	6265	1910

This Loop Wiring Table is for reference only and should not be used without a detailed loop calculation.

Maximum Loop Current: 350 mA


Maximum Loop Resistance: 35 subtract 0.2 Ohms per isolator.

Maximum Loop Capacitance: 0.5  $\mu$ F

Maximum Number of Isolators is 40.

## 8.2 Loop Isolators

To limit the number of addressable devices compromised by a short on the addressable loop, isolators (MIX-100X, 100XH, or 100XB) may be used to isolate the affect of the short circuit. If the impact of a short circuit must be limited to only one device, an isolating base must be used for each detector. A maximum of twenty devices can be connected between isolators, or between the panel and the first isolator, as long as the maximum in-rush current for the devices on one segment of the loop does not exceed 20 mA. Refer to the installation instructions for addressable devices for additional details.

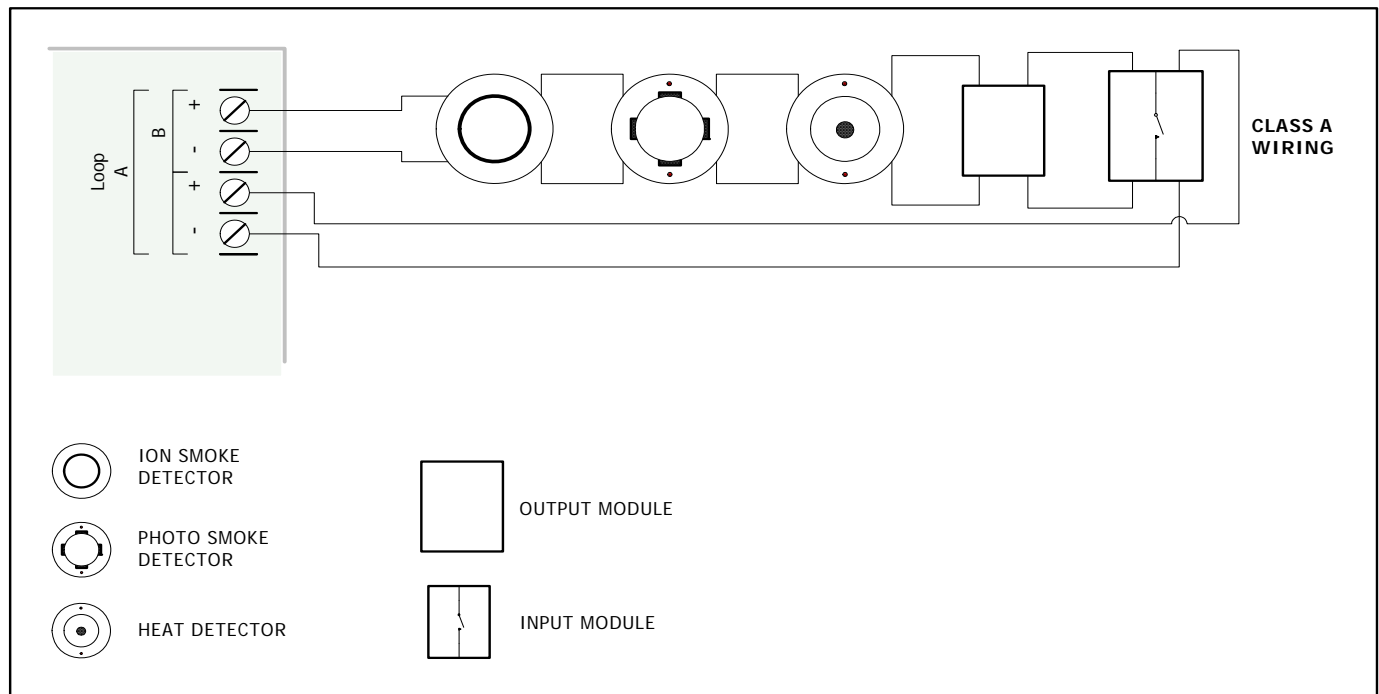
**Figure 12 Addressable Loop Wiring - Class A or Style 6**

## 8.3 Loop Operation

When there is a short circuit on the Class A loop with isolators installed, the isolators isolate the shorted fault, the panel detects it as an open loop and generates an open loop trouble.

When a Class A loop is opened there may be a few missing devices reported by the panel which will be restored once the panel has established the Class A connection.



**Note:** When there is an "Open loop trouble" look for both open and shorts on the loop. As a guide line the isolators which are activated in response to a short will have their LED ON; look for the short between the two isolators with their LEDs ON.

## 8.4 Indicating (Powered Output) Circuits

Powered output circuits can be configured as signal, strobe or relay outputs. Powered output circuits are supervised while they are not active for both open circuits and shorts. The circuit will not actually be activated if there is a short trouble on the circuit. It will be activated if an open trouble is indicated. Since open circuit supervision does not operate while the circuit is in alarm, if the circuit was in trouble before it was activated, it will still indicate trouble while active. The trouble condition will be re-evaluated when supervision resumes.

Output circuits configured as strobes can have sync protocol for synchronization if configured. Certain strobe and strobe/horns models of the following manufacturers are supported.

- All normal non-synchronized horns
- Faraday
- System Sensor
- Wheelock
- Gentex
- Mircom

When configured as normal, the output circuit is ON continuously when activated and does not use any sync protocol. When configured as non-silenceable strobes, the strobes cannot be silenced, but the horn can be silenced by pressing the 'signal silence' button

If the strobe is configured as silenceable strobe both the horn and the strobe are silenced (stopped) by pressing the 'signal silence' button

## 8.5 Indicating Circuit Wiring

The FX-350 Series Addressable Fire Alarm Panel supports Class B (Style Y) and Class A (Style Z) wiring for its indicating circuits. Each circuit is supervised by a 3.9K End-of-Line resistor. Each indicating circuit provides up to 1.7 Amperes, total 5 Amperes of current maximum if no auxiliary power is used. Wire indicating circuits as in Figure 11 for Class B (Style Y) or as in Figure 12 for Class A (Style Z).

**Table 4 Maximum Wiring Distances**

TOTAL SIGNAL LOAD	MAXIMUM WIRING RUN TO LAST DEVICE (ELR)								MAX. LOOP RESISTANCE
	18AWG		16AWG		14AWG		12AWG		
Amperes	ft	m	ft	m	ft	m	ft	m	Ohms
0.06	2350	716	3750	1143	6000	1829	9500	2895	30
0.12	1180	360	1850	567	3000	915	4720	1438	15
0.30	470	143	750	229	1200	366	1900	579	6



Table 4 Maximum Wiring Distances

TOTAL SIGNAL LOAD	MAXIMUM WIRING RUN TO LAST DEVICE (ELR)								MAX. LOOP RESISTANCE
	18AWG		16AWG		14AWG		12AWG		
0.60	235	71	375	114	600	183	950	289	3
0.90	156	47	250	76	400	122	630	192	2
1.20	118	36	185	56	300	91	470	143	1.5
1.50	94	29	150	46	240	73	380	115	1.2
1.70	78	24	125	38	200	61	315	96	1.0

*i*

**Notes:** For Class A wiring the resistance in ohms is multiplied by two.

Maximum voltage drop should not exceed 1.8 volts.

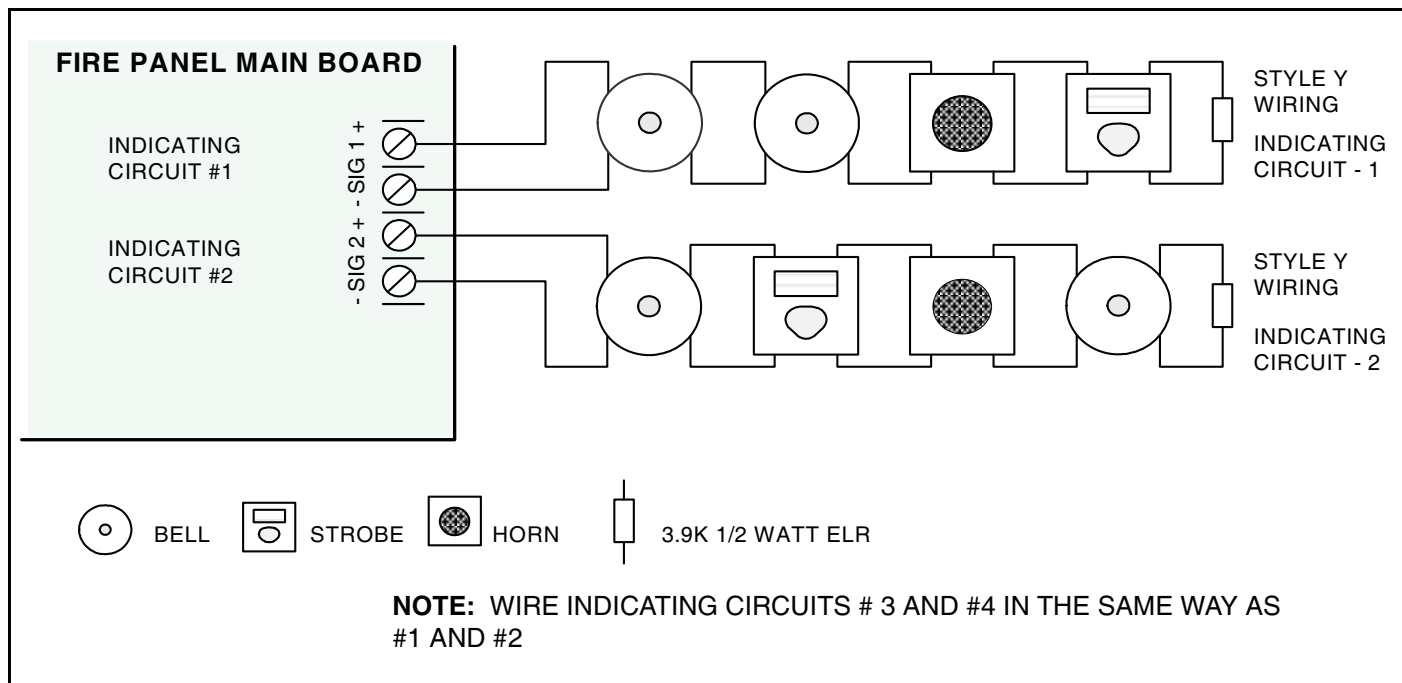


Figure 13 Indicating Circuit – Class B or Style Y Wiring


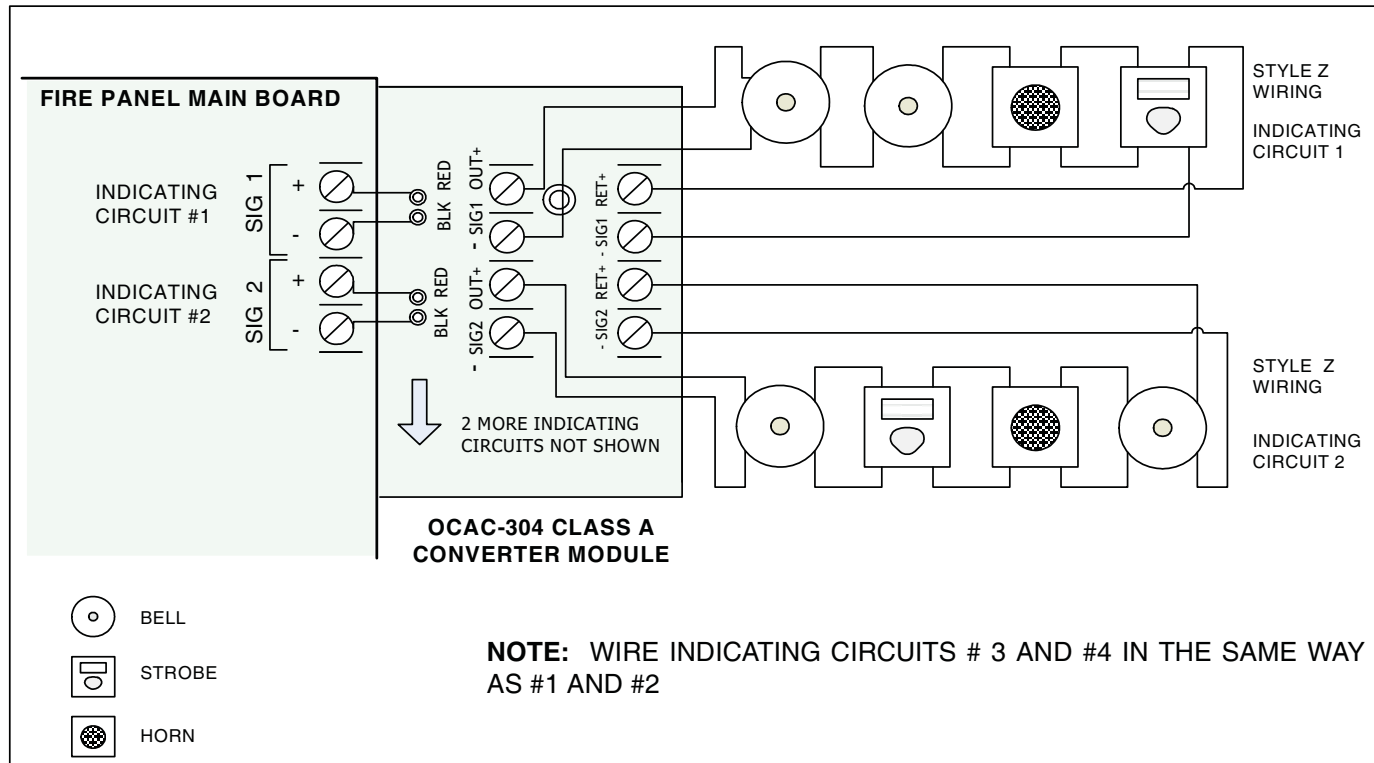


Figure 14 Indicating Circuit –Class A or Style Z Wiring

## 8.6 Dialer Wiring

If you have Fire Alarm Panel model **FX-350-60-DR**, **FX-350-126-DR**, **FX-350-378-LDR**, **FX-351-LDW** or **FX-353-DR**, there is a dialer on board and terminals marked Line 1 and Line 2 must be wired as shown in Figure 15 below. Terminals are located in the top left hand corner of

the main fire alarm board, from the top down. Refer to Figure 6 and Figure 7 for terminal locations.

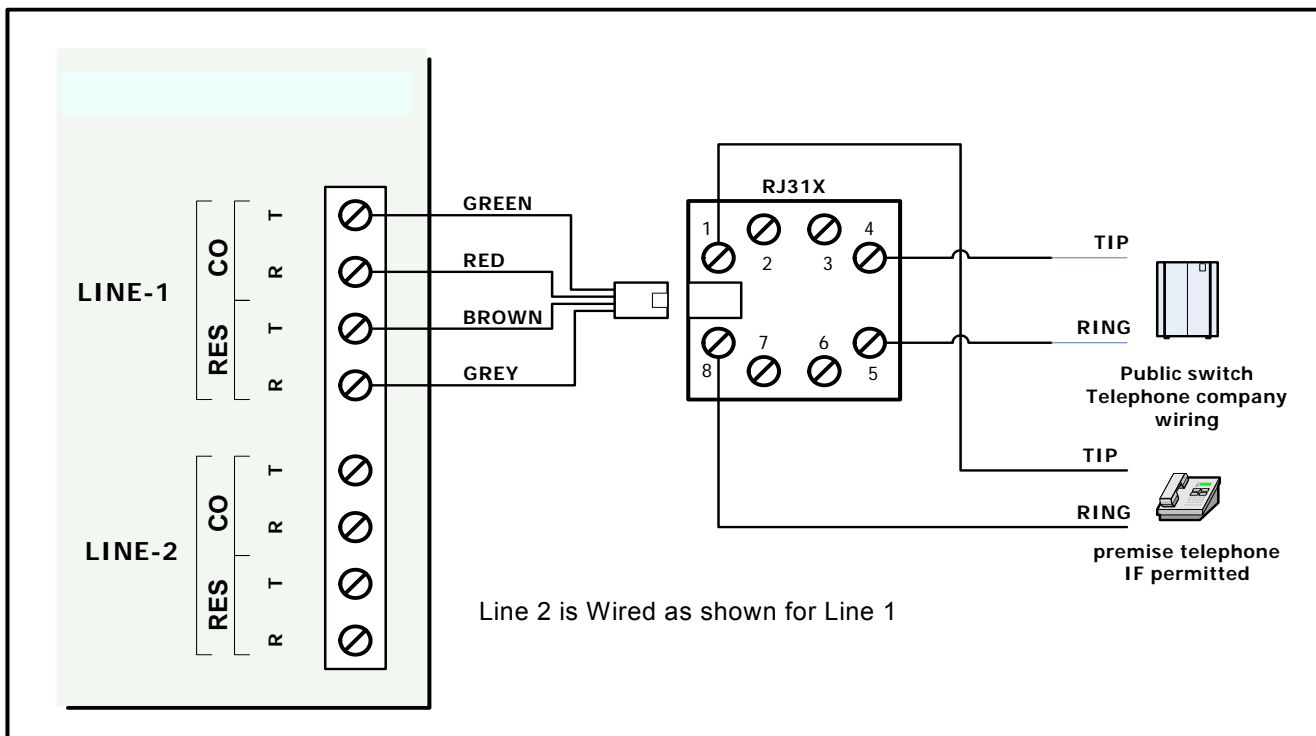


**Figure 15 Dialer Wiring**

Refer to Chapter 13.0 Dialer Operation on page 58 and Chapter 15.0 Appendix B: Reporting on page 60 for more information regarding the built-in dialer.

## 8.7 Polarity Reversal and City Tie Module (PR-300) Wiring

Wire the PR-300 Polarity Reversal and City Tie Module (if used) as shown in Figure 16 below. Power Limited cable type FPL, FPLR or FPLP must be used. For USA installation, the installer must use **Atlantic Scientific (Tel: 407-725-8000), Model #24544 Protective Device**, or similar **UL-Listed QVRG secondary protector**, as shown. For use in Canada, the Protective Device is not required but still recommended.

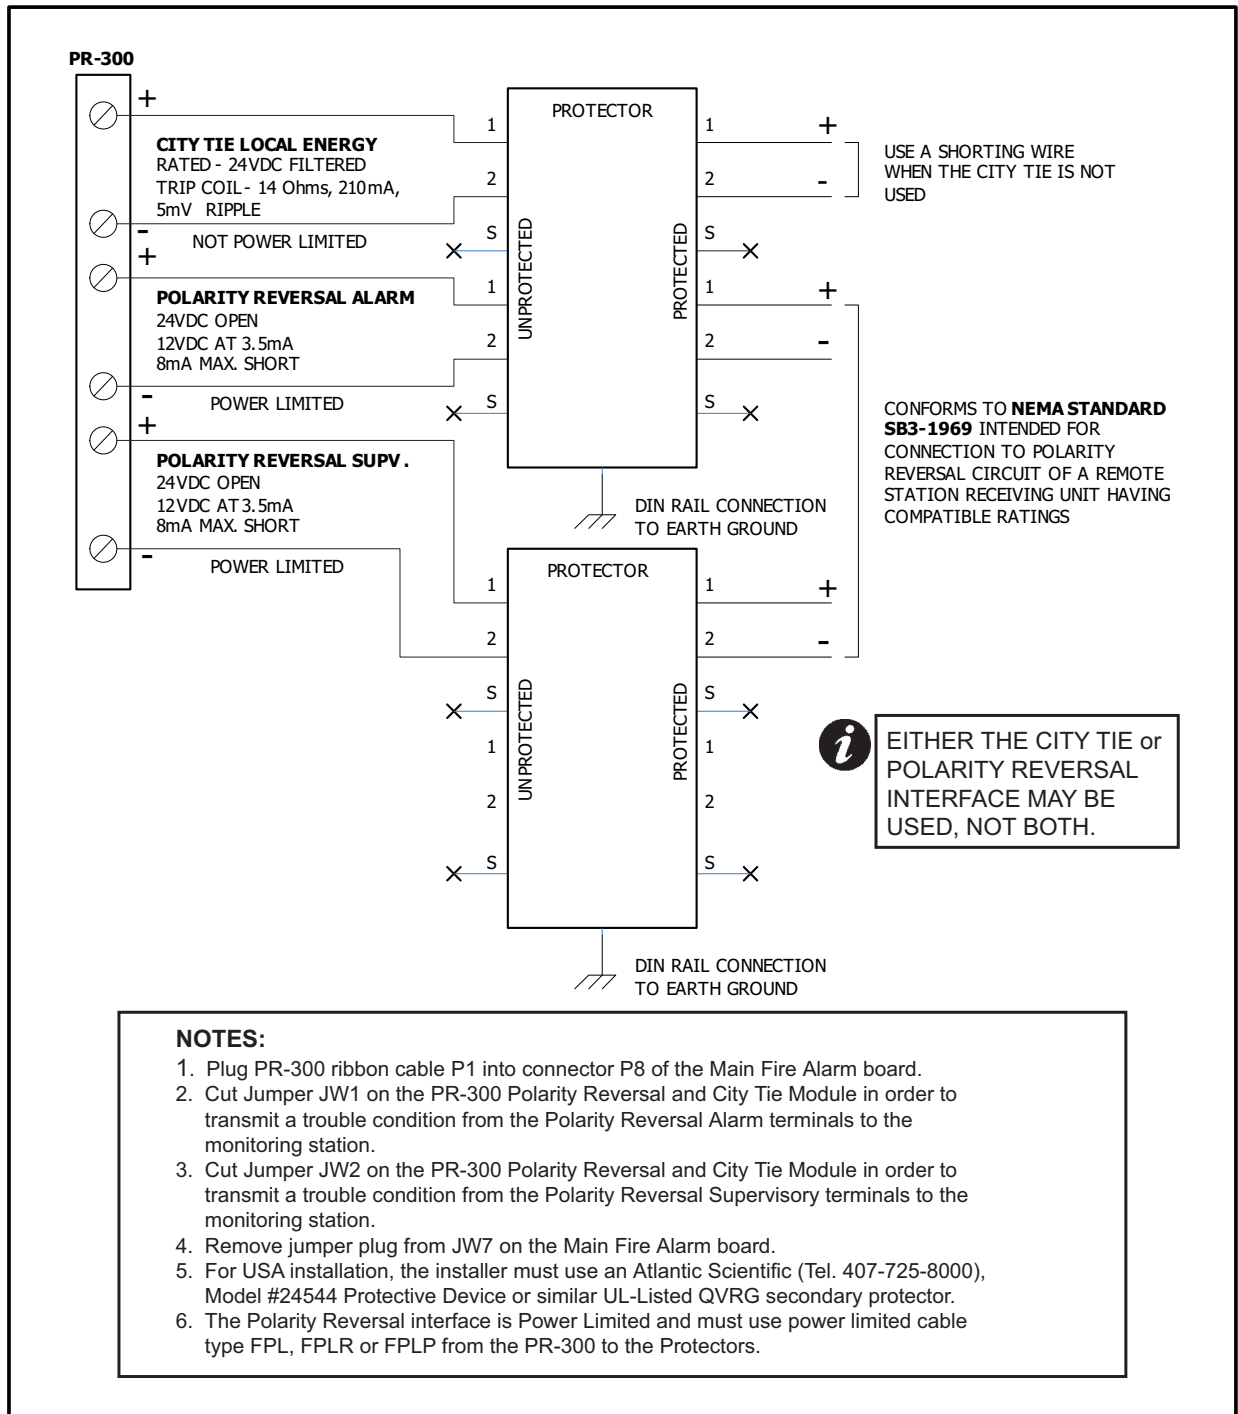

**Figure 16 Polarity Reversal and City Tie Module Terminal Connection**

## 8.8 Auxiliary Power Supplies

### 8.8.1 Aux 2 Resettable Auxiliary Power (supervised, regulated)


The AUX 2 resettable auxiliary power supply is supervised for shorts, therefore a short will disconnect the power until the “RESET” button is pressed. A trouble signal will be generated if there is a short. The circuit must be supervised for opens utilizing the End of Line Relay Model PAM-3 as shown in Figure 17. This supply is rated at 21.1 VDC regulated / 300 mA max / 1 V voltage drop maximum.

### 8.8.2 Auxiliary Supply (supervised, regulated)

Supervised auxiliary power is used to power the remote annunciators and smart relay modules. This filtered circuit is supervised for shorts, therefore a short will disconnect the power until the “RESET” button is pressed. A trouble signal will be generated if there is a short. The circuit must be supervised for opens utilizing the End of Line Relay Model PAM-3 as shown in Figure 17. This supply is rated at 21.1 VDC regulated / 500 mA max / 1 V voltage drop maximum.

### 8.8.3 Unfiltered Supply (unsupervised, unregulated)

This unregulated supply is not supervised. When required, it is recommended that the circuit be supervised for opens utilizing the (UL listed - S3403) End of Line Relay Model PAM-3 as shown in Figure 17. This supply is rated at 24 VDC / 1.7 A max. If there is a short on this circuit, the auxiliary power does not recover automatically when the short is removed. The main power and the battery must be disconnected, then reconnected and the panel reset to re-establish the auxiliary power supply.

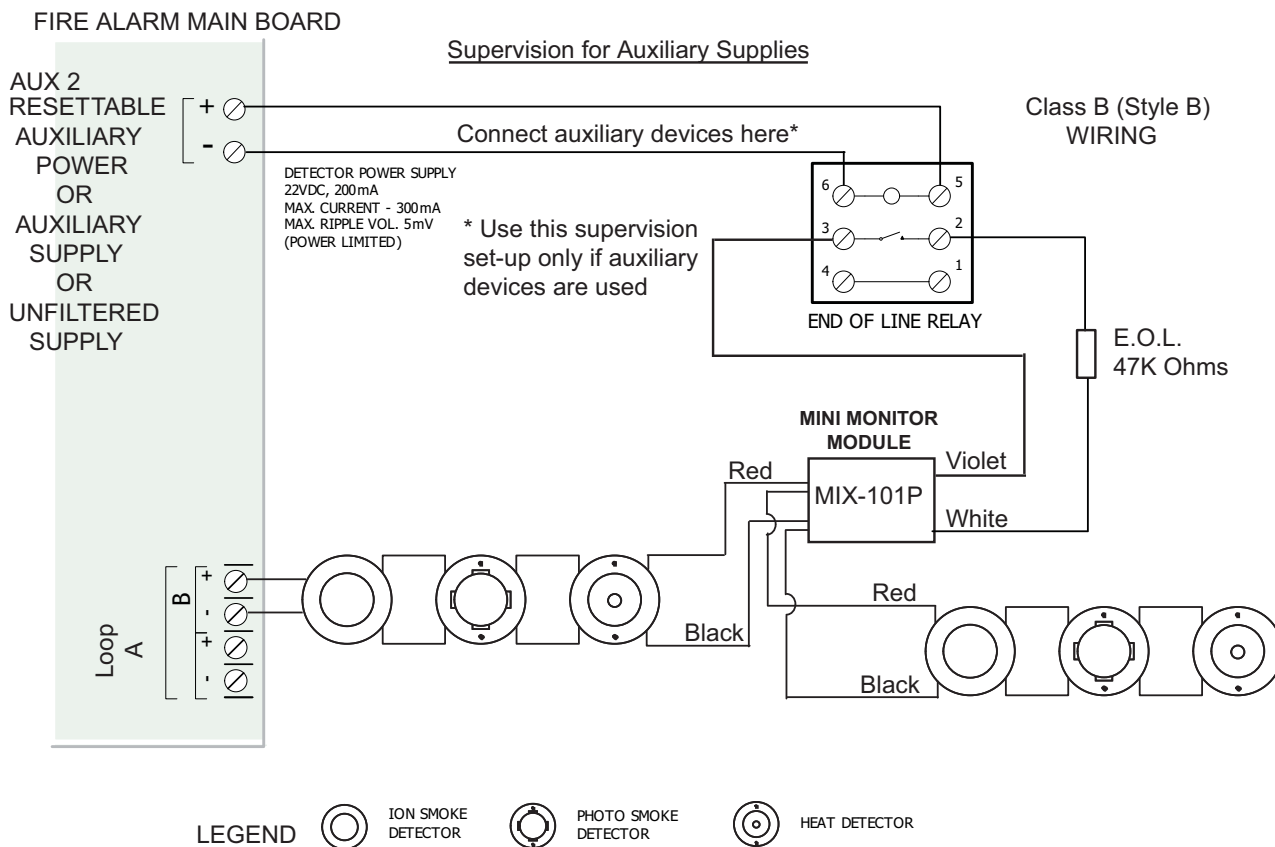

**Figure 17 Supervision Of Auxiliary Supplies**

## 8.9 Power Supply Connections

The power supply is located directly behind and below the main board. The ratings are:

**Electrical Input rating** 120 VAC, 60Hz, 1.73A / 240VAC, 50Hz, 0.864A


**Battery fuse on Main module** 10A, slow blow micro fuse (not replaceable)



**Caution:** The main AC branch circuit connection for the Fire Alarm Control Unit must provide a dedicated continuous power without any disconnect devices. Use #12 AWG wire with 600-volt insulation and proper over-current circuit protection that complies with the local codes. Refer to 16.0 Appendix C: Specifications on page 62 for specifications.



**Note:** Ensure that the AC supply is disconnected before wiring the power to the panel. Wire the AC power to the AC wiring terminals as shown in Figure 18 using the proper wire gauge. Fire alarm systems must be installed in compliance with local codes and standards and with the Authority Having Jurisdiction (AHJ)

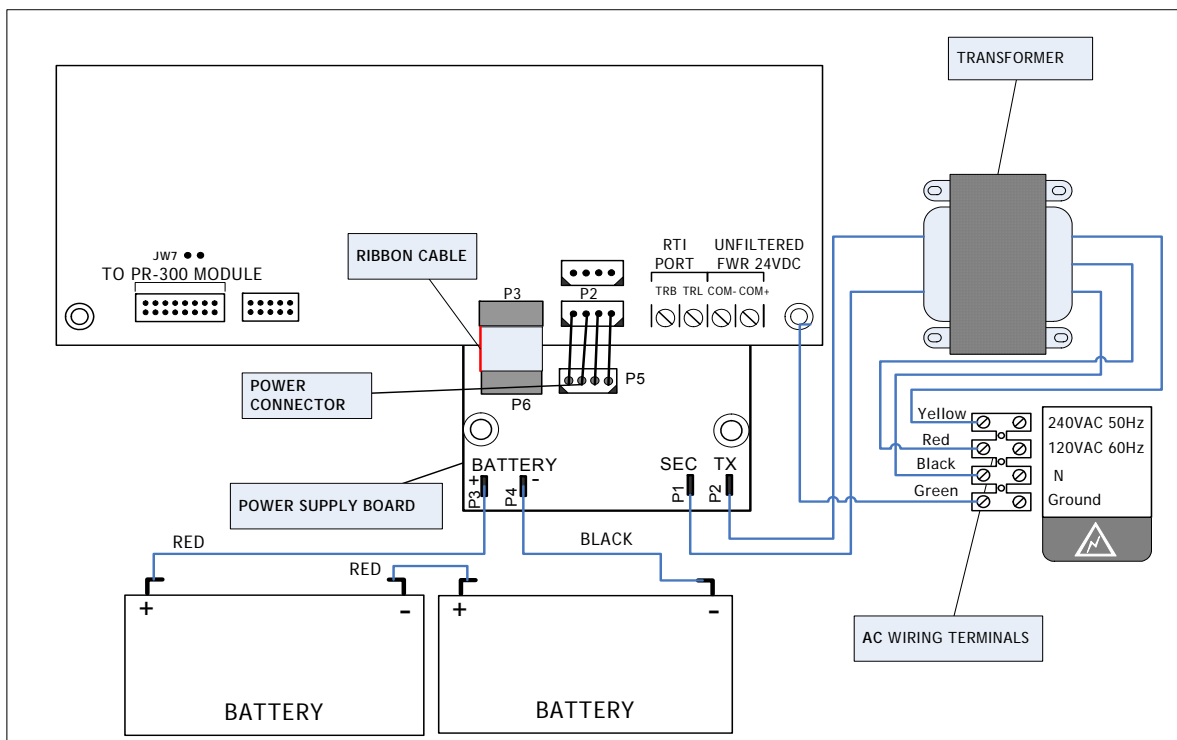

**Figure 18 Main Power Supply Connections**




**Note:** The FX-350 panel is capable of being wired for 120 VAC or 240 VAC 50/60 Hz as shown above. A good ground connection to the “Ground” terminal is essential to electrical safety, ensure proper operation, and specified noise immunity.

## 8.10 Connecting to a 3G4010 Interface Device for Canada

A typical connection is shown in Figure 19. The PCS-100 Passive Communications Interface Board (sold separately) is required.

For information on Compatible DACR Receivers see 14.0 Appendix A: Compatible Receivers on page 59.

### *FX-350 - 3G4010 Connection - Typical Diagram*

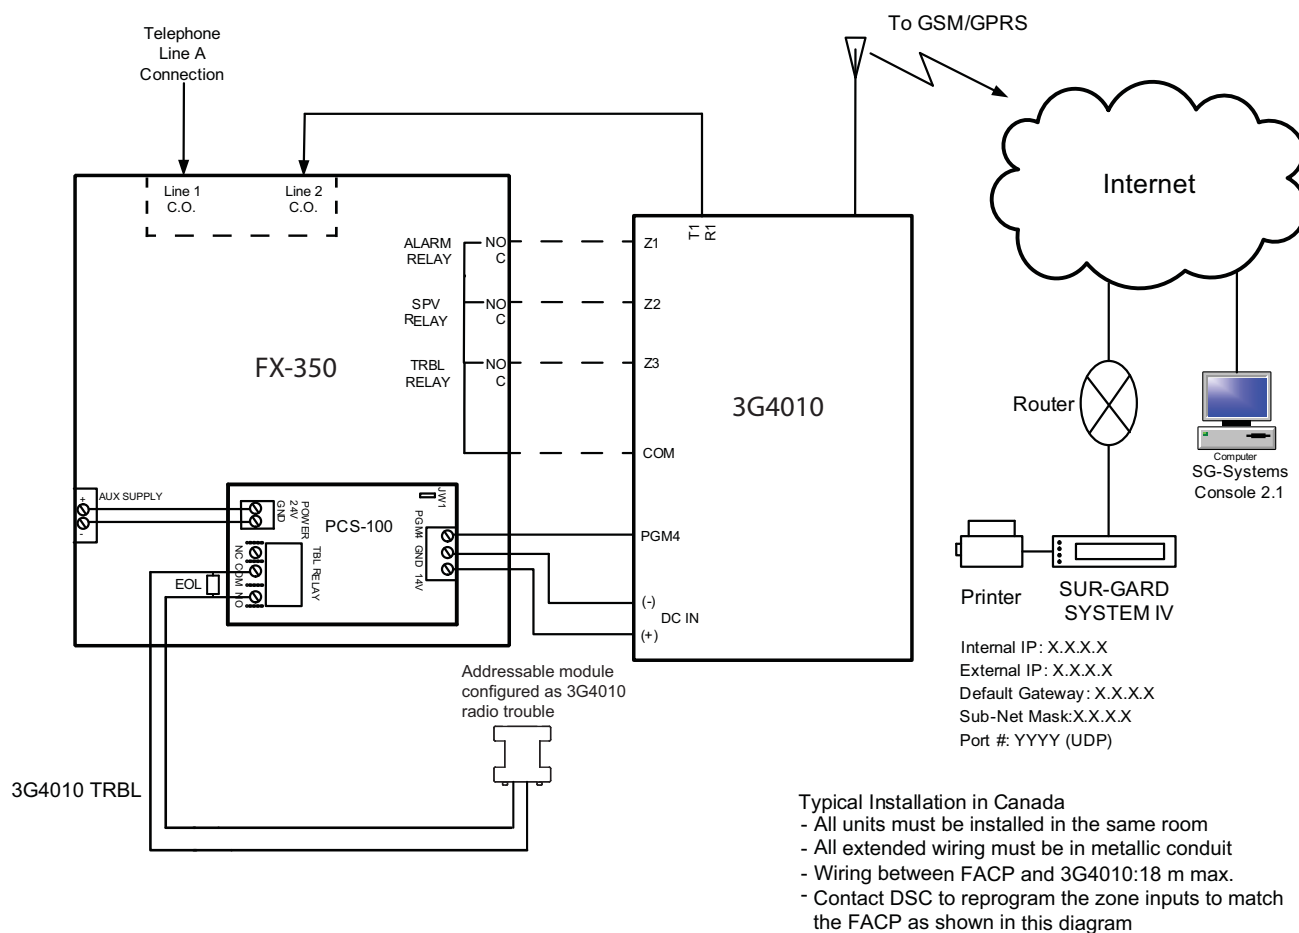

**Figure 19 Connecting an FX-350 FACP to a 3G4010 Interface Device**




**Note:** The DSC interface device 3G4010 is required if the installation requires ULC S559 certification. The DSC interface device 3G4010CF is required if the installation requires UL864 9th edition certification.

## 8.11 Connecting to a 3G4010CF Interface Device outside Canada

For information on Compatible DACR Receivers see 14.0 Appendix A: Compatible Receivers on page 59.

A typical connection is shown in Figure 20. The 3G4010CF is powered separately from the PCS-100 and requires 2 DSC RM-2 relays (sold separately). The PCS-100 Passive Communications Interface Board (sold separately) is also required.

*FX-350 - 3G4010CF Connection - Typical Diagram*

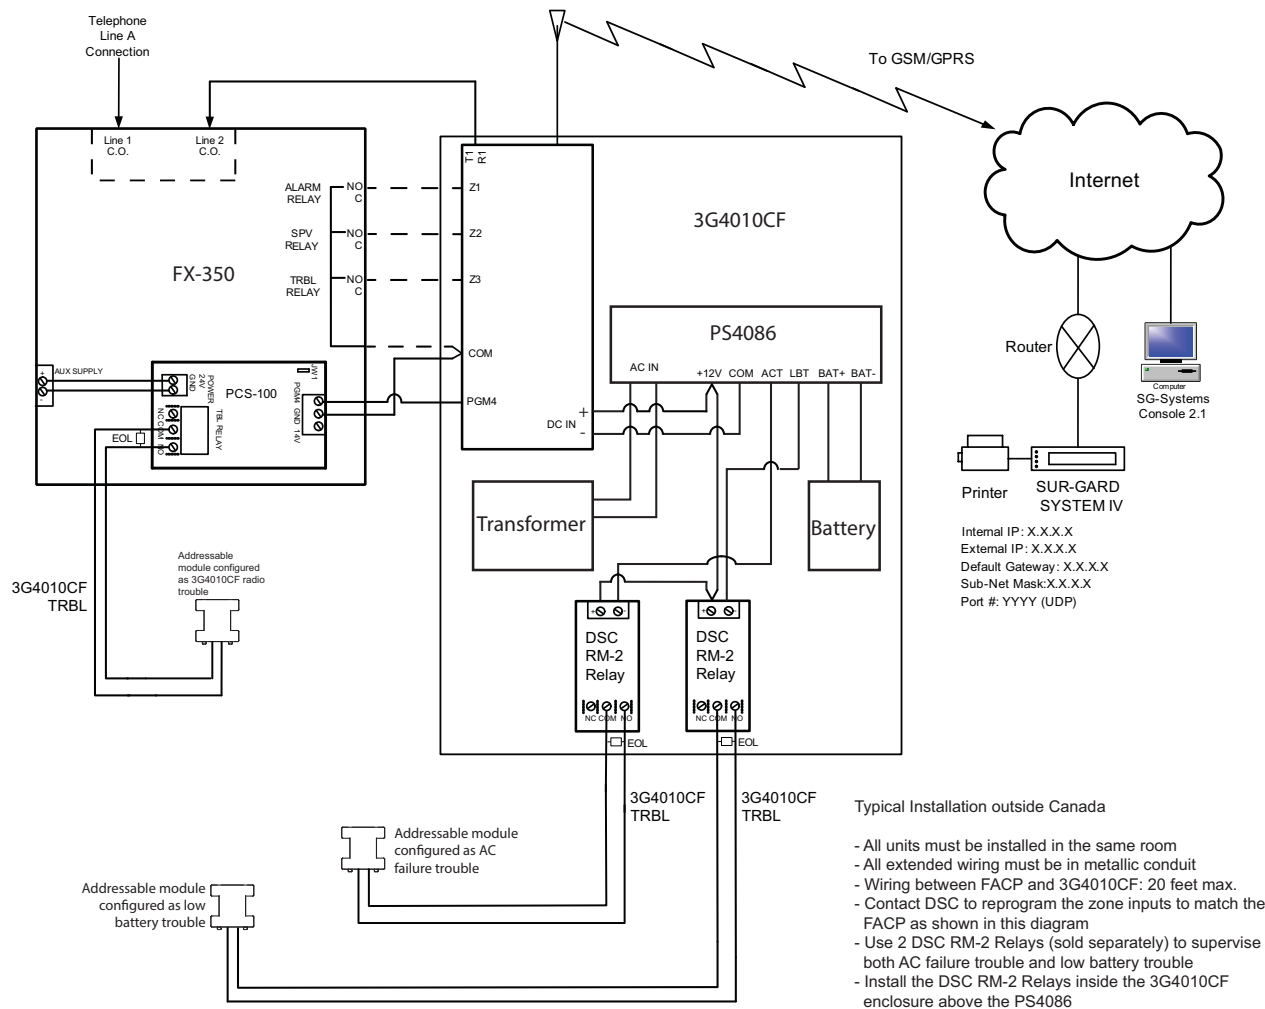

**Figure 20** Connecting an FACP to a 3G4010CF Interface Device outside Canada



**Note:** The DSC interface device 3G4010 is required if the installation requires ULC S559 certification. The DSC interface device 3G4010CF is required if the installation requires UL864 9th edition certification.



## 9.0 System Checkout

### 9.1 Before turning the power “ON”

To prevent sparking, **do not connect** the batteries. Connect the batteries after powering the system from the main AC supply.

1. Check that all adder modules are installed in the proper location with the proper connections.
2. Check all field (external) wiring for opens, shorts, and ground.
3. Check that all interconnection cables are secure, and that all connectors are plugged in properly.
4. Check all jumpers and switches for proper setting.
5. Check the AC power wiring for proper connection.
6. Check that the chassis is connected to earth ground (cold water pipe).
7. Make sure to close the front cover plate before powering the system from main AC supply.

The best way to set up a panel for the first time is to avoid connecting any field wiring at first. To begin set up, power up the panel with end of line resistors connected where appropriate, then connect the battery. The panel will show “System Restart Active”. Press System Reset button to reset the panel. If the panel is free of trouble, connect one circuit at a time, checking for troubles each time. If a trouble occurs at any point during the set-up, correct the fault, then continue connecting the field wiring.

### 9.2 Power-up procedure

After completing the system checkout procedures outlined above,


1. Power up the panel. The “AC-ON” green LED and the “Common Trouble” LED should illuminate, and the buzzer should sound. Press the “System Reset” button. Since the batteries are not connected, the trouble buzzer should sound intermittently and the common trouble LED should flash.
2. Connect the batteries while observing correct polarity: the red wire is positive (+) and black wire is negative(-). All indicators should be OFF except for normal power “AC ON” green LED.
3. Configure the Fire Alarm Control Panel as described in the System Configuration section.

## 10.0 Troubleshooting

Symptoms	Possible Cause
<b>Circuit Trouble</b>	Normally when a circuit trouble occurs, its designated trouble indicator will be illuminated, as well as the common trouble indicator and trouble buzzer. To correct the fault, check for open wiring on that particular circuit loop or that the Circuit Disconnect Switch is in the ON or CLOSED position. Note: Disconnecting a Circuit will cause a system trouble (off-normal position).
<b>Remote Trouble</b>	Remote Trouble will be indicated on the main panel display for any failure reported by, or failure to communicate with a remote annunciator or other remote device.
<b>Ground Fault</b>	This panel has a common ground fault detector. To correct the fault, check for any external wiring touching the chassis or other Earth Ground connection.
<b>Battery Trouble</b>	Check for the presence of batteries and their conditions. Low voltage (below 20.4V) will cause a battery trouble. If battery trouble condition persists, replace batteries as soon as possible.
<b>Walk Test Mode</b>	If the Walk Test LED is illuminated steadily, the system is in Walk Test Mode.
<b>Common Trouble</b>	<p>If only a common trouble is indicated on the main panel and none of the above confirming trouble indicators are ON, check the following for possible fault:</p> <ul style="list-style-type: none"><li>• Check for any missing interconnection wiring.</li><li>• Check for any Module missing that was part of the Configuration.</li><li>• Check for improperly secured cabling.</li></ul>

## 11.0 Indicators, Controls and Operations

Figure 21 below shows the common display panel for both the FX-350, FX-351 and the FX-353 Fire Alarm Control Panels.

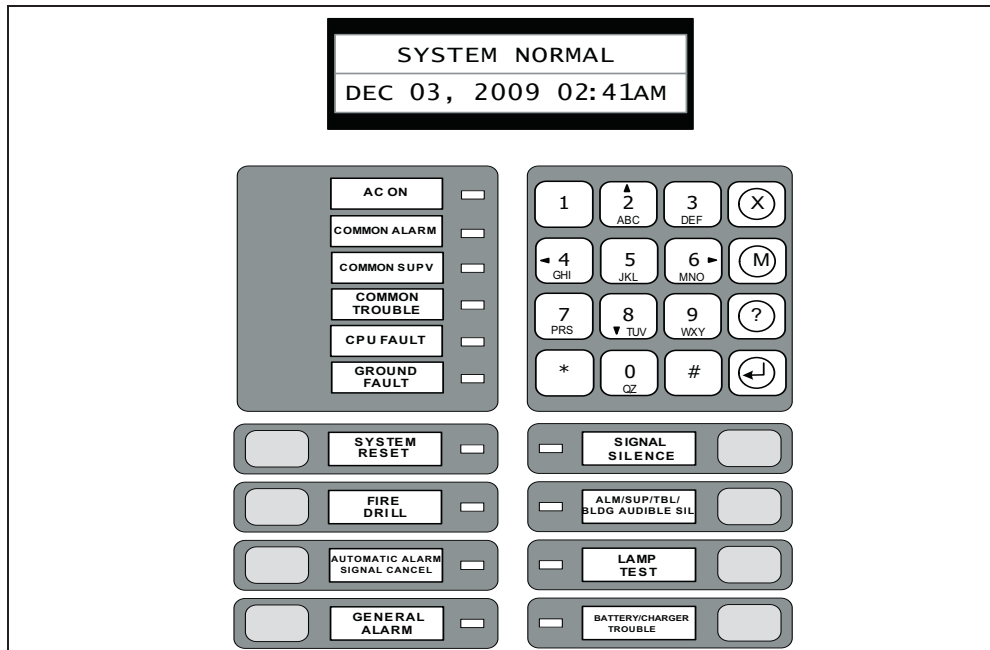

**Figure 21 LCD Display, LED indicators and control buttons**

The display panel on the FX-350/FX-351/353 main fire alarm control board consists of:

- a two line by twenty character LCD display
- a sixteen button keypad
- common LED Indicators
- common control buttons

FX-351 and FX-353 models are equipped with one RAX-332 LED display adder (32 zone annunciation), with provision for a second optional adder (see section 4.1 Panel Models on page 13 for further explanation) for another 32 zone annunciation for a total of 64 zone annunciation. Each LED zone has a red/amber alarm/supervisory LED and an amber trouble LED.

LED Indicators may be amber, red, or green, and may illuminate continuously, or at one of following Flash Rates:

- Steady (Alarm) - ON continuously.
- **Fast Flash (Supervisory) - 120 flashes per minute, 50% duty cycle.**
- **Trouble Flash (Trouble) - 20 flashes per minute, 50% duty cycle.**

Red indicators are used for Alarm, amber indicators for Trouble or Supervisory and green for power ON.



**Note:** Each RAX-332 display is supplied with blank paper labels (**#NP-681**) for sliding into the plastic label template on the display.

## 11.1 Common Indicators

### 11.1.1 Buzzer

The Buzzer is activated by any of the following:


- **Fire Alarm:** Steady
- **Supervisory Alarm:** Fast flash rate
- **Trouble:** trouble flash rate
- **Property and Building Safety:** Configurable to sound at trouble flash rate

### 11.1.2 AC On LED

The AC On LED illuminates steady green while the main AC power is within acceptable levels. It turns off when the power level falls below the power-fail threshold and the panel switches to standby (battery) power.

### 11.1.3 Common Alarm LED

The Common Alarm LED illuminates steady red whenever the panel is in alarm. An alarm results from any alarm on any point or input programmed as alarm or activation of the manual General Alarm button. Since all alarms are latched until the alarm conditions are cleared and the panel is reset, the LED will remain ON until then.

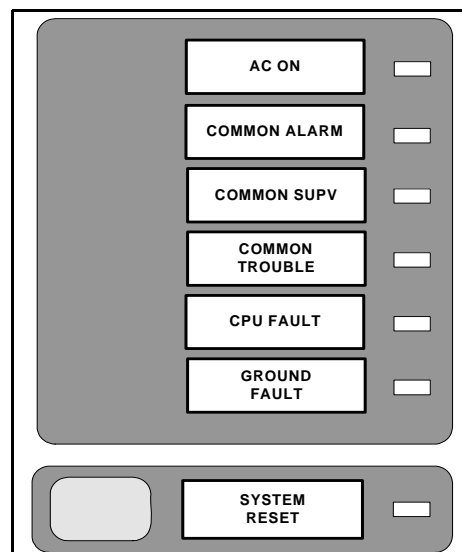

### 11.1.4 Common Supervisory LED

The Common Supervisory LED flashes amber at the Supervisory or Fast Flash rate when there is a supervisory alarm in the panel resulting from any un-bypassed latching or non-latching supervisory circuit. The LED turns OFF if all non-latching Supervisory Circuits are restored and there are no active latching supervisory circuits. Latching supervisory alarms remain active until the panel is reset.

### 11.1.5 Common Trouble LED

The Common Trouble LED flashes amber at the Trouble Flash rate when the panel detects any trouble condition in the system. The LED turns OFF once all troubles are cleared.

### 11.1.6 CPU Fault LED

The CPU Fault LED flashes amber at the Trouble Flash rate when the panel detects a fault on the CPU. It is turned OFF when the CPU fault is corrected.

### 11.1.7 Ground Fault LED


The Ground Fault LED flashes amber at the trouble flash rate when the Ground Fault Detector detects a ground fault on any field wiring. It turns off immediately after the ground fault is cleared.

### 11.1.8 System Reset LED

The amber System Reset LED will illuminate steadily after the system reset button has been pressed and the system is resetting.

### 11.1.9 Signal Silence LED

The Signal Silence LED flashes amber at the Trouble Flash rate after indicating circuits are silenced either by the Signal Silence button, or by the Auto Signal Silence Timer. It turns OFF after the signals are re-sounded by a subsequent alarm. For UL installations, disable Auto Signal Silence.

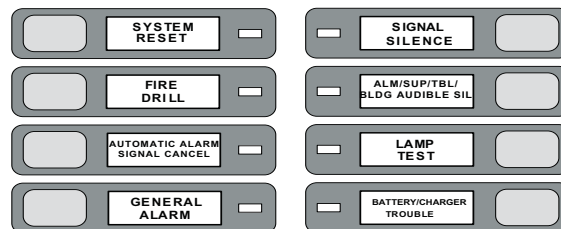

### 11.1.10 Fire Drill LED

The Fire Drill LED turns ON steady amber while Fire Drill is active.

### 11.1.11 ALM/SUP/TBL/BLDG AUDIBLE SIL LED (Buzzer Silence)

The ALM/SUP/TBL/BLDG AUDIBLE SIL LED flashes amber at the Trouble Flash rate when the ALM/SUP/TBL/BLDG AUDIBLE SIL button is pressed. Any new alarm, supervisory or trouble events will resound the buzzer and will cause the ALM/SUP/TBL/BLDG AUDIBLE SIL LED to turn off.

### 11.1.12 AUTOMATIC ALARM SIGNAL CANCEL LED (Acknowledge)

If the panel is configured as a two stage system, the AUTOMATIC ALARM SIGNAL CANCEL LED turns ON steady amber after the Auto General Alarm Timer is cancelled by the activation of the AUTOMATIC ALARM SIGNAL CANCEL or Signal Silence buttons. If the Auto General Alarm Timer times out and puts the panel into General Alarm, the AUTOMATIC ALARM SIGNAL CANCEL LED turns OFF. If the panel is configured as Positive Alarm Sequence (PAS), the AUTOMATIC ALARM SIGNAL CANCEL LED flashes amber at the Fast Flash rate while a timer counts down 15 seconds to common alarm.

### 11.1.13 General Alarm LED

The red General Alarm LED illuminates steadily after the General Alarm button is pressed, a general alarm initiating circuit is activated, or the Auto General Alarm timer times out. Once the General Alarm LED turns on, it will stay active until the panel is reset.

### 11.1.14 Lamp Test LED

The amber Lamp Test LED will illuminate steadily after the Lamp Test button is pressed and while system is in Lamp Test mode.

### 11.1.15 Battery/Charger Trouble LED

In a ULI application the amber Battery/Charger Trouble LED flashes at the Trouble Flash rate when any Battery/Charger Trouble occurs.

In a ULC application the amber Battery/Charger Trouble LED illuminates steady when any Battery/Charger Trouble occurs.

### 11.1.16 LEDs 1 to 32 for FX-351 and FX-353 Series Only

Points labelled 1 to 32 are available for alarm, supervisory, and property and building safety annunciation (bi-coloured red/amber LEDs) and trouble annunciation (amber LEDs).

### 11.1.17 RAX-332 LEDs 33 to 64 for FX-351 and FX-353 Series Only

Points labelled 33 to 64 are available for alarm, supervisory, and property and building safety annunciation (bi-coloured red/amber LEDs) and trouble annunciation (amber LEDs).

## 11.2 Common Controls

### 11.2.1 LCD Display

The display is a two line, 20 character back-lit alphanumeric LCD. It displays information regarding the panel, its circuits, and devices. An on-screen cursor is controlled by the cursor buttons (located to the right of the display) for menu selection and control. Report information provided by the LCD display includes Alarm, Event Log, Current Levels, Verification, and Maintenance reports.

### 11.2.2 Cursor Buttons

Located at key number 2, 8, 6 and 4. The cursor buttons Up (next), Down (previous), Right, and Left allow you to select items on the LCD display. The Up and Down buttons scroll through lists in a continuous loop.

### 11.2.3 Enter Button

Use this button to select a displayed item on the LCD display.

### 11.2.4 Cancel Button

Use this button to cancel an operation or exit a menu.

### 11.2.5 Menu Button

Use this button to view the Command Menu.

### 11.2.6 Info Button

Push and hold this button to get detailed information about any displayed item.

### 11.2.7 Signal Silence Button


Pressing the Signal Silence button after the panel is in alarm turns ON the Signal Silence LED and de-activates any silenceable indicating circuits. Non-silenceable circuits are unaffected. Signals will re-sound upon any subsequent alarm. This button does not function during any configured Signal Silence Inhibit Timer period. It also does not function if indicating circuits are active as the result of a Fire Drill. In a two-stage system, the Signal Silence button silences the stage 1 and stage 2 alarms.

### 11.2.8 Fire Drill Button

The Fire Drill button activates all programmed and non-disconnected indicating circuits, but does not transmit any Alarms via the city tie or common alarm relay. The Fire Drill is cancelled by pressing the button again (toggle switch), or if the panel goes into a true alarm.

### 11.2.9 General Alarm Button

Pressing the General Alarm button immediately sends the panel into General Alarm. It will also re-activate the signals if they have been silenced during General Alarm initiated through an

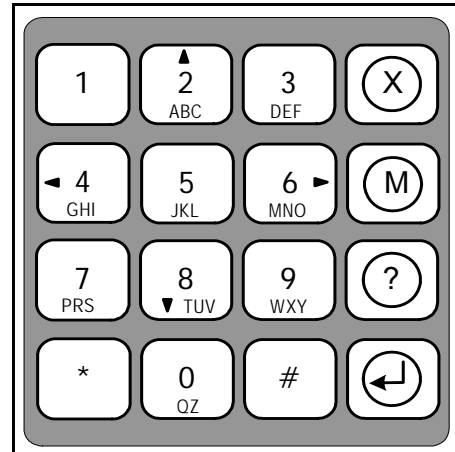

addressable device configured as General Alarm. The General Alarm condition remains active until the panel is reset.

### 11.2.10 System Reset Button

The System Reset button resets the panel and all circuits:

- Resets Aux Resettable Power Supply
- Turns OFF Signal Silence, Ack & GA LEDs
- Stops and resets all Timers
- Aux Disconnect is not affected
- Turns off all Indicating Circuits
- Turns off Fire Drill
- Processes inputs as new events
- Reset cannot be activated until the Signal Silence Inhibit timer has expired
- Pressing Reset button after a PAS Acknowledge will reset the system and clear the alarm event.



**Attention:** After power-up, press the System Reset button to bring the system to normal and restore the “system power up” trouble.

### 11.2.11 AUTOMATIC ALARM SIGNAL CANCEL Button (Two Stage or PAS only)

If the panel is configured for two stage operation, activation of the AUTOMATIC ALARM SIGNAL CANCEL button while the Auto General Alarm Timer is timing (e.g. there is an alarm in the panel but it is still in the first stage) cancels the timer and turns the AUTOMATIC ALARM SIGNAL CANCEL LED ON steady amber. If the panel is configured for Positive Alarm Sequence (PAS), activation of the AUTOMATIC ALARM SIGNAL CANCEL button within 15 seconds of a PAS alarm will delay a common alarm activation for 60 seconds.

### 11.2.12 Lamp Test Button

Pressing and holding the Lamp Test button causes all front panel indicators to illuminate and sounds the buzzer steadily. Bi-coloured LEDs will illuminate twice to show both colors. If lamp test is active for more than ten seconds, the Common Trouble LED activates.

## 11.3 Single Stage Operation

In a single stage system, all alarm inputs are treated in a similar manner. Alarm inputs include any of the following: non-verified alarm, verified alarm, waterflow alarm, and general alarm circuits. Any of these alarm inputs occurring when the panel is not already in alarm cause the following:

- The buzzer sounds steadily
- If fire drill is active, it is cancelled
- The Common Alarm LED turns ON
- The Common Alarm relay activates if Aux disconnect is not active
- The Auto Signal Silence timer, if configured, starts. For UL installations, disable Auto Signal Silence.
- The Signal Silence Inhibit timer, if configured, starts
- All non-disconnected indicating programmed to the input are activated provided that Aux disconnect is not active

- Non-disconnected strobes associated with the input are activated
- Non-disconnected signals associated with the input are activated at the evacuation rate

Pressing the General Alarm button on the panel also initiates a general alarm.

Subsequent alarms when the panel is already in alarm, cause the following:

- The alert buzzer sounds steadily
- If Signals have been silenced, they are resounded, the Signal Silence LED turns OFF, and the Auto Signal Silence timer, if configured, is restarted. For UL installations, disable Auto Signal Silence.
- Any additional non-disconnected strobes associated with the input are activated continuously
- Any additional non-disconnected signals associated with the new input are activated at the evacuation rate

## 11.4 Two-Stage Operation

In a Two-Stage system, alarm inputs are either First Stage (alert) inputs or Second Stage (general alarm) inputs. First stage inputs include inputs from the following types of circuits: non-verified alarm, verified alarm, and waterflow alarm. Second stage inputs include alarms on the general alarm circuits, activation of the General Alarm button, or expiration of the Auto General Alarm timer. Any of these alarm inputs occurring when the panel is not already in alarm cause the following:

- The buzzer sounds steadily.
- If fire drill is active, it is cancelled.
- The Common Alarm LED turns ON
- The Common Alarm relay activates if Aux disconnect is not active.
- The Auto Signal Silence timer, if configured, starts. For UL installations, disable Auto Signal Silence.
- The Signal Silence Inhibit timer, if configured, starts.
- All non-disconnected outputs programmed to the input are activated provided that Aux disconnect is not active.

If the alarm is a Second Stage alarm,

- All non-disconnected strobe circuits are activated continuously, if correlated to an alarm input.
- All non-disconnected signal circuits are activated at the evacuation rate, if correlated to an alarm input.
- The General Alarm LED turns ON.

If the alarm is a First Stage alarm,

- Non-disconnected strobe circuits programmed to that circuit are activated continuously.
- Non-disconnected signal circuits programmed to that circuit are activated with the alert code (see section 11.8 Output Types on page 53).
- The Auto General Alarm timer, if configured, starts.

Subsequent First Stage alarms when the panel is already in alarm, cause the following:

- The buzzer sounds steadily.
- If signals have been silenced as a result of the silence button or the Auto signal silence timer, signals are resounded as they were before signal silence, the Signal Silence LED



- turns OFF, and the Auto Signal Silence timer, if configured, is restarted. For UL installations, disable Auto Signal Silence.
- If the panel is not already in General Alarm, additional non-disconnected signals programmed to the new input are activated with the Alert Code (see section 11.8 Output Types on page 53).
- If the panel is not already in General Alarm and if the AUTOMATIC ALARM SIGNAL CANCEL LED is ON steady indicating that the Auto General Alarm timer has been acknowledged the timer is restarted and the AUTOMATIC ALARM SIGNAL CANCEL LED is extinguished.

A second stage alarm (general alarm) when the panel is already in alarm causes the following:

- The buzzer sounds steadily.
- All non-disconnected signals are activated at the evacuation rate.
- If the Signal Silence LED is ON, it turns OFF and the Auto Signal Silence timer, if configured, is restarted. For UL installations, disable Auto Signal Silence.
- The AUTOMATIC ALARM SIGNAL CANCEL LED if ON, turns OFF.

Alarm inputs are latching, they remain active until system reset.



**Note:** All circuits with process type designated as “signal” are automatically correlated to the “fire drill” and “general alarm” status.

## 11.5 Positive Alarm Sequence

In a Positive Alarm Sequence (PAS) system, only smoke detectors can be dedicated as PAS inputs. PAS Inputs can only be from the following types of circuits: non-verified alarm and verified alarm. Any of these alarm inputs occurring when the panel is not already in alarm cause the following:

- The buzzer sounds steadily.
- If fire drill is active, it is cancelled.
- The Common Alarm LED turns ON
- The individual zone LED (if programmed) turns ON.
- The Common Alarm relay does not activate.
- The PAS timer starts for 15 seconds.
- All outputs programmed to the input are not activated.

When the PAS alarm has been acknowledged within 15 seconds, the following sequence occurs:

- The buzzer is silenced.
- The Common Alarm LED stays ON.
- The individual zone LED (if programmed) stays ON.
- The PAS timer starts for 180 seconds (3 minutes). This is the time allotted to reset the system and avoid any true alarm sequence.

When the PAS alarm has been acknowledged and the system reset (and there are no new alarms), within the given time limits, the following occurs:

- The buzzer stays silenced.
- The Common Alarm LED turns OFF.

- The individual zone LED (if programmed) turns OFF.
- The alarm event is cancelled. No log reference.
- The fire alarm system returns to normal.

If at any time during the Positive Alarm Sequence a second alarm (PAS or otherwise) is actuated, the fire alarm will go into evacuation mode. In a preconfigured FACP the Positive Alarm Sequence may be enabled or disabled as the user requires.

## 11.6 Enabling or Disabling the Positive Alarm Sequence

- To enable or disable the Positive Alarm Sequence, from the Keypad of the FACP press “M” to enter the **Menu**
- Using the Up and Down Arrow buttons, scroll to “Operation” and press the enter key
- In the **Operation Menu** scroll to “Positive Alarm” and press enter
- You will now see displayed the current status of the Positive Alarm Sequence and will be prompted to change status.

```
Pos Alarm disabled
Enable? Y
```

- If you wish to change the status press the “enter” key.



**Note:** There will be no notification message advising a change of status

- If you do not wish to change the status, press the “cancel” key

## 11.7 Input Types

Table 5 shows input types available for programming.

**Table 5 Input Types**

Input Types	Description
<b>Non-Verified Alarm</b>	<p>When an un-bypassed non-verified alarm input goes into alarm the common alarm sequence is activated. Un-bypassed relay, signal, and strobe outputs are updated according to their programming and alarm zone status indicators associated with the input are activated. Alarm input activations are displayed on the shared display in the common queue with alarm as the highest priority and is displayed first.</p> <p>A pre-alarm condition on a device configured as an alarm input is displayed on the shared display and on the alarm zone status indicator. If the pre-alarm condition is restored the status will be cleared. If the input goes from pre-alarm to alarm, the pre-alarm status will be replaced with the alarm status for the input.</p> <p>Once an alarm input is in alarm the alarm condition is latched until system reset (changes in status from alarm to pre-alarm or to normal are ignored).</p>

**Table 5 Input Types (Continued)**

Input Types	Description
<b>Verified Alarm</b>	<p>When an un-bypassed verified alarm input goes into alarm, if the system is not already in alarm, the alarm is verified over a period of time to determine if the alarm condition is valid. For addressable analog devices, when a device goes into alarm, a 35 second timer is started. When the 35 second delay times out, the device is monitored for the next 60 seconds, if it goes into alarm again during this time the alarm is confirmed. Once the alarm condition is confirmed, the alarm is processed as for non-verified inputs.</p> <p>If the system goes into alarm at any point during verification process (due to an alarm on another device or circuit), the verification process is aborted and the alarm is immediately confirmed. If another Verified Alarm Input goes into alarm during the verification process, the verification is aborted and the alarm is confirmed on both inputs. A trouble detected on the circuit being verified during the verification period will also cause the verification to be aborted and the alarm confirmed.</p> <p>An alarm zone status indicator flashes during the alarm verification process. If the alarm is confirmed the indicator will go steady, otherwise it will be turned off.</p> <p>Once the system is in alarm verified alarm circuits operate the same as non-verified circuits. The pre-alarm condition on verified alarm inputs is processed the same as non-verified inputs; i.e. it is not verified.</p> <p>A count is maintained of the number of times each verified input has gone through its verification process without confirming an alarm. These counts can be retrieved for reporting purposes and cleared.</p>
<b>Waterflow Alarm</b>	<p>Waterflow inputs are sampled every second. If 10 samples are in alarm in any given 15 second period, an alarm condition is confirmed and the alarm is processed as for non-verified inputs.</p> <p>The alarm zone status indicator flashes whenever even one sample indicates an alarm condition. If the alarm is confirmed the indicator will go steady, it will be turned OFF when 15 seconds elapses without any samples in the alarm condition. The waterflow retard operation operates regardless of whether or not the system is in alarm.</p> <p>Note: Do not use the retard operation with any external retarding device.</p>
<b>Non-Latching Supervisory</b>	<p>When an un-bypassed supervisory input goes into alarm the common supervisory sequence is activated. Un-bypassed relay, signal, and strobe outputs are updated according to their programming and supervisory zone status indicators associated with the input are activated.</p> <p>Supervisory activations are displayed on the shared display in the common queue with supervisory as the second highest priority.</p> <p>When a non-latched supervisory input is restored, outputs programmed to it also return to normal unless they are also programmed to other active inputs. Zone display indicators will also be updated to indicate that the input is no longer active and the message will be removed from the shared display common queue. If there are no other active supervisory inputs the common supervisory condition will be restored.</p>
<b>Latching Supervisory</b>	<p>Latched supervisory inputs operate the same as non-latched supervisory inputs except that the alarm condition is latched: restoration of the circuit (from alarm to normal) is ignored until system reset.</p>

**Table 5 Input Types (Continued)**

Input Types	Description
<b>Property and Building Safety (Monitor)</b>	<p>The operation of the Property and Building Safety input type applies to initiating circuits associated with property and building safety. Property and building safety input status may be reflected on property and building safety zone indicators and in the common queue, with property and building safety having the lowest priority on the shared display. They may also be programmed to relay, signal, and strobe outputs. When an un-bypassed property and building safety circuit goes into alarm, the status display and programmed outputs are activated. When it restores the status display, the outputs restore unless they are also programmed to other active inputs.</p>
<b>Trouble-Only</b>	<p>An alarm condition on an un-bypassed trouble only input initiates the common trouble sequence as a trouble. The status is reflected on trouble zone indicators and in the common queue on the shared display with trouble-only as the third priority. They may also be programmed to relay, signal, and strobe outputs.</p> <p>Note that the trouble condition initiated as a result of an alarm on a trouble-only input is separate from the circuit or device supervision trouble.</p>
<b>Remote Switch Inputs</b>	<p>Remote switch inputs may be used to provide remote control of system common controls. Remote switches are processed as a toggle operation. When the circuit is activated it sends an event through the system similar to pressing the switch on the front panel. When the circuit is restored it is ignored. For example if a remote switch is associated with the fire drill common control activating it once when drill is not activated will turn on drill and activating it again will turn off drill.</p> <p>Remote switches are supervised to ensure that they do not get "stuck" in the "ON" position. If they remain active for more than 30 seconds a circuit trouble is generated.</p> <p>Remote switches themselves are not correlated to relay, signal, and strobe outputs although the feature they are associated with may be.</p>

## 11.8 Output Types

Table 6 Output Types

Output Type	Description
<b>Signal</b>	This output type is for audible devices such as bells and piezo mini-horns. Signals operate in alert (two stage) and/or evacuation rate.
<b>Strobe</b>	<p><b>Normal (non-sync):</b></p> <p>Strobe circuits operate similar to signals except that they are always turned ON continuously (they are not affected by the alert or evacuation rates) if configured as normal. When configured as normal the output circuit does not use any sync protocol. Normal strobes can be silenceable or non-silenceable.</p> <p><b>Synchronized:</b></p> <p>Output circuits configured as strobes can have sync protocol for synchronization. When the output circuit is configured as strobe and also configured as non-silenceable and the device used on the output is a combination of horn and strobe, then if the signal silence is activated while the circuit is active the horn(s) are silenced while the strobe keeps on flashing. Synchronized strobes and strobe/horn models of the following manufacturers are supported: Faraday, System Sensor, Wheelock, Gentex, and Mircom.</p>
<b>Relay</b>	Un-bypassed relay outputs are activated if any un-bypassed input circuit or common system status which has been programmed to it is active. If the relay is configured as "silenceable" it is inhibited when common auxiliary disconnect is active. Relays also turned off if they are bypassed or if all inputs and system status correlated to it are restored or bypassed.



**Note:** Silencing of the horn depends on the feature provided by the manufacturer of the horn/strobe combination. Some models of the horn/strobe combination may not have this feature and will not work as described above.


## 11.9 Evacuation Codes

### Single stage codes

<b>Continuous</b>	On 100% of the time
<b>Temporal Code</b>	3 of 0.5 second ON, 0.5 second OFF then, 1.5 second pause
<b>March Code</b>	0.5 second ON, 0.5 second OFF
<b>California Code</b>	5 seconds ON, 10 seconds OFF

### Two-stage codes:

<b>Alert Code</b>	0.5 second ON, 2.5 seconds OFF
<b>General Alarm</b>	Evacuation code as selected from Figure18 below.

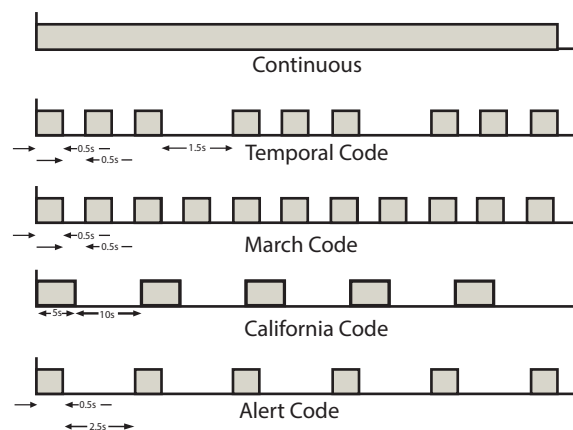

**Figure 22 Evacuation and Alert Codes**

## 11.10 Initial Power-up Sequence

When the system powers up, it performs an initial self diagnostic and executes a system reset to reset all external devices. The common trouble sequence is then initiated. The system must be reset manually to clear the trouble. At power-up, a check is performed on the configuration data, program, and RAM memory. If an error is found, the system is placed in trouble but the system attempts to continue to operate.

The power-up sequence will occur when power is first applied to the panel, when power is restored after a total power failure (including battery power), or when the watchdog timer expires. It is also implicitly executed when the system comes out of configuration mode after auto-configure or a new configuration has been downloaded from the configurator.

The power-up complete status is set to indicate that the system power-up is complete and the system is in normal operating mode.

### Shared Display

The shared display consist of a 2 line by 20 characters LCD and alpha numeric keys. It operates in three basic modes: status display mode, queue display mode and command mode. Status display mode displays system activity when the queues are empty. When there are items in the queues, queue display mode is used to browse the status of all active points in the queues. Command mode which allows the user to execute certain commands, performs certain system test and front panel configuration of the system.

The following push buttons are used by the shared display:



- UP/DOWN**
  - scroll through common alarm, supv, trouble and property and building safety queue
  - scroll through menu selections when in command mode
- RIGHT/LEFT**
  - moves to next or previous field or digit in command mode
  - Make selection for example checking/un-checking the selection box
  - Right key to add items for example Remote LED groups, correlation etc.
  - Left key to delete items for example led groups etc.



- INFO** • displays additional information for the currently selected item in queue display mode or when a pre-alarm, alarm verification or retard operation is active in status display mode



- MENU** • enter command mode or returns to base menu if already in command mode



- ENTER** • accepts currently selected item or menu selection in command mode



- CANCEL** • cancels current operation in command mode and returns to previous menu, or exits command mode if at base menu

#### ALPHA NUMERIC KEYS



- Some commands require the entry of numeric values, for example loop and device address for device configuration or changing the time etc.
- Some configuration requires entering the alpha keys for example the labels for circuits. Multiple key presses are required for entering an appropriate alpha character. First key press enters the numeric character, the second key press enters the first alpha character and another key press will enter the second alpha character and so on. The sequence is repeated with subsequent key presses.

### 11.10.1 Status Display Mode

The display is in status display mode when there are no items in the queue and command mode is not active. When there are no active alarms on the system, the display will show a system normal message. By default the message is displayed in the following format

System Normal
12: 47 MON 2005 - 10-03

When there is a pre-alarm, alarm verification active or retard verification in process on a device the system normal message is replaced by a message in the following format:

Pre-al arm detected
12: 47 MON 2005 - 10-03

OR

Al arm veri fi cati on
12: 47 MON 2005 - 10-03

OR

Retard veri fi cati on
12: 47 MON 2005 - 10-03

If the device or circuit returns to normal, the system normal message will be re-displayed. If multiple pre-alarms or alarm verification sequences are active at the same time only the first is displayed. Pressing the INFO button while the pre-alarm or verification message is active will display additional information on the circuit or device as described under queue display mode.

## 11.10.2 Queue Display Mode

Active inputs are all combined together and displayed in one queue with alarm, supervisory, trouble, or property and building safety and having priority in the same sequence as they are listed with alarm as the highest priority. In addition any internal non-fatal troubles which will cause the common trouble sequence to be activated will also result in a specific message to be placed in the queue with trouble level priority. The message is displayed in the following format:

Signal opt	Conventional signal
Short ckt trb 01/04	Lp: 0 Addr: 002

Pressing 'INFO' Key

Where:

- the first line shows the process type and the input or output designation
- the second line shows the active status or the trouble status depending on the circuit type and the location of the message in the queue along with the total number of messages in the queue
- pressing the INFO key provides some additional information
- the first line shows the process type
- the second line shows the loop# where the device is connected and the device address

For internal troubles the 2 line message is an internally formatted message which identifies the trouble along with any additional information which can help in diagnostics. Whenever there are active inputs in any of the queues the display will automatically display the oldest un-viewed event in the highest priority queue. The queue priority is as follows: alarm (highest), supervisory, trouble, property and building safety (lowest). During queue display mode, the messages in the queue can be scrolled using the UP and DOWN key. For non-latching inputs (property and building safety, non-latching supervisory, troubles) the message is removed from the queue when the circuit is restored. Latching input types will only be removed at system reset.



## 12.0 Remote Annunciator Operation

The FX-350 supports two types of annunciators: conventional LED/switch annunciators and a shared display (LCD) annunciator. Both types are connected to the panel via the RS-485 serial link.

### 12.1 Conventional Annunciators (RA-1000 Series)

The FX-350 is designed to interface with the RA-1000 series of conventional LED annunciators. The LEDs may be configured to zone status indicators. Each conventional annunciator contains a local alert buzzer. Under normal operation the alert buzzer is controlled by the system and operates in an identical manner as the one in the main panel. If communication fails it is processed locally.

### 12.2 Supervision

The communications with each annunciator is constantly supervised both by the panel and by the annunciator. If communications fails, the panel will activate the common trouble sequence. The number of annunciators is set during panel configuration. If there is a mismatch in the total number of annunciators the panel will generate communications trouble. When the correct number of annunciators is detected the troubles will clear.

### 12.3 Shared Display Annunciator (RAM-300LCD)

The shared display annunciator has identical operation to the main shared display and operates in conjunction with the main display (viewing items in the queues on one shared display flag the items as viewed on all shared displays). The shared display annunciator contains a local alert buzzer. Under normal operation the alert buzzer is controlled by the system and operates in an identical manner as the one in the main panel. If communication fails it is processed locally. The configuration cannot be performed by the shared display annunciator.

### 12.4 Supervision

The supervision of the shared display annunciator is same as for the remote LED annunciators

The SRM-312 Smart Relay Module is connected on the RS-485 loop along with other remote annunciators, but provides 12 relay contact outputs which actuate according to the first 12 remote LED groups. The relays are bypassed by Auxiliary Bypass, and the unit is supervised as one of the (maximum) eight permitted annunciators.

## 13.0 Dialer Operation

The FX-350 Series (models with a D suffix) Fire Control panels are equipped with a built-in dialer. The dialer provides a means to communicate panel status to the remote central monitoring station using two dedicated phone lines.

There are many standard protocols for communicating with the central monitoring station, but the two most commonly used are supported by this panel

- SIA DCS
- Contact ID

### 13.1 Event Reporting

Events are reported in a special format depending upon the protocol selected.

### 13.2 Telephone line supervision

The phone lines are supervised for the presence of

- DC voltage
- dial tone, stuttered dial tone and message waiting tone

The supervision is carried out every two minutes; first the DC voltage is supervised and if it is detected the dial tone is monitored. If the phone lines are equipped with a house phone and with proper connection if the house phone is in use the supervision is suspended until the house phone is ON-HOOK again.

If there is an event to be reported in the dialer queue and the house phone is in use the dialer tries the second line to report the event if that line's house phone is also in use the dialer seizes the line thus disconnecting the house phone and reports the event.

## 14.0 Appendix A: Compatible Receivers

The dialers that are built into select models of the FX-350 Series Fire Alarm Control Panels are compatible with the following Digital Alarm Communicator Receivers (DACR):

### DACR Receiver Model

SurGard MLR2 Multi-Line Receiver (ULC, ULI approved)

SurGard SLR Single-Line Receiver (ULC, ULI approved)

Osborne-Hoffman Quickalert! II Receiver (ULI approved)

Osborne-Hoffman OH-2000 Receiver (ULI Approved)

Silent Knight Model 9500 Receiver (ULI Approved)

Radionics Model D6500 Receiver (ULI Approved)

Radionics Model D6600 Receiver (ULI Approved)

DSC SurGard System III Receiver (ULC, ULI Approved)\*

DSC SurGard System IV Receiver (ULC, ULI Approved)\*

### Protocols

SIA-DCS and Ademco Contact ID

SIA-DCS and Ademco Contact ID

SIA-DCS and Ademco Contact ID

SIA-DCS and Ademco Contact ID

SIA-DCS and Ademco Contact ID

SIA-DCS and Ademco Contact ID

SIA-DCS and Ademco Contact ID

SIA Contact ID

SIA Contact ID



**Note:** \* When used with DSC GS4010 or DSC GS4010CF Universal Wireless Alarm Communicator through wireless IP connection.

## 15.0 Appendix B: Reporting

**Table 7 Ademco Contact-ID - FX-350 Series Event Codes**

Description	Event Family	Qualifier	Code	Group #	Contact #
Phone Line #1 trouble detected	Trouble	New event	1 351	00	000
Phone Line #2 trouble detected	Trouble	New event	1 352	00	000
Phone Line #1 trouble restored	Trouble	Restore	3 351	00	000
Phone Line #2 trouble restored	Trouble	Restore	3 352	00	000
Failure to report to an Account	Trouble	New event	1 354	Acct #	Acct #
Report to an Account successful	Trouble	Restore	3 354	Acct #	Acct #
RS-485 Communication Trouble	Trouble	New event	1 350	00	485
Periodic (24 hr) Test Event (NORMAL)	Test	New event	1 602	00	000
Periodic (24 hr) Test Event (OFF NORMAL)	Test	New event	1 608	00	000
Manually initiated dialer test	Test	New event	1 601	00	000
Zone Fire Alarm	Alarm	New event	1 110	00	NNN
Zone Fire Alarm restored	Alarm	Restore	3 110	00	NNN
Zone Trouble detected	Trouble	New event	1 300	00	NNN
Zone Trouble restored	Trouble	Restore	3 300	00	NNN
Zone Supervisory condition	Supervisory	New event	1 200	00	NNN
Zone Supervisory restored	Supervisory	Restore	3 200	00	NNN
Water flow	Alarm	New event	1 113	00	NNN
Water flow restored	Alarm	Restore	3 113	00	NNN
Indicating Zone Trouble	Trouble	New event	1 320	00	NNN
Indicating Zone Trouble restored	Trouble	Restore	3 320	00	NNN
General Alarm	Alarm	New event	1 140	00	NNN
General Alarm restored	Alarm	Restore	3 140	00	NNN
AC power lost	Trouble	New event	1 301	00	000
AC power restored	Trouble	Restore	3 301	00	000
Battery Low	Trouble	New event	1 302	00	000
Battery Low restored	Trouble	Restore	3 302	00	000
Ground Fault	Trouble	New event	1 310	00	000
Ground Fault restored	Trouble	Restore	3 310	00	000

SIA protocol does not define indicating zone troubles, but lists it as Untyped Zone Trouble/Restore.

**Table 8 Security Industries Association SIA-DCS - FX-350 Series Event Codes**

Event Description	Event Family	Qualifier	SIA Event Code	Parameter
Phone Line #1 trouble detected	Trouble	New event	LT	001
Phone Line #2 trouble detected	Trouble	New event	LT	002
Phone Line #1 trouble restored	Trouble	Restore	LR	001
Phone Line #2 trouble restored	Trouble	Restore	LR	002
Failure to report to an Account	Trouble	New event	RT	Acct #
Report to an Account successful	Trouble	Restore	YK	Acct #
RS485 Communication Trouble	Trouble	New event	YS	485
Periodic (24 hr) Test Event (Normal)	Test	New event	RP	000
Periodic (24 hr) Test Event (Off-normal)	Test	New event	RY	000
Manually initiated dialer test	Test	New event	RX	000
Zone Fire Alarm	Alarm	New event	FA	NNN
Zone Fire Alarm restored	Alarm	Restore	FH	NNN
Zone Trouble detected	Trouble	New event	FT	NNN
Zone Trouble restored	Trouble	Restore	FJ	NNN
Zone Supervisory condition	Supervisory	New event	FS	NNN
Zone Supervisory restored	Supervisory	Restore	FR	NNN
Water flow alarm	Alarm	New event	WA	NNN
Water flow alarm restored	Alarm	Restore	WH	NNN
General Alarm	Alarm	New event	QA	NNN
General Alarm restored	Alarm	Restore	QH	NNN
Indicating Zone Trouble (*)	Trouble	New event	UT	NNN
Indicating Zone Trouble restored (*)	Trouble	Restore	UR	NNN
AC power lost	Trouble	New event	AT	000
AC power restored	Trouble	Restore	AR	000
Battery Low	Trouble	New event	YT	000
Battery Low restored	Trouble	Restore	YR	000
Ground Fault	Trouble	New event	YP	000
Ground Fault restored	Trouble	Restore	YQ	000

## 16.0 Appendix C: Specifications

### 16.1 FX-350 Series Specifications

Table 9 FX-350 Series Specifications

FX-350 Series Fire Control Panel Chassis	
<b>General</b>	Digital signal processor based design, fully configurable from front panel with password protection.
<b>Addressable loops</b>	One analog loop capable of addressing 126 Mircom addressable devices, or three analog loops capable of addressing 378 Mircom addressable devices.  Power Limited / 37VDC / 400mA / maximum loop resistance depends on number of devices and device type.
<b>Indicating (NAC) Circuits</b>	4 supervised style Y (Class B) indicating circuits, configured as strobes or audibles. Terminals are labelled as <b>SIG 1</b> , <b>SIG 2</b> , <b>SIG 3</b> and <b>SIG 4</b> .  Power limited / Regulated 24VDC FWR / 1.7A @ 49C per circuit
<b>Aux. Supply resettable</b>	Power limited / 21.1 VDC Filtered regulated / 500mA max
<b>Resettable Auxiliary Power (Aux 2)</b>	Terminals are labelled <b>4-WIRE</b> .  Power Limited/21.1 VDC regulated / 300 mA max.
<b>RS-485 Connection</b>	For Remote Annunciators. Terminals are labelled RS485.
<b>Electrical ratings</b>	Power limited / Regulated 24VDC FWR / 1.7A @ 49C per circuit.  <b>Max power allowed</b> <ul style="list-style-type: none"> <li>• 5A</li> <li>• 1.7A (aux power unfiltered if used)</li> <li>• 0.5A (aux power filtered if used)</li> <li>• 0.3A (resettable auxiliary power if used)</li> </ul> If no auxiliaries are used the max power is 5A for the indicating circuits.
<b>Auxiliary relays (resistive loads)</b>	Must be connected to a listed power limited source of supply. Terminals are labelled <b>ALARM</b> , <b>TROUBLE</b> , <b>SUPV</b> .  <b>Common alarm</b> Form C, 1 Amp, 28 VDC <b>Common Supv</b> Form C, 1 Amp, 28 VDC <b>Common Trouble</b> Form C, 1 Amp, 28 VDC
<b>Unfiltered supply</b>	Power limited / Regulated 24VDC FWR / 1.7A max at 49C
<b>Battery</b>	<b>Type</b> 24VDC Gel Cell/Sealed lead acid – 10AH to 24AH <b>Charging capability</b> 10AH to 24AH <b>Current Consumption</b> standby: 200 mA alarm: 350 mA <b>Protection</b> 10A on board (F1) slow blow micro fuse

Table 9 FX-350 Series Specifications (Continued)

FX-350 Series Fire Control Panel Chassis		
Compliance	System Model	FX-350 SERIES, Fire Alarm Control Panel
	System Type	Local, Auxiliary (using PR-300), Remote Protected Premise Station (using PR-300 or FX-350-60-DR or FX-350-126-DR), Central Station Protected Premises (using FX-350-60-DR or FX-350-126-DR).  Proprietary Protected Premise Unit, where PPU is neither co-located with, nor integral with the supervising station (NFPA 72).
	Type of Service	A, M, WF, SS
	Type of Signalling	Non-Coded
	Applicable Standards	NFPA 70 and 72, UL 864 R9, ULC-S524, ULC-S527-11, ULC-S559-13 (Second Edition)

## 16.2 FX-350 System Modules and Annunciators

Table 10 FX-350 System Modules and Annunciators

FX-350 System Modules and Annunciators		
OCAC-304	Output Class A Converter Module	standby: 0 mA / alarm: 0 mA
RAM-208	Zone Remote Annunciator	Standby 35mA / alarm 90mA
RAM-216	Zone Ancillary Annunciator	Standby 35mA / alarm 140mA
RAM-300LCD	LCD Remote Annunciator	Standby 16mA / alarm 40mA
PR-300	Polarity Reversal and City Tie Module	power limited / 24VDC unfiltered / 250mA max / 140hms trip  coil
	Polarity Reversal	power limited / 24VDC open / 12VDC at 3.5mA / 8.5mA max  (shorted)
	Polarity Reversal Supv. Terminal	24VDC (normal) / -24VDC (supervisory) / 0V (trouble)
	Polarity Reversal Alarm Terminal	24VDC (normal) / -24VDC (alarm) / 0V (trouble)
	Current Consumption	standby 50mA / alarm 300mA (city tie in use) / alarm 70mA  (city tie not in use)
RTI	Remote Trouble Indicator	Standby 35mA / alarm 35mA

## 17.0 Appendix D: Power Supply and Battery Calculations

POWER REQUIREMENTS (ALL CURRENTS ARE IN AMPERES)							
Model Number	Description	Qty		STANDBY	TOTAL STANDBY	ALARM	TOTAL ALARM
FX-350-60-DR	Main Panel c/w Dialer		X	0.220	=	0.380	=
FX-350-60-D	Main Panel c/w Dialer		X	0.220	=	0.380	=
FX-351-LW FX-353-LW	Main Panel c/w 1 RAX-332 LED Displays		X	0.210	=	0.390 (Note 1)	=
FX-351-LDW/R FX-353-LDR	Main Panel, c/w 1 RAX-332 LED Displays and Dialer		X	0.230	=	0.400 (Note 1)	=
FX-351-LD	Main Panel c/w Dialer		X	0.220	=	0.380	=
ALC-252	252 Point Dual Loop Addressable Adder		x	0.120	=	0.230	=
RAX-332	32 LED Display		X	0.005	=	0.010	=
PR-300	Polarity Reversal and City Tie Module		X	0.050	=	0.300	=
RAM-300-LCDW/R	Remote LCD Annunciator		X	0.016	=	0.040	=
RAM-208	Remote Annunciator, 8 Zone LED		X	0.0350	=	0.090	=
RAM-216	Ancillary Annunciator, 16 Zone LED		X	0.0350	=	0.140	=
RTI-1	Remote Trouble Indicator		X	0.035	=	0.035	=
MIX-3000	Ionization Detector		X	0.00028	=	0.00028	=
MIX-3100	Photoelectric Detector		X	0.0004	=	0.0034	=
MIX-3200	Multi-sensor Detector		X	0.0005	=	0.0035	=
MIX-3300	Heat Detector		X	0.0005	=	0.0034	=
MIX-100P	Priority Monitor Module		X	0.0006	=	0.0046	=
MIX-101P	Mini Priority Monitor Module		X	0.0006	=	0.0046	=
MIX-100R	Relay Output Module		X	0.00085	=	0.0035	=
MIX-100S	Supervised Control Module		X	0.00100	=	0.00100	=
MIX-100X (Kit) 100XH (Isolator) 100XB (Base)	Isolator c/w Mounting Base		X	0.000035	=	0.000035	=
MIX-2001R	Relay Base		X	0.0	=	0.046	=
Device & Remote LEDs (Maximum 30)			X			0.0040	=
Signal Load (bells, horns, strobes, and etc.)			X				=
Auxiliary Power Supply for Annunciators, etc. (See Note 2)					=		=
Total currents (Add above currents)				STANDBY(A)		ALARM (B)	=



**Notes:** Assumes 25% of Zone LEDS (i.e. 15) are ON during alarm.

See specific installation documentation for standby and alarm currents for other annunciators listed in Panel Components and Accessories. Observe maximum auxiliary power supply ratings for lamp test conditions for remote annunciators.



**Battery Capacity Requirement**

Battery (AH) = (Standby Current Total x Discharge Time) + (Alarm Current Total x Alarm Time)

( [STANDBY (A) \_\_\_\_\_ ] X [(24 or 60 Hours) \_\_\_\_ ] ) + ( [ALARM (B) \_\_\_\_\_ ] X [Alarm in Hr. \_\_\_\_\_ ] ) = (C) \_\_\_\_\_ AH

Total Alarm Current must be **5.5** amperes or less. Indicating Circuits must not to exceed **5** amperes.

**Battery Selection:**

Battery Size = Multiply (C) by 1.20 to derate battery.

Mircom recommends the following batteries for use with this panel:

**Table 11 FX-350 Batteries**

MIRCOM	BATTERY SIZE	UL/ULC RATING
BA-110	12AH	10AH
BA-117	18AH	17AH
BA-124	26AH	24AH

**Batteries:**

- BA-110 (12 AH) will fit into the FX-350 backbox.
- BA-110 (12 AH) and BA-117 (18 AH) will fit into the FX-351/353 and BBX-1024DS(R) backboxes.
- BA-124 (26 AH) batteries will fit into the BC-160 Battery Cabinet.

Use of alternative batteries may result in failure of the panel to meet agency and regulatory requirements, and may result in shortened battery life. Batteries should be tested regularly, and replaced at least every three years.

## 18.0 Warranty and Warning Information

### WARNING!

Please read this document **CAREFULLY**, as it contains important warnings, life-safety, and practical information about all products manufactured by the Mircom Group of Companies, including Mircom and Secutron branded products, which shall include without limitation all fire alarm, nurse call, building automation and access control and card access products (hereinafter individually or collectively, as applicable, referred to as “**Mircom System**”).

#### NOTE TO ALL READERS:

1. **Nature of Warnings.** The within warnings are communicated to the reader out of an abundance of caution and create no legal obligation for Mircom Group of Companies, whatsoever. Without limiting the generality of the foregoing, this document shall NOT be construed as in any way altering the rights and obligations of the parties, governed by the legal documents that apply in any given circumstance.
2. **Application.** The warnings contained in this document apply to all Mircom System and shall be read in conjunction with:
  - a. the product manual for the specific Mircom System that applies in given circumstances;
  - b. legal documents that apply to the purchase and sale of a Mircom System, which may include the company's standard terms and conditions and warranty statements;
  - c. other information about the Mircom System or the parties' rights and obligations as may be application to a given circumstance.
3. **Security and Insurance.** Regardless of its capabilities, no Mircom System is a substitute for property or life insurance. Nor is the system a substitute for property owners, renters, or other occupants to act prudently to prevent or minimize the harmful effects of an emergency situation. Building automation systems produced by the Mircom Group of Companies are not to be used as a fire, alarm, or life-safety system.

#### NOTE TO INSTALLERS:

All Mircom Systems have been carefully designed to be as effective as possible. However, there are circumstances where they may not provide protection. Some reasons for system failure include the following. As the only individual in contact with system users, please bring each item in this warning to the attention of the users of this Mircom System. Failure to properly inform system end-users of the circumstances in which the system might fail may result in over-reliance upon the system. As a result, it is imperative that you properly inform each customer for whom you install the system of the possible forms of failure:

4. **Inadequate Installation.** All Mircom Systems must be installed in accordance with all the applicable codes and standards in order to provide adequate protection. National standards require an inspection and approval to be conducted by the local authority having jurisdiction following the initial installation of the system and following any changes to the system. Such inspections ensure installation has been carried out properly.
5. **Inadequate Testing.** Most problems that would prevent an alarm a Mircom System from operating as intended can be discovered by regular testing and maintenance. The complete system should be tested by the local authority having jurisdiction immediately after a fire, storm, earthquake, accident, or any kind of construction activity inside or outside the premises.

The testing should include all sensing devices, keypads, consoles, alarm indicating devices and any other operational devices that are part of the system.

## NOTE TO USERS:

All Mircom Systems have been carefully designed to be as effective as possible. However, there are circumstances where they may not provide protection. Some reasons for system failure include the following. The end user can minimize the occurrence of any of the following by proper training, testing and maintenance of the Mircom Systems:

6. **Inadequate Testing and Maintenance.** It is imperative that the systems be periodically tested and subjected to preventative maintenance. Best practices and local authority having jurisdiction determine the frequency and type of testing that is required at a minimum. Mircom System may not function properly, and the occurrence of other system failures identified below may not be minimized, if the periodic testing and maintenance of Mircom Systems is not completed with diligence and as required.
7. **Improper Operation.** It is important that all system users be trained in the correct operation of the alarm system and that they know how to respond when the system indicates an alarm. A Mircom System may not function as intended during an emergency situation where the user is unable to operate a panic or emergency switch by reason of permanent or temporary physical disability, inability to reach the device in time, unfamiliarity with the correct operation, or related circumstances.
8. **Insufficient Time.** There may be circumstances when a Mircom System will operate as intended, yet the occupants will not be protected from the emergency due to their inability to respond to the warnings in a timely manner. If the system is monitored, the response may not occur in time enough to protect the occupants or their belongings.
9. **Carelessness or Safety Hazards.** Moreover, smoke detectors may not provide timely warning of fires caused by carelessness or safety hazards such as smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits or children playing with matches or arson.
10. **Power Failure.** Some Mircom System components require adequate electrical power supply to operate. Examples include: smoke detectors, beacons, HVAC, and lighting controllers. If a device operates only by AC power, any interruption, however brief, will render that device inoperative while it does not have power. Power interruptions of any length are often accompanied by voltage fluctuations which may damage Mircom Systems or other electronic equipment. After a power interruption has occurred, immediately conduct a complete system test to ensure that the system operates as intended.
11. **Battery Failure.** If the Mircom System or any device connected to the system operates from batteries it is possible for the batteries to fail. Even if the batteries have not failed, they must be fully charged, in good condition, and installed correctly. Some Mircom Systems use replaceable batteries, which have a limited life-span. The expected battery life is variable and in part dependent on the device environment, usage and type. Ambient conditions such as high humidity, high or low temperatures, or large temperature fluctuations may reduce the expected battery life. Moreover, some Mircom Systems do not have a battery monitor that would alert the user in the event that the battery is nearing its end of life. Regular testing and replacements are vital for ensuring that the batteries function as expected, whether or not a device has a low-battery monitor.
12. **Physical Obstructions.** Motion sensors that are part of a Mircom System must be kept clear of any obstacles which impede the sensors' ability to detect movement. Signals being communicated by a Mircom System may not reach the receiver if an item (such as metal, water, or concrete) is placed on or near the radio path. Deliberate jamming or other inadvertent radio signal interference can also negatively affect system operation.

13. **Wireless Devices Placement Proximity.** Moreover all wireless devices must be a minimum and maximum distance away from large metal objects, such as refrigerators. You are required to consult the specific Mircom System manual and application guide for any maximum distances required between devices and suggested placement of wireless devices for optimal functioning.
14. **Failure to Trigger Sensors.** Moreover, Mircom Systems may fail to operate as intended if motion, heat, or smoke sensors are not triggered.
  - a. Sensors in a fire system may fail to be triggered when the fire is in a chimney, walls, roof, or on the other side of closed doors. Smoke and heat detectors may not detect smoke or heat from fires on another level of the residence or building. In this situation the control panel may not alert occupants of a fire.
  - b. Sensors in a nurse call system may fail to be triggered when movement is occurring outside of the motion sensors' range. For example, if movement is occurring on the other side of closed doors or on another level of the residence or building the motion detector may not be triggered. In this situation the central controller may not register an alarm signal.
15. **Interference with Audible Notification Appliances.** Audible notification appliances may be interfered with by other noise sources such as stereos, radios, televisions, air conditioners, appliances, or passing traffic. Audible notification appliances, however loud, may not be heard by a hearing-impaired person.
16. **Other Impairments.** Alarm notification appliances such as sirens, bells, horns, or strobes may not warn or waken a sleeping occupant if there is an intervening wall or door. It is less likely that the occupants will be alerted or awakened when notification appliances are located on a different level of the residence or premise.
17. **Software Malfunction.** Most Mircom Systems contain software. No warranties are provided as to the software components of any products or stand-alone software products within a Mircom System. For a full statement of the warranties and exclusions and limitations of liability please refer to the company's standard Terms and Conditions and Warranties.
18. **Telephone Lines Malfunction.** Telephone service can cause system failure where telephone lines are relied upon by a Mircom System. Alarms and information coming from a Mircom System may not be transmitted if a phone line is out of service or busy for a certain period of time. Alarms and information may not be transmitted where telephone lines have been compromised by criminal tampering, local construction, storms or earthquakes.
19. **Component Failure.** Although every effort has been made to make this Mircom System as reliable as possible, the system may fail to function as intended due to the failure of a component.
20. **Integrated Products.** Mircom System might not function as intended if it is connected to a non-Mircom product or to a Mircom product that is deemed non-compatible with a particular Mircom System. A list of compatible products can be requested and obtained.

## Warranty

**Purchase of all Mircom products is governed by:**

<https://www.mircom.com/product-warranty>

<https://www.mircom.com/purchase-terms-and-conditions>

<https://www.mircom.com/software-license-terms-and-conditions>



