

FUJIFILM

DIGITAL CAMERA

X-E3

New Features Guide

Version 1.20

Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:

http://www.fujifilm.com/support/digital_cameras/software/fw_table.html

Contents

X-E3 firmware version 1.20 adds or updates the features listed below. For the latest manual, visit the following website.

<http://fujifilm-dsc.com/en/manual/>

No.	Description	X-E3 	See 	Ver.
1	Default settings have changed.	45	1	1.10
2	LARGE INDICATORS MODE(EVF) and LARGE INDICATORS MODE(LCD) options have been added to SCREEN SETTING in the setup menu.	222	3 4	1.20
3	A LARGE INDICATORS DISP. SETTING option has been added to SCREEN SETTING in the setup menu.	222	5	1.20
4	A SMARTPHONE SYNC. SETTING option has been added to CONNECTION SETTING > Bluetooth SETTINGS in the setup menu.	241	6	1.10
5	A SELECT PAIRING DESTINATION option has been added to CONNECTION SETTING > Bluetooth SETTINGS in the setup menu.	241	8	1.20
6	A PC CONNECTION MODE option has been added to CONNECTION SETTING in the setup menu.	242	9	1.20
7	Third-party studio flash commanders compatible with the FUJIFILM flash system can now be used.	261	10	1.20
8	FUJINON XC15-45mmF3.5-5.6 OIS PZ lenses are now supported.	276	11	1.20

Changes and Additions

Changes and additions are as follows.

X-E3 Owner's Manual:  45
Basic Setup

Ver. 1.10

3 Pair the camera with the smartphone or tablet.


Press **MENU/OK** to pair the camera with a smartphone or tablet running the FUJIFILM Camera Remote app.



 To skip pairing, press **DISP/BACK**.


4 Check the time.

When pairing is complete, you will be prompted to set the camera clock to the time reported by the smartphone or tablet. Check that the time is correct.

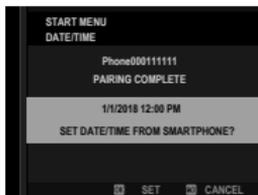

 To set the clock manually, press **DISP/BACK** ( 46).

5 Synchronize the camera settings with the settings configured on your smartphone or tablet.

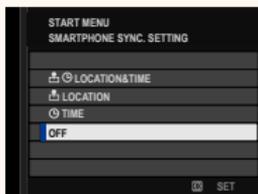

6 Set the clock.

Press **MENU/OK** to set the camera clock to the time reported by the smartphone or tablet and exit to shooting mode.



If the battery is removed for an extended period, the camera clock will be reset and the language-selection dialog will be displayed when the camera is turned on.

Skipping the Current Step

Press **DISP/BACK** to skip the current step. A confirmation dialog will be displayed; select **NO** to avoid repeating any steps you skipped the next time the camera is turned on.

Select **ON** to display large indicators in the electronic viewfinder. The indicators displayed can be selected using **SCREEN SETTING > LARGE INDICATORS DISP. SETTING**.



OFF



ON



Some icons are not displayed when **ON** is selected for **LARGE INDICATORS MODE(EVF)**, including:

- Focus indicator
- Distance indicator
- AF+MF indicator
- Focus mode
- Microphone/remote release
- Others



If **LARGE INDICATORS MODE** is assigned to a function button, the button can be used to toggle **LARGE INDICATORS MODE** on (**ON**) and off (**OFF**) (226, 254).

Select **ON** to display large indicators in the LCD monitor. The indicators displayed can be selected using **SCREEN SETTING > LARGE INDICATORS DISP. SETTING**.



OFF



ON


Some icons are not displayed when **ON** is selected for **LARGE INDICATORS MODE(LCD)**, including:

- Focus indicator
- Focus mode
- Distance indicator
- Microphone/remote release
- AF+MF indicator
- Others

If **LARGE INDICATORS MODE** is assigned to a function button, the button can be used to toggle **LARGE INDICATORS MODE** on (**ON**) and off (**OFF**) (226, 254).

LARGE INDICATORS DISP. SETTING

Choose the indicators displayed when **ON** is selected for **SCREEN SETTING > LARGE INDICATORS MODE(EVF) or LARGE INDICATORS MODE(LCD)**.

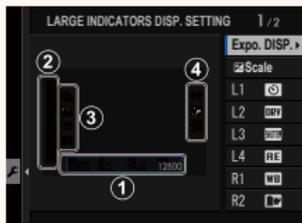

Option	Description
① Expo. DISP.	Choose the items listed at the bottom of the display. Selected items are indicated by check marks (☑); to deselect, highlight the check marks and press MENU/OK .
② Scale	Select ON to display the exposure indicator.
③ L1, L2, L3, L4	Choose up to four large icons for display on the left side of the screen.
④ R1, R2, R3, R4	Choose up to four large icons for display on the right side of the screen.

Bluetooth SETTINGS

Adjust Bluetooth settings.

Option	Description
PAIRING REGISTRATION	To pair the camera with a smartphone or tablet, select this option, then launch FUJIFILM Camera Remote on the smart device and tap PAIRING REGISTRATION .
DELETE PAIRING REG.	End pairing.
Bluetooth ON/OFF	<ul style="list-style-type: none">• ON: The camera automatically establishes a Bluetooth connection with paired devices when turned on.• OFF: The camera does not connect via Bluetooth.
AUTO IMAGE TRANSFER	<ul style="list-style-type: none">• ON: Mark JPEG images for upload as they are taken.• OFF: Photos are not marked for upload as they are taken.
SMARTPHONE SYNC. SETTING	Choose whether to synchronize the camera to the time and/or location provided by a paired smartphone. <ul style="list-style-type: none">• LOCATION&TIME: Synchronize the time and location.• LOCATION: Synchronize the location.• TIME: Synchronize the time.• OFF: Synchronization off.



Install the latest version of the FUJIFILM Camera Remote app on your smartphone or tablet before pairing the device with your camera or uploading images.

When **ON** is selected for both **Bluetooth ON/OFF** and **AUTO IMAGE TRANSFER**, upload to paired devices will begin shortly after you exit to playback or turn the camera off.

If **AUTO IMAGE TRANSFER** is off, pictures can be marked for transfer using the **IMAGE TRANSFER ORDER** option in the playback menu.

Bluetooth SETTINGS

Adjust Bluetooth settings.

Option	Description
PAIRING REGISTRATION	To pair the camera with a smartphone or tablet, select this option, then launch FUJIFILM Camera Remote on the smart device and tap PAIRING REGISTRATION .
SELECT PAIRING DESTINATION	Select a smartphone to which to connect from a list of paired devices.
DELETE PAIRING REG.	End pairing.
Bluetooth ON/OFF	<ul style="list-style-type: none">• ON: The camera automatically establishes a Bluetooth connection with paired devices when turned on.• OFF: The camera does not connect via Bluetooth.
AUTO IMAGE TRANSFER	<ul style="list-style-type: none">• ON: Mark JPEG images for upload as they are taken.• OFF: Photos are not marked for upload as they are taken.
SMARTPHONE SYNC. SETTING	Choose whether to synchronize the camera to the time and/or location provided by a paired smartphone. <ul style="list-style-type: none">• LOCATION&TIME: Synchronize the time and location.• LOCATION: Synchronize the location.• TIME: Synchronize the time.• OFF: Synchronization off.

PC CONNECTION MODE

Adjust settings for connection to a computer.

Option	Description
USB CARD READER	Connecting the camera to a computer via USB automatically enables data transfer mode, allowing data to be copied to the computer. The camera functions normally when not connected.
USB RAW CONV./ BACKUP RESTORE	Connecting the camera to a computer via USB automatically enables USB RAW conversion/backup restore mode. The camera functions normally when not connected. <ul style="list-style-type: none"><li data-bbox="355 628 958 790">• USB RAW CONV. (requires FUJIFILM X RAW STUDIO): Use the camera's image processing engine to rapidly convert RAW files to high-quality JPEG images.<li data-bbox="355 790 958 946">• BACKUP RESTORE (requires FUJIFILM X Acquire): Save and load camera settings. Reconfigure the camera in an instant or share settings with other cameras of the same type.

Flash Settings

Third-party studio flash commanders compatible with the FUJIFILM flash system can now be used. For more information, see the documentation provided your studio flash unit.

Power Zoom

The camera now supports XC15-45mmF3.5-5.6 OIS PZ power zoom lenses. The following features are available:

- The zoom ring can be used to adjust zoom.
- The focus ring can be used to make fine adjustments to zoom in focus modes **S** (AF-S) and **C** (AF-C).
- The zoom position remains fixed during interval-timer photography.
- The lens remains extended during playback so that shooting can quickly be resumed.

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

http://www.fujifilm.com/products/digital_cameras/index.html

