


**VOICE RECOGNITION TIPS**(If equipped)



BLUETOOTH®

Command

Example

Dial <Phone #> ———— “Dial 7-1-4-9-6-5-3-0-0-0”

Call <Name> ———— “Call John Smith”

Improving how you store your contacts can optimize your Bluetooth® Voice Recognition performance:

- Use full names instead of short or single-syllable names (“John or Dad”)
- Avoid using special characters/emojis or abbreviations (“Dr.”) when saving contacts

NAVIGATION

Command

Example

Find Address ———— “1-2-3-4-5 1st Street, <House #, Street, City, State>

Find <POI Name> — “Find McDonald’s®”

Located on Rearview Mirror

DESTINATION SEARCH BY VOICE

Command

Example

Find <POI Name> ———— “Find Lowe’s® near me”

<POI Name> ———— “Starbucks®”

- ☐ BLUE LINK
 - Assist with creating MyHyundai.com account
 - Assist with Blue Link enrollment
 - Show Blue Link User's Manual
 - Encourage customer to download the MyHyundai with Blue Link app
- ☐ INTRODUCTION AND LOCATION OF THE SERVICE DEPARTMENT
- ☐ SET FIRST SERVICE APPOINTMENT
- ☐ REVIEW FACTORY RECOMMENDED MAINTENANCE SCHEDULE
- ☐ WAS THE CONDITION OF YOUR VEHICLE (AT DELIVERY) TO YOUR SATISFACTION?

MAINTENANCE				
Scheduled Maintenance	Normal Usage		Severe Usage*	
Engine Oil and Filter (3.8 GDI)	Replace	7,500 or 12 mos.	Replace	3,750 or 6 mos.
Fuel System Cleaner Additive	Add	At every Oil and Filter Service	Add	Same As Normal
Tire Rotation	Perform	7,500	Perform	7,500
Air Cleaner Filter	Inspect Replace	7,500 22,500	Inspect Replace	Same As Normal More Frequently
Battery Condition	Inspect	7,500	Inspect	Same As Normal
Vacuum Hose	Inspect	7,500	Inspect	Same As Normal
Climate Control Air Filter	Replace	Every 12 mos.	Replace	More Frequently
Brake Hoses and Lines	Inspect	7,500	Inspect	Same As Normal
Drive Shafts and Boots	Inspect	7,500	Inspect	7,500 or 6 mos.
Exhaust Pipe and Muffler	Inspect	7,500	Inspect	Same As Normal
Front Brake Disc/Pads, Calipers	Inspect	7,500	Inspect	More Frequently
Rear Brake Disc/Pads	Inspect	7,500	Inspect	More Frequently
Steering Gear Box, Linkage & Boots, Lower/Upper Arm Ball Joint	Inspect	7,500	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	7,500	Inspect	Same As Normal
Propeller Shaft (AWD)	Inspect	7,500	Inspect	7,500 or 6 mos.
Brake Fluid	Inspect	15,000	Inspect	Same As Normal
Fuel Filter	Inspect	15,000	Inspect	Same As Normal
Fuel Lines, Fuel Hoses, and Connections	Inspect	30,000	Inspect	Same As Normal
Fuel Tank Air Filter	Inspect	15,000	Inspect	Same As Normal
Parking Brake	Inspect	15,000	Inspect	More Frequently
Vapor Hose and Fuel Filler Cap, Fuel Tank	Inspect	30,000	Inspect	Same As Normal
Transfer Case Oil (AWD)	Inspect	37,500	Replace	75,000
Rear Axle Oil (AWD)	Inspect	37,500	Replace	75,000
Valve Clearance	Inspect	60,000	Inspect	Same As Normal
Drive Belts	Inspect	1st: 60,000 or 72 mos. Add'l.: 15,000 or 24 mos.	Inspect	Same As Normal
Coolant	Replace	1st: 120,000 or 10 yrs. Add'l.: 30,000 or 24 mos.	Replace	Same As Normal
Spark Plugs (3.8 GDI)	Replace	97,500	Replace	More Frequently
Automatic Transaxle Fluid	No Check, No Service required		Replace	60,000
*Check the engine oil regularly between recommended oil change. Hyundai recommends Quaker State oil.				
*See Owner's Manual for details.				

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

The information contained in this Quick Reference Guide was correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment. Specifications apply to U.S. vehicles only. Please contact your Hyundai dealer for current vehicle specifications.

Sales Consultant	Date	Sales Manager	Date
Customer		Date	
Email			

The Hyundai PALISADE

Quick Reference Guide

Roadside Assistance: 1-800-243-7766
Consumer Affairs: 1-800-633-5151
Sirius XM® Radio: 1-800-967-2346
Blue Link: 1-855-2BLUELINK (1-855-225-8354)



 
HYUNDAI VEHICLE OWNER PRIVACY POLICY

Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect, use, and share this information.

You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at <https://www.hyundaiusa.com/owner-privacy-policy.aspx>. If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Hyundai Motor America
Hyundai Customer Connect Center
P.O. Box 83835
Phoenix, AZ 85071-3835
800-633-5151
consumeraffairs@hmmausa.com

Hyundai's Customer Connect Center representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English). For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.

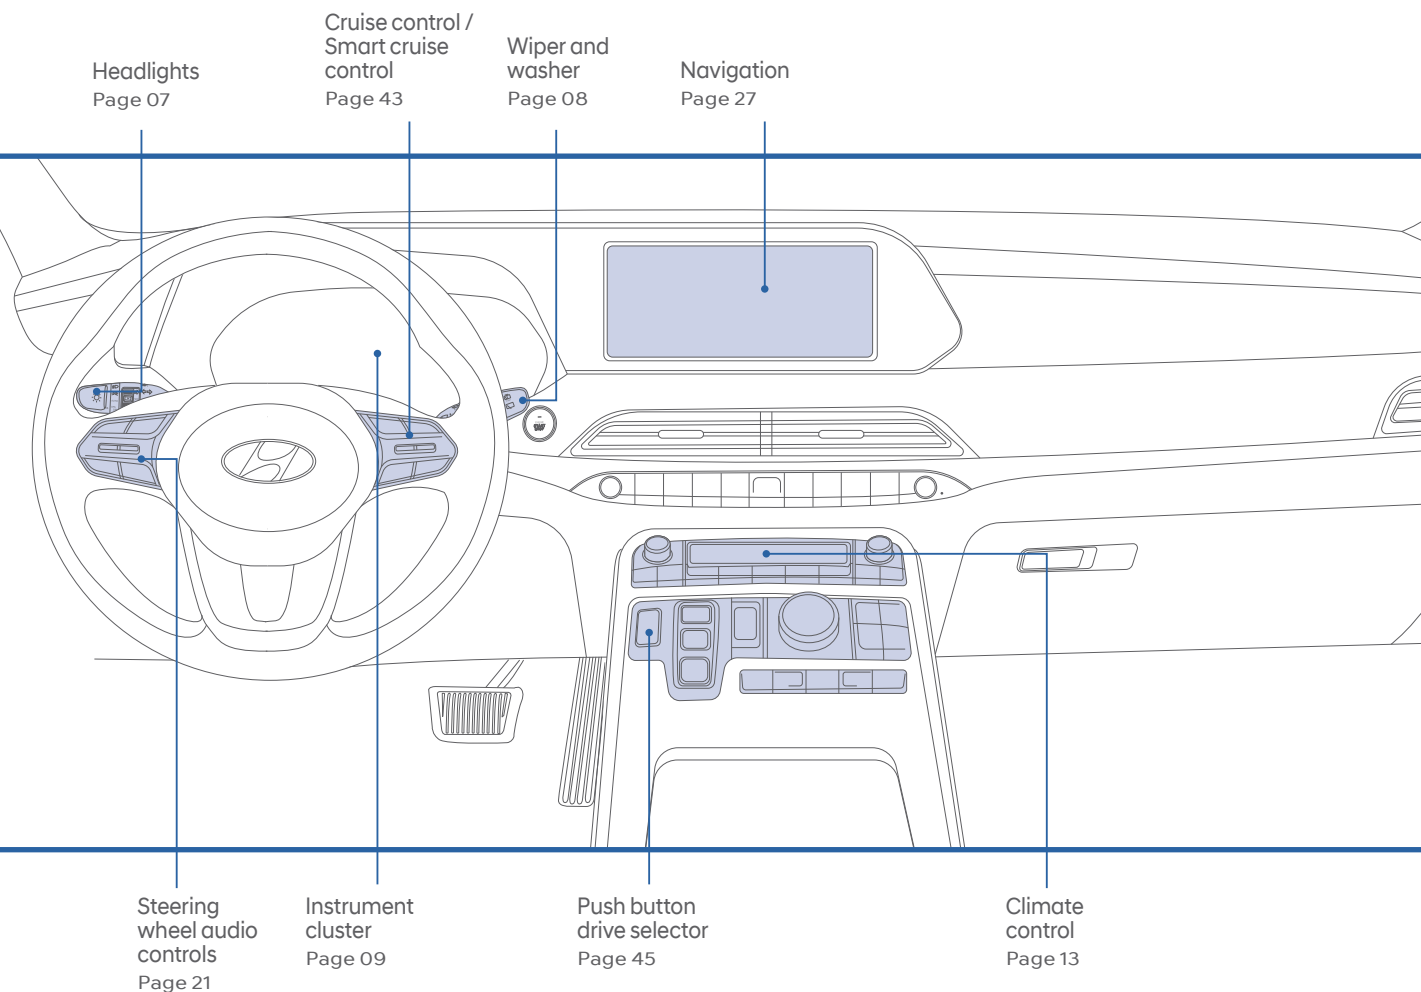

⚠ WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features is available in your Owner's Manual.

FEATURES AND CONTROLS

Climate control	13
Display Settings	12
Door locks	02
Fuel filler door	02
Headlights	07
Head-up display (HUD)	06
Heated steering wheel	18
Homelink wireless garage control system	19
Instrument cluster	09
Instrument panel illumination	12
Interior lights	05
Power liftgate button	06
Rear climate control	17
Remote & Smart key	01
Seat-Rear seat folding	04
Seat-Seat adjustment	03
Seat-Seat warmers and coolers	18
Service Interval Reminder System	12
Sunroof	05
Trip computer	11
Wiper and washer	08
Wiper blades	08
Warnings and indicators	11

INFOTAINMENT


Android Auto™	29
Apple CarPlay™	31
USB and smartphone port	28
Blue link telematic system	23
Bluetooth operational tips	21
Bluetooth phone pairing	20
Navigation	27
Radio mode	26
Steering wheel audio control	21
Voice recognition tips	22
Wireless cellular phone charging system	28

DRIVING

Auto hold	46
Blind Spot Collision Avoidance Assist (BCA)	36
Cruise control / Smart cruise control	43
Drive mode	41
Electric Parking Brake (EPB)	46
Forward Collision-Avoidance Assist (FCA)	36
Highway Driving Assist (HDA)	44
Idle Stop and Go (ISG)	40
Lane Following Assist (LFA)	35
Lane Keeping Assist System (LKAS)	35
Leading vehicle departure alert	44
Push button drive selector	45
Rear Occupant Alert (ROA)	39
Rear Cross-traffic Collision-Avoidance Assist (RCCA)	37
Safe Exit Assist (SEA)	38
Tire Pressure Monitoring System (TPMS)	42


*Some vehicles may not be equipped with all the listed features.

 REMOTE & SMART KEY

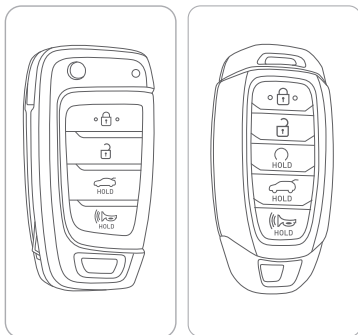


- Lock**
- Unlock**
- Engine remote start button**
- Liftgate Unlock/Open** (Press and hold. Liftgate will open if equipped with Power Liftgate.)
- Panic**

 Note: To start the vehicle remotely, press and hold the remote start button for over 2 seconds within 4 seconds after locking the doors.”

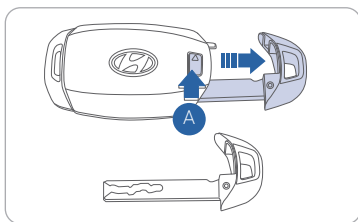


 Removing the mechanical key
Slide and hold the release button **A** to remove the mechanical key.

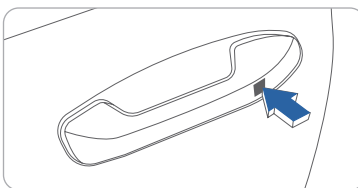




Driver's door Lock / Unlock
Smart key must be within 28~40in. from the outside door handle.
Press: One time - Unlock driver door
Two times - Unlock all doors
Three times - Lock all doors

 NOTE: User selectable option : Please see section 3 from Owner's Manual for more details.

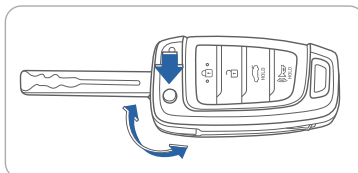

To unfold the mechanical key, press the release button on the remote.

   DOOR LOCKS

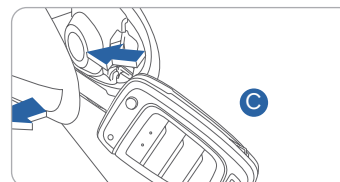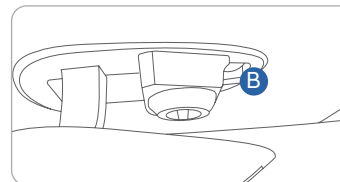
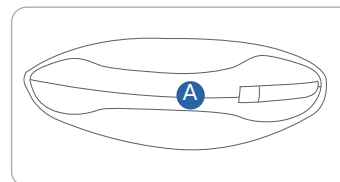


To access the key hole:


If the smart key is not working properly, there is an alternative way to unlock the doors through the keyhole on the driver's door.

1. Pull open the driver's door handle **A**
2. While holding the door handle open, use mechanical key to release the clip **B** behind the door handle.
3. Remove the key hole cover **C**

  After removing the cover, turn the key toward the front of the vehicle to unlock and toward the rear of the vehicle to lock. Once the door is unlocked it may be opened by pulling the handle.

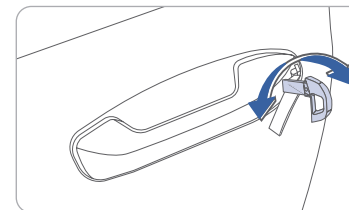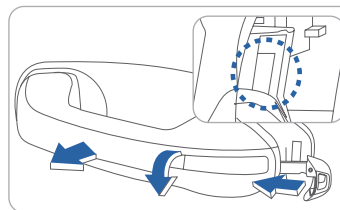

FUEL FILLER DOOR

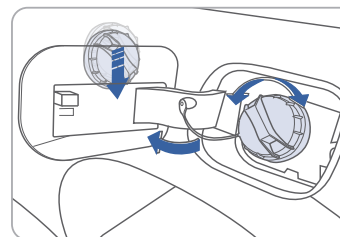 


To open fuel filler door:
Turn engine off and unlock driver door.
Push the fuel filler door in.
Pull the fuel filler door outward to access the fuel tank cap.

NOTE: The fuel filler door will lock when all doors are locked.


FRONT SEAT ADJUSTMENT (MANUAL)



 
Forward/backward




Seat cushion height (for driver's seat)

 

Seatback angle

 


FRONT SEAT ADJUSTMENT (POWER)

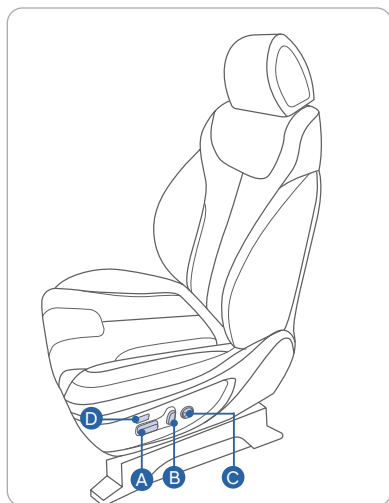 

Forward / backward



 
Seat cushion height




Seatback angle



 Lumbar support (for driver's seat)





Seat cushion extension

 


REAR SEAT FOLDING

  
2nd row seat

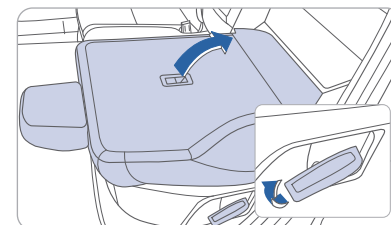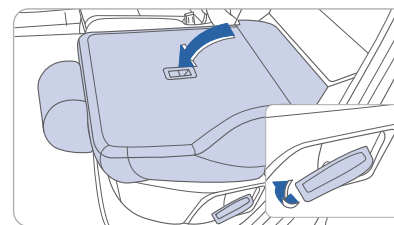

3rd row seat

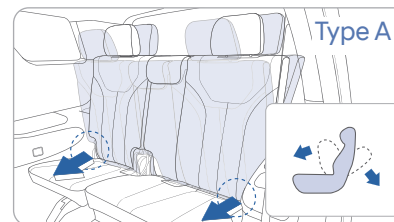 


Type A

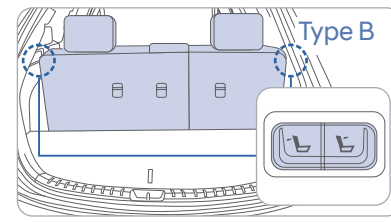 

Type B



To adjust the third row seats, press the switch on the left and right side.

 From cargo area

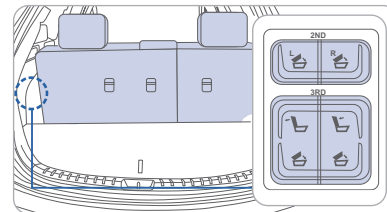


To fold the rear seats from the cargo area, push the 2nd or 3rd row seat back folding switch located on the left side of the cargo area.

  Walk-in Seat

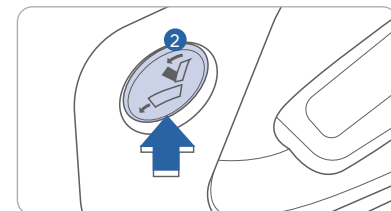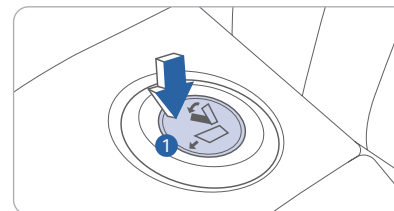

To get in or out of the third row seat, push the walk-in switch located on top of the 2nd row seat ① or on the side of the 2nd row seat ②.

 SUNROOF

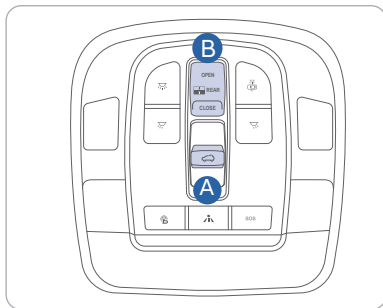


Rear Sunshade




To open the rear sunshade, press the open **B** button. To Close the sunshade, press the close **C** button

 Sliding the Sunroof

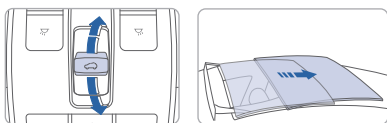

Pull and hold the sunroof control lever backward to the first detent to open the sunroof incrementally. Pull the sunroof control lever backward past the first detent to slide open the sunroof completely. Push the sunroof control lever forward to the second detent position to close sunroof glass with the sunshade.

 
Tilting the Sunroof

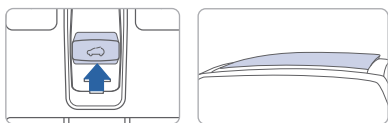

Push the sunroof control lever upward to tilt open the sunroof. Push again the sunroof control lever upward to tilt the sunroof glass closed.

NOTE: If your vehicle is equipped with a dual wide sunroof, you can slide your rear blind with the rear blind control button **B**.

 INTERIOR LIGHTS

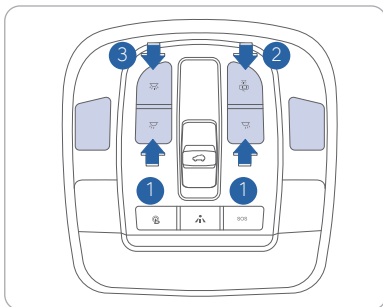

Front map lamp ①

Press the button to turn the map lamp on or off.

Front door lamp ②

Lights will turn on when any door is open.

 
Front room lamp ③

Push the switch to turn the room lamp on.

Front room lamp ④

Push the switch to turn the room lamp off.

POWER LIFTGATE BUTTON

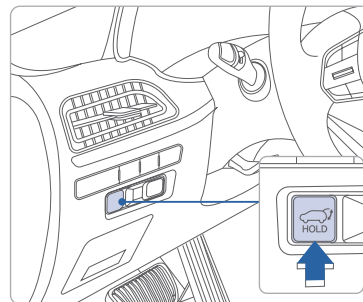

When the ignition is on and the vehicle is in park, the power liftgate can be opened by using the console button on the dash. Before using the power liftgate, make sure it is selected in the User Setting modes in the LCD display.

To Activate:

 
User Settings → Door → Power Liftgate

Adjusting Speed:

The speed of the power liftgate can be adjusted in the User Settings mode in the LCD display.

User Settings → Door → Power Liftgate Speed → Normal/Fast


HEAD-UP DISPLAY (HUD)

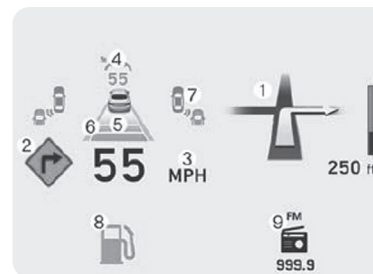

The Head-Up Display is an optional feature that allows the driver to view information projected onto a transparent screen while driving.


To Activate:

 On the All Menus screen, press Setup > Vehicle. Select "Enable Head-Up Display"

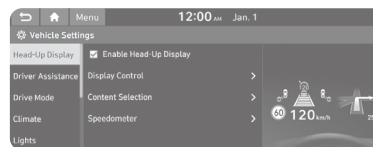

NOTE: If you wear polarizing-filter sunglasses, it may be difficult to read the Head Up Display information.

 HEADLIGHTS

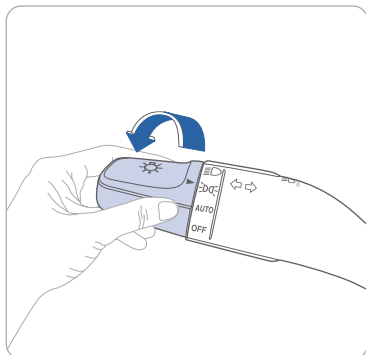



- ▶ | Headlights
- ▶ | Parking lights
- ▶ | **AUTO** Auto lights
- ▶ | **OFF** All lights off

Headlight delay


Headlights may stay on for 15 seconds after exiting and locking vehicle. Press remote lock button twice to turn headlights off.

See Owner's Manual for more detail.

  Turn signals and lane change signals Flashing headlights

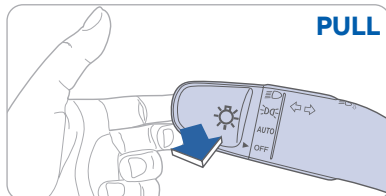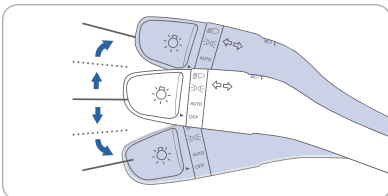


High beam / Smart high beam

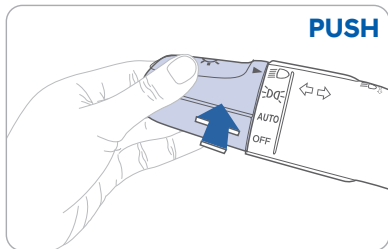 

Smart High Beam Function

1. Select auto position on stalk.
2. Push lever forward to engage Auto High beam.
3. Push lever forward again to disengage.

 WIPER AND WASHER

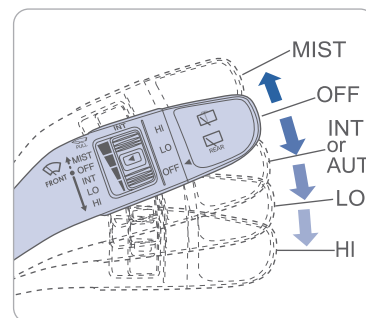

MIST - Single wipe

OFF - Off

INT - Intermittent wipe
or

 
AUTO - Auto control wipe

LO - Normal wiper speed

HI - Fast wiper speed

NOTE: Push away for rear wiper.


WIPER BLADES

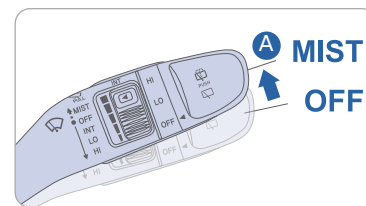

This vehicle has a "hidden" wiper design which means they cannot be lifted in their bottom resting position.

Wiper Blade Removal

 1. Within 20 seconds of turning off the engine, lift and hold the wiper lever up to the **MIST A** position for about 2 seconds until the wipers move to the top wipe position.
2. At this position, you are able to lift the wipers off the windshield.
3. Gently put wipers back down onto windshield.
4. Turn the wipers to any ON position to return to resting position.

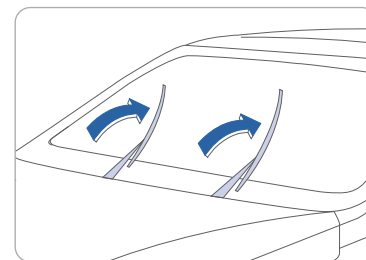

NOTE: To prevent damage to the hood and wiper arms, the wiper arms should only be lifted when in the top wiping position.

INSTRUMENT CLUSTER

 
Type A



Type B



Type C

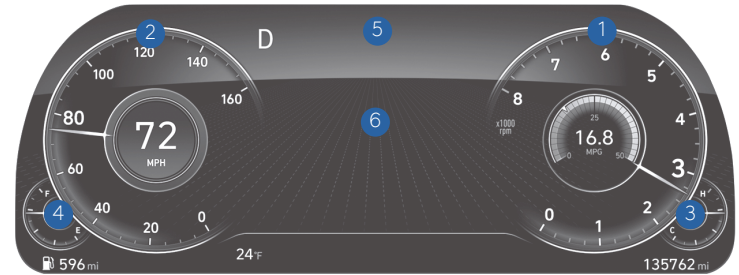


- 1 Tachometer
- 2 Speedometer
- 3 Engine coolant temperature gauge
- 4 Fuel gauge
- 5 Warning and indicator lights
- 6 LCD display (including Trip computer)

WARNINGS AND INDICATORS


Airbag warning light	Seat belt warning light	Parking brake & Brake fluid warning light
ABS warning light	Electronic Brake force Distribution (EBD) System warning light	
Electric Power Steering (EPS) warning light	Malfunction Indicator Lamp (MIL)	Charging system warning light
Engine coolant temperature warning light	Engine oil pressure warning light	Low fuel level warning light
Low Tire Pressure Warning Light/TPMS system malfunction light	Electronic Stability Control (ESC) indicator	Electronic Stability Control (ESC) OFF indicator
AWD warning light	Immobilizer indicator	Turn signal indicator
Highway Driving Assist Feature	Light ON indicator	Idle Stop and Go (ISG)
High beam indicator	Cruise ON indicator	Cruise SET indicator
AWD LOCK indicator	Smart high beam indicator	Electric Parking Brake (EPB) warning light
Downhill Brake Control (DBC) indicator	Forward Collision Avoidance Assist (FCA)	AUTO HOLD indicator Light (if equipped)
SPORT Mode indicator Light		

 TRIP COMPUTER

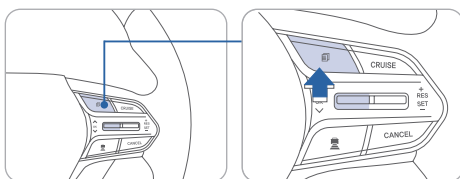


Select "Trip Computer" mode by pressing the MODE button .

 To change the trip mode as follows, press the MOVE button .

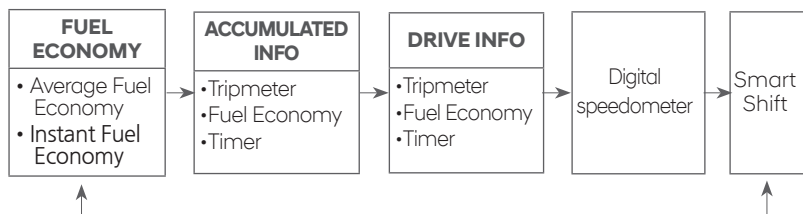

INSTRUMENT PANEL ILLUMINATION

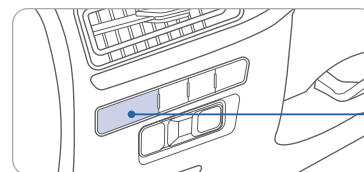 

Press the control button left (-) or right (+) to adjust the brightness.



 
DISPLAY SETTINGS



The center display can be changed from analog to digital. To change the settings follow the steps below:

1. On the All Menus screen, touch Setup > General
2. The general settings screen will appear
3. Touch "screen saver"
4. Select Analog or Digital

SERVICE INTERVAL REMINDER SYSTEM

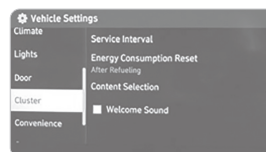


This system is designed to notify you of your next vehicle maintenance interval

To Activate:


Press the SETUP button on the control panel and select VEHICLE SETTINGS on the screen.

 Select the following:

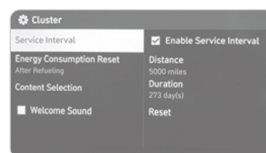

Cluster > Service Interval > Enable Service Interval > Enter Interval Distance/Time

 MANUAL CLIMATE CONTROL

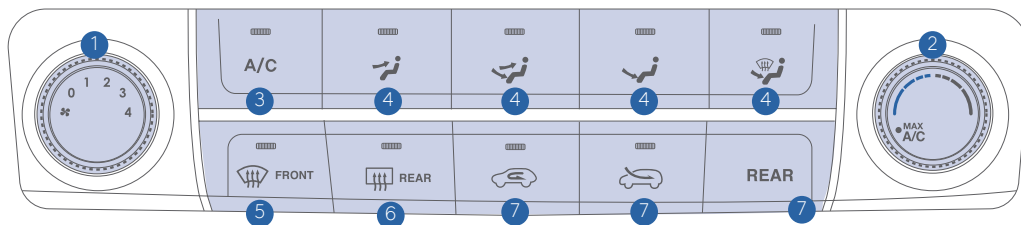


1. Fan speed control knob
2. Temperature control knob
3. Air conditioning button
4. Mode selection button
5. Front windshield defroster button
6. Rear window defroster button
7. Air intake control button
8. Rear climate control button


DEFROSTING / DEFOGGING



 1. Press the front windshield defroster button.



 2. Set the temperature control to the warmest setting.





3. Set the fan speed to the higher setting.

NOTE:


To reduce the tendency of the glass to fog up and also to improve visibility, keep the surface of the windshield clean by wiping it occasionally with glass cleaner and a clean cloth.

In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

  AIR INTAKE CONTROL

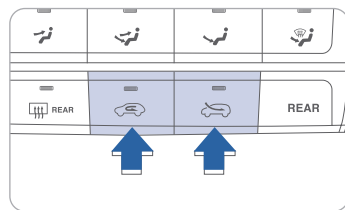


Recirculated air position

 

Outside (fresh) air position

 
MODE SELECTION

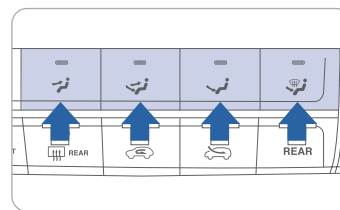

Changes the direction of the air flow as following:


- Face Level
- Bi-Level
- Floor Level
- Floor / Defrost Level

 REAR WINDOW DEFROSTER

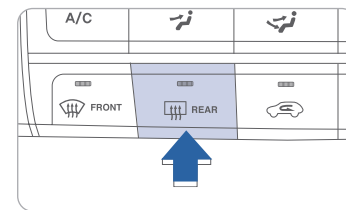

Press to activate / deactivate the rear defroster.

 
MAX A/C MODE

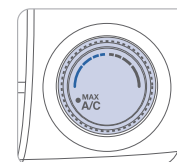

The MAX A/C automatically selects the A/C, recirculated air, and face level vents. This helps to cool the cabin down more quickly. Select normal A/C after initial cool down to resume fresh airflow and maintain efficiency.


AUTOMATIC CLIMATE CONTROL

 - 1 Driver's temperature control knob
- 2 Passenger's temperature control knob
- 3 AUTO (automatic control) button
- 4 SYNC button
- 5 OFF button
- 6 Front windshield defroster button
- 7 Air conditioning button

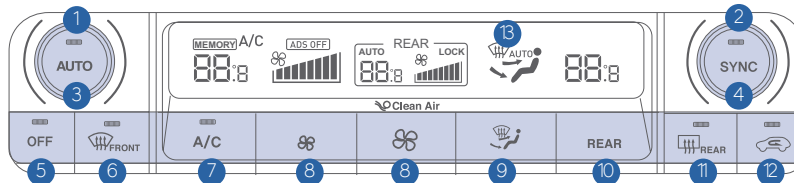

- 8 Fan speed control button
- 9 Mode selection button
- 10 Rear climate control button
- 11 Rear window defroster button
- 12 Air intake control button
- 13 Climate control information screen

 DEFOGGING/DEFROSTING



1. Press the front windshield defroster button.
2. Set the temperature control to the warmest setting.
3. Set the fan speed to the higher setting.

NOTE:

To reduce the tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

SYSTEM OFF

Pressing the OFF button will place the system to the OFF mode.

- Climate control fan will turn off.
- Outside (fresh) air position will be selected.
- Vented air will be at last set temperature.

AUTOMATIC HEATING / AIR CONDITIONING



The modes, fan speeds, air intake and air conditioning will be controlled automatically by the temperature setting you select.

It is recommended to use the AUTO function with 72°F temperature set point for optimum comfort and efficiency. Adjust the temperature as desired

AIR INTAKE CONTROL



Recirculated air position (LED on)



Outside (fresh) air position (LED off)

 
MODE SELECTION



Changes the direction of the air flow as following:




REAR CLIMATE CONTROL (AUTOMATIC)

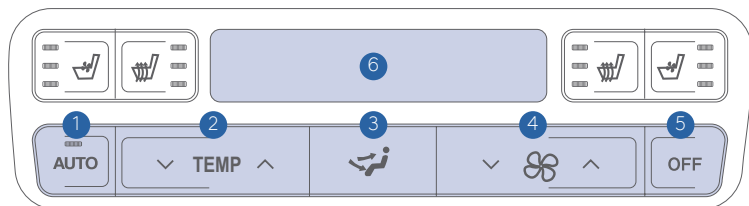

- 1 AUTO button
- 2 Temperature control button
- 3 Mode selection button
- 4 Fan speed control button
- 5 OFF button
- 6 Climate control information screen

 REAR CLIMATE CONTROL (MANUAL)

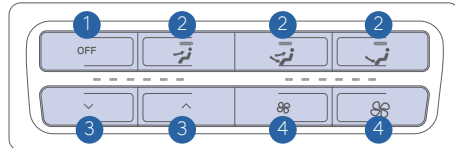


- 1 OFF button
- 2 Mode selection button
- 3 Temperature control button
- 4 Fan speed control button

NOTE:


If you press the rear climate control button of the front climate control system, rear passengers can control the rear climate system by using the rear climate control system.

 HEATED STEERING WHEEL

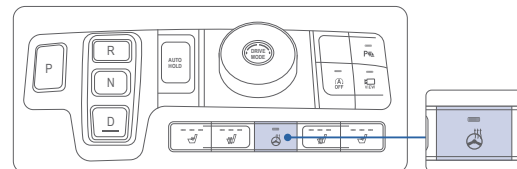

Pressing the heated steering wheel button warms the steering wheel. The indicator light on the button is illuminated when this feature is turned on.

 SEAT WARMERS AND COOLERS (FRONT SEATS)

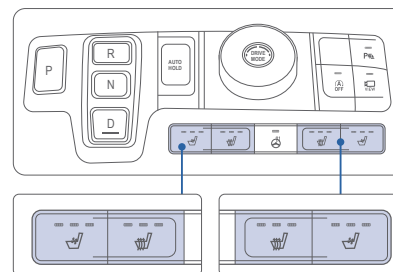

- Heat
- Air Ventilation

Each time you push the button, the setting is changed as follows:



 
SEAT WARMERS AND COOLERS (REAR SEATS)



NOTE:

To turn off immediately, press and hold the button.

HOMELINK WIRELESS GARAGE CONTROL SYSTEM —

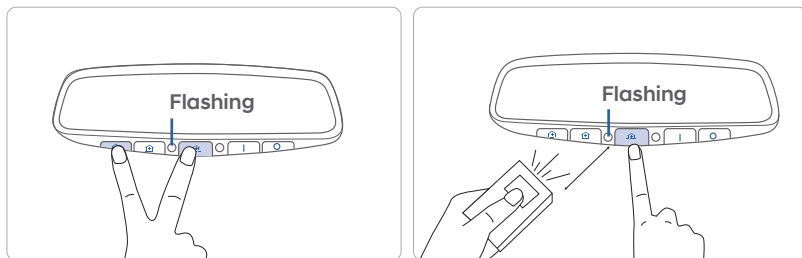

Standard Programming

1. For first time programming, press and hold the two outside buttons (,) until the indicator light starts to flash. (to reprogram buttons, skip this step)
2. Press and hold the desired button (, or) and your transmitter's button at the same time until the Homelink indicator light changes from a slow to a rapid blink.

(The transmitter has to be 1 to 3 inches away from the mirror)
The desired Homelink button is now programmed.

NOTE: If you have a rolling code garage door opener, complete additional steps:

 
 
3. Locate the "Learn" or "Smart" button on your garage door opener. Press and release the button and complete Step 4 within 30 seconds.
4. Return to the vehicle and press the programmed Homelink button up to 4 times (or until the garaged door operates)

For more detailed information, please refer to your Owner's manual or visit www.homelink.com or call (800) 355-3515


BLUETOOTH PHONE PAIRING —

1. If no phones are connected, press the button on the steering wheel.
-Select "add new" if the pairing process has not automatically started.

2. Select the function to connect.

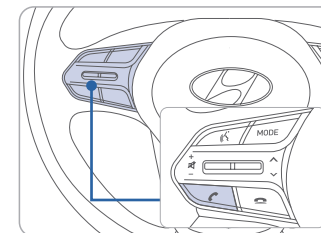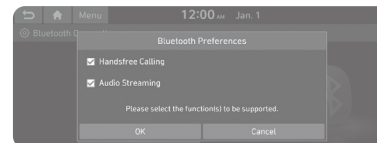

 3. Turn on Bluetooth on the Bluetooth device to connect and select the vehicle system on the list of searched devices.

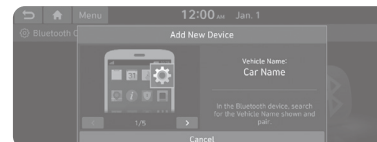


4. Confirm the authentication code matches what is displayed on the radio and displayed on the mobile device you are pairing.
-Approve the request if the codes match.
5. To use hands-free effectively, approve the requests on your mobile device for; phone book contact sharing, call history sharing and SMS notifications.

NOTE:

Requests for contact and other radio and phone sharing are only made if the device supports the function, for Bluetooth audio only, requests will not be made to the device for approval.

 STEERING WHEEL AUDIO CONTROL

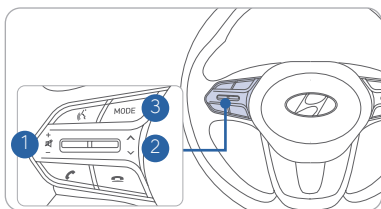


- 1 **VOLUME**
Raises or lowers the speaker volume.
Press to Mute.
- 2 **SEEK / PRESET**
Changes the station.
- 3 **MODE**
Changes the audio source.

BLUETOOTH OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. Keep the Bluetooth volume low. High level volume may result in distortion and echo.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

 Steering wheel bluetooth control

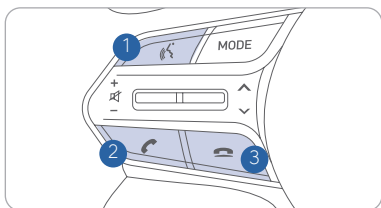

- 1 **VOICE RECOGNITION**
Activates the voice recognition.
- 2 **CALL**
Places and transfers calls.
- 3 **END**
Ends calls or cancels functions.

To Answer a Call:

- Press the  button on the steering wheel.


To Reject a Call:

- Press the  button on the steering wheel.

To Adjust Ring Volume:

- Use the VOLUME buttons on the steering wheel.

To Transfer a Call to the handset (private mode):

- Press and hold the  button on the steering wheel until the audio system transfers a call to the phone.


To End a Call:

- Press the  button on the steering wheel.


Making a call using voice recognition:

The menu tree identifies available voice recognition Bluetooth® functions.

Calling by Name:

1. Press the  button.
2. Say the following command:
 - “Call <John>”: Connects the call to John.
 - “Call <John> <on Mobile / at Work / at Home >”: Connects the call to John’s Mobile, Home, or at Work phone number.

Dialing by Number:

1. Press the  button.
2. Say “Dial Number”.
3. Say the desired phone number.

For the complete list of commands, please refer to your Owner’s Manual.

VOICE RECOGNITION TIPS

Your vehicle is equipped with a Voice Recognition technology, which allows drivers to operate their phones without having to take their eyes off the road to minimize distractions.


Voice recognition performance may be affected if driving with windows and sunroof open; when the heating-cooling system is on; when passing in a tunnel or when driving on rugged and uneven roads.

Quick reference on using voice commands:

To start a voice command, press the  button, the following commands are available:


Command	Function
More Help	Provides guidance on commands that can be used anywhere in the system.
Help	Provides guidance on commands that can be used within the current mode.
Calls <Name>	Calls <Name> saved in Contacts. Ex) Call “John”
Dial <Number>	Call can be made by dialing the spoken numbers. Ex) Call “123”
Phone	Provides guidance on Phone related commands. After saying this command, say “Call History”, “Contacts” to execute the corresponding functions.
Contacts (Call by Name)	Displays the Contacts screen. After saying this command, say the name of a contact saved in the Contacts to automatically connect a call.

 BLUE LINK TELEMATICS SYSTEM

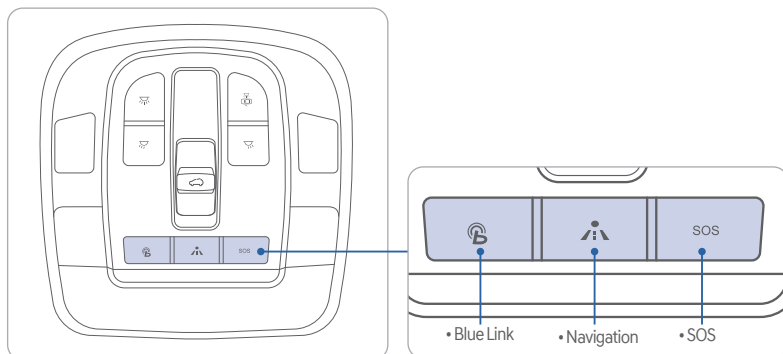

Press the  button for access to the voice-response menu of services.

You can say:

- "Service Link" to schedule a service appointment.
- "Roadside Assistance" for roadside services.
- "Blue Link Account Assistance" for help with your Blue Link subscription.
- Press the  button for Destination Search by Voice.
- Press the **SOS** button for SOS Emergency Assistance.
- Refer to your Blue Link User's Manual for detailed information on system operation.
- For immediate assistance with subscription services, please call 1-855-2BLUELINK (1-855-225-8354).

Google® is a registered trademark of Google Inc.

Remote Start


Remote Start



You can download the Blue Link mobile app to your compatible smart phone from the following sites:

- iPhone® — Apple® App Store
- Android® — Google Play

Remote Start enables you to remotely start your vehicle from virtually anywhere. For navigation vehicles, you can also enable climate control remotely and turn on the rear-window defroster, ensuring a warm or cool car is ready to go when you are.

-  To use this feature, you must have a Blue Link Personal Identification Number (PIN). To create or change your PIN, log on to www.MyHyundai.com.

Remember:

- Remote Start with Climate Control will automatically shut off after 10 minutes or after selected engine timer runs out in navigation vehicles.
- While this feature is active, the parking lights will blink until vehicle is turned off or when vehicle is in operation.
- To continue operation of the vehicle, the proximity key must be inside the vehicle with the driver prior to pressing the brake and being able to move the gearshift from the P (Park) position.

Preconditions:

- Ignition is OFF
- Alarm is armed (i.e., vehicle locked by key fob Remote Door Lock)
- Gearshift level is in the P (Park) position
- Brake pedal is not depressed
- Engine hood is securely closed
- All the doors are closed and locked
- The tailgate or trunk lid is closed
- The security/panic system is not activated
- The proximity key is not inside the vehicle
- The battery power is not low
- Vehicle is located in an open area
- It has been less than 4 days since last vehicle ignition off
- Vehicle located in area with good cell reception

Remote Start will terminate:

- After 10 minutes or after selected engine timer runs out in navigation vehicles
- Brake is pressed without proximity key inside vehicle
- Alarm is triggered without proximity key inside vehicle
- Door/trunk is opened from inside the vehicle

Notice: Laws in some communities may restrict the use of the features that remotely start the engine. For example, some laws may require a person using the remote start feature to have the vehicle in view when doing so or limit the length of time a vehicle engine may idle. Please check local and state regulations for any requirements and restrictions on remote starting of vehicles and engine idling time.

 
 
WARNING!

Do not remote start vehicle in an enclosed environment (i.e., closed garage). Prolonged operation of a motor vehicle in an enclosed environment can cause a harmful build-up of carbon monoxide. Carbon monoxide is harmful to your health. Exposure to high levels of carbon monoxide can cause headaches, dizziness or in extreme cases unconsciousness and/or death. Do not leave children or animals unattended in a vehicle while using the remote start function.

CAUTION!

If the vehicle's windshield wipers are left on when the vehicle was last driven, then the wipers will turn on if the remote start function is activated. To avoid damage to the wiper blades (i.e., due to heavy ice or snow accumulated on the windshield), please always turn the vehicle's windshield wipers off when parking the vehicle.

RADIO MODE

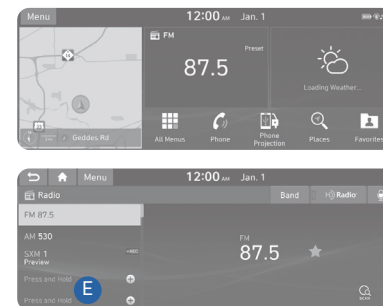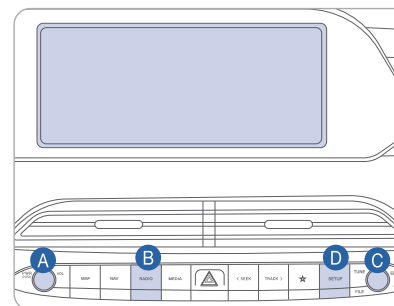

Press **POWER** button **A** to turn radio on.

TUNING/LISTENING TO CHANNELS

1. Press **RADIO** button **B**.
2. Rotate **TUNE** knob **C** to desired channel.

NOTE:

A clear view of the southern sky helps to ensure Sirius XM® radio reception.

SETTING PRESET MEMORY BUTTONS (FM/AM/SXM®)

Press and hold an empty space **E** until an audible beep is heard to store current channel.

 
ADJUSTING THE SOUND CONTROL

1. Press **SETUP** button **D** and press the sound button on the display.
2. To adjust the Fader/Balance, select the position tab. Touch the on-screen arrows to adjust the desired setting for front, rear, left, or right balance.
3. To adjust the Bass/Midrange/Treble, select the tone tab. Touch the on-screen arrows to adjust the sound settings to the desired level.




NAVIGATION

Basic features on the map screen

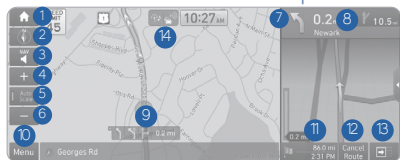

- 1 Displays the Home screen.
- 2 Used to change the map display mode.
- 3 You can adjust the volume of navigation or GPS warning sound.
- 4 Zoom in the map
- 5 The scale of the map automatically changes.
- 6 Zoom out the map
- 7 Guides the point to change the driving direction.
- 8 Guides the next point to change the driving direction.
- 9 Displays the lanes in different colors.
- 10 Displays quick menu items that can be used during a guidance.
- 11 Displays the remaining distance to the destination and the estimated time of arrival. For more details, touch the information item.
- 12 Can cancel the route guidance.
- 13 Displays or hides the detailed guidance.
- 14 You can see the system information on the map.

 Destination search screen

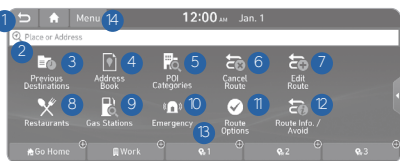


Press **[NAV]** button in the navigation head unit, and finds a destination by using the **[Destination]** menu.

- 1 Returns to the previous step.
- 2 Search for a location by entering various types of keywords such as place name and address.
- 3 Select any of previous destinations to set as a destination.
- 4 Register the location or use the address book for setting a destination.
- 5 Search for POIs by category to set as a destination.
- 6 You can cancel guidance to the destination.
- 7 You can edit the current route so that you can travel via waypoints on the way to the destination.
- 8 You can easily search for restaurants.
- 9 You can set a destination after searching for gas stations.
- 10 You can easily search for emergency services.
- 11 You can change the route search criteria to resume routing.
- 12 You can see the entire route information to the destination.
- 13 You can register your home, office, or other frequently visited place as a favorite for ease of search.
- 14 The list of menu items appears.

NOTE:

Multimedia features and functions are subject to change due to updates, please check the update website for detailed changes.

 WIRELESS CELLULAR PHONE CHARGING SYSTEM

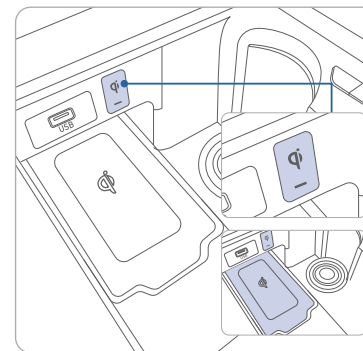

There is a wireless cellular phone charging system inside the front console. The system will operate when all doors are closed, and the ignition switch is in the ACC/ON position.

NOTE:

The wireless cellular phone charging system supports only the Qi-enabled cellular phones (Qi).

 
NOTE:

Do not place any metallic items such as coins, keys on the charger. Avoid putting credit cards, etc. on the charger as they might get damaged by the magnetic field.

NOTE:

User selectable option. Please see section 3 from Owner's Manual for more details.

USB AND SMARTPHONE PORT

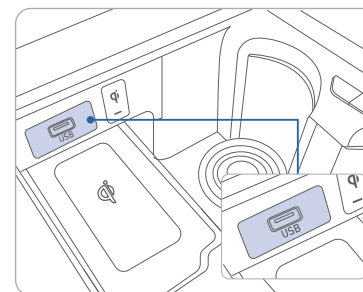

Use the AUX or USB ports to connect an external audio device and listen to it through the audio system in your vehicle.

Use this USB port to access Android Auto or Apple CarPlay with your compatible phone.

ANDROID AUTO™

REQUIREMENTS:

- USB cable
- OS Android™ 5.0 or higher
- Compatible Android Phone
- Data and wireless plan for applicable features

BEFORE YOU BEGIN:

- Android Auto features may operate differently than on your phone.
- Message and data charges may apply when using Android Auto.
- Android Auto relies on the performance of your phone. If you experience performance issues:
 - Close all apps and then restart them
 - Disconnect and then reconnect your phone
- Using the USB cable that was provided with your phone is recommended.
- When Android Auto is active, your in-vehicle voice recognition system is disabled and you will be using talk to Google™ to make your requests.

ANDROID AUTO SUPPORT



<https://support.google.com/androidauto/>

PHONE SETUP

Turn on Bluetooth® on your phone and connect the micro USB cable to your phone and the USB port on the vehicle.

Phone will prompt you to download the Android Auto app and update other needed apps (e.g. Google Maps™, Google Play Music™, Google Now™).

NOTE: Vehicle must be parked.

- Location mode setting should be set to High accuracy.
- Car and phone setup should be completed in one sitting. If phone setup needs to be resumed, recommend to Force Stop the Android Auto app on the Phone then reopen the app and accept the Disclaimer notifications.

CAR SETUP

1. Press the SETUP button on the radio.
2. Touch the “Device Connections” icon on screen.
3. Select “On” for Android Auto.
4. Connect your Android phone to the vehicle USB port. Agree to the notification and disclaimers on your phone then the “Android Auto” icon will appear confirming the setup.

For more detailed information on how to operate Android Auto, please refer to your display audio or navigation manual.

For additional Android Auto support, please refer to the Android Auto Support Website
<https://support.google.com/androidauto/>

Android Auto, Google Play, Android, and other marks are trademarks of Google Inc.

APPLE CARPLAY™

REQUIREMENTS

- Apple Lightning® cable (Apple-certified cable)
- Latest iOS
- iPhone® 5 or above
- Data and wireless plan for applicable features

 
BEFORE YOU BEGIN

- Apple® CarPlay features may operate differently than on your phone.
- Message and data charges may apply when using Apple CarPlay.
- Apple CarPlay relies on the performance of your phone. If you experience performance issues:
 - Close all apps and then restart them
 - Disconnect and then reconnect your phone
- Using the Apple Lightning cable that was provided with your phone is recommended.
- When Apple CarPlay is active, your voice recognition system is disabled and you will be using Siri® to make your requests.

PHONE SETUP


On your phone, go to Settings > General > CarPlay to allow CarPlay access.

On your phone, go to Settings > Siri and ensure Siri is turned ON.

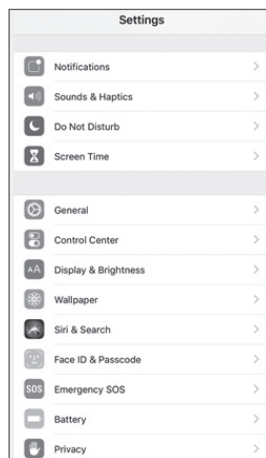


CAR SETUP

 1. Press the SETUP button.
2. Touch the “Device Connections” icon on the screen.
3. Touch “iOS” on the Phone Projection Settings screen then touch “On” to enable Apple CarPlay.
4. Connect your Apple iPhone to the vehicle USB port then touch ‘OK’ when the pop-up message appears. The Apple CarPlay icon will now appear on the vehicle Home screen confirming the setup.

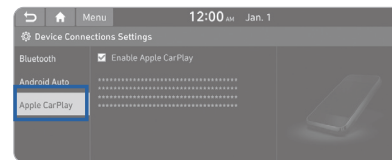

Apple CarPlay, Apple, and other marks are trademarks of Apple Inc.

 CarPlay Home Screen

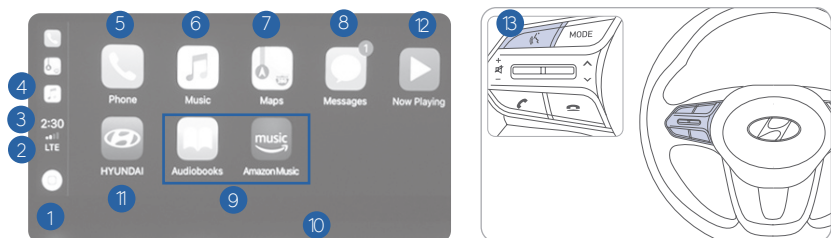

- | | |
|-------------------------|----------------------------------|
| 1 HOME ICON | 7 APPLE MAPS |
| 2 WIRELESS CONNECTIVITY | 8 MESSAGES |
| 3 CELLULAR SIGNAL | 9 3RD PARTY APPS |
| 4 PHONE TIME | 10 SCREEN PAGE INDICATOR |
| 5 PHONE | 11 EXIT TO HYUNDAI |
| 6 APPLE MUSIC™ | 12 CURRENT CARPLAY AUDIO PLAYING |
| | 13 VOICE RECOGNITION TIPS |

SIRI

Apple CarPlay uses Siri to perform many actions like sending messages, placing calls, and looking up/setting POI/Destinations. A Siri session can be initiated on any screen by:

1. Touch and holding the HOME icon ① on the CarPlay screen or
2. Press the steering wheel VOICE RECOGNITION ⑬ button.

Note: Ensure Siri feature is set to ON in your phone (Go to Settings > General > Siri).

3. Say any of the following commands;
 - “Text <John Smith> ‘Call you later’” to send a text message.
 - “Read text messages” to read available text message.
 - “Call <John Smith>” to make a phone call.
 - “Find <POI/Destination>” to locate a POI/Destination.

PHONE

Touch the PHONE ⑤ icon to access the Phone screen. Siri will automatically asks ‘Who you would like to call’ when the PHONE ⑤ icon is selected.

NOTE: Phone call sound quality is dependent on the wired connection. Using the Lightning cable that came with the phone is recommended.

APPLE MUSIC

Touch the APPLE MUSIC ⑥ icon to access the Apple Music screen.

APPLE MAPS

Touch the APPLE MAPS ⑦ icon to access the Apple Map screen.

MESSAGES

Touch the MESSAGES ⑧ icon to access the Message screen. Siri will automatically asks ‘To hear unread messages or create a new one’ when the MESSAGE icon is selected.

 
3rd PARTY APPS

Supported CarPlay apps that are downloaded on your phone will appear on the CarPlay screen. Touch the apps icons to access those supported apps.

NOTE: A list of the supported CarPlay supported apps can be found at <http://www.apple.com/ios/carplay/>

Ensure phone has latest version of the 3rd Party Apps.

LANE KEEPING ASSIST SYSTEM (LKAS)

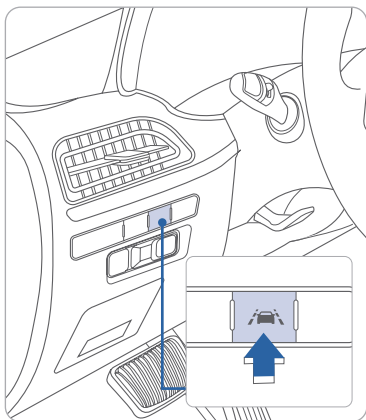


The Lane Keeping Assist System detects lane markers on the road, and assists the driver's steering to help keep the vehicle between lanes.

- To turn LKAS on, press the LKAS switch.
- To turn LKAS off, press the switch again.

LKAS operates only when the vehicle speed is above 40 mph and when the LKAS indicator is green displayed in the instrument cluster. LKAS will not operate properly if the lane line is not clear, sharp bend in the road, or in heavy fog. Refer to the Owner's Manual for more detailed information.

NOTE: LKAS Settings can be adjusted in the User Settings page of the instrument cluster display under Driving Assist.

 LANE FOLLOWING ASSIST (LFA)

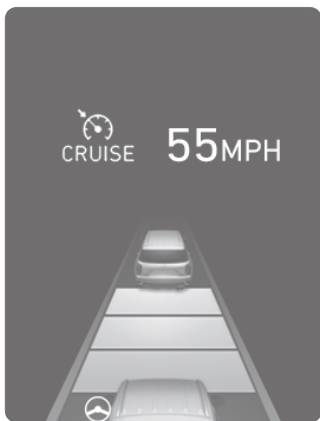

The Lane Following Assist (LFA) system helps detect lane markers on the road with a front view camera and assists the driver's steering to help keep the vehicle between lanes.

With the ignition switch in the ON position, the Lane Following Assist can be activated in the cluster LCD display by selecting the following : 'User settings → Driver Assistance → Driving Assist → Lane Following Assist' Deselect the setting to turn off the system.

FORWARD COLLISION-AVOIDANCE ASSIST (FCA)



 
The Forward Collision Avoidance (FCA) system is designed to detect and monitor the vehicle ahead and warn the driver if a collision is imminent. This feature also allows pedestrian detection.

To operate the system, select the Forward Safety Active Assist sub menu in the LCD cluster display under User Settings.

Setup > Vehicle Settings > Driver Assistance > Lane Safety

Please refer to your Owner's Manual for further information.

BLIND-SPOT COLLISION-AVOIDANCE ASSIST (BCA)

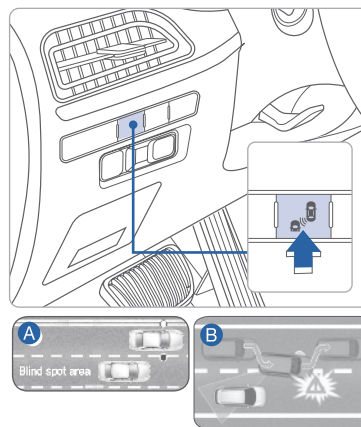

The Blind-Spot Collision-Avoidance Assist (BCA) system may apply braking power, when an approaching vehicle is detected within a certain distance next to or behind your vehicle. The instrument cluster will inform the driver of activation. Press the Blind-Spot switch. The indicator will illuminate on the button. If vehicle speed exceeds 40 mph the system will activate. Press the switch again to deactivate the system.

 
 
A Blind spot collision warning (BCW)

Warning range is dependent on your vehicle speed. Example, if your vehicle speed is 20 mph greater than other vehicles, the warning is not active.

B Blind spot collision avoidance (BCA)

When changing lanes, the system detects the front lane through the camera installed on the windshield and detects the side/rear areas through radar sensors.

REAR CROSS-TRAFFIC COLLISION-AVOIDANCE ASSIST (RCCA)

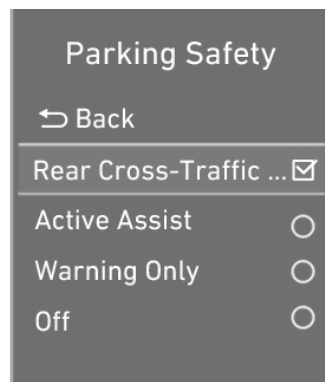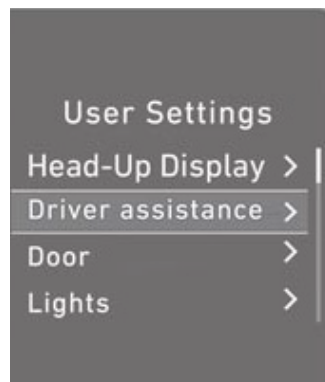

The RCCA system uses radar sensors to monitor approaching vehicles to the left and right while your vehicle is in reverse. If the risk of collision is detected while the RCCW is generated, brake is controlled. The instrument cluster will inform the driver of the brake control. If the rear view monitor system is in activation, a message will also appear on the audio or AVN screen.

Activate/Deactivate

Select the following items on the instrument cluster in order:

1. Select User Settings
2. Select Driver Assistance
3. Select Parking Safety
4. Select Rear Cross Traffic Safety

SAFE EXIT ASSIST (SEA)

The Safe Exit Assist system helps prevent passengers from opening the door when a vehicle is approaching from the rear area. After the vehicle stops and an approaching vehicle from the rear area is detected, the rear door does not open from the inside handle. A "check surroundings then try again" warning message will appear on the cluster and a warning sound will go off.

 


When an approaching vehicle from the rear is detected and the door is already opened, a "watch for traffic" warning message appears and a warning sound will go off.

Activate/Deactivate


Select the following items on the instrument cluster in order:

1. Select user settings mode in the cluster LCD display
2. Select Driver Assistance
3. Select Blind-Spot Safety
4. Select Safe Exit Assist

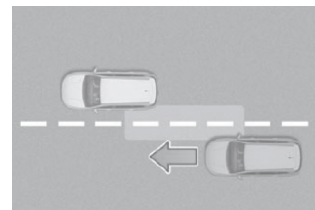

NOTE: If you press the child safety switch located on the driver door within 10 seconds after the warning message appears, the driver acknowledges the rear status and the child safety lock is canceled.

 REAR OCCUPANT ALERT (ROA)

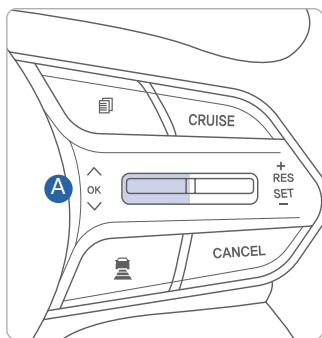

The Rear Occupant Alert system helps prevent exiting the vehicle with the rear passengers left in the vehicle.

1st Alert (standard)

When you open the front door after opening and closing the rear door and the engine is off, a “check rear seats” warning message appears.

2nd Alert (if equipped)

When any movement in the vehicle is detected after the driver’s door is closed and all doors are locked, the horn will activate for 25 seconds.

To stop this alert, unlock the door with the remote key or smart key.

 
Note: After the first alert, press the OK (A) button on the steering wheel to deactivate the second alert. If the system continues to detect movement, the horn activates up to 8 times. The system detects movement in the vehicle for 24 hours after the doors are locked.

Activate/Deactivate


Select the following items on the instrument cluster in order:

1. Select User Settings on the cluster LCD display
2. Select Convenience
3. Select Rear Seat Alert

NOTE: The overhead sensor is located above the rear passenger seats.

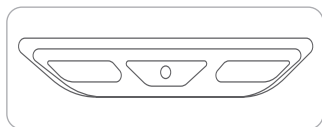


IDLE STOP AND GO (ISG)

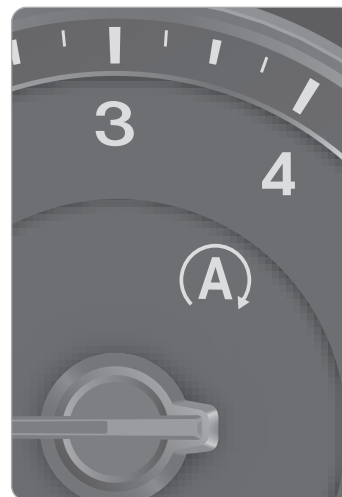 

The ISG system will automatically shut off the engine when the vehicle is at a standstill (i.e. red stop light, stop sign, and traffic jam) to increase vehicle’s fuel economy and reduce exhaust gas emissions. The auto stop indicator will illuminate in green on the instrument cluster when activated. To restart the engine in auto stop mode, release the brake pedal and press on the accelerator. The auto stop indicator goes OFF on the instrument cluster once the engine is restarted.

Prerequisite for activation:

 - The driver’s seatbelt is fastened.
- The driver’s door and the hood are closed.
- The brake pressure is adequate.
- The battery is sufficiently charged.
- The outside temperature is between 14°F and 95°F (-10°C and 35°C).
- Engine is warmed up.
- The incline is gradual.
- Steering wheel is turned less than 180 degrees.
- Shift lever is in DRIVE or NEUTRAL.

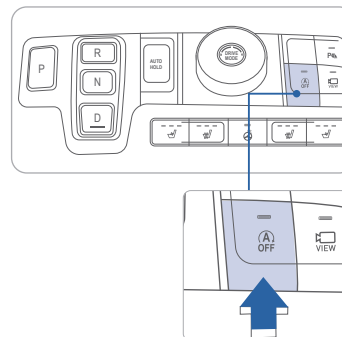

NOTE: The engine will not shut off if the prerequisites are not satisfied. In that case, the Auto Stop indicator will illuminate in yellow on the instrument cluster.

 
To deactivate

Press the ISG OFF button, indicator illuminates.

To activate

Press the ISG OFF button, indicator turns OFF.

DRIVE MODE

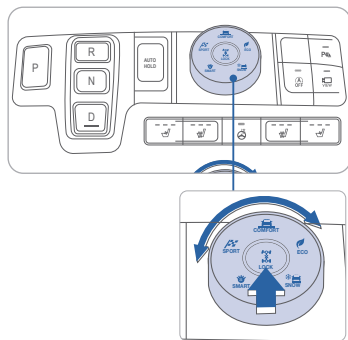

The mode changes, as below, whenever the DRIVE MODE selection knob is rotated. An indicator will illuminate on the instrument cluster when the vehicle is in sport mode or smart mode. When the vehicle is in comfort mode, it is not displayed on the instrument cluster.



COMFORT mode:

In comfort mode, the engine and transmission control logic work together to provide regular daily driving performance with fuel efficiency.

SPORT mode:

Sport mode manages the driving dynamics by automatically adjusting the steering effort, and the engine and transmission control logic for enhanced driving performance. When sport mode is activated, the engine RPM will be a little higher than normal.

SMART mode:

Smart mode selects the proper driving mode between comfort and sport by judging the driver's driving habits.

Note: Whenever the engine is restarted, the drive mode will revert back to the default comfort mode

ECO mode:

ECO mode helps to improve fuel efficiency. When the Eco mode is activated, the vehicle acceleration, gear shift points and air conditioning performance will be reduced to conserve the fuel economy.

SNOW mode:

In this mode, the vehicle can start safely by properly distributing the driving force of the vehicle on slippery roads such as snowy roads. And you can drive safely by suppressing wheel slip.

TIRE PRESSURE MONITORING SYSTEM (TPMS)



Low Tire Pressure Indicator / TPMS Malfunction Indicator



Low Tire Pressure / Tire Pressure Monitor / TPMS Malfunction Display (shown on the cluster LCD display)

LOW TIRE PRESSURE INDICATOR



Illuminates if one or more of your tires are significantly under-inflated.

TPMS MALFUNCTION INDICATOR

Blinks for approximately one minute, then remains illuminated when there is a malfunction with the TPMS. Inspect all tires and adjust the tire pressure to specification. If the lamp remains illuminated, we recommend the vehicle be checked by an authorized HYUNDAI dealer.

 
LOW TIRE PRESSURE / TIRE PRESSURE MONITOR / TPMS MALFUNCTION DISPLAY(LCD DISPLAY)

Select the Assist mode  by pressing the mode button on the steering wheel to display tire pressure.

Tire pressures will display after driving a short distance. If a tire pressure drops lower than predetermined specification, the Low Tire Pressure Indicator  will illuminate and the cluster  display will indicate tire(s) requiring air.

NOTE: Environmental factors can affect the tire pressure. The two main environmental factors are ambient air temperature and elevation. Colder ambient air will reduce tire pressure, while hotter ambient air will increase tire pressure. High elevation may also increase tire pressure.

CRUISE CONTROL/SMART CRUISE CONTROL

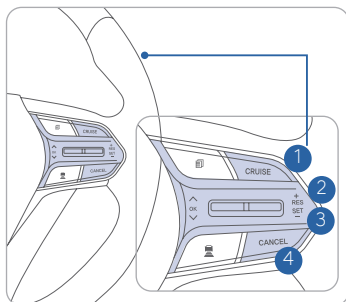


The Cruise Control system allows you to program the vehicle to maintain a constant speed without holding the accelerator pedal.

- 1 To turn On/Off cruise control.
- 2 Toggle switch UP to Resume or Increase the cruise control speed.
- 3 Toggle switch DOWN to Set or Decrease the cruise control speed.
- 4 To Cancel the Cruise Control.

Setting Vehicle Distance (Smart Cruise Control only)

 This system assist you in setting the distance from the vehicle ahead and will maintain the selected distance without you depressing the accelerator or the brake pedal.

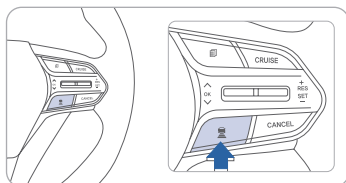

Press the button to set and maintain the vehicle-to-vehicle distance without pressing the accelerator or brake pedal. The vehicle-to-vehicle distance ① will automatically activate when you set the cruise speed ②. Each time the button is pressed, the vehicle-to-vehicle distance changes as follows:



Setting Cruise Control

1. Press the "CRUISE" button ① to turn on Cruise Control. The icon will illuminate in the instrument cluster.
2. Toggle "-SET" switch (3) DOWN to set cruising speed.

Adjusting the vehicle speed

1. Toggle "+RES" switch ② UP to increase cruising speed.
2. Toggle "-SET" switch ③ DOWN to decrease cruising speed.

NOTE: Quick toggle up/down will change speed by 1 mph. Holding switch up/down will change speed by 5 mph.

To Cancel Cruise Control

Press the "CANCEL" button ④ or depress the brake pedal.

Please refer to your Owner's Manual for more information.

LEADING VEHICLE DEPARTURE ALERT

The Leading Vehicle Departure Alert system alerts the driver of the departure of the vehicle in front when the vehicle is stopped and the Smart Cruise Control (SCC) is in activation.

 
To activate

Select the following items on the instrument cluster in order:

1. Select User Settings on the cluster LCD display.
2. Select Driver Assistance
3. Select "Leading vehicle departure alert"

The system stops operation when the setting is deactivated. However, if the engine is turned off then on again, the system maintains in the previous state.

HIGHWAY DRIVING ASSIST (HDA) (if equipped)

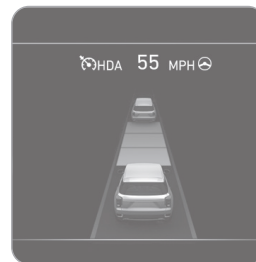

The Highway Driving Assist (HDA) system helps keep the vehicle between lanes, maintain a distance with the vehicle ahead, and automatically adjusts the vehicle speed to the speed limit while driving on the highway.

With the Engine Start/Stop button in the ON or START position, the Highway Driving Assist can be activated from the Settings menu in the infotainment system screen by selecting the following:
'Setup → Vehicle Settings → Driver Assistance → Highway Driving Assist' Deselect the setting to turn off the system.

 
NOTE: If the engine is turned off then on again, the system maintains the last setting.

Operating Conditions:

- Driving on the highway main line.
- Smart Cruise Control is operating.
 - If the Smart Cruise Control is in the READY state the Highway Driving Assist will be in the READY state. The indicator on the cluster will illuminate white.
- Vehicle speed is under 95 mph (153 km/h).

If all the mentioned conditions are satisfied, the system is ENABLED and the indicator on the cluster will illuminate green.


PUSH BUTTON DRIVE SELECTOR

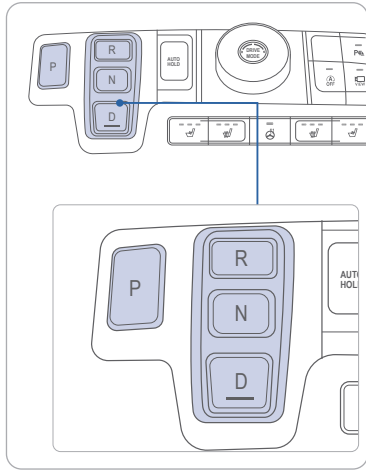

P (Park)
R (Reverse)
N (Neutral)
D (Drive)

ELECTRIC PARKING BRAKE (EPB)

 To apply and release EPB manually

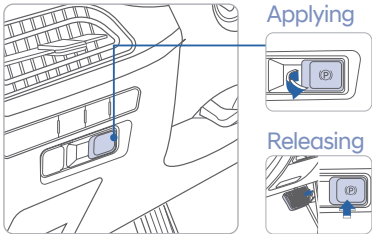

Applying
Stop the vehicle then pull the EPB switch.

Releasing
Press the EPB switch while depressing the brake pedal.

The EPB will automatically be applied when:

 
- Engine off while Auto Hold is enabled, parked on a slope, or with the engine off in park but the vehicle still moves a bit.

To release the automatic EPB:

- With engine running, depress the brake pedal and shift into R(Reverse) or D(Drive) and then depress accelerator pedal.

NOTE: Please see the owner's manual for additional details

AUTO HOLD

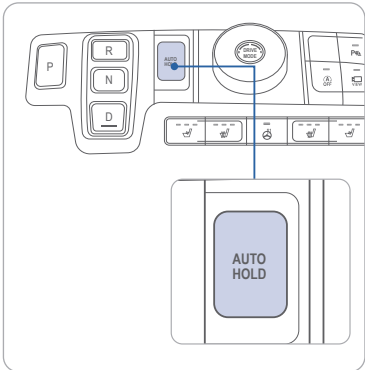

The Auto Hold feature assists in steep hill areas. It holds the brake until the accelerator pedal is pressed.

WHITE AUTO HOLD 1. Press the AUTO HOLD switch.

GREEN AUTO HOLD 2. Stop the vehicle by pressing the brake pedal. The brakes will remain engaged even if the brake pedal is released.

WHITE AUTO HOLD 3. The brakes will release when the accelerator pedal is pressed with transmission in D, R or manual mode.

PALISADE CUSTOMER DELIVERY CHECK LIST

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

BEFORE DELIVERY

- ☐ CONFIRM “GOOD BATTERY” USING GR8 AND STAPLE TEST TICKET HERE
- ☐ SET TIRE PRESSURE LF__RF__RR__LR__
- ☐ VERIFY VEHICLE IS CLEAN, IN GOOD CONDITION, FREE OF CHIPS AND SCRATCHES · CLEAN WINDSHIELD AND BACK WINDOW
- ☐ ENSURE FLOORMATS ARE SNAPPED INTO PLACE

WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

- ☐ REVIEW QUICK REFERENCE GUIDE
- ☐ BLUETOOTH
 - Show phone compatibility website: www.hyundaiusa.com/bluetooth
 - Pair customer's phone to the Bluetooth system (if equipped)
 - Make a test call using Bluetooth with the customer's phone
 - Demonstrate Voice Recognition (VR)
- ☐ OPERATION OF THE NAVIAGATION SYSTEM (if equipped) - page 27
- ☐ REVIEW AND TEAR OFF VOICE COMMAND / QUICK TIP CARD
- ☐ OPERATION OF THE AUDIO SYSTEM - page 26
- ☐ VEHICLE SETTINGS
 - Demonstrate vehicle settings in instrument cluster
 - Demonstrate navigation use, enter dealer address
 - Show radio presets

BLUETOOTH® HANDS-FREE

CONNECTING YOUR PHONE

On the radio:

1. Push the **SETUP** button.
2. Select **Bluetooth**.
3. Select **Bluetooth Connection**.
4. Select **Add New**.

In your phone's Bluetooth settings:

5. Select the <Vehicle Name> on your phone.
6. Enter the passkey from the radio or accept the authorization pop-up on your phone.

SWITCHING BETWEEN PAIRED PHONES

Using Voice Command:
“Change Bluetooth device”

On the radio:

1. Push the **SETUP** button.
2. Select **Bluetooth**.
3. Select **Bluetooth Connection**.
4. Select **Connect** next to the desired phone.

For more information, visit
HyundaiBluetooth.com