

 


AWB
alarmed wall bracket

Alarmed Wall Bracket | User Manual

THE FOLLOWING IS INCLUDED WITH YOUR ALARMED WALL BRACKET:

1. (A) Alarmed Wall Bracket (AWB)
2. (B) Four (4) wall mollies
3. (C) Four (4) Phillips-head screws
4. (D) Two (2) reset keys and one (1) magnetic fob

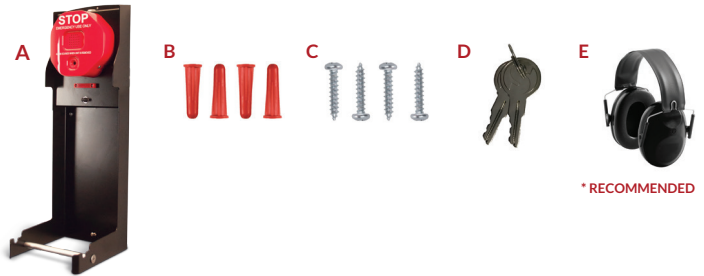

RECOMMENDATIONS:

1. Follow ADA height and placement guidelines. To access ADA guidelines go to <https://www.access-board.gov/guidelines-and-standards>.
2. *(E) Use hearing protection when testing the alarm; the alarm sounds at 105 dB.


1 With the alarm lock in the OFF position, mount the alarm bracket to a wall.

- a. Using the included hardware affix the bracket in a safe but visible place.
- b. Don't forget the Comprehensive Unit dimensions extend beyond the bracket.



2 Turn the alarm lock to ON with the included key.

- a. You have 30 seconds to properly seat the Unit before the alarm arms.
- b. You may want to practice seating the Unit to avoid accidentally activating the alarm.

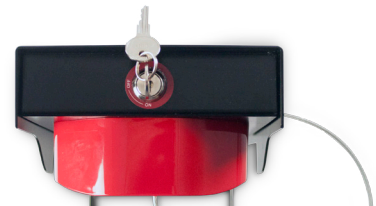


3 Seat the Comprehensive Unit on the bracket.

- a. Center the Comprehensive Unit on the bracket arms.
- b. Align the nub on the bracket with the receiver on the Comprehensive Unit.
- c. The Comprehensive Unit will snap into place and the two matching red magnets will be in close proximity.

a



b

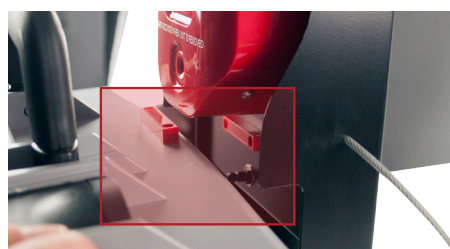


Equip. Empower. Respond.

#BystandersSaveLives

 www.mobilizeRescue.com

4 Affix the Theft Deterrent Cord.

- With the Comprehensive Unit seated, pass the Theft Deterrent Cord through a locking hole.
- Pass the cord through the Comprehensive Unit handle and insert the end into the hole on the alarm face. It will fit snugly.

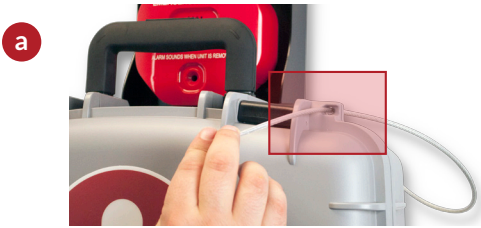

5 Alarmed Wall Bracket is ready for use.

- When the Comprehensive Unit is disturbed, alarm will sound immediately and continue for 30 seconds.



Reset alarm after activation:

- Set alarm lock to OFF with key.
- Remove the Comprehensive Unit from bracket.
- Set alarm lock to ON.
- Replace the Comprehensive Unit on the bracket arms, ensuring nub snaps into Unit within 30 seconds.
- Reinsert Theft Deterrent Cord.

Deactivate alarm:

- Using key, set alarm lock to OFF.
- Remove the Comprehensive Unit.
- When ready to replace the Comprehensive Unit, follow steps in "Reset alarm after activation."

Replacing the AWB alarm module battery:

The AWB Alarm Module is powered by a standard 9 volt battery.

- Remove the 3/32 hex screw.
- Remove the alarm face plate.
- Replace the 9 volt battery.
- Replace alarm face plate and hex screw.

