

epcatalogs.com

3152

3162

Draper Header

OPERATOR'S MANUAL

Part number 47450013

2nd edition English

May 2013

Replaces part number 84595090



Contents

1 GENERAL INFORMATION

Note to the owner.....	1-1
Machine orientation.....	1-2
Electro-Magnetic Compatibility (EMC)	1-3
Manual scope.....	1-4
Intended use.....	1-6
Product Identification Number (PIN).....	1-7

2 SAFETY INFORMATION

Safety rules.....	2-1
Safety rules.....	2-2
Safety rules - Precautionary Statements	2-7
Power Take Off (PTO).....	2-9
Do Not Operate hang tag.....	2-10
Access to machine components.....	2-11
Ecology and the environment	2-13
Safety signs	2-14
Reel lift cylinder lock out.....	2-25

3 OPERATING INSTRUCTIONS

STARTING THE UNIT

Operating the machine in cold weather	3-1
---	-----

4 TRANSPORT OPERATIONS

ROAD TRANSPORT

Road travel	4-1
Road travel signs and decals.....	4-3

PREPARING FOR ROAD TRANSPORT

Transition from field to road mode – If equipped with transport package	4-4
Transition from road to field mode – If equipped with transport package	4-6

5 WORKING OPERATIONS

GENERAL INFORMATION

Overview	5-1
Crop divider.....	5-1
Reversing system	5-3
Reel.....	5-5
Reel arm leveling and height adjustment.....	5-6
Reel drive.....	5-8
Draper belt.....	5-10

Draper belt adjustments	5-10
Auger	5-16
Positioning the auger	5-18
Auger fingers	5-19
Crop lifters	5-20
Automatic Header Height Control (AHHC) – Flex Headers	5-21
Automatic Header Height Control (AHHC) – Rigid Headers	5-23
Cutterbar float – Mechanical	5-24
Cutterbar float – Hydraulic	5-26
Cutterbar – Service tool	5-27
Knife	5-30
Knife hold-down clips	5-31
Finger guard	5-32
Fore aft tilt (if equipped)	5-33
Upper cross auger	5-34
Augers stripper plates	5-35
Gauge wheels	5-35

Adjustments and calibration

Automatic Header Height Control (AHHC) – Flex Header	5-36
Automatic Header Height Control (AHHC) – For Rigid Headers	5-38
Calibrations – Auto Header Height Control (AHHC)	5-39

Attachments/Headers

Quick guide – For Flex Headers	5-44
Quick guide – For Rigid Headers	5-47
Initial crop settings	5-50
Reel Overview	5-52
Cutterbar – Adjust mechanical flotation	5-53
Cutterbar – Adjust hydraulic flotation	5-53
Knife speed	5-55
Auger position	5-56
Gauge wheels – Working height	5-57

6 MAINTENANCE

GENERAL INFORMATION

Torque specifications for hardware - Minimum tightening torques for normal assembly	6-1
Torque specifications for hydraulic fittings - Standard torque data for hydraulics	6-6
Chain wear tables - roller chains	6-8
General maintenance	6-10
Auger finger replacement	6-12
Sickle guards replace	6-13
Knife replacement	6-15
Auger flighting - Configure	6-20

MAINTENANCE CHART

Maintenance Chart	6-22
-------------------------	------

Capacities	6-23
------------------	------

Every 10 hours or daily

Reel drive	6-24
Hydraulic reservoir fluid level – Main	6-25
Hydraulic reservoir fluid level – Expansion	6-26
Knife drive	6-27

Every 25 hours

Knife drive	6-28
-------------------	------

After the first 50 hours of operation

Grease fittings	6-29
Hydraulic filter	6-32
Gearbox	6-33
Knife drive	6-34
Auger drive chain case	6-35
Transport wheel torque	6-36
Transport wheel torque	6-37

Every 50 hours

Grease fittings	6-38
Auger drive chain case	6-40
Gearbox	6-41
Knife drive	6-41

Every 600 hours or annually

Auger drive chain case	6-43
Hydraulic reservoir fluid level – Main	6-44
Hydraulic reservoir fluid level – Expansion	6-45
Hydraulic filter	6-46
Hydraulic pump drive	6-47
Knife drive	6-48
Transport wheel torque	6-48
Transport wheel torque	6-49

7 SPECIFICATIONS

Machine specifications and dimensions - For flex headers	7-1
Machine specifications and dimensions – For rigid headers	7-3

8 FORMS AND DECLARATIONS

Delivery report - Owner Copy	8-3
Delivery report - Dealer Copy	8-5
Service record - 1st 50 Hour, Customer Copy	8-7

Service record - 1st 50 Hour, Dealer Copy	8-9
---	-----

epcatalogs.com

[Buy now](#)

[Case 3152, 3162 Draper Header Operators Manual PDF](#)

[With Instant Download](#)