



**Quick Start Guide  
for  
USB 2.0 7-Port Hub**



Model No. DX-H720P

This USB Hub makes the most of your computer and workspace by increasing the number of available USB ports. There has never been a more convenient way to expand your USB capacity.

## Table of Contents

Introduction . . . . .	1
System Requirements . . . . .	2
Package Contents . . . . .	2
Specifications . . . . .	3
Product Overview . . . . .	4
Installation . . . . .	6
Appendix A . . . . .	7
Troubleshooting	
Appendix B . . . . .	8
Radio Interference Statement	
Appendix C . . . . .	9
Limited Lifetime Warranty	

Thank you for purchasing a Dynex Product.  
For optimum performance and safety,  
please read these instructions carefully.

## Introduction

USB (*Universal Serial Bus*) is currently the standard for most computers, notebooks and peripherals. The USB connections allow the user to easily connect multiple devices. The Dynex USB 7-Port Hub provides additional ports to connect up to 7-USB devices to a single USB port on your computer.

An AC power adapter is included for you to use the self-powered mode.

The Quick Start Guide contains easy instructions in order to show you how to set up and start using your Dynex USB Hub.

## System Requirements

Any PC or Macintosh computer with an available USB port and USB-compliant operating system (Windows 95 OSR 2.0, Windows 98, Windows ME, Windows 2000, Windows XP, MacOS 8.1 or later, etc.).

## Package Contents


This package includes:

- ✍ Dynex Model DX-H720P USB Hub
- ✍ AC Power Adapter
- ✍ A-B USB cable
- ✍ User Manual

## Specifications

FUNCTION		SPECIFICATION
Ports	Upstream	1
	Downstream	7
LEDs	Power	1
	Port Status	7
Power Mode		Self Powered
Output Voltage (per port)		+5V DC
Output Current (per port)		500mA (max)
Operating Temperature		5°C ~ 40°C
Storage Temperature		-20°C ~ 60°C
Humidity		0 - 80% RH. Noncondensing
Housing		Plastic
Weight		3.17 oz.
Dimensions		4.439" x 2.5" x 1.0"

## Product Overview

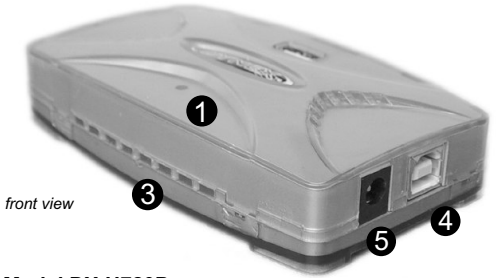

front view

Model DX-H720P



rear view

## Product Overview - continued

- 1) **Power Indicator** - Blue LED when lit indicates when USB Hub is receiving power.
- 2) **Downstream Ports** - Connect your USB devices to these ports. (Includes 1 Flash Drive port)
- 3) **Port Status Indicators** - Green LEDs indicate port status and overcurrent detection. When a device is connected to one of the ports, the associated LED will illuminate. If an overcurrent condition occurs, the LED for that port will turn off, indicating a problem with that device.
- 4) **Root (Upstream) Port**  
Connect your computer to this port to provide a link between the hub and devices.
- 5) **AC Adapter Power Connection**  
Connect your AC power adapter here. This hub operates in self-powered mode to ensure sufficient power is provided to connected USB devices.

## Installation

This USB Hub is a plug and play device. Your computer will display the □Add New Hardware□ Wizard after connecting the hub to your computer. Installation may be done whether your computer is powered on or off. It is not necessary to restart your computer after installation.

- 1) Connect the A-B cable (included in this package) to the Upstream port on the USB Hub, then connect the other end of the cable to an unused USB port on your computer.
- 2) Connect your USB devices to the Downstream ports on the USB Hub.

### **Self-Powering the Hub:**

if additional power is required for connected USB devices, plug the DC power adapter into the power jack, then plug the power adapter into a wall outlet

### **Note:**

Please use this USB Hub under Self Powered Mode..

## Appendix A

### Troubleshooting

Problem	Possible Cause	Action
Unit operates erratically	Static electricity may cause the hub to behave erratically.	Reset the hub and power adapter by disconnecting it from Your computer. Wait 5 Seconds, then reconnect it.
USB devices operate erratically or can't be powered on.	Connected USB devices may require too much power for bus-powered operation	Connect the AC power adapter to the hub.
Unit fails to operate at all.	Non-USB compliant operating system.	Insure that your computer is fully USB-compatible and a USB-compliant operating system is installed. (see <i>System Requirements section</i> )

## Appendix B

### **Radio & TV Interference Statement**

This equipment has been tested and found to comply within the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee, however, that interference will not occur in a particular installation.

## Appendix C

### Life Time Limited Warranty

Dynex warrants this USB Hub (the "Hub") to be free from defect in material or manufacture for its lifetime. If a defect results in product failure during its normal use, Dynex's sole responsibility is to repair or replace (at its sole option) the Hub.

The foregoing Limited Warranty is the consumer's sole and exclusive remedy and excludes any incidental or consequential damages. Some States do not allow the exclusion or limitation of incidental and consequential damages, so certain of the above limitations or exclusions may not apply to you (the Consumer). This limited warranty gives the Consumer specific legal rights and the Consumer may have other rights, which vary from State to State.

To make a Limited Warranty claim:

1. Pack and ship the Hub to Dynex at 5555 12th Ave E, Suite 110, Shakopee, MN 55379;
2. Clearly indicate on the outside of the packaging that this is a "WARRANTY RETURN";
3. Clearly include your name and address (a) on the outside packaging and (b) on a sheet of paper enclosed in the box with the Hub that is being returned; and
4. You MUST prepay all shipping costs and you are responsible for packaging and shipment.

Dynex will inspect and examine the Hub. If the Hub is defective in material or workmanship, Dynex will repair or replace it and return it to you at Dynex's expense at the place you have indicated.

**Contact Information:** Dynex, 5555 12th Ave E, Suite 110, Shakopee, MN 55379, (800) 305-2204 (toll free). Dynex is the warrantor under this Limited Warranty. You may also visit Dynex on the Internet at [www.Dynexproducts.com](http://www.Dynexproducts.com).