

### 4. WIRING DIAGRAM

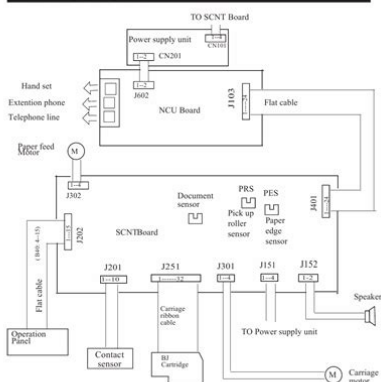


Fig 2-3 Wiring Diagram

2-7

**File Name:** canon faxphone b45 user manual.pdf

**Size:** 1788 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 7 May 2019, 21:28 PM

**Rating:** 4.6/5 from 809 votes.

**Status:** AVAILABLE

Last checked: 19 Minutes ago!

**In order to read or download canon faxphone b45 user manual ebook, you need to create a FREE account.**

**[Download Now!](#)**

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with canon faxphone b45 user manual . To get started finding canon faxphone b45 user manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# canon faxphone b45 user manual

After you finish reading this guide, store it in a safe place for future reference. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Canon U.S.A. Please read the list below to become familiar with the symbols, terms, and abbreviations used in this guide. Cautions tell you how to avoid actions that could injure you or damage your fax. In order to use your fax safely, always observe these cautions. If something does fall into the fax, unplug it immediately and contact the Canon Customer Care Center see p. ii. A dedicated extension off a PBX machine without "Call Waiting" can be used with your machine. Key telephone systems are not recommended because they send nonstandard signals to individual telephones for ringing and special codes, which may cause a fax error. Users should contact Canon Authorized Service Facilities for servicing of equipment. Information regarding Authorized Service Facility locations can be obtained by calling the Canon Customer Care Center. Open the printer cover by gently pulling it towards you. Remove the shipping tapes q and the protective pieces w. Close the printer cover until it locks into place. Insert the tabs on the multi purpose tray into the slots on the fax. Connect the supplied telephone line cord to the telephone line jack on your wall. Plug the power cord connector into the rear of the fax. Plug the other end of the power cord into a properly grounded AC power outlet. There is no power switch on the fax. Keep opened packs in their original packaging, in a cool, dry location. Squeeze, then slide the paper guide to the left. Fan a stack of paper, then tap the edge of the stack on a flat surface to even the stack.<http://www.detilabirinta.ru/UserFiles/husqvarna-326lx-manual.xml>

- **canon faxphone b45 user manual, canon faxphone l75 user manual, canon faxphone b45 user manual pdf, canon faxphone b45 user manual download, canon faxphone b45 user manual instructions, canon faxphone b45 user manual free.**

Insert the stack into the multipurpose tray q, and align the right edge of the stack with the right side of the multipurpose tray. Make sure the fax is plugged in. Load the paper in the multipurpose tray. Open the printer cover by gently pulling it towards you see p. Lower the cartridge lock lever until you hear a click to lock the cartridge in place. The yellow post BJ cartridge guide should be visible through the slot. Button WXYZ OPER SYMB TONE. CANEN Use the numeric buttons to enter the correct letter over the incorrect letter. If you are unsure of your telephone line type, check with your local telephone company. See pp. 22, 23 for the buttons on the operation panel. This information is called your TTI Transmit Terminal Identification and appears at the top of the faxed document in small type. You can select if the time information in your fax changes to match the daylight saving time system, and also set the day and time when the daylight saving time begins and ends. See Registering voice dialing voice tags, p. 214. The fax asks you if you want to register the voice tag. Before you can use the voice dialing feature, you must register voice tags. You can register a name or phrase no longer than 3 seconds you want to use to retrieve the party, such as the first name, family name, nickname, company name, official position, and so forth. Your fax does not require special ink jet paper. Always use paper without curls, folds, staples, or damaged edges. Look at the label on the package to see if the paper has a preferred side for printing. Be sure to test paper before purchasing large quantities. Low resolutions may cause text and graphics to have a jagged appearance, while higher resolutions provide smoother curves and lines, crisp text and graphics, and a better match to traditional typeface designs. Regular dialing Onetouch speed dialing see p.

However, you can send it with memory sending see below. In this case, the fax quickly scans the document into memory. <http://gemtown88.com/PicOther/husqvarna-325hd60x-manual.xml>

Then it sends the document from memory. This means you do not have to wait for the fax to finish sending before you can retrieve your original document. You need to connect the handset or extension phone to the fax for manual sending. Load the document face up into the document tray. See Loading documents, p. The registered name will be displayed on the LCD. The caller history feature uses the Telcordia GR30CORE protocol. This section explains these two methods. This allows you to take advantage of lower late night long distance rates offered by some telephone companies. The fax can only register one preset sending operation at a time. Load the document face up into the document tray. To send or copy other documents after setting the fax for delayed sending, simply send or copy using any other sending procedure in this guide. The fax prints the document. To determine which mode best suits your requirements, see the table below. If the caller wants to send a document after talking to you, ask them to press the start button on their fax machine. Your fax begins receiving the document. Canceling receiving. Use the microphone on the operation panel to record your outgoing message. Only one outgoing message, no longer than 20 seconds, can be recorded. When you cancel TAM MODE, any new telephone messages will be played automatically. The recording time can be set to 0, 30, 60 or 120 seconds. To use this feature, LINE MONITOR VOL see p. 72 must be set to a setting other than 0. If LINE MONITOR VOL is set to 0, you will not be able to hear any incoming messages as they are being recorded. Use the microphone on the printer cover to record your voice memo. If you record a new voice memo when there is already a voice memo recorded, the old voice memo will be deleted. The fax asks you to confirm that you want to delete the message. If a voice memo has been recorded, it will be played back first. You can also use the remote control features to set TAM MODE.

You must register a four digit PIN as your password before you can use these features see below. The outgoing message will be played. Enter your password when you hear the beeps indicating that you should enter your password. When your password is accepted, you will hear a confirmation tone a short series of beeps. When TAM MODE has not been set, entering this command activates TAM MODE and ICM forwarding mode simultaneously. Description Play ICM Repeat. You can use remote control to access the forwarding number and listen to your telephone messages. Setting ends and the fax returns to standby mode. If PIN ENTRY is set to OFF, it is not necessary to enter your password when you use the FORWARDING MSG feature see p. A call is received at the forwarding number. When you answer the phone you will hear your forwarding message. Each menu contains settings that control different functions of your fax. OUTPUT NO Turn off the transmission report feature. OUTPUT YES Set the fax to print a transmission report every time you send a document. PRINT ERROR ONLY Print only when an error occurs during sending. DATE SETUP Set the date format. DISPLAY LANGUAGE Set the language of the LCD messages. Set the speed at which the fax starts transmitting. Set this TX START SPEED to a lower speed if you have difficulties connecting over long distance or noisy lines. Set a four digit PIN so that you can access the fax from remote locations. These operations can be printed out in the form of activity reports that can help you check the dates and times of fax transmissions and whether or not each transaction was successful. For automatic printing, see ACTIVITY REPORT, p. 73. Transactions in an activity report are listed chronologically. You can make up to 99 copies of one document at a time. If you make copies of multiple documents at a time, the number of pages the fax can scan into memory varies depending on the scanning resolutions see p.

If necessary, remove the document tray when clearing paper jams. You do not need to unplug the fax when clearing paper jams. Remove the paper stack from the multipurpose tray. This section describes the necessary cleaning procedures for the fax. Since documents in memory are erased when the power is disconnected, print any documents stored in memory before disconnecting the

power cord see p. Be sure to close the printer cover until it locks into place. Reconnect the power cord. To maintain the best possible print quality, these nozzles need to be cleaned from time to time. Your fax is equipped with a print head cleaning function that does this. Remove the new BJ cartridge from its package, then remove the orange protective cap q and tape w. There may be other documents being sent from memory. ECM may be disabled. In such cases, you will have to receive the document manually see p. 54. Cannot receive a document manually. ECM may be disabled. The fax number dialed was incorrect. The other party's fax machine is not working. The other party is not using a G3 machine. Also, try replacing the BJ cartridge with a new one see p. 96. Contact the Canon Customer Care Center see p. ii to have the waste ink tank replaced immediately. Allow the fax to cool down. DATA ERROR An error has occurred and all onetouch speed dialing, coded speed dialing, and user data have been lost. DOC. TOO LONG The document is longer than 29.5 in. 750 mm. ECM RX The fax is receiving a document using Error. The outgoing message has not been recorded. The fax received the document in memory because paper or ink ran out,. However, documents stored in the fax memory will be deleted. If a power failure occurs or the power is turned off, the fax will automatically print a memory clear report as soon as the power is turned on or the power is restored. MEMORY LIST description 78 printing 77 DOC.

The FAXPHONE It can also recognize your voice to dial frequently called fax numbers with A 15sheet automatic Quick and convenient copying adds With both facsimile functions and builtin digital telephone With both facsimile functions and builtin digital telephone answering machine, the FAXPHONE B45 saves valuable desktop space. It can also recognize your voice to dial frequently called fax numbers with UCanTalk. A 15sheet automatic document feeder speeds the sending of multiple page documents. Quick and convenient copying adds to the performance of this affordable fax. With both facsimile functions and builtin digital telephone answering machine, the FAXPHONE B45 saves valuable desktop space. Products and names mentioned are the property of their respective owners. This page is part of GeneralManual.Com Network Canon FAXPHONE B45 Bubble Jet Fax User Manual. RSS. This page requires Javascript. Modify your browsers settings to allow Javascript to execute. See your browsers documentation for specific instructions. To install your download click on the name of the downloaded file. Please click below to find a quick resolution to your inquiry. The driver may be included in your OS or you may not need a driver. Recommended Drivers File Name Date File Size Optional Drivers File Name Date File Size Recommended Software File Name Date File Size Optional Software File Name Date File Size Recommended Manuals File Name Date File Size Optional Manuals File Name Date File Size Scroll down to easily select items to add to your shopping cart for a faster, easier checkout. Visit the Canon Online Store. See your browsers documentation for specific instructions. To install your download click on the name of the downloaded file. A 15sheet automatic document feeder speeds the sending of multiple page documents. With both facsimile functions and builtin digital telephone answering machine, the FAXPHONE B45 saves valuable desktop space.

Affordable, smart, easytouse and desktop convenience, thats the FAXPHONE B45! Scroll down to easily select items to add to your shopping cart for a faster, easier checkout. After you finish reading this guide, store it in a safe place for future reference. Trademarks. Canon, FAXPHONE, and BJ are registered trademarks. UHQ is a trademark of Canon Inc. All other product and brand names are registered trademarks, trademarks or service marks of their respective owners. Sending documents.42. Direct sending.42 Memory sending.43 Manual sending.44Setting the recording time for a telephone message.63 Setting TAM MONITOR.64 Setting TOLL SAVER.65. Troubleshooting.98. Please read the list below to become familiar with the symbols, terms, and abbreviations used in this guide. Cautions tell you how to avoid actions that could injure you or damage your fax of paper you send, receive, or copy with your fax. Keep the area free so you can reach the outlet quickly. If you notice anything unusual smoke, strange odors, noises around the fax, unplug it immediately. This equipment should be connected to a standard 120 volt AC, threewire grounded outlet only. When

such changes are necessary, the telephone company is required to give adequate prior notice to the user. FCC Notice. Handset. BX3 Black BJ cartridge For user convenience, the destination labels provided with your fax should be fitted over the onetouch speed dialing buttons on the left of the operation panel. Plug the fax into a 120 volt AC outlet. 1 2 Plug the power cord connector into the rear of the fax. Plug the other end of the power cord into a properly grounded AC power outlet. There is no power switch on the fax. If necessary, remove the document tray when loading paper. 1 Squeeze, then slide the paper guide to the left. Load the paper in the multipurpose tray. Open the printer cover by gently pulling it towards you see p. 12. Round shaft. Circuit board Document tray Operation panel. Printer cover. Cartridge holder.

Document release button. TAM Mode Delete Record. PlaySpace 07 Polling. TAM Mode. TAM Mode button see p. 62. DeleteTAM Mode Delete Record Play. Record. Record button see p. 61. Play. Play button see p. 68 Number Mode 1 Number mode 1 This information is called your TTI Transmit Terminal Identification and appears at the top of the faxed FAX 123 4567 CANON CANON CANADA 01 You can also register the name of the party up to 16 letters the partys name up to 16 letters using the numeric buttons see p. 24. The fax asks you to speak the partys name again. You can check whether a voice tag has been fax asks you to speak the name again. After the tone, speak into the microphone again. The fax asks you to confirm that you want to delete the voice tag. Your fax does not require special ink jet paper. Look at the label on the package to see if the paper has a preferred side for printing. There are several methods of dialing the receiving partys number, depending on how your fax begins sending. Press twice to send immediately. A01 Canon CANADA See Manual sending, p. 44. When you are sending a document and the receiving partys line is busy, the fax waits the specified time and then dials the same number again. This allows you to take advantage of lower latenight longdistance rates offered by some telephone companies. The fax can only register one preset sending operation at a time. 1 Load the document face up into the document tray. To send or copy other documents after setting the fax for delayed sending, simply send or copy using any other sending procedure in this guide. The fax begins the operation approximately 10 seconds after you press the last button. The fax prints the document. The fax rings differently depending on whether a call is a fax or voice call. You can select from 10 to 45 seconds see p. 74. Only one outgoing message, no longer than 20 seconds, can be recorded.

If the other party sends a fax after they leave a message, or if the call is a fax call, the fax is received automatically. Only one voice memo, 30, 60, voice memo. Setting ends and the fax returns to standby mode. If you enter two invalid passwords consecutively, the call will be disconnected. Each menu contains settings that control different functions of your fax. Set the volume of the keypad. Set the ring tone. Set the dialing method the fax uses to match the type of phone line you have. OUTPUT NO Turn off the reception report feature. OUTPUT YES Set the fax to print a reception report every time you receive a document. PRINT ERROR ONLY Print only when an error occurs during receiving. Select the reduction rate. Settings Set the date format. Settings. Set the speed at which the fax starts receiving. Set a fourdigit PIN so that you can access the fax from remote locations. Setting this feature to ON allows calls to be picked SAVER to OFF, this feature allows you to set the number of times the fax rings. Allows you to forward messages. These operations can be printed out in the form of activity reports that can help you check the dates and times of fax transmissions and whether or select ACTIVITY REPORT, 1 TOUCH LIST, CODED DIAL LIST, or USER DATA LIST. See RX REPORT, p. 73. Be sure to close the printer cover until it locks into place, or the fax will not function properly. If necessary, remove the document tray when clearing paper jams. Remove the paper stack from the multipurpose tray. Gently pull any jammed paper out of the fax as shown. Pull it gently in either direction. Do not use tissue paper, paper towels, or similar materials for cleaning. Disconnect the power cord from the fax. Open the printer cover. To maintain the best possible print quality, these nozzles need to be cleaned from time to time. Your fax is equipped with a print head cleaning function that does this. The BJ cartridge tilts slightly to the left before lowering the

cartridge lock lever.

If the AUTO TEST PRINT setting is set to ON The fax automatically prints a test page. There may be an obstruction that is not allowing the cartridge holder mechanism to move. The waste ink tank which holds the ink used for print head cleaning may be full. The fax received the document in memory because paper or ink ran out, a paper jam occurred, or the incorrect BJ cartridge was installed. If the cartridge is empty or there is no paper in the multipurpose tray when power is restored, the memory clear report will not be printed even after the cartridge is replaced or paper is loaded. Recording method Paper tray capacity Paper type. Image memory Auto dial functions Ink cartridge Power source Power consumption Operating environment Dimensions Weight. General problems 914 Guide document 21. You may find documents other than just I can not send or receive a fax. I am connected and Nothing is i. We keep our list of direct Canon FAXPHONE B45 driver and firmware links up to date so they are easy to find when you need them. Use of shielded cable is sent and an identification of the business or other entity, or other individual sending the message and the telephone number of the sending machine or such business, other entity, or individual. In order to stop operation of the equipment. Main unit. Multipurpose tray. Document tray. BX3 Black BJ cartridge Your fax provides you have to manually activate reception of whether the phone connected to the call is. If your fax polls the other fax machine, the document is using a Canon fax machine which has the Polling ID function, ask them to set the fax not to store documents in memory, and the LCD. If PIN ENTRY is set to OFF, it is. Set the length of time the fax will ring before starting to document receive mode. Set the amount of an incoming call. Select the reduction rate. Description Lists the numbers and names registered under one touch speed dialing buttons. Lists the current settings of a sequential broadcasting. Doc. If you set the fax.

See TX REPORT, p. 73. You can set the fax to. Also, try unplugging the fax. Effective scanning size Effective printing size Transmission time Scanning line density. Recording method Paper tray capacity Paper type. Image memory Auto dial functions Ink cartridge Power source Power consumption Operating environment Dimensions Weight CALLING VOLUME setting 72 Canceling automatic redialing 49 delayed sending 411 manual redialing 49 receiving 57 sending 45 Cartridge See BJ cartridge Cartridge holder 21 CARTRIDGE JAMMED message 915 CHANGE CARTRIDGE message 916 CHECK DOCUMENT message 916 CHECK PAPER SIZE message 916 CHECK PRINTER message 916 Cleaning BJ cartridge print head 95 button 22, 95, 96 exterior of fax. All the Features You Need A personal desktop fax that is the FAXPHONE B45. With both facsimile. The following terms are frequently used to search for Canon FAXPHONE B45 support. Canon site. To protect our site from spammers you will need to verify you are not a robot below in order to Guidelines. 19 Installing the BJ cartridge in your fax. 110 Testing the fax. 111. Direct sending. 42 Memory sending. 43 Manual sending. 44 Adjust only those controls that. Supply a suitable table, cabinet, or desk. See page S1 for the machine's dimensions and weight. This equipment. When such changes are necessary, the telephone company is required to give adequate prior notice to the user. FCC Notice For information on replacing the BJ cartridge, see p. 96. Otherwise the cartridge. When a BJ cartridge is not installed in your fax, PUT IN CARTRIDGE is displayed on the LCD. 1 2 3 Make sure the fax is plugged in. Open the printer cover by gently pulling it towards you see p. 12. See SYSTEM SETTINGS, p. 75. Ribbon cable Guide rail. Round shaft. Circuit board. After you have assembled the fax, loaded the paper, and installed the BJ cartridge, you. Your fax is equipped with a print head cleaning function that does this. The fax prints the.

The BJ cartridge tilts slightly to the left before lowering the cartridge lock lever. If the AUTO TEST PRINT setting is set to ON The fax automatically prints a test page. The fax prints a test page every time you insert a BJ cartridge. The outgoing message has not been recorded. The fax received the document in memory because paper or ink ran out, a paper jam occurred, or the incorrect BJ cartridge was installed. Either 50 messages have been recorded or the total maximum recording

time of 10 minutes has been reached. Action. Register the. I can not send or receive a fax. I am connected and Nothing is i. Discover everything Scribd has to offer, including books and audiobooks from major publishers. Start Free Trial Cancel anytime. Report this Document Download Now save Save Faxcanonb120pdf For Later 0 ratings 0% found this document useful 0 votes 24 views 2 pages Faxcanonb120pdf Uploaded by Ben Description Faxcanonb120pdf Full description save Save Faxcanonb120pdf For Later 0% 0% found this document useful, Mark this document as useful 0% 0% found this document not useful, Mark this document as not useful Embed Share Print Download Now Jump to Page You are on page 1 of 2 Search inside document Portable Document Format Image Scanner Equipment Footer Menu Back To Top About About Scribd Press Our blog Join our team. Browse Books Site Directory Site Language English Change Language English Change Language. We delete comments that violate our policy, which we encourage you to read. Discussion threads can be closed at any time at our discretion. It can be assumed that most parts are interchangeable, however some machines may be modified so that supply items toner, developer, imaging, and drum cartridges may not be compatible. Please contact us for options. Precision Roller is in no way affiliated, sponsored or endorsed by these copyright owners or their affiliates or dealers This website uses a secure server to encrypt all sensitive information.

We specialize in providing ink cartridges for any Canon Printer Brand. Our ink cartridges are precisely engineered with brand new parts at our manufacturing facility to ensure the same print quality as OEM cartridges. Our high print quality and low prices are backed up with a 1 year money back guarantee and over 99% customer satisfaction rate. Please be informed that using new compatible replacement printer cartridges will never void your printer warranty. Please contact us for your further questions or simply find your replacement cartridges from the compatible Canon FaxPhone B45 ink cartridges list below and take advantage of our great prices now! 1Year Money Back Guarantee Got Printer Warranty Worries. Major printer manufacturers sell printers at or below cost. They make profits from selling the cartridges. By using compatibles you are cutting into their primary source of profit. So they threaten to void your warranty if you use compatible or remanufactured cartridges. It is however strictly ILLEGAL for them to do so. Reference MAGNUSONMOSS WARRANTY IMPROVEMENT ACT, United States Code Annotated Title 15 Commerce Trade Chapter 50, Consumer Product Warranties 15 Sections 2302. Need Help Our product specialist is here to help you find the correct cartridge for your printer. Dont worry. Your email address is never shared or sold. See our privacy policy for details. Dont worry. Your email address is never sold or shared. See our Privacy Policy for details. If you have two of the same model printer you can swap the cartridges around. If the problem follows the cartridge then you know it is a cartridge problem. If the problem stays with the printer, despite what cartridge is fitted, then its a printer problem. Q. My pages have light streaks or are blank A. If the cartridge has recently been installed, check that the seal has been removed. If the cartridge has been in the printer for some time it may just be running out of toner.

You can take the cartridge out of the printer and gently rock it to redistribute the remaining toner, but it will need replacing in the near future. Q. Can you arrange to package for my private brand A. Yes, we can arrange your private label packaging provided the quantity reaches a certain level. We also provide design services. Q. Hows your product quality A. Each step of production is strictly Monitored by the Quality Control Team, and there are checking spots for the key production steps to conduct a 100% inspection. 100% Post Test Printing After cartridges are manufactured, they will be applied with 100% posttest by printing test pages. Cartridges with a defect will be reworked. If you have two of the same model printer you can swap the cartridges around. Cartridges with a defect will be reworked. You must have JavaScript enabled in your browser to utilize the functionality of this website. Start shopping. Our lowcost, highquality photo paper produces vivid, instantdry photos. Try refilling your empty ink cartridges for continued use. Our compatible ink cartridges offer the same printing quality as the brand name Canon printer cartridges. Yet, ours are much cheaper.

Letting you save up to 80% off name brands. Our compatible Canon FaxPhone B45 ink cartridges are professionally engineered to meet the highest quality and performance standards. To ensure this, our vendors are all ISO9001, ISO14001, STMC, and RoHS compliant. On top of being reliable, our products are also quite green. They contain recycled parts of cartridges. Its an Earthfriendly method that reduces waste by following ISO14001 standards. As a reminder, using compatible or remanufactured cartridges will never void your printer warranty. So go ahead. Find your replacement ink cartridges from the Canon FaxPhone B45 cartridge list below. Start creating your custom combo pack and saving today!

Show more Any and all brand name designations or references are made solely for purposes of demonstrating compatibility. Dont worry. Your email address is never shared or sold. See our Privacy Policy for details. If you have a moment, let us know a little bit about yourself, so we can customize your experience. You can unsubscribe at anytime. Subscribe Personal information provided may be collected, used and disclosed in accordance with our Privacy Policy Connect with Us Connect with us on your favourite social networks. We'll let you know what we're up to, and you can tell us how we're doing.