

 
*Cypress
Hills*



ASSEMBLY INSTRUCTIONS

GREYSTONE MEDIUM STORAGE CABINET

MODEL # AXCRGREY17

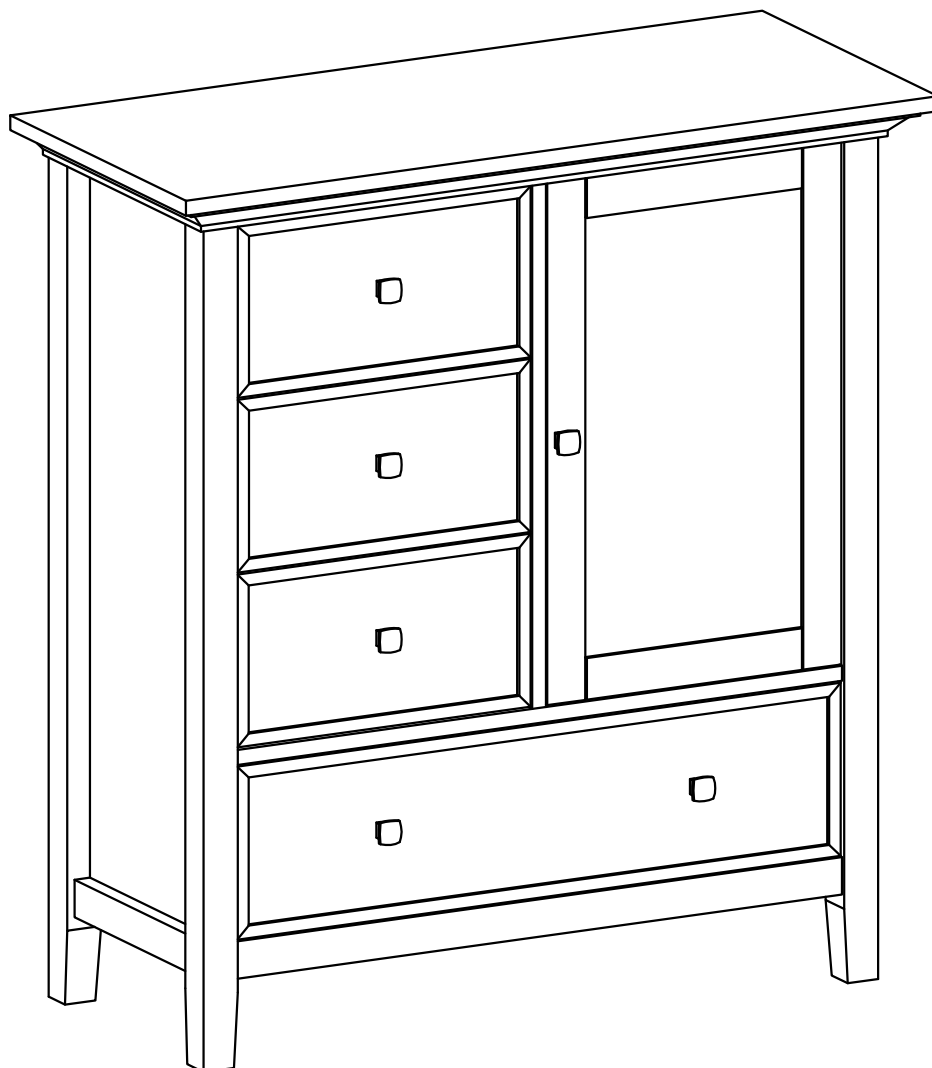



DO NOT RETURN

FOR REPLACEMENT PARTS OR OTHER INQUIRIES
PLEASE CONTACT US AT:

1-800-667-8992

PLEASE ENSURE TO HAVE THE COLLECTION
NAME AND DESCRIPTION FROM THE
PACKAGING OR INSTRUCTION BOOKLET

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

CAUTION: Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help. If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

CARE and MAINTENANCE

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter.

Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.

Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods.

Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger, but lose moisture more slowly than other finishes.

To help protect your wood furniture, take these steps:

 
- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly. Don't over-humidify; that can damage wood by causing it to expand and contract.
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp.
- If you can avoid it, don't put furniture near heating vents. If you must, keep the piece 3 to 4 inches away from the wall, giving the heat and air space to circulate.
- Dust with soft dry cloth.
- Do not use liquid or aerosol products.
- To avoid marking, do not place rubber on surface (foot pads, etc.)
- For soil build-up, wipe with damp cloth & dry.
- Do not use abrasive cleaners.

PRE-ASSEMBLY INFORMATION

MODEL # AXCRGREY17


PART DESCRIPTION

AL

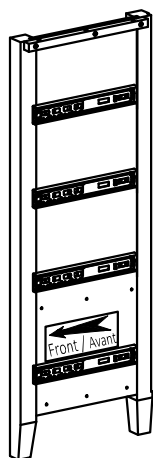


LEFT SIDE
QTY 1

 AR

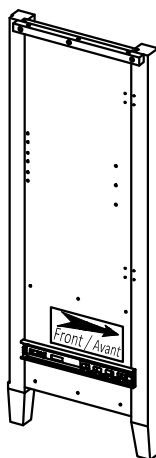


RIGHT SIDE
QTY 1

 B

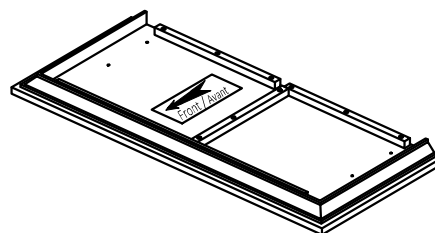


TOP
QTY 1

 C

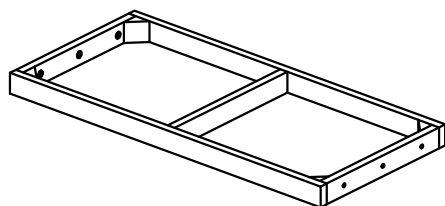


BOTTOM
QTY 1

 D

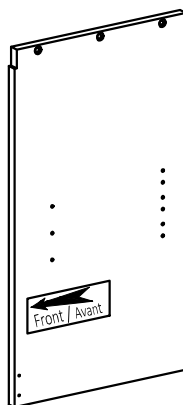


DIVIDER
QTY 1

 E

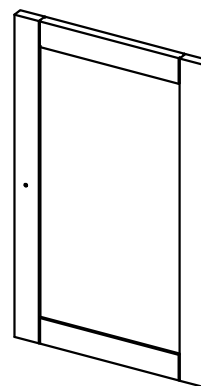

DOOR
QTY 1

 F

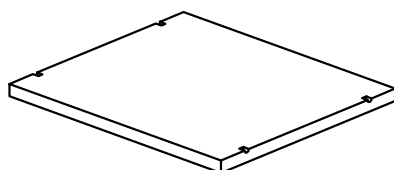


CABINET SHELF
QTY 1

GL



LEFT BACK PANEL
QTY 1

 GR

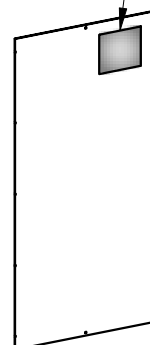

RIGHT BACK PANEL
QTY 1

Warning Label

 
NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-800-667-8992.

PRE-ASSEMBLY INFORMATION

MODEL # AXCRGREY17


PART DESCRIPTION

H

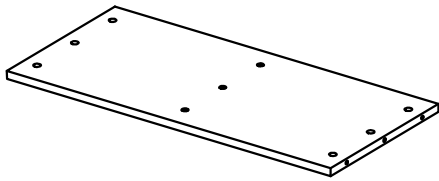


TOP SHELF
QTY 1

 I

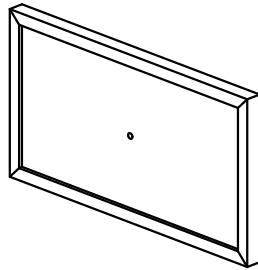


SMALL DRAWER FRONT
QTY 3

 J

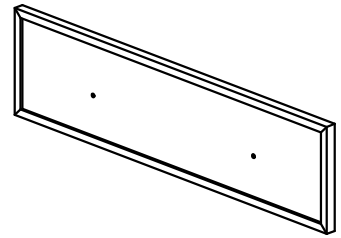


LARGE DRAWER FRONT
QTY 1

 KL

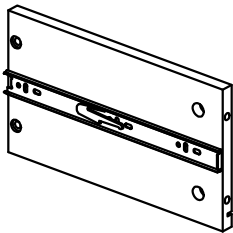


LEFT DRAWER SIDE
QTY 4

 KR

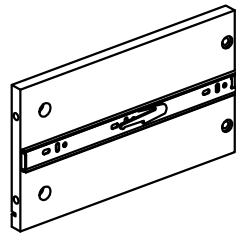


RIGHT DRAWER SIDE
QTY 4

 L

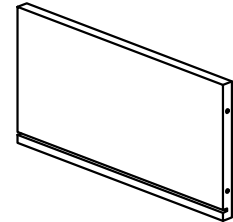


SMALL DRAWER BACK
QTY 3

 M

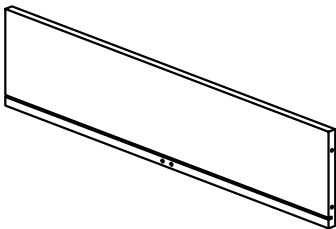


LARGE DRAWER BACK
QTY 1

 N

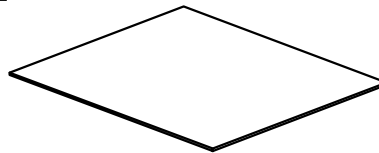


SMALL DRAWER BOTTOM
QTY 3

 O

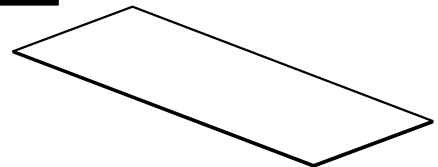

LARGE DRAWER BOTTOM
QTY 1

 P

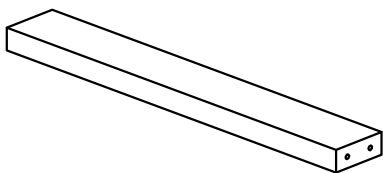

DRAWER BOTTOM SUPPORT
QTY 1

 
NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-800-667-8992.

PRE-ASSEMBLY INFORMATION

MODEL # AXCRGREY17

HARDWARE DESCRIPTION

1




ALLEN KEY SCREW
M6 X 30mm
QTY 34

2



ALLEN KEY
QTY 1

 3



SHELF SUPPORT
QTY 6

4



 
PHILLIPS SCREW
M4 X 15mm
QTY 12

5




PHILLIPS SCREW
M3 X 15mm
QTY 4

6




PHILLIPS SCREW
ROUND HEAD
M4 X 15mm
QTY 19

 7

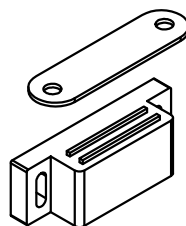

MAGNET AND PLATE
QTY 1 SET

 8

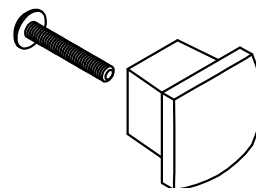


HANDLE
M4 X 25mm
QTY 6 SETS

9




CAM LOCK PIN
CAM LOCK
QTY 23 SETS

 10

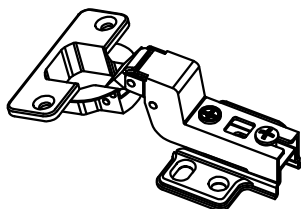


ADJUSTABLE HINGE
QTY 2

 11




PHILLIPS SCREW
M4 X 30mm
QTY 2

 12

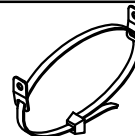


 - a. M4 X 25mm - QTY 2
(1 is extra)
 - b. M4 X 15mm - QTY 1
 - c. M4 X 25mm - QTY 1
- FURNITURE TIP
OVER RESTRAINT
QTY 1 SET




Required -
Flathead screwdriver
Phillips screwdriver
Not Included

 NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-800-667-8992.

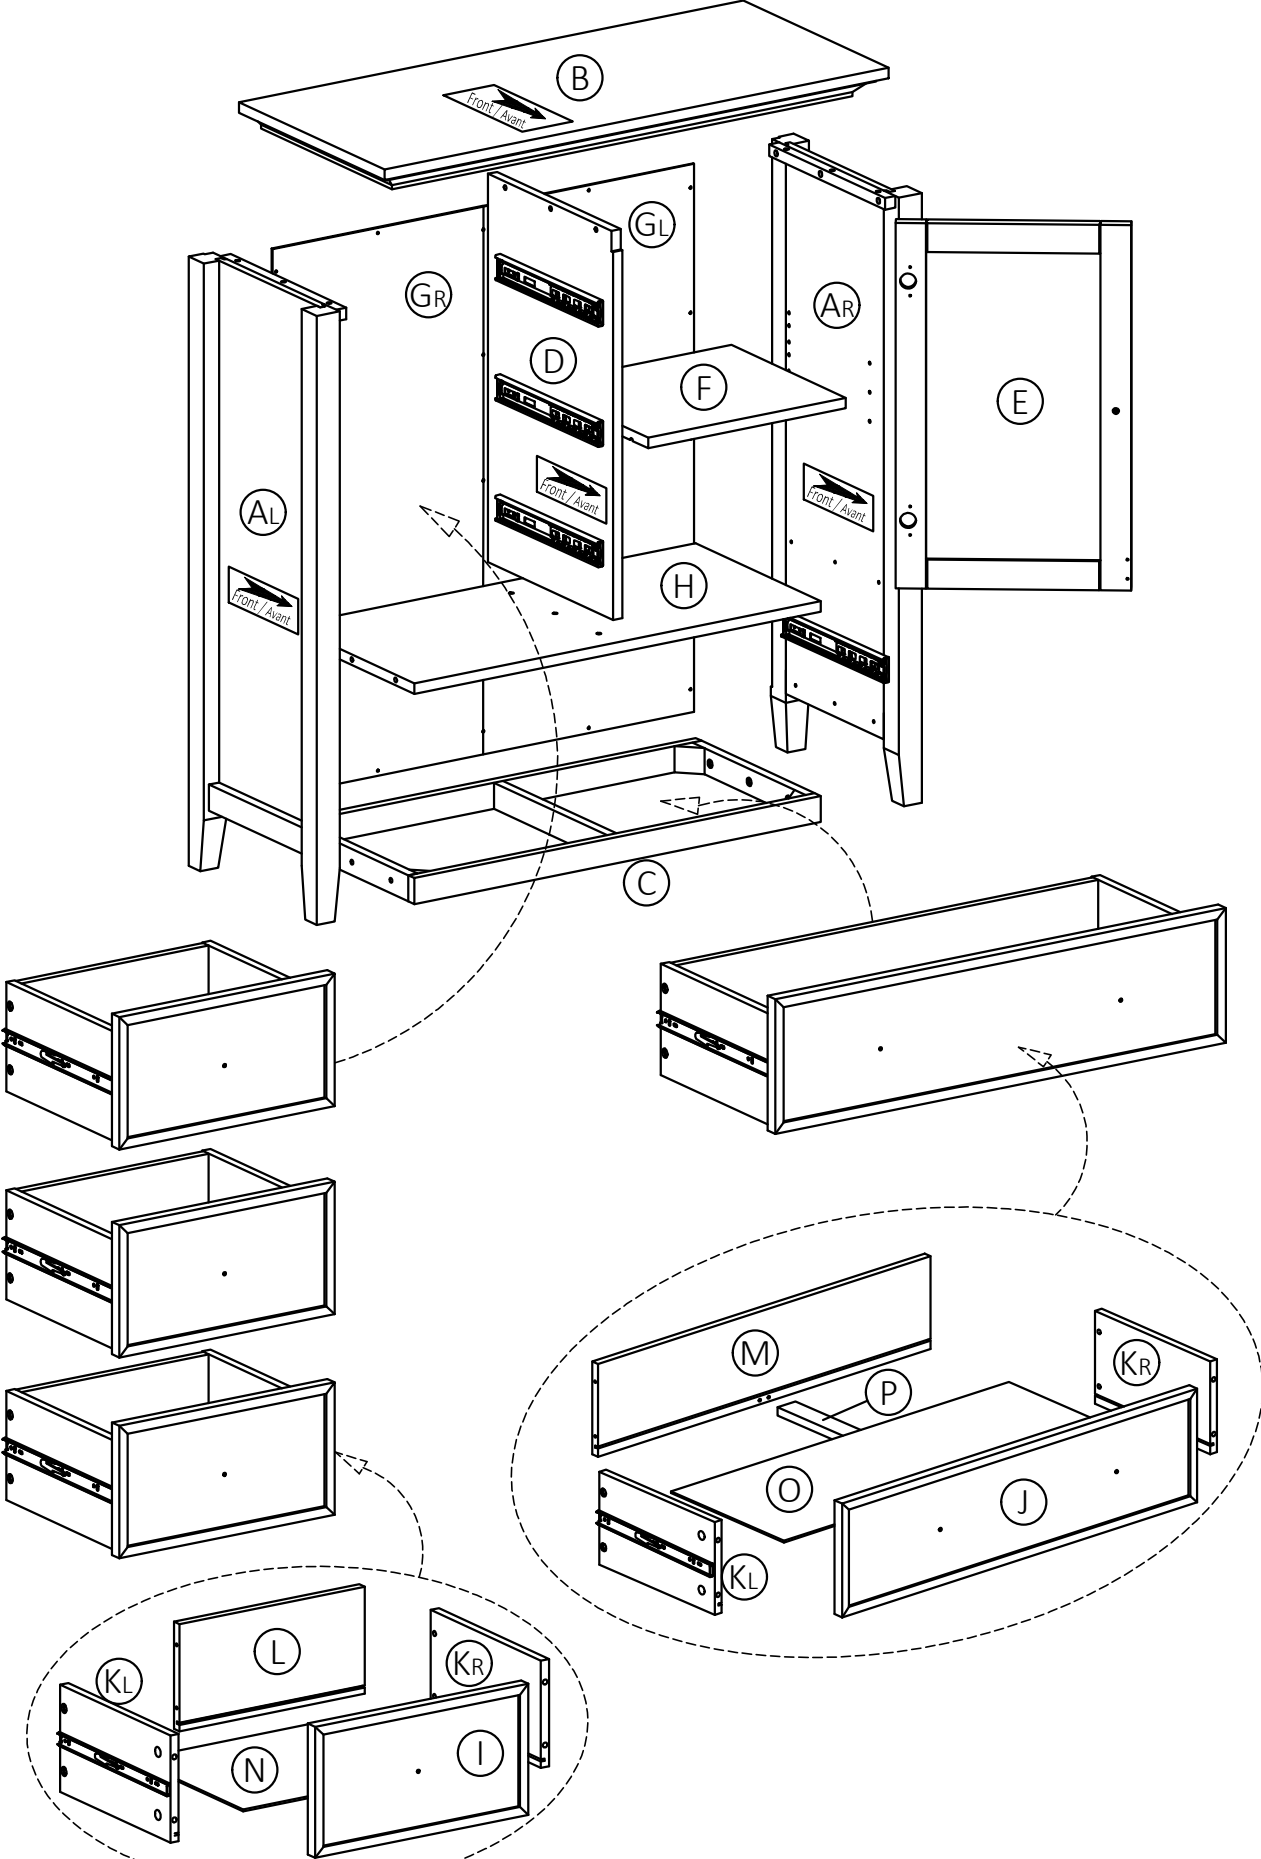


STEP-1

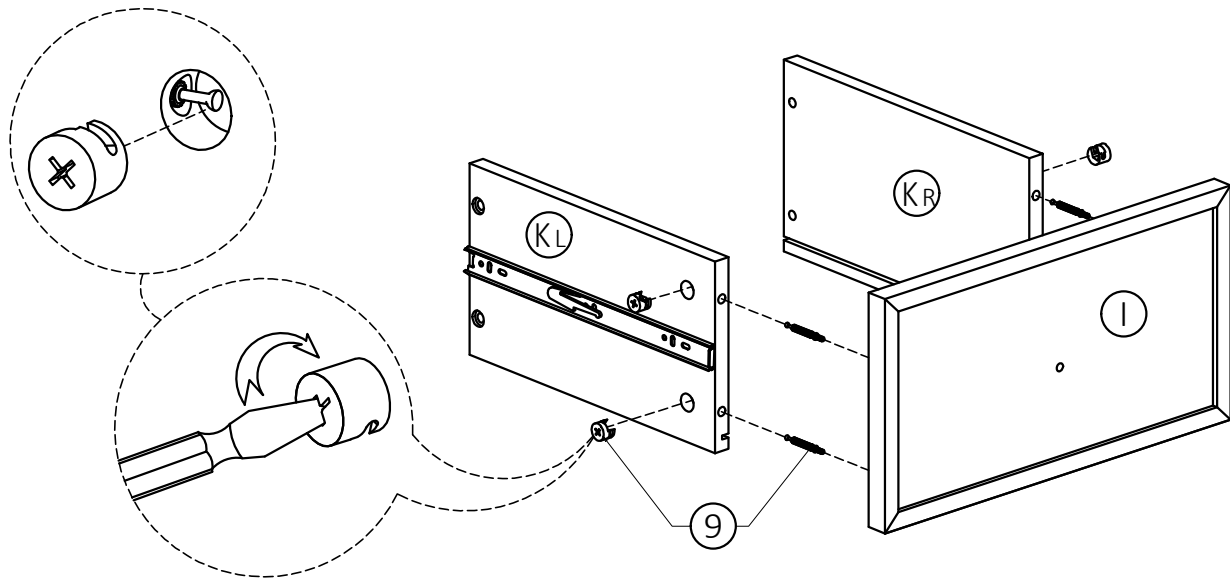 


1. Attach four Cam Lock Pins (9) to back of Small Drawer Front (I).
2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (KL), (KR).
3. Insert two Cam Lock (9) into pre-drilled holes on each Drawer Side (KL), (KR).
4. Use flathead screwdriver to secure Cam Locks.

 STEP-2

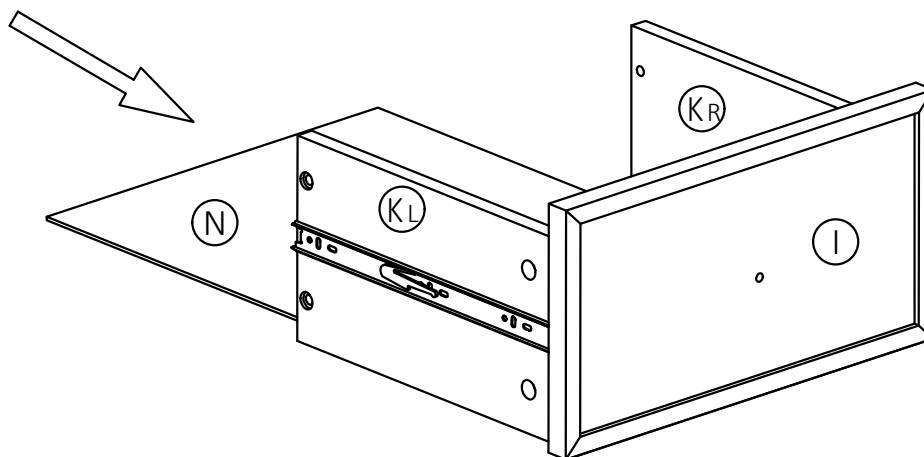


1. Slide Small Drawer Bottom (N) firmly into slots on Drawer Sides (KL), (KR) and Small Drawer Front (I).

 STEP-3

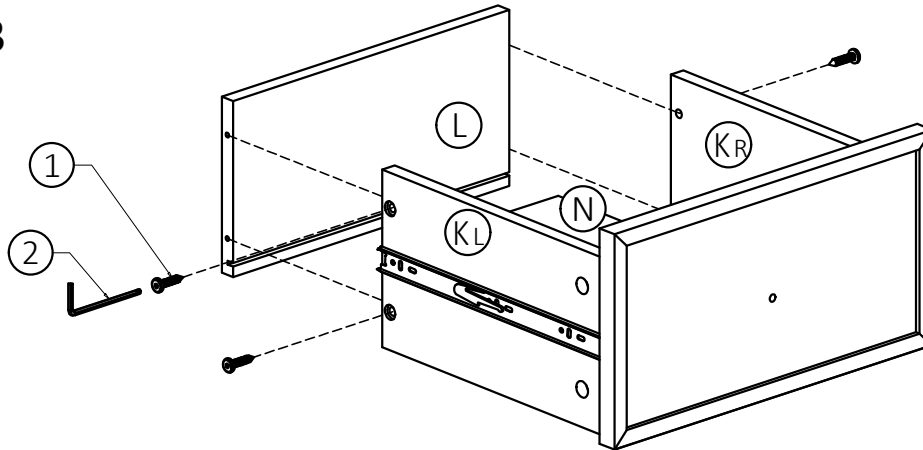

1. Align Small Drawer Back (L) with Small Drawer Bottom (N) and press firmly into slot.
2. Attach Small Drawer Back (L) using two Allen Key Screws (1) through pre-drilled holes on each Side (KL, KR).
3. Use Allen Key (2) to tighten Screws. Do not over-tighten.

 
STEP-4

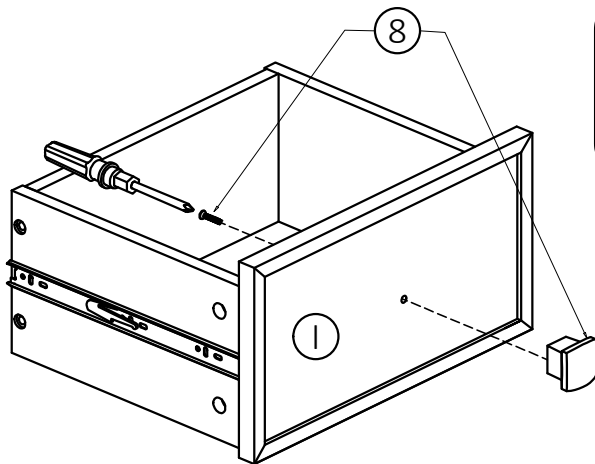


NOTE: The screwdriver is not included in the hardware pack.

1. Use phillips screwdriver to attach Handle (8) to Small Drawer Front (I).

 Repeat Step 1 - 4 for the remaining drawers.

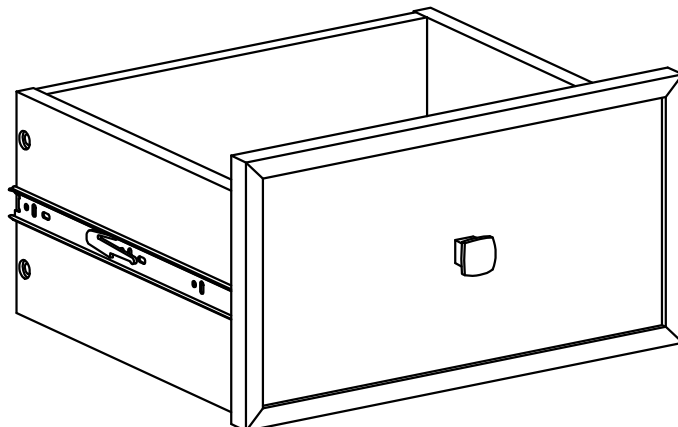


STEP-5

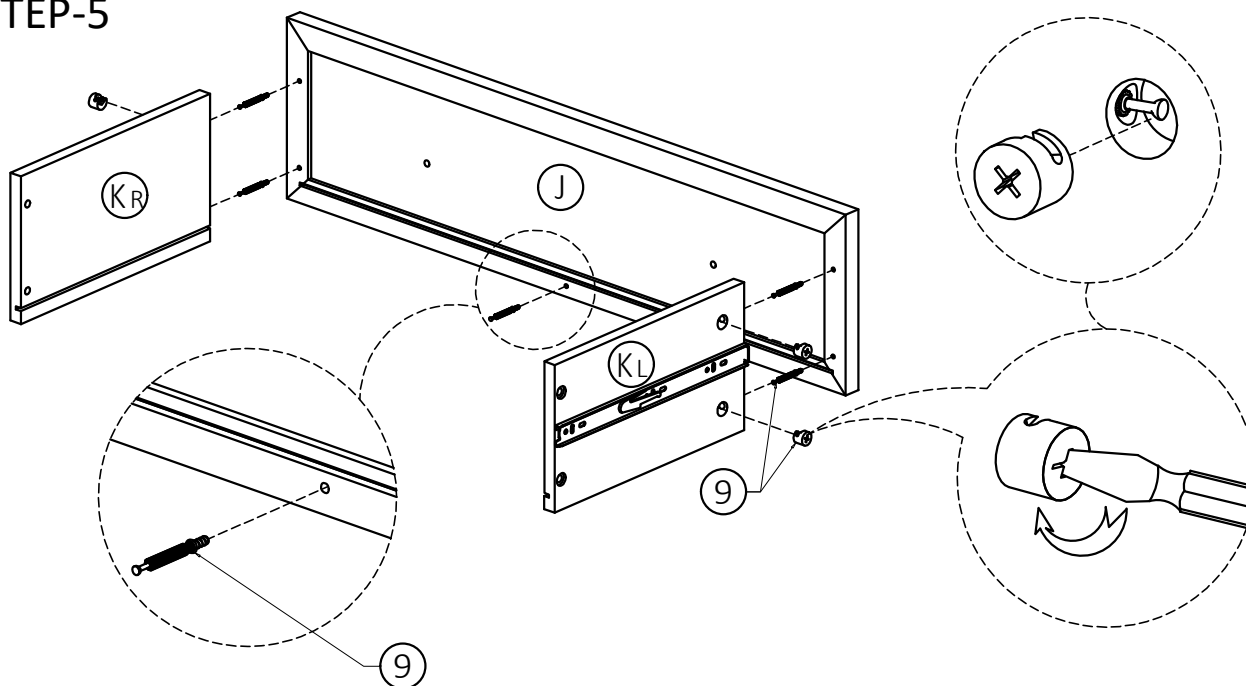 




1. Attach five Cam Lock Pins (9) to back of Large Drawer Front (J).
2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (KL, KR).
3. Insert two Cam Lock (9) into pre-drilled holes on each Drawer Side (KL, KR).
4. Use flathead screwdriver to secure Cam Locks.

 STEP-6

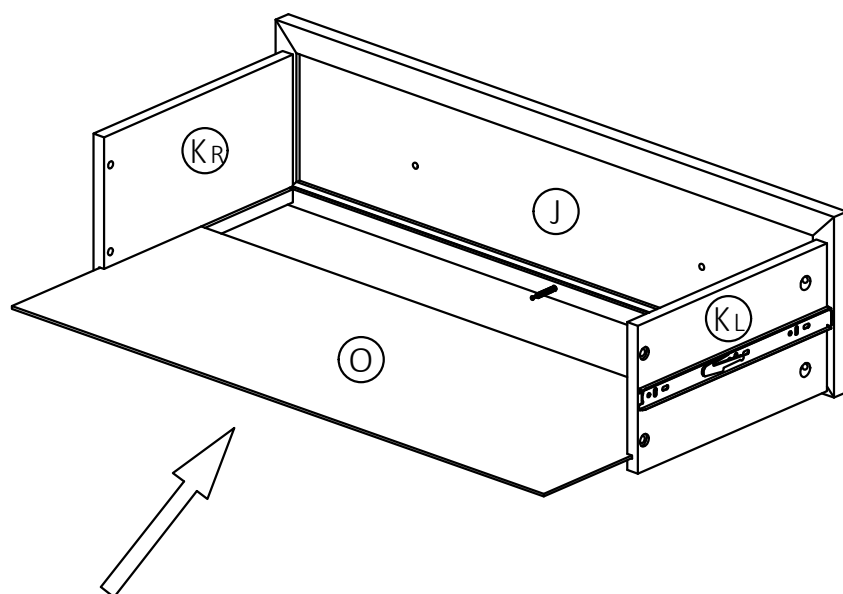


1. Slide Large Drawer Bottom (O) firmly into slots on Drawer Sides (KL, KR) and Large Drawer Front (J).

   STEP-7

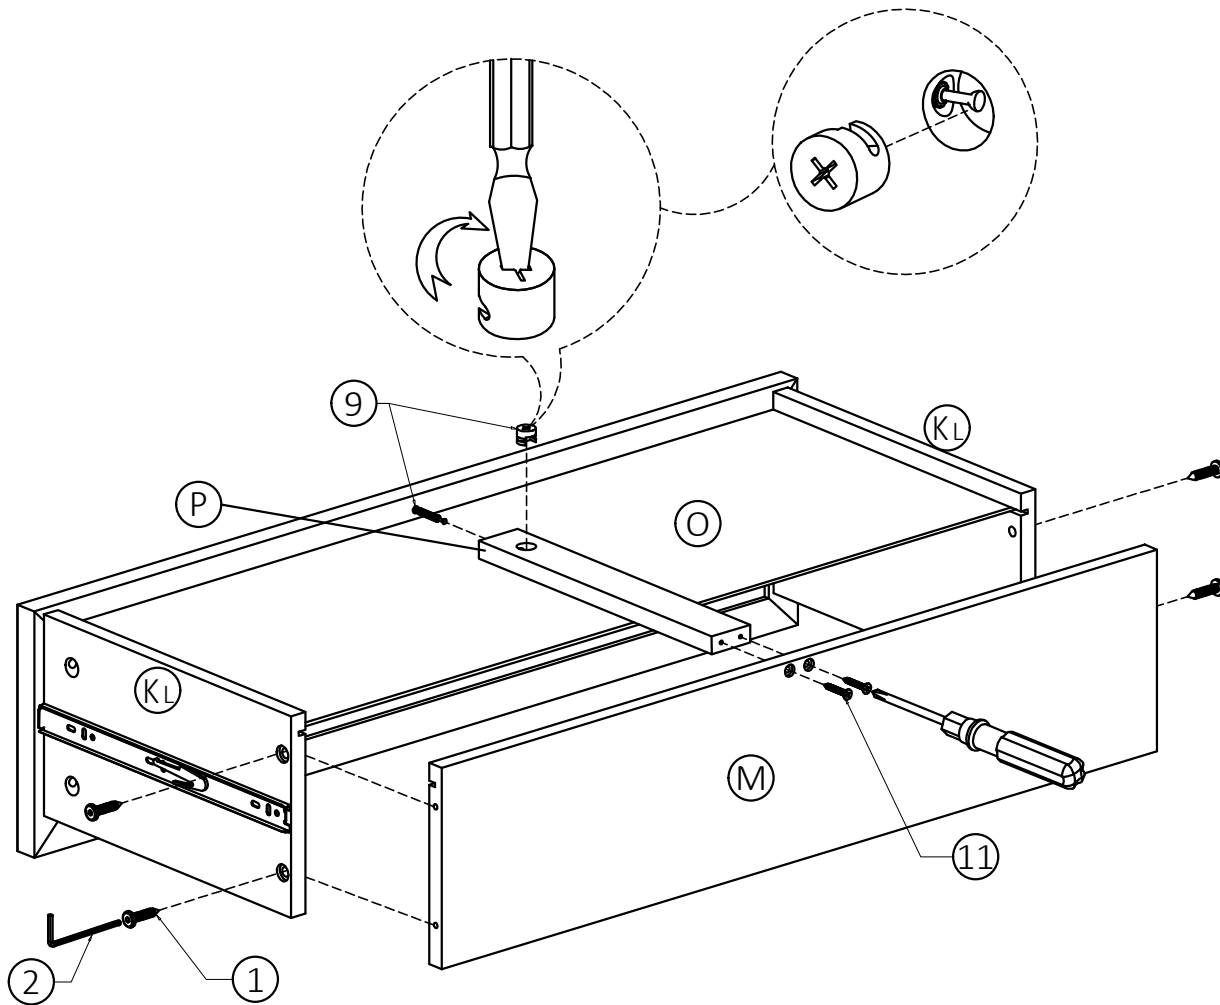


1. Align Cam Lock Pins with pre-drilled holes and attach Drawer Bottom Support (P).
2. Insert one Cam Lock (9) into pre-drilled holes on Drawer Bottom Support (P).
3. Use flathead screwdriver to secure Cam Locks.
4. Attach Large Drawer Back (M) to Drawer Bottom Support (P) using two Phillips screws (11).
5. Use Phillip Screwdriver to snugly tighten screw.
6. Align Large Drawer Back (M) with Large Drawer Bottom (O) and press firmly into slot.
7. Attach Large Drawer Back (M) using two Allen Key Screws (1) through pre-drilled holes on each Side (KL), (KR).
8. Use Allen Key (2) to tighten Screws. Do not over-tighten.

 
STEP-8



 
NOTE: The screwdriver is not included in the hardware pack.

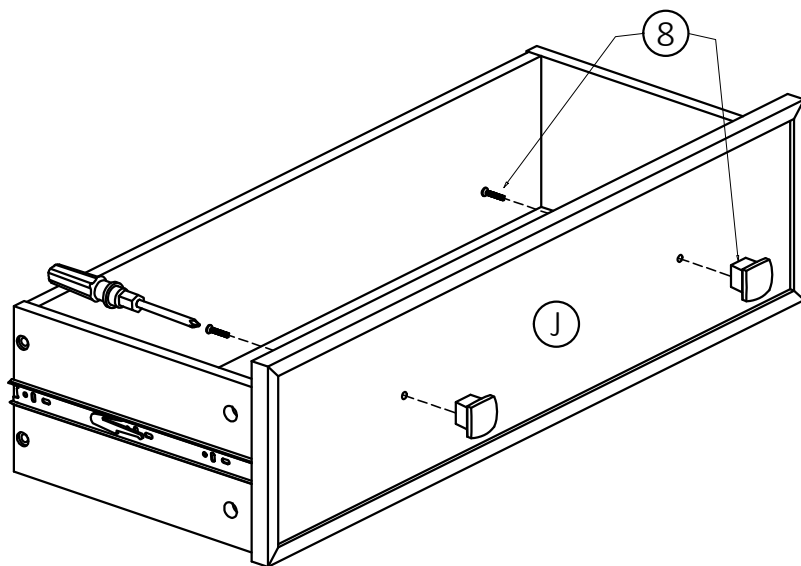

 1. Use phillips screwdriver to attach two Handles (8) to Large Drawer Front (J).

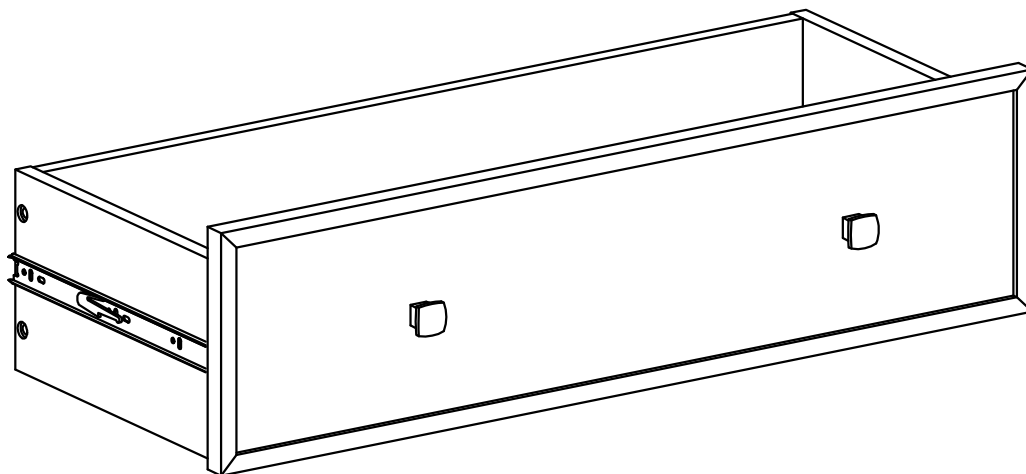


STEP-9

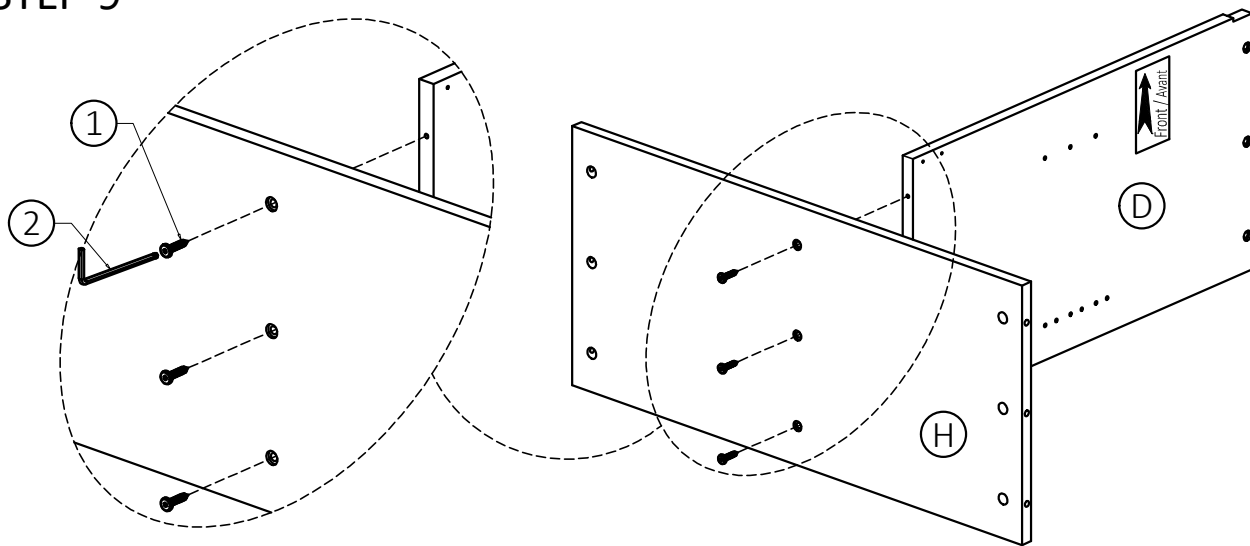 


1. Attach Divider (D) to Top Shelf (H) using three Allen Key Screws (1).
2. Use Allen Key (2) to tighten. Do not over-tighten.

 STEP-10

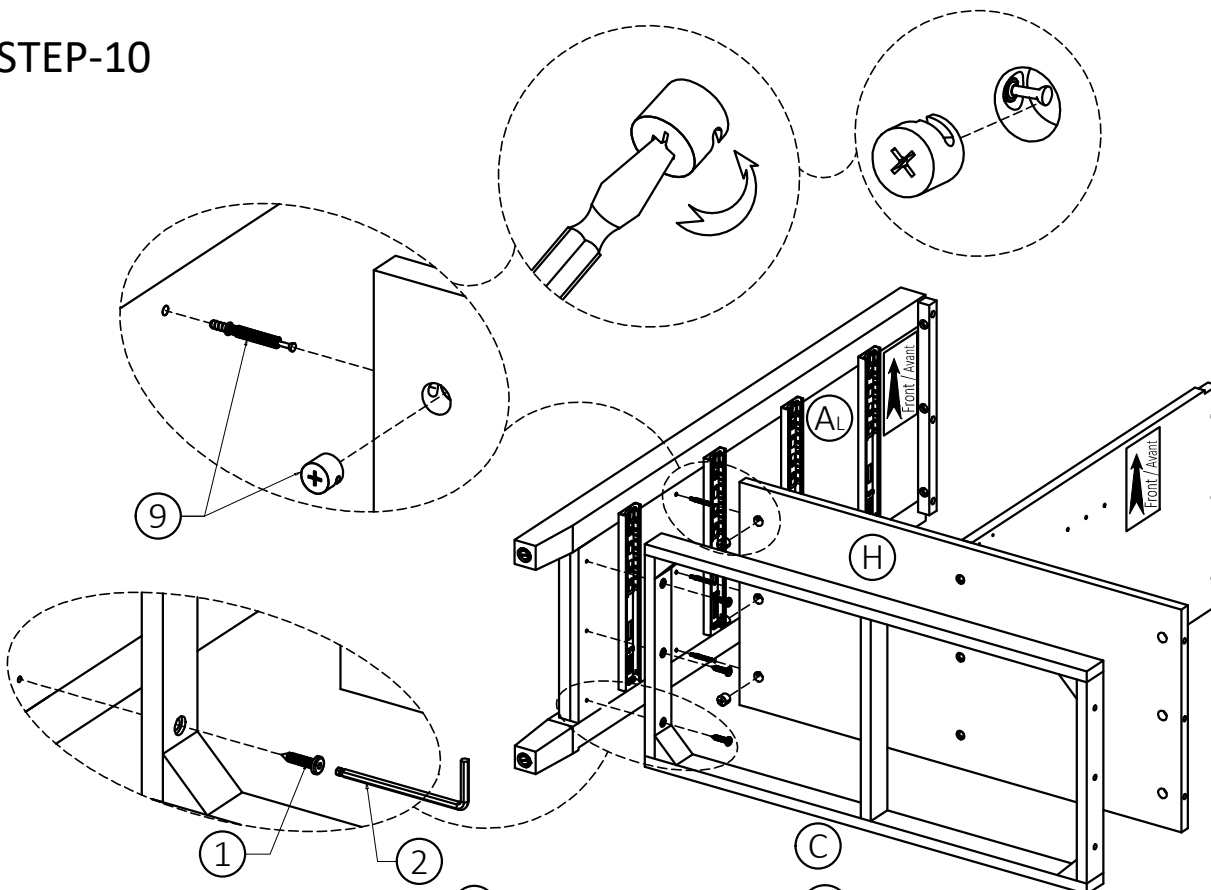


1. Attach three Cam Lock Pins (9) to back of Left Side (AL).
2. Align Cam Lock Pins with pre-drilled holes and attach Top Shelf (H).
3. Insert three Cam Lock (9) into pre-drilled holes on Top Shelf (H).
4. Use flathead screwdriver to secure Cam Locks.
5. Attach Bottom (C) to Left Side (AL) using three Allen Key Screws (1).
6. Use Allen Key (2) to tighten Screws. Do not over-tighten.

 STEP-11

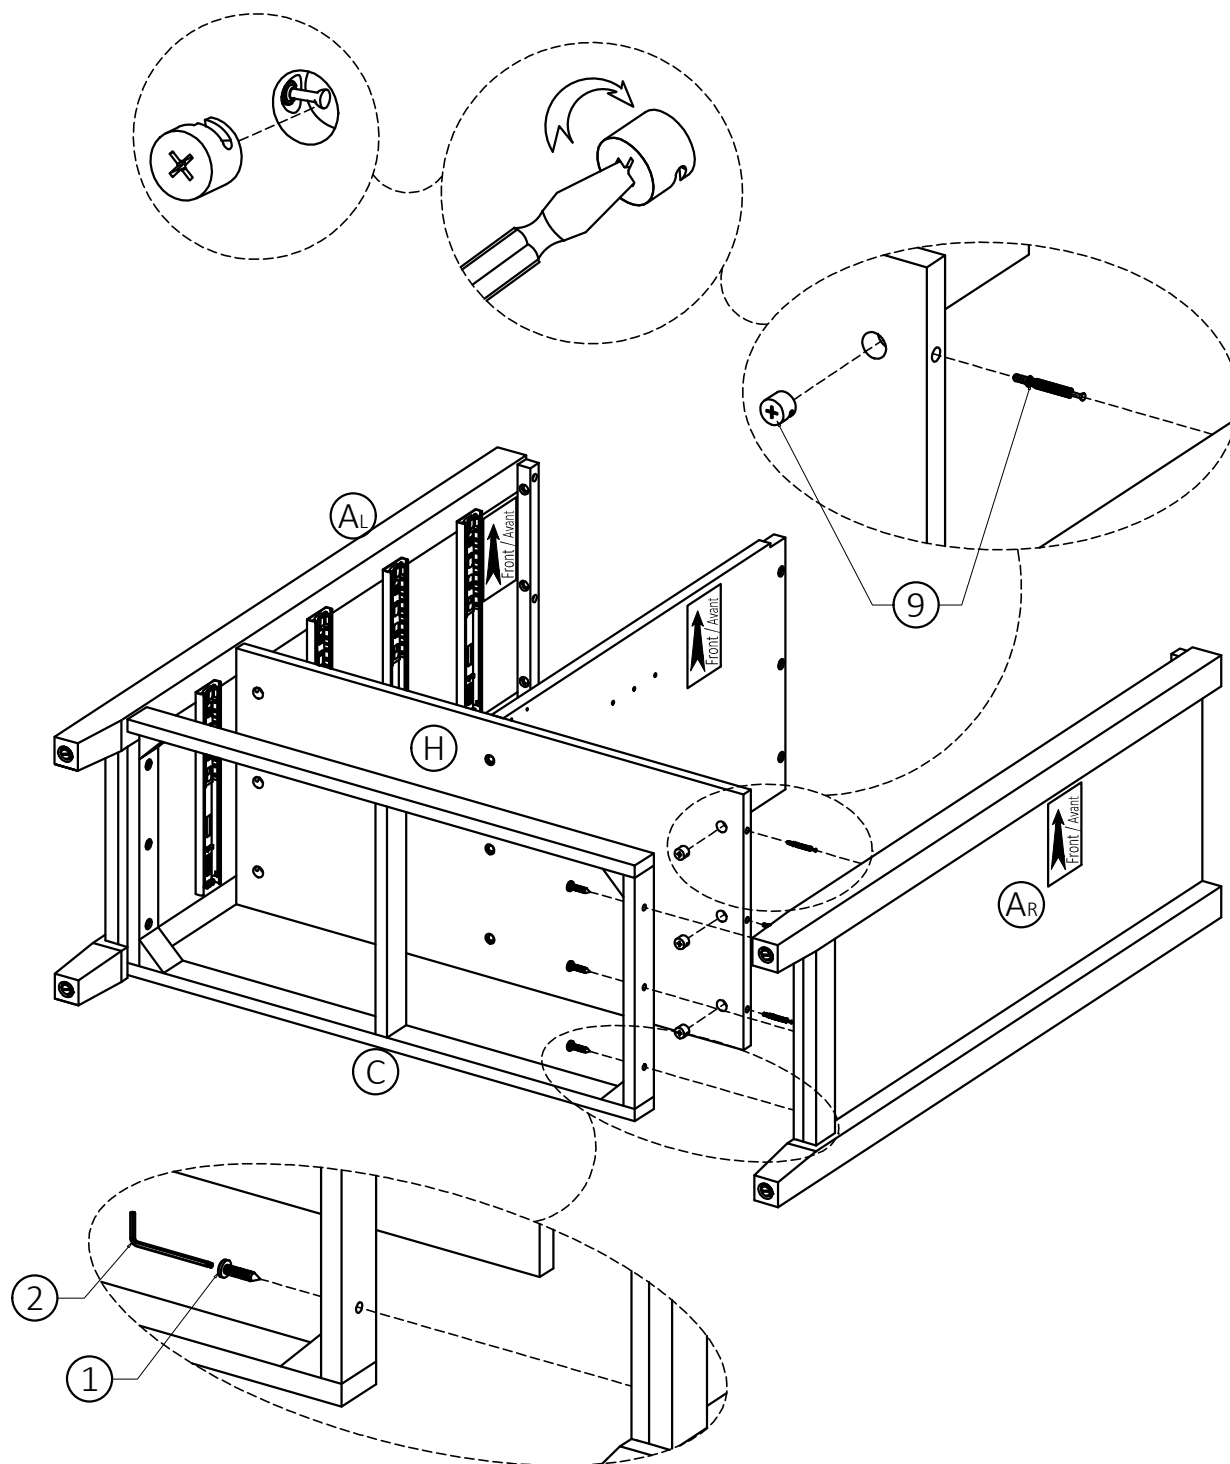


1. Repeat Step-3 for The Right Side (A_R).

 STEP-12

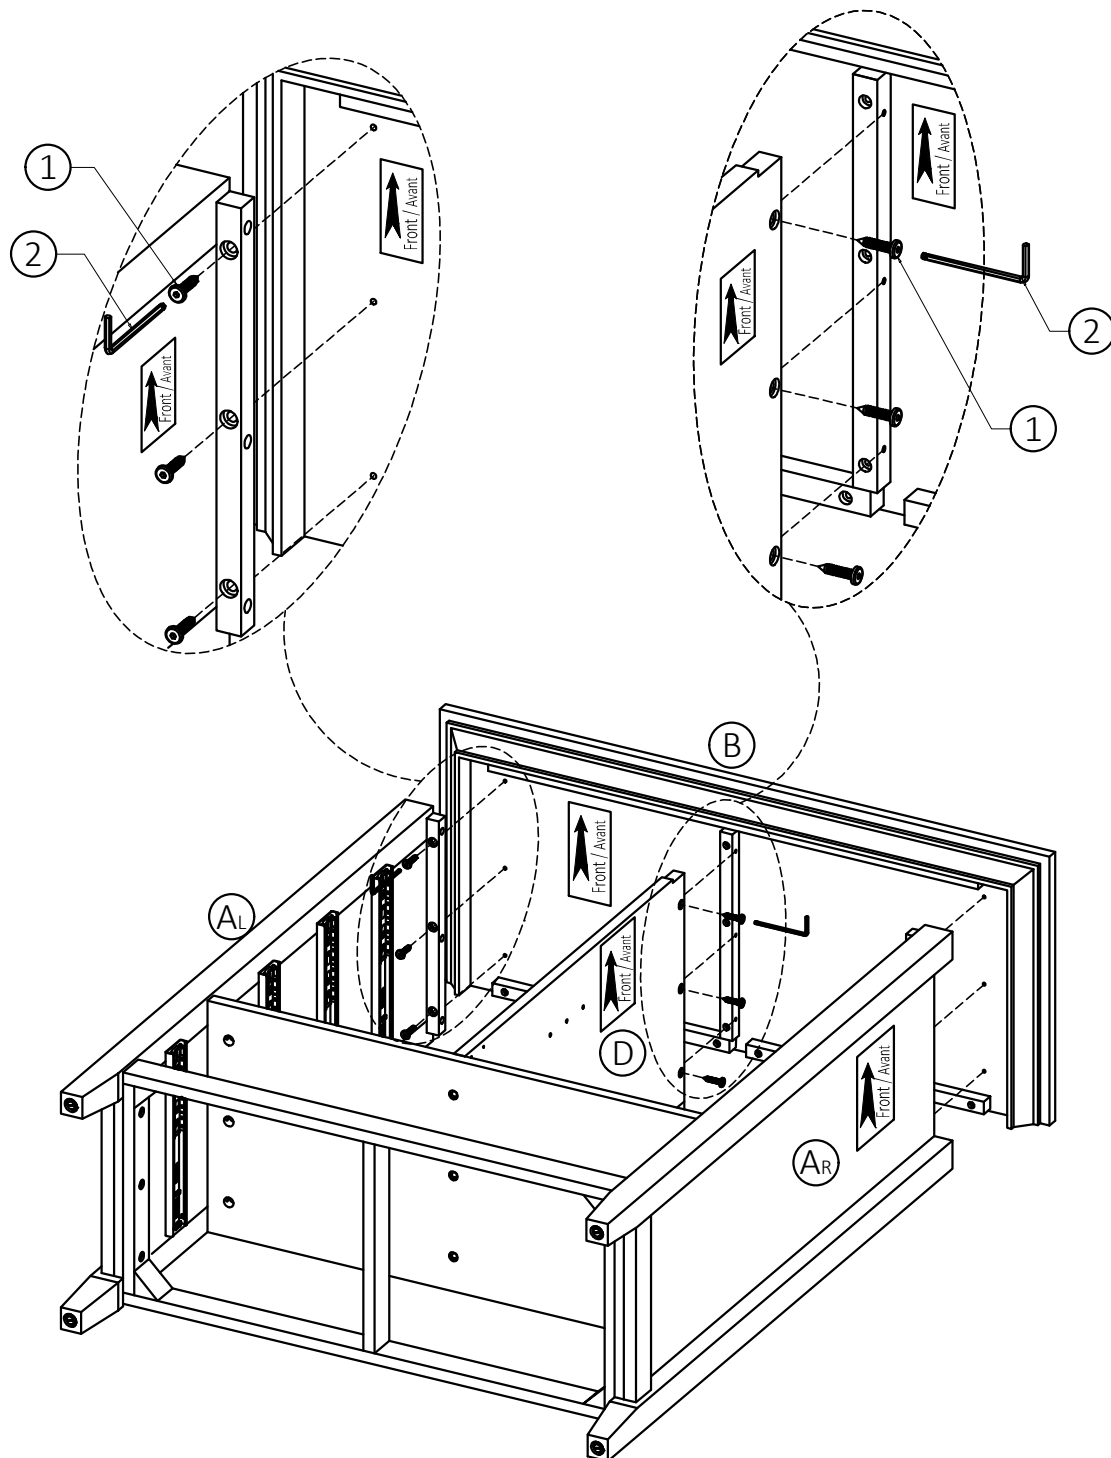

1. Attach Top (B) to Side (A_R, A_L) and Divider (D) using nine Allen Key Screws (1) (three screws on each Side and Divider).
2. Use Allen Key (2) to tighten screws. Do not over-tighten.

 
STEP-13



NOTE: The screwdriver is not included in the hardware pack.


Note:

 The back of the cabinet frame does not have pre-drilled holes to attach the back panels.

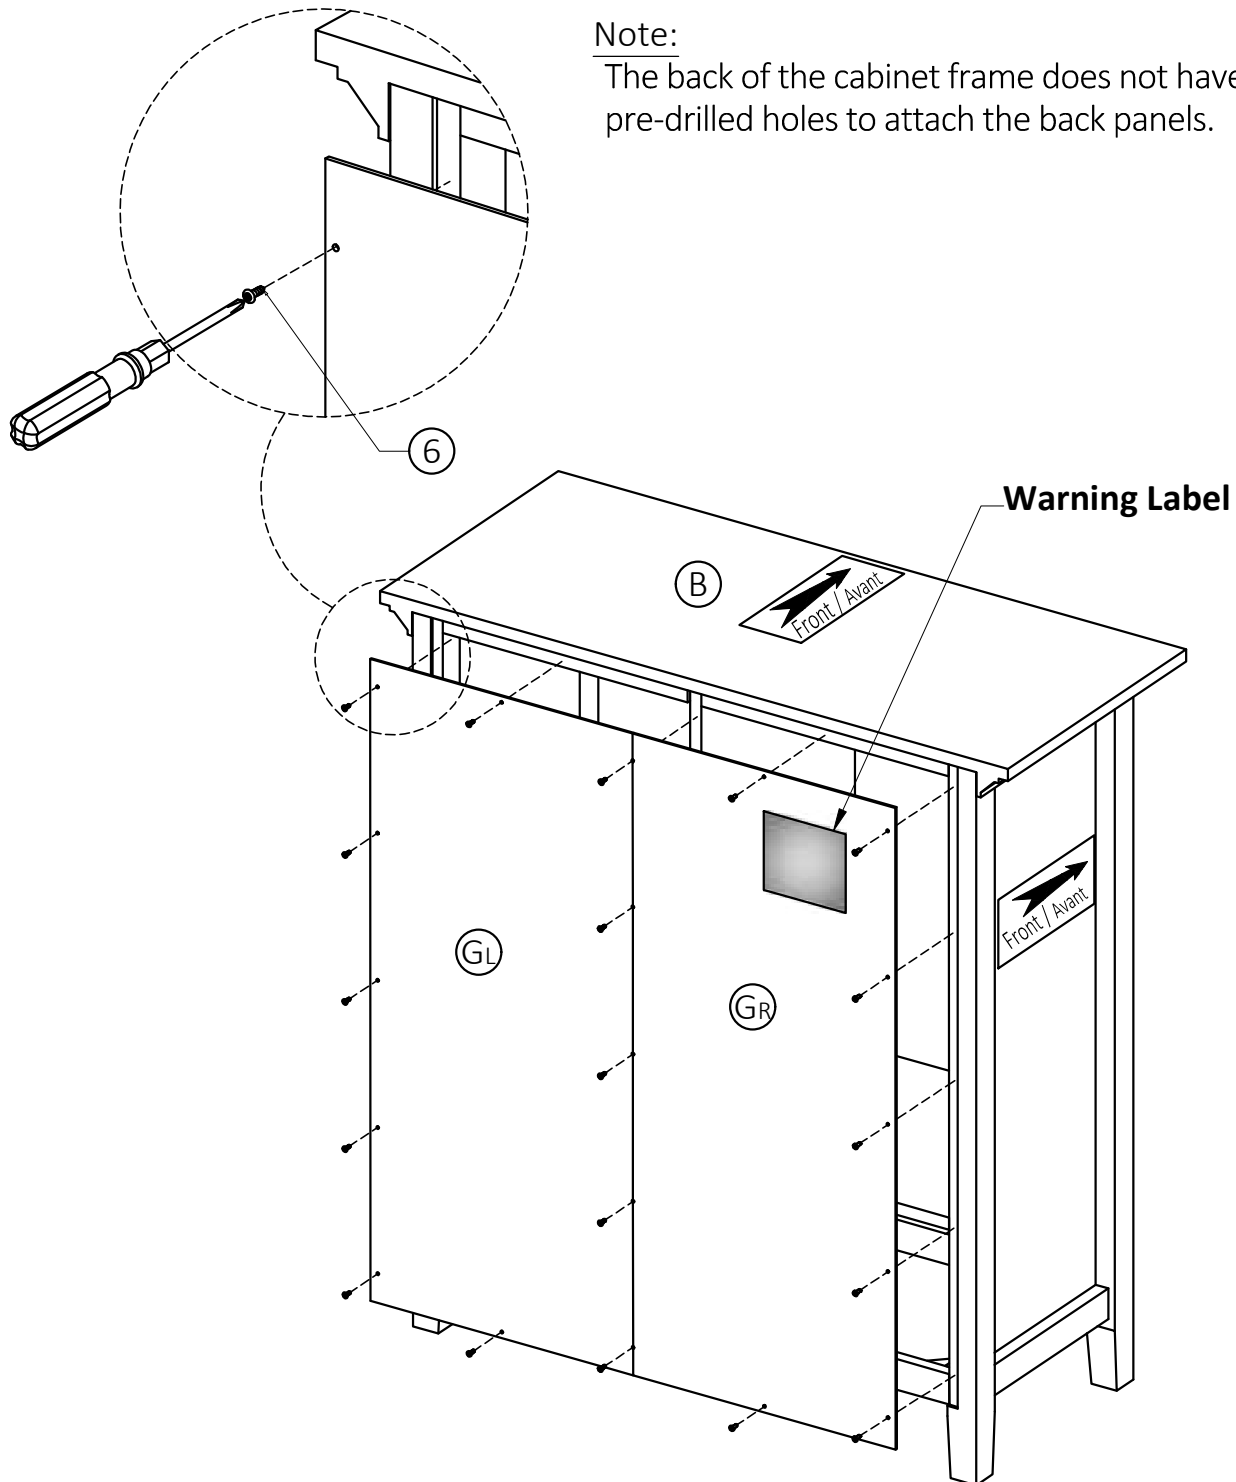


1. Attach Back Panels (GL), (GR) to back frame of cabinet using nineteen Phillips Screws Round Head (6) through pre-drilled holes.
2. Use Phillips Screwdriver to tighten screws.

 STEP-14

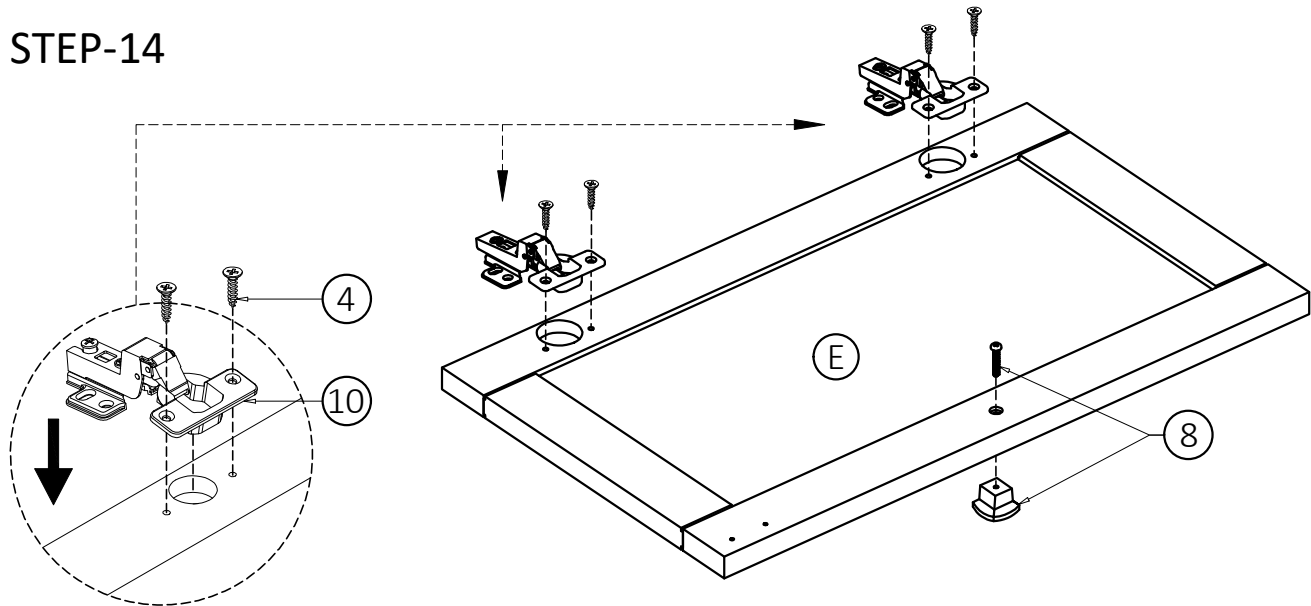



1. Attach Adjustable Hinges (10) to Door (E) using Phillips Screws (4) into pre-drilled holes on Door (E).
2. Use Phillips screwdriver to attach Handle (8) to Doors (E).

 STEP-15

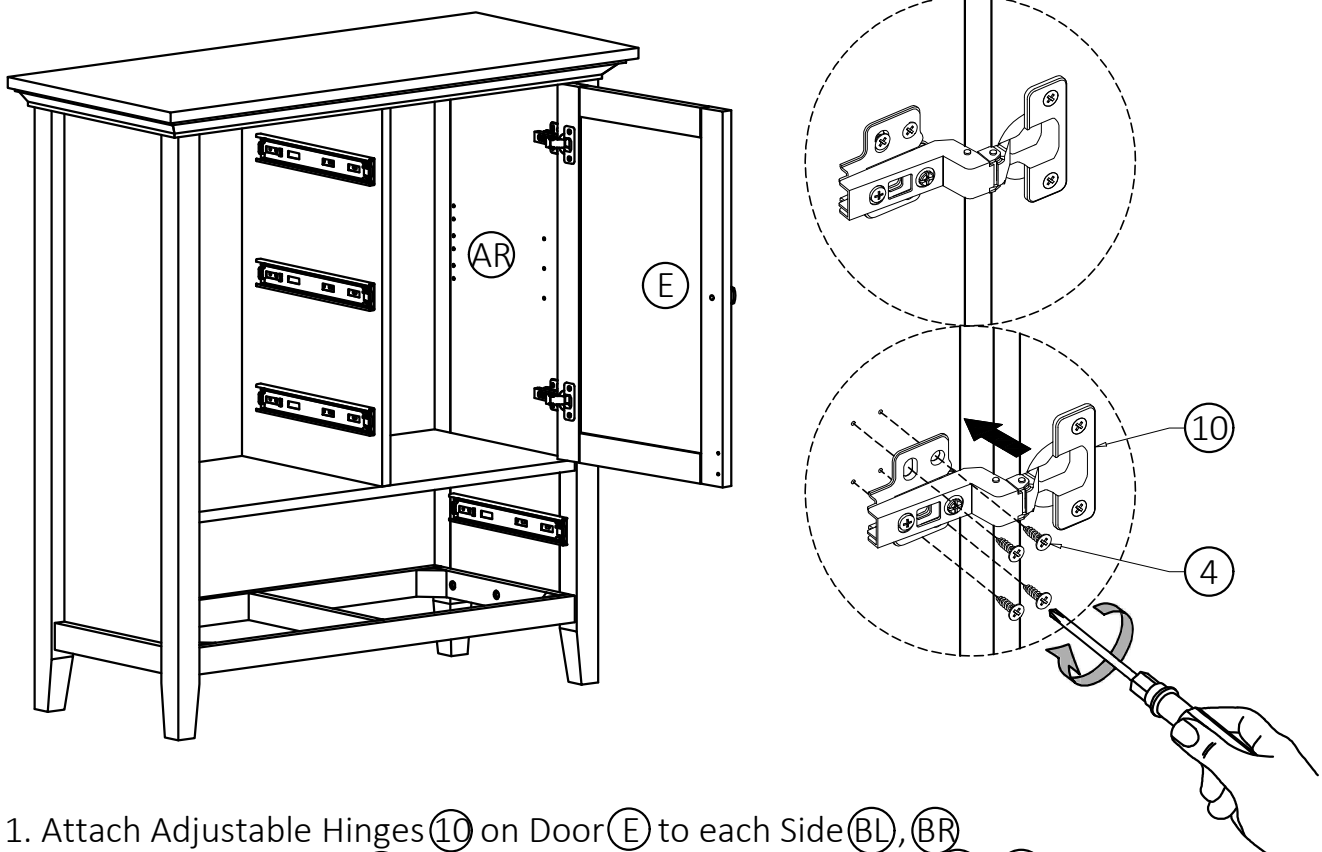

1. Attach Adjustable Hinges (10) on Door (E) to each Side (BL), (BR) using Phillips Screws (4) into pre-drilled holes on each Side (BL), (BR).
2. Use Phillips screwdriver to snugly tighten screws.

  STEP-16

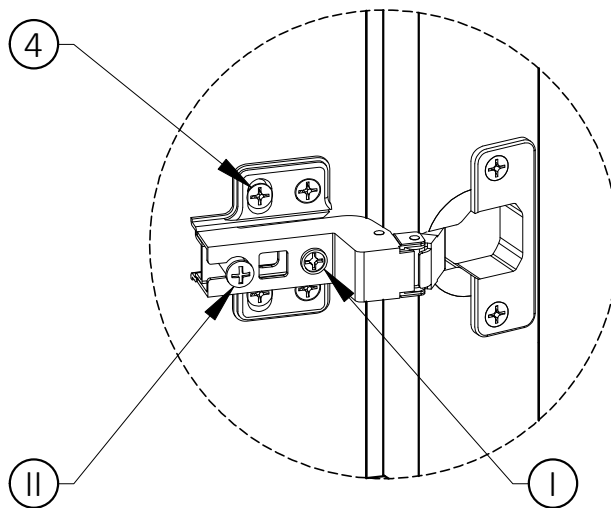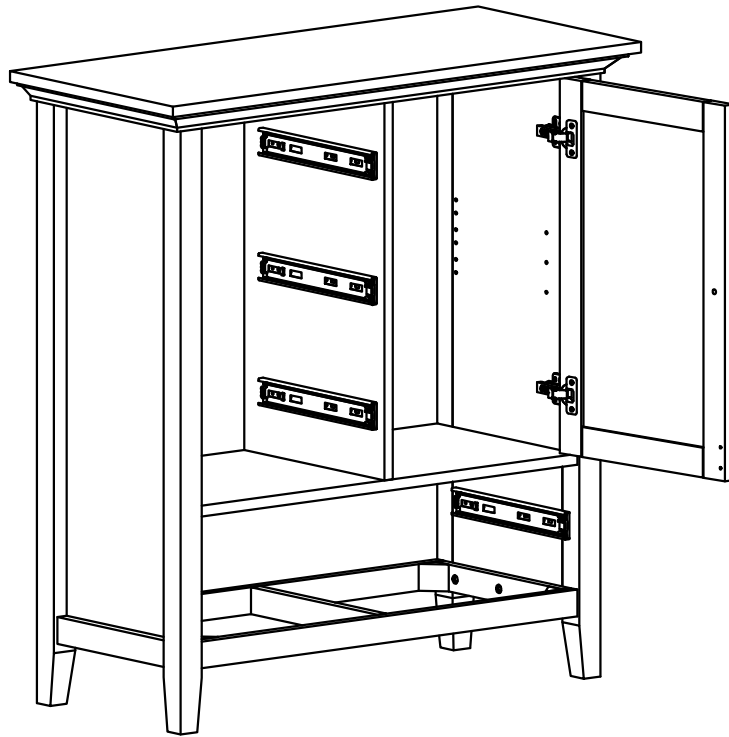IMPORTANT NOTE:

Tighten the Screw marked ② to fasten hinge. The door may need to be adjusted so that all the spaces between the door and the unit sides are equal.

To adjust, follow instructions:

1. Side adjustment 4 mm

To move the door towards the side panel, loosen screw ① and tighten screw ②.

To move the door away from the side panel, loosen screw ② and tighten screw ①.

 
2. Depth adjustment 4 mm

Loosen screw ② (just one turn), adjust door to desired position, re-tighten screw .

3. Height adjustment


Loosen screw ④, adjust door to desired position, re-tighten screw .

STEP-17

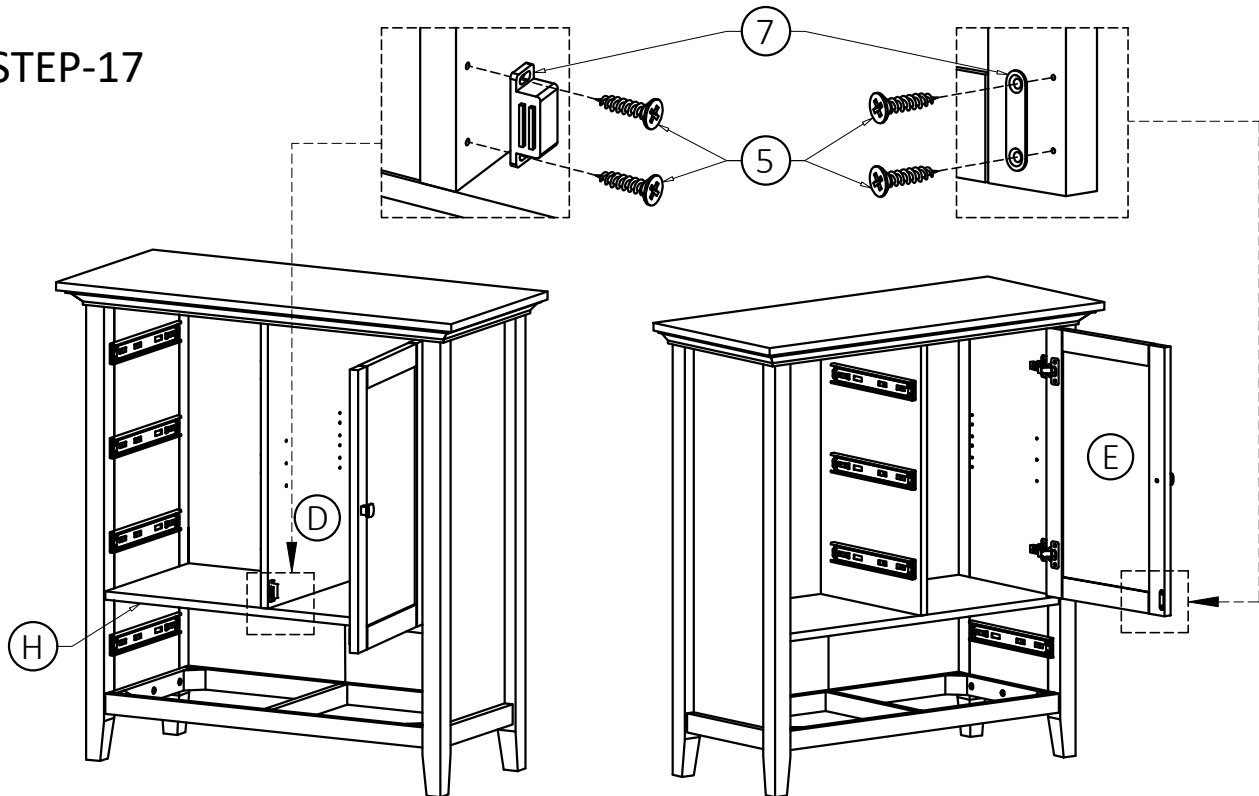







1. Attach Magnet Plates (7) to bottom corner of Door (E) using Phillips Screws (5) into guide holes on Door (E).
2. Attach Magnets (7) using Phillips Screws (5) into guide holes on Divider (D).
3. Use Phillips screwdriver to snugly tighten screw.

 STEP-18

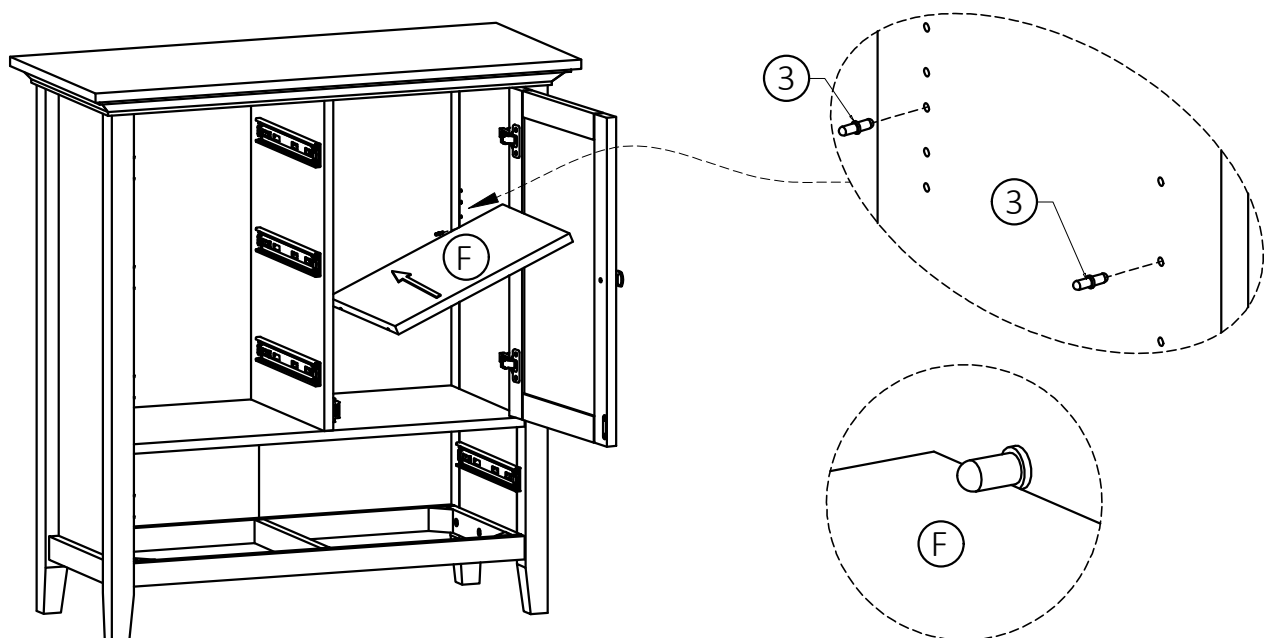

1. Use four Shelf Supports (3) for each Cabinet Shelf (F) in desired location.
2. Two Shelf Supports (3) may be used on back top of each Cabinet Shelf (F) as a tipping restraint.

      STEP-19

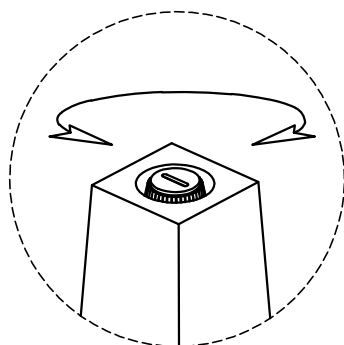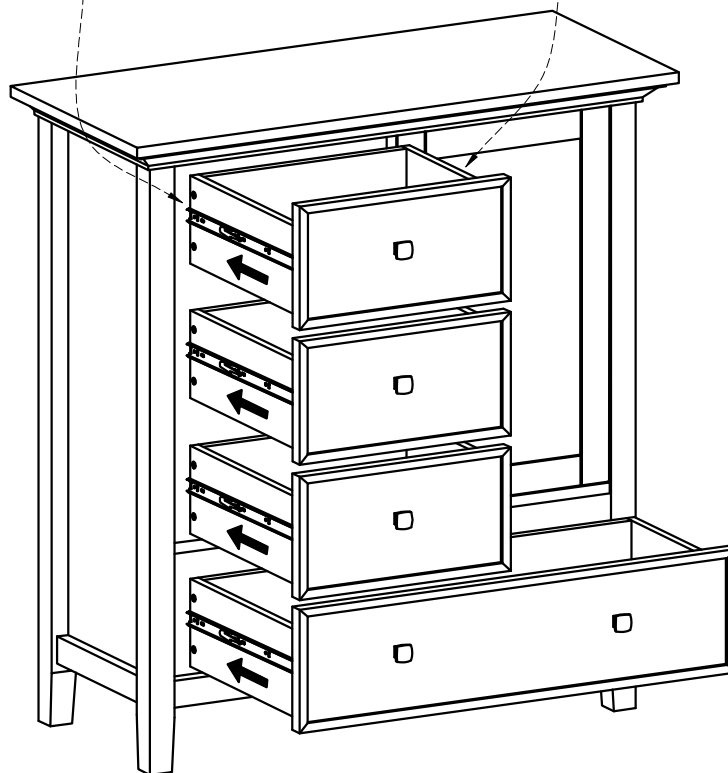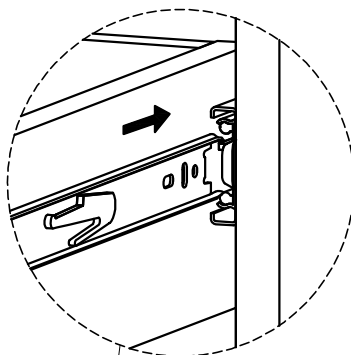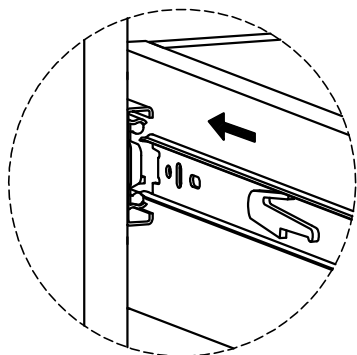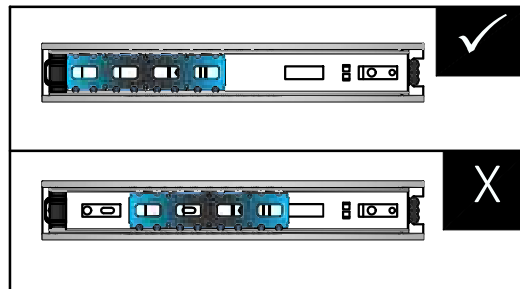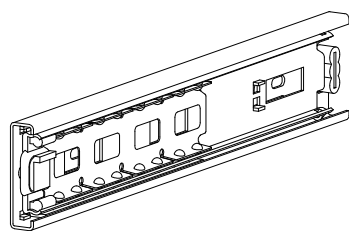

1. Insert assembled drawers into glides on assembled table.

 
Note: Levelers on bottom of legs can be adjusted if floor is uneven.

FURNITURE TIP OVER RESTRAINT ASSEMBLY





WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.
If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.



NOTE: The screwdriver is not included in the hardware pack.

  
STEP-20

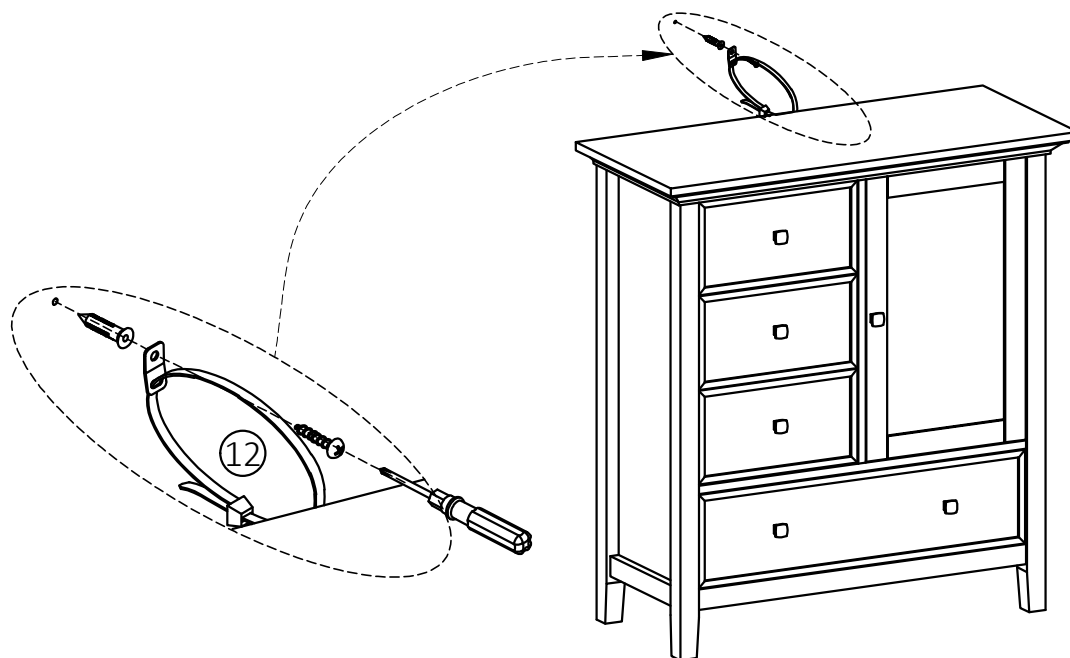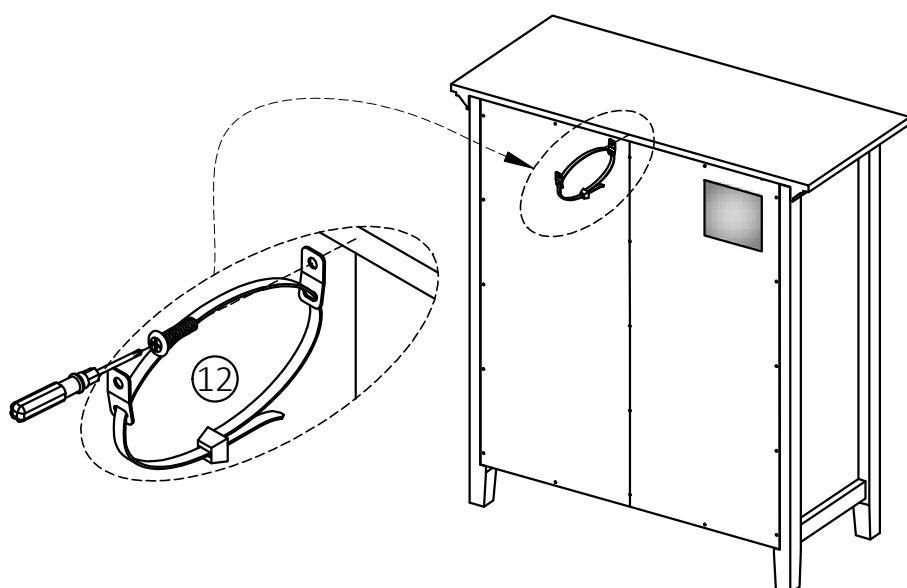


FURNITURE TIP OVER RESTRAINT ASSEMBLY

Furniture Tip Over Restraint Instructions:

 
1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.

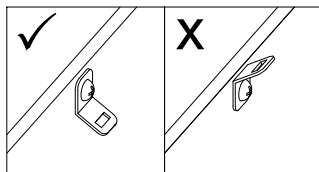

 2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches **below** the bracket mounted to the furniture.

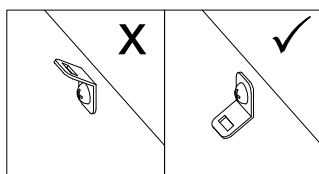

3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
5. Place the furniture so the back edge is in line with the bracket on the wall.
6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
7. Check to make sure the strap is securely laced and locked to the brackets.

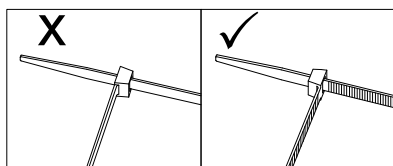 

- DO NOT put a TV or other heavy objects on top of a Medium Storage Cabinet or any other furniture not intended for use with a TV
- DO NOT place heavy objects in top drawers
- DO NOT let children climb or hang on drawers, door or shelves