

Instruction Manual

100 Watts Hi-Fi Component System

SHFTPPH10



Sandstrøm

Contents

Safety Warnings	5
Unpacking	7
Product Overview	8
CD Player	8
Front View	8
Top View	8
Rear View	8
The Amplifier	9
Front View	9
Rear View	9
Remote Control.....	10
Operating Your Remote Control	11
Remote Control Operation Range	11
Connections	12
1. Connecting the DAB/FM Aerial.....	12
2. Speaker Connections	12
3. Connecting Auxiliary Equipment.....	12
4. Connecting Control Cable	13
5. Connecting Headphones.....	13
6. Connecting to the Mains Supply.....	14
ECO-Power/Standby Features	14
Basic Operation	14
Switching the Unit On	14
Selecting Modes	14
Setting the Clock	15
Setting the Clock Automatically	15
Setting the Clock Manually.....	15
Display the Clock.....	15
Setting the Sleep Timer	16
To Confirm the Sleep Timer	16
To Cancel the Sleep Timer.....	16
Setting the Daily on Timer	17
To Cancel the Daily Timer	17
Sound Quality	18
Adjusting the Volume	18
Mute.....	18
Adjusting the Bass	18
Adjusting the Treble	18
Preset Equalizer.....	18

Other Function.....	18
Changing the Display Darkness.....	18
DAB Operation.....	19
Tuning to DAB for First Time.....	19
Tuning in a Station.....	19
Full Scan.....	19
Manual Tuning.....	19
Presetting DAB Stations.....	19
Recalling a Preset Station.....	20
DAB Information Display.....	20
Secondary Service.....	20
FM Operation.....	21
Auto Scan.....	21
Manual Scan.....	21
Presetting FM Stations.....	21
Recalling a Preset Station.....	22
Audio Mode.....	22
RDS (Radio Data System) Reception.....	22
CD Operation.....	23
Compatible Disc Types.....	23
CD Playing.....	23
Skipping Another Track.....	24
Fast Forward and Fast Reverse.....	24
Program Play.....	24
Random Play (CD and MP3 discs).....	24
Playing the Beginning (Intro) of each Track.....	24
Playing Repeatedly.....	25
MP3 Disc Playing.....	26
Playing Repeatedly.....	26
Using the USB.....	27
AUX Input.....	27
Maintenance.....	28
Cleaning the Unit.....	28
Handling Discs.....	28
Cleaning Discs.....	28
Storing Discs.....	28
Hints and Tips.....	29
Specifications.....	30

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor use only.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Safety

- Always disconnect the unit from the mains supply before connecting/disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.

Mains Cable

- Make sure the unit or unit stand is not resting on top of the mains cable, as the weight of the unit may damage the mains cable and create a safety hazard.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.


Earphones

- Listening to loud sounds for prolonged periods of time may permanently damage your hearing.
- Before putting on earphones, turn the volume down then put the earphones on and slowly increase the volume until you reach a comfortable listening level.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Standby

- The **ON/STANDBY**  button on the remote control does not switch off the unit completely. The unit will continue to draw electricity from the mains supply while in standby. In the interests of safety and to avoid unnecessary energy consumption, never leave the unit in standby while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Switch it off and disconnect the mains plug from the mains socket.

Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the remote control. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.

Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

Class 1 Laser Product

- This unit utilises a laser. Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Before moving the unit, ensure the disc tray is empty.
- Always remove the disc when the unit is not in use.
- Failure to do so will risk severely damaging the disc and the unit.
- Do not stack devices, heat from other devices may affect the performance of the unit.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure to unplug the unit from the mains socket before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.

Thank you

for purchasing your new Sandstrøm Hi-Fi System.
We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all packaging from the unit. Retain the packaging. If you dispose of it please do so according to local regulations.

 
The following items are included:



CD Player




Amplifier




Speakers x 2



 
Remote Control




Control Cable x 1

 

DAB/FM Aerial x 1

 

Instruction Manual

 

Quick Start Guide

 


If items are missing or damaged, please contact Partmaster (UK only).
Tel: 0844 800 3456 for assistance.

Product Overview


CD Player

Front View




1. Disc Door
2. Display
3. Remote Sensor

Top View

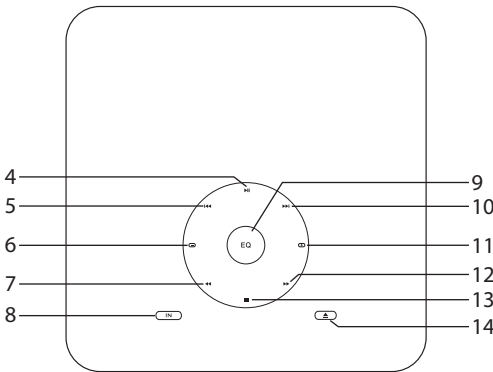

4. Play/Pause ►II Button
5. Preset I◀◀ Button
6. Volume ◀▶ Button
7. Tuning ◀◀ Button
8. Function Select IN Button
9. Preset Equalizer EQ Button
10. Preset ►► Button
11. Volume ▶▶ Button
12. Tuning ►► Button
13. Stop ■ Button
14. Insert/Eject ▲ Button

 
Rear View



15. DAB/FM Aerial Socket
16. Control Cable Connector
17. USB Port
18. AUX Input Terminals (L&R)
19. Line Out Terminals (L&R)


The Amplifier

 Front View




1. **ON/STANDBY** ⏻ Button
2. Headphone 🎧 Socket

Rear View

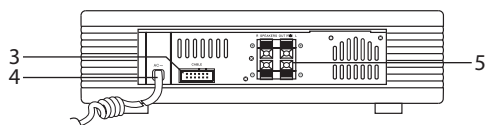

3. Control Cable Connector
4. Mains Cable
5. Left & Right Speaker Output Terminals


Remote Control

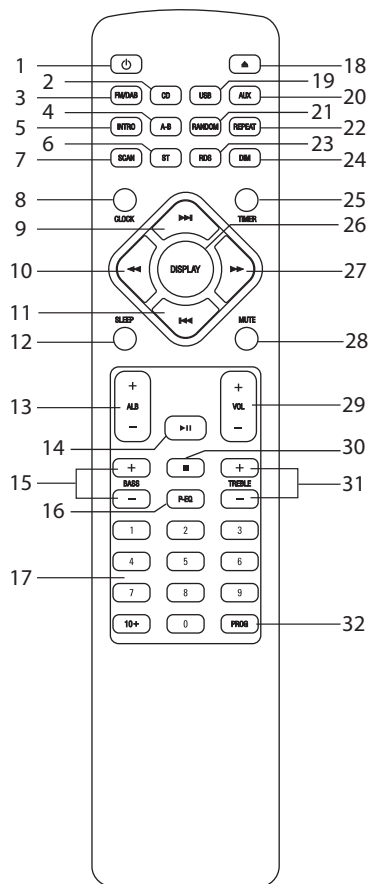

1. **STANDBY** ⏻ Button
2. **CD** Button
3. **FM/DAB** Button
4. **A-B** Button
5. **INTRO** Button
6. **ST** Button
7. **SCAN** Button
8. **CLOCK** Button
9. **▶▶** Button
10. **◀◀** Button
11. **◀◀** Button
12. **SLEEP** Button
13. **ALB+/-** Button
14. **▶▶** Button
15. **BASS+/-** Button
16. **P-EQ** Buttons
17. **0-9, 10+** Buttons
18. **▲** Button
19. **USB** Button
20. **AUX** Button
21. **RANDOM** Button
22. **REPEAT** Button
23. **RDS** Button
24. **DIM** Button
25. **TIMER** Button
26. **DISPLAY** Button
27. **▶▶** Button
28. **MUTE** Button
29. **VOL+/-** Button
30. **■** Button
31. **TREBLE+/-** Button
32. **PROG** Button

Operating Your Remote Control

1. Press and slide the back cover to open the battery compartment of the remote control.
2. Insert two AAA size batteries (not included). Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.
3. Close the battery compartment cover.

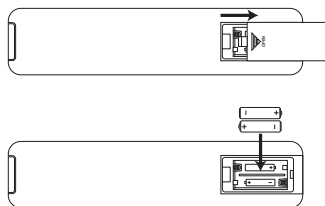

Handling the Battery

- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Install the battery correctly by following the polarity (+ and -) indications in the battery compartment.
- When the battery is exhausted, the remote control will not function.
- Only use the battery type indicated in this manual.
- Do not dispose of the used battery as domestic waste. Dispose of it in accordance with local regulations.



Handling the Remote Control


- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.

Remote Control Operation Range

Point the remote control at the unit no more than 6 metres from the remote control sensor and within 60° horizontally and 20° vertically of the front of the unit. The operating distance may vary depending on the brightness of the room.



- Make sure that there is no obstacle between the infrared remote sensor of the unit and remote control. If you install the unit on rack, etc., the remote controllable range may decrease depending on the thickness or colour of glass door of rack.
- Do not expose the infrared remote sensor to direct sunlight or other strong light, such as inverter fluorescent light.

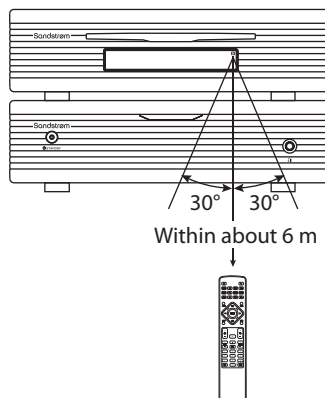


Connections

1. Connecting the DAB/FM Aerial

Connect the DAB/FM wire aerial (included) to the DAB/FM aerial socket on the rear of the CD player.


Turn the screw clockwise at the tip of the connector to secure the connection.

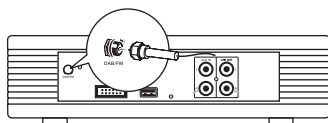

- Before attaching a 75 Ω coaxial lead (the kind with a round wire going to an outside aerial), disconnect the supplied DAB/FM wire aerial.
- To avoid noise, keep aerial away from the system, the control cable and the mains cable.


2. Speaker Connections

Connect the speaker cables at the rear of the speakers to the speaker sockets (L/R) at the rear side of the amplifier.

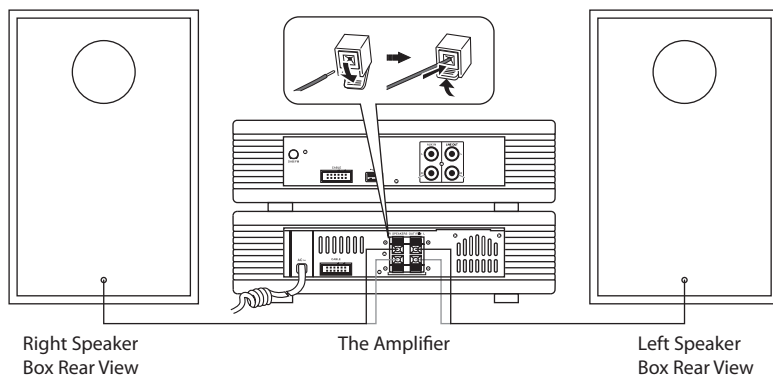


3. Connecting Auxiliary Equipment

Connect the AUX INPUT sockets at the rear of the CD player to the line output sockets on the auxiliary equipment using RCA stereo audio cables (not included), as illustrated below.

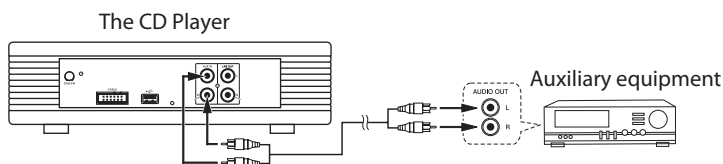


Connect the LINE OUT sockets at the rear of the CD player to the auxiliary input sockets on the auxiliary equipment as illustrated below.
(Only when the unit is in CD/USB mode.)

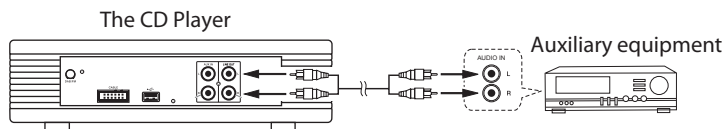

4. Connecting Control Cable


Connect the control cable between the CD player and the amplifier.

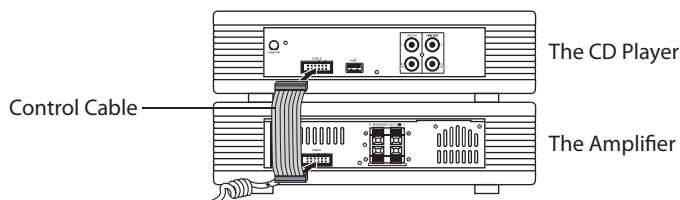

Always unplug the mains plug from the mains socket before connecting or disconnecting the control cable.

5. Connecting Headphones

Connect your headphones to the headphones socket at the front of the amplifier.

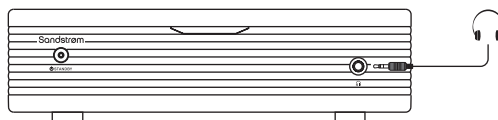


Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using earphones, especially for extended periods.

6. Connecting to the Mains Supply


Insert the mains plug into a wall socket. Your system is now ready to use.



- Ensure all connections are connected before connecting to the mains socket.
- Be sure to unplug the mains plug from the mains socket when going out or when the system is not in use for an extended period of time.

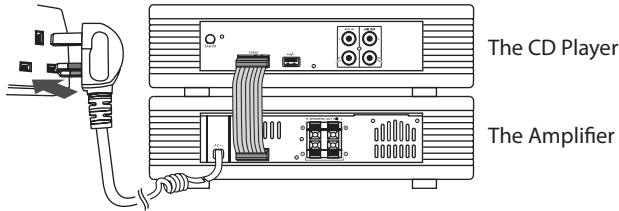


ECO-Power/Standby Features

This unit features an ECO-Power/Standby mode. Press the **ON/STANDBY**  button on the remote control or on the unit to enter standby mode. To save energy consumption, the clock will not be displayed.

If you want to display the clock during standby mode, you can press the **CLOCK** button on the remote control. The clock display will disappear after 90 seconds.

Basic Operation

Switching the Unit On

Press the **STANDBY**  button at the front or on the remote control to switch the unit on.

Selecting Modes

Press the **IN** button on the unit repeatedly to select **CD**, **USB**, **FM**, **DAB** or **AUX** mode.

You can also press the short-cut buttons on the remote control (**FM/DAB**, **CD**, **USB**, **AUX**) to select your desired mode.



Setting the Clock

Setting the Clock Automatically

Tune into either a DAB or RDS station and the clock will be automatically set within a few minutes.

Setting the Clock Manually

1. Set the unit to Standby mode.
2. Press the **CLOCK** button on the remote control, "CLOCK 24HR" will show and "24" will blink. Set the clock to 12 or 24 hours format with the **VOL +/-** buttons. Press the **CLOCK** button again, the hour indicator will blink.
3. Set the hour with the **VOL +/-** buttons.
4. Press the **CLOCK** button again, the minute indicator will blink.
5. Set the minute with **VOL +/-** buttons.
6. Press the **CLOCK** button, the built-in clock starts operating.



- The clock can only be set while in Standby mode. You must press the setting buttons before 30 seconds elapses or the setup will be cancelled.
- If a power failure occurs or the unit is disconnected from the mains, the clock setting will be lost.

Display the Clock


In On/Standby mode press the **CLOCK** button on the remote control.

Setting the Sleep Timer

Use the sleep timer to turn the system off after a certain number of minutes in play mode. By setting the sleep timer, you can fall asleep to music and know that your system will turn off by itself rather than play all night.

1. Play a CD or tune in to the desired radio station.
2. To set the sleep timer press the **SLEEP** button on the remote control repeatedly, it changes the number of minutes shown on the display in this sequence:

-- → 10 → 20 → ... → 80 → 90 → --(00)



After setting the number of minutes for the sleep timer, the display will return to the previous display.

The system is now set to turn off after the number of minutes you have set. The display will show "SLEEP".

To Confirm the Sleep Timer

When the **SLEEP** button on the remote control is pressed once, the remaining sleep time is displayed. Wait for a second until the display returns to the original display.

To Cancel the Sleep Timer

Press the **SLEEP** button repeatedly on the remote control until the "--" is displayed.

Turning off the system also cancels the sleep timer.

Setting the Daily on Timer

You can use the setting timer to make the unit automatically turn on at a certain time everyday from standby. When the timer is on, the timer indicator “⌚” will be displayed. The clock must be correctly set for the timer to operate correctly.

1. In Standby mode, press the **CLOCK** button on the remote control, then press the **TIMER** button, “TIMER SET” will display and the hour indicator will flash.
2. Set the hour with the **VOL +/-** buttons.
3. Press the **TIMER** button on the remote control, the minute indicator will flash.
4. Set the minute with the **VOL +/-** buttons.
5. Press the **TIMER** button on the remote control, the selected time is set, and the “OFF” indicator will flash. Then set the daily timer to “ON” (daily timer is active) or “OFF” (daily timer is inactive) by pressing the **VOL +/-** buttons.
6. Press the **TIMER** button to confirm the setting.

To Cancel the Daily Timer

In Standby mode, press the **CLOCK** button on the remote control once, then press the **TIMER** button repeatedly until “ON” is displayed.

Press the **VOL +/-** buttons to set the daily timer to “OFF”. Press the **TIMER** button again to confirm.

Disconnecting the mains from the unit also cancels the daily timer.



- You can set the daily timer only in Standby mode.
- The operating time of every step shouldn't be longer than 30 seconds or it will return to the time display.
- The sound source on the automatic on mode is the same as the sound source the last time the unit was turned off by the standby switch.
- The volume automatically comes on at level 12 when the last volume setting is larger than 12.
- The unit does not have the timer turn off function, but you can set the turn off time through the SLEEP TIMER function.

Sound Quality

Adjusting the Volume

To increase or decrease the volume, press the **⊕/⊖** buttons on the CD player or press the **VOL +/-** buttons on the remote control.

Mute

If you wish to switch the sound off, press the **MUTE** button and the display will show "MUTING". Press the MUTE button again to resume audio listening.

Adjusting the Bass

Press the **BASS +/-** buttons on the remote control to increase / decrease the bass.

Adjusting the Treble

Press the **TREBLE +/-** buttons to increase / decrease the treble.

Preset Equalizer

You can adjust the sound reproduced by pressing the **EQ** button on the CD player or on the remote control repeatedly.

Select from one of the 5 preset equalizer:



Other Function

Changing the Display Darkness

To dim or brighten the display, press the **DIM** button repeatedly on the remote control to the desired brightness.

DAB Operation

Tuning to DAB for First Time

- Press the **IN** button repeatedly on the top of the CD player or press the **FM/DAB** button repeatedly on the remote control to select the DAB station. The word "DAB RADIO" will show on the display.
- The unit will start a full scan to search for all available Band III channels automatically. This normally takes up to 1 minute to finish.
- If no DAB service is available "NO DAB" will be displayed.
- If there are available DAB services, the unit will store all detected stations.
- At completion of the scanning, the unit will tune to a station on the list.

Tuning in a Station

All the stations that have been found will be stored automatically. To explore the found stations by pressing the **◀▶** buttons on the top of the CD player or on the remote control.

Full Scan

Press the **SCAN** button on the remote control, the unit will start a full scan to search all available Band III channels.

Manual Tuning

1. Press the **▶||** button on the top of the CD player or on the remote control for more than 2 seconds to enter the manual tuning mode.
2. Press the **◀▶** buttons on the top of the CD player or on the remote control to select your desired DAB channels from the list.

Presetting DAB Stations

You can save up to 30 DAB stations in the unit memory.

1. To store a preset, you must first be listening to the station that you would like to save, press the **PROG** button. "PROG" icon and preset number will show the display.
2. Press the **◀▶▶▶** buttons to select your desired preset station number and then press the **PROG** button to confirm.
3. The station will be stored the station.
4. Repeat steps 1 - 4 above to store more radio stations.



If the unit is unplugged or if a power failure occurs, the preset stations will not be erased.

Recalling a Preset Station

Once you have saved a station, you can recall it by pressing the **◀▶▶▶** or the **0-9** buttons to select your desired preset number.

To input a number larger than 10, press the **10+** button once or more to select the first digit you want and then use the **0-9** buttons to input the second digit.

DAB Information Display

You can view the DAB service information in the following modes. Depending on the DAB radio station you are tuning to, some information modes may be unavailable. Press the **RDS** button repeatedly to view the following information.

- **Station Name**

When an RDS station is received, the name of that station will be displayed.

- **Ensemble**

This displays the name of the multiplex that contains the station you are listening to. A multiplex is a collection of radio stations that are bundled and transmitted on one frequency. There are national and local multiplexes. Local ones contain stations that are specific to that area.



DAB – unlike normal radio, groups together several radio stations and transmits them on one frequency.

- **CT (Clock Time System)**

This displays the current time provided automatically by the broadcaster.

- **Date**

This displays the current date provided automatically by the broadcaster.

- **DLS (Dynamic Label Segment)**

Dynamic label segment is a scrolling message that the broadcaster may include with their transmissions. The message usually includes information, such as programme details etc.

- **Signal Strength**

This shows a slide bar to indicate the signal strength, the stronger the signal, the longer the bar will be from left to right.

- **Programme Type**

This describes the “style” or “genre” of the programme that is being broadcast.

- **Frequency**

This shows the frequency of the current station.

- **Audio Bit Rate**

The display will show the digital audio bit rate being received.

- **Audio Mode**

This displays if the station being received is in mono or stereo.

Secondary Service

Secondary services contain extra services that are related to the primary station. E.g. A sports station may want to add extra commentaries. The secondary services are inserted directly after the primary station in the station list. Services that contain secondary services will display at the end of the programme service name. To select the secondary station, press the **►** button on the top of the CD player or on the remote control. When the secondary service ends, the radio will automatically switch back to the primary station.

FM Operation

You can listen to FM stations on this unit. Stations can be tuned in manually, automatically, or from preset memory storage.

Press the **IN** button repeatedly on the front of the CD player or press the **FM/DAB** button repeatedly on the remote control to select FM radio function.



Before listening to the radio, please check that the DAB/FM aerial is correctly connected and adjusted for length and direction or that the unit is connected to an external FM aerial.

Auto Scan

Press and hold the **▶▶** button until the tuner starts searching for a station. To scan down the frequency band, press and hold the **◀◀** button. Once a station has been found, the scanning will stop automatically.



The search may not stop at a station with a very weak signal.

Manual Scan

Press the **◀▶▶** buttons repeatedly until your desired frequency is reached.



With FM radio it may be necessary to fine tune each station by pressing **◀▶▶** repeatedly. Each press will adjust the frequency by 0.05MHz. If reception is still poor adjust the position of the aerial or try moving the radio to another location.

Presetting FM Stations

You can preset up to 30 FM stations.

Manual Preset

1. To store a preset, you must first be listening to the station that you would like to save, press the **PROG** button. "**PROG**" icon and preset number will show the display.
2. Press the **◀◀▶▶** buttons to select your desired preset station number and then press the **PROG** button to confirm.
3. The station will be stored the station.
4. Repeat steps 1 - 4 above to store more radio stations.

Auto Preset

Press and hold the **PROG** button on the remote control to auto search the FM stations. The unit will automatically search and store the first 20 radio stations it finds.



The preset stations will be overwritten during auto preset.

Recalling a Preset Station

Once you have saved a station, you can recall it by pressing the **◀◀▶▶** or the **0-9** buttons to select your desired preset number.

To input a number larger than 10, press the **10+** button once or more to select the first digit you want and then use the **0-9** buttons to input the second digit.

Audio Mode

Press the **ST** button repeatedly to switch between **STEREO** or **MONO** modes.



The unit will automatically switch between stereo and mono mode, when stereo mode is selected but you can override this and switch this function manually by changing it to mono mode. This is helpful when receiving poor signal reception.




RDS (Radio Data System) Reception

Many FM stations are broadcasting added data compatible with RDS. This radio set offers convenient functions using such data.

- **PS (Program Service Name)**
When an RDS station is received, the "RDS" and the name of that station will be displayed. When the **RDS** button on the remote control is pressed during PS display, the below three info (PTY, RT, CT) is displayed for 3 seconds, then PS display returns.
- **PTY (Program Type)**
Program type identification signal. (Example: News, Rock, Classical music.)
- **CT (Clock Time System)**
The CT system may not properly operate in areas where RDS CT service is not available. Once CT service is received, the CT system keeps operating. "RDS CLOCK" is displayed in areas where no CT services are available.
- **Radio Text**
This displays a station description.
- **Frequency**
This shows the frequency of the current station

CD Operation

Compatible Disc Types

Disc Types	Disc Logo	Recorded Content
CD-R (CD Recordable - Audio/MP3/WMA)		AUDIO / MP3 / WMA
CD-RW (CD-Rewritable - Audio/MP3/WMA)		AUDIO / MP3 / WMA
AUDIO-CD (Compact Disc Digital Audio)		AUDIO



Some recorded files may not be able to be played due to the type and format of disc or condition of the recording.

CD Playing

1. Press the **IN** button repeatedly on the top of the CD player until "CD/MP3" is displayed or press the **CD** button on the remote control to select CD function.
2. Insert the disc into the disc door, the unit will read the disc and play it automatically.
3. Press the **▲** button to eject the disc.



If in stop mode, please press the **▶II** button to start playing the disc.

4. Press the **▶II** button to pause the playback, the time elapsed indicator will flash.
5. To resume playback, press the **▶II** button again.
6. Press the **■** button on the top of the CD player or on the remote control to stop the disc playing.



While the CD is playing the current track number and the elapsed time will be displayed.

When pressing the **DISPLAY** button on the remote control repeatedly, the following information is displayed:

1st press : Track remaining time

2nd press : Disc elapsed time

3rd press : Disc remaining time

Skiping Another Track

- Press the **⏮** button on the top of the CD player or on the remote control to skip to beginning of the current track or the previous track.
- Press the **⏭** button on the top of the CD player or on the remote control to skip forward to the next track.

Fast Forward and Fast Reverse

- Press the **⏮⏭** buttons on the top of the CD player or on the remote control to fast backward or forward on the current track.
- To resume playback, release the **⏮⏭** buttons.

Program Play

1. Insert a disc and press the **■** button on the top of the CD player or on the remote control when it starts playing.
2. Press the **PROG** button on the remote control.
3. Press the **⏮⏭⏭** buttons on the top of the CD player or press the **⏮⏭⏭**, **0-9**, **10+**, buttons on the remote control to select the desired track number and then press the **PROG** button to confirm your program.
4. Repeat the above step 3 to enter more tracks.
5. Press the **▶||** button on the top of the CD player or on the remote control to start program play.
6. Press the **■** button on the top of the CD player or on the remote control to stop the program play and press the **▶||** button to start program play again. Press the **■** button twice to clear the programming mode.

Random Play (CD and MP3 discs)

The CD can be played randomly. Random play begins by pressing the **RANDOM** button on the remote control in play mode.

Playing the Beginning (Intro) of each Track

In stop mode, press the **INTRO** button on the remote control to play the beginning of each track consecutively. The playing time of each track is 10 seconds.

When you hear the desired track, press the **▶||** button twice.



- Random play will not shuffle the programmed music list.
- Maximum 20 tracks can be programmed.

Playing Repeatedly

- For CD disc, ONE and ALL repeat play can be set by pressing the **REPEAT** button on the remote control repeatedly.

First press	To repeat the same track over and over again ("REP" and "TRK" will flash)
Second press	To repeat all tracks on a disc and then play them again and again ("REP" will stay lit).
Third press	To cancel the repeat playing ("REP" off).

- You can use the below function to repeat any part of a disc.
When the disc is playing, press the **A-B** button on the remote control at the beginning of the content that needs repeat playing. Press the **A-B** button again at the end of the content that needs repeat playing. Then the player will repeatedly play between A and B until you press the **A-B** button again to cancel the repeat and the setting returns to normal playing mode.



A-B repeat function can only be used within the same track.

MP3 Disc Playing

When selecting tracks the player will automatically display the album and track number. For example: track number 21 may be from album 3, track 7.

1. Insert the MP3 disc into the disc door.
2. Press the **DISPLAY** button on the remote control, ID3 information (song title and artist and album) will be displayed or "NO ID3" if there is no ID3 information. Press this button again, album, track and playing time will be displayed.
3. When playing MP3 discs, the current album and track will be displayed.
4. Press the **◀◀▶▶** buttons on the top of the CD player or on the remote control to select the previous/next track. Press and hold the **◀▶▶** buttons on the top of the CD player or on the remote control to search backward or forward.
5. Press the **ALB +/-** buttons on the remote control to select the next/previous album, and play the first track of the album.
6. Press the **▶||** button on the top of the CD player or on the remote control to pause play, and press again to resume playing the disc.
7. Press the **■** button on the top of the CD player or on the remote control to stop playback.



Play will continue to the final track when the selected tracks have been played.

The first 2 digits of the display is the album number, the next 3 digits is the track number and the remaining digits display the minutes and seconds.

Playing Repeatedly

For MP3 disc, ONE, ALB and ALL repeat play can be set by pressing the **REPEAT** button on the remote control repeatedly.

First press : To repeat the same track ("REP" and "TRK" will flash).

Second press : To repeat ALB (Album) ("REP" and "ALB" will flash).

Third press : To repeat ALL (All albums and tracks) ("REP" stays lit).


Fourth press : To cancel the repeat playing.



 
The word ALB will appear on the display to indicate that albums are stored on your MP3 disc.


Using the USB

By connecting a USB mass storage device (including USB flash memory, USB flash players or memory cards) to this unit, you can enjoy the device's stored music through the powerful speakers of this unit.

1. Insert the USB device's USB plug into the  port at the rear of the CD player
2. Press the **IN** button repeatedly on the top of the CD player or press the **USB** button on the remote control to select the USB function.
3. The device's stored music will be played automatically.

For devices with a USB cable:

1. Insert one plug of the USB cable (not supplied) to the  port at the rear of the CD player.
2. Insert the other plug of the USB cable to the USB output terminal of the USB device.

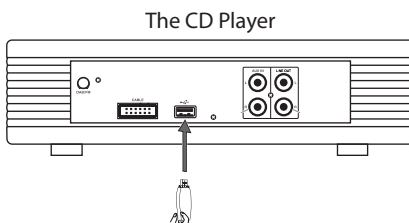

For memory cards:

1. Insert the memory card into a card reader (not supplied) at the rear of the CD player.
2. Use a USB cable (not supplied) to connect the card reader into the socket on the unit.



If the USB device is corrupted, this unit will not be able to detect and play the music stored. Format the USB mass storage device and restore the music on the device with a computer.

AUX Input

There is a RCA (L/R) sockets located at the back of the unit. Analogue audio sound signals from other sources can be input to the unit through these 2 sockets.

1. Connect the input to another audio device via an audio cable (not included) with RCA (L/R) socket.
2. Press the **IN** button repeatedly or press the **AUX** button on the remote control to select the AUX Input function until "AUX" appears on the display.
3. Adjust the volume control for your desired sound output level.

Maintenance

Cleaning the Unit



Ensure the unit is fully unplugged from the mains socket before cleaning.


- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray an aerosol at or near the unit.

Handling Discs



- Do not touch the playback side of the disc.
- Do not attach paper or tape to the disc.

Cleaning Discs

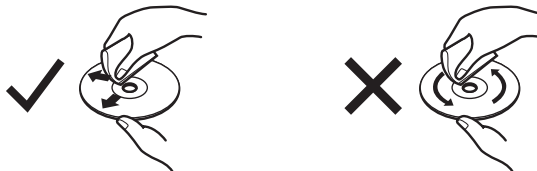

- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.
- If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray. They may damage the disc.

Storing Discs

- Do not store discs in places subjected to direct sunlight or near heat sources.
- Do not store discs in places subjected to moisture and dust such as a bathroom or near a humidifier.
- Storing discs vertically in a case, stacking discs or placing objects on discs outside of their cases may cause warping.

Hints and Tips

If a problem does occur, it may often be due to something very minor. The following table contains various tips.

Problem	Cause / Solution
CD	
The unit does not power on	<ul style="list-style-type: none">• Make sure the mains plug is secure in the mains socket, and that the mains socket has power.• Make sure you've selected CD mode.
Disc in place but the unit won't play	<ul style="list-style-type: none">• Make sure the disc label is facing up.• Make sure the disc is clean.• PAUSE mode may be activated, deactivate it.• Disc may be damaged or dirty; check and clean the disc.
Disc skips	<ul style="list-style-type: none">• Make sure the unit is on a secure spot. Vibrations or jarring can cause the disc to skip.
RADIO	
Poor DAB/FM reception	<ul style="list-style-type: none">• Make sure the DAB/FM aerial wire is fully extended.• Electrical interference in your home can cause poor reception. Move the unit away from them (especially those with motors and transformers).



If the unit is not working properly disconnect the power source and then reconnect it.

Specifications

System Section	
Model	SHFTPPH10
Power Supply	230V ~50Hz
Power	50 Watts
Output Power	50 Watts x 2
THD	≤ 0.7%
CD Player Dimension	230 (W) x 230 (D) x 65 (H) mm
Speakers Section	
Impedance	6 Ω
Output Power	50 Watts
Speaker Box Dimension	170 (W) x 220 (D) x 270 (H) mm
Radio Section	
Frequency Range	DAB 174.928 – 239.200 MHz (Band III) FM 87.5 – 108 MHz
Compact Disc Section	
Optical Pickup	3 - Beam Laser
Frequency Response	100Hz – 16kHz
USB Section	
USB Memory Stick Memory Size	Up to 16 GB

Features and specifications are subject to change without prior notice.



For general information about this appliance
and handy hints and tips, please visit
www.knowhow.com/knowledgebank or call **0344 561 1234**.



Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0844 800 3456 (UK customers only) Calls charged at National Rate.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

All trademarks are the property of their respective owners and all rights are acknowledged.

DSG Retail Ltd. (co. no. 504877)
Maylands Avenue, Hemel Hempstead, Herts., HP2 7TG, UK

IB-SHFTPPH10-140617V7