

OWNER'S MANUAL

# Mini Hi-Fi System

Please read this manual carefully before operating  
your set and retain it for future reference.

MODEL

CM3370 (CM3370, CMS3370F)



# Safety Information



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.



**CAUTION:** This product employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure.

## CAUTION concerning the Power cord

Most appliances recommend they should be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

This device is equipped with a portable battery or accumulator.

**Safety way to remove the battery or the battery from the equipment:** Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

**CAUTION:** The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

**CAUTION:** Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

**CAUTION:** No naked flame sources, such as lighted candles, should be placed on the apparatus.

## Symbols

~	Refers to alternating current(AC).
≡	Refers to direct current(DC).
⏏	Refers to class II equipment.
⏻	Refers to stand-by.
I	Refers to "ON" (power).
⚡	Refers to dangerous voltage.

# Table of Contents

## 1 Getting Started

---

- 2 Safety Information
- 6 Unique Features
- 7 Playable file Requirement
  - 7 – Music file requirement
  - 7 – Compatible USB Devices
  - 7 – USB device requirement
- 8 Remote control
- 10 Front Panel
- 12 Top Panel
- 13 Rear Panel

## 2 Connecting

---

- 14 Connecting to speakers
  - 14 – Connecting the speakers to the unit
- 15 Optional Equipment Connection
  - 15 – USB Connection
  - 15 – AUX IN Connection
  - 16 – PORT IN Connection
  - 16 – Listening to music from your portable player or external device

## 3 Operating

---

- 17 Basic Operations
  - 17 – CD/USB Operations
  - 17 – Auto Play
  - 18 – TAPE Operations
- 19 Other Operations
  - 19 – Programmed Playback
  - 19 – Deleting Programmed list
  - 20 – Searching for a folder and an MP3/WMA file
  - 20 – Deleting a file/folder or format
  - 21 – AUTO DJ
  - 21 – Turn off the sound temporarily
- 22 Using a BLUETOOTH® wireless technology
  - 22 – Listening to music stored on the BLUETOOTH devices
- 24 Radio Operations
  - 24 – Listening to the radio
  - 24 – Improving poor FM reception
  - 24 – Presetting the Radio Stations
  - 24 – Deleting all the saved stations
- 25 Sound adjustment
  - 25 – Setting the sound mode
- 26 Advanced Operations
  - 26 – Recording to USB
- 28 Setting the Clock
  - 28 – Using your player as an alarm clock
  - 29 – Sleep Timer Setting
  - 29 – Dimmer
  - 29 – DEMO
  - 29 – Auto power down
  - 30 – AUTO POWER On
  - 30 – Auto function change

## **4 Troubleshooting**

---

- 31 Troubleshooting

## **5 Appendix**

---

- 32 Main unit  
33 Speakers  
34 Maintenance  
34 – Handling the Unit  
34 – Notes on Discs  
35 Trademarks and Licenses

1

2

3

4

5

# Unique Features

## **BLUETOOTH®**

Listens to music stored on your **Bluetooth** device.

## **AUTO DJ**

Blends the end of one song into the beginning of another for seamless playback.

## **USB Direct Recording**

Records music to your USB device.

## **Portable In**

Listens to music from your portable device. (MP3, Notebook, etc.)

## **TAPE**

Cassette tapes can be played back in this unit.

# Playable file Requirement

## Music file requirement

MP3/WMA file compatibility with this unit is limited as follows.

- Sampling frequency : within 32 to 48 kHz (MP3), within 32 to 48 kHz (WMA)
- Bit rate : within 32 to 320 kbps (MP3), 40 to 192 kbps (WMA)
- Maximum files : Data CD : 999 / USB : 2,000
- Maximum folders : Data CD : 99 / USB : 200
- File extensions : ".mp3"/".wma"
- Certain MP3/WMA files may not be played depending on the type or format of the file.
- CD-ROM file format : ISO 9660/JOLIET
- We recommend that you use Easy-CD Creator, which creates an ISO 9660 file system.

The DTS is not supported. In case of DTS audio format, audio is not output.

You have to set the disc format option to [Mastered] in order to make the discs compatible with the LG players when formatting rewritable discs. When setting the option to Live File System, you cannot use it on LG players.

(Mastered/Live File System : Disc format system for Windows Vista)

## Compatible USB Devices

 
- MP3 Player : Flash type MP3 player.
- USB Flash Drive :  
Devices that support USB2.0 or USB1.1.
- The USB function of this unit does not support all USB devices.

## USB device requirement

- Devices which require additional program installation when you have connected it to a computer, are not supported.
- Do not extract the USB device while in operation.
- For a large capacity USB, it may take a few minute to be searched.
- To prevent data loss, back up all data.
- If you use a USB extension cable or USB hub, the USB device is not recognized.
- Using NTFS file system is not supported. (Only FAT(16/32) file system is supported.)
- This unit recognizes up to 2,000 files.
- External HDD, card readers, locked devices, or hard type USB devices are not supported.
- USB port of the unit cannot be connected to the PC. The unit cannot be used as a storage device.
- Some USB may not work with this unit.

# Remote control

Getting Started

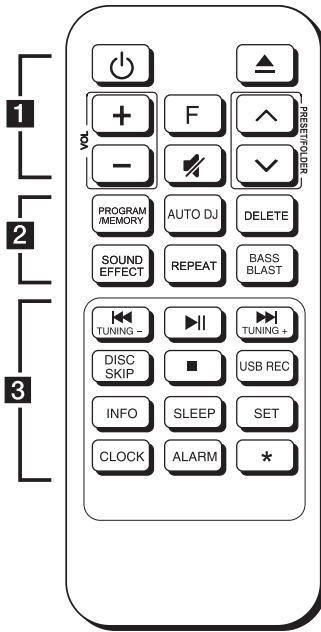


- .....1.....
- ⏻ (Power) : Turns the power on or off.
  - ⬆️ (Open/Close) : Opens and closes the disc tray.
  - VOL (Volume) +/- : Adjusts speaker volume.
  - F (Function) : Selects the function and input source.

Input source / Function	Display
Disc	CD
USB	USB
AUX input	AUX
Portable input	PORTABLE
<b>Bluetooth</b>	BT
TAPE	TAPE
Radio	FM

- 🔇 (Mute) : Mutes the sound.
- PRESET/FOLDER  $\wedge/\vee$  :**
  - Searches for a folder of MP3/WMA files. When a CD/USB containing MP3/WMA files in several folders is being played, press **PRESET/FOLDER  $\wedge/\vee$**  to select the folder you want to play.
  - Chooses a preset number for a radio station.

## Replacement of battery

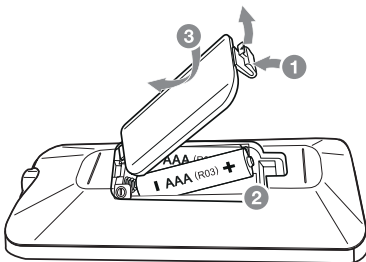 

Remove the battery cover on the rear of the remote control, and insert the batteries with **+** and **-** matched correctly.



2

**PROGRAM/MEMORY :**

- Stores radio stations.
- Creates a programmed list you want to listen to.
- Deletes all the saved stations.

**AUTO DJ :** Selects the AUTO DJ mode. (For more information refer to page 21 )

**DELETE :**

- Deletes MP3/WMA files. (USB only).
- Deletes a song on the programmed list.

**SOUND EFFECT :** Chooses sound impressions.

**REPEAT :** Listens to your tracks/files repeatedly or randomly.

**BASS BLAST :** Selects BASS BLAST effect.

3

**TUNING -/+ :** Selects the radio stations.

**◀◀/▶▶ (Skip/Search) :**

- CD/USB skips fast backward or forward.
- Searches for a section within a track/file.

**▶|| (Play/Pause) :**

- CD/USB starts or pauses playback.
- Selects stereo/mono.

**DISC SKIP :** Chooses a desired disc.

**■ (Stop) :**

- CD/USB stops playback.
- Cancels DELETE function.

**USB REC :** Records to USB.

**INFO :**

- Sees information about your music. An MP3 file often comes with ID3 tag. The tag gives the Title, Artist, Album or Time information.
- Sees the name of connected **Bluetooth** device in **Bluetooth** mode.

**SLEEP :** Sets the system to turn off automatically at a specified time.

(Dimmer : The display window will be darkened by half.)

**SET :** Confirms the setting.

**CLOCK :** Sets a clock and checks a time.

 
**ALARM :** With the ALARM function you can turn CD, USB play and Tuner reception on at a desired time.





★ : The button is not available for any function.

# Front Panel

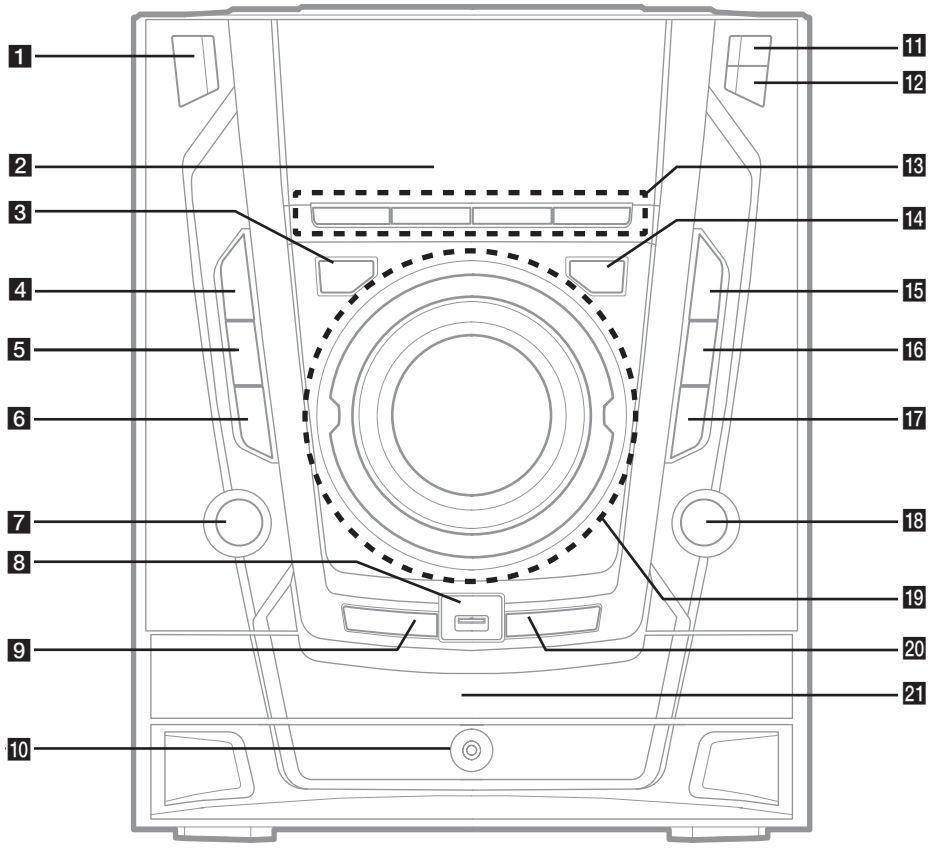
Getting Started

1




- 1**  (Power)  
Turns the power on or off.
- 2** Display window
- 3** **CD**  
Selects the CD function.
- 4** **USB**  
Selects the USB function.
- 5** **AUX**  
Selects the AUX function.
- 6** **PORT.**  
Selects the PORTABLE function.
- 7** **AUTO DJ**  
Selects the AUTO DJ mode.
- 8** **USB Port**  
You can play sound files by connecting the USB device.
- 9** **DISC SKIP**  
Chooses a desired disc.
- 10** **PORT. (Portable) IN** jack  
Connect a portable device.
- 11** **SOUND EFFECT**  
Selects sound effect mode.
- 12** **BASS BLAST**  
Selects BASS BLAST effect.
- 13** **CLOCK**  
Sets a clock and checks a time.  
**ALARM**  
With the ALARM function you can turn on CD, USB play and Tuner reception at a desired time.  
**SET**  
Confirms the setting.  
**STEREO/MONO**  
Selects stereo/mono.  
**SLEEP/DEMO**
  - Sets the system to turn off automatically at a specified time.
  - In power off status, if you press **SLEEP/DEMO**, show demo mode.
- 14** **MEMORY/REPEAT**
  - Stores radio stations.
  - Deletes all the saved stations.
  - Makes programmed list.
  - Listens to your tracks/files repeatedly or randomly.
- 15**  Selects the **Bluetooth** function.
- 16** **FM**  
Selects the FM function.
- 17** **TAPE**  
Selects the TAPE function.
- 18** **R (Record)**  
Records to USB.
- 19**  (Stop)
  - CD/USB stops playback.
  - Cancels DELETE function.**>||** (Play/Pause)  
CD/USB starts or pauses playback.  
**PRESET +/-**  
Selects preset numbers.  
**|<</>>|** (Skip/Search)
  - CD/USB searches backward or forward.
  - Skips to the previous/next track/file.**TUNING +/-**  
Selects the radio station.  
Volume Knob  
Adjusts volume of speaker.
- 20**  (Open/Close)  
Opens or closes the disc tray.
- 21** Disc tray

## Top Panel

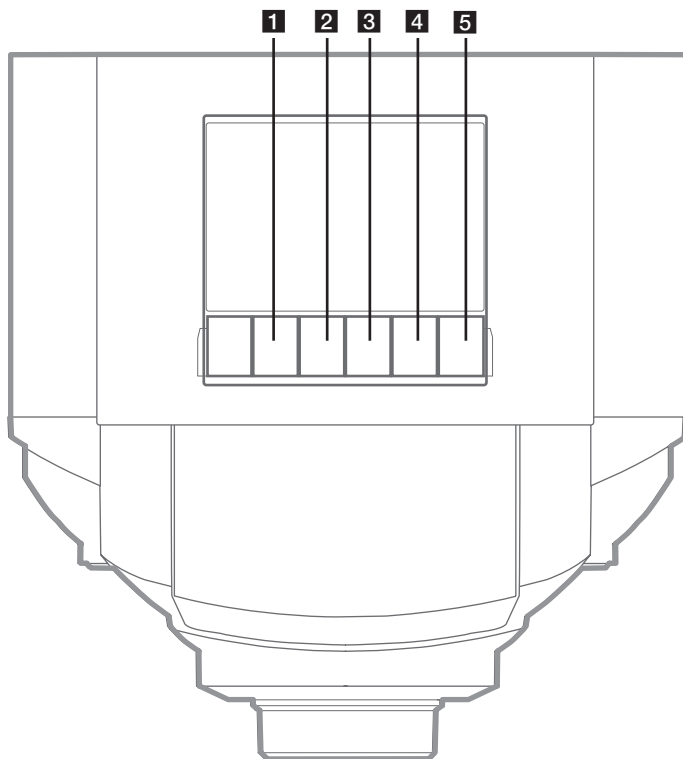 

- 1** > (Play)  
TAPE starts playback.
- 2** << (Rewind)  
TAPE searches backward.
- 3** >> (Fast forward)  
TAPE searches forward.
- 4** ▢△ (Stop/Open)
  - TAPE stops playback.
  - In stop state, opens the cassette tape door.
- 5** || (Pause)  
TAPE pauses playback.

## Rear Panel

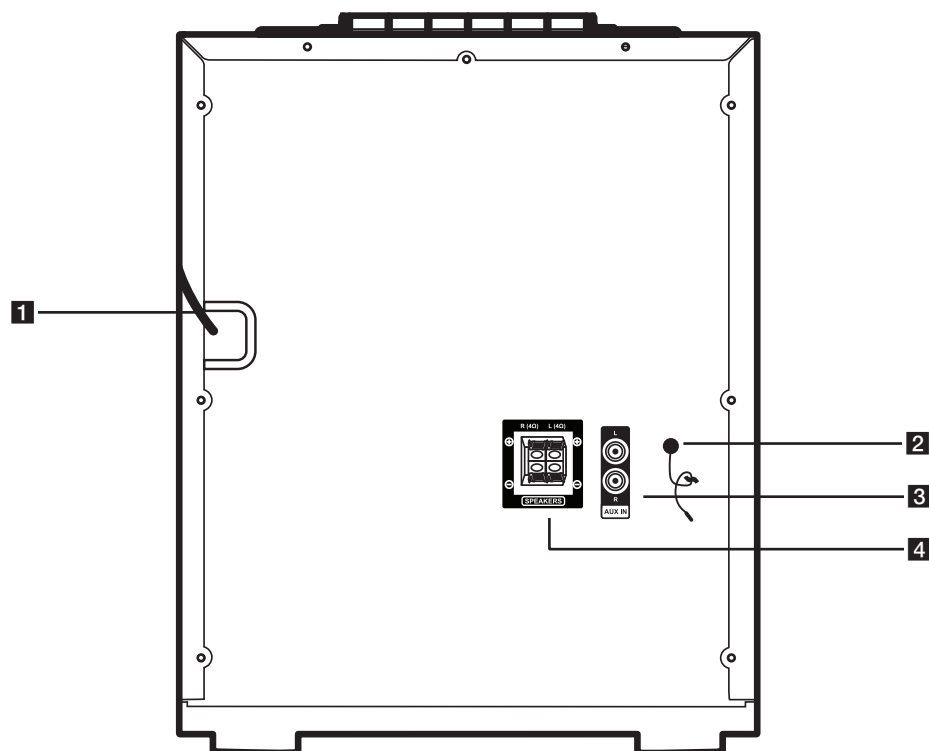 


- 1** POWER IN
- 2** FM ANTENNA
- 3** AUX IN (L/R)
- 4** SPEAKERS (L/R) terminals

## Connecting to speakers
 
### Connecting the speakers to the unit

To connect the cable to the unit, press each plastic finger pad to open the connection terminals on the unit. Insert the wire and release the finger pad.

Connect the black of each wire to the terminals marked - (minus) and the other end to the terminals marked + (plus).

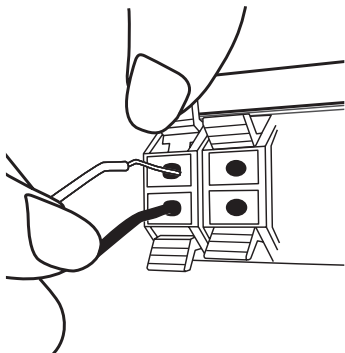


#### ⚠ Caution

- When you connect the speakers to the unit, make sure to connect the speaker's cable and plug to the corresponding speaker connector.
  - Check the volume level before playing music to prevent infirm, child, and pregnant women from being shocked by the sudden and loud sound from the unit.
  - Use the speaker supplied with this unit only. Using any other speaker may cause malfunction.
  - Be careful to make sure children do not put their hands or any objects into the \*speaker duct.
- \* speaker duct : A hole for plentiful bass sound on speaker cabinet (enclosure)
- The speakers contain magnet parts, so color irregularity may occur on the TV screen or PC monitor screen. Please use the speakers far away from either TV screen or PC monitor.

## Optional Equipment Connection


 
### USB Connection

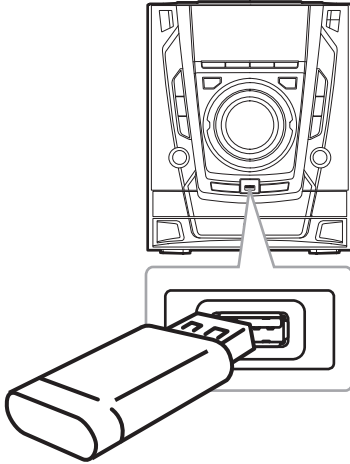Connect a USB device to the USB ports on the unit.



#### ❗ Note

 
Removing the USB device from the unit.

1. Choose a different function/mode or press  on the remote control or  on the unit twice in a row.
2. Remove the USB device from the unit.

### AUX IN Connection

Connect an output of auxiliary device(Camcorder, TV, Player, etc) to the **AUX IN(L/R)** connector.


If your device has only one output for audio(mono), connect it to the left(white) audio jack on the unit.

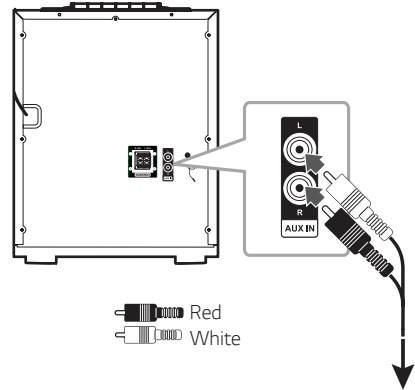

To the audio output jacks  
of your component  
(Camcorder, TV, Player, etc.)

## PORT. IN Connection

 Connect an output (earphone or line out) of portable device (MP3 or PMP etc) to the **PORT. IN** connector.

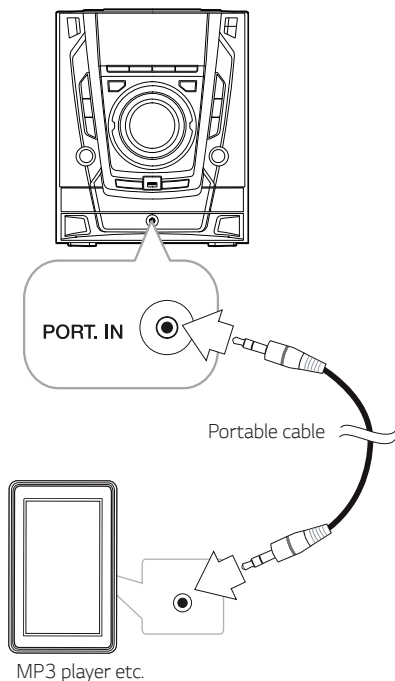


## Listening to music from your portable player or external device

The unit can be used to play the music from many types of portable player or external device.

1. Connect the portable player to the **PORT. IN** connector of the unit.

Or

Connect the external device to the **AUX IN** connector of the unit.

2. Turn the power on by pressing .
3. Press **F** on the remote control to select AUX or PORTABLE function.
4. Turn on the portable player or external device and start it playing.



# Basic Operations

## CD/USB Operations

1. Insert the disc by pressing **▲** on the remote control or **▲** on the unit.  
Or connect the USB device to the USB port.
2. Select CD or USB function by pressing **F** on the remote control.
3. On CD function, select the disc by pressing **DISC SKIP**.

To	Do this
Stop	Press <b>■</b> on the remote control or <b>□</b> on the unit.
Playback	Press <b>▶  </b> on the remote control or <b>&gt;  </b> on the unit.
Pause	Press <b>▶  </b> on the remote control or <b>&gt;  </b> on the unit during playback.
Searching for a section within a track/file	Press and hold <b>◀◀/▶▶</b> on the remote control or <b>◀◀/▶▶</b> on the unit during playback and release it at the point you want to listen to.
Skipping to the next/previous track/file	- In stop status, Press <b>◀◀/▶▶</b> on the remote control or <b>◀◀/▶▶</b> on the unit to go to the next/previous track/file.
	- During playback, press <b>▶▶</b> on the remote control or <b>&gt;&gt; </b> on the unit to go to the next track/file. Playing less than 2 seconds, press <b>◀◀</b> on the remote control or <b>◀◀</b> on the unit to go to the previous track/file. Playing after 3 seconds, press <b>◀◀</b> on the remote control or <b>◀◀</b> on the unit to go to the beginning of the track/file.
Playing repeatedly or randomly	Press <b>REPEAT</b> on the remote control or <b>MEMORY/REPEAT</b> on the unit repeatedly during playback. Refer to the note for details about the display change.

### Note

- The display changes in the following order.

USB	MP3/WMA CD	AUDIO CD
RPT 1	RPT 1	RPT 1
RPT*DIR	RPT DIR	-
RPT ALL	RPT ALL	RPT ALL
RANDOM	RANDOM	RANDOM
OFF	OFF	OFF

\*DIR: Directory

- When you play programmed list, only RPT 1 and RPT ALL are available.
- Even after restarting the unit or switching one function to another, you can listen to music from the point where it's last been played.
- If you leave the disc tray open for 5 minutes, it will close automatically.

## Auto Play

- AUDIO/MP3/WMA CD is played automatically after disc tray is open and then closed.
- Automatically the unit switches to the CD function if disc tray is opened and then closed even when there is no disc in disc tray.

# TAPE Operations

## Listening to cassette tapes

1. Press **F** on the remote control or **TAPE** on the unit to select TAPE function.
2. Open a cassette tape door by pushing **□△** on the unit.
3. Load a cassette tape with the side you want to play facing forward.

To	Do this
Stop	Press <b>□△</b> on the unit.
Play	Press <b>&gt;</b> on the unit.
Pause	Press <b>  </b> on the unit.
Rewind	Press <b>&lt;&lt;</b> on the unit.
Fast forward	Press <b>&gt;&gt;</b> on the unit.

**! Note**

Even if you change the TAPE function to another, TAPE function works but mutes the sound.

## Other Operations

### Programmed Playback

The program function enables you to store your favorite files from any disc or USB device.

A program can contain 20 tracks/files for media.

On CD function, select the desired disc by pressing **DISC SKIP**.

1. Press **PROGRAM/MEMORY** on the remote control or **MEMORY/REPEAT** on the unit in stop status.
2. Press **◀◀/▶▶** on the remote control or **◀◀/▶▶** on the unit to select a track/file.
3. Press **PROGRAM/MEMORY** on the remote control or **MEMORY/REPEAT** on the unit to save and select a next track/file.
4. Repeat steps 2 - 3 to store other tracks/files. (You can modify the list by pressing **PRESET/FOLDER ▲/▼** on the remote control to select the program number.)
5. Press **PROGRAM/MEMORY** on the remote control or **MEMORY/REPEAT** on the unit once again.

To play the programmed list, press **▶▶** on the remote control or **▶▶** on the unit after you make the list.

#### ! Note

When making or modifying the programmed list, REPEAT mode is off.

### Deleting Programmed list

Deleting function only works in the edit mode.

1. Press **PROGRAM/MEMORY** on the remote control or **MEMORY/REPEAT** on the unit in stop status.
2. Select a song by pressing **PROGRAM/MEMORY** on the remote control or **PRESET/FOLDER ▲/▼** on the remote control repeatedly.
3. Press **DELETE** on the remote control while a song is selected.

#### ! Note

 
- Programmed list is cleared in the case below.
  - Removing the disc or the USB device.
  - Deleting or recording music files in the USB device.
  - Unplugging the power cord.
- Program is switched off in the case below.
  - Changing to a different function.
  - Turning off and on the unit.

## Searching for a folder and an MP3/WMA file

1. Press **PRESET/FOLDER**  $\wedge/\vee$  on the remote control repeatedly until a desired folder appears.
2. Press **▶▶** on the remote control or **>||** on the unit to play it. The first file of the folder will be played.

### ❗ Note

- CD/USB Folders/Files are recognized as below.

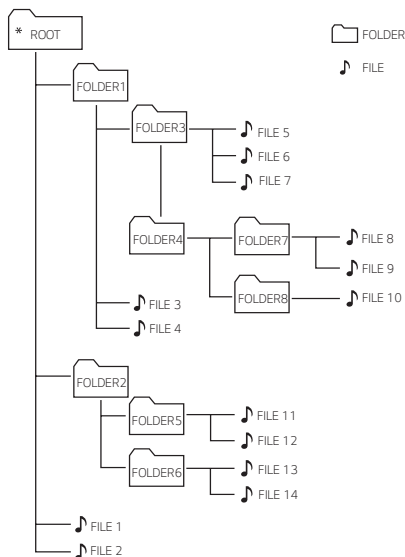

- If there is no file in a folder, the folder will not appear.
- Folders will be presented as the following order;  
ROOT → FOLDER1 → FOLDER3 → FOLDER7 → FOLDER8 → FOLDER5 → FOLDER6
- File will be played from  $\text{FILE 1}$  to  $\text{FILE 14}$  one by one.
- Files and folders will be presented in order recorded and may be presented differently according to the record circumstances.
- \*ROOT : The first screen you can see when a computer recognize the CD/USB is "ROOT".

## Deleting a file/folder or format

You can delete file, folder on your USB or format the USB.

1. Select USB function by pressing **F**.
2. -Deletes file : Select the file you want to delete and select "DEL FILE" by pressing **DELETE** on the remote control.  
-Deletes folder : Select the folder you want to delete and select "DEL DIR" by pressing **DELETE** on the remote control.  
-Formats USB : Select "FORMAT" by pressing **DELETE** on the remote control to format the USB device.

If you want to exit the current mode, Press  $\blacksquare$  on the remote control or  $\square$  on the unit.

3. To delete file/folder or format, press **▶▶** on the remote control or **>||** on the unit.

### ⚠ Caution

- Do not extract the USB device during operation. (play, delete, etc.)
- Regular back up is recommended to prevent data loss.
- The delete function may not be supported according to the USB status. (lock, etc.)

## AUTO DJ



Auto DJ blends the end of one song into the beginning of another for seamless playback. It equalizes volume across tracks for uninterrupted playback.

Press **AUTO DJ** repeatedly, the display changes as followings.

AUTO DJ RANDOM → AUTO DJ SEQUENTIAL → AUTO DJ OFF


Mode	Display Window	Description
OFF	AUTO DJ OFF	-
RANDOM	AUTO DJ RANDOM	The music is played randomly on this mode.
REPEAT	AUTO DJ SEQUENTIAL	The music is played repeatedly on this mode.


### ① Note

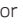- AUTO DJ mode does not support searching for a section within a track/file or to play repeatedly or randomly.
- If you move to other functions or stop the music using  on the remote control or  on the unit on AUTO DJ mode, AUTO DJ will be disabled.
- AUTO DJ is not supported in the music file whose length is less than 60 seconds.
- During recording, AUTO DJ is not available.
- Only AUTO DJ SEQUENTIAL is selected when played programmed list.

## Turn off the sound temporarily

Press  on the remote control to mute your sound.

You can mute your unit, for example, to answer the telephone, the " " will appear in the display window.

To cancel it, press  on the remote control again or change the volume level.

# Using a BLUETOOTH® wireless technology

## About BLUETOOTH

**Bluetooth** is wireless communication technology for short range connection.

The sound may be interrupted when the connection has interference from other electronic devices or you connect a **Bluetooth** device from a different room. Connecting individual devices under **Bluetooth** wireless technology does not incur any charges. A mobile phone with **Bluetooth** wireless technology can be operated via the Cascade if the connection was made via **Bluetooth** wireless technology.

- Available Devices : Smart phone, MP3, Notebook, etc.
- Codec : SBC

## BLUETOOTH Profiles

In order to use **Bluetooth** wireless technology, devices must be able to interpret certain profiles. This unit is compatible with following profile.

A2DP (Advanced Audio Distribution Profile)

## Listening to music stored on the BLUETOOTH devices

### Pairing your unit and BLUETOOTH device

Before you start the pairing procedure, make sure the **Bluetooth** feature is activated on your **Bluetooth** device. Refer to your **Bluetooth** device's user guide. Once a pairing operation is performed, it does not need to be performed again.

1. Turn on the unit.
2. Operate the **Bluetooth** device and perform the pairing operation. When searching for this unit with the **Bluetooth** device, a list of the devices found may appear in the **Bluetooth** device display depending on the type of **Bluetooth** device. Your unit appears as "LG CM3370(XX)".

#### ❗ Note

- XX means the last two digits of **Bluetooth** address. For example, if your unit has a **Bluetooth** address such as 9C:02:98:4A:F7:08, you will see "LG CM3370(08)" on your **Bluetooth** device.
- Depending on the **Bluetooth** device type, some devices may have a different pairing process. Enter the PIN code (0000) as needed.

3. When this unit has successfully connected with your **Bluetooth** device, "PAIRED" will be appear on the display window. After a short amount of time, the **Bluetooth** device name will be displayed.

#### ❗ Note

If the device name is unavailable, " \_ " will be displayed.

4. Listen to music.  
To play a music stored on your **Bluetooth** device, refer to your **Bluetooth** device's user guide

### ! Note

- When using **Bluetooth** technology, you have to make a connection between the unit and the **Bluetooth** device as close as possible and keep the distance.  
However, it may not work well in certain situations as described below:
  - There is an obstacle between the unit and the **Bluetooth** device.
  - There is a device using the same frequency with **Bluetooth** technology such as a medical equipment, a microwave or a wireless LAN device.
- You should connect your **Bluetooth** device to this unit again when you restart it.
- The sound may be interrupted when the connection has interference from other electronic devices.
- Depending on the type of the device, you may not be able to use the **Bluetooth** function.
- You can enjoy a wireless system using phone, MP3, Notebook, etc.
- The more distance between the unit and the **Bluetooth** device, the lower the sound quality becomes.
- **Bluetooth** connection will be disconnected when the unit is turned off or the **Bluetooth** device gets far from the unit.
- When **Bluetooth** connection is disconnected, connect the **Bluetooth** device to the unit again.
- When a **Bluetooth** device is not connected, "BT READY" appears on the display window.
- When you use **Bluetooth** function, adjust the volume to a proper level on the **Bluetooth** device.
- When you connect **Bluetooth** device (iOS device etc.) to this unit or operate the device, the volume level can be synchronized with each other.
- To connect a new **Bluetooth** device, disconnect the currently connected **Bluetooth** device and connect a new **Bluetooth** device.

## Radio Operations

### Listening to the radio

1. Press **F** on the remote control or **FM** on the unit until FM appears in the display window.  
The last received station is tuned in.
2. Auto tuning :  
Press and hold **TUNING -/+** on the remote control or **I<</>>I** on the unit for about two seconds until the frequency indication starts to change, then release.  
Scanning stops when the unit tunes in a station.

Or

Manual tuning :

Press **TUNING -/+** on the remote control or **I<</>>I** on the unit repeatedly.

3. Adjust the volume by pressing **VOL +/-** on the remote control or rotating volume knob on the unit repeatedly.

### Improving poor FM reception

press **▶▶** on the remote control or **STEREO/MONO** on the unit.

This will change the tuner from stereo to mono and usually improve the reception.

### Presetting the Radio Stations

You can preset 50 stations for FM.

Before tuning, make sure to turn down the volume.

1. Press **F** on the remote control or **FM** on the unit until FM appears in the display window.
2. Select the desired frequency by pressing **TUNING -/+** on the remote control or **I<</>>I** on the unit.
3. Press **PROGRAM/MEMORY** on the remote control or **MEMORY/REPEAT** on the unit.  
A preset number will blink in the display window.
4. Press **PRESET/FOLDER ^/V** on the remote control or **PRESET +/-** on the unit to select the preset number you want.
5. Press **PROGRAM/MEMORY** on the remote control or **MEMORY/REPEAT** on the unit.  
The station is stored.
6. Repeat steps 2 to 5 to store other stations.
7. To listen to a preset station, press **PRESET/FOLDER ^/V** on the remote control or **PRESET +/-** on the unit.

### Deleting all the saved stations

1. Press and hold **PROGRAM/MEMORY** on the remote control or **MEMORY/REPEAT** on the unit for two seconds.  
"ERASE ALL" will flash up on the unit display.
2. Press **PROGRAM/MEMORY** on the remote control or **MEMORY/REPEAT** on the unit to erase all the saved radio stations.



# Sound adjustment

## Setting the sound mode

This system has a number of pre-set surround sound fields. The displayed items for the equalizer may be different depending on sound sources and effects.

You can select a desired sound mode by using **SOUND EFFECT**.

On Display	Description
POP CLASSIC JAZZ ROCK	This program lends an enthusiastic atmosphere to the sound, giving you the feeling you are at an actual rock, pop, jazz or classic concert.
AUTO EQ	Sets the sound equalizer on the mode that is the most similar to the genre which is included in the MP3 ID3 tag of song files.
BASS BLAST	Reinforces the treble, bass and surround sound effect.
STANDARD	You can enjoy optimized sound.

!

Note

- On some speakers, sound may not be heard or heard in low sound depending on the sound mode.
- Maybe you need to reset the sound mode, after switching the input, sometimes even after the sound track changed.
- By pressing **BASS BLAST**, you can directly select BASS BLAST effect.

# Advanced Operations

## Recording to USB

### Recording to USB - CD, AUX, PORTABLE, FM

You can record a various sound source to USB.  
(CD, AUX, PORTABLE, FM)

1. Connect the USB device to the unit.
2. Select a function by pressing **F** on the remote control.  
One track/file recording - You can record to USB after playing a track/file you want.  
All tracks/files recording - You can record to USB after full stop status.  
Programmed list recording - After showing the programmed list, you can record it to USB.  
(Refer to page 19)

3. Start the recording by pressing **USB REC** on the remote control or **R** on the unit.
4. To stop recording, press **■** on the remote control or **□** on the unit.

### Recording to USB - TAPE

You can record a various sound source to USB.  
(TAPE)

1. Connect the USB device to the unit.
2. Select TAPE function by pressing **F** on the remote control or **TAPE** on the unit.
3. Load a cassette tape with the side you want to record facing forward.
4. Press **>** on the unit.
5. Start the recording by pressing **USB REC** on the remote control or **R** on the unit.
6. To stop recording, press **■** on the remote control or **□** on the unit.

### Pausing recording

During recording, press **▶||** on the remote control or **>||** on the unit to pause recording.  
Press it again to restart recording.  
(Only AUX, PORTABLE, TAPE, FM)

### To select recording bit rate and speed

1. Press **USB REC** on the remote control or **R** on the unit for longer than 3 seconds.
2. Use **◀◀/▶▶** on the remote control to select the bit rate.
3. Press **USB REC** on the remote control or **R** on the unit again to select the recording speed.
4. Press **◀◀/▶▶** on the remote control to select a desired recording speed :  
(AUDIO CD only)

#### X1 SPEED

- You can listen to music while recording it.

#### X2 SPEED

- You can just record the music file.





5. Press **USB REC** on the remote control or **R** on the unit to finish the setting.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

**Be responsible  
Respect copyrights**

**Note**

- You can check the recording percentage rate for the USB record on the display window during the recording. (MP3/WMA CD Only)
- During recording MP3/WMA, there is no sound.
- When you stop recording during playback, the file that has been recorded at that time will be stored. (Except MP3/WMA files)
- Do not remove the USB device or turn off the unit during USB recording. If does not, an incomplete file may be made and not deleted on PC.
- If USB recording does not work, the message like “NO USB”, “ERROR”, “USB FULL”, “NOT SUPPORT” or “NO REC” is displayed on the display window.
- Multi card reader device or external HDD cannot be used for USB recording.
- A file is recorded by about 512 Mbyte when you record for a long term.
- You may not store more than 2,000 files.
- You cannot record in AUTO DJ mode.
- In case of the unsupported MP3/WMA file, the file recording may be stopped.
- It'll be stored as follows.

AUDIO CD	MP3/WMA
 <b>CD_REC</b>   <b>TRACK_0001</b>   <b>TRACK_0002</b>   ...	 <b>FILE_REC</b>   ABC(File name)   DEF(File name)   ...
The other source*	Tuner
 <b>OTHERS_REC</b>   <b>AUDIO_0001</b>   <b>AUDIO_0002</b>   ...	 <b>TUNER_REC</b>   <b>AUDIO_0001_107-7FM</b>   <b>AUDIO_0002_97-8FM</b>   ...

\* : AUX, PORTABLE, TAPE

Tuner : The current recording frequency is shown.

## Setting the Clock

1. Turn the unit on.
2. Press and hold **CLOCK**.
3. Select time mode by pressing **◀◀/▶▶** on the remote control.  
- AM 12:00 (for an AM and PM display) or 0:00 (for a 24 hour display)
4. Press **SET** to confirm your selection.
5. Select the hours by pressing **◀◀/▶▶** on the remote control.
6. Press **SET**.
7. Select the minutes by pressing **◀◀/▶▶** on the remote control.
8. Press **SET**.

## Using your player as an alarm clock

1. Turn the unit on.
2. Press and hold **ALARM**.
3. Press **◀◀/▶▶** on the remote control to change the hours and minutes and press **SET** to save.
4. Press **◀◀/▶▶** on the remote control to select function and press **SET** to save.  
- Press **◀◀/▶▶** to select a preset number when you select tuner and then, press **SET**. If there is no preset number, this step is skipped.
5. Press **◀◀/▶▶** on the remote control to change the volume and press **SET** to save.  
The clock icon "⌚" shows that the alarm is set.

### ① Note

- If you set the clock, you can check the time by pressing **CLOCK** even when the player is turned off.
- You can set alarm after you set the clock.
- If you set the clock and alarm, you can check the alarm icon "⌚" and setting information by pressing **ALARM** even when the unit is turned off.
- You can select ALARM on/off mode by pressing **ALARM**.

## Sleep Timer Setting

Press **SLEEP** on the remote control or **SLEEP/DEMO** on the unit repeatedly to select delay time between 10 and 180 minutes. After the delay time, the unit will be turned off.

To cancel the sleep function, press **SLEEP** on the remote control or **SLEEP/DEMO** on the unit repeatedly until "SLEEP 10" appears, and then press **SLEEP** on the remote control or **SLEEP/DEMO** on the unit once again.

### ! Note

You can check the remaining time before the unit is turned off. Press **SLEEP** on the remote control or **SLEEP/DEMO** on the unit. The remaining time appears in the display window.

## Dimmer

Press **SLEEP** on the remote control or **SLEEP/DEMO** on the unit once. The display window will be darkened by half. To cancel it, press **SLEEP** on the remote control or **SLEEP/DEMO** on the unit repeatedly until dim off.

## DEMO

In the power off status, press **SLEEP/DEMO** on the unit once. The unit will power on and display the each of functions with demo sound in the display window. To cancel the DEMO function, press **SLEEP/DEMO** on the unit once more.

### ! Note

- While in DEMO, this unit will keep DEMO status even if you unplug the power cord connection.
- You can enjoy other functions during the DEMO, the DEMO will temporarily pause.
  - Without input key in 10 sec, the DEMO will playback automatically.

## Auto power down

This unit will turn itself off to save electricity in the case were the main unit is not connected to an external device and is not used for 15 minutes.

The unit will also turn itself off after six hours if the main unit has been connected to another device using the analog inputs.

## AUTO POWER On

This unit automatically turns on by an input source : **Bluetooth**

If you try to connect your **Bluetooth** device, this unit turns on and the unit will be connected your **Bluetooth** device.

### ! Note

- Depending on the connected device, this function may not operate.
- Depending on the connected device, the unit turns on but **Bluetooth** function may not be connected.
- If you disconnect **Bluetooth** connection by this unit, some **Bluetooth** devices try to connect to the unit continually. Therefore it is recommended to disconnect the connection before turning off the unit.
- If you have already paired with this unit, automatically this unit can turn on by an input source when this unit is turned off.
- If you turn off the unit by pressing the power button for more than 5 seconds, Auto Power On function is disabled.  
To activate it, turn on the unit.

## Auto function change

This unit recognizes input signals such as **Bluetooth** and then changes suitable function automatically.

### When you try to connect Bluetooth device

When you try to connect your **Bluetooth** device to this unit, **Bluetooth** function is selected.  
Play your music on the **Bluetooth** device.

### ! Note

- This function is not available during recording or deleting.
- This function only works with devices that were previously connected.

# Troubleshooting


Problem	Cause & Correction
The unit does not work properly.	<ul style="list-style-type: none"> <li>• Turn off the power of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and turn them on again.</li> <li>• Disconnect the power cord of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and then try connecting again.</li> <li>• Previous setting may not be saved when device power is shut off.</li> </ul>
No Power.	<ul style="list-style-type: none"> <li>• The power cord is not plugged in. Plug in the power cord.</li> <li>• Check whether electricity failed. Check the condition by operating other electronic devices.</li> </ul>
No sound.	<ul style="list-style-type: none"> <li>• Check whether you select right function. Press function button and check the selected function.</li> <li>• Check to see if the speakers are connected to the unit correctly.</li> </ul>
The unit does not start playback.	<ul style="list-style-type: none"> <li>• An unplayable disc is inserted. Insert a playable disc.</li> <li>• No disc is inserted. Insert a disc.</li> <li>• The disc is dirty. Clean the disc. (Refer to page 34)</li> <li>• The disc is inserted upside down. Place the disc with the label or printed side facing upwards.</li> </ul>
Radio stations cannot be tuned in properly.	<ul style="list-style-type: none"> <li>• The antenna is positioned or connected poorly. Connect the antenna securely.</li> <li>• The signal strength of the radio station is too weak. Tune to the station manually.</li> <li>• No stations have been preset or preset stations have been cleared. (When being tuned by scanning preset channels) Preset some radio stations, see page 24 for details.</li> </ul>
The remote control does not work properly.	<ul style="list-style-type: none"> <li>• The remote control is too far from the unit. Operate the remote control within about 7 m (23 feet).</li> <li>• There is an obstacle in the path of the remote control and the unit. Remove the obstacle.</li> <li>• The batteries in the remote control are exhausted. Replace the batteries with new ones.</li> </ul>

# Main unit

General	
Power requirements	Refer to the main label.
Power consumption	Refer to the main label.
Dimensions (W x H x D)	Approx. 272 mm x 336 mm x 393 mm (Approx 10.7 inch x 13.2 inch x 15.4 inch)
Operating temperature	5 °C to 35 °C (41 °F to 95 °F)
Operating humidity	5 % to 90 %

Inputs	
Analog audio in (AUX IN)	2.0 Vrms (1 kHz, 0 dB), 75 $\Omega$ , RCA jack (L, R) x 1
Portable in (PORT. IN)	1.8 Vrms (3.5 mm stereo jack) x 1

Tuner	
FM Tuning Range	87.5 to 108.0 MHz

System	
Frequency response	60 to 20,000 Hz
Signal-to-noise ratio	80 dB
Dynamic range	80 dB
Bus Power Supply (USB)	5 V  500 mA

Amplifier (RMS Output power)	
Total	200 W RMS
Front	100 W RMS X 2 (4 $\Omega$ at 1 kHz, 10 % THD)



# Speakers

Front	
Type	2 Way 2 Speaker
Impedance	4 Ω
Rated Input Power	100 W RMS
Max. Input Power	200 W RMS
Dimensions (W x H x D)	Approx. 202 mm x 341 mm x 237.5 mm (Approx 7.9 inch x 13.5 inch x 9.3 inch)

- Design and specifications are subject to change without notice.

## Maintenance

### Handling the Unit

#### When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

#### Keeping the exterior surfaces clean

Do not use volatile liquids such as insecticide spray near the unit.

Wiping with strong pressure may damage the surface.

Do not leave rubber or plastic products in contact with the unit for a long period of time.

#### Cleaning the unit

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

#### Maintaining the Unit

The unit is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality could be diminished. For details, please contact your nearest authorized service center.

## Notes on Discs

### Handling Discs

Never stick paper or tape on the disc.

### Storing Discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

### Cleaning Discs

Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for old vinyl records.

## Trademarks and Licenses

---



**Bluetooth** wireless technology is a system which allows radio contact between electronic.

Connecting individual devices under **Bluetooth** wireless technology does not incur any charges. A mobile phone with **Bluetooth** wireless technology can be operated via the Cascade if the connection was made via **Bluetooth** wireless technology.

The **Bluetooth** word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license.

Other trademarks and trade names are those of their respective owners.

---

