




# POWERHORSE<sup>®</sup>

## Owner's Manual

### M1181A.1

#### Powerhorse Log Splitter Fender Kit

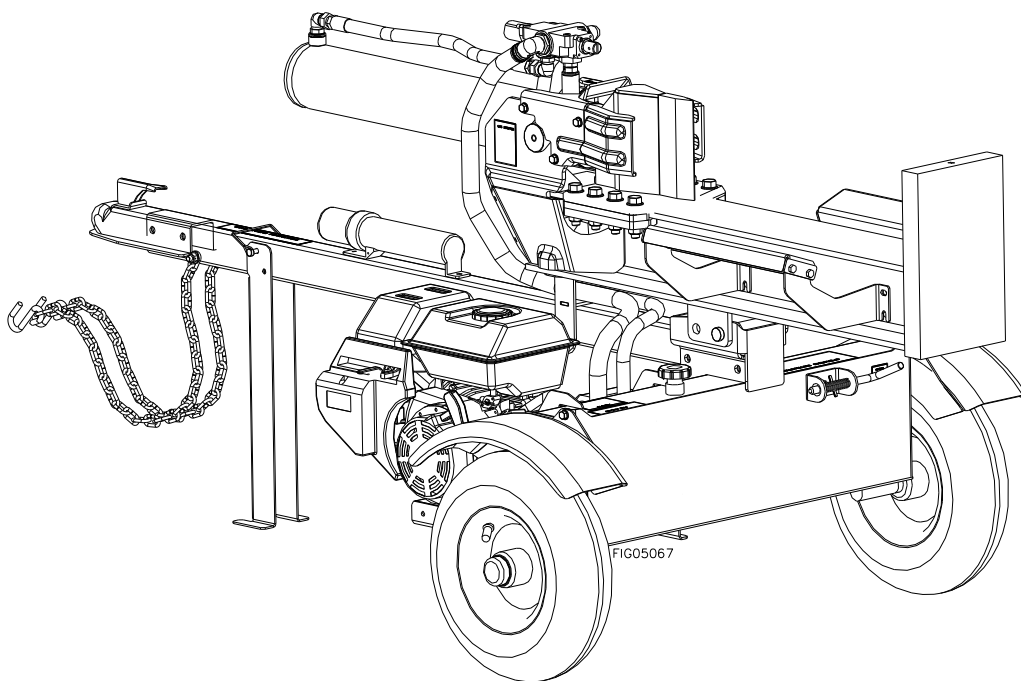

The manufacturer reserves the right to make improvements in design and/or changes in specifications at any time without incurring any obligation to install them on units previously sold.

**Any Questions, Comments, Problems or Parts Orders**

***Call Powerhorse Product Support 1-866-443-2576***

Manufactured by  
Northern Tool + Equipment Co.,  
2800 SouthCross Drive West  
P.O. Box 1499 Burnsville, MN 55337-0499

# Summary of Important Safety Information for Operation



## WARNING

Carefully read and make sure you understand the following safety information before installing this fender kit and your original log splitter owner's manual.

### Prohibition Against Modifications

**Never modify or alter the log splitter in any way. Modifications can create serious safety hazards and will void the warranty.**

- **Attachments.** Never add attachments to the splitter, except for authorized accessories supplied by the manufacturer with instructions for safe installation and use.

### Safety During Towing

- **Read instructions.** Review towing safety instructions in your towing vehicle manual.
- **Securely attached.** Be sure the log splitter is securely attached to the towing vehicle before towing.
- **Tires.** Be sure the tires are fully inflated and in good repair before towing the log splitter. When adding air to the tires, do not over-inflate – serious injury could occur if tire explodes.
- **Added length.** Be aware of the added length of the splitter.
- **Speed Limit.** Never tow this log splitter over 45 mph. Faster speeds may result in loss of control.
- **Rough terrain.** Be extra cautious and drive slowly when traveling over rough terrain.
- **Under the influence.** Never tow this splitter while under the influence of alcohol, drugs, or medication.
- **On public roads.** If towing on a public road, make sure to comply with all local, state, and federal towing requirements. It is the sole responsibility of the purchaser to obtain licensing, trailer lights, safety chains or signage, as needed to comply.
- **Unattended.** Turn off the towing vehicle before leaving the splitter unattended.
- **Disconnect before operate.** Do not use the log splitter while it is connected to the towing vehicle.

### Safety During Inspection/Maintenance

Always inspect your log splitter before each use, and repair as needed, to keep it in safe working condition:

- **Engine off.** Always make sure the engine is off before cleaning, repairing or adjusting the splitter, except as recommended by the manufacturer.
- **Mechanical parts.** Check to be sure that all nuts and bolts are tight to make sure the log splitter is in safe working condition.
- **Guards / shields.** Make sure all guards and shields are replaced after servicing the log splitter.
- **Replacement parts.** If a part needs replacement, only use parts that meet the manufacturer's specifications. Replacement parts that do not meet specifications may result in a safety hazard or poor operation of the log splitter.

# Assembly Instructions

**Closely inspect all log splitter components.**

If you have missing or damaged components, please contact Powerhorse Product Support at 1-866-443-2576.





## Step 1 – Attaching Right Fender

- Install the Right Fender (Part Number 790637) to the Log Splitter Axle.
- Use (2) M8-1.25 Flange Bolts, (2), M8 Flat Washers, and (2) M8-1.25 Nyloc Nuts.
- Torque to 21 ft.-lb.

## Tools Needed

- 13mm Wrench

## Fasteners Needed: (fasteners shown in actual size)

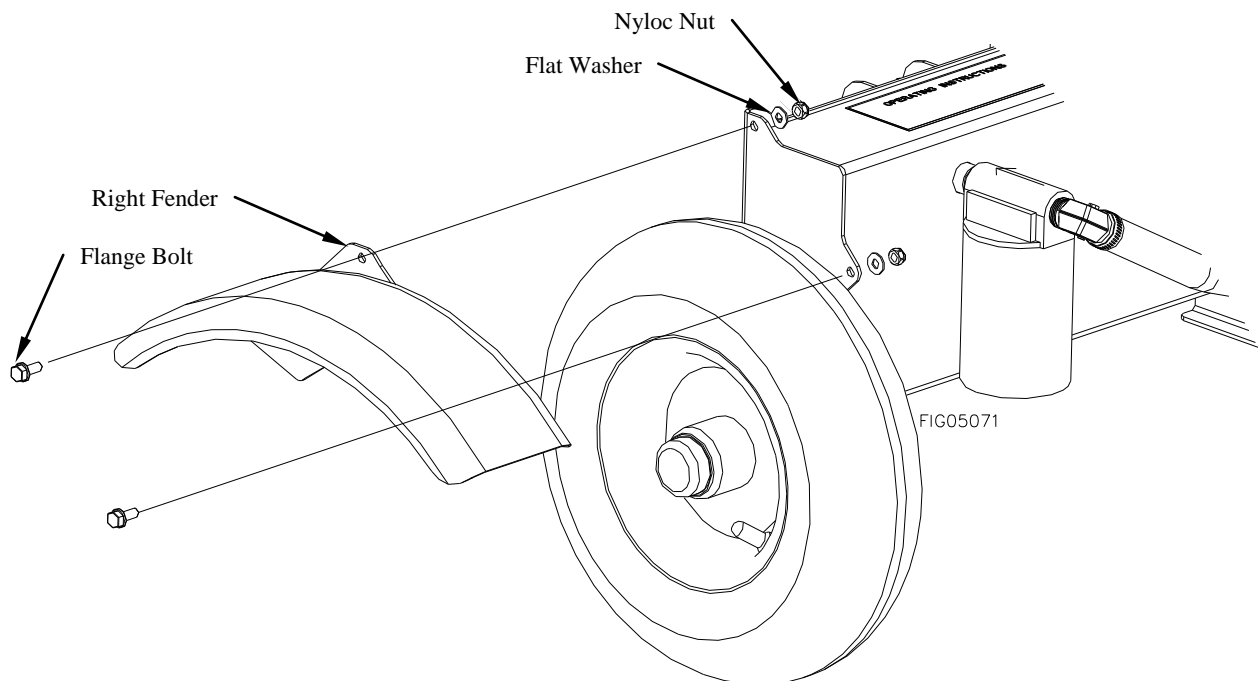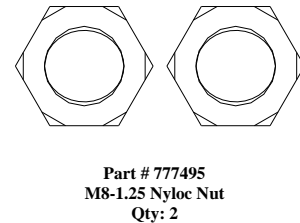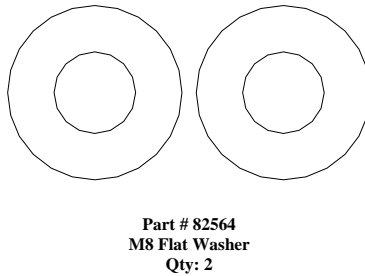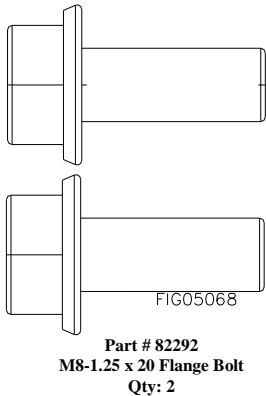

# Assembly Instructions

### **Step 2 – Attaching Left Fender**

- Install the Left Fender (Part Number 791080) to the Log Splitter Axle.
- Use (2) M8-1.25 Flange Bolts, (2), M8 Flat Washers, and (2) M8-1.25 Nyloc Nuts.
- Torque to 21 ft.-lb.

## Tools Needed

- 13mm Wrench

- 13mm Wrench

**Fasteners Needed:** (fasteners shown in actual size)

