


2010 **cube**

QUICK REFERENCE GUIDE



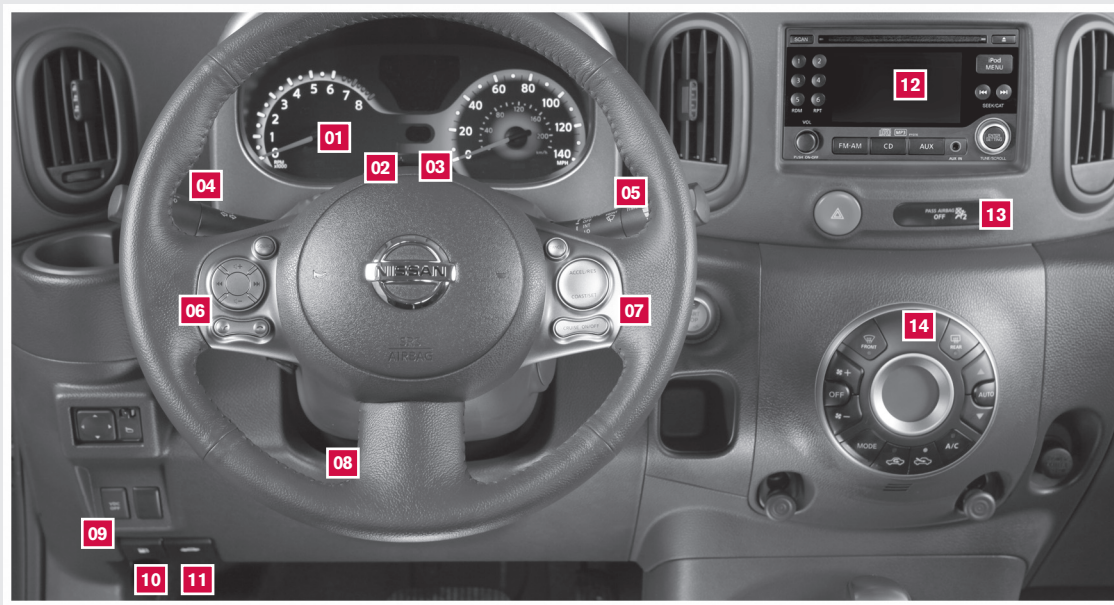

- | | | | |
|---|--|--|--|
| 01 LOW TIRE PRESSURE WARNING LIGHT | 05 WINDSHIELD WIPER AND WASHER SWITCH | 08 TILT STEERING | 12 AUDIO SYSTEM |
| 02 INSTRUMENT BRIGHTNESS CONTROL* | 06 STEERING WHEEL SWITCHES FOR AUDIO CONTROL/BLUETOOTH* | 09 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH | 13 FRONT PASSENGER AIR BAG STATUS LIGHT |
| 03 TWIN TRIP ODOMETER* | 07 CRUISE CONTROL | 10 FUEL-FILLER DOOR RELEASE | 14 CLIMATE CONTROL |
| 04 HEADLIGHT AND TURN SIGNAL CONTROL | | 11 HOOD RELEASE* | |

*See your Owner's Manual for more information.

TABLE OF CONTENTS


Remote Keyless Entry System (if so equipped)	2
NISSAN Intelligent Key™ (if so equipped)	2
Automatic Door Locks	4
Windshield Wiper/Washer Switch	4
Headlight and Turn Signal Control	5
Steering Wheel Switches for Audio Control/Bluetooth® (if so equipped) . . .	5
Cruise Control (if so equipped)	6
Automatic Climate Control (if so equipped)	6
FM/AM/SAT* Radio with CD Player (if so equipped)	8
Clock Set/Display Adjustment	10
USB Jack with iPod® Connectivity (if so equipped)	10
Vehicle Information Display	10
RearView Monitor (if so equipped)	10
Continuously Variable Transmission (CVT) (if so equipped)	11
6-Speed Manual Transmission (if so equipped)	11
Vehicle Dynamic Control (VDC) Off Switch	11
Front Passenger Air Bag Status Light	12
Tire Pressure Monitoring System (TPMS)	12
Seat Belt Warning Light and Chime	12
Child Safety Rear Door Locks	13
Fuel-Filler Door Release	13
Tilt Steering Column	13
Front Seat Adjustments	13
Rear Seat Adjustments	14
Bluetooth® Hands-free Phone System (if so equipped)	14

This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation.

REMOTE KEYLESS ENTRY SYSTEM (if so equipped)




LOCK DOORS

Press the  button to lock all doors.




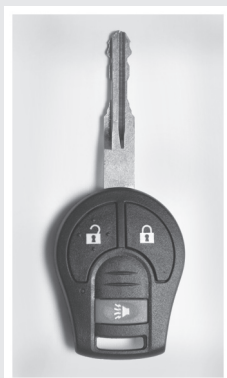
UNLOCK DOORS

Press the  button once to unlock the driver's door only.
Press the button again within 5 seconds to unlock all doors.



USING THE PANIC ALARM

Press and hold the  button for longer than 1 second.
The panic alarm will sound and the headlights will stay on for 25 seconds. The panic alarm stops when it has run for 25 seconds or when any button is pressed on the keyfob.



NISSAN INTELLIGENT KEY™ (if so equipped)

The NISSAN Intelligent Key™ allows you to lock or unlock your vehicle, open your back door and start the engine.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the door and back door/unlock function is approximately 31 in (80 cm).
- Locking the vehicle - Push any door handle Request Switch **01** once.
- Unlocking the vehicle - Push any door handle Request Switch **01** once. The corresponding door will unlock. Push the door handle Request Switch **01** again within 5 seconds; all other doors will unlock.



STARTING THE ENGINE

- Depress the brake pedal.
- Push the ignition switch **START/STOP** button to start the engine.

TURNING THE ENGINE OFF

- Move the shift lever to the P (PARK) position and apply the parking brake.
- Push the ignition switch **START/STOP** button to turn the engine off.




ACCESSORY POSITION

- Press the ignition switch **START/STOP** button once without depressing the brake pedal to access the ACC position. This position activates electrical accessories such as the radio.
- Press the ignition switch **START/STOP** button a second time without depressing the brake pedal to access the ON position. This position turns on the ignition switch and all electrical accessories.

NISSAN INTELLIGENT KEY™ BATTERY DISCHARGE

If the battery of the Intelligent Key is completely discharged, the Intelligent Key system warning light in the instrument panel blinks in yellow after pushing the ignition switch **START/STOP** button. To start the engine with a discharged Intelligent Key, perform the following procedure:

- Move the shift lever to the P (PARK) position.
- Firmly apply the foot brake.
- Touch the ignition switch **START/STOP** button with the Intelligent Key. A chime will sound.
- Push the ignition switch **START/STOP** button while depressing the brake pedal within 10 seconds after the chime sounds. The engine will start.

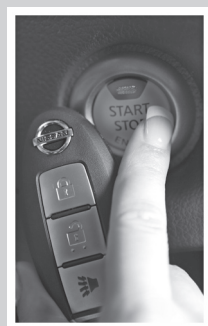


If the Intelligent Key system warning light in the instrument panel is blinking in green, replace the battery as soon as possible. This warning means that the Intelligent Key battery is almost discharged.

NOTE: If the ignition switch is pushed without depressing the brake pedal, the ignition switch will change to the ACC position.

OPENING THE BACK DOOR

To open the back door, unlock and pull the handle.

Unlock the back door using one of the following operations:

- Push the  button on the keyfob or the Intelligent Key twice.
- Push the back door Request Switch **01** (if so equipped).
- Push the power door lock switch to the unlock position.
- Insert the key into the driver's door key cylinder and turn towards the rear of the vehicle twice.



AUTOMATIC DOOR LOCKS

- All doors lock automatically when the vehicle speed reaches 15 MPH (24 km/h).
- All doors unlock automatically when the ignition switch is placed in the OFF position (Intelligent Key equipped vehicles) or when the key is removed from the ignition switch (mechanical key equipped vehicles).


The automatic unlock function can be deactivated or activated. To deactivate or activate the automatic door unlock system, perform the following procedure:

1. Close all doors.
2. Place the ignition switch in the ON position.
3. Within 20 seconds of performing Step 2, push and hold the power door lock switch to the **1** position (UNLOCK) for more than 5 seconds.
4. When activated, the hazard indicator will flash twice. When deactivated, the hazard indicator will flash once.
5. The ignition switch must be placed in the OFF and ON position again between each setting change.

When the automatic door unlock system is deactivated, the doors do not unlock when the ignition switch is placed in the OFF position (Intelligent Key equipped vehicles) or when the key is removed from the ignition switch (mechanical key equipped vehicles). To unlock the door manually, use the inside lock knob or the power door lock switch (driver's or front-passenger's side).



WINDSHIELD WIPER/WASHER SWITCH

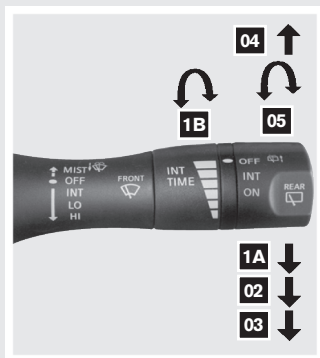
- The ignition switch must be in the ON position to activate the windshield wipers.
- Move the lever to the following positions to operate the windshield wipers:
 - 1A** Intermittent (**INT**) – Front wipers operate intermittently and can be further adjusted by twisting the time control ring **1B**.
 - 02** Low Speed (**LO**) – Continuous low-speed operation of front wipers.
 - 03** High Speed (**HI**) – Continuous high-speed operation of front wipers.
 - 04** Mist (**MIST**) – Push the lever up for one sweep of the front wipers.
 - 05** Rear Wiper (**REAR**) – Twist the end section to operate the first (**INT**) or second (**ON**) speed settings for the rear wiper.
- The washer function activates the washer fluid and several sweeps of the wipers:
 - For FRONT WASHER, pull the lever toward you.
 - For REAR WASHER, push the lever away from you.



HEADLIGHT AND TURN SIGNAL CONTROL


HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch **01** to the  position to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the headlight control switch **01** to the  position to turn on the headlights. All other lights remain on.


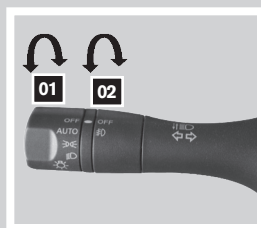



FOG LIGHT OPERATION (if so equipped)

   NOTE: The headlights must be on and the low beams selected for the fog lights to operate.

 
 

 
 
 
 
 

 
- Turn the switch (inside collar) **02** to the  position to turn on the fog lights.
- Turn the switch (inside collar) **02** to the **OFF** position to turn off the fog lights.

HIGH BEAM

- Push the headlight control switch forward **A** to select the high beam function. The blue  indicator light in the instrument panel illuminates. Pull the headlight switch back to the original position to select low beam. The blue  indicator light goes off.
- Pull and release the headlight control switch **B** to flash the headlight high beams on and off.

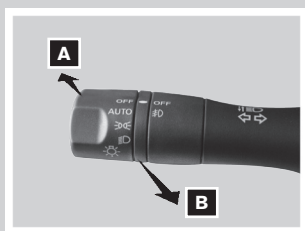

STEERING WHEEL SWITCHES FOR AUDIO CONTROL/BLUETOOTH® (if so equipped)



- Press the **SOURCE** button to turn the audio system on.
- To choose AM, FM, XM® (if so equipped), CD, USB/iPod®** (if so equipped) or AUX, press the **SOURCE** button repeatedly.
- The tuning switches  and  can be used to perform the following:
 - Push the  or  switch for less than 1.5 seconds to change to the next radio preset station.
 - Push and hold the  or  switch for more than 1.5 seconds to seek the next or previous broadcasting radio station.
 - Push the  or  switch for less than 1.5 seconds to change tracks on a CD, iPod® or USB device.
- Push the  + volume control switch to increase the volume. Push the  - volume control switch to decrease the volume.



*iPod® is a trademark of Apple Inc., registered in the U.S. and other countries.

CRUISE CONTROL (if so equipped)

- To activate cruise control, push the **CRUISE ON/OFF** switch. The CRUISE indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch and release.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch. Release the switch when the vehicle slows to the desired speed.
- To cancel cruise control, push the **CANCEL** switch or tap the brake pedal.
- To resume a preset speed, push and release the **ACCEL/RES** switch. The vehicle returns to the last set cruising speed when the vehicle speed is over 24 MPH (38 km/h).
- To turn off cruise control, push the **CRUISE ON/OFF** switch. The CRUISE indicator light in the instrument panel will go out.

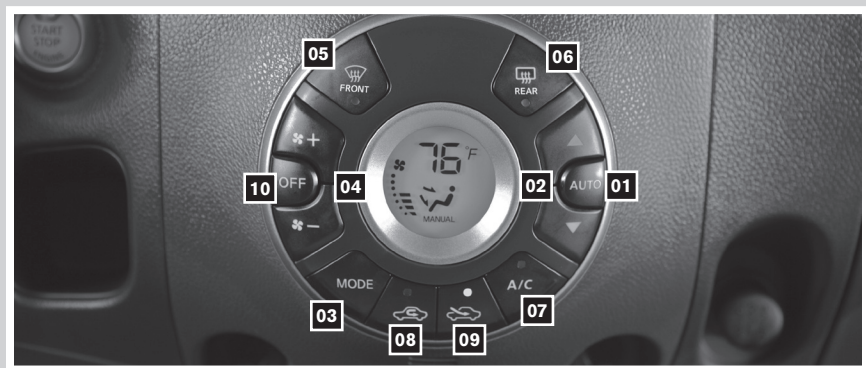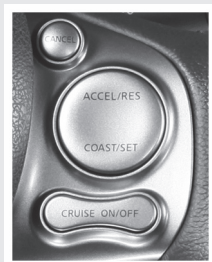

AUTOMATIC CLIMATE CONTROL (if so equipped)

01 AUTO BUTTON






- Press the **AUTO** button **01**. Use the temperature control buttons **02** to set the desired temperature. This will allow the fan speed, air flow distribution and temperature to be automatically maintained at the selected temperature.
- To disable auto mode, press the **MODE** button **03**, one of the fan speed control buttons **04** or the front defroster control button **05**.

02 TEMPERATURE CONTROL BUTTONS



- Press the temperature control buttons **02**, up ▲ to increase the temperature or down ▼ to decrease the temperature.
- The temperature range is between 60°F and 90°F.

03 MODE BUTTON



Press the **MODE** button **03** to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.
-  Air flows mainly from the defroster vents.



04 FAN SPEED CONTROL BUTTONS

- Press the  (slower) or  (faster) button to adjust the fan speed.
- Using the fan speed control buttons will disable the auto mode; to resume auto mode, press the **AUTO** button **01**.

05 DEFROSTING/DEMISTING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The A/C automatically turns on when the defroster mode is selected.
- Use the temperature control buttons **02** to set the desired temperature.
- To set the defroster on high, press the fan speed control button  to increase the fan speed to the maximum setting.






06 DEFROSTING REAR WINDOW AND OUTSIDE HEATED MIRRORS (if so equipped)

- Push the rear window defroster switch  on.
- Push the rear window defroster switch  again to manually turn the defroster off.
- This function automatically turns off after approximately 15 minutes.


07 A/C BUTTON

Press the **A/C** button to manually turn the A/C on or off.

08 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle; the indicator light on the button will illuminate.
- The air recirculation mode can only be selected if the air flow mode control is in the following positions: ,  or .
- Press and hold the air recirculation button  for more than 2 seconds to set automatic control for the air recirculation and outside air circulation modes.

09 OUTSIDE AIR BUTTON

Press the outside air button  to draw fresh air into the vehicle; the indicator light on the button will illuminate.

10 OFF BUTTON

Press the **OFF** button to turn the climate control system off.




FM/AM/SAT* RADIO WITH CD PLAYER (if so equipped)

01 SCAN BUTTON

Press the **SCAN** button to stop at each broadcasting station (FM, AM or XM®) for 5 seconds. Pressing the button again during this 5-second period will stop scan tuning and the radio will remain tuned to that station.

02 EJECT BUTTON

Press the  button. The CD will eject.

03 STATION SELECT BUTTONS

Your radio is equipped with three separate banks, each with six station presets. Choose a radio band AM, FM1 or FM2 using the **FM/AM** button. Tune to the desired station using SEEK/CAT or SCAN tuning. Press and hold any of the desired STATION SELECT buttons (1 - 6) until a beep is heard. The station is now set in memory.

04 RDM and 05 RPT BUTTONS

Press the **RDM** or **RPT** buttons to change the play pattern while listening to a CD or iPod®/USB.

06 SEEK/CAT BUTTONS

- To scan through each broadcasting station, press the **SEEK/CAT** buttons.
- To skip from one track to another on a CD, iPod® or USB device, press the **SEEK/CAT** buttons.
- To rewind or fast forward a CD, iPod® or USB device, press and hold the **SEEK/CAT** buttons. Release the buttons to return to normal play.

07 FM/AM BUTTON

Pressing the **FM/AM** button will change the band to either AM, FM1 or FM2 radio stations.

08 CD BUTTON

Press the **CD** button to play a CD.

09 AUX BUTTON

Press the **AUX** button to play a compatible device such as an MP3 player when it is plugged into the **AUX** (auxiliary) jack. The **AUX** button is also used to play a device plugged into the **USB** jack. If there are devices plugged into both the **AUX** jack and the **USB** jack, pressing the **AUX** button will toggle between the two functions. If so equipped, you can also press the **AUX** button to access XM® SAT1 and SAT2 preset banks.

NOTE: You may need to adjust the volume on any compatible device plugged into the auxiliary jack to find the most desired sound level of the audio system.

10 ENTER/SETTINGS BUTTON AND 11 TUNE/SCROLL CONTROL DIAL

- To manually tune the radio, turn the **TUNE/SCROLL** dial. If playing a CD that is formatted with MP3/WMA folders, turn the **TUNE/SCROLL** dial to scroll through the available folders.
- To adjust the Bass, Treble, Fade, Balance, Speed Sensitive Volume (SSV), Brightness, Contrast and Clock (ON/OFF) press the **ENTER/SETTINGS** button until the desired mode is displayed, then turn the **TUNE/SCROLL** dial to adjust to the desired level.

12 iPod® PLAYER OPERATION (if so equipped)

The **USB** jack is located in the lower center of the instrument panel. Connect the cable that is supplied with your iPod® to the outlet, and then attach the other end of the cable to your iPod®. If compatible, the battery of your iPod® will charge during the connection to the vehicle.

PLAYING AN iPod®

The interface for iPod® operation shown on the vehicle center display is similar to the iPod® interface. The iPod® can only be operated by the vehicle audio controls while connected.

Select the iPod® by using one of the following methods:

- Press the **12 iPod®/MENU** button.
- Press the **SOURCE** select switch on the steering wheel.

SEEK/CAT BUTTONS AND TUNE/SCROLL DIAL

- Press the **SEEK/CAT** buttons while a track is being played; the next track or the beginning of the current track will be played.
- Press and hold either **SEEK/CAT** (rewind or fast forward) button for more than approximately 1.5 seconds, the track will play while rewinding or fast forwarding. When the **SEEK/CAT** (rewind or fast forward) button is released, the track will return to the normal playing speed.
- Press the **iPod MENU** button, then use the **TUNE/SCROLL** dial to scroll through the menu (Playlists, Artists, Albums, Songs, Podcasts, Genres, Composers and Audiobooks) and press **ENTER** to make a selection. The display will return to the previous menu or list screen each time the **iPod MENU** button is pressed.
- If the system is turned off while the iPod® is playing, the iPod® will start when the **ON/OFF** or **iPod MENU** button is pressed. Depending on the iPod® or software version, some functions may not work as described.

*XM® Satellite Radio is only available on vehicles equipped with optional XM® Satellite subscription service.

CLOCK SET/DISPLAY ADJUSTMENT

- Press the **ENTER/SETTINGS** button **10** until the on-screen clock mode is displayed, then turn the **TUNE/SCROLL** dial **11** to toggle between clock display on or off.
- To adjust the time, press the **ENTER/SETTINGS** button repeatedly until the Clock Adjust mode is displayed on the screen.
- The hours will begin blinking, adjust by turning the **TUNE/SCROLL** dial left or right and press the setting control knob.
- The minutes will begin blinking, adjust by turning the **TUNE/SCROLL** dial left or right and press the **ENTER/SETTINGS** button to set. The display will return to the regular clock display after 10 seconds.

USB JACK WITH iPod® CONNECTIVITY (if so equipped)

The **USB** input jack is located in the lower center of the instrument panel.

- To connect a compatible USB device, open the protective cover on the **USB** jack, and insert the USB device into the jack. When a compatible storage device is plugged into the jack, compatible audio or video files on the storage device can be played through the vehicle's audio system. Video file playback is only available on vehicles with navigation.
- To connect an iPod®, open the **USB** jack cover, connect the USB end of the cable supplied with your iPod® to the jack, then connect the other end of the cable to the iPod®. When the ignition switch is in the ACC or ON position, the battery of your iPod® (if compatible) will charge while connected to your vehicle.



VEHICLE INFORMATION DISPLAY

When the ignition switch is placed in the ON position, the vehicle information display shows the following information:

- Outside air temperature (if so equipped)
- Continuously Variable Transmission (CVT) position indicator (if so equipped)
- Odometer/Instrument brightness control
- Twin trip odometer/Trip computer

To display modes of the trip computer press the trip button **01** to highlight the desired mode. Press the trip button **01** for 1 second to reset the information in the highlighted mode.



REARVIEW MONITOR (if so equipped)

When the shift lever is moved to the R (REVERSE) position, the monitor display will automatically change to show the area directly behind the vehicle. The colored lines on the display screen indicate approximate distances to objects.

- Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



CONTINUOUSLY VARIABLE TRANSMISSION (CVT) (if so equipped)

- The CVT does not produce a gear change sensation like traditional automatic transmissions.
- R (REVERSE) speed for CVT vehicles is limited to 15 MPH (24 km/h).

The transmission in your vehicle requires a special fluid available only at your NISSAN dealer. No other fluid will meet the exact requirements of the CVT.

OVERDRIVE (O/D) OFF SWITCH

- Each time your vehicle is started, the CVT is automatically "reset" to Overdrive on.
- To turn Overdrive mode off, push the **O/D OFF** switch **01** . The **O/D OFF** light in the instrument panel will illuminate.
- Use the Overdrive off mode when you need improved engine braking.




6-SPEED MANUAL TRANSMISSION (if so equipped)

LOCK OUT

- In 6-speed manual transmission equipped vehicles, the shift lever is equipped with a Reverse Lock-Out feature that prevents accidental selection of Reverse (instead of 1st gear).

SHIFTING TO REVERSE

- Lift up on the collar just below the shift knob, then move the shift lever left and up into R (REVERSE).

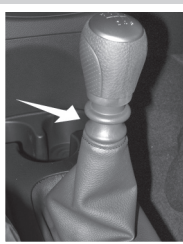

VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH

The Vehicle Dynamic Control (VDC) system monitors driver inputs and vehicle motion. Under certain conditions, it controls braking and engine output to help the driver in handling the vehicle. VDC does not prevent accidents due to careless or dangerous driving techniques. Always be mindful of vehicle speed and driving conditions. VDC may need to be temporarily shut off if you are trying to free a vehicle stuck in snow or mud.



- Push the Vehicle Dynamic Control (**VDC**) **OFF** switch to deactivate the VDC system. The **VDC OFF** light will illuminate in the instrument panel gauge area.
- Push the Vehicle Dynamic Control (**VDC**) **OFF** switch again to activate the VDC system. The **VDC OFF** light will turn off in the instrument panel gauge area.
- The VDC system is active while the vehicle is running until the switch is pushed to turn off.



FRONT PASSENGER AIR BAG STATUS LIGHT

This vehicle is equipped with the NISSAN Advanced Air Bag System. Under some conditions, depending on the type of occupant or object detected in the front-passenger's seat by the occupant classification sensor, the front passenger air bag is designed to automatically turn **OFF**. When the front passenger air bag is **OFF**, the front passenger air bag status light will illuminate.* For example:




- When the system detects that the front-passenger's seat is occupied by a small adult, child or child restraint as outlined in the Owner's Manual, the  **will illuminate** to indicate that the front passenger **air bag is OFF and will not inflate in a crash**.
- When the front-passenger's seat is occupied and the passenger meets the conditions outlined in the Owner's Manual, the  **will not illuminate** to indicate that the front passenger **air bag is operational**.

***When the system detects that the front-passenger's seat is unoccupied, the front passenger air bag status light will not illuminate even though the front passenger air bag is OFF.**

TIRE PRESSURE MONITORING SYSTEM (TPMS)


This system monitors tire pressure. If the low tire pressure warning light illuminates, check the tire pressure in all four tires.

Adjust the low tire pressure to the recommended COLD tire pressure shown on the Tire and Loading Information label located in the driver's door opening. After tire pressures are adjusted, the vehicle will need to be driven at speeds above 16 MPH (25 km/h) to activate the TPMS and turn off the low tire pressure warning light.

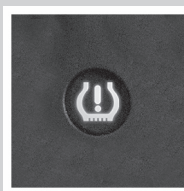


SEAT BELT WARNING LIGHT AND CHIME

- The light and chime remind you to fasten your seat belts. The light illuminates whenever the ignition switch is placed in the ON or START position and remains illuminated until the driver's seat belt is fastened. At the same time, the chime sounds for approximately 6 seconds unless the driver's seat belt is securely fastened.
- With the ignition switch ON, the seat belt warning light may also illuminate if the front-passenger's seat is occupied with the front-passenger's seat belt unfastened.

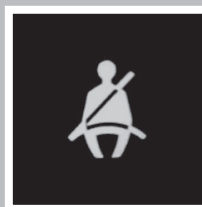

CHILD SAFETY REAR DOOR LOCKS

- The child safety lock levers are located on the edge of the rear doors.
- Child safety locks help prevent the rear doors from being opened accidentally, especially when small children are in the vehicle.
- When the lever is in the LOCK position, the door can only be opened from the outside.

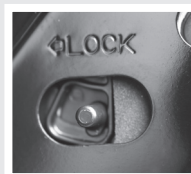

FUEL-FILLER DOOR RELEASE

The fuel-filler door release is located on the lower left side of the instrument panel next to the hood release.

- To open the fuel-filler door, pull the release handle.
- To lock, close the fuel-filler door securely.



TILT STEERING COLUMN


TILT ADJUSTMENT

- Push the lock lever down **01**.
- Move the steering wheel up or down and stop in the desired position.
- Pull up on the lock lever **01** to lock the steering wheel in position.




FRONT SEAT ADJUSTMENTS

- Pull up on the lever **01** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- Pull up on the lever **02** on the side of the seat to adjust your seatback forward or backward. Release the lever when you have found a comfortable angle and the seat belt fits properly.

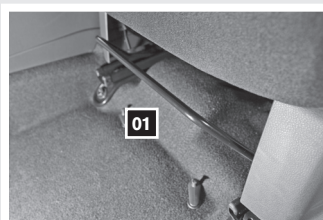

SEAT LIFTER (driver's seat)


- Pull up or push down on the adjusting lever **03** repeatedly to adjust the seat height.

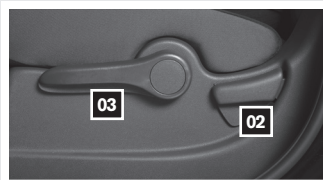

REAR SEAT ADJUSTMENTS

ADJUSTING THE REAR BENCH SEAT

- Pull up on the lever **01** under the front of the seat and slide forward or backward. The seat will slide in 3 fixed positions. Release the lever to lock the seat in position.
- To recline the seatback, pull the strap **02** and lean back. To bring the seatback forward, pull the strap and lean forward. Release the strap to lock the seatback in position.

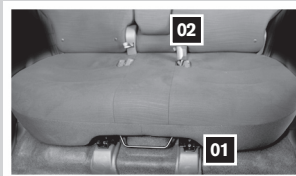

FOLDING DOWN THE REAR BENCH SEAT



- To fold the seats flat, secure the seat belts on the seat belt hooks on the side wall. Release the connector tongue of the rear center seat belt from the buckle, then store the connector and seat belt tongues on the seat belt hook.
- Before folding down the seatback, tuck the seat belt buckles into the seat cushion pockets.
- Fold the seatback down by pulling the adjusting strap **01**.
- To raise the seatback, lift up each seatback and push it to the upright position until it is latched.
- After raising the seatback, pull the seat belt buckles out of the seat cushion pockets until they are fully extended before using the seat belts.



BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)



With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth® wireless technology and voice recognition to provide hands-free cellular phone communication.

SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- Speak in a clear and natural voice without pausing between words.
- To go back to the previous command, say "Go back" or "Correction."
- To cancel a voice recognition session, simply wait 5 seconds; say "Cancel," "Quit" or press the  button.

Bluetooth®
controls location



- To increase or decrease the volume of the voice prompts, press the **VOL** (volume) control switch  **+** or  **-** on the steering wheel or turn the **POWER/VOLUME** knob on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner's Manual for detailed information.
- Some commands are not available while the vehicle is in motion.
- The "Help" command can be used in any menu to hear a list of available commands.
- Please refer to the cellular phone manufacturer's Owner's Manual for detailed information regarding your Bluetooth® phone.
- **For recommended phones and detailed instructions, please visit www.nissanusa.com/bluetooth.**


CONNECTING YOUR PHONE

To use the hands-free feature, you need to set up, or connect, the system to recognize your compatible cellular phone(s). Five compatible Bluetooth®-enabled phones can be connected. After setup, the system automatically connects with a connected phone when the ignition is in the ACC or ON position, as long as the phone is on and in the vehicle.


NOTE: Some cellular phones require the user to enable the automatic reconnection feature. Please refer to the cellular phone manufacturer's Owner's Manual for Bluetooth® setup information.

CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say "Connect Phone."
3. The system acknowledges the previous command and announces the next set of available commands. Say "Add phone."
4. Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit **www.nissanusa.com/bluetooth**.
 - When prompted for a Passkey code, enter "1234" from the handset. (The Passkey code is assigned by NISSAN and cannot be changed.)
5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.




MAKING A PHONE CALL

1. Press the  button.
2. After the tone, do one of the following:
 - Say "Call." After the system responds, say the name of the person in the phonebook.
 - Say "Call Phone Number." After waiting for the tone, say [number]. For example, say "Call Phone Number." After waiting for the tone, say "123-456-7891."
 - Say "Redial" to redial the previous phone number.

- Say "Call Phone Number." After the system responds, say "Special Number" to dial more than 10 digits or special characters.
- You can say all the digits of a 7- or 10-digit phone number at one time.
- For a 10-digit number, saying the phone number in groups of 3, 3 and 4 digits may improve recognition for some speakers. To use this group dialing method, say only the first 3 digits of the phone number. After the system recognizes the number, it will request the next 3 digits and finally the last 4 digits.
- If a phone number is incorrectly recognized, you can try entering the phone number again using the 3-3-4 group dialing procedure by saying "Correction."
- When you have finished speaking the phone number wait for the system to repeat it back to you, then say "Dial."

RECEIVING/ENDING A PHONE CALL

When you receive a phone call, a ring tone sounds through the audio system.

- To accept the call, press the  button. To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.


HOW TO SAY NUMBERS

NISSAN Voice Recognition permits numbers to be spoken in a variety of ways.

- Say "zero" or "oh" for "0." Example: 1-800-662-6200 – Say "one eight zero zero six six two six two oh oh."
- Say "pound" for "#." Say "star" for "*" (available when using the "Call Phone Number" then "Special Number" command and the "Send" command during a call).
- Say "plus" for "+" (available only when using the "Call Phone Number" then "Special Number" command).
- Say "pause" for a 2-second pause.


USING YOUR PHONEBOOK

When a compatible phone is connected to the system, the phonebook is automatically downloaded. This allows you to access your phonebook from the Bluetooth® system to call contacts by name. Up to 1,000 phone numbers will be transferred. To access your phonebook:

1. Press the  button and wait for the tone.
2. Say "Phonebook."
3. Wait for the tone, then say [a name] or say "List names." The name must be said exactly as it is entered in your phonebook for the system to recognize it. For example, say "Phonebook" then after the system responds, say "Michelle."

The phonebook can transfer multiple numbers for each entry. If you select a name with multiple numbers, the system will ask you which number you want to dial.

The system allows for up to 40 voice tags to be recorded. You can record a voice tag for phonebook entries that the system has difficulty recognizing or to directly dial an entry with multiple numbers. To record a voice tag:

1. Press the  button and wait for the tone.
2. Say "Phonebook."
3. Wait for the tone, then say [a name] or say "List names." Select the name for which you want to record a voice tag.
4. Say "Record Name."



Nissan, the Nissan Brand Symbol, "SHIFT_" tagline,
Z and Nissan model names are Nissan trademarks.
© 2009 Nissan North America, Inc.
QR0E-0Z12U0
Printing: October 2009 (03)

