



GS4 USER MANUAL TOC

WARNINGS AND TRADEMARKS	W-1
~ WARNING ~	W-1
Trademarks.	W-1
~ AVERTISSEMENT ~	W-2
Marques de commerce	W-2
Warnings.	W-3
DURAPULSE GS20 & GS20X USER MANUAL REVISION HISTORY.	H-1
DURAPULSE GS20 & GS20X DRIVE USER MANUAL TABLE OF CONTENTS	TOC-1
CHAPTER 1: GETTING STARTED.	1-9
User Manual Overview	1-10
Overview of this Publication	1-10
Who Should Read This Manual.	1-10
Supplemental Publications	1-10
Technical Support	1-10
Produced By	1-10
Special Symbols	1-10
Purpose of AC Drives	1-11
Selecting the Proper Drive Rating	1-11
Determine Motor Full-Load Amperage (FLA)	1-11
Determine Motor Overload Requirements	1-11
Determine Application Type; Constant Torque or Variable Torque	1-11
Installation Altitude	1-12
Determine Maximum Enclosure Internal Temperature	1-13
Derate Output Current Based on Carrier Frequency (if necessary)	1-15
GS20(X) Variable Torque Carrier Frequency Derating.	1-15
DURAPULSE GS20 & GS20X AC Drive Environmental Information	1-17
Storage and Transportation.	1-17
GS20 Environmental Conditions	1-17
GS20X Environmental Conditions	1-17
GS20 & GS20X General Specifications.	1-18
DURAPULSE GS20 AC Drive Specifications	1-19
120V Class – 1-Phase Model-Specific Specifications	1-19
230V Class – 1-Phase Model-Specific Specifications	1-20
230V Class – 3-Phase Model-Specific Specifications	1-21
230V Class – 3-Phase Model-Specific Specifications	1-22
460V Class – 3-Phase Model-Specific Specifications	1-23
460V Class – 3-Phase Model-Specific Specifications	1-24
575V Class – 3-Phase Model-Specific Specifications	1-25

DURAPULSE GS20X AC Drive Specifications	1-26
230V Class – 1-Phase Model-Specific Specifications	1-26
230V Class – 3-Phase Model-Specific Specifications	1-27
460V Class – 3-Phase Model-Specific Specifications	1-28
Receiving and Inspection	1-29
Drive Package Contents	1-29
Model Number Explanation	1-30
Nameplate Information	1-30
CHAPTER 2: INSTALLATION AND WIRING	2-1
Drive Models by Frame Size	2-2
Installation	2-2
Minimum Clearances and Air Flow	2-3
GS20 Series Minimum Clearance Distances	2-3
GS20 Airflow and Power Dissipation	2-4
GS20X Series Minimum Clearance Distances	2-5
GS20X Airflow and Power Dissipation	2-5
Dimensions	2-6
Circuit Connections – RFI Jumper	2-16
RFI Jumper Removal	2-16
Isolating Main Power from Ground	2-17
Floating Ground System (IT Systems)	2-18
Asymmetric Ground System (Corner Grounded TN Systems)	2-18
Circuit Connections – Warnings and Notes	2-19
Danger!	2-19
Wiring Terminal Access	2-23
Control Terminal Access	2-23
Main Circuit Wiring Terminals	2-24
Main Terminal Specifications	2-24
Wiring Terminal Connector Dimensions – Main-Circuit Terminals	2-26
Main Terminal Diagrams	2-28
Main Circuit Wiring Diagrams	2-31
Control Circuit Wiring Terminals	2-31
GS20 & GS20X Control Terminal Specifications	2-31
GS20 & GS20X Control Terminal Block Diagram & Wiring Specifications	2-34
Control Terminal Wiring Instructions	2-35
Control Circuit Wiring Diagrams	2-36
Digital Inputs	2-36
System Wiring Diagram	2-37
Full I/O Wiring Diagram	2-38
Wiring Terminal Connector Dimensions – Main-Circuit Terminals	2-26
Main Terminal Diagrams	2-28
Main Circuit Wiring Diagrams	2-31
Control Circuit Wiring Terminals	2-31
GS20 & GS20X Control Terminal Specifications	2-31
GS20 & GS20X Control Terminal Block Diagram & Wiring Specifications	2-34
Control Terminal Wiring Instructions	2-35
Control Circuit Wiring Diagrams	2-36
Digital Inputs	2-36
System Wiring Diagram	2-37

Full I/O Wiring Diagram.	2-38
CHAPTER 3: KEYPAD OPERATION AND QUICKSTART	3-1
The DURApulse GS20 & GS20X Digital Keypad.	3-2
Keypad Indicator LEDs.	3-3
GS20(X) Keypad Operation.	3-4
GS20(X) Keypad Function Examples	3-4
Main Page	3-5
Frequency Command Settings	3-5
Parameter Settings	3-6
PLC Settings	3-6
Setting Direction.	3-7
Application Settings.	3-7
Reference Table for Digital LED Character Display	3-9
CHAPTER 4: AC DRIVE PARAMETERS	4-1
Introduction	4-3
Video Tutorials.	4-3
DURAPULSE GS20(X) Parameter Summary	4-3
Drive Parameters Summary (P00.xx)	4-3
Basic Parameters Summary (P01.xx)	4-10
Digital Input/Output Parameters Summary (P02.xx)	4-14
Analog Input/Output Parameters Summary (P03.xx)	4-20
Multi-Step Speed Parameters Summary (P04.xx)	4-23
Motor Parameters Summary (P05.xx)	4-24
Protection Parameters Summary (P06.xx)	4-27
Special Parameters Summary (P07.xx)	4-33
High-Function PID Parameters Summary (P08.xx)	4-36
Communication Parameters Summary (P09.xx)	4-38
Speed Feedback Control Parameters Summary (P10.xx)	4-41
Advanced Parameters Summary (P11.xx)	4-43
Macro / User Defined Macro Parameters Summary (P13.xx).	4-45
Protection Parameters (2) Summary (P14.xx)	4-47
DURAPULSE GS20(X) Parameter Details.	4-49
Explanation of Parameter Details format	4-49
Group P00.xx Details – Drive Parameters	4-50
Group P01.xx Details – Basic Parameters	4-71
Group P02.xx Details – Digital Input/Output Parameters.	4-82
Group P03.xx Details – Analog Input/Output Parameters	4-103
Analog Input Parameter Examples	4-115
Group P04.xx Details – Multi-Step Speed Parameters	4-138
Group P05.xx Details – Motor Parameters.	4-140
Group P06.xx Details – Protection Parameters	4-149
Group P07.xx Details – Special Parameters	4-174
Group P08.xx Details – High-function PID Parameters	4-187
Group P09.xx Details – Communication Parameters	4-202
Group P10.xx Details – Speed Feedback Control Parameters	4-219
Group P11.xx Details – Advanced Parameters.	4-228
Group P13.xx Details – Macro / User Defined Parameters	4-237
Group P14.xx Details – Protection Parameters (2).	4-250
Adjustments and Applications	4-256

FOC sensorless vector mode with standard induction motor (IM) adjustment procedure	4-256
TQC sensorless vector mode standard induction motor (IM) adjustment procedure	4-260
PMSVC mode with permanent magnet motor (PM) adjustment procedure	4-262
Torque Calculation and Torque Parameter Setup Reference.	4-266
Drive Motor Torque Calculation	4-266
GS20 Drive - Torque Limit in Speed Mode Detailed Explanation	4-267
Speed Mode with Torque Limits via Analog Input	4-268
GS20 Drive Quick Reference- Alternating between Torque and Speed Mode	4-269
CHAPTER 5: SERIAL COMMUNICATIONS	5-1
Communications Parameters Summary	5-2
Summary – Serial Communication Parameters	5-2
Serial Modbus Status Addresses	5-6
Status Addresses (Read Only).	5-6
Serial Communications Overview	5-9
Serial Communications Connectivity.	5-9
Minimum AC Drive Parameter Settings For Serial Communication	5-9
Common Third-Party Modbus RTU Masters.	5-10
AutomationDirect PLCs as Modbus Master	5-10
Connecting Communication Cables	5-11
Detailed Serial Modbus Communication Information	5-13
Data Format	5-13
Communication Protocol	5-14
CMD (command code) and DATA (data characters)	5-15
Common Third-Party Modbus RTU Masters.	5-10
AutomationDirect PLCs as Modbus Master	5-10
Connecting Communication Cables	5-11
Detailed Serial Modbus Communication Information	5-13
Data Format	5-13
Communication Protocol	5-14
CMD (command code) and DATA (data characters)	5-15
CHAPTER 6: MAINTENANCE AND TROUBLESHOOTING	6-1
Maintenance and Inspections	6-2
Monthly Inspection	6-2
Annual Inspection	6-2
Recharge Capacitors (for drives not in service)	6-3
Recommended Inspection Schedules	6-4
Troubleshooting	6-8
Warning Codes.	6-8
Fault Codes.	6-25
Typical AC Drive Problems and Solutions	6-51
Grease and Dirt Problems.	6-51
Fiber Dust Problem	6-52
Corrosion Problem.	6-53
Industrial Dust Problem.	6-54
Wiring and Installation Problem	6-55
Digital Input/Output Terminal Problems.	6-56
CHAPTER 7: GSOF2 – GETTING STARTED	7-1
GS20(X) Drive Configuration Software.	7-2
System Requirements	7-2

Installation Guide	7-3
System Requirement Configuration	7-3
Software Installation.	7-4
Opening GSoft2 Software Program	7-6
Software Functions	7-7
Firmware Upgrade Notes.	7-10
GSoft2 Help File Note.	7-10
CHAPTER 8: GSLOGIC INTRODUCTION	8-1
Purpose of This Chapter	8-2
For More Detailed Information.	8-2
GSLogic Introduction	8-2
GS20(X) PLC Summary	8-3
Introduction	8-3
Notes on Using GSLogic, the GS20(X) PLC, and the GS20(X) Drive	8-4
Getting Started	8-7
Connect to PLC.	8-7
Controlling Drive IO with the PLC	8-9
Installation of GSLogic Programming Software.	8-11
System Requirements	8-11
About Getting Started.	8-11
Software and Online Help Files.	8-11
Technical Support	8-11
Installing GSLogic Programming Software	8-12
Program Writing.	8-14
Connecting GSLogic PC to GS20(X) PLC.	8-14
Basic Ladder Program Example.	8-19
Program Download	8-21
Program Monitoring.	8-22
GS20(X) GSLogic Program Examples.	8-23
APPENDIX A: ACCESSORIES.	A-1
Fuses/Circuit Breakers.	A-2
Recommended Fuse Specifications for the DC-side of Common DC-Bus	A-4
Standard Footprint EMC Filter and Zero Phase Reactor	A-5
Filter Dimensions	A-7
High Performance EMI Input Filters	A-8
EMI Filter Installation	A-9
Recommended Motor Cable Length.	A-10
Line Reactors / Voltage Time Filters	A-11
Line/Load Reactors Selection Charts.	A-13
Line Reactor Applications and Wiring Connections.	A-14
Recommended Cable Length.	A-16
Dynamic Braking	A-18
Braking Units.	A-18
Choosing and Installing a Braking Resistor	A-19
EMC Shield & Earthing Plates	A-20
GS20 EMC Shield Plates.	A-20
GS20X Earthing Plates.	A-24
Capacitive Filter (GS20A-CAPF).	A-27

Conduit Box	A-29
Conduit Box Installation.	A-31
Disconnect Switch.	A-33
Disconnect Switch Compatibility.	A-33
DSC Series Dimensions	A-33
Installing the Disconnect Switch	A-34
Replacement Fan Kit	A-37
Remote Keypad Mounting	A-40
DIN Rail Mounting	A-41
GS20 DIN Rail Installation.	A-42
Mounting Adapter Plate	A-43
Mounting Adapter Plate Dimensions	A-44
Mounting Adapter Plate Installation	A-46
Optional Advanced Keypad.	A-48
GS20(X) Display Screens for GS4-KPD	A-51
Keypad Fault Codes	A-59
Keypad Panel Mounting Kit GS4-BZL	A-60
GS20(X) Display Screens for GS4-KPD	A-51
Keypad Fault Codes	A-59
Keypad Panel Mounting Kit GS4-BZL	A-60
APPENDIX B: OPTIONAL I/O AND COMMUNICATION CARDS.	B-1
Introduction	B-2
Option Card Installation.	B-2
Removing the Card Slot Cover	B-2
Option Card Wiring	B-3
GS20A-BPS.	B-8
GS20A-CM-ENETIP	B-9
Connecting Comm Card to PC	B-10
GS20A-CM-ENETIP LED Indicators and Troubleshooting.	B-11
GS20A-CM-ENETIP IP Address and Network Configuration	B-13
GS20A-CM-ENETIP Common Parameters	B-14
Modbus TCP or EtherNet/IP Protocol Selection.	B-15
Modbus TCP Protocol Configuration	B-16
GS20A-CM-ENETIP Control Words - Modbus Addressing	B-16
GS20A-CM-ENETIP Status Words - Modbus Addressing.	B-17
EtherNet/IP Protocol	B-20
GS20A-CM-ENETIP EtherNet/IP I/O Messaging (Implicit Messaging).	B-20
GS20(X)-CM-ENETIP Explicit Messaging.	B-26
GS20A-CM-ENETIP EtherNet/IP Basic Registers.	B-30
GS20A-CM-ENETIP EtherNet/IP Alarm Register.	B-31
EtherNet/IP Communication Card Register Settings	B-32
Using Speed Mode as a Control Method	B-32
APPENDIX C: DIGITAL AND ANALOG I/O PARAMETER MAPS	C-1
Introduction	C-2
GS20(X) Digital Inputs.	C-3
GS20(X) Digital Outputs	C-4
GS20(X) Analog Common Parameters.	C-5
GS20(X) Analog Input 1 Parameters	C-5

GS20(X) Analog Input 2 Parameters	C-6
GS20(X) Analog Output 1 Parameters	C-8
GS20(X) Frequency Output Parameters	C-8
APPENDIX D: USING GS20(X) AC DRIVES WITH AUTOMATIONDIRECT PLCs.	D-1
Appendix D Overview	D-2
Sinking/Sourcing Basics	D-2
GS20(X)-to-PLC I/O Wiring Examples	D-4
Drive Wired with DC Sinking Inputs (PLC output card is sourcing)	D-4
Drive Wired with DC Sourcing Inputs (PLC output card is sinking)	D-4
Drive Wired with DC Sinking Outputs (PLC input card is sourcing)	D-5
Drive Wired with DC Sourcing Outputs (PLC input card is sinking)	D-5
Drive Relay Outputs Wired with Sinking PLC Modules	D-6
Drive Relay Outputs Wired with Sourcing PLC Modules	D-6
Drive Analog Inputs	D-7
Analog Input Wired for Voltage and Current	D-7
Drive Analog Outputs	D-8
Analog Output Wired for Voltage and Current	D-8
Drive Frequency Output (High-speed pulse output)	D-9
Communication with GS20(X) Drives	D-10
Getting Started	D-10
Serial Modbus Monitoring and Control	D-12
Ethernet/IP and Modbus TCP Monitor and Control	D-17
GS20A-CM-ENETIP EtherNet/IP I/O Messaging (Implicit Messaging)	D-18
Program Examples Using AutomationDirect PLCs	D-19
Modbus RTU CLICK Program Example	D-19
EtherNet/IP Productivity PLC Example	D-26
APPENDIX E: SAFE TORQUE OFF FUNCTION	E-1
Introduction	E-2
Safe Function Failure Rate	E-2
Safe Torque Off Terminal Function Description	E-2
Internal STO Circuit Wiring Diagrams	E-3
Control Loop Wiring	E-4
STO Parameters	E-5
Timing Diagram Description	E-6
Error Code and Troubleshooting Instructions	E-9
Test and Fault Confirmation	E-11
APPENDIX F: PID CONTROL	F-1
Function of PID Control	F-2
What Does PID Control Accomplish?	F-2
PID Control Analogy	F-2
Common Applications for PID Control	F-3
Definition of PID Loop "Directions"	F-3
Forward-Acting PID Loop (Heating Loop) (Negative-Feedback Loop)	F-3
Reverse-Acting PID Loop (Cooling Loop) (Positive-Feedback Loop)	F-3
PID Control Overview	F-4
Concept of GS20(X) PID Control & Tuning	F-5
Proportional Gain (P)	F-5
Integral Time (I)	F-5
Derivative Value (D)	F-6

Proportional Integral Control (PI)	F-6
Proportional Derivative Control (PD).	F-6
Proportional Integral Derivative Control (PID)	F-6
Tuning Example for PID Control	F-7
DURApulse GS20/GS20-GS2mode Parameters Involved in PID Control.	F-9
APPENDIX G: GS2 TO GS20 CONVERSION.	G-1
Replacement of GS2 Drives with GS20	G-2
Step 1: Choosing a Compatible GS20 Model	G-3
Step 2: Reviewing the Mounting Dimension Differences.	G-4
Step 3: Reviewing the Fusing Guidelines.	G-6
Step 4: Reviewing the Main Power Wiring Specifications	G-7
Step 5: Reviewing the Control Wiring Specifications	G-9
Step 6: Review GS2 Accessories	G-12
Step 7: Converting Parameter Structure and GS2 Mode (Optional).	G-13
Step 8: Converting Your GS2 GSoft Parameter File to a GS20 GSoft2 File.	G-30