


FARGO® HDP®6600 Lamination Module

PLT-04395, Rev A.1

Installation to a HDP6600 (without a Dual Side Module)

Follow these instructions to connect the HDP6600 Lamination Module directly to a HDP6600 printer, without a Dual Side Module. Alternatively, scan the QR code or visit <http://hid.gl/HDP6600-Lam-upgrade-SS> to view the installation video. Refer to the other side of this sheet if you have a Dual Side Module.

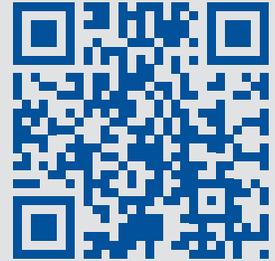

Before you begin:

- Download and install the latest HDP6600 printer driver and firmware from <https://www.hidglobal.com/drivers>
- Switch off the printer and unplug the power cord
- Unplug any USB and Ethernet cables from the printer

1 Remove the output bin from the printer (if attached).

2 Remove the access cover from the printer.

3 Remove the access cover from the lamination module.

4 Move the blue lever on the lamination module down. Align the posts and slide the lamination module into place. Move the blue lever up to lock.

5 Connect the lamination cable to the printer connector (labeled pink).

6 Attach the output hopper supplied with the lamination module. Do not use the output hopper supplied with the printer.

7 Replace the printer and lamination module access covers.

8 Connect the power cords to the printer and the lamination module.

9 Connect the USB/Ethernet cables to the printer (as required) and switch on the printer.

FARGO® HDP®6600 Lamination Module

PLT-04395, Rev A.1

Installation to a HDP6600 with a Dual Side Module

Follow these instructions to connect the HDP6600 Lamination Module to a HDP6600 printer with a Dual Side Module. Alternatively, scan the QR code or visit <http://hid.gl/HDP6600-Lam-upgrade-DS> to view the installation video. Refer to the other side of this sheet if you do not have a Dual Side Module.



Before you begin:

- Download and install the latest HDP6600 printer driver and firmware from <https://www.hidglobal.com/drivers>
- Switch off the printer and unplug the power cord
- Unplug any USB and Ethernet cables from the printer




1 Remove the output bin from the dual side module (if attached).




2 Remove the access cover from the dual side module.



3 Remove the access cover from the lamination module.

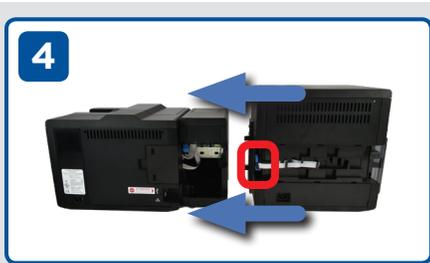

4 Move the blue lever on the lamination module down. Align the posts and slide the lamination module into place. Move the blue lever up to lock.

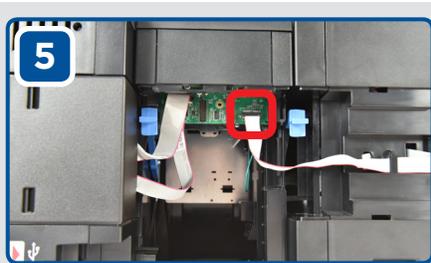

5 Connect the lamination cable to the connector on the dual side module.



6 Attach the output hopper supplied with the lamination module. Do not use the output hopper supplied with the printer.



7 Replace the dual side module and lamination module access covers.
Note: The dual side module cover must be rotated 180°.



8 Connect the power cords to the printer and the lamination module.



9 Connect the USB/Ethernet cables to the printer (as required) and switch on the printer.