

INSTRUCTION MANUAL

Rotating Beacons

TYPE SKS / SKH / SKP

Multi-function Beacons

TYPE SF08 / SF10

Flashing Beacons

TYPE SL08 / SL10 / SL15

Notice to Customer

Thank you very much for purchasing our Patlite products.

- Request the installation and wiring be performed by a professional contractor if construction work is involved.
- Prior to installation, read this manual thoroughly before using this product to ensure correct use.
- In addition, please store this manual for future reference when performing maintenance, repairs or inspections.
- For options and repair parts, please visit our website (<https://www.patlite.com>).
- If there are any questions concerning this product, refer to the contact information at the end of this document and contact your nearest PATLITE Sales Representative.

1 Read this First (Safety Precautions)

- Warning** Failure to observe the following may result in death or serious injury.
- To prevent from short-circuits or damage, observe the following:
 - Be sure the power is disconnected before replacement or repair, including the replacement of the fuse.
 - Use this product in a properly maintained condition. (Replace or repair if the globe, case, etc. are damaged.)
 - If installing this product requires construction work, ask a specialist in order to avoid fire, or personal injury.
 - When this product is used for security purposes, it should be inspected daily.
 - In case a malfunction should occur, it is recommended that you use this product together with other security products.
 - After installation, do not use this product to climb up onto the equipment with. Failure to comply will result in product damage and/or falling off the machinery.

- Caution** Failure to comply with the following points may result in injury, physical loss or damage.
- Be sure to put a fuse in the wiring circuit between the power source and equipment for protection. If a fuse is not added, it may result in product and/or equipment failure.
 - Be sure to prevent electrostatic damage due to discharge when working with this product for wiring, exchanging units, setting up parameters, etc. by discharging static electricity on your body, etc.
 - Do not disassemble or detach during operation.

2 Model Number Configuration

■ SF • SL Models

| Series | Rated Voltage | Installation • Wiring | Buzzer | LED Unit Color |
|--------|-------------------|--|-----------------|----------------|
| Model | ↓ | ↓ | ↓ | ↓ |
| SF | 08 Ø80 | M1 12 - 24 V DC | N No Buzzer | R Red |
| SL | 10 Ø100 | M2 100 - 240 V AC | B With Buzzer * | Y Amber |
| | 15 Ø150 (SL only) | J 3-Screw Mounting • Cabtyre Cable | | G Green |
| | | KT 2-point Hole Type Mounting • Terminal block | | B Blue |
| | | | | |
| | | | | |

* [KT] only (SL15 : No Buzzer)

Model Number Example: SF08-M1KTB-R

- Ø80 • 12 - 24 V DC • 2-point hole type mounting • Terminal block
- With buzzer • Red color



■ SK Model

| Series | Rated Voltage | Installation • Wiring | Buzzer | LED Unit Color |
|--------|---------------|-----------------------------|--------------------------|----------------|
| Model | ↓ | ↓ | ↓ | ↓ |
| S | Ø80 | M1 12 - 24 V DC | [None] No Buzzer | R Red |
| H | Ø100 | M2 100 - 240 V AC | B With Buzzer (SKH only) | Y Amber |
| P | Ø150 | | | G Green |
| | | J Cabtyre Cable | | B Blue |
| | | T Terminal block (SKH only) | | |

Model Number Example: SKH-M1JB-R

- Ø100 • 12 - 24 V DC • Cabtyre Cable • With buzze • Red color

3 Part Names

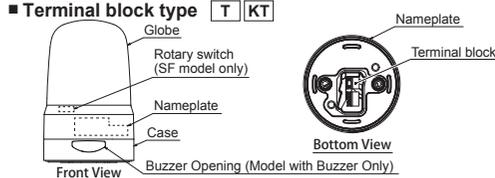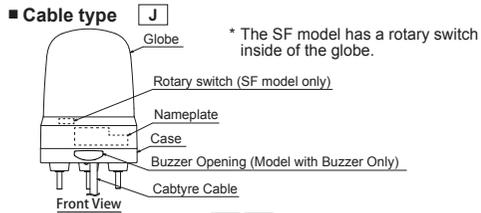

Accessory List


| Model | Name | QTY |
|-----------------------------|------------------------------------|-----|
| SF00-00KT/SL00-00KT | Mounting Bracket, Waterproof Sheet | 1 |
| SF08-00J/SL08-00J/SKS Model | M4 Nut, Plain Washer | 3 |
| SF10-00J/SL10-00J/SKH Model | M5 Nut, Plain Washer | 3 |
| SL15-00J/SKP Model | M8 Nut, Plain Washer | 3 |

4 Installation

- Notice**
- Ensure that the product is installed in an environment that meets the following conditions:
 - Where excessive vibration is not present.
 - On a sturdy surface.
 - On a level surface.
 - When it is necessary to waterproof the backside of the installation surface:
 - Provide a sealant coating around the nuts of the backside of the installation surface.
 - Waterproof the cable mounting area.
 - Ensure that the product is mounted upright when installed outdoors.
 - Ensure that the speaker is facing forward when installing the buzzer models.
 - Depending on your operating environment, additional waterproofing may be required on the Terminal Block openings for SKH-M2T models.

■ 3-Screw Mounting Type [J] [T]

- Insert the bolts of the beacon into the holes of the mounting surface.
- Use the nuts and washer (accessory) to secure in place.

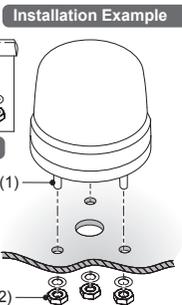

Maximum Board Thickness of Mounting Surface

| Model | Maximum Board Thickness |
|---------------|-------------------------|
| SF08/SL08/SKS | 9 mm |
| SF10/SL10/SKH | 8 mm |
| SL15/SKP | 10 mm |

Installation Dimensions

Refer to the "Installation Manual".

■ 2-point Hole Type Mounting (SF • SL Models) [KT]


3-point Hole Type Mounting (SL15 Model Only) [KT]

- Use the screws or bolts, nuts, to secure the mounting bracket (accessory) to the mounting surface. (Installation screws and nuts are not included with this product. Binding head screws or pan head screws are recommended.)

| Model | Screw Hole Depth of Mounting Bracket | Nominal Diameter |
|-----------|--------------------------------------|------------------|
| SF08/SL08 | 4.4 mm | M4 |
| SF10/SL10 | 5.7 mm | M5 |
| SL15 | 4.8 mm | M8 |

- Check that the O-ring is not twisted.
- Align the main unit of product with the positioning Indicator and turn it clockwise to lock it.

Installation Example

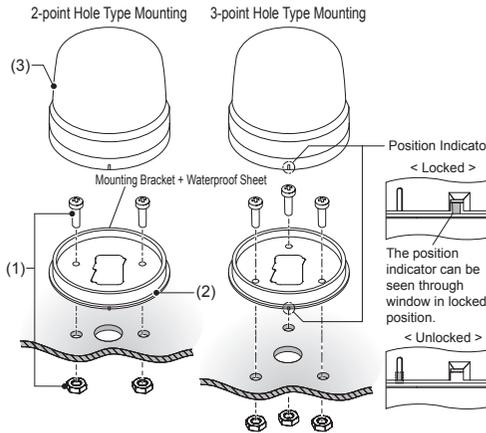

Installation Dimensions

Refer to the "Installation Manual".

- Caution**
- Use a soft cloth moistened with water to clean the globe or case. (Do not use thinner, benzine, gasoline or oil.)
- Note**
- The type with a buzzer, if the buzzer opening is splashed with water, the Sound Pressure Level may drop.

5 Wiring

- Caution**
- Make sure the power is OFF before wiring. A short circuit may damage internal circuits.
 - Ensure the proper working voltage is used. Any mistake in wiring may result in damage.
 - Do not pull the wire, or stuff it inside of this case.
 - Be sure the wiring is done properly. Any mistake in wiring may result in damage.
 - In the M2 model, do not perform blinking control by turning the power supply ON/OFF. Any mistake in wiring may result in damage.
 - Do not apply a voltage to the common wire. (M1 type)
 - Do not apply a voltage to any wire other than the power supply wire. (M2 type)
 - Failure to comply will result in product damage. (except buzzer wire of SKH-M1)
 - Do not expose the wiring from the device. If tension is applied to the wiring, the wiring may be disconnected, resulting in a short circuit or an electric shock.
 - Use either a Contact Switch or Contact Relay for External Contact that power supply wire of SF, SL, SK Models and buzzer wire of SK Model. Failure comply may result in fire, product malfunction.

- Notice**
- The protection rating does not include the Cabtyre Cable ends.
 - If the ends of the it are in contact with water or exposed to dew or condensation, refer to the indications below to dress the wire ends for water resistance.
 - Contact the it ends in a location which will not expose the ends to water.
 - Use Fillers, such as silicon, etc., to seal the it ends.
-

[External contact capacity of power supply wire]

| | M1 | M2 |
|-----------------------|------------|------------|
| Current Capacity (Is) | 3A or more | 1A or more |

[External contact capacity of signal wire and buzzer wire]

SF • SL Models

| | M1 | M2 |
|------------------------|----------------|----------------|
| Current Capacity (Is) | 10 mA or more | 10 mA or more |
| Withstand Voltage (Vs) | 20 V or more | 20 V or more |
| Leakage Current* (IL) | 0.1 mA or less | 0.1 mA or less |

SK Model

| | M1 | M2 |
|------------------------|---------------|---------------|
| Current Capacity (Is) | 0.5 A or more | 0.5 A or more |
| Withstand Voltage (Vs) | 35 V or more | 20 V or more |

[Fuse]

| | |
|-------------|-----------|
| Fuse Rating | 250 V 1 A |
|-------------|-----------|

Wire Type / Wire Gauge

Wire Type : UL2464
 Wire Gauge : [M1] AWG22
 [M2] Power Supply Wire AWG18
 Excluding Power Supply Wire AWG24

Wiring Example

Refer to the "Installation Manual".

Terminal Block Wiring

Recommended lead wire specifications

| Wire Type | Wire Gauge (Solid Wire) | Wire Gauge (Stranded Wire) |
|-----------------|----------------------------|----------------------------|
| UL1007 / UL1430 | 0.13 ~ 1.5 mm ² | AWG28 ~ 14 |

- Temperature rating should be above 75°C, and the conductor material should be of copper wire.

Note

- Strip 8-9 mm of wire insulation from the lead wire to insert into the terminal block.
- Do not tug on to the lead wire to remove- always unlock the lever before removing the wires.
- The tip of the flathead screwdriver should be no more than 2mm wide and 0.5 mm thick.
- Do not put excessive force on the lever, as this may cause the lever to break.

Installation

- Align a flathead screwdriver to the groove of the lever. Press down to release the lock.

Removal

- The stripped side of the lead wire is inserted in the slot. And lock.
- Pull out the lead wire.

6 Specifications

| Model | Rated Voltage |
|-------------------------|---------------------------|
| SF08-M1/SF10-M1 | 12 - 24 V DC (Non-polar) |
| SF08-M2/SF10-M2 | 100 - 240 V AC (50/60 Hz) |
| SL08-M1/SL10-M1/SL15-M1 | 12 - 24 V DC (Non-polar) |
| SL08-M2/SL10-M2/SL15-M2 | 100 - 240 V AC (50/60 Hz) |
| SKS-M1J/SKH-M1J/SKP-M1J | 12 - 24 V DC (Non-polar) |
| SKS-M2J/SKH-M2J/SKP-M2J | 100 - 240 V AC (50/60 Hz) |
| SKH-M1T | 12 - 24 V DC (Non-polar) |
| SKH-M2T | 100 - 240 V AC (50/60 Hz) |

- <Conformity Standards>
- EMC Directive (EN61000-6-4, EN61000-6-2)
 - RoHS Directive (EN50581)
 - UL508, CSA-C22.2 No.14 (File No. E215660)
 - FCC Part 15 Subpart B Class A

<Conformity requirements for the CE Marking>

This product conforms to EN standards and shows the CE Marking. This product has been tested and found to comply with the limits for a Class A device, pursuant to EMC DIRECTIVE. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This product must not be used in residential areas.

<Conformity to FCC Compliance>

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. The equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

- (Note) • Dimensions and specifications may change without notice due to continual product improvement.
- PATLITE and the PATLITE logo is a trademark, or registered trademark of the PATLITE Corporation of Japan and each country.

(Importer for EU)
PATLITE Europe GmbH Am Soeldnermoos 8, D-85399 Hallbergmoos, Germany