

TrekStor i.Beat cebrax

Audible User Guide




System Requirements:

o Windows Operating System(s):	Windows 2000, XP, & Vista	o AudibleManager Version:	5 and above
o Mac Operating System(s):	N/A	o Windows Media Player Version:	11

Audible Features:

o Audible Formats Supported:	2 3 4	o Section Navigation:	Yes
o Bookmarking:	No	o Variable Playback Speed:	No

Device Layout:

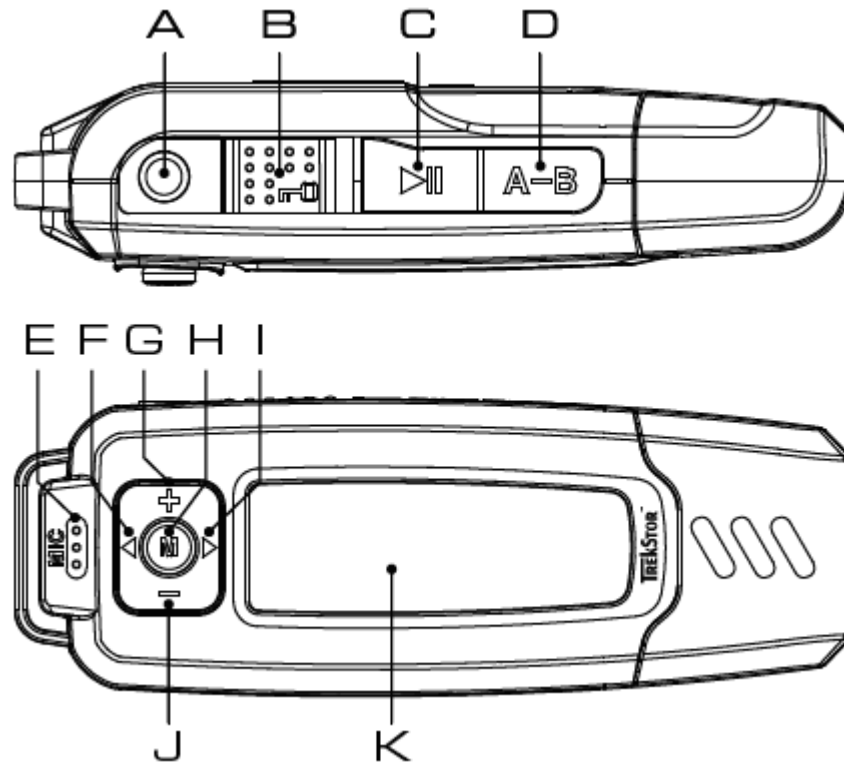

- A. Headphone jack
- B. Lock switch
- C. On/Off/Play/Pause button
- D. A-B button
- E. Microphone
- F. Toggle joystick left to rewind
- G. Toggle joystick up to increase volume
- H. Press joystick to select or to access menu
- I. Toggle joystick right to fast forward
- J. Toggle joystick down to decrease volume

How To's:

Playback - *How do I locate and play Audible content on my device?*

- Step 1.** Hold down the **menu (M)** button for approximately 1 second.
- Step 2.** Push the joystick left or right to highlight **Music** and then press the **(M)** button to enter music mode.
- Step 3.** Using the joystick (left and right) navigate to the title you wish to play and press the **Play/Pause (>||)** button to begin playing the selected title.

Rewind/Fast-Forward - *How do I rewind or fast-forward an Audible book?*

Rewind

- Step 1.** While a title is playing push and hold the joystick to the left.

Fast-Forward

- Step 1.** While a title is playing push and hold the joystick to the right.

Section Navigation - *How do I navigate through sections within an Audible book?*

- Step 1.** While an Audible title is playing press the **A-B** button to turn on Chapter Mode.
- Step 2.** While in Chapter Mode toggle the joystick left to skip back a section. Toggle the joystick right to skip to the next section.