


# WASP Datalogger

## User Guide

Updated: October 2013

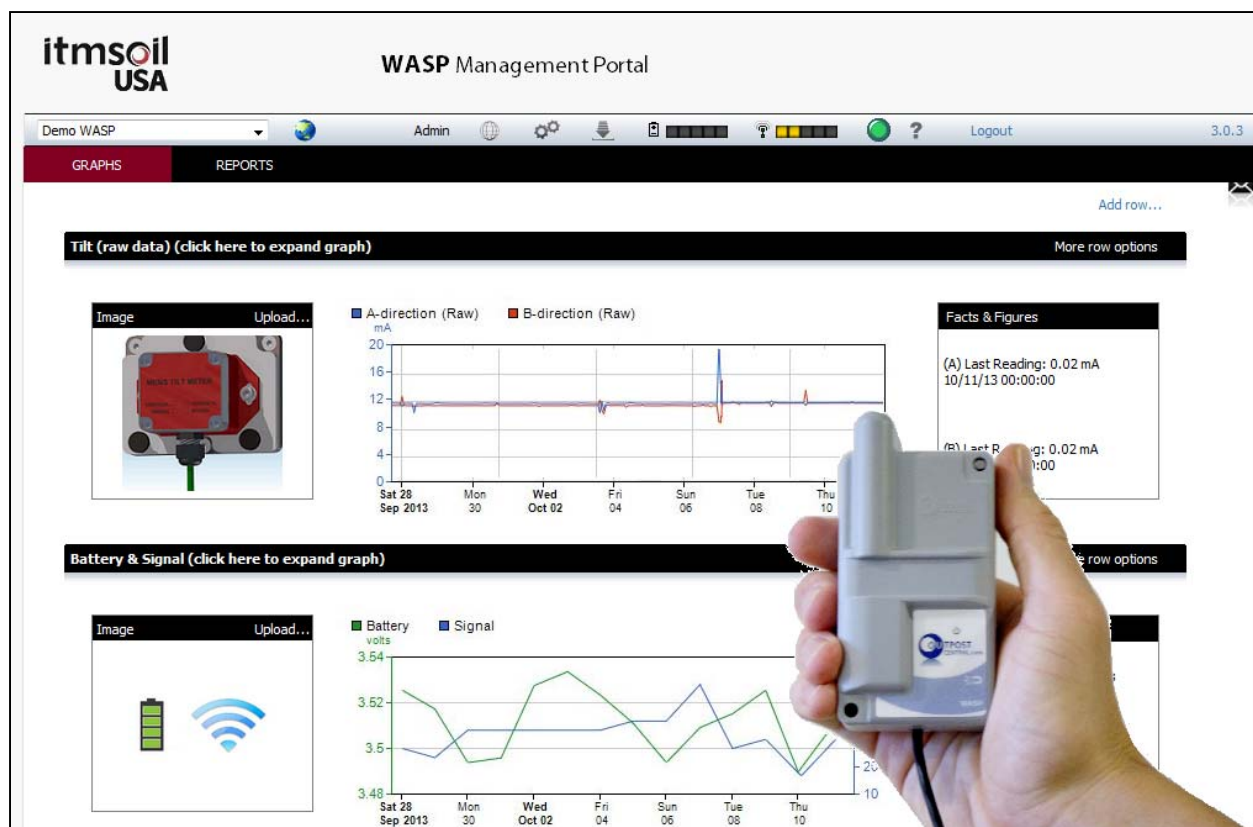

## Contents

1	Introduction .....	3
2	Overview of Operation.....	4
3	WASP Datalogger .....	5
4	Compatible Sensors .....	6
5	Sensor and WASP Connection .....	7
5.1	itmsoil's Solid State Piezometer.....	7
5.2	Sisgeo's Electrical Piezometer.....	7
5.3	Sisgeo's MEMS Tiltmeter .....	7
5.4	Sisgeo Crackmeter.....	8
5.5	Celeasco String Potentiometer .....	8
5.6	General Notes on Sensor Connection .....	8
6	Installing the WASP .....	9
6.1	Mounting the WASP.....	9
6.2	WASP Positioning General Guidelines .....	9
7	Confirming GPRS/GSM Signal Strength .....	10
7.1	Using the WASP Swipe Activation System .....	10
7.2	Using a Smartphone to Check Installation .....	12
8	WASP Management Portal Website .....	13
8.1	Configuration Site .....	14
8.1.1	“SITES” Tab.....	14
8.1.2	“GROUPS” Tab.....	19
8.1.3	“USERS” Tab .....	19
8.1.4	“MAP VIEW” Tab .....	20
8.1.5	“SETTINGS” Tab.....	22
8.2	Data Display Site .....	23
8.2.1	“GRAPHS” Tab .....	24
8.2.2	“REPORTS” Tab .....	25
9	Battery Life .....	25

## 1 Introduction

The WASP datalogger is a compact rugged waterproof data logger, containing an internal battery pack, SIM card and antenna. It is available in several variants for attachments to different types of meters and sensors. Below are some of the features of this powerful yet simple datalogger:



### Beautifully Simple

Simple to install. No on-site concentrator or software required.



### Graphs & Reports

Simple website data analysis and system management



### Email & SMS Alarms

sent via email or text message



### 5+ Year Battery Life

The internal lithium batteries will last for 5 to 10 years!



### Global Coverage

Install the device anywhere with GSM mobile phone coverage



### Group Management

Manage large numbers of devices with group management and maps

## 2 Overview of Operation

The WASP is designed for quick deployment in the field with minimum requirement on times, tools and skill as illustrated by the work flow below:

❖ **Before you go to site:**

- a. Take note of the WASP's serial number - Each WASP is assigned with an unique serial number, such as OP8783.
- b. Take note of the sensor's type and serial number.

❖ **When you in the field:**



- a. Install sensor
- b. Install WASP - see section 6
- c. Connect sensor to WASP - see section 5
- d. Activate WASP and check and confirm GPRS/GSM signal strength - see section 7

❖ **After returning from site:**

- a. Log on to WASP's web portal to configure logging frequency, uploading frequency and charts and alarms as necessary - see section 8
- b. Start monitoring

### 3 Wasp Datalogger

This user guide covers the two datalogger models as follows:

Product Code	Description	Image
WASP-2GA-1ML	1-channel logger for mA sensors with built-in: <ul style="list-style-type: none"><li>• 2G (GPRS) cellular modem with SIM card</li><li>• lithium-ion battery</li><li>• antenna</li><li>• 1 x "flying lead" of 3-conductor cable</li></ul>	
WASP-2GA-2ML	2-channel logger for mA sensors with built-in: <ul style="list-style-type: none"><li>• 2G (GPRS) cellular modem with SIM card</li><li>• lithium-ion battery</li><li>• antenna</li><li>• 2 x "flying leads" each with a 3-conductor cable</li></ul>	






The wiring details of the Wasp loggers are as follows:

WASP Wiring Colors
Red - power (18VDC - switched)
Blue - return
Green - ground (not used)

## 4 Compatible Sensors

The WASP works with 4-20mA current loop sensors. The 4-20mA current loop has been widely used in the industrial and process sectors as well as in the geotechnical field. Its popularity comes from its ease of use and its performance. A big benefit of the current loop is its simple wiring (only two wires required). The supply voltage and measuring current are supplied over the same two wires. Zero offset of the base current (ie. 4mA) makes cable break detection simple. In addition, the current signal is immune to any stray electrical interference, and a current signal can be transmitted over long distances.

This user guide covers the 4-20mA sensors shown below.

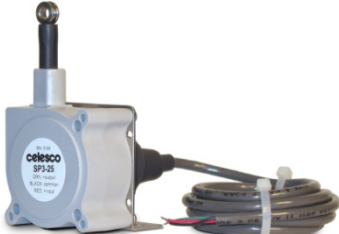Sensor Type	Sensor Manufacturer	Description	Image
Piezometer	itmsoil	Solid State Piezometer 4-20mA output	
Piezometer	Sisgeo	Electrical Piezometer 4-20mA output	
Tiltmeter	Sisgeo	MEMS Tilt Meter 4-20mA output (uniaxial/biaxial with thermistor)	
Crackmeter	Sisgeo	Crackmeter 4-20mA output (with thermistor)	
Crackmeter	Celesco	String Potentiometer 4-20mA output	

## 5 Sensor and WASP Connection

### 5.1 itmsoil's Solid State Piezometer

Terminal Name	Color of Wire	
	WASP	Solid State 4-20mA Piezometer
Power	Red	Red
Return	Blue	Black
Shield/Screen	Green	Green

### 5.2 Sisgeo's Electrical Piezometer

Terminal Name	Color of Wire	
	WASP	Electrical Piezometer
Power	Red	Red
Return	Blue	Black
Shield	Green	-

### 5.3 Sisgeo's MEMS Tiltmeter

#### ○ Uniaxial Tiltmeter

Terminal Name	Color of Wire	
	WASP	MEMS Tilt Meter
Power	Red	Red
Return	Blue	Black
Shield	Green	-
Thermistor	-	White
Thermistor	-	Green

#### ○ Biaxial Tiltmeter

Terminal Name	Color of Wire	
	WASP	MEMS Tilt Meter
Power (A)	Red (1)	Red
Return (A)	Blue (1)	Black
Power (B)	Red (2)	White
Return (B)	Blue (2)	Green
Thermistor	-	Yellow
Thermistor	-	Blue

## 5.4 Sisgeo Crackmeter


Terminal Name	Color of Wire	
	WASP	Potentiometer with mA output
Power	Red	Red
Return	Blue	Black
Shield	Green	-

## 5.5 Celesco String Potentiometer

Terminal Name	Color of Wire	
	WASP	SP3 - String Pot. with mA output
Power	Red	Red
Return	Blue	Black
Shield	Green	-

## 5.6 General Notes on Sensor Connection

1. It is extremely important to ensure that no moisture can get into the cable join between the WASP cable and sensor cable. If moisture enters the cable join, the join will rust over time and will cause the mA signal from the sensor to stop being registered. Water can in some cases travel up the cable core into the logger or the sensor and damage the internal circuitry.
2. The "3M ScotchLok UY2 Insulation Displacement Wire Connectors" and crimper are recommended for splicing the signal cables together.

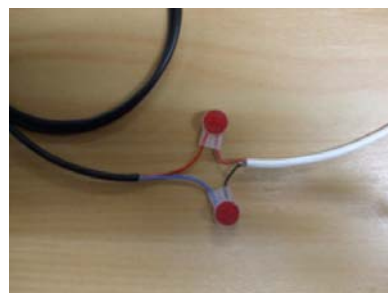

As an alternative to splicing cable, water resistant connectors may be provided upon request.



## 6 Installing the WASP

Placement of the WASP is important to ensure adequate GSM signal strength is available. Poor GSM signal strength may cause the WASP to make more attempts than normally required to contact the website and therefore exhaust the internal batteries more quickly. It can also cause a delay in sensor readings being transferred to the website.

Poor signal starts to affect battery life at around 30% GSM signal strength, and generally will be too low for normal operation at less than 20% signal strength.

If an WASP is left installed in poor signal strength expect to see the unit appearing “offline” from time to time, and the website battery gauge to show a higher than normal battery drain rate.

Very poor GPRS/GSM signal strength can result in the WASP device lasting less time than the rated battery life, or not connecting at all.

### 6.1 Mounting the WASP

The WASP can be mounted to the wall using two 5mm diameter screws through the two mounting holes on the two corners of the main body.



Alternately, the WASP can be strapped to a pole using a hose clamp across the center of the body.

### 6.2 WASP Positioning General Guidelines

- Do not install inside a metal cabinet
- Avoid installing inside metal room, basement or room with concrete walls
- If possible elevate as much as possible, installation in pits or underground not recommended. (While this is not strictly recommended, if signal strength in the area is strong, it is possible that data may be transmitted to the web, through the manhole or roadbox lid. Testing on site will confirm if this is possible)

If sufficient signal can't be obtained at or near the desired site consider using a WASP variant with external antenna connection & an external antenna to improve signal performance.

## 7 Confirming GPRS/GSM Signal Strength




Once a suitable installation position has been identified there are several tools available for the installer to confirm the GSM signal strength is sufficient and also that attached meters & sensors are functioning normally:

- Magnet swipe with sound feedback - covered in section 7.1
- Smartphone mobile web app - covered in section 7.2
- Normal PC based web-browser - covered in section 8

### 7.1 Using the WASP Swipe Activation System

Using a small magnet, the WASP can be forced to attempt an immediate connection to the website. A successful connection will validate the GPRS/GSM coverage at the chosen installation location and also upload details of signal strength and recorded sensor data to the website. The installer may view the results of the signal strength by using the smartphone app (see next section).

In order to activate the GPRS connection with the magnet, complete the following steps:

a	Hold the magnet over the magnet icon as seen in figure below. A single tone will sound when the magnet is in the correct position.	
b	Hold the magnet in this position until the blue light appears and the tone stops.	
c	Remove the magnet and wait for the WASP to make a successful connection to the website (indicated by an ascending tone and a green light).	

After the activation tone, the WASP will attempt to connect to the website in the following sequence:

- a. A series of short “beeps” will sound approximately every 2 seconds. During this period the WASP is attempting to connect to the local GPRS cell-phone tower and then transfer data to the website. This process typically takes 30-60 seconds, but it can take up to several minutes. The process may take longer if:
  - i. The unit has recently been transported from a different country or region. In this case it may be attempting to find the correct GSM operator
  - ii. The unit has a lot of data to upload from the internal memory
- c. During this process the blue light will flash a code indicating the current GSM signal strength. 3 flashes indicate full signal strength.
- d. Upon a successful connection to the website, the light will turn green and a positive “ascending” tone will sound.
- e. Upon a failed connection to the website, the light will turn red and a negative “descending” tone will sound. Failure to connect could be the result of the following problems:
  - i. Unit has not yet identified a cell-tower to connect to – this can occur the first time a unit is activated.
  - ii. Insufficient Signal strength - there may not be enough signal for a full GPRS connection. Try to move unit to a higher or more open location.
  - iii. Temporary GPRS network problem. Test the 2G network with your smart phone (AT&T & T-Mobile only), if it’s OK then retry with the WASP.
  - iv. Damaged WASP unit. The unit has been damaged since last used. Check connections to meters/sensors have not mistakenly fed high voltages into WASP device.

**PLEASE NOTE:**


**If connection is unsuccessful, you may need to retry the magnet swipe several times the first time you activate the WASP.**

## 7.2 Using a Smartphone to Check Installation

Use a smartphone to get immediate feedback on the status of the WASP installation by navigating to [www.itmsoilusa.com/WASP](http://www.itmsoilusa.com/WASP) and clicking on the “Go To Mobile Version” button.



You will then be directed to the Outpost Central mobile login screen. Login and select the WASP you would like to check the signal of as shown below:

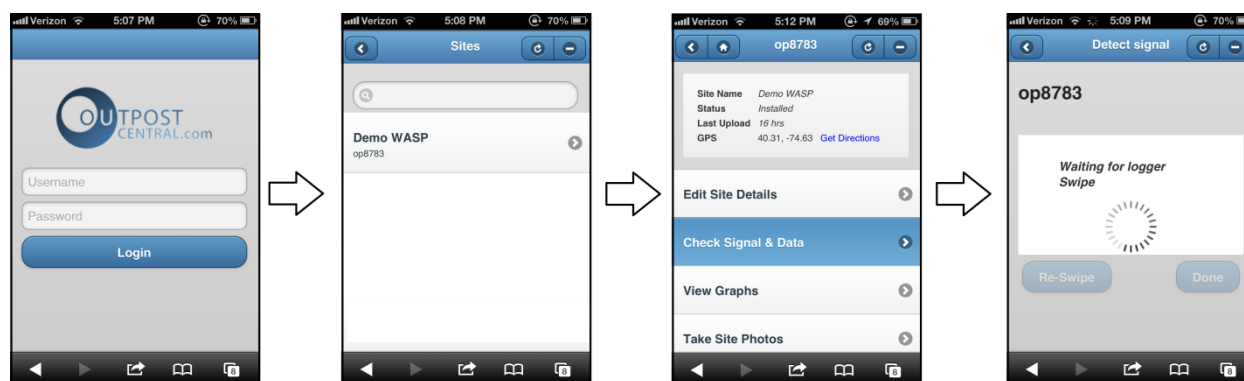

1. Login

2. Select WASP

3. Check Signal

4. Swipe WASP

Once you get to Step #4, swipe the WASP with the magnet to force a connection to the web.

Once the WASP connects to the website, the signal strength is shown in the mobile app.

The latest sensor readings are available to view from the full website.

The full WASP website portal may also be accessed on smartphones by logging into [www.itmsoilusa.com/WASP](http://www.itmsoilusa.com/WASP) in the normal way (without selecting the Mobile Version option).


## 8 WASP Management Portal Website

All the WASP's settings and controls are accessible through wireless communication over the Internet from the WASP Management Portal. The web address of the Management Portal is:

[www.itmsoilusa.com/WASP](http://www.itmsoilusa.com/WASP)

The website is used to program the WASP's reading schedule and method. It may also be used to display data graphically, generate reports and send automated alert emails in case of a sensor exceeding a predetermined threshold. Data may also be pushed to an external ftp site for import into the user's choice of display software (e.g. ARGUS).

When you open the above web address with an Internet browser, you will see the screen below:

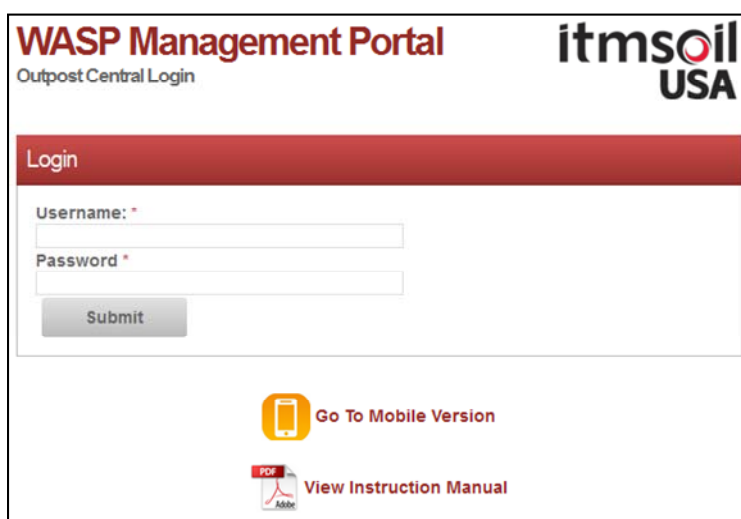The screenshot shows the 'WASP Management Portal' login page. At the top left, it says 'WASP Management Portal' in red, with 'Outpost Central Login' below it. At the top right is the 'itmsoil USA' logo. Below the header is a red bar with the word 'Login' in white. Underneath is a login form with two input fields: 'Username: \*' and 'Password \*'. A grey 'Submit' button is below the password field. At the bottom of the page, there are two links: 'Go To Mobile Version' with a yellow mobile phone icon, and 'View Instruction Manual' with a red PDF icon.

Please log into the WASP Management Portal using the username and password provided to you by itmsoil USA.


The web portal comprises of two different sections:

- **Configuration** site
- **Data Display** site

Further details are provided in the following pages.

## 8.1 Configuration Site

You may access the various features of the Configuration Site by clicking on the menu items across the top (Sites, Groups, Users, Map View, Settings). See example screen shot below.

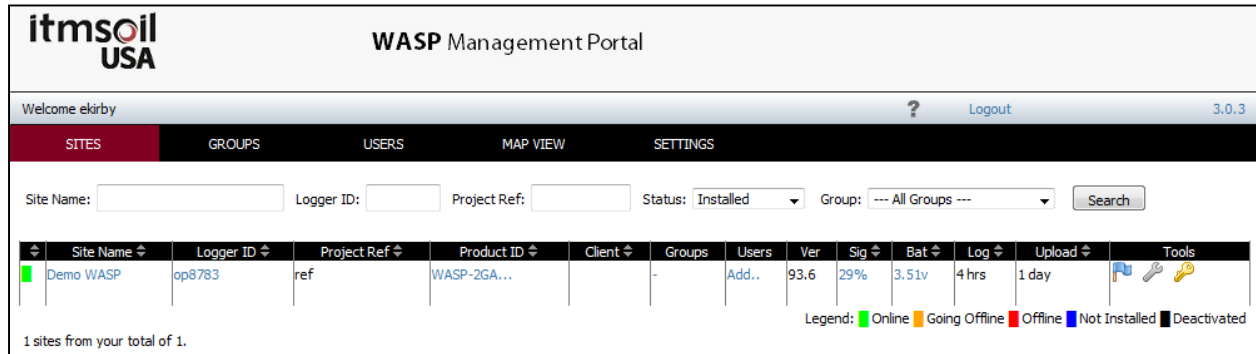


Site Name	Logger ID	Project Ref	Product ID	Client	Groups	Users	Ver	Sig	Bat	Log	Upload	Tools
Demo WASP	op8783	ref	WASP-2GA...	-	Add..	93.6	29%	3.51v	4 hrs	1 day		

### 8.1.1 "SITES" Tab



After logging into the WASP management portal (as a Site Administrator or Client), a screen similar to the one shown below will appear:

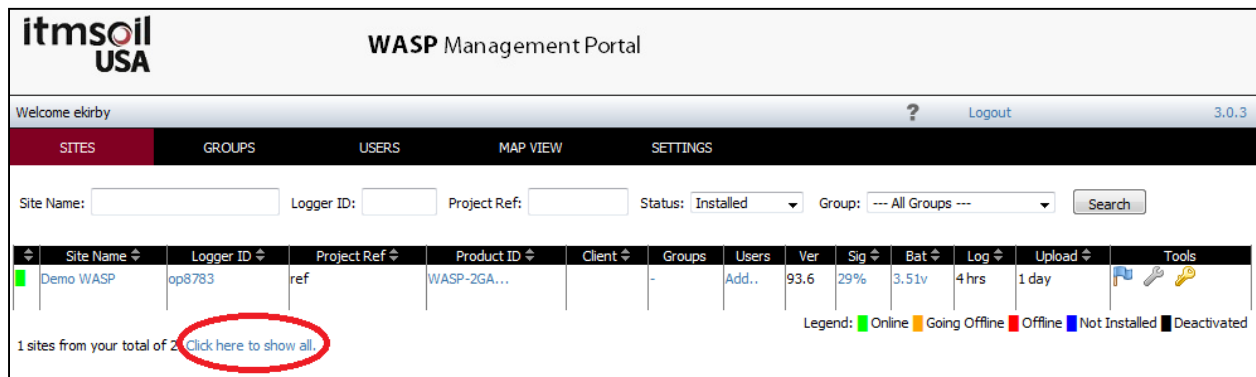

Site Name	Logger ID	Project Ref	Product ID	Client	Groups	Users	Ver	Sig	Bat	Log	Upload	Tools
Demo WASP	op8783	ref	WASP-2GA...	-	Add..	93.6	29%	3.51v	4 hrs	1 day		


The term "Site" refers to a WASP datalogger. All WASPs associated with a user's account are listed on under this tab. By default, only active WASPs appear in the Site Name column. You may view Not Installed or Deactivated WASPs associated with your account by clicking the "[Click here to show all](#)" link (shown above in the red circle).

#### ❖ "Site Name" & "Logger ID" columns

Clicking on either field will bring up a window (shown below) where you may view/edit various features.

- **Status Screen** - View the status of WASP, such as signal strength and battery voltage when it was last connected.
- **Configuration** - Edit the Site Name, Time Zone, Project Reference, Installation Date, Web Template ("OP Site Default" should be used) & Status.
- **Location** - Enter location information.
- **Photos** - Photos may only be uploaded using the mobile web-app.
- **Notes** - Add or edit a note.
- **Billing** - Change the current billing status - deactivate or active (please advise itmsoil USA before doing this to ensure that correct changes are applied to your account).

Each time a change is made to the configuration, you must click the green "Save Changes" button for changes to take effect.

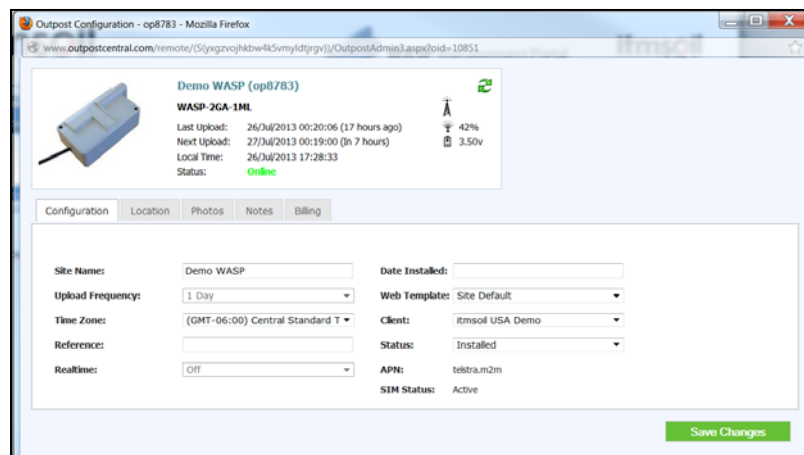

The screenshot shows the 'Outpost Configuration' web interface for a device named 'Demo WASP (op8783)'. The interface includes a status summary at the top with fields for 'Last Upload', 'Next Upload', 'Local Time', and 'Status' (Online). Below this is a configuration form with tabs for 'Configuration', 'Location', 'Photos', 'Notes', and 'Billing'. The 'Configuration' tab is active, showing fields for 'Site Name', 'Upload Frequency' (set to 1 Day), 'Time Zone' (set to GMT-06:00 Central Standard T), 'References', 'Realtime' (set to Off), 'Date Installed', 'Web Template' (set to Site Default), 'Client' (set to itmsoil USA Demo), 'Status' (set to Installed), 'APN' (set to telstra.m2m), and 'SIM Status' (set to Active). A green 'Save Changes' button is located at the bottom right of the configuration form.

#### ❖ "Groups" & "Users" columns

Clicking on either field will allow a user to either view or edit the respective settings.

#### ❖ "Signal" & "Battery" columns

Clicking on either field will bring up a graph that displays the respective data of the WASP. If the latest data is not immediately visible, simply change the range below the graph to be to an earlier time.





#### ❖ "Log" & "Upload" columns

The Log column shows how often the WASP is collecting readings from sensors. Details on how to edit this schedule is given in the following section.

Upload Frequency is set to 1 day by default. Data upload will happen at around midnight every day. If you would like to have the daily data uploaded at a different time of the day ("Roster" option), please contact itmsoil USA.

Multiple uploads per day may be available; however, the battery life will be affected. Please contact itmsoil USA if you would like to change the upload frequency.

#### ❖ “Tools” column

-  **View Events** - click on the blue flag to view a log of events from the WASP, including sensor readings and communication attempts.
-  **Config Sensors** - click on the grey wrench to change the configuration of the sensors being read by the WASP. Each Analogue (4-20mA) sensor has unique configuration settings, these may be edited by clicking on the Sensor name.  
Editable fields include the sensor name, stabilization time, logging frequency, alarms and scripts to calculate engineering units (more detailed information is given in the following section).  
Each time a change is made, you must click  to confirm changes.
-  **Login** - click on the golden key to login to the “Data Display” area of the website. This allows you to view and edit any plots, images and tables associated with the WASP. See section 8.2 for details.

## Config Sensors - DETAILED INSTRUCTIONS

### Native Inputs (Analogue, 4-20mA)


**Input Settings** – the name of the input (or channel) may be edited here. The “SCADA Tag ID” field may be ignored.

**Calibration** – the only things that may require changing are the Stabilization Time and Unit Label. Generally 1-second is an acceptable stabilization time but this may vary depending on the type of sensor used. The below table may be used as a reference.

Sensor Type	Sensor Manufacturer	Stabilization Time (seconds)
Piezometer	itmsoil	1
Piezometer	Sisgeo	1
Tiltmeter	Sisgeo	1
Crackmeter	Sisgeo	1
Crackmeter	Celesco	1

We suggest that you set the Unit Label as “Other” and type in “mA” as any calibration to engineering units of the data will occur in the Calculated Input window (more information given in following section). A screen shot of an example Calibration configuration is shown below:



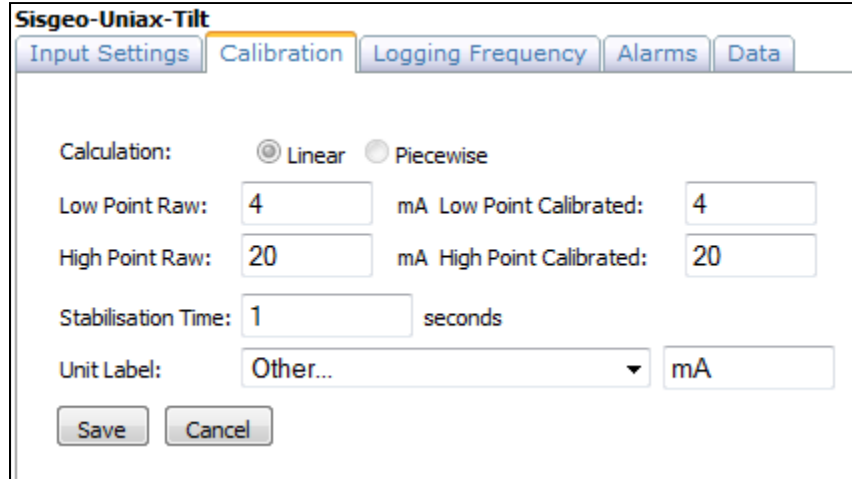

**Logging Frequency** – the WASP can log data as fast as every second, and as slow as once per day. The WASP has a “ring” type memory that can store approximately 1350 readings (2-weeks of 15-minute readings for a single channel) before the oldest readings are overwritten.

Please note that changing the reading frequency will affect battery life accordingly.

**Alarms** – alert messages may be sent via SMS or email if a reading satisfies a given condition. To add an alarm, click the “Add” button, from the Alarm Type drop down list, select an option (“High/Low” is the most common for geotechnical and structural applications since you may be notified if readings are either above or below a predetermined value). Click “Next”.

The following section may be configured as desired.

**Reset Type** – used to prevent alarm from being sent repeatedly. There are two types of reset, time based and value based. Time based reset prevents the alarm from being send again until after a specific amount of time. e.g. 2 hours after the first alarm.

Value based reset prevents the alarm from being send again until the value has risen above or fallen below certain threshold depending on whether the alarm is a high alarm or a low alarm

**Do not send again for** – this feature may be used to limit the number of alarms sent.

**Recipient List** – a recipient can only be added from the “GROUP” tab, within the “Alarm Roster” tab.

**SMS Recipients** - If SMS delivery is used ensure the number includes the country code, i.e. in the USA, a “1” must be present in front of any US phone number. e.g. 16467707601

A screen shot of an example Alarm configuration is shown below:

**Sisgeo-Uniux-Tilt**

Input Settings Calibration Logging Frequency **Alarms** Data

**High/Low Alarm Conditions & Recipients**

Condition: Send alarm when Sisgeo-Uniux-Tilt measures **below**  mA **(not a rate)** in a single logging interval.

Reset Type: **Time**

Do not send again for

Recipient List: **--- Not Selected ---** [Manage Lists](#)

SMS Recipients:  (comma separated list)

Email Recipients:  (comma separated list)

Alarm Message:

Disabled: ☒

Once all fields are completed as desired, click the “Finish” (or “Update” if making changes to an existing alarm) button.

**Data** – may be imported, exported, deleted or edited. Data values shown in the columns on the left correspond to the values shown in the graph to the right. If no data is visible (or you would like to configure which data is shown), you will need to change the From/To time period below the graph by either using the calendar after clicking on the date or by using the arrows below the dates. To edit data values, click on the value to be edited and type in the new value. Be aware that this is a permanent change of data and is not recommended unless you are sure the changes is required. Only clients with administrator access may delete or edit data.

### Calculated Inputs (virtual sensors)

**Input Settings** – as for Native Inputs (above).

**Calibration** – this feature allows you to use a VB.NET script to calculate and define engineering units. A standard template of the VB.NET script relating to the sensor you are using will be provided upon request.

To define the engineering unit label, click the blue link below the script box ([click to change unit](#)) and enter the desired unit, i.e. mm/m, kPa, inches, etc.

**Logging Frequency** – not applicable.


**Alarms** – as for Native Inputs (above).

**Data** – as for Native Inputs (above).

## 8.1.2 “GROUPS” Tab



Groups may be created to manage access to more than one user for the data presentation area of the website. The following screen shot shows the view after clicking the “GROUPS” tab.

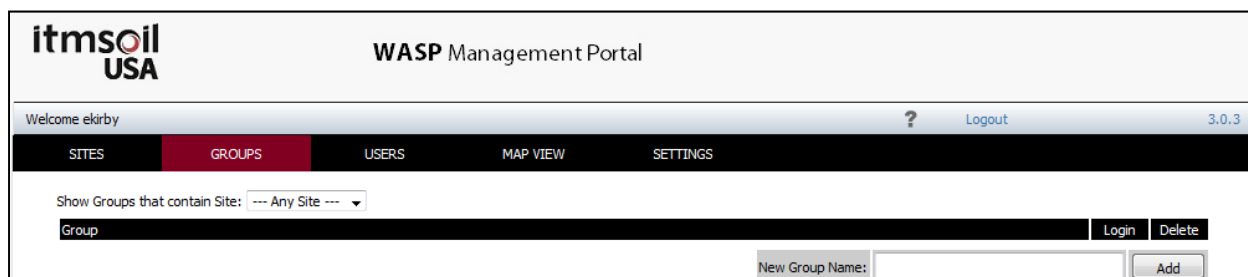

itmsoil USA WASP Management Portal

Welcome ekirby ? Logout 3.0.3

SITES GROUPS USERS MAP VIEW SETTINGS

Show Groups that contain Site: --- Any Site ---

Group  Login Delete


New Group Name:  Add

Once a group is added by entering a “New Group Name”, users may select which WASPs (Sites) will be visible to the group.

## 8.1.3 “USERS” Tab



Users may be created to allow others access to WASP data and settings. The following screen shot shows the view after clicking the “USERS” tab.

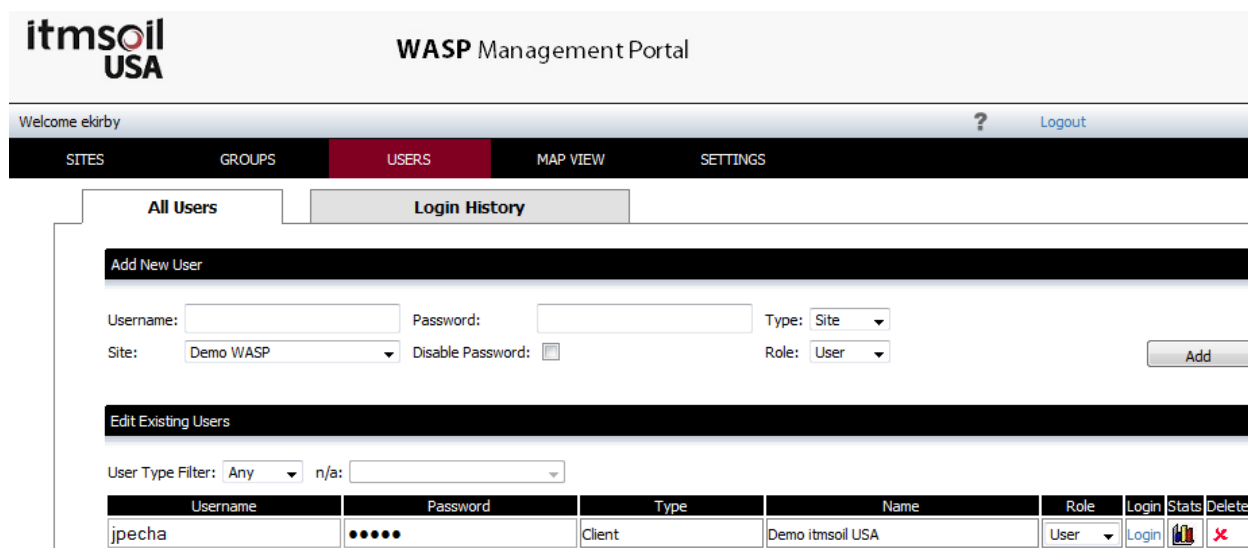

itmsoil USA WASP Management Portal

Welcome ekirby ? Logout

SITES GROUPS USERS MAP VIEW SETTINGS

All Users Login History

Add New User

Username:  Password:  Type: Site

Site: Demo WASP Disable Password: ☐ Role: User Add

Edit Existing Users

User Type Filter: Any n/a:

Username	Password	Type	Name	Role	Login	Stats	Delete
jpecha	•••••	Client	Demo itmsoil USA	User	Login		

Users may be one of 4 types (Site, Group, Client or Custom).

- **Site** – a user may access a single WASP (site).
- **Group** – a user may view data for a predefined group of WASPs (sites).
- **Client** – a user may access all WASPs (sites) assigned to your account.

Users may be one of two Roles (User or Admin).

- **User** – may view but not edit features, depending on the Type.
- **Admin** – may edit configuration features, depending on the Type.

You may also view login statistics of each user to see each user’s activity on the website.


The below table shows access levels for each account type and role.

		Configuration Page		Graph Page	
		View	Edit	View	Edit
Site	User			•	
	Admin	•	•	•	•
Group	User			•	
	Admin			•	•
Client	User	•		•	
	Admin	•	•	•	•

#### 8.1.4 “MAP VIEW” Tab

SITES	GROUPS	USERS	MAP VIEW	SETTINGS
-------	--------	-------	----------	----------

The following screen shot shows the view after clicking the “MAP VIEW” tab.

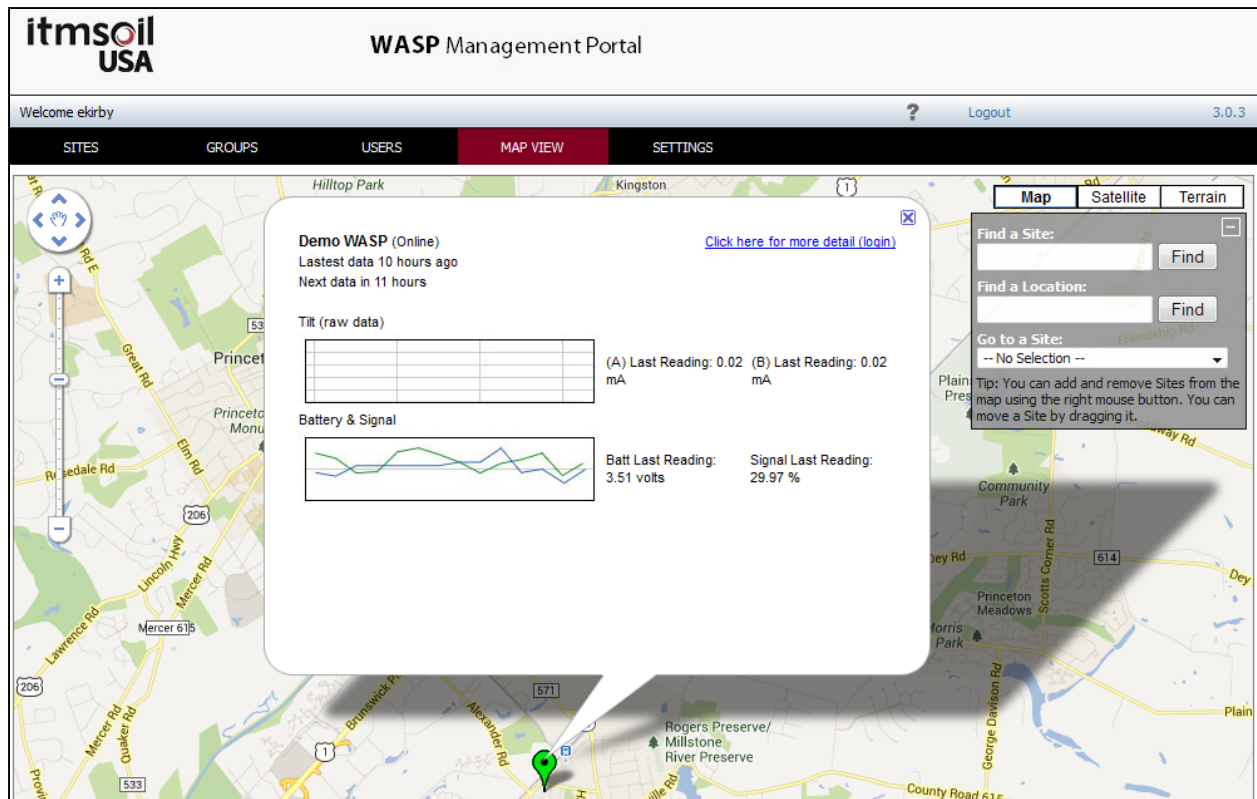


Right click on the map to add a WASP (site).

To move a WASP (site) that is already on the map, simply drag and drop it to a new location using your left mouse button.

You may go directly to a particular WASP (site) by selecting it from the drop down list, in the top right corner.

### 8.1.5 “SETTINGS” Tab

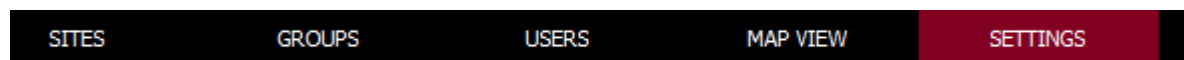

General account settings may be adjusted here, including location, time zone and date/time format. A list of email addresses may be entered to alert users when WASPs are offline.

The following screen shot shows the view after clicking the “SETTINGS” tab.

The screenshot displays the 'WASP Management Portal' interface. At the top, the 'itmsoil USA' logo is on the left, and 'WASP Management Portal' is centered. Below this is a user welcome bar showing 'Welcome ekirby', a help icon, a 'Logout' link, and the version '3.0.3'. A navigation bar contains tabs for 'SITES', 'GROUPS', 'USERS', 'MAP VIEW', and 'SETTINGS' (which is highlighted in red). Below the navigation bar, there are sub-tabs: 'Client Settings' (active), 'User Logins', 'Contacts', 'Logo', 'Site Fields', and 'Input Fields'. The 'Client Settings' section contains the following fields and options:

- Client Name: Demo itmsoil USA
- Country: United States (dropdown)
- Default Time Zone: (GMT-05:00) Eastern Time (USA & Canada) ch: (dropdown)
- Web Template: Client Default (dropdown)
- Date Format: MM/dd/yy (dropdown)
- Time Format: HH:mm:ss (dropdown)
- Custom Logout URL: (text input)
- Map KML URL: (text input)
- Offline Alarm Email Recipients: (text input with a help icon) (Comma separated list)
- Show User Passwords: ☐
- Web Skin: ITM Soil - style5.css

Below these fields, a section titled 'Allow the 'User' role to perform the following actions:' contains two checkboxes: 'Modify Graph Comments' and 'Save Graph', both of which are unchecked. An 'Update' button is located at the bottom right of the settings area.

## 8.2 Data Display Site

You may access the various functions of the Data Display site by clicking on the menu items across the top of the page. Details of each link are given below:

A drop down list shows all WASPs available to a user. Selecting a WASP will bring up the pre-defined plots for that logger.



Clicking the Map icon opens a new window with a Google Map, where the user may select a WASP to view data.



Clicking the Site Configuration icon opens a new window that allows a user to view/change the general WASP settings.



Clicking the Sensor Configuration icon opens a new window that allows a user to view/change the sensor settings for the WASP.



Clicking the Download Data icon opens a new window that allows a user to download data from any of the WASP input in .csv or text format.



Clicking the Battery Bar icon opens a new window that allows a user to view the WASP battery levels for the past week (please note, the icon bars do not change color according to battery level).



Clicking the Signal Bar icon opens a new window that allows a user to view the WASP signal levels for the past week.



Clicking the WASP Status icon opens a new window that shows a log of recent functions performed by the WASP.



Clicking the question mark icon opens a new tab containing an interactive Help menu.

Details of each Tab are given below:


### GRAPHS

– The Graphs tab shows the predefined plots and data statistics for the WASP you are viewing.

### REPORTS

- The Reports tab shows the predefined reports for the WASP.

See example screen shot of a Data Display Site below.

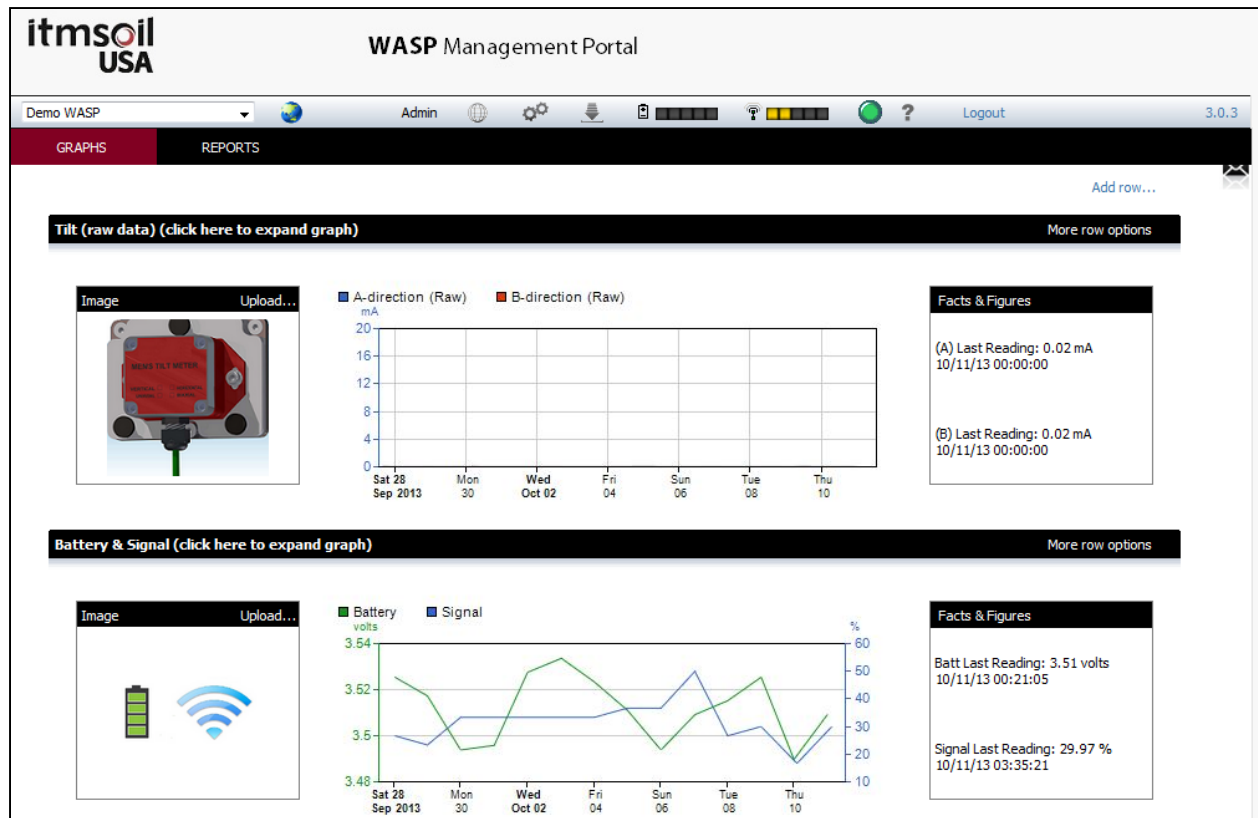

### 8.2.1 “GRAPHS” Tab

**GRAPHS**

**REPORTS**

Customized graphs showing sensor data may be viewed and configured here (depending on the user’s access level).

Clicking on the Image icon allows users to set an image to be associated with a graph.

Clicking on the graph allows users to configure graphs by adding data series, customizing the Facts & Figures, etc. any change made to a graph must be saved by clicking the disk icon below the graph. Once the disk icon is clicked, you may determine the duration of data that is shown.

New graphs may be added by clicking the “[Add row...](#)” link. Page and graph layout may be edited by clicking on the cog icon (⚙).

Utilizing the Help feature of the website will assist with further details.



## 8.2.2 “REPORTS” Tab

GRAPHS

REPORTS

Customized reports showing sensor data may be viewed and configured here (depending on the user's access level).

A new report may be created by clicking the “Add Report” link, in the top right corner of the page. To edit an existing report, click on the report and configure the desired details shown in the window that subsequently opens. Reports may be automatically generated and emailed to a predetermined list of recipients, as desired.

## 9 Battery Life

The battery life of the WASP is dependent on the following factors:

- Strength of cellular signal
- Ambient temperature
- Sensor stabilization time - how long the sensor must be powered up before taking a reading
- Frequency of reading
- Frequency of data upload

Below are 2 charts illustrating the effect of wireless signal quality, sensor activation time, reading schedule and data upload on battery life.

