



SINCE 1952

OPERATION & MAINTENANCE MANUAL

**2"-16" NON-RISING STEM
RESILIENT WEDGE GATE VALVES**

TABLE OF CONTENTS

Page

Preface	What a Resilient Wedge Valve “Is Not”
1-2.	Storage, Installation, Operation
3.	Closing Torque, Maintenance and Inspection
4.	Turns to Open, Valve Disassembly and Bonnet Assembly
5.	Bonnet Bolt Sizes
6.	Bonnet Bolt Torque, Valve Disassembly
7.	Packing Box (Stuffing Box) Bolt Size
8.	Packing Box (Stuffing Box) Bolt Torque
9-11.	Specification Sheets
12.	Warranty

Preface

What A Resilient Wedge Valve “IS NOT”!

1. A resilient wedge gate valve IS NOT for use in steam applications.
2. A resilient wedge gate valve IS NOT for use in hydrocarbon applications.
3. Resilient wedge flange gate valves have flat face flanges. NEVER use raised face flanges on resilient wedge gate valves.
4. Resilient wedge gate valves ARE NOT throttling valves. They must be used in a fully open or fully closed position only.

Overview: This manual is designed to describe the proper storage, installation, operation and maintenance of gate valves distributed by Matco-Norca. These procedures have been reviewed to conform to standard industry practices. Inspect all valves at time of delivery for damage caused by shipping. Confirm the valves comply with your specifications. Read information on the valve tag wired to each stem.

1. Storage

- a. Valves should be stored in a closed position and indoors. If it is not possible to store them indoors then take care to protect them from exposure to weather and debris. In cold weather climates make absolutely certain no water is trapped in the valve.
- b. Under no circumstance should water be allowed to freeze in the valve. Severe damage will result to valve components.
- c. Do not store valves in direct sunlight for an extended period of time.

2. Installation

- a. At all points in installing the valve special care should be taken to ensure there is no damage to the valve and that no damage will be done to the valve by any methods used to install the valve.
- b. Check that valve end joints are clean and free from debris. Completely open and close the valve and visually inspect to ensure full and proper operation.
- c. Ensure the valve is completely closed before placing in the pipeline or trench.
- d. Care should be taken to handle the valve carefully. Never drop the valve in the trench. Never use a sling or chain through the port opening or around the valve stem. Only use slings that fully cradle the valve when lowering into place.
- e. Always install the valve on the pipe using the proper method for the type of end joint. Manufacturer's instructions for the pipe ends should be prepared per those manufacturer's instructions. Pipelines must be level, square, and plumb. Properly support the valve to avoid undue stress on the valve.
- f. Debris in the system must be removed by flushing the entire system. Debris left in the system can cause severe damage to the valves or the valve components.

- g. Pressure test the line with water, never air. **DO NOT BURY OR BACKFILL VALVES UNTIL PRESSURE TEST IS COMPLETE.**
- h. All valve boxes should be installed on each valve so that no load is transferred to the valve.

3. Operation

- a. The rated working pressure is cast into the body or printed on the aluminum identification tag of each valve. Do not operate valves in systems that exceed the rated working pressure of the valve.
- b. Resilient wedge valves open and close by operating the valve stem. This operation is performed by turning the operating nut with a valve key or by turning the hand wheel. This operation causes the resilient wedge in the valve to ride up and down. The compressing of the resilient material bonded to the wedge against the valve body is what creates a seal. Torque requirements approach the maximum as the wedge is being compressed at the end of the closing cycle. Opening the valve requires less torque. See Table 1 below for torque pressure (in foot pounds) to close the valve.
- c. If the valve does not seal after compressing the wedge against the valve body open and close the valve several times in an attempt to reseal the wedge. Be certain the desired amount of torque is being applied to the valve. If the valve still does not seal the pressure to the valve should be turned off and relieved. The bonnet or top section of the valve should be removed so the wedge can be inspected for damage and the waterway can be inspected for debris.

Table 1- APPROXIMATE CLOSING TORQUES

200 Series Cast Iron Valves

(Includes 200M, 200W, 200FJ, 100RT)

2"	44 Foot Pounds
2-1/2"	55 Foot Pounds
3"	59 Foot Pounds
4"	74 Foot Pounds
6"	110 Foot Pounds
8"	147 Foot Pounds
10"	184 Foot Pounds
12"	221 Foot Pounds

200D Series Ductile Iron Valves

(Includes 200MD, 200WD, 200RTD, 200C9D, 200TVD)

2"	45 Foot Pounds
2-1/2"	50 Foot Pounds
3"	55 Foot Pounds
4"	75 Foot Pounds
6"	110 Foot Pounds
8"	150 Foot Pounds
10"	185 Foot Pounds
12"	225 Foot Pounds

100 Series Cast Iron Valves

(Includes 100M, 100W, 105W)

14"	181 Foot Pounds
16"	217 Foot Pounds

4. Maintenance and Inspection

- a. Resilient wedge gate valves require operation (exercise) at least every six months if the valves are not operated regularly under normal conditions. Exercising of the valve consists of fully opening and fully closing the valve.
- b. At the time of visual inspections the need to insure that the gate is seating properly can be accomplished by opening and closing the valve while counting the number of turns it takes. If the number of turns is not what is listed in Table 2 then an obstruction or other problem may have occurred. Table 2 has the listing of the number of turns it takes to open the different Matco AWWA valves. See Valve Disassembly instructions if cycling the valve does not allow the valve to seal.
- c. All gaskets and joints should be checked for leakage. In general the valves should be inspected for leaks and ease of operation at least every six months and exercised at that time.
- d. OS&Y valves should have the exposed stem lubricated at each inspection. Check bolts for tightness.

Table 2- TURNS TO OPEN

200 Series Cast Iron Valves

(Includes 200M, 200W, 200FJ, 100RT)

2"	10
2-1/2"	13
3"	16
4"	20
6"	25
8"	34
10"	42
12"	50

200D Series Ductile Iron Valves

(Includes 200MD, 200WD, 200RTD, 200C9D, 200TVD)

2"	7
2-1/2"	9
3"	11
4"	13
6"	16
8"	17
10"	21
12"	25

100 Series Cast Iron Valves

(Includes 100M, 100W, 105W)

14"	42
16"	48

Valve Disassembly and Bonnet Assembly

If after cycling the valve it still will not seal there may still be an easy solution to fixing the valve without taking the valve body out of line. Turn the line pressure off to the valve. Unbolt the top part of the valve (bonnet) from the valve body by following the instructions below. This function **“CANNOT”** be performed with the valve under pressure. See Table 3 for the wrench size needed to unbolt the bonnet.

- a. On 200M and 200MD valves remove the protective wax (hot melt) covering the bonnet bolts.
- b. Remove the bonnet bolts.
- c. Lift off the bonnet assembly.
- d. Inspect the wedge for damage and also inspect the waterway of the valve for damage or debris. Replacement wedges are available if necessary.

Table 3- Bonnet Bolt Size

200 Series Cast Iron Valves

(Includes 200M, 200W, 200FJ, 100RT)

2"	10 mm Allen Wrench
2-1/2"	10 mm Allen Wrench
3"	10 mm Allen Wrench
4"	10 mm Allen Wrench
6"	10 mm Allen Wrench
8"	14 mm Allen Wrench
10"	14 mm Allen Wrench
12"	14 mm Allen Wrench

200D Series Ductile Iron Valves

(Includes 200MD, 200WD, 200RTD, 200C9D, 200TVD)

2"	8 mm Allen Wrench
2-1/2"	10 mm Allen Wrench
3"	10 mm Allen Wrench
4"	10 mm Allen Wrench
6"	10 mm Allen Wrench
8"	10 mm Allen Wrench
10"	14 mm Allen Wrench
12"	14 mm Allen Wrench

100 Series Cast Iron Valves

(Includes 100M, 100W, 105W)

14"	7/8" Hex
16"	1" Hex

Table 4- Bonnet Bolt Torques

200 Series Cast Iron Valves

(Includes 200M, 200W, 200FJ, 100RT)

2"	59 Foot Pounds
2-1/2"	59 Foot Pounds
3"	59 Foot Pounds
4"	59 Foot Pounds
6"	89 Foot Pounds
8"	133 Foot Pounds
10"	133 Foot Pounds
12"	133 Foot Pounds

200D Series Ductile Iron Valves

(Includes 200MD, 200WD, 200RTD, 200C9D, 200TVD)

2"	90 Foot Pounds
2-1/2"	90 Foot Pounds
3"	90 Foot Pounds
4"	90 Foot Pounds
6"	90 Foot Pounds
8"	141 Foot Pounds
10"	141 Foot Pounds
12"	141 Foot Pounds

100 Series Cast Iron Valves

(Includes 100M, 100W, 105W)

14"	290 Foot Pounds
16"	361 Foot Pounds

Valve Disassembly- Packing Box (Stuffing Box)

If a valve begins leaking at the top of the packing box, near the stem, it is likely the result of a cracked or cut o-ring. The solution is to open the packing box (stuffing box) area and replace the o-rings by following the instructions below. This function can be performed with the valve under pressure with the wedge in a **FULLY OPEN POSITION**. Do not be alarmed if some seepage takes place after unbolting the packing box. See Table 5 for wrench size needed to perform this function.

- a. Remove the top bolt holding down the operating nut or handwheel.
- b. Remove the operating nut or handwheel.
- c. On 200M and 200MD valves remove the protective (hot melt) wax covering the packing box (stuffing box) bolts.
- d. Remove the packing box (stuffing box) bolts.

- e. Lift off the packing box (stuffing box) and replace the o-rings and packing box (stuffing box) gasket.
- f. Reassemble in reverse order making sure the packing box (stuffing box) gasket is securely in place.
- g. Tighten bolts to recommended torques in Table 6.

Table 5- Packing Box (Stuffing Box) Bolt Size

200 Series Cast Iron Valves

(Includes 200M, 200W, 200FJ, 100RT)

2"	8 mm Allen Wrench
2-1/2"	8 mm Allen Wrench
3"	8 mm Allen Wrench
4"	8 mm Allen Wrench
6"	10 mm Allen Wrench
8"	10 mm Allen Wrench
10"	14 mm Allen Wrench
12"	14 mm Allen Wrench

200D Series Ductile Iron Valves

(Includes 200MD, 200WD, 200RTD, 200C9D, 200TVD)

2"	8 mm Allen Wrench
2-1/2"	10 mm Allen Wrench
3"	10 mm Allen Wrench
4"	10 mm Allen Wrench
6"	14 mm Allen Wrench
8"	14 mm Allen Wrench
10"	14 mm Allen Wrench
12"	14 mm Allen Wrench

100 Series Cast Iron Valves

(Includes 100M, 100W, 105W)

14"	3/4"
16"	3/4"

Table 6- Packing Box (Stuffing Box) Bolt Torques

200 Series Cast Iron Valves

(Includes 200M, 200W, 200FJ, 100RT)

2"	59 Foot Pounds
2-1/2"	59 Foot Pounds
3"	59 Foot Pounds
4"	59 Foot Pounds
6"	89 Foot Pounds
8"	89 Foot Pounds
10"	133 Foot Pounds
12"	133 Foot Pounds

200D Series Ductile Iron Valves

(Includes 200MD, 200WD, 200RTD, 200C9D, 200TVD)

2"	60 Foot Pounds
2-1/2"	60 Foot Pounds
3"	60 Foot Pounds
4"	60 Foot Pounds
6"	91 Foot Pounds
8"	91 Foot Pounds
10"	135 Foot Pounds
12"	135 Foot Pounds

100 Series Cast Iron Valves

(Includes 100M, 100W, 105W)

14"	217 Foot Pounds
16"	217 Foot Pounds

200MD DUCTILE IRON GATE VALVE



- ❖ Ductile Iron Body ❖ Resilient Wedge ❖ Mechanical Joint Ends
 - ❖ Fusion Bonded Epoxy Coating ❖ Non Rising Stem ❖ Stainless Steel Stem
- 250 PSI CWP**

Applications: Potable Water, Water Distribution Service & Feed Lines,
Sewage Disposal, Irrigation, Turf, Golf Course


Product Spec Sheet



AWWA C515
MJ Ends Per ANSI/AWWA C111/A21.11

DIMENSIONS & WEIGHTS

Size	L	D2	D1	D	G	H	BOLT CIRCLE	QTY x DIA BOLT HOLE	APPROX. WT .LBS
2"	8.3	6.30	3.5	2.68	.59	9.85	4.88	2 x .75	28
3"	8.0	7.62	4.9	4.06	.59	12.46	6.19	4 x .75	44
4"	9.0	9.12	6.0	4.94	.60	13.35	7.50	4 x .88	69
6"	10.5	11.06	8.1	7.11	.63	16.57	9.50	6 x .88	119
8"	11.5	13.31	10.3	9.16	.66	20.75	11.75	8 x .88	203
10"	13.0	15.62	12.3	11.21	.70	24.33	14.00	8 x .88	278
12"	14.0	17.88	14.4	13.31	.73	27.56	16.25	8 x .88	421

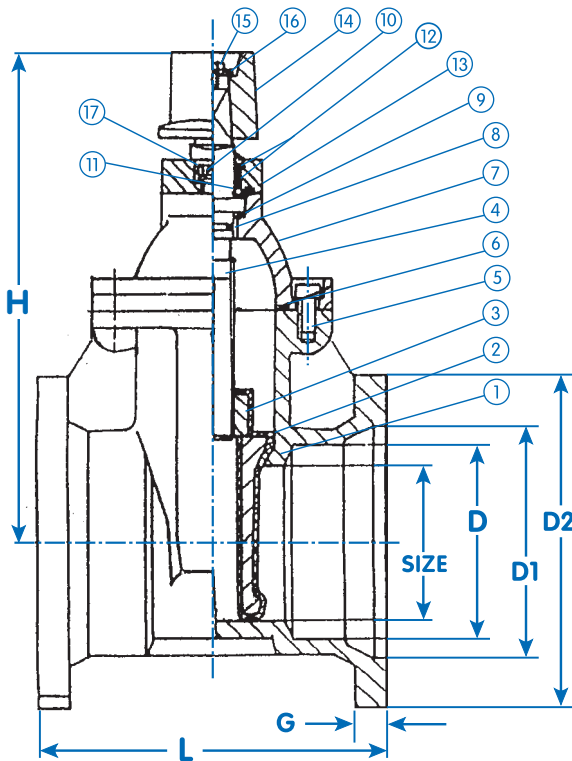

MATERIAL SPECIFICATIONS

NO.	Part	Material	ASTM Designation
1	Body	Ductile Iron	A536 65/45/12
2	Disc	D.I. Rubber Encapsulated	A536 65/45/12 /BUNA-N
3	Stem Nut	Bronze	B62
4	Stem	Stainless Steel	A276GR 304
5	Bonnet Bolt	Stainless Steel	GR 304
6	Bonnet Gasket	BUNA-N	Commercial
7	Bonnet	Ductile Iron	A536 65/45/12
8	Split Ring	Bronze	B62
9	Thrust Washer	Stainless Steel	GR 304
10	Packing Box Bolt	Stainless Steel	GR 304
11	Packing Box Gasket	BUNA-N	Commercial
12	O-Rings	BUNA-N	Commercial
13	Packing Box	Ductile Iron	A536 65/45/12
14	Operating Nut	Ductile Iron	A536 65/45/12
15	Top Bolt	Stainless Steel	GR 304
16	Washer	Stainless Steel	GR 304
17	Wiper Ring	BUNA N	Commercial



Brewster, NY
TEL: 800-431-2082
FAX: 800-640-2252

Houston, TX
TEL: 800-935-5456
FAX: 800-683-4247

La Palma, CA
TEL: 866-532-8306
FAX: 866-532-8307

Americus, GA
TEL: 800-433-7526
FAX: 800-533-5134

e-mail: mail@matco-norca.com

www.matco-norca.com

200M CAST IRON GATE VALVE




- ❖ Resilient Wedge ❖ MJ x MJ Ends Per AWWA C111/A21.11
- ❖ Non Rising Stem ❖ Bolted Bonnet ❖ Epoxy Coated ❖ Stainless Steel Stem
- 200 PSI NON-SHOCK WOG MAXIMUM TEMPERATURE 140°F**

Applications: Potable Water, Turf, Golf Course,
Water Distribution Service & Feed Lines, Sewage Disposal, Irrigation

Product Spec Sheet

Conforms with AWWA C-509
MJ Ends Per AWWA C111/A21.11

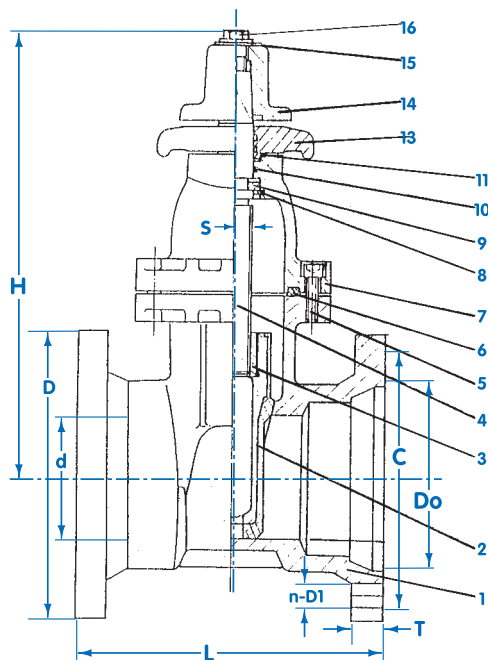

DIMENSIONS & WEIGHTS

SIZE d _ø (inches)	L	D	C	Do	n	D1	T	W	H	S	APROX. WT. LBS.
3"	7.99	7.68	6.18	4.96	4	.88	.94	7.87	13.19	1.10	53
4"	9.02	9.09	7.50	6.02	4	.88	.98	9.45	14.76	1.10	77
6"	10.71	11.10	9.49	8.11	6	.88	1.02	12.60	17.91	1.26	137
8"	11.50	13.35	11.73	10.28	6	.88	1.10	14.17	21.65	1.26	200
10"	12.99	15.67	14.00	12.36	8	.88	1.18	15.75	26.18	1.42	330
12"	14.02	17.91	16.25	14.44	8	.88	1.26	15.75	29.13	1.42	440

MATERIAL SPECIFICATIONS

NO.	PART	MATERIAL	ASTM DESIGNATION
1	Body	Cast Iron	A126 CLB
2	Disc	Ductile Iron Buna-N	A395 GR65-45-12 D2000
3	Stem Nut	Bronze	B62
4	Stem	Stainless Steel	A276 GR304
5	Bonnet Bolt	Stainless Steel	316
6	Bonnet Gasket	Buna-N	D2000
7	Bonnet	Cast Iron	A126 CLB
8	Clip Ring	Steel	C1065
9	Split Ring	Bronze	B62
10	O-Ring	Buna-N	D2000
11	Packing Box Gasket	Buna-N	D2000
12	Packing Box Bolt	Stainless Steel	316
13	Packing Box	Cast Iron	A126 CLB
14	Operating Nut	Cast Iron	A126 CLB
15	Washer	Stainless Steel	316
16	Top Bolt	Stainless Steel	316
17	Washer	Stainless Steel	316
18	Handwheel	Cast Iron	A126 CLB



Brewster, NY
TEL: 800-431-2082
FAX: 800-640-2252

Houston, TX
TEL: 800-935-5456
FAX: 800-683-4247

La Palma, CA
TEL: 866-532-8306
FAX: 866-532-8307

Americus, GA
TEL: 800-433-7526
FAX: 800-533-5134

e-mail: mail@matco-norca.com

www.matco-norca.com

100M AWWA C509 CAST IRON GATE VALVE



- ❖ Resilient Wedge ❖ MJ x MJ Ends Per AWWA C111/A21.11 ❖ Non Rising Stem
- ❖ Bolted Bonnet ❖ Fusion Bonded Epoxy Coated ❖ Stainless Steel Stem
- 150 PSI Non-Shock CWP* MAXIMUM TEMPERATURE 140°F**

Applications: Potable Water, Turf Irrigation, Golf Course,
Water Distribution Service & Feed Lines, Sewage Disposal



Product Spec Sheet



Conforms with AWWA C-509
MJ Ends Per AWWA C111/A21.11

DIMENSIONS & WEIGHTS

SIZE d _ø (inch)	L	D _ø	C _ø	h _ø	n	T	W _ø	H	H1	H2	S _ø	APP. WT. LBS
14	15.0	20.25	18.75	.88	10	1.38	15.75	38.50	10.50	49.00	1.63	810.0
16	16.0	22.50	21.00	.88	12	1.44	17.69	43.50	11.75	55.25	1.63	1160.0

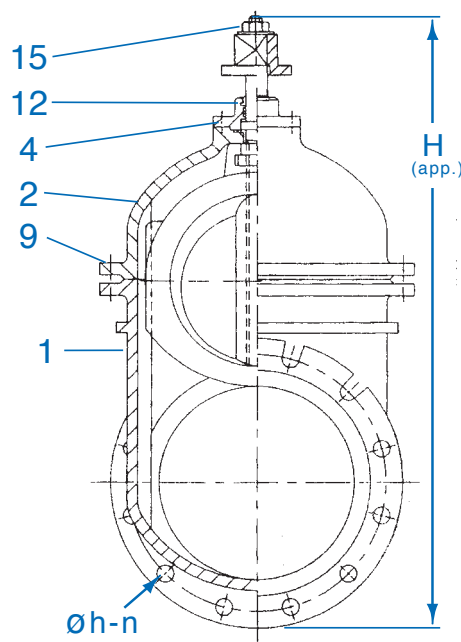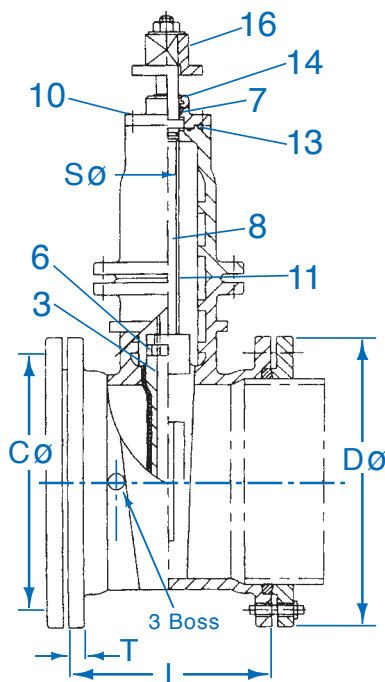

MATERIAL SPECIFICATIONS

NO.	PART	MATERIAL	ASTM DESIGNATION	NO.	PART	MATERIAL	ASTM DESIGNATION
1	Body	Cast Iron	A 126 Class B	12	Stuffing Box Bolt	Zinc Coated Steel	A 307 Grade B
2	Bonnet	Cast Iron	A 126 Class B	13	Bonnet Bolt & Nut	Zinc Coated Steel	A 307 Grade B
3	Stuffing Box	Cast Iron	A 126 Class B	14	Handwheel Washer	Zinc Coated Steel	A 284
4	Disc	Cast Iron & Rubber	(D2000)	15	Top Nut	Zinc Coated Steel	A 307 Grade B
5	Operating Nut	Cast Iron	A 126 Class B	16	Bonnet Gasket	Rubber	D 2000 AA 6014
6	Handwheel	Cast Iron	A 126 Class B	17	O-Ring A	Rubber	D 2000 AA 6014
7	Stem	Bronze	B21	18	O-Ring B	Rubber	D 2000 AA 6014
8	Stem Nut	Bronze	B62	19	O-Ring C	Rubber	D 2000 AA 6014
9	Gland	Bronze	B62	20	Wiper Ring	Rubber	D 2000 AA 6014
10	Thrust Washer	Brass	B36	21	Taper Seat	Rubber	D 2000 AA 6014
11	Stuffing Box Nut	Brass	B36	22	Gland Flanged	Cast Iron	A 126 Class B



Brewster, NY
TEL: 800-431-2082
FAX: 800-640-2252

Houston, TX
TEL: 800-935-5456
FAX: 800-683-4247

La Palma, CA
TEL: 866-532-8306
FAX: 866-532-8307

Americus, GA
TEL: 800-433-7526
FAX: 800-533-5134

e-mail: mail@matco-norca.com

www.matco-norca.com

10 Year Limited AWWA & UL/FM Valve Warranty

*

Matco-Norca Inc. warrants all of our AWWA and UL/FM gate valves and check valves to be free from defects in material and workmanship when used in the proper applications and under proper maintenance and operation for a period of 10 years from date of delivery.

*

The obligation and determination of any claim made to Matco-Norca is subject to approval by Matco-Norca and is limited to repair or replacement of the valve and reasonable repair charges, as deemed by Matco-Norca.

*

This warranty shall not apply to this product or any part thereof which has been subject to accident, negligence, alteration, abuse or misuse. Matco-Norca makes no warranty whatsoever in respect to added accessories or parts, and their effect on our product, when not supplied by Matco-Norca.

Matco-Norca Inc.- P.O. Box 27- Brewster, NY- 10509
1-800-431-2082