User Manual

AMIS-50
ADVANTECH
Enabling an Intelligent Planet

Copyright

The documentation and the software included with this product are copyrighted 2012 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

Acknowledgements

Intel and Pentium are trademarks of Intel Corporation. Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp. All other product names or trademarks are properties of their respective owners.

Instructions for the User

The document combines text and illustrations, providing a comprehensive overview of the system. The information is presented as a sequential step of actions, allowing the user to learn directly how to use the device.

The text provides explanations and instructs the user step-by-step in the practical use of the product, with short, clear instructions in an easy-to-follow sequence.

Warnings, Cautions and Notes



Warning! Warnings indicate conditions, which if not observed, can cause personal injury!



Caution! Cautions are included to help you avoid damaging hardware or losing



data. e.g.



Notes provide optional additional information.



Part No. 2008005000 Printed in Taiwan

Edition 1 April 2012

Product Warranty

WHAT'S COVERED & HOW LONG

Standard warranty covers two (2) - years structural components, two (2) - years for computer system and electronics, two (2) - year for battery system.

- Warranty coverage begins on product's date of delivery. Standard warranty does not cover problems resulting from product abuse, negligence/accident, misuse, improper operation, post-delivery physical damage, and/or product modifications without Advantech's prior written approval.
- External peripherals (including: computing equipment/devices, monitors, keyboards, mice, are not included in this warranty.

Advantech shall not be liable for any consequential or incidental damages.

HOW WE HELP YOU

Support services provided along with the standard warranty must be requested within the expressed warranty time frame for the product element.

- Technical support may request customer collaboration and assistance during diagnosis to provide for the next business day service resolution. Typically, this requires, but is not limited to:
- Identifying a primary contact representative (with phone number and e-mail address) to work with Advantech and answer relevant questions.
- Providing the serial ID number and access to the product.
- Performing basic troubleshooting activities as directed by Advantech technical support.

Resolution methods can include, but are not limited to, any of the following:

- Verbal/written instructions to correct the problem.
- Shipping of replacement parts.
- On-site dispatch of an Advantech authorized service technician.

If needed, Advantech will involve its design engineers or supplier partners for resolution assistance and customer's satisfaction. Determination for resolving warranty issues will be at Advantech's sole discretion.

Safety Instructions

- 1. Strictly follow these instructions for use; please read these safety instructions carefully.
- 2. Keep this user manual for later reference; any use of the product requires full understanding and strict observation of all portions of these instructions.
- 3. Repair of the device may also only be carried out by trained service personnel.
- 4. Advantech recommends that a service contract be obtained with Advantech Service and that all repairs also be carried out by them. Otherwise the correct functioning of the device may be compromised.

Warning! Because of the danger of electric shock, never remove the box of a device while it is in operation or connected to a power outlet.



- 5. If one of the following situations arises, have the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well, or you cannot get it to work according to the user's manual.
 - The equipment has been dropped and damaged.
 - The equipment has obvious signs of breakage.
- Disconnect this equipment from any AC outlet before cleaning. Use a damp 6. cloth. Do not use liquid or spray detergents for cleaning and keep this equipment away from humidity.

Caution! To avoid short-circuits and otherwise damaging the device, do not allow



fluids to come in contact with the device. If fluids are accidentally spilled on the equipment, remove the affected unit from service as soon as possible and contact service personnel to verify that patient safety is not compromised.

7. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.

Caution! Do not leave this equipment in an uncontrolled environment where the



storage temperature is below 0° C or above 50° C. This may damage the equipment.

8. If your computer clock is unable to keep accurate time or the BIOS configuration resets to default, please check the battery.



Caution! Do not replace the battery yourself. Please contact a gualified technician or your retailer.

> The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.



Caution! When servicing the device, always use replacement parts that meet Advantech standards. Advantech Medical cannot warrant or endorse the safe performance of third-party replacement parts for use with our medical device.

Safety Information

For your own safety and that of your equipment, always take the following precautions.

Disconnect the power plug (by pulling the plug, not the cord), from your computer if any of the following conditions exists:

- The power cord or plug becomes frayed or otherwise damaged
- Your cart has been damaged
- You suspect that your computer needs service or repair
- You want to clean the cart or screen
- You want to remove/install any parts

GROUNDING

Connect the AMiS Cart to an equivalent receptacle marked "Grounding material" to ensure ground.

SERVICE AND REPLACEMENT

Do not attempt to service or replace any part of the AMiS Cart unless directed to do through Advantech approved documentation (i.e., this User Manual or other instructions). Only Advantech or an Advantech certified entity may service or replace the cart components. If any component on the cart is missing or damaged, the cart must not be used. Contact Advantech immediately to request service.

DO NOT OPEN THE POWER SYSTEM

Injury and/or death may be caused by unauthorized personnel opening the power system. If the unit is not working properly, please contact Advantech.

We do not allow customer to swap battery pack or cells, if we find the power system has been opened/disassembled by customer, Advantech will not guarantee the power system warranty from then on.

DO NOT USE THE UNIT IN OR NEAR WATER OR OTHER LIQUIDS

If the unit becomes wet, unplug it immediately, wipe away any excess liquid and allow it to dry before use.

Failure to do so can result in injury and/or death.

Additional Information and Assistance

- 1. Visit the Advantech website at http://support.advantech.com where you can find the latest information about the product.
- 2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages
 - This equipment is a source of electromagnetic waves. Before use please make sure that there are not EMI sensitive devices in its surrounding which may otherwise malfunction

ENVIRONMENTAL PROTECTION

Follow national requirements to dispose of unit.

Contents

Chapter	1	General Information	1
	1.1	Introduction Specifications	2
	1.2	Specifications	2
	1.3	Dimensions	
		Figure 1.1 Dimensions	3
Chapter	2	Profiles	5
	2.1	Overview	6
	2.2	A Quick Tour of AMiS-50 Features	6
	2.3	Features	7
Chapter	3	System Setup	9
	3.1	Quick Start	
	3.2	Introduction to Functions	



General Information

1.1 Introduction

AMiS (Advantech Medical and Intelligent Station) means "friends" in French, as it acts like a powerful assistant to accompany doctors and clinicians.

AMiS-50 is an all-in-one computerized medical cart. Nursing carts help nurses record patient information during visits, reduce transcription errors, and improve the speed of recording, transmitting and searching. They eliminate handwritten paperwork and storage, help deliver better professional healthcare, and create a safer digital medical environment.

AMiS-50 is a highly integrated computerized nursing cart designed to optimize patient care process and enable mobile point-of-care.

1.2 Specifications

Category	Attributes	AMiS-50
Computer Module Base Cart	CPU	Intel Atom D510 1.66 GHz with 1M L2 cache
	Memory	2 GB DDR2 SODIMM
	Storage	2.5" SATA HDD 160 GB Supports Compact Flash Type I/II
	WLAN	802.11a/b/g/n
	Operating System	Supports Microsoft XP Professional, XP Embedded, Vista, Windows 7
	Footprint	19.7"x18.5" (500 mm ~ 470 mm)
	Casters	125 mm x 125 mm (Medical casters, two locking, two non-locking)
	Height Adjustment Range	32.0" ~ 45.8" (813 ~ 1163 mm)
	Display Holder	Standard VESA Mount (VESA 75/75; VESA 100/ 100)
	I/O Ports	USB 2.0 ports x 4, Gigabit Ethernet interface (RJ- 45) x 1
	Dashboard	Battery power button Computer power button LED for battery capacity indication
	Work Surface	18.5" x 19.3" (469.9 x 489.9 mm) Weight capacity: Gas spring: Up to 17.6 lb./8 kg (based on Std. 400N) Motor: Up to 88 lb./40 kg (based on Std. 400N)
	Cart Weight	99 lb. / 45 kg w/o display, computer and power module
	Keyboard & Mouse Area	Keyboard size: Up to 380 x 140 x 25 mm Keyboard LED light, Mouse tray
	Extended Accesso- ries Used	Neck: Dove Tail Work Surface: Din Rail (Right, Left and Rear)

Power Module	Battery Type	Lithium-Iron Phosphate
	Battery Capacity	420 Wh
	Power Input Voltage	e 100-240Vac, 50-60H, Max 4.5A
	Battery Life SPAN	DOD 80%, 2000 cycles
	Battery Runtime	8~10 Hours
	Battery Charge Time	< 3hr. DOD 100%
	Certifications	EN60601-1, UL60601-1, CE, FCC Class B, Medical CB
Power Manager Software		Battery capacity indicator
		Alerts (battery capacity, temperature, warning)
	AMiS_Link	Battery Life cycle statistics
		Report & log file
		Client Installation Server Installation (Optional)
		Multi-language support, including Chinese Tradi- tional, Chinese Simple, English, German and Dutch

1.3 Dimensions

Dimensions: 551.7 x 639.3 x 1567.9 (Units: mm)





Profiles

2.1 Overview









Back View

Side View

2.2 A Quick Tour of AMiS-50



2.3 Features

Adjustable Table



Extended Table






System Setup

3.1 Quick Start

Before you start to set up the AMiS-50, take a moment to become familiar with the location and purposes of the controls, drives, connections and ports, which are illustrated in the figures below.

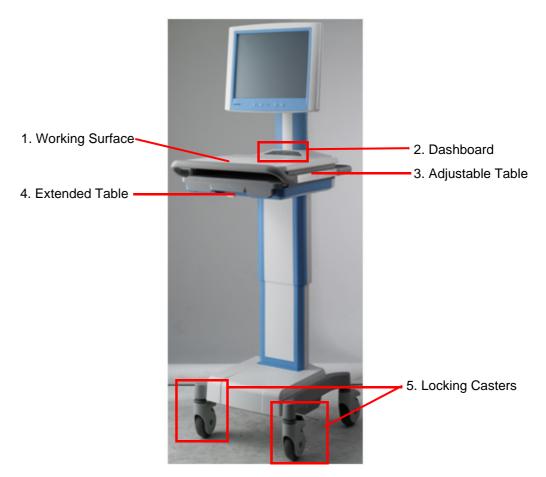


Front View

Back View




3.2 Introduction to Functions

1. Working surface, Press the on/off button to turn the keyboard light on/off in one touch.

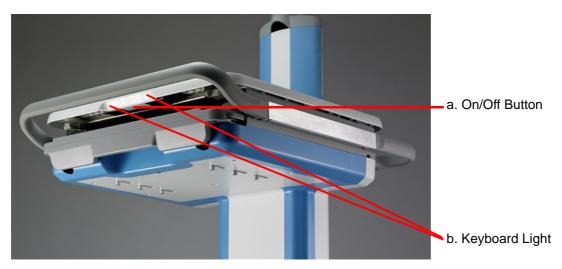

2. Dashboard

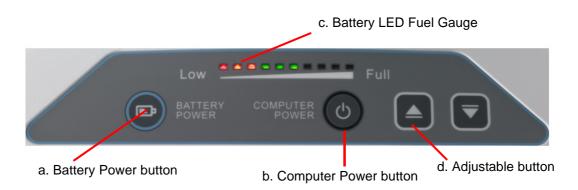

Power on Battery: Press and hold button (a) for 4-7 seconds ==>LED (c) will display battery status.

Power off Battery: Press and hold button (a) for 4-7 seconds ==>LED (c) indicators will shut off.

Power on Computer:

- 1. Make sure button (a) has already been pressed and LED (c) is displayed.
- Press button (b) = > the system will boot up and a status light (b) will continu-2. ously be illuminated indicating that the system is running.

Power off Computer:

Press button (b) ==> the computer will shut down and the indicator light (b) will intermittently flash.

Battery LED Fuel Gauge:

There are total 10 LEDs, each one indicates as 10% of power capacity. When LED Fuel Gauge < 30%, the LED will start to flash as battery capacity low alarm.

- Note! Power on Battery, make sure to press and hold battery power button for 4 seconds in order to power on battery
- After battery system has been turned on, press computer power
- button once to power on computer system.
- Battery runtime: 8 ~ 10 hours; Battery charge time: 3 ~ 4 hours
- When unit is plugged in and AC LED is blinking continuously, it means that the battery is charging from AC input. When all the LEDs change from blinking to solid lights, it means the battery is fully charged.
- iPS-M420 battery configuration:

Rear View:



Front View:



- 1) System 1 output connector (15-19Vdc, 6A)
- 2) System 2 output connector (12Vdc, 4A)
- 3) Remote control connector
- 4) RJ-45 (to RS-232) connector
- 5) AC inlet with switch and fuse
- 6) Ground pole
- 7) AC switch in the front

3. Adjustable Table

Press the up/down button to adjust height.





Warning! Release the UP/ DOWN button when table is in highest or lowest position. If the button is held continuously for over 2 minutes, the motor protect function will be triggered for 18 minutes and exit automatically. During protection mode, UP/DOWN function will not work.

Cart Retracted Downwards






Cart Extended Upwards





4. Extended Table

Trays beneath the tabletop are designed with space to house keyboard and mouse (For both left-handed and right-handed users).

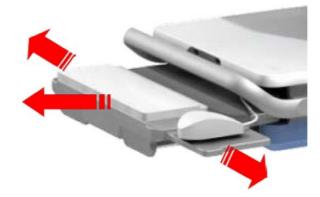

5. Locking Casters Locking casters quickly lock in place with a foot-activated lever.



6. VESA Mount



Monitor Adaptation with Tilt/ Swivel Function, VESA Mounting: 75 x 75 mm; 100 x 100 mm Rail Plate with Quick Release Maximum weight: 18 kg



If the total additional weight on or attached to the table is over 50 kg, the height adjustment system may not work.

7. I/O Port Area

Remove cover to access 4 x USB 2.0 ports



1 x RJ-45 port, Gigabit Ethernet interface





www.advantech.com

Please verify specifications before quoting. This guide is intended for reference purposes only.

All product specifications are subject to change without notice.

No part of this publication may be reproduced in any form or by any means, electronic, photocopying, recording or otherwise, without prior written permission of the publisher.

All brand and product names are trademarks or registered trademarks of their respective companies.

© Advantech Co., Ltd. 2012