


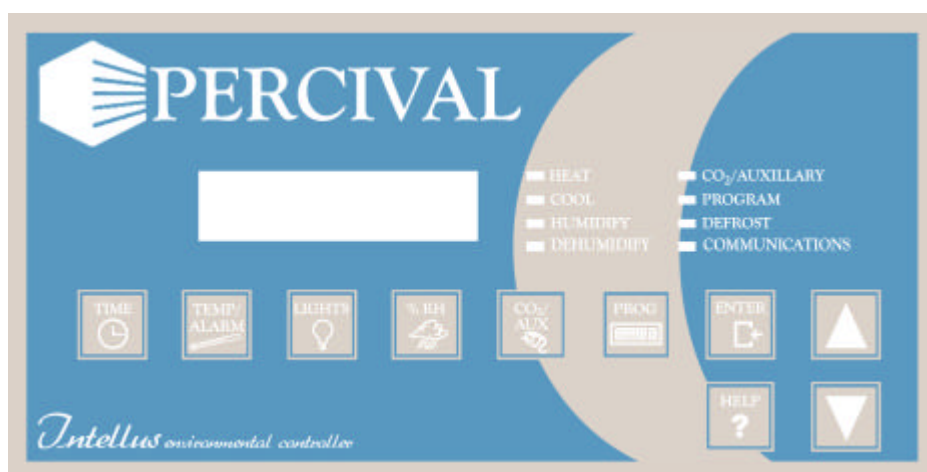

Advanced Intellus Controller Manual

Table of Contents

Introduction.....	1
How to Use the Keys and Display	1
Intellus Basic Operation.....	3
Setting Time.....	3
Help	3
Status Menu.....	3
Lighting.....	4
Temperature Menu	4
Menu Entry	5
Menu Navigation.....	5
Modifying Settings.....	5
Exiting Menu.....	5
Manual Temperature Set Point	5
Temperature High Safety Setting.....	5
Temperature Low Safety Setting	5
Day Temperature Calibration Offset	6
Night Temperature Calibration Offset	6
Number Of Defrosts.....	6
Defrost Duration	6
Defrost X Start.....	6
Lights Menu.....	6
Menu Entry	7
Menu Navigation.....	7
Modifying Settings.....	7
Exiting Menu.....	7
Lighting Settings	7
Light Lifetime Display.....	8
Light Lifetime Reset	8
%RH Menu	8
Menu Entry	8
Menu Navigation.....	8
Modifying Settings.....	8
Exiting Menu.....	8
Manual %RH Set Point.....	9
Enable Humidify Setting.....	9
Enable Dehumidify Setting	9
Day %RH Calibration Offset	9
Night %RH Calibration Offset.....	9
CO ₂ /Aux Menu	9
Menu Entry	10
Menu Navigation.....	10
Modifying Settings.....	10
Exiting Menu.....	10
Manual CO ₂ /AUX Set Point	10
Enable CO ₂ /Aux Output 1 Setting	10
Enable CO ₂ /Aux Output 2 Setting	10

Table of Contents

Day CO ₂ /Aux Calibration Offset	10
Night CO ₂ /Aux Calibration Offset.....	11
Alarms	11
Using Auxiliary Channel For Temperature Safeties (optional)	11
Using Auxiliary Channel For Dimmable Lighting (optional)	12
Defrost Programming (optional)	13
Condensing Unit Shutdown Feature (optional)	13
Running Manual Settings.....	14
Programming.....	14
Creating a New Program.....	14
Editing a Program.....	16
Deleting a Program.....	17
Copying a Program.....	17
Creating a Sequence of Programs	17
Running Programs / Sequence of Programs	19
Setting Program Operation Mode	20
Calibration Offsets	22
Sample Program.....	23
Configuring Security (optional)	26
Level 4.....	27
Level 3.....	27
Level 2.....	27
Level 1.....	27
Security Level.....	27
Logging In/Out.....	28
Disabling Security.....	29
Program Entry Table	30

Introduction

Please feel free to contact Percival Scientific with any questions you may have about this manual or using the Intellus controller by calling 1-800-695-2743 or 515-465-9363 or by sending e-mail to service@percival-scientific.com.

How to Use the Keys and Display

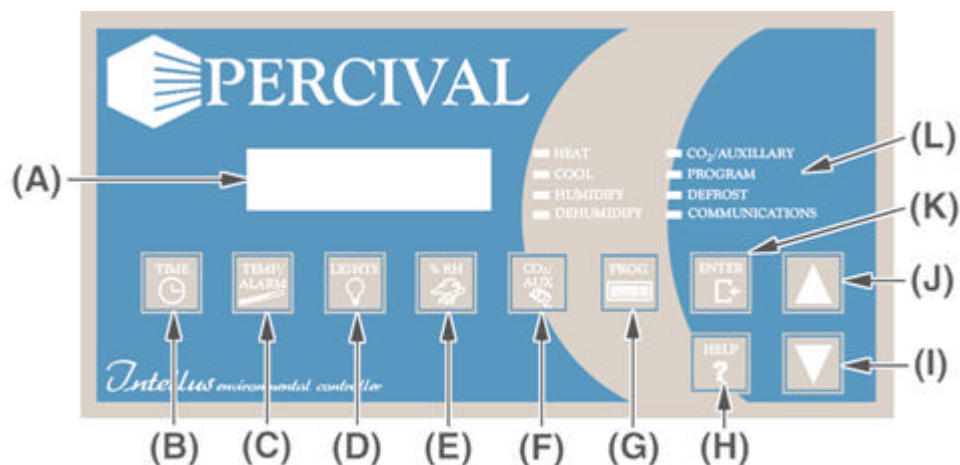


Figure 1 – Intellus Display and Key Reference

(A) Main Display, (B) Time Key, (C) Temp/Alarm Key, (D) Lights Key, (E) %RH Key, (F) CO₂/Aux Key, (G) Prog Key, (H) Help Key, (I) Decrement Key, (J) Increment Key, (K) Enter Key, (L) LEDs

Refer to Figure 1:

Main Display (A)

The main display shows all status and programming information.

Time Key (B)

The Time key is used to set the system time and is also used when programming. When programming, it is used to set the time parameter of each step. Refer to the “Programming” section for more information.

Temp/Alarm Key (C)

The Temp/Alarm key is used to enter the Temp/Alarm Menu. The Temp/Alarm Menu contains entries for the manual temperature setting, high and low safety settings, calibration offset settings and defrost settings (if applicable). It is also used when programming to set the temperature parameter of each step.

Lights Key (D)

This key is only active if a lighting option was ordered for the chamber. The Lights key is used to enter the Lights Menu. The Lights Menu contains entries for light settings and light lifetime information. It is also used when programming to set the lighting parameters of each step.

%RH Key (E)

This key is only active if a humidity option was ordered for the chamber. The %RH key is used to enter the %RH Menu. The %RH Menu contains entries for the manual humidity setting, humidify/dehumidify activation settings and calibration offset settings. It is also used when programming to set the %RH parameter of each step.

CO₂/Aux Key (F)

This key is only active if a CO₂/Aux option was ordered for the chamber. The CO₂/Aux key is used to enter the CO₂/Aux Menu. The CO₂/Aux Menu contains entries for the manual CO₂/Aux setting, CO₂/Aux output activation settings and calibration offset settings. It is also used when programming to set the CO₂/Aux parameter of each step.

Prog Key (G)

This key is used to enter the Program Menu. The Program Menu contains selections used to enter/edit programs, run programs or run manual settings. Refer to the section titled “Programming” for more information.

Help Key (H)

This key is used to display help information.

Decrement (I) / Increment (J) Keys

These keys are used to scroll through available menu options and to decrease or increase values.

Enter Key (K)

This key is used to begin editing values and to accept changes of values.

Status LEDs (L)

- The Heat LED illuminates when the controller calls for chamber heating.
- The Cool LED illuminates when the controller calls for chamber cooling.
- The Humidify LED illuminates when the controller calls for the level of humidity to increase in the chamber.

- The Dehumidify LED illuminates when the controller calls for the level of humidity to decrease in the chamber.
- The CO₂/Auxiliary LED illuminates when the controller calls for the level of CO₂/auxiliary to increase in the chamber.
- The Program LED illuminates when the controller is running a program. The LED is off when the controller is running manual settings. The LED flashes when entering/editing a program. Refer to the sections titled “Running Manual Settings” and “Programming” for more information.
- The Defrost LED illuminates when the controller is running a defrost period. Refer to the section titled “Defrost Programming” for more information.

Note : Only the appropriate LEDs for the options ordered will function.

Intellus Basic Operation

When power is applied to the Intellus controller the display shows the current process values inside the chamber. This display will be referred to as the “main display” throughout this manual.

After one minute with no key activation, the controller will always revert to the main display.

Setting Time

To set the time use the following steps:

1. Press the **TIME** key.
2. Press the **ENTER** key.
3. Use the ▲ and ▼ keys as necessary to set the current time and then press **ENTER**.
4. Press the **TIME** key to return to the main menu.

Help

Help is available at any time by pressing the **HELP** key. The appropriate help information will be displayed for the current display or prompt. Use the ▲ and ▼ keys as necessary to review help information. Press the **HELP** key again to exit help.

Status Menu

The Status Menu displays the following information:

- Current process values in the chamber (main display). Refer to Figure 2.
- Current set points.
- Alarm information.

- Lighting status (displays only if lighting option was ordered with chamber).
- Program sequence status (if a program sequence is running).

To navigate through the Status Menu, use the ▲ and ▼ keys as necessary.

3:30PM	24.0C	75%RH
LT:110		800PPM

Figure 2 – Main Display

The main display shows the following information:

- Current time (3:30PM in Figure 2).
- Current temperature (24.0C in Figure 2).
- Current %RH (75% in Figure 2). Note: Only displays if a humidity option was ordered.
- Current light settings (110 in Figure 2). Note: Only displays if a lighting option was ordered. If a non-feedback dimmable lighting option was ordered each output is displayed as a graphical block.
- Current CO₂/Aux level (800PPM in Figure 2). Note: Only displays if a CO₂/Aux option was ordered.

Lighting

The advanced Intellus controller is capable of programming/displaying up to sixteen separate light outputs. Not all of these outputs will be utilized in every chamber. The standard number of outputs utilized is two. The controller only displays the total number of light outputs utilized.

Lights are normally displayed and programmed using a '1' to represent on and a '0' to represent off. Refer to Figure 2. According to this display, light outputs #1 and #2 are on and light output #3 is off. If a non-feedback dimmable lighting option was ordered, lights are displayed as graphical blocks. Please refer to the sections titled "Lights Menu" and "Programming" for more information on using the controller to program chamber lighting.

Temperature Menu

The Temperature Menu contains the following settings:

- Manual temperature set point.
- Temperature high safety setting.
- Temperature low safety setting.
- Day temperature calibration offset.
- Night temperature calibration offset.

- Number of defrosts (only appears if low temperature option was ordered)
- Defrost Duration (only appears if low temperature option was ordered)
- Defrost X Start (only appears if low temperature option was ordered)

Menu Entry

To enter the Temperature Menu, press the **TEMP/ALARM** key.

Menu Navigation

To navigate through the menu, use the ▲ and ▼ keys as necessary.

Modifying Settings

To change any setting, press the **ENTER** key, use the ▲ and ▼ keys as necessary to change the setting and then press the **ENTER** key again to accept the change.

Exiting Menu

To exit the Temperature Menu, press the **TEMP/ALARM** key.

Manual Temperature Set Point

This set point is used when running manual settings. Refer to the section titled “Running Manual Settings” for more information.

Temperature High Safety Setting

This setting determines the process value at which the controller will trigger a high safety alarm. When a safety alarm occurs, the chamber will shut down its control functions. It is recommended that you set the high safety at least 3°C above your highest programmed temperature. When programming, be sure to note the highest temperature programmed. Use this temperature as the reference point for setting the high safety. Refer to the section titled “Alarms” for more information regarding alarms. This setting appears under the CO₂/Aux menu when the auxiliary channel is used to control temperature safeties.

Temperature Low Safety Setting

This setting determines the process value at which the controller will trigger a low safety alarm. When a safety alarm occurs, the chamber will shut down its control functions. It is recommended that you set the low safety at least 3°C below your lowest programmed temperature. When programming, be sure to note the lowest temperature programmed. Use this temperature as the reference point for setting the low safety. Refer to the section titled “Alarms” for more information regarding alarms. This setting

appears under the CO₂/Aux menu when the auxiliary channel is used to control temperature safeties.

Day Temperature Calibration Offset

This setting determines the offset the controller will use when one or more of the light outputs are on. The value chosen is added to the temperature input value and the new value is displayed and used for control. Refer to the section titled “Calibration Offsets” for more information.

Night Temperature Calibration Offset

This setting determines the offset the controller will use when all of the light outputs are off. The value chosen is added to the temperature input value and the new value is displayed and used for control. Refer to the section titled “Calibration Offsets” for more information.

Number Of Defrosts (only appears if it is determined that chamber may need defrost periods)

This setting determines the number of defrost periods that will occur over a twenty-four hour period. A maximum number of six periods can be programmed. When constantly running at low temperatures, Percival Scientific recommends a setting of two defrost periods set twelve hours apart. The necessity for programming defrost periods can be gauged by observing the inability of the chamber to hold the set point at low temperatures.

Defrost Duration (only appears if it is determined that chamber may need defrost periods)

This setting determines the length that each defrost period will last. The duration can be set between one and 999 minutes. Percival Scientific recommends seven minutes for each defrost period. Refer to the section titled “Defrost Programming” for more information.

Defrost X Start (only appears if it is determined that chamber may need defrost periods)

A prompt will appear to enter the start time for each defrost period. The number of periods is selected under the ‘Number Of Defrosts’ prompt. Refer to the section titled “Defrost Programming” for more information.

Lights Menu

The Lights Menu is only visible if a lighting option was ordered.
The Lights Menu contains the following settings:

- Lighting settings for lighting outputs 1-16.
- Light lifetime display for lighting outputs 1-16
- Light lifetime reset for lighting outputs 1-16

Changing light settings in this menu when running a program will override the programmed light settings for the current executing step.

Note : Not all of the lighting outputs will be utilized in every chamber. The standard number of outputs utilized is two. The controller only displays the total number of light outputs utilized.

Menu Entry

To enter the Lights Menu, press the **LIGHTS** key.

Menu Navigation

To navigate through the menu, use the ▲ and ▼ keys as necessary.

Modifying Settings

To change any setting, press the **ENTER** key, use the ▲ and ▼ keys as necessary to change the setting and then press the **ENTER** key again to accept the change.

Exiting Menu

To exit the Lights Menu, press the **LIGHTS** key.

Lighting Settings

These settings are used to manually change the lighting settings. When standard lighting is provided a setting of 'On' will turn the lights connected to the output on. A setting of 'Off' will turn the lights connected to the output off. When dimmable lighting is provided each output can be set for a level between off and 100%. Changing light settings in this menu when running a program will override the programmed light settings for the current executing step.

Note (dimmable lighting): The lights will be off when the lighting level is set between 0 and a factory preset threshold value. This limit is based on the minimum output level required to provide stable lighting. Please refer to the operation manual or the supplemental information provided with the operation manual for the threshold value. Any LED model is an exception. A setting of 0 in these models will turn the LEDs off. Any setting greater than 0 will turn the LEDs on.

Light Lifetime Display

The amount of time that each light output has been on is displayed individually for each output. This information can be used for light maintenance. Percival Scientific recommends that fluorescent lights be changed at 5000 hour intervals. When the light lifetime for an output reaches 5000 hours, change the bulbs that are powered by that output. Once this has been completed, reset the light lifetime for the output.

Light Lifetime Reset

Light lifetime reset allows you to reset the accumulated time that a light output has been on. To reset the time, select the output you wish to reset. Press the **ENTER** key, use the **▲** and **▼** keys as necessary to change the setting to 'Yes' and then press the **ENTER** key again. The accumulated time will reset to 0 hours.

%RH Menu

The %RH Menu is only accessible if a humidity option was ordered.

The %RH Menu contains the following settings:

- Manual humidity (%RH) set point.
- Enable Humidification
- Enable Dehumidification
- Day humidity calibration offset.
- Night humidity calibration offset.

Menu Entry

To enter the %RH Menu, press the **%RH** key.

Menu Navigation

To navigate through the menu, use the **▲** and **▼** keys as necessary.

Modifying Settings

To change any setting, press the **ENTER** key, use the **▲** and **▼** keys as necessary to change the setting to your requirement and then press the **ENTER** key again to accept the change.

Exiting Menu

To exit the %RH Menu, press the **%RH** key.

Manual %RH Set Point

This set point is used when running manual settings. Refer to the section titled “Running Manual Settings” for more information.

Enable Humidify Setting

This setting is used to turn the humidification system of the chamber on or off. A setting of ‘On’ will activate the humidification system as necessary. When an extreme low level of humidity is required, it is recommended that the ‘Enable Humidify’ setting be set to ‘Off’.

Enable Dehumidify Setting

This setting is used to turn the dehumidification system of the chamber on or off. A setting of ‘On’ will activate the dehumidification system as necessary. When an extreme high level of humidity is required, it is recommended that the ‘Enable Dehumidify’ setting be set to ‘Off’.

Day %RH Calibration Offset

This setting determines the offset the controller will use when one or more of the light outputs are on. The value chosen is added to the %RH input value and the new value is displayed and used for control. Refer to the section titled “Calibration Offsets” for more information.

Night %RH Calibration Offset

This setting determines the offset the controller will use when all of the light outputs are off. The value chosen is added to the %RH input value and the new value is displayed and used for control. Refer to the section titled “Calibration Offsets” for more information.

CO₂/Aux Menu

The CO₂/Aux Menu is only accessible if a CO₂ or auxiliary option was ordered.

The CO₂/Aux Menu contains the following settings:

- Manual CO₂/Aux set point.
- Enable CO₂/Aux output 1
- Enable CO₂/Aux output 2
- Day CO₂/Aux calibration offset.
- Night CO₂/Aux calibration offset.

Menu Entry

To enter the CO₂/Aux Menu, press the **CO₂/AUX** key.

Menu Navigation

To navigate through the menu, use the ▲ and ▼ keys as necessary.

Modifying Settings

To change any setting, press the **ENTER** key, use the ▲ and ▼ keys as necessary to change the setting to your requirement and then press the **ENTER** key again to accept the change.

Exiting Menu

To exit the CO₂/Aux Menu, press the **CO₂/AUX** key.

Manual CO₂/AUX Set Point

This set point is used when running manual settings. Refer to the section titled “Running Manual Settings” for more information.

Enable CO₂/Aux Output 1 Setting

This setting is used to turn the CO₂ or auxiliary output 1 of the chamber on or off. A setting of ‘On’ will activate the output as necessary.

Note: When the auxiliary channel is used for dimmable lighting this setting should always be set to ‘On’.

Enable CO₂/Aux Output 2 Setting

This setting is used to turn the CO₂ or auxiliary output 2 of the chamber on or off. A setting of ‘On’ will activate the output as necessary.

Day CO₂/Aux Calibration Offset

This setting determines the offset the controller will use when one or more of the light outputs are on. The value chosen is added to the CO₂/Aux input value and the new value is displayed and used for control. Refer to the section titled “Calibration Offsets” for more information.

Night CO₂/Aux Calibration Offset

This setting determines the offset the controller will use when all of the light outputs are off. The value chosen is added to the CO₂/Aux input value and the new value is displayed and used for control. Refer to the section titled “Calibration Offsets” for more information.

Alarms

The Intellus controller will alert you to controller errors and to temperature safety alarms. An example controller error would be if a sensor were not correctly connected to the controller. Alarms cannot be set while programming.

High and low temperature safety alarms can be set in the Temperature Menu.

To adjust the temperature safety alarms use the following steps:

1. Press the **TEMP/ALARM** key.
2. Use the ▲ and ▼ keys as necessary to select ‘Safety High Alarm’ and then press **ENTER**.
3. Use the ▲ and ▼ keys as necessary to change the high safety alarm and then press **ENTER**.
4. Press the ▼ key. You will be prompted to enter the ‘Safety Low Alarm’. Press the **ENTER** key.
5. Use the ▲ and ▼ keys as necessary to change the low safety alarm and then press **ENTER**.
6. Press the **TEMP/ALARM** key to return to the main display.

When a temperature safety alarm occurs, the controller shuts down all chamber control components. This protects your experiment from overheating or overcooling. A message indicating the type of safety alarm will be displayed and a buzzer will activate. To stop the buzzer, press any key. To clear the safety message, you will need to change the high or low safety alarm settings beyond the current temperature in the chamber.

When a controller alarm occurs a message indicating the type of alarm will be displayed and a buzzer will activate. To stop the buzzer, press any key. To clear the alarm, you will need to correct the cause of the alarm.

Using Auxiliary Channel For Temperature Safeties (optional)

If the option was ordered to utilize a separate sensor for the temperature safeties then the auxiliary channel has been configured to monitor the temperature in the chamber. The temperature that the auxiliary sensor reads is displayed in the lower right-hand corner of the display. This is the temperature that is used to determine when a safety occurs.

The high and low safety settings appear under the auxiliary menu instead of the temperature menu.

To set the high and low safety settings, use the following steps:

1. Press the **CO₂/AUX** key.
2. You will be prompted to enter the 'Safety High Alarm'. Press the **ENTER** key. Use the **▲** and **▼** keys as necessary to change the high safety alarm and then press **ENTER**.
3. Press the **▼** key. You will be prompted to enter the 'Safety Low Alarm'. Press the **ENTER** key. Use the **▲** and **▼** keys as necessary to change the low safety alarm and then press **ENTER**.
4. Press the **CO₂/AUX** key to exit the menu.

If the auxiliary temperature reading disagrees with the normal temperature reading then the auxiliary calibration offsets will need to be adjusted. Adjust both offsets to agree with the normal temperature reading.

To adjust the auxiliary calibration offsets, use the following steps:

1. Press the **CO₂/AUX** key.
2. Use the **▲** and **▼** keys as necessary to select 'Day Aux Offset'.
3. Press the **ENTER** key. Use the **▲** and **▼** keys as necessary to change the day aux offset and then press **ENTER**.
4. Press the **▼** key. You will be prompted to enter the 'Night Aux Offset'.
5. Press the **ENTER** key. Use the **▲** and **▼** keys as necessary to change the night aux offset and then press **ENTER**.
6. Press the **CO₂/AUX** key to exit the CO₂/Aux menu.

Using Auxiliary Channel For Dimmable Lighting (optional)

If the option was ordered to control the level of lighting via feedback from a light sensor then the auxiliary channel has been configured for this purpose. The current level of lighting read by the light sensor is displayed in the lower right hand corner of the display. The CO₂/Aux menu is used to set the level of lighting required. Refer to the 'CO₂/Aux Menu' section of this manual for information on using this menu to control the lighting. Please note that the CO₂/Aux key on the controller overlay may have been renamed 'Light Dimm' when dimmable lamps are utilized.

Dimmable ballasts have a minimum output level that they can produce. The controller has been configured to turn off the lights at a set point below this level. Please refer to the operation manual or supplemental information that has been provided with the operation manual for information on the threshold value at which the dimmable lamps will turn off.

Note: When this option is provided, the 'Enable Aux Output 1' option should always be set to 'On'.

Defrost Programming (optional)

When a low temperature option is ordered or it is determined that the chamber may need defrost periods the controller will be configured to allow the defrosting of the chamber's cooling coil(s). Up to six defrost periods can be programmed over a twenty-four hour period. When constantly running low temperatures, Percival Scientific recommends that two seven minute periods be programmed twelve hours apart. The number of and/or duration of periods may need to be adjusted. The necessity for programming defrost periods can be gauged by observing the inability of the chamber to hold the set point at low temperatures.

To program defrost periods, use the following steps:

1. Press the **TEMP/ALARM** key.
2. Use the **▲** and **▼** keys as necessary to select 'Number Of Defrosts'.
3. Press the **ENTER** key. Use the **▲** and **▼** keys as necessary to select the number of defrost periods required and then press the **ENTER** key.
4. Press the **▼** key. You will be prompted to enter the 'Defrost Duration'.
5. Press the **ENTER** key. Use the **▲** and **▼** keys as necessary to set the duration of each defrost period and then press the **ENTER** key.
6. Press the **▼** key. You will be prompted to enter the 'Defrost 1 Start'. This is the time that the first defrost period will start.
7. Press the **ENTER** key. Use the **▲** and **▼** keys as necessary to set the start time of the first defrost period and then press the **ENTER** key.

If you programmed to have more than one defrost period then you will need to set the remaining start times. To set the remaining times:

1. Press the **▼** key to advance to the next period.
2. Press the **ENTER** key. Use the **▲** and **▼** keys as necessary to set the start time of the defrost period and then press the **ENTER** key.

Once you have set the start times for each period, press the **TEMP/ALARM** key to exit the temperature menu.

Condensing Unit Shutdown Feature (optional)

On chambers ordered with a high temperature range (generally over 44°C), the condensing unit will shut down at a pre-determined temperature. The temperature that the condensing unit will shut off at in your chamber is approximately 40.0°C. The condensing unit will remain off above this temperature. This design protects the condensing unit from overheating.

Running Manual Settings

Static set points for temperature, humidity and CO₂/Aux can be run as necessary via manual settings. To run manual settings, enter manual set points for temperature, humidity and CO₂/Aux in their respective menus. Once the set points have been entered, press the **PROG** key to enter the Program Menu. Use the ▲ and ▼ keys as necessary to select 'Run Manual' and then press **ENTER**. The controller will now run the manual set points continuously.

Programming

The advanced controller allows for the entry of up to 50 different programs. A total of 500 different program steps can be entered. These steps can be spread across any number of programs. Each program can be given a unique eight-character name. The "Program Sequence" feature can be used to sequence multiple programs. This feature is used to extend the effective program length.

It is important to remember to set the temperature safety alarms accordingly after programming. Set the high alarm above the highest temperature set in the program. Set the low alarm below the lowest temperature set in the program.

Creating a New Program

To create a new program, use the following steps:

1. Press the **PROG** key.
2. Use the ▲ and ▼ keys as necessary to select 'Create Program' and then press **ENTER**. Note: The Program LED flashes when programming.
3. You will now be asked to enter the program name. The default program name is the current month followed by the current day followed by the current year followed by the current program number. For example, if the date is October 3, 2001 and you are creating the second program of the day the default name is '10030102'. Use the ▲ and ▼ keys as necessary to change characters. Press the **PROG** key to advance to the next character. You may repeatedly press the **PROG** key to scroll through and review the program name. Press the **ENTER** key when you have finished entering the program name.
4. A step with default data will be entered into the program.

12:00AM	24.0C	70%RH
LT:110		800PPM

Note : The above display assumes that the chamber was ordered with optional humidity and CO₂ packages.

The time entry of this step is the time at which the step will begin to run. In the above step example, the chamber will run the temperature set point of 24.0°C, humidity set point of 70%, CO₂ set point of 800PPM and light settings of light outputs 1 and 2 on at 12:00AM.

5. To change the time setting for a step, press the **TIME** key. Use the ▲ and ▼ keys as necessary to change the time, then press **ENTER** to accept.
6. To change the temperature setting for a step, press the **TEMP/ALARM** key. Use the ▲ and ▼ keys as necessary to change the temperature, then press **ENTER** to accept.
7. To change the humidity setting for a step, press the **%RH** key. Use the ▲ and ▼ keys as necessary to change the humidity setting, then press **ENTER** to accept.
8. To change the lighting settings for a step, press the **LIGHTS** key. Repeatedly pressing the **LIGHTS** key cycles through the available light outputs. If your controller is configured with more than eight light outputs there will be a second set of outputs that you can cycle through. Only eight outputs can be shown on the display at one time. The first set is displayed as 'L1' and the second set is displayed as 'L2'.

Use the ▲ and ▼ keys as necessary to change each light setting. For standard lighting use a '0' for off and a '1' for on. When dimmable lighting is provided, set the desired level for each output. When you are finished changing the outputs to your requirements, press the **ENTER** key.

Note (dimmable lighting): The lights will be off when the lighting level is set between 0 and a factory preset threshold value. This limit is based on the minimum output level required to provide stable lighting. Please refer to the operation manual or the supplemental information provided with the operation manual for the threshold value. Any LED model is an exception. A setting of 0 in these models will turn the LEDs off. Any setting greater than 0 will turn the LEDs on.

9. To change the CO₂/Aux setting for a step, press the **CO₂/AUX** key. Use the ▲ and ▼ keys as necessary to change the CO₂/Aux setting, then press **ENTER** to accept.
- To add additional steps to the program, press the **PROG** key. Use the ▲ and ▼ keys as necessary to select 'Add Step' and then press **ENTER**. Repeat steps 5-9 to edit each step added.
 - To review the current steps in the program, use the ▲ and ▼ keys as necessary when no settings are being edited. Note: When editing, a parameter will be flashing. If no step parameters are flashing then you are not editing.

- To delete a step, use the ▲ and ▼ keys as necessary to select the step you wish to delete. Once the step is selected, press the **PROG** key. Use the ▲ and ▼ keys as necessary to select 'Delete Step' and then press **ENTER**.
- To quit programming, press the **PROG** key. Use the ▲ and ▼ keys as necessary to select 'Quit' and then press **ENTER**. You will return to the main display.
- Refer to the section titled 'Running Programs' for information on running a program.

Editing a Program

Note: This option does not appear when running a sequence. You must either be running manual settings or an individual program in order for this option to appear.

To edit a program use the following steps:

1. Press the **PROG** key.
2. Use the ▲ and ▼ keys as necessary to select 'Edit Program' and then press **ENTER**.
3. Use the ▲ and ▼ keys as necessary to select the program you wish to edit and then press **ENTER**.
4. You will be prompted to edit the program name. If you wish to leave the name the same, press the **ENTER** key. If you wish to change the name, use the ▲ and ▼ keys as necessary to change characters. Press the **PROG** key to advance to the next character. You may repeatedly press the **PROG** key to scroll through and review the program name. Press the **ENTER** key when you have finished editing the program name.
5. Use the ▲ and ▼ keys as necessary to review each step.
6. If any setting needs to be changed, press the appropriate key. For example, if the temperature setting needs to be changed for a step, press the **TEMP/ALARM** key. Use the ▲ and ▼ keys as necessary to change the setting and then press **ENTER** to accept.
7. Remember that when any setting is flashing you are editing that particular step. To navigate through the program, use the ▲ and ▼ keys as necessary when no settings are flashing.
8. You may add and delete steps by pressing the **PROG** key and selecting the appropriate prompt.
9. When you have finished editing, press the **PROG** key. Use the ▲ and ▼ keys as necessary to select 'Quit' and then press **ENTER**. You will return to the main display.

Deleting a Program

Note: This option does not appear when running a sequence. You must either be running manual settings or an individual program in order for this option to appear.

To delete a program use the following steps:

1. Press the **PROG** key.
2. Use the ▲ and ▼ keys as necessary to select 'Delete Program' and then press **ENTER**.
3. Use the ▲ and ▼ keys as necessary to select the program you wish to delete and then press **ENTER**.
4. When prompted to confirm deletion, use the ▲ and ▼ keys as necessary to select 'Yes' and then press **ENTER**.
5. Press the **PROG** key to return to normal operation.

Important! Deleting a program that appears in a sequence of programs will cause the entire sequence to be deleted.

Copying a Program

To copy a program use the following steps:

1. Press the **PROG** key.
2. Use the ▲ and ▼ keys as necessary to select 'Copy Program' and then press **ENTER**.
3. Use the ▲ and ▼ keys as necessary to select the program you wish to copy and then press **ENTER**.
4. You will be prompted to edit the new program name. If you wish to leave the name the same as the default, press the **ENTER** key. If you wish to change the name, use the ▲ and ▼ keys as necessary to change characters. Press the **PROG** key to advance to the next character. You may repeatedly press the **PROG** key to scroll through and review the program name. Press the **ENTER** key when you have finished editing the program name.
5. You will now enter the program edit mode. You may change/add/delete steps as necessary to the copied program.
6. When you have finished editing the copied program, press the **PROG** key. Use the ▲ and ▼ keys as necessary to select 'Quit' and then press **ENTER**. You will return to the main display.

Creating a Sequence of Programs

Note: This option does not appear when running a sequence. You must either be running manual settings or an individual program in order for this option to appear.

You can create a sequence of programs to run by selecting to program a sequence. A sequence of programs consists of a list of programs that you choose to run. Any program that you have created in the controller can be added to the sequence.

When adding programs to the sequence you also enter the number of iterations for the program to run. This allows you to run any program in the sequence more than one time in a row. Each program runs over a 24-hour period. Once a program finishes running over the 24-hour period it will either repeat again based on the number of iterations entered or will continue to the next program in the sequence.

An example of a sequence of programs appears below. This program runs a different program each day of the week except for Saturday and Sunday. On Saturday and Sunday the sequence runs the same program, 'Weekend'.

Program Name	Iterations
Monday	1
Tuesday	1
Wednesday	1
Thursday	1
Friday	1
Weekend	2

Important! Deleting a program that appears in a sequence of programs will cause the entire sequence to be deleted.

To create a sequence of programs use the following steps:

1. Press the **PROG** key.
 2. Use the ▲ and ▼ keys as necessary to select 'Program Sequence' and then press **ENTER**.
 3. If no sequence currently exists you will be prompted to 'Create Sequence'. Press **ENTER** to create a sequence.
 4. Use the ▲ and ▼ keys as necessary to select the program you wish to add to the sequence and then press **ENTER**.
 5. Use the ▲ and ▼ keys as necessary to select the number of iterations you wish the added program to run and then press **ENTER**.
- To add more programs to the sequence, select 'Add Program' and press the **ENTER** key. Follow steps 4 & 5 above to add the new program.
 - To delete a program from the sequence, use the ▲ and ▼ keys as necessary to select 'Delete Program' and then press **ENTER**. When prompted to select the program, use the ▲ and ▼ keys as necessary to select the program you wish to delete from the sequence and then press **ENTER**.

- To insert a program into the sequence, use the ▲ and ▼ keys as necessary to select 'Insert Program' and then press **ENTER**. When prompted to select the program, use the ▲ and ▼ keys as necessary to select the program you wish to insert into the sequence and then press **ENTER**. When prompted to select the program to insert after, use the ▲ and ▼ keys as necessary to select the program you wish to insert the program after and then press **ENTER**.
- When you are finished programming the sequence, use the ▲ and ▼ keys as necessary to select 'Quit' and then press **ENTER**. Refer to the section titled "Running Programs/Sequence of Programs" for information on running the sequence.

IMPORTANT! – The following information is provided to make sequence programming easier. Please read and be aware of this information before attempting to enter a sequence.

- Write the sequence of programs and number of iterations for each program down before attempting to enter a sequence.
- Each program in the sequence runs over a 24-hour period. Programs are entered with 12:00AM being the earliest possible step and 11:59PM being the latest possible step. When changing from one program to another in a running sequence the last step of the current program and the first step in the next program are used to determine the set point. In other words, if the last step programmed in the current running program is at 10:00PM and the first step in the next program is at 6:00AM the controller will use these two times as the basis for the set point. If the controller is set to ramp set points, the set point will ramp between the set points at 10:00PM and 6:00AM. It is suggested (not required) that any program used in a sequence have a step entered at 12:00AM. This way you will always know the set point the new program will start at when the controller switches from the current running program to the next program in the sequence. If you do not set the first step of each program to 12:00AM, unpredictable results may occur when running the sequence.

Running Programs / Sequence of Programs

To run a single program use the following steps:

1. Press the **PROG** key.
2. Use the ▲ and ▼ keys as necessary to select 'Run Program' and then press **ENTER**.
3. Use the ▲ and ▼ keys as necessary to select the program you wish to run and then press **ENTER**.
4. The Program LED illuminates indicating that the program is running.

To run a sequence of programs use the following steps:

1. Press the **PROG** key.
2. Use the ▲ and ▼ keys as necessary to select 'Run Sequence' and then press **ENTER**.
3. Use the ▲ and ▼ keys as necessary to select the program you wish to start the sequence from and then press **ENTER**. This is normally the first program you added to the sequence.
4. Use the ▲ and ▼ keys as necessary to select the iteration of the program selected to start the sequence from and then press **ENTER**. This is normally the first iteration.
5. The Program LED illuminates indicating that the sequence is running.

When viewing the status menu, you can view the current point in the sequence that is running. To do this, use the ▲ and ▼ keys as necessary to scroll to the display resembling Figure 3 below.

Step: 1	Program1
Iteration: 1	

Figure 3 – Program Sequence Status

Note: The following options are not available when running a sequence:

- Editing a program
- Deleting a program
- Programming a sequence

Setting Program Operation Mode

Programs can run either in a non-ramping or ramping mode. The default mode is ramping. When programs run in ramping mode the controller will ramp the set point as necessary between each set point. For example, if you have a step programmed at 6:00AM for 10°C and a step programmed at 10:00AM for 30°C the set point will ramp between 10°C and 30°C over four hours. Figure 4 illustrates this example. Between 6:00AM and 10:00AM the set point (and subsequently process value) will increase approximately .08°C per minute.

You can add non-ramping steps to a ramping program. Using the previous example, to hold the temperature at 10°C between 6:00AM and 10:00AM you simply add a step at 9:59AM with a temperature set point of 10°C. The controller will maintain the temperature at 10°C between 6:00AM and 9:59AM and at 10:00AM will immediately change the set point to 30°C.

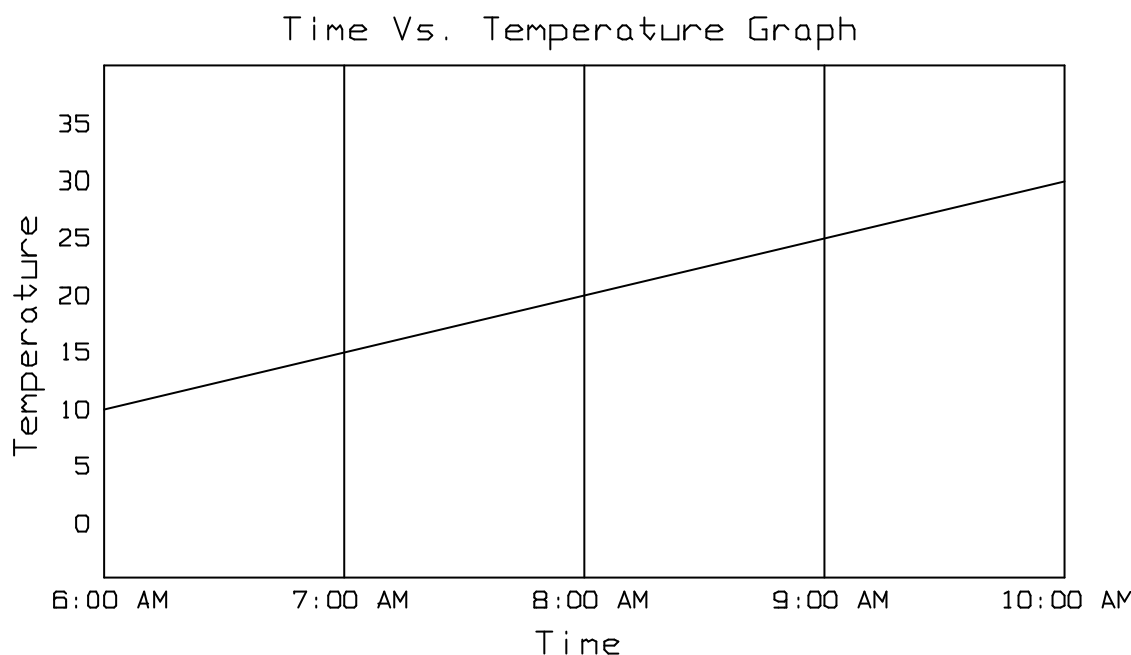


Figure 4 – Ramping Program Example

If you do not wish to use this programming method you can change the default ramping mode to non-ramping. To do this, use the following steps:

1. Hold both the **ENTER** and **▲** keys simultaneously for approximately four seconds. The controller will prompt you to enter the security level password. The default password is '1111'. If this password does not work then security may have been configured. If this is the case, contact the person responsible for securing the controller and have them enter the password. If the first character of the password is not flashing, press the **ENTER** key. Use the **▲** and **▼** keys as necessary to change characters. Press the **PROG** key to advance to the next character. You may repeatedly press the **PROG** key to scroll through and review the password. Pressing the **PROG** key at the last character will cause the character selection to wrap around. Press the **ENTER** key when the security level password has been successfully entered.
2. Use the **▲** and **▼** keys as necessary until "Control Type" appears in the upper display and then press **ENTER**.
3. Use the **▲** and **▼** keys as necessary to select "Non-Ramping" and then press **ENTER**.
4. Hold both the **ENTER** and **▲** keys simultaneously for approximately four seconds. You will return to the status menu. The controller is now set to run programs in the non-ramping mode.

You can change the method back to ramping by following the same steps and selecting "Ramping" instead of "Non-Ramping" in step #3.

Calibration Offsets

If the current temperature, humidity or CO₂/Aux displayed disagrees with your measurement device(s) adjust the calibration offsets. Day and night offsets are available for temperature, humidity (if ordered) and CO₂/Aux (if ordered). The Day Offset will be used when any light output is on. The Night Offset will be used when all light outputs are off. The value entered for each offset is added to the input value as required and the new value is displayed and used for control. Calibration offsets cannot be set while programming.

To adjust the temperature offsets use the following steps:

1. Press the **TEMP/ALARM** key.
2. Use the ▲ and ▼ keys as necessary to select “Day Temp Offset” and then press **ENTER**.
3. Use the ▲ and ▼ keys as necessary to change the offset and then press **ENTER**.
4. Use the ▲ and ▼ keys as necessary to select “Night Temp Offset” and then press **ENTER**.
5. Use the ▲ and ▼ keys as necessary to change the offset and then press **ENTER**.
6. Press the **TEMP/ALARM** key to return to the main display.

To adjust the humidity offsets use the following steps:

1. Press the **%RH** key.
2. Use the ▲ and ▼ keys as necessary to select “Day RH Offset” and then press **ENTER**.
3. Use the ▲ and ▼ keys as necessary to change the offset and then press **ENTER**.
4. Use the ▲ and ▼ keys as necessary to select “Night RH Offset” and then press **ENTER**.
5. Use the ▲ and ▼ keys as necessary to change the offset and then press **ENTER**.
6. Press the **%RH** key to return to the main display.

To adjust the CO₂/Aux offsets use the following steps:

1. Press the **CO₂/AUX** key.
2. Use the ▲ and ▼ keys as necessary to select “Day CO₂/Aux Offset” and then press **ENTER**.
3. Use the ▲ and ▼ keys as necessary to change the offset and then press **ENTER**.
4. Use the ▲ and ▼ keys as necessary to select “Night CO₂/Aux Offset” and then press **ENTER**.

5. Use the ▲ and ▼ keys as necessary to change the offset and then press **ENTER**.
6. Press the **CO₂/AUX** key to return to the main display.

Sample Program

6:00AM – 15.0°C, 60% humidity, one half lights on.
 10:00AM - 17.0°C, 65% humidity, all lights on.
 2:00PM – 21.0°C, 70% humidity, all lights on.
 6:00PM – 24.0°C, 70% humidity, one half lights on.
 10:00PM – 21.0°C, 60% humidity, all lights off.
 2:00AM – 12.0°C, 50% humidity, all lights off.

Note : The sample program assumes the chamber was ordered with a humidity option and two light outputs. The steps necessary to complete an actual program in your chamber may be different. If your chamber has less or additional options the displays presented in the sample program will not exactly reflect the displays you are presented with.

Use the following steps as a guide to entering the sample program:

- Press the **PROG** key.
- Use the ▲ and ▼ keys as necessary to select 'Create Program' and then press **ENTER**.
- When prompted to "Edit Program Name", press **ENTER** to accept the default name.
- The display reads as follows.

12:00AM	24.0C	70%RH
L1:00		

- Press the **TIME** key. The step time flashes indicating that you can change the time.
- Use the ▲ and ▼ keys as necessary to change the time to 6:00AM.
- Press the **TEMP/ALARM** key. The step temperature value flashes indicating that you can change the temperature value.
- Use the ▲ and ▼ keys as necessary to change the temperature to 15.0°C.
- Press the **%RH** key. The step humidity value flashes indicating that you can change the humidity value.
- Use the ▲ and ▼ keys as necessary to change the %RH to 60%.
- Press the **LIGHTS** key. The step lighting output #1 value flashes indicating that you can change the lighting output #1 value.
- Use the ▲ and ▼ keys as necessary to change the first light output to 1 (on).
- Press **ENTER**. Verify that no settings are flashing. The display should read as follows.

6:00AM	15.0C	60%RH
L1:10		

- Press the **PROG** key.
- Use the ▲ and ▼ keys as necessary to select “Add Step” and then press **ENTER**. The display reads as follows.

6:01AM	15.0C	60%RH
L1:10		

- Press the **TIME** key.
- Use the ▲ and ▼ keys as necessary to change the time to 10:00AM.
- Press the **TEMP/ALARM** key.
- Use the ▲ and ▼ keys as necessary to change the temperature to 17.0°C.
- Press the **%RH** key.
- Use the ▲ and ▼ keys as necessary to change the %RH to 65%.
- Repeatedly press the **LIGHTS** key until the second output flashes.
- Use the ▲ and ▼ keys as necessary to change the second light output to 1 (on).
- Press **ENTER**. Verify that no settings are flashing. The display should read as follows.

10:00AM	17.0C	65%RH
L1:11		

- Press the **PROG** key.
- Use the ▲ and ▼ keys as necessary to select “Add Step” and then press **ENTER**. The display reads as follows.

10:01AM	17.0C	65%RH
L1:11		

- Press the **TIME** key.
- Use the ▲ and ▼ keys as necessary to change the time to 2:00PM.
- Press the **TEMP/ALARM** key.
- Use the ▲ and ▼ keys as necessary to change the temperature to 21.0°C.
- Press the **%RH** key.
- Use the ▲ and ▼ keys as necessary to change the %RH to 70%.
- Press **ENTER**. Verify that no settings are flashing. The display should read as follows.

2:00PM	21.0C	70%RH
L1:11		

- Press the **PROG** key.
- Use the ▲ and ▼ keys as necessary to select “Add Step” and then press **ENTER**. The display reads as follows.

2:01PM	21.0C	70%RH
LT:11		

- Press the **TIME** key.
- Use the ▲ and ▼ keys as necessary to change the time to 6:00PM.
- Press the **TEMP/ALARM** key.
- Use the ▲ and ▼ keys as necessary to change the temperature to 24.0°C.
- Repeatedly press the **LIGHTS** key until the second output flashes.
- Use the ▲ and ▼ keys as necessary to change the second light output to 0 (off).
- Press **ENTER**. Verify that no settings are flashing. The display should read as follows.

6:00PM	24.0C	70%RH
LT:10		

- Press the **PROG** key.
- Use the ▲ and ▼ keys as necessary to select “Add Step” and then press **ENTER**. The display reads as follows.

6:01PM	24.0C	70%RH
LT:10		

- Press the **TIME** key.
- Use the ▲ and ▼ keys as necessary to change the time to 10:00PM.
- Press the **TEMP/ALARM** key.
- Use the ▲ and ▼ keys as necessary to change the temperature to 21.0°C.
- Press the **%RH** key.
- Use the ▲ and ▼ keys as necessary to change the %RH to 60%.
- Press the **LIGHTS** key.
- Use the ▲ and ▼ keys as necessary to change the first light output to 0 (off).
- Press **ENTER**. Verify that no settings are flashing. The display should read as follows.

10:00PM	21.0C	60%RH
LT:00		

- Press the **PROG** key.
- Use the ▲ and ▼ keys as necessary to select “Add Step” and then press **ENTER**. The display reads as follows.

10:01PM	21.0C	60%RH
LT:00		

- Press the **TIME** key.
- Use the ▲ and ▼ keys as necessary to change the time to 2:00AM.
- Press the **TEMP/ALARM** key.
- Use the ▲ and ▼ keys as necessary to change the temperature to 12.0°C.
- Press the **%RH** key.
- Use the ▲ and ▼ keys as necessary to change the %RH to 50%.
- Press **ENTER**. Verify that no settings are flashing. The display should read as follows.

2:00AM	12.0C	50%RH
LT:00		

Verify that no settings are flashing. Use the ▲ and ▼ keys as necessary to review the program. Remember, when reviewing the program that you may change any incorrect settings as necessary by pressing the appropriate keys. Refer to the section titled “Running Programs” for information on running the sample program.

Configuring Security (optional)

IMPORTANT! : Please be aware of the following points before configuring security.

- Security is optional. If you do not need to secure your controller then do not configure security.
- If you are unsure about how to configure security, please contact Percival Scientific. If configuration is not done properly it can result in the controller becoming password locked. If this happens it will need to be returned to Percival Scientific and unlocked at your expense.
- Always write down passwords as you change them. This will prevent you from inadvertently restricting access to the controller. Keep the passwords in a safe place that is readily accessible by those you trust with full access to the controller.

Four levels of security are available with the Intellus controller. Levels one through three can be assigned a password up to four characters. When the controller leaves Percival Scientific security is disabled. To activate security you must change only one of the default passwords. A description of what is accessible via each level follows:

Level 4

Level 4 is the most secure level and only allows access to the display loop. No password exists for this level. When logging off or if the controller senses no keypad activity for five minutes the controller will revert to this level.

Level 3

Level 3 allows level 4 access plus access to changing the temperature alarms (if activated), humidity alarms (if activated) and CO₂/Auxiliary alarms (if activated). Level 3 also allows the user to change the system time. When logging in to the controller the Level 3 password must be entered to gain access to this level.

Level 2

Level 2 allows level 3 access plus full access to the temperature, lights, %RH and CO₂/Aux menus. Level 2 also allows the running of program files. A password must be entered to gain access to this level. When logging in to the controller the Level 2 password must be entered to gain access to this level.

Level 1

Level 1 allows full access to the controller. When logging in to the controller the Level 1 password must be entered to gain access to this level.

Security Level

The Security Level password is used to gain entry to the menu that allows the changing of passwords. You cannot use the security password to log in and out of the controller.

Security is configured by holding both the **ENTER** and **▲** keys simultaneously for approximately four seconds. The controller will prompt you to enter the security level password, which is '1111'. If the first character of the password is not flashing, press the **ENTER** key. Use the **▲** and **▼** keys as necessary to change characters. Press the **PROG** key to advance to the next character. You may repeatedly press the **PROG** key to scroll through and review the password. Pressing the **PROG** key at the last character will cause the character selection to wrap around. Press the **ENTER** key when the password '1111' has been successfully entered.

You will now be prompted to change the Level 1 (Lvl1) password. The default password is '0001'. If you do not wish to change the password, press the **▼** key and continue reading at the next paragraph. To change the password, press **ENTER**, use the **▲** or **▼** key to change the flashing prompt to 'Yes' and then press **ENTER**. Next, press the **▼** key. You will be prompted to enter a new password for level 1. To enter the password, press **ENTER**. The first character will begin flashing. Use the **▲** and **▼** keys as necessary to change characters. Press the **PROG** key to advance to the next character.

You may repeatedly press the **PROG** key to scroll through and review the password. Press the **ENTER** key when the password has been successfully changed.

You will now be prompted to change the Level 2 (Lvl2) password. The default password is '0002'. If you do not wish to change the password, press the ▼ key and continue reading at the next paragraph. To change the password, press **ENTER**, use the ▲ or ▼ key to change the flashing prompt to 'Yes' and then press **ENTER**. Next, press the ▼ key. You will be prompted to enter a new password for level 2. To enter the password, press **ENTER**. The first character will begin flashing. Use the ▲ and ▼ keys as necessary to change characters. Press the **PROG** key to advance to the next character. You may repeatedly press the **PROG** key to scroll through and review the password. Press the **ENTER** key when the password has been successfully changed.

You will now be prompted to change the Level 3 (Lvl3) password. The default password is '0003'. If you do not wish to change the password, press the ▼ key and continue reading at the next paragraph. To change the password, press **ENTER**, use the ▲ or ▼ key to change the flashing prompt to 'Yes' and then press **ENTER**. Next, press the ▼ key. You will be prompted to enter a new password for level 3. To enter the password, press **ENTER**. The first character will begin flashing. Use the ▲ and ▼ keys as necessary to change characters. Press the **PROG** key to advance to the next character. You may repeatedly press the **PROG** key to scroll through and review the password. Press the **ENTER** key when the password has been successfully changed.

You will now be prompted to change the Security Level (Slvl) password. The default password is '1111'. To change the password, press **ENTER**, use the ▲ or ▼ key to change the flashing prompt to 'Yes' and then press **ENTER**. Next, press the ▼ key. You will be prompted to enter a new password for the security level. To enter the password, press **ENTER**. The first character will begin flashing. Use the ▲ and ▼ keys as necessary to change characters. Press the **PROG** key to advance to the next character. You may repeatedly press the **PROG** key to scroll through and review the password. Press the **ENTER** key when the password has been successfully changed.

IMPORTANT!!: It is necessary to change the security level password when implementing security. The security level password is used to enter the menu that allows the changing of passwords. If this password is not changed, anyone could use the default '1111' password and override password settings. **NOTE:** It is *extremely important* that you remember the security level password after it is changed. If it is forgotten, the controller will need to be returned to Percival Scientific at your expense in order to restore it to its password defaults.

To exit the security menu, press and hold both the **ENTER** and ▲ keys simultaneously for approximately two seconds.

Logging In/Out

Once security is configured each user that accesses the controller will need to log in and out.

To log in, use the following procedure

Press and hold both the **HELP** and ▼ keys until you are prompted to enter your password. Use the ▲ and ▼ keys as necessary to change characters. Press the **PROG** key to advance to the next character. You may repeatedly press the **PROG** key to scroll through and review the password. Pressing the **PROG** key at the last character will cause the character selection to wrap around. Press the **ENTER** key when the password has been successfully entered.

To log out, use the following procedure:

Press and hold both the **HELP** and ▼ keys until the “Logout Successful” message appears.

IMPORTANT: Remember to log out when you are finished using the controller. The controller will automatically log you out if there is no keypad activity for five minutes.

Disabling Security

To disable security you must reset each password to its default. See the ‘Configuring Security’ section for information on settings passwords.

- Level 1 Default Password : ‘0001’
- Level 2 Default Password : ‘0002’
- Level 3 Default Password : ‘0003’
- Security Level Default Password : ‘1111’

Program Entry Table

[illegible]