


AgMission Operations Manual

AG-NAV INC. 30 Churchill Drive Barrie, Ontario CANADA, L4N 8Z5

North America 1-800-99 AG-NAV International +1-705-734-0909 Web Site www.agnav.com

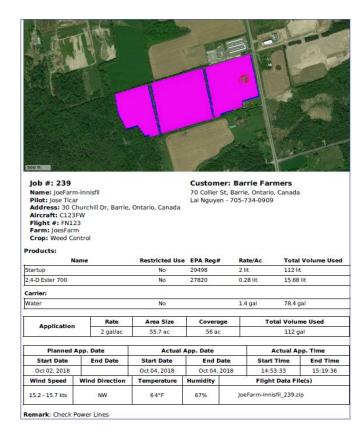

NOTES

The software and hardware described in this manual is furnished under the license and may only be used or copied in accordance with the terms of the license.

Copyright © AG-NAV Inc. 2018

Revision: 2.4

Release date: May 2021

All rights are reserved. No part of this publication or the components it describes may be reproduced, stored in a retrieval system or transmitted, in any form, or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written consent from AG-NAV Inc.

AG-NAV Inc. provides this manual "as is", without warranty of any kind and reserves the right to make improvements and/or changes to the product described in this manual at any time and without notice.

SOFTWARE IS PROVIDED AS IS. To the maximum extent permitted by law, the manufacturer, (AG-NAV Inc) and its suppliers disclaim all warranties, either express or implied, including, but not limited to implied warranties of merchantability and fitness for a particular purpose, with regard to the SOFTWARE, the accompanying written materials, and any accompanying hardware. You may have other rights which vary from state/jurisdiction to state/jurisdiction.

NO LIABILITY FOR CONSEQUENTIAL DAMAGES. To the maximum extent permitted by applicable law, in no event shall the company or its suppliers be liable for any damages whatsoever (including without limitation, direct or indirect damages for personal injury, loss of business profits, business interruption, loss of business information, or any other pecuniary loss) arising out of the use of this product, even if the company has been advised of the possibility of such damages. In any case, the company's and its suppliers' entire liability shall be limited to the amount actually paid by the owner of the product for the product. Because some states/jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages, the above limitation may not apply to the user.

TRADEMARKS

- AG-NAV® or AG-NAV is a registered trademark of AG-NAV Inc.
- Guía or Guía™ is a registered trademark of AG-NAV Inc.
- FlightMaster or FlightMaster™ is a registered trademark of AG-NAV Inc.
- All other brand names are trademarks of their respective holders

CONTACT INFORMATION

Contact the AG-NAV Technical Support Line at:

Toll Free for Canada and the United States Telephone: 1-800-99 AG-NAV

AG-NAV Inc.

Telephone: 1-705-734-0909

Email: general@agnav.com

Web Site: <u>www.agnav.com</u>

In the event of a problem that cannot be resolved using the information supplied, please contact AG-NAV. You can also gain assistance through the User's Area on our web page at www.agnav.com.

For further assistance, contact the AG-NAV Technical Support Line by telephone or email. AG-NAV Customer Support personnel will discuss your situation, determine the cause of problem and provide the appropriate technical assistance.

Table of Contents


1.	Introduction	6
2.	Operations	7
	2.1 Roles	7
	2.2 Log In	8
	2.3 Log Out	9
	2.4 Create Local Admin Account	9
	2.5 Create Client Accounts	. 11
	2.6 Create Aircraft Accounts	. 14
	2.7 Create Pilot Accounts	. 16
	2.8 Create Crop List	. 17
	2.9 Create Product List	. 19
3.	Create New Jobs	.21
	3.1 Job Information	. 21
	3.2 Map Display	. 26
	3.3 Create Spray Areas	. 29
	3.4 Area Tools	. 32
	3.5 Job Tools	. 33
	3.6 Add Areas	. 34
	3.7 Create Area Library	40
	3.8 Manage Area Libraries	46
4.	Download or Assign Jobs to a Platinum	.47
	4.1 Download Jobs to USB Stick	. 47
4 .	4.2 Assign Jobs to Platinum	. 49
5.	Perform assigned Jobs in a Platinum	.51
	5.1 Platinum AgMission Settings	. 51
	5.2 Download Assigned Jobs	. 54
	5.3 Fly the Mission	. 57
6.	Upload Spray Data and Print Report	
	6.1 Upload Spray Data Directly to AgMission	
	6.2 Upload Spray Data by USB Key	

	6.3 Upload Spray Area and Data for Jobs not planned with Agmission	. 66
	6.4 View Spray Data and Print Report	. 67
7.	Manage Jobs by Uploading Files	.70
	7.1 Upload Shape Files	. 72
	7.2 Upload Google Earth Files	. 72
8.	More on Create Job Items	.73
	8.1 Create Pivot Spray Zone	. 73
	8.2 Create Buffer Zone	. 75
	8.3 Create Waypoints	. 78
	8.4 Create PlaceMarks	. 79
	8.5 Create and Show Obstacles	. 80
9.	More on Display Functions	.83
	9.1 Obstacle Settings	. 83
	9.2 Download User Obstacles	. 84
	9.3 Weather Display	. 85
	9.4 Coordinates Display	. 86
	9.5 Grid Lines Display and Generation	. 87
10). Aircraft and Ground Crew Tracking	.92
	10.1 Prerequisites	. 92
	10.2 Tracking with Agmission	. 96

1. Introduction

AgMission is a web app developed by AG-NAV Inc. to centralize all data related to aerial applications. The software allows all parties involved in a mission to create a job order, make spray areas, transfer the mission to a navigation system, receive flight data, and process data when available. For pilot safety, towers or obstacles information can be entered in office and saved for use in guidance systems. If using the Platinum for guidance, position of ground crew or loading truck can be sent to Platinum as a dynamic waypoint for pilot guidance to fly to a new loading zone.

Mission planning can be done well ahead of time then be loaded into the guidance system and be ready for application at the right time. Then, when a mission is done, flight data can be submitted to AgMission for processing and/or inspecting right after the flight. Mission reports can be generated for customers or application analysis.

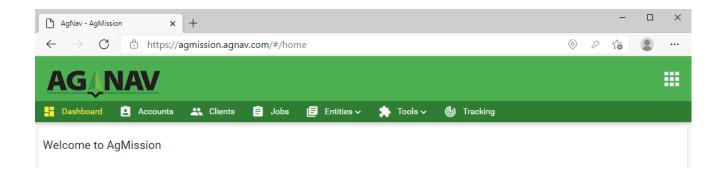

2. Operations

2.1 Roles

When signing up for using AgMission webapp, AgNav will provide you a main AgMission Account with a unique UserName and a Password. Assuming that the account was granted to your company called My AgService Inc, the Login can be:

UserName: myagservice@mail.com

Password: myags

From this AgMission account, you can create local accounts for your own users depending on each user's role. Each local user can be an administrator, officer/manager, pilot, client, or inspector.

Functions	Admin	Officer	Pilot	Client	Inspector	Aircraft
Create Accounts	Yes	No	No	No	No	No
Create Jobs/Missions	Yes	Yes	Yes	Yes	No	No
View Jobs/Missions	Yes	Yes	Yes	Yes	Yes	No
Download/Upload Jobs/Missions	Yes	Yes	Yes	Yes	Yes	Yes ¹
Delete Jobs/Missions	Yes	Yes	Yes	Yes	No	No
Print Reports	Yes	Yes	Yes	Yes	Yes	No
Tracking	Yes	Yes	Yes	No	No	No

Note: ¹The Aircraft account is only used in Platinum systems to receive or download job files, and upload spray data to AgMission after job done. Each aircraft should have a unique account that can be recognized by other users for job assignment.

2.2 Log In

To log in, run a web browser then enter <u>agmission.agnav.com</u> for web address then press Enter key. The Log In page will show:

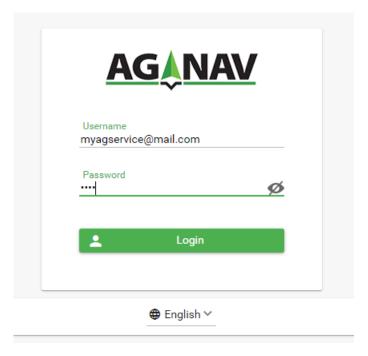


Figure 2 - 1: AgMission Login

For the first time, if you want to change the language option, click the language dropdown options to select the desired language. The available languages are English, Portuguese and Spanish. Enter the Username and Password.

Click on "Login" button or press Enter key. The Welcome page is shown.

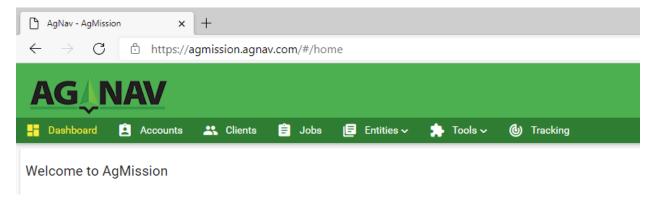


Figure 2 - 2: Welcome Page

- a) Dashboard menu Dashboard: Shows the greeting, news, changes, and any information about AgMission.
- b) Accounts menu (Accounts): Shows the list of local Admin, Officer and Inspector accounts created for your company, for example My AgService Inc.

- c) Clients menu : Shows the list of your clients who can be growers, government agencies, and those receiving your services.
- d) Jobs menu Jobs: Shows the list of jobs created for the selected client. If no client is selected, all jobs will be shown.
- e) Entities menu Entities: Shows the list of pilots, aircraft, and products used for aerial application jobs.
- f) Tools menu Tools v: Shows convenient tools or settings page.
- g) Tracking menu Tracking: Shows current tracking-enabled aircraft and ground crew positions on a map and tracking tools.

2.3 Log Out

To log out AgMission, click the square button at the top right corner of screen, then select "Sign out".

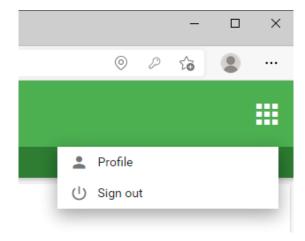


Figure 2 - 3: AgMission Logout

2.4 Create Local Admin Account

After logging in to AgMission from your company account, you can create the local accounts for your company. To do this, click Accounts. The following page is shown.

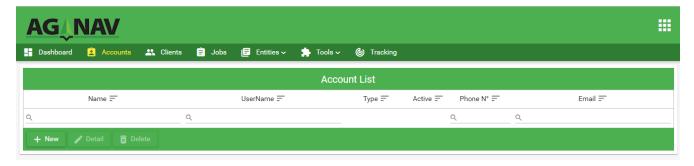


Figure 2 - 4: Create Local Accounts

First, you should create at least one local Admin account for your administrator.

The Admin user can create a local account for other local users. To create a local account:

- a) Click "Add New" button + New
- b) The Account Information page is shown. Enter all information for the Admin user. Note that the Username must follow an email address format and be unique. It's not necessary to be a real email address.

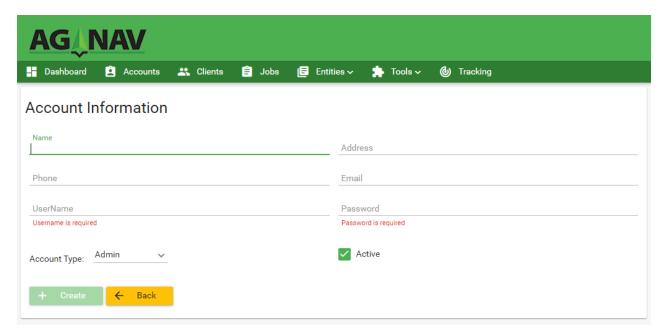


Figure 2 - 5: Create Admin Account

c) To make the Username unique, the domain should be your company short name. For example, if your company name is My AgService Inc, the short name or abbreviation can be "ags", and the domain for UserName can be "@ags.com". Using this method, the Username of Admin can be admin@ags.com.

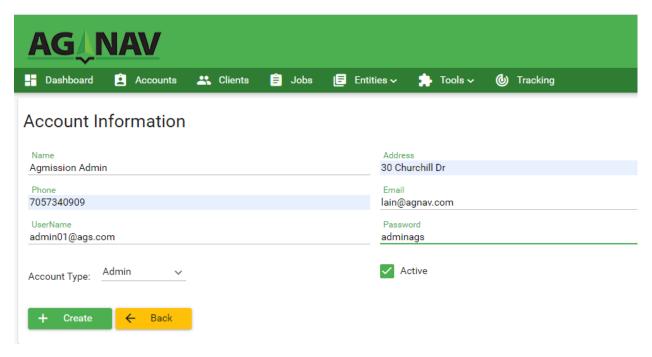


Figure 2 - 6: Enter Account Information - Example

- d) Enter the password for the Admin account. The password should not have a space.
- e) Click to check mark the "Active" box. Select "Admin" for Account Type.
- f) Click "+ Create" button.
- g) Repeat the procedure to create other accounts, for example Officer or Inspector.

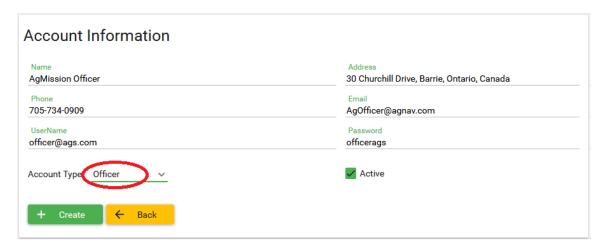


Figure 2 - 7: Officer Account

2.5 Create Client Accounts

After creating the Admin account, you can create a Client account. You must have at least one client who can be a grower or service recipient. To create a Client account,

a) Click Clients menu.

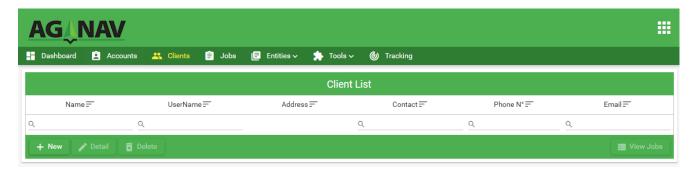


Figure 2 - 8: Client List

- b) Click + New
- c) The Client Information page is shown.

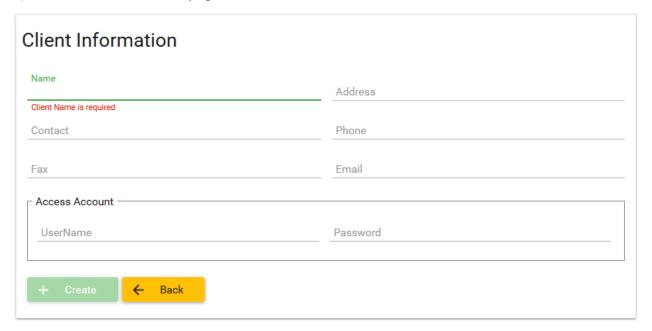


Figure 2 - 9: Client Information

d) Enter Client information. The Username must follow the email address format. By using the same method used to create the Admin account, if the Client is Barrie Farmers, the Username can be barriefarmers@ags.com

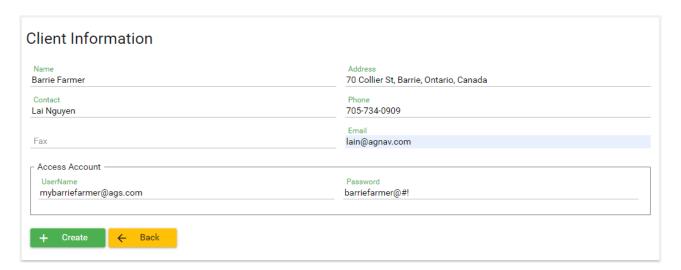


Figure 2 - 10: Enter Client Information

- e) Enter the password for the Client account. The password should not have a space.
- f) Click "+ Create" button.

Note that you can give your client the log-in information, UserName and Password, for example mybarriefarmer@ags.com and "barriefarmer@#!" to log into AgMission to create and/or view the jobs created for the client. If the client will not view the jobs, you do not have to enter the username and password for this client.

If you have more clients, you can repeat the same procedure to create more Client accounts. Each client can create, and view jobs created for him/her only.

2.6 Create Aircraft Accounts

After creating the Admin and Client accounts, you can create an Aircraft account. If you have a Platinum system which can have internet access from a Wifi network, you can send a job directly to the Platinum. The pilot will be notified how many new jobs were sent to his Platinum. Each Platinum should have a unique account for job assignment.

To create an Aircraft account,

- a) Click Entities menu.
- b) Select "Aircraft" from the Entities submenu.

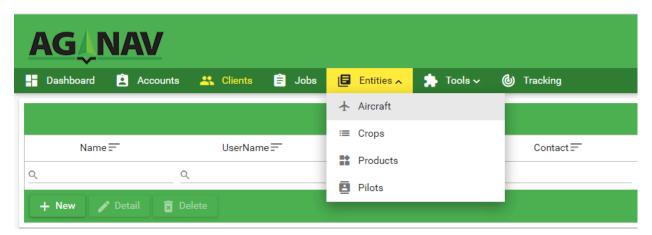


Figure 2 - 11: Entities - Aircraft

The Aircraft List is shown.

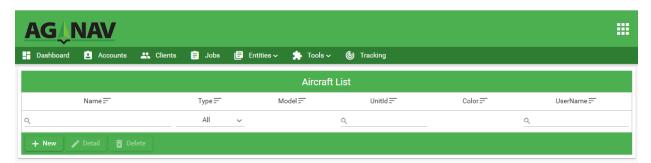


Figure 2 - 12: Aircraft List

- c) Click + New
- d) The Aircraft Information page is shown.
- e) Enter Aircraft information. The Username must follow the email address format. By using the same method used to create the Admin account, if the aircraft tail number is C-AGN40, the Username can be c-agn40@ags.com

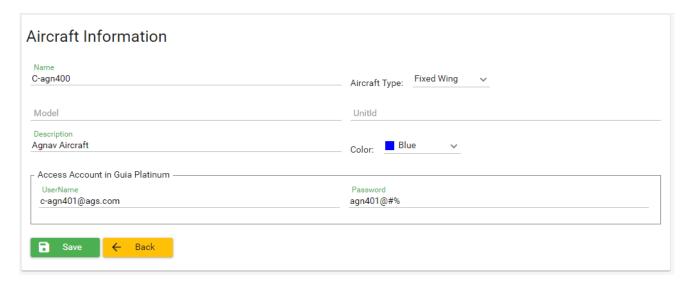


Figure 2 - 13: Aircraft Information

- f) Enter the password for the Aircraft account. The password should not have a space.
- g) Click "+Create" button.

Note: Aircraft log-in information, UserName and Password, should be entered in the Platinum Main Settings → AgMission. Select "Auto logon for automatically logging on to AgMission when internet access is available".

If you have more Platinum systems, you can repeat the same procedure to create more Aircraft accounts. Platinum can download jobs assigned to it only, and upload spray data directly to AgMission after job done.

If you have a Guia Gold or Silver system, you do not have to enter the UserName and Password for an aircraft account. This is because Guia Gold/Silver cannot download jobs directly from AgMission.

The Aircraft List shows all aircraft accounts.

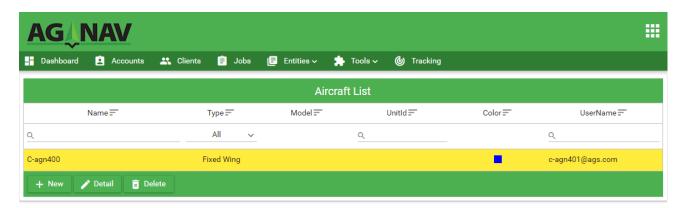


Figure 2 - 14: Aircraft Account List

2.7 Create Pilot Accounts

Each pilot can have an account to check and view jobs. Pilot can download a job to a USB key or computer for application. Job statuses are shown for pilot to know which jobs already sprayed, ready for application, or new, i.e. waiting for approval.

To create a Pilot account:

- a) Click Entities menu.
- b) Select "Pilots" from the Entities submenu.

The Pilot List is shown.

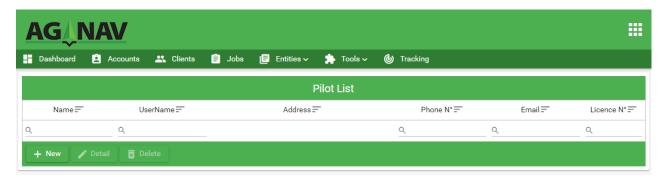


Figure 2 - 15: Pilot List

- c) Click + New
- d) The Pilot Information page is shown.
- e) Enter Pilot information.
- f) Optional, enter the access UserName and Password.

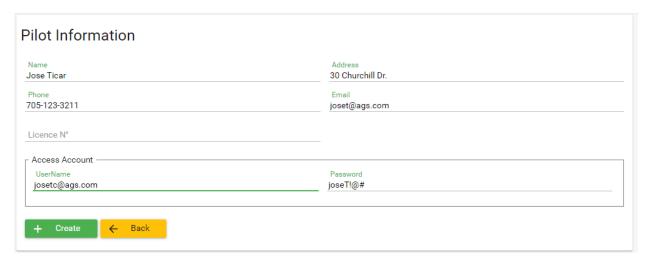


Figure 2 - 16: Enter Pilot Information

g) Click "+Create" button.

If you have more pilots, you can repeat the same procedure to create more Pilot accounts.

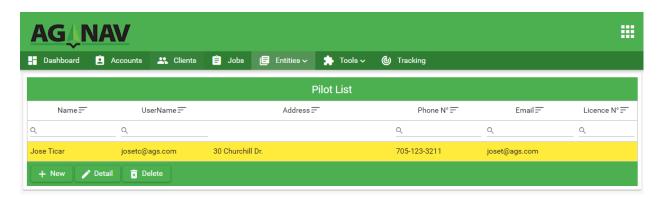


Figure 2 - 17: Pilot Account List

2.8 Create Crop List

You can create a list of all crop or field types or application type for use when creating a job. To do this,

- a) Click Entities Entities menu.
- b) Select "Crops" from the Entities submenu. The Crop List is shown.

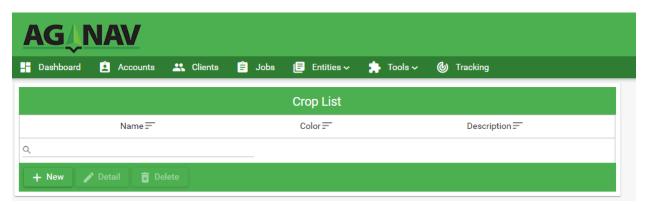


Figure 2 - 18: Crop List

c) Click + New . The Crop Information page is shown.

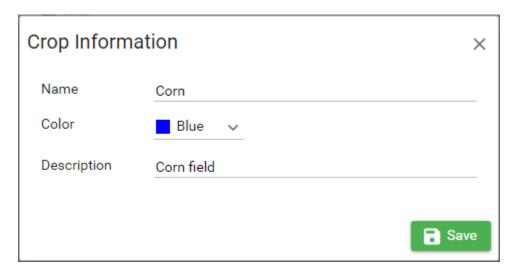


Figure 2 - 19: Enter Crop Information

- d) Enter Crop Name. The Crop Name must be unique. This can be the field type such as corn or wheat; or application type such as forest protection or mosquito control; or restricted zone such as bee hives or play ground, etc...
- e) Enter Color for this Crop type. The options are blue, green, yellow, orange and purple. When Crop is assigned to an area, the area will be plotted in Crop Color.
- f) Enter Crop Description just for information.
- g) Click "Save" button.

If you have more crop types, repeat the same procedure to create each.

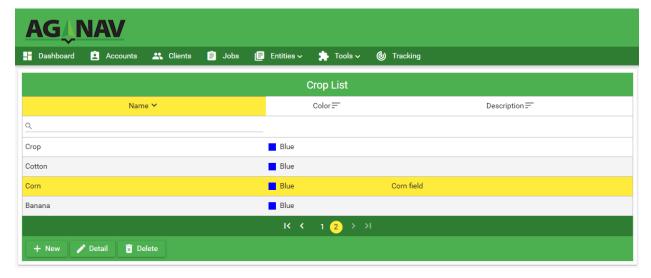


Figure 2 - 20: Crop List - Updated

2.9 Create Product List

For your convenience, you can create ahead of time a list of all products that you will use for application. To do this,

- a) Click Entities menu.
- b) Select "Products" from the Entities submenu.

The Product List is shown with Water as a default carrier product.

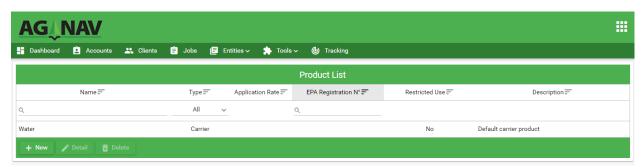


Figure 2 - 21: Product List

c) Click + New . The Product Information page is shown.

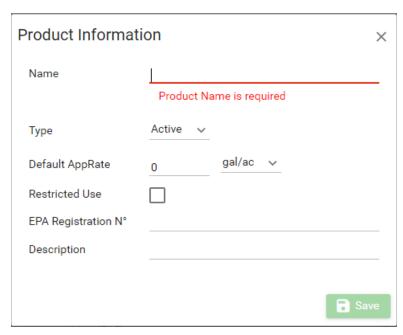


Figure 2 - 22: New Product Information

d) Enter Product information. The Product Name should have maximum 20 characters. Product Type can be Active ingredient or Carrier.

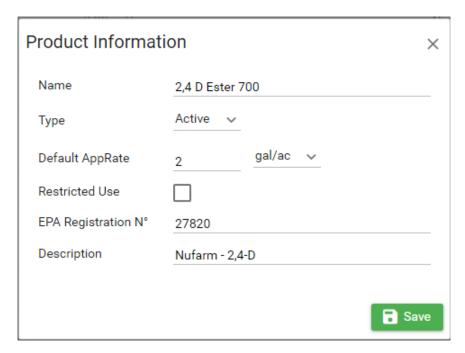


Figure 2 - 23: Enter Product Information

e) Click "Save" button.

If you have more products for spraying, you can repeat the same procedure to add them to the list.

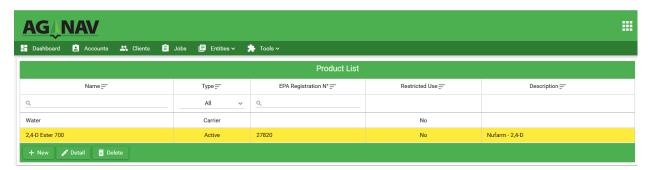


Figure 2 - 24: Product List - Updated

3. Create New Jobs

Before creating a new job, a client must be selected. To do this, click Clients menu. Then click the Client that you want to create a job for.

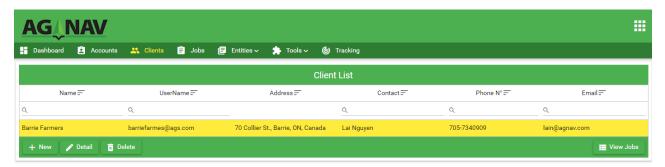


Figure 3 - 1: Select Client

3.1 Job Information

To create a job for the selected Client,

a) Click View Jobs on the Client List page or click penal.



Figure 3 - 2: Job List

- b) Click + New
- c) Enter job information.

Job Information


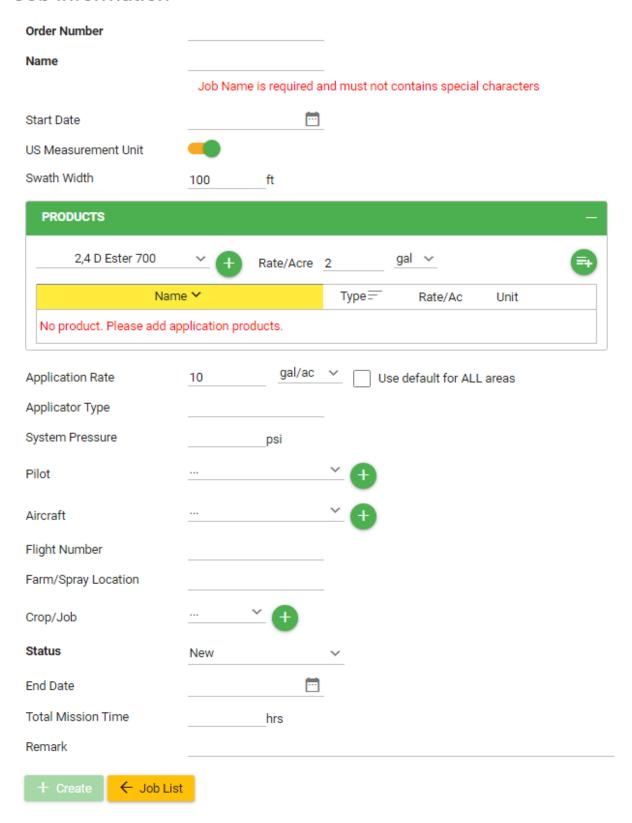


Figure 3 - 3: Job Information

Each new job will be assigned a unique ID by AgMission.

- Order Number: Enter your order number for this job. This can be the internal Work Order number.
- Name: Enter job name. Do not use a space or special characters.
- Start Date: Enter when the job should be carried out.
- US Measurement Unit: Slide the button to select U.S. measurement units or metric units.
- Swath Width: Enter the swath width in appropriate unit, i.e. feet or meters.
- Product: Click "v" button to show the list of products.
 These products were entered in the Entities → Products.
 Select the desired one.

Product Rate/Acre: Enter the application rate. This is the rate used for mixing product. Select the unit of measurement.

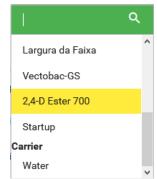



d) Click to add the product to the list.



You can add more products to the list if desired.

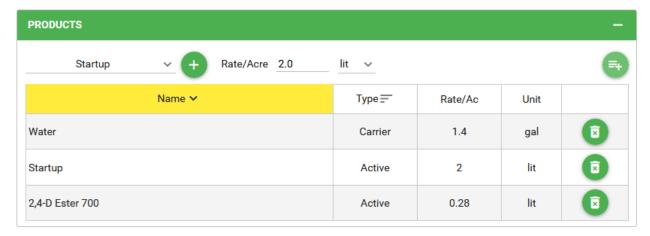


Figure 3 - 4: Enter Products

- Application Rate: This is the planned rate used for spraying the mixture of all products.
- Operator: Enter or select an operator name. You can select one from the list of pilots by clicking the "v" button.
- Aircraft: Enter or select an aircraft name.
- Flight Number: Enter the flight number.
- Farm/Spray Location: Enter the farm name or spray location name.
- Crop/Job: Enter or select a crop name or type of job from the Crop List.
- **Status**: Job status. It represents the status or progress of the job along the whole application process.
 - New: New job for view only, wait for approval. New job can not be assigned for download.
 - o **Ready**: Job approved, ready for application (to be downloaded and sprayed).
 - Downloaded: Job was downloaded for spray.
 - o **Sprayed**: Area were sprayed. Job was done.
- End Date: Enter the date when this job should be finished.
- Remark: Enter any notes that you want the operator to know.
- e) When all information has been entered, click



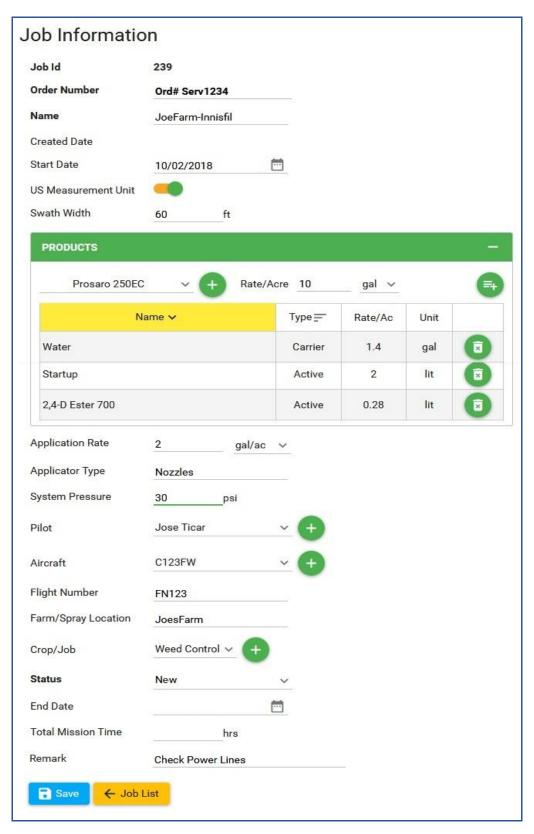


Figure 3 - 5: Sample Job Information

3.2 Map Display

After clicking + Create, AgMission shows the Job Map page for you to enter spray areas and/or other job items.


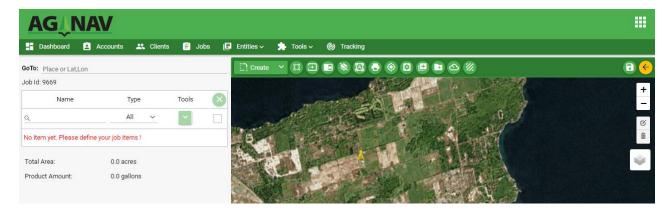


Figure 3 - 6: Map Display

 To show map at a different location, click the "Go To" line and enter the address or coordinates (Latitude, Longitude) of the place you want to see on the map. For example, if the spray farms are in Innisfil, Ontario.



If there are more locations shown, click the one that shows the closest location.

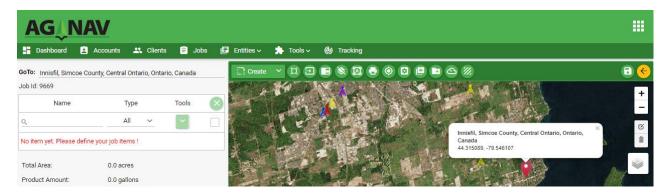


Figure 3 - 7: Map Display - Searched Location

Total Area and **Product Amount** will be shown below the job items list.

Total Area: shows total acreage of all spray areas excluded the contained exclusion zones.

Product Amount: shows the total amount of product mixture needed for this job.

Controls on the Map screen:

- Create Item : This allows you to create a job item including a spray area, exclusion zone, buffer zone, waypoint, place mark and tower or an obstacle.
- Zoom To All : If you have many spray areas shown on the screen, click this button to view all areas within the map.
- Download Job : When the job is new, this button allows you to download the map background image to a USB key or computer for use in the Platinum. When the job is ready for application, this button allows you to download the job, user obstacles or save to the desired map background (for Job Assignment assigned AC to download Job with this map background). The job file will include all spray areas, exclusion zones, waypoints, buffer zones and map background.
- Load Spray Data : If you have spray or as-applied data available, click this button to load and display spray data.
- Show/Hide Spray Data : When spray data is shown on screen, click this button to turn off spray data display. Click it again to show spray data.
- Show/Hide Item Info : When you create/edit a spray area, the length of each side and size (ha or acres) of the spray area are shown. Click this button to show or hide the detail information such as name, measurements of the job item.
- Print Report : Click this button to print a Pre-mission Report in a new browser Tab. When the job is done and spray data uploaded and loaded, click this button to print an Application Report.
- Show Location : If you want to check the coordinates of spray area, click this button to show the coordinates at the crosshair cursor. The coordinates are displayed at the bottom right corner of map. Double click on the coordinate value to change its display format.
- Settings : Click this button to show the AgMission settings for spray data plotting and obstacles.
- Load Areas from jobs : Click this button to show/hide the Load Area Controls dialog. This function allows you to save all spray areas to a common job. Then, you can pick up those areas to add to the current job.

- Load Areas from Library : Click this button to open the Areas Library dialog. You can select the spray areas and exclusion zones, which belong to the Client of the job, from the Library to add to the current job.
- Show Weather Info : Click this button to show the weather. The cursor will change to a crosshair. Click on the map to get the weather at the clicked location. When Weather Info dialog is shown, you can click the "details" link to show the weather broadcast detail in a new browser Tab.
- Create Grid Lines : Click this button to create grid lines on the spray areas. You can create grid lines with heading from methods such as Best Heading, AB Heading or entering manually.
- Save Job : After all spray areas, exclusion zones, and other items have been created, or after editing any job item, click this button to save them to the job.
- Back : Click this button to go back to the previous page. Normally you would want to save all changes to the job first.
- Zoom In/Out
 Click "+" to zoom in, and "-" to zoom out the map display.
- Edit/Delete items : Click this button to edit the job item, e.g.: edit boundary of an area or move/delete a job item. While editing an area, you can move/add/remove the corners to make more precise boundary. You can delete a job item or all by clicking the garbage can icon.
- Display Layers : Click this button to change the base map type from satellite imagery to street map; show or hide other information layers such as Obstacles, Grid Lines, Flight Paths, Map Labels and Map Streets.

3.3 Create Spray Areas

To create a spray area or polygon, do the following:

a) Zoom in to the map location where the spray area is.

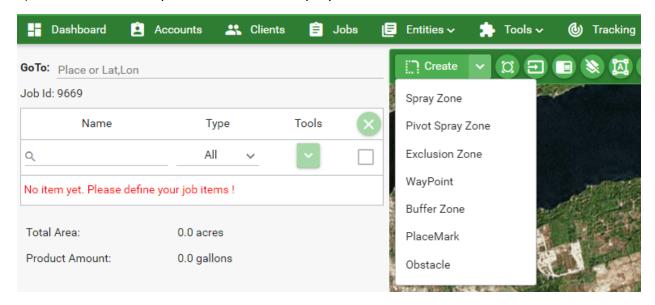


Figure 3 - 8: Map Display - Create Area

- b) Click Create . Then select "Spray Zone".
- c) Move the mouse to the spray zone and click around to define the boundary on the map. Click on the last point or Backspace key to delete the last point. Press the Esc to cancel the function.



Figure 3 - 9: Create Spray Zone

- d) Click on the first point of area or press <Enter> on the keyboard to finish the spray zone.
- e) The Spray Zone Information dialog is shown.

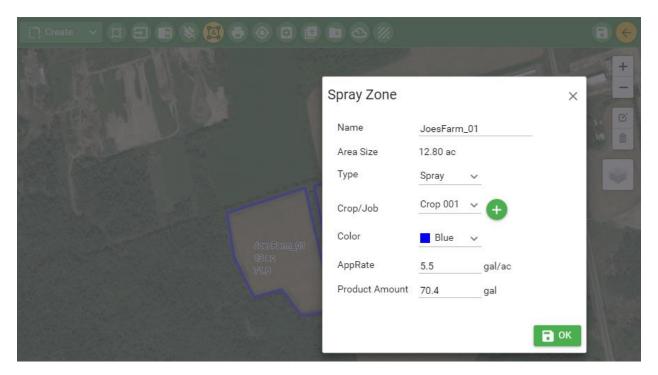


Figure 3 - 10: Spray Zone Information

f) By default, the spray zone is named by item type with consecutive number suffixed, for example Spray_01. You can enter a more meaningful name, for example JoesFarm-01. This name will be shown during flight for pilot to identify the spray zone.

Type: by default, as "Spray".

Area size: in acres or hectares depending on the selected Measurement Unit.

Color: the boundary color. You can change it to show more contrast on the map.

AppRate: the desired application rate in gal/ac, lbs/ac, or L/ha and kg/ha.

Product Amount: total plan mixture calculated based on the AppRate and Area Size.

g) Click "OK" to accept the information and close the dialog.

If you have more spray zones to create, repeat the same procedure.

- h) If you have an exclusion zone, click and select Exclusion Zone.
- i) Move the cursor to the exclusion boundary and click around the boundary.
- j) When done, click the first corner on the map or press <Enter> on the keyboard to close the exclusion zone.
- k) The exclusion zone information is shown on screen. By default, the exclusion zone name is the same as the (outer ring) spray zone name created just before it. Click "OK" to accept the info.

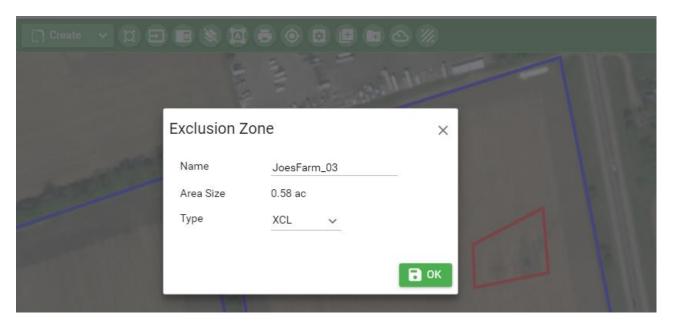


Figure 3 - 11: Exclusion Zone Information

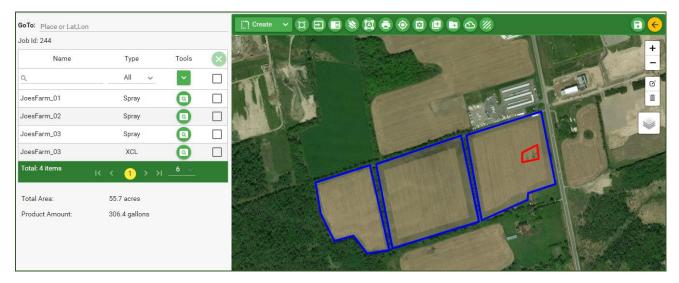


Figure 3 - 12: Spray Area Creation - Done

- I) Click to save the spray zones and exclusion zones to the job. If the job is ready for application, select "Yes" on the Confirmation dialogue. AgMission will change the job status to "Ready" (approved and ready for download to spray). If the job needs approval, select "No" to keep the job status as is.
- m) Click to go back to the Job Information page.

3.4 Area Tools

If you need to edit information on a spray zone or exclusion zone, or delete it, you can use Area Tools.

Select/unselect the desired areas by clicking on the corresponding check marks.

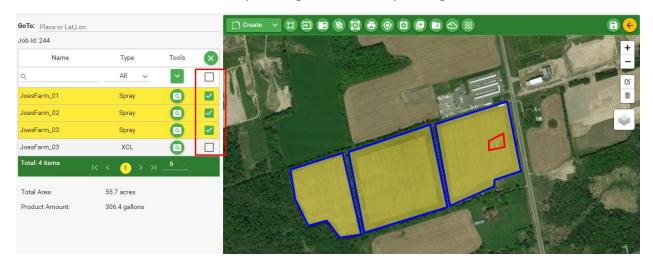


Figure 3 - 13: Select Areas

Then click on **Tools** button. Then select a function from the drop-down menu.

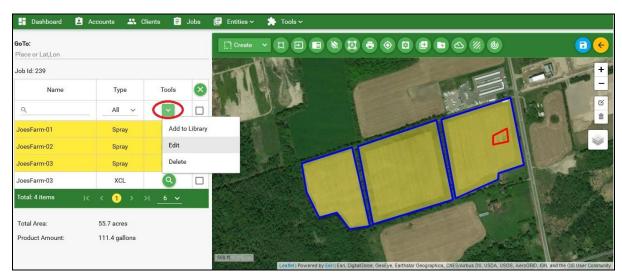


Figure 3 - 14: Area Tools - Edit / Delete

Available functions:

- Add to Library: to add selected areas to Areas Library under the job's Client.
- Edit: to edit common information such as Crop, Color or AppRate (spray areas only).
- Delete: to delete selected areas.

3.5 Job Tools

The Job Tools are found on the Job Information page. Normally for wide display, it shows on the right side. If you do not see the Tools at the right side of screen, scroll the page down.

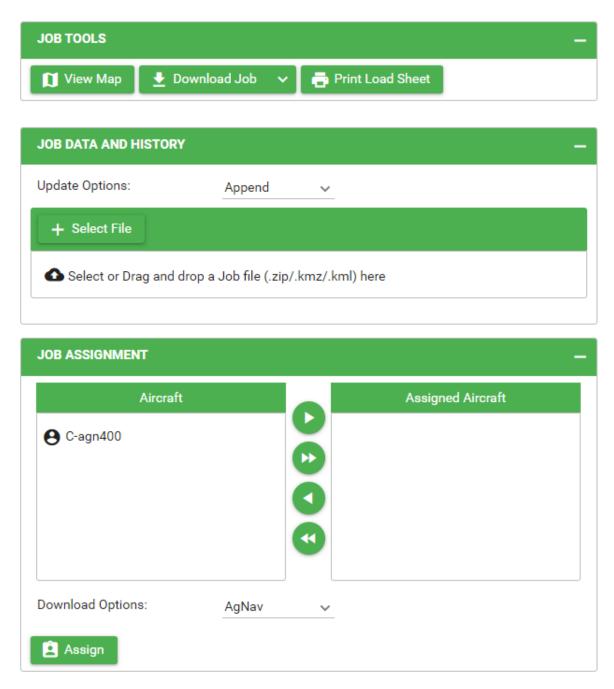


Figure 3 - 15: Job Tools

- View Map: To open Job Map page to view/edit job items such as spray zones.
- Download Job: To download the job, as a zip file, without map background to a USB key or hard drive in your computer.
- Print Load Sheet: to print Load Sheet report.

 Job Data and History: If you have spray areas and exclusion zones in Shape file, KML/KMZ or AgNav no1/prj file or data files, you can import the file to the job. The uploaded files are shown in the Job Data and History section.

Note: except KML/KMZ, files must be compressed into a zip file before uploading.

• Job Assignment: if you have an aircraft account for a Platinum, you can send the job to the aircraft directly. The list of aircraft is shown in the Job Assignment section.

Note: if the job was assigned and downloaded and you changed the job detail or items and you want the aircraft to download the latest job, then:

- a) Select the Aircraft under the "Assigned Aircraft" list click on button.
- b) Click to confirm the un-assignment.
- c) On the Aircraft list, select Aircraft then click for new assignment.
- d) Click Assign to confirm the new assignment.

3.6 Add Areas

If you have areas that you spray frequently year after year, you can save them all to a common mission. As an example, name this mission "AllSprayAreas". This can be considered your own spray area database. The AllSprayAreas may look like this:

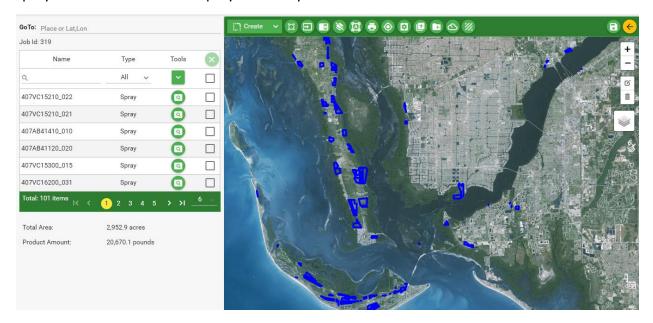


Figure 3 - 16: Spray Area Database Display

The spray areas and exclusion zones can be imported from AgNav, KML/KMZ or shape files into this mission to make the spray area database. To create a new mission, select the Client and click the Jobs tab.

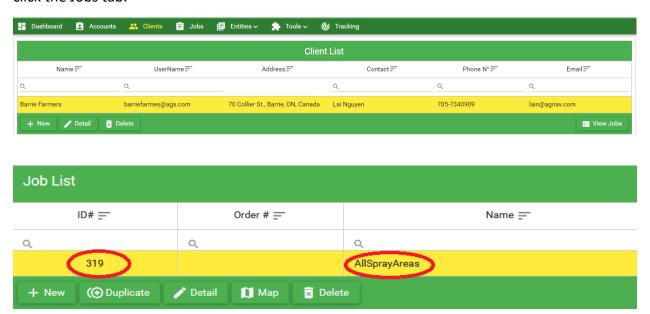


Figure 3 - 17: Making New Mission

From the Jobs List, we know that the AllSprayAreas mission has ID# 319.

Click to make a new job. Fill in the Job Information. You can highlight a job then click "Duplicate" to duplicate that job. There will be less info to enter.

Then click + Create to create a new job.

When the map is shown, click the "Load from jobs" button

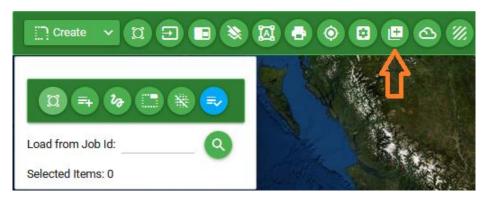


Figure 3 - 18: Add Areas Controls

The Add Areas Controls dialog is shown.

• Click this button to center display on areas of the selected job.

- : Click this button to select a single spray area. To select an area, just click on the area. Click on the area again to deselect the area.
- Click this button to select many spray areas.
- Click this button to deselect all areas.
- Click this button to remove all areas, loaded by the function, from the map.
- Click this button to add selected areas to the current mission.
- After entering the Job ID number, click this button to load the areas from the job.



To load areas from the AllSprayAreas mission,

- a) Click the "Load from jobs" button then enter the job ID of AllSprayAreas which is 319 as in the example.
- b) Click Search button .

When all areas are shown, zoom in and move the map to show the desired areas.

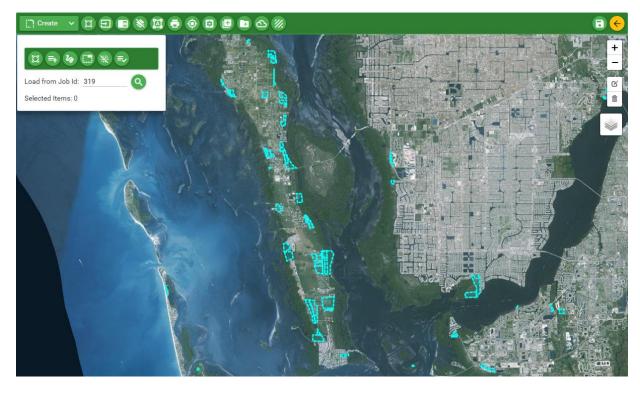


Figure 3 - 19: Spray Areas Loaded from Selected Job

To select one area at a time, click . Then click on the desired area.



Figure 3 - 20: Select Single Area

When the area is selected, it will be plotted in bright green.



Figure 3 - 21: Single Area Selected

If you want to select many areas at the same time, click. Then, press and hold down the left mouse key and drag the mouse to around the desired areas.

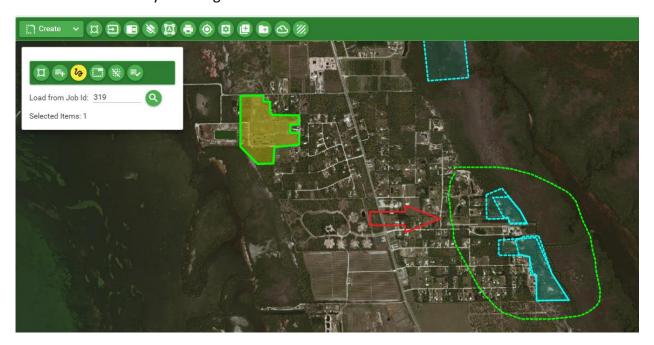


Figure 3 - 22: Select Multiple Areas

Release the mouse button to select the areas.

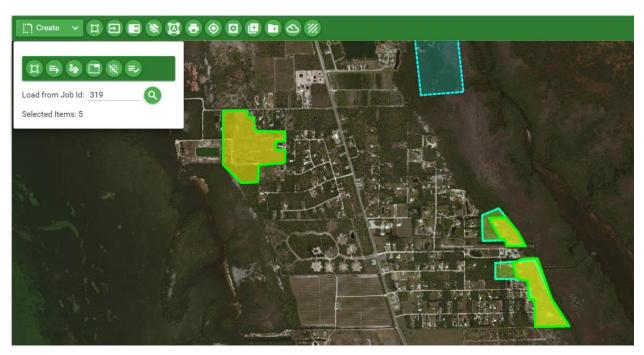


Figure 3 - 23: Multiple Areas Selected

Note: after clicking , you cannot use the mouse to move (pan) the map. You can use the Up, Down, Left, Right keys to move the map. If you want to use the mouse to move the map, you can click again to turn off this function.

c) When all desired areas are selected, click to add them to the current mission.

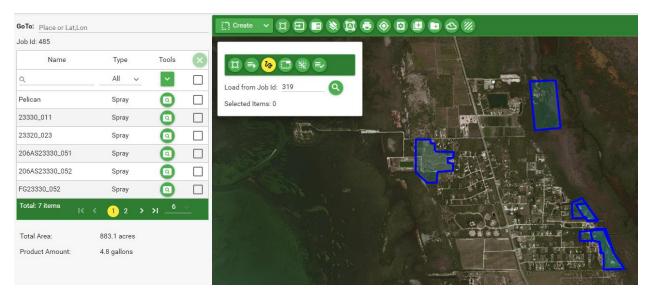


Figure 3 - 164: Add Areas to Mission

- d) Click to close the Add Area Controls.
- e) Finally, click to save the mission.

3.7 Create Area Library

If your clients have areas that you spray year after year, you can create an area library or area list for each client. When creating a job for a client, you can select spray areas from the area list created for that client. There are 2 ways to make an Area Library:

1) **Tools** → **Manage Area Library**: If you have polygons saved in a shape, kml, or AgNav file, you can load the polygons to the library. To do this,

Note: If you have shape files, zip the .shp, .shx, .dbf and .prj files together. If you have AgNav files, zip the .no1, .prj, .dsp, .xcl files together. If you include other files such as .xyz, .log, and spray data files, they will be ignored. If you have .kml or .kmz files, you do not have to zip them.

a) In Clients List page, select a Client that you want to create the Area Library for, or you can select the client from the Client dropdown List within the Area Library page.



Figure 3 - 25: Select Client for Area Library

b) Click Tools menu then select Manage Area Library. The page is shown.



Figure 3 - 26: Area Library

- c) Click "+ Select File" button.
- d) Select the kml file or zip file that has spray polygons.

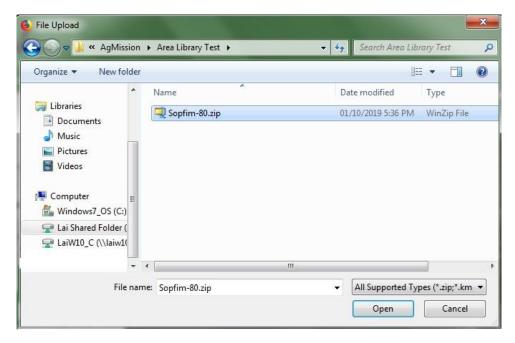


Figure 3 - 27: Select File for Area Library

e) AgMission will import the found polygons then show them on the map.

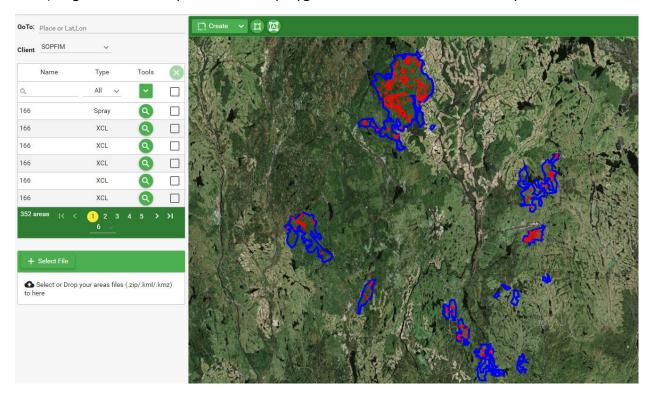


Figure 3 - 28: Area Library - Show Polygons

f) You can edit the area information or delete unwanted polygons by selecting polygons then click Tools button.

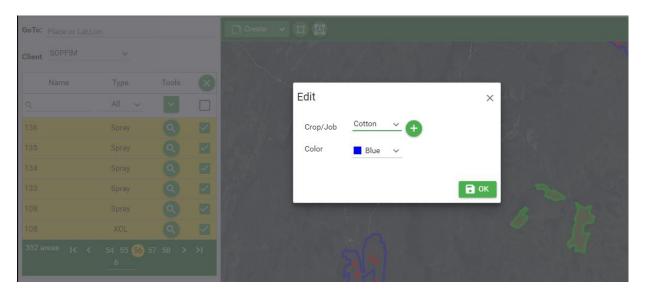


Figure 3 - 29: Edit / Delete Polygons

g) Click the desired task, Edit or Delete.

If Edit, you can assign the Crop Type or Job Type to the selected polygons. The color assigned to Crop/Job type is used. You can change the color if desired. For example, plotting all restricted areas in purple or orange.

If Delete, the selected polygons will be deleted from area library.

You can create more polygons by clicking "**Create**" then select the type of polygon or zone.

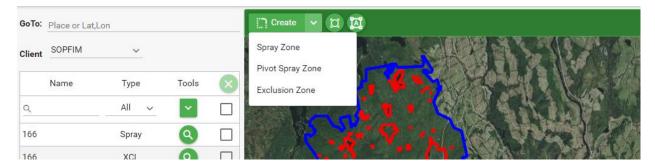


Figure 3 - 30: Creating Polygons for Area Library

- h) Creating a polygon for library is the same as creating an area for a job.
- i) When all done, make sure you click "Save" to save the area library.



Figure 3 - 31: Save Area Library

- 2) By using "Add to Library" in Job Map page: When creating or editing a job for a client, you can add the spray zones and exclusion zones to the area library for this client. To do this,
 - a) Select a Client, if not selected.
 - b) Create a job or open an existing job.

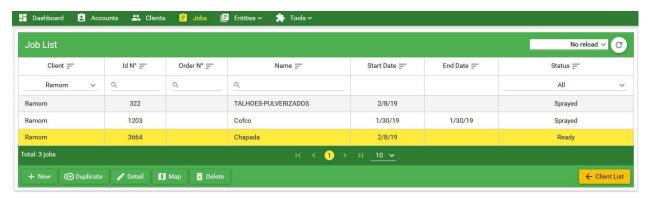


Figure 3 - 32: Select Job for Area Library

c) Click "Map" to view spray areas on Job Map page.



Figure 3 - 33: View Job on Map

- d) On the left panel, tag the polygons you wish to add to library.
- e) Click Tools dropdown button then select "Add to Library".



Figure 3 - 34: Add Areas to Library

f) AgMission will confirm if area adding to library is successful or not. It will check and ignore duplicated ones if any.

After polygons were added to a Library, when creating or editing a job, in Job Map page, you can load areas from library by clicking button.



Figure 3 - 35: Load from Library

The polygons from library will be shown.

You can select the desired polygons for the new job by check marking them in the list or directly clicking on the polygons on the map.



Figure 3 - 36: Polygons from Area Library

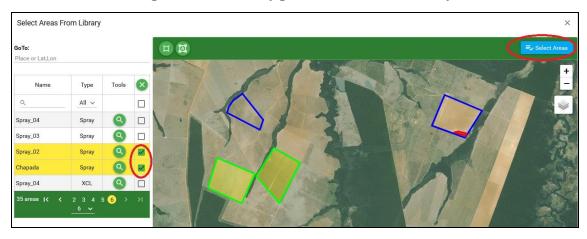


Figure 3 - 37: Select Polygons from Area Library

The selected polygons are highlighted. Click Select Areas to add polygons to job.

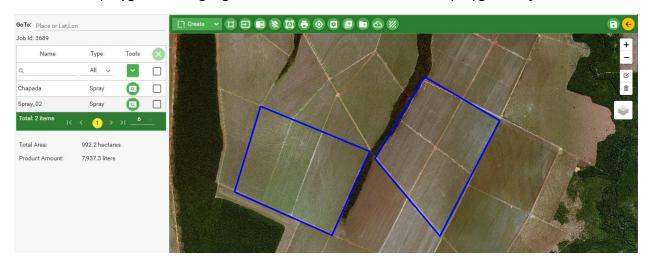


Figure 3 - 38: Add Polygons to Job

You can add or create more polygons if desired. Finally save the job.

3.8 Manage Area Libraries

To view polygons in area library,

- a) Select Client from the Client List.
- b) Click Tools → Manage Areas Library.

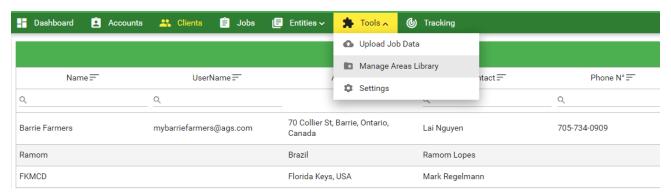


Figure 3 - 39: Tools - Manage Area Library

c) When the map is shown, you can zoom in or out to view the polygons.

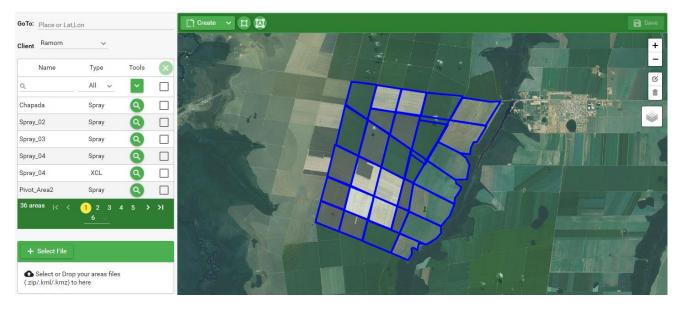


Figure 3 - 40: Manage Area Library - View Polygons

- d) You can delete, modify existing polygons; or add more polygons. For restricted areas, you can assign a new Crop/Job Type, for example "Residential" or "BeeHives", to the polygons and plot them in orange or red.
- e) Save the area library when done.

4. Download or Assign Jobs to a Platinum

Along the application process, once a job was created, approved and ready for application with "Ready" status, the next step is to transfer the job to an aircraft for spraying.

There are two ways to transfer the job to Platinum, within an aircraft:

- 1. Download the job files into a USB stick then copy the jobs to the Platinum.
- 2. Use the Job Assignment function to assign the job to Platinum in an aircraft if there is internet available at the airport.

Note: This requires setting up a unique aircraft account mentioned in Section 2.6 and apply the account to the assigned aircraft, section 5.1, Platinum Agmission Settings.

4.1 Download Jobs to USB Stick


To download a job, the Job Status must be changed to "Ready". To do this, select the Status on the Job Information page. If the current selection is "New", change it to "Ready",



a) Download job without map background: in "Job Tools" section, click the "v" on



- Select "AgNav" if you want to spray the areas in the job separately. AgMission will create a single *.no1 file for each spray area.
- Select "AgNav Prj" if you want to spray the areas in the job together. AgMission will create a project *.prj file for all spray areas.

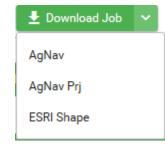

• Select "ESRI Shape" if you want to save all spray areas in the job to a shape file.

Then, AgMission creates a job zip file with filename the same as the Job Name. For example, if the Job Name is "JoeFarm-Innisfil", the job filename will be "JoeFarm-Innisfil_<jobld>.zip".

Depending on the browser used to run AgMission, the job file may be saved in the "Downloads" folder on your computer; or it may prompt you to select where to save the file. If the browser does not prompt you to select the folder, search in the "Downloads" folder on your computer for the job file. Copy it to a USB key, then copy the job file to the Guia system.

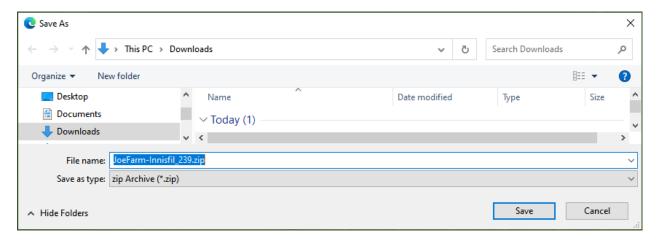


Figure 4 - 1: Download Job - Save zip File

If the browser prompts you to select where to save the job file, you can choose to save the file to a USB key or to a folder on your computer.

- b) Download Job with Map Background: You can download a job with the map background. To do this,
 - Click the Map information screen or in Job List screen to view the job in Job Map page. Adjust the map scale to fit the spray areas. What you see on the map is what you get for display on the Platinum. Do not select too large scale, e.g. > 5 miles left to right.


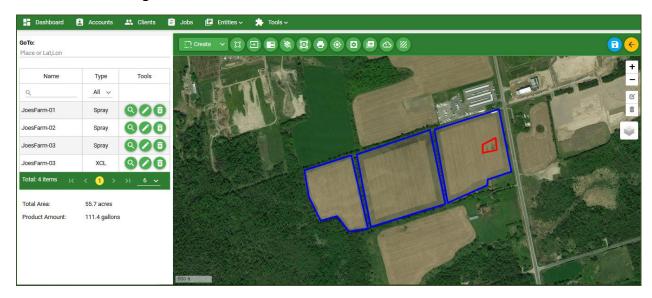


Figure 4 - 2: View Job on Map

Click Download button. The file format options are shown.

- Select the desired option. "AgNav", "AgNav Prj" and "ESRI Shape" download spray areas, exclusion zones and map background. "Map Only" will download map background only. Select this if you want to download more maps for the job.
- Click Download button. AgMission will create a job file which is a zip file with filename the same as the Job Name. For example, if the Job Name is "JoeFarm-Innisfil", the job filename will be "JoeFarm-Innisfil_239.zip".

Depending on the browser used to run AgMission, the job file may be saved in the "Downloads" folder on your computer; or it may prompt you to select where to save the file. If the browser prompts you to select the folder, choose to save the job file to a USB key or a folder on your computer.

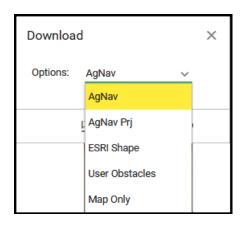



• If you use Job Assignment instead, described next, click the "Save Map" button to save the map background.

4.2 Assign Jobs to Platinum

If you have an AgNav Platinum system with internet access, you can use this function by creating an aircraft account for it in Entities > Aircraft. Then, the account username and password must be entered in the AgMission Settings in the Platinum for auto logging to AgMission to receive the job or send it back to Agmission with spray data when done. When the setup is done, you can assign a job to the Platinum by selecting its name within the "Aircraft" list within Job Assignment section in the Job Information page.

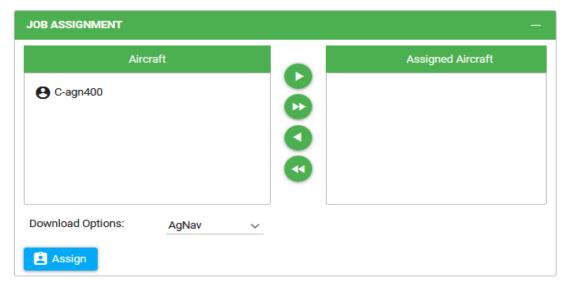


Figure 4 - 3: Job Assignment

As an example, we have created an aircraft account named <u>c-agn400@ags.com</u> for the Platinum. The aircraft name "C-agn400" is shown in the "Aircraft" list under "**Job Assignment**". To assign the job to this aircraft:

- a) Click the aircraft name to highlight it.
- b) Click this button. The aircraft name is moved to the "Assigned Aircraft" list.
- c) Select the file format in the "Download Options". Choose "AgNav" for a single no1 file for each spray area in the job, "AgNav Prj" for a project file combining all areas, and "ESRI Shape" for a shape file for all areas.

Note: If map background was saved before in the Job Map screen, the map background file will be saved to the job file as well.

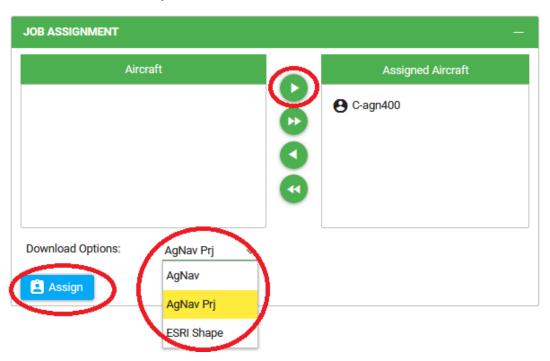


Figure 4 - 4: Assign Job to Aircraft

d) Click Assign button to send the job file to the assigned aircraft.

Note: if the mission has only one spray area, do not select to output job to AgNav Project, e.g. "AgNav Prj".

5. Perform assigned Jobs in a Platinum

For the Platinum system to connect to AgMission, an aircraft account must be created for the Platinum (Section 2.6). As an example, an aircraft account was created with the following information:

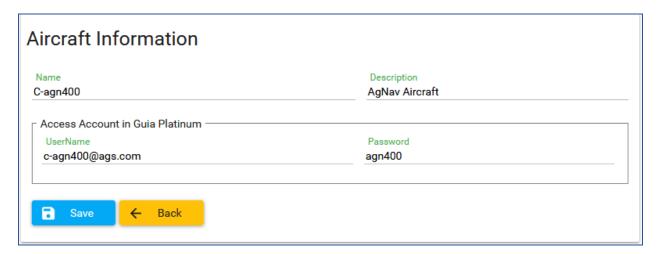


Figure 5 - 1: Aircraft Account

5.1 Platinum AgMission Settings

To setup an aircraft account for the Platinum, on the Platinum Main menu, select Settings.

1) Tap the AgMission button.

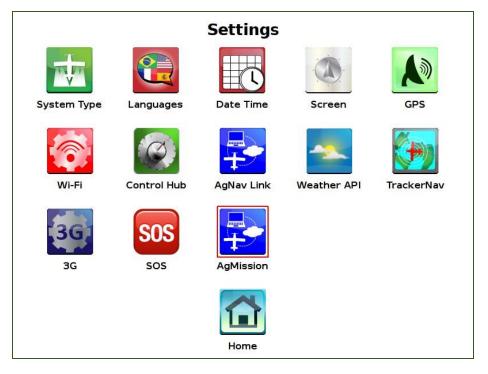


Figure 5 - 2: Settings - AgMission

2) Enter the username and password which were created for this aircraft in AgMission. As in our example, the username is c-agn400@ags.com and password "agn400".

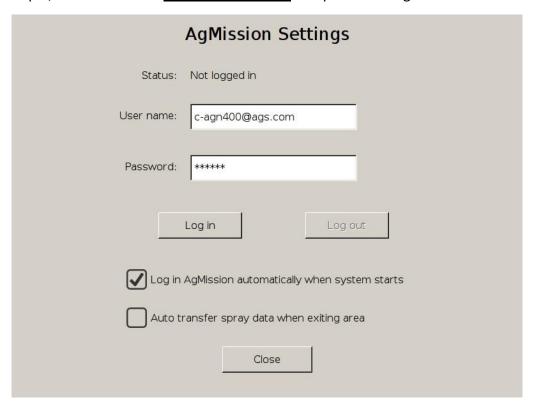


Figure 5 - 3: Enter AgMission Authentication

- 3) Check mark the "Log in AgMission automatically when system starts".
- 4) Optional, check mark the "Auto transfer spray data when exiting area" if you want to be prompted to upload spray data to AgMission automatically every time you exit an area.
- 5) Tap the "Log in" button to log in to AgMission. If the username and password are correct and internet available, the connection status will be "Logged in". It will be "failed" if not successful. If there are jobs sent to the Platinum up to that time, the number of jobs will be shown as well.



Figure 5 - 4: Log In to AgMission

6) Tap "Close" to exit AgMission settings.

When returning to the Main menu, check the indicators at the top right corner of screen. The AgMission connection status is shown. The bright green indicates good connection. If there are jobs waiting for download, the number of jobs will be shown as well.



Figure 5 - 5: Platinum Main Menu

5.2 Download Assigned Jobs

If the Main menu shows you have jobs to download, do the following:

- 1) Run File Manager. The new job alert is shown. Click "OK".
- 2) Tap the AgMission icon at the bottom right corner to show the list of new jobs. As an example, we have one new job named "JoeFarm-Innisfil" with job ID 239 sent by AgMission. It is shown on the right-side list of File Manager.





Figure 5 - 6: Select Job to Copy

- 3) Select the job.
- 4) Tap the "Copy" button to copy or download the job to Platinum.
 - When the job is copied successfully to Platinum, it will disappear from new jobs list. The job status in AgMission will be changed to "Downloaded" for office staff or other pilots to know that the job was downloaded for spray.
- 5) You can verify and check what files were downloaded by tapping the icon at top right corner of the Hard Drive (left) side. The list of missions will be shown. Look for the one with the <Mission Name>_<JobId>, for example JoeFarm-Innisfil_239.

Note: After being copied to the Platinum, the term "Job" will be referred as "Mission". You will need to enable the Mission function in the Platinum to perform the application.



Figure 5 - 7: List of Missions

- 6) Optional. Tap the top right icon again to open the mission folder. The list of area, project, or shape files is shown.
- 7) The job or mission download is done. Tap the Exit button to exit File Manager.

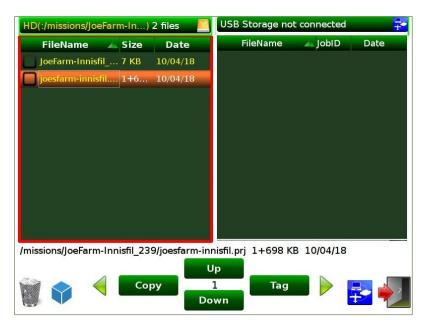


Figure 5 - 8: Within a Mission folder

Note: if you have downloaded the job to a USB key, just plug the USB key to the Platinum and run File Manager. The job will be shown on the USB side (right) and you can copy the job to Platinum in the same way.

5.3 Fly the Mission

In the Platinum, to fly the mission,

- 1) Run Navigate on the Main menu.
- 2) Tap the Mission icon . If Mission function was off, change "Mission: No" to "Mission: Yes".



3) Select the desired mission, for example JoeFarm-Innisfil 239. Then tap

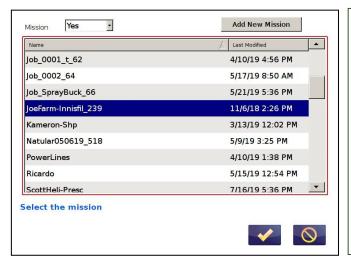




Figure 5 - 8: Select Mission to Fly

- 4) The mission name is displayed at the top of screen.
- 5) The default settings are used for the new mission. Check the Settings to make sure everything is OK for spray.
- 6) When done, tap the Application icon. Check Swath Width.

The job information entered in AgMission Job Information page is used for Pilot Info, so you do not have to enter it. However, you can edit the info if desired.



Figure 5 - 9: Pilot Information

7) Tap "Old Area" to select the areas to spray.

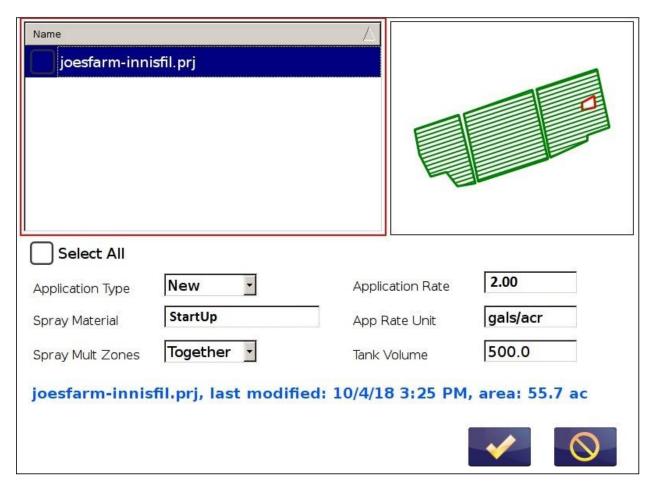


Figure 5 - 10: Select Areas to Spray

- 8) The Spray Material and Application Rate are what were preplanned in AgMission. Enter the Tank Volume and how you want to spray multiple zones in the project.
- 9) Tap to continue.

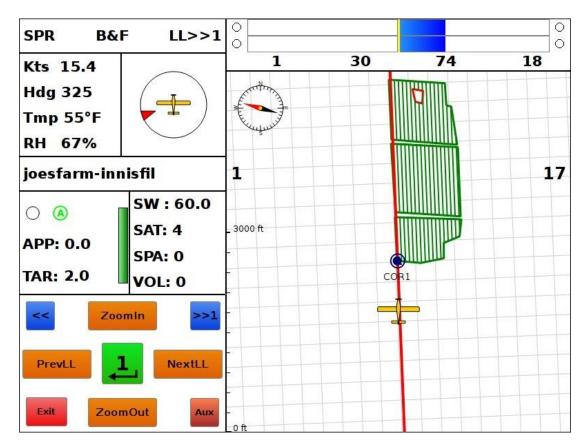


Figure 5 - 11: Spray Area Display on Platinum

Change the grid lines to spray in the desired direction by using <NewGrid> or <BestHead>. If on the ground, go to the Map mode to check the areas and grid lines. You have more functions for grid line generation in the Map mode.

When the grid lines are good, follow the guidance to spray the areas.

Note: The application rate defined for each spray zone will be used for flow control. If each spray area has a different application rate, AgMission will create a prescription file *.vfr in AgNav format. You can select "Variable Rate" on the Application menu and select the .vfr file to apply the prescribed rate for each area. This can be done if you have a flow controller.

6. Upload Spray Data and Print Report

When the pilot finished the job, the spray data or as-applied data files can be uploaded directly to AgMission to update the job for reviewing or printing reports.

Note: functions in this section only apply for jobs planned (created) in Agmission then followed the steps described in section 4 and section 5 above.

6.1 Upload Spray Data Directly to AgMission

To do this,

- 1) Run File Manager. Do not plug in a USB key.
- 2) Tap the AgMission icon at the bottom right corner.
- 3) Highlight "<missions>" on the left side to show the mission list.
- 4) Tap the desired mission, for example "JoeFarm-Innisfil 239"



Figure 6 - 1: Select Mission to Export

5) Tap to change the function menu until you see the "Export" button.

- 6) Tap "Export".
- 7) Tap "Yes" to confirm Export.
- 8) If Export is done successfully, the confirmation is shown. Tap "OK".
- 9) Exit File Manager.



The as-applied data files exported directly by File Manager to AgMission are displayed under the **Job Data and History** section for the corresponding job in **Job Information** page.

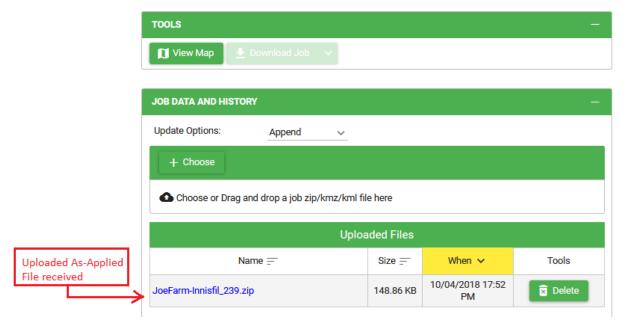


Figure 6 - 2: Exported File Display

6.2 Upload Spray Data by USB Key

If you do not have the connection to AgMission, you can copy the as-applied data file to a USB key (you can also do this for the Guia Gold and Silver). To do this,

- a) Plug a USB key to the Guia Platinum, Gold or Silver.
- b) Run File Manager.
- c) Open the "missions" folder to show the list of missions.



Figure 6 - 3: File Manager - Missions

d) Select the desired mission, for example "JoesFarm-Innisfil_239".



Figure 6 - 4: File Manager - Select Job Folder

- e) Tap to change the function menu until you see the "Export" button.
- f) Tap "Export".
- g) Enter as-applied data filename. You can use the same name as the job filename.
- h) Tap

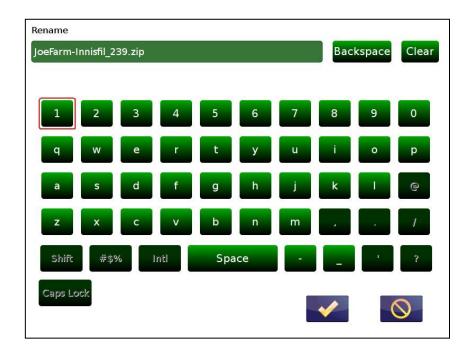


Figure 6 - 5: Enter As-Applied Filename

File Manager will export a zip file with all spray data to the USB key, overwriting the file if it already exists on the USB key.

- i) Exit File Manager. Unplug the USB key from the Guia system.
- j) To upload the as-applied file to AgMission, plug this USB key to your computer.
- k) Run AgMission, type <u>agmission.agnav.com</u> in browser's Address Bar.
- I) Select Client. Then click **Tools** → **Upload Job Data** menu item.

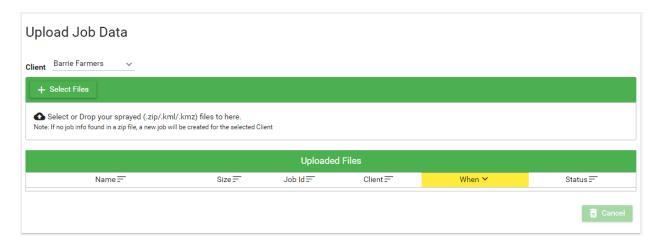


Figure 6 - 6: Tools → Upload Data

m) Click + Select Files then select the spray data file, for example "JoeFarm-Innisfil_239.zip ", on the USB key then click Open.

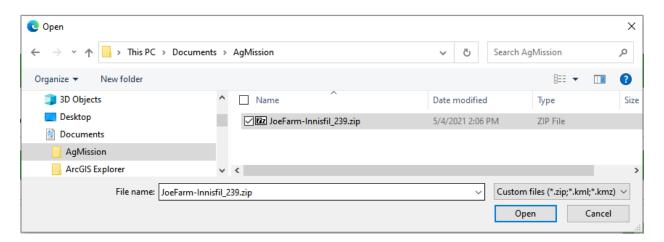


Figure 6 - 7: Choose File to Upload

AgMission will load the selected file, read the job information in the zip file, and add spray data to the job.

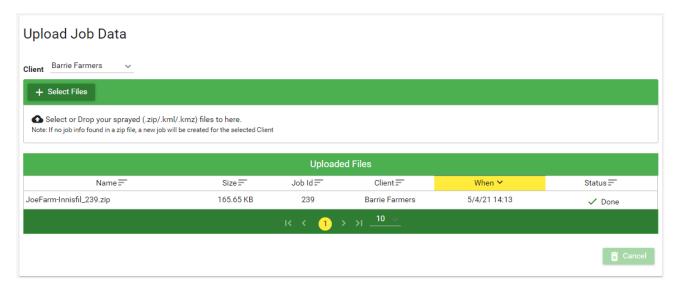


Figure 6 - 8: Uploaded File Received

If you have more data files to load, repeat step m) or select multiple files at a time.

6.3 Upload Spray Area and Data for Jobs not planned with Agmission

If you have spray areas and spray data created by the AgNav guidance system without following the process described from section 3 to 6, you can also upload them into a Job in AgMission. To do this,

- a) In the Platinum/Guia systems, use **Copy** key in **File Manager** to copy the jobs or missions to your USB.
- b) In File Manager software within your PC, locate the folder of the job/mission.
 - Note: In the USB, non-mission jobs can be found within the USB root folder. Jobs created using Mission function will be in a same-job- name folder under "USB root:\missions\" folder.
- c) Select the area or project files and associated spray data folders then compress or zip them into a zip file. For example, if the project file is Kevin.prj, you should zip all files named Kevin and the Kevin folder. The output file will be Kevin.zip.

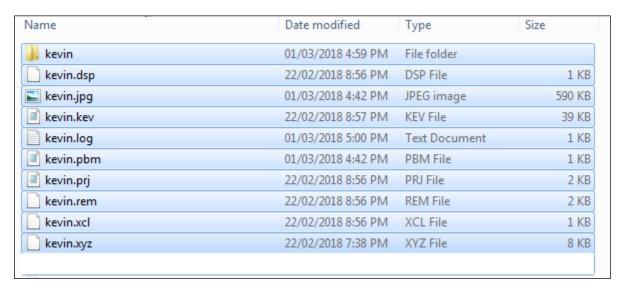


Figure 6 - 9: File Compression for Upload

Tips: You can save the area files (.no1, .prj, .agn, .shp, .shx, .dbf) and all related files (.dsp, .xcl, .xyz, .kev, .log) including spray data folder to a separate folder, and then compress the folder. For example, you can create a folder called "kevin-010318" for "kevin" project sprayed on 01/03/2018. Copy all "kevin" files and the folder "kevin" into "kevin-010318" folder. Then zip the folder "kevin-010318". The zip filename will be "kevin-010318.zip".

d) Do step m) in section 6.2 above to upload the zip file(s) to AgMission.

Note: if the Client whom this job was done for is not existed, create a new Client and select the Client first.

After the upload is done, a new job will be created for the uploaded zip file. Note the job ID number and job name. The job name is normally the same as the zip filename. You can select this job in the Job List page to view the job items and the data on map. Likewise, you might want to open the job in Job Information page to edit the job information by click on "Detail" button.

6.4 View Spray Data and Print Report

To view spray data of a job, normally with "Sprayed" status, do the following:

a) Select the Job. You might need to select a Client first.



- b) Click Map button.
- c) On the Job Map page, click to load and display spray data.

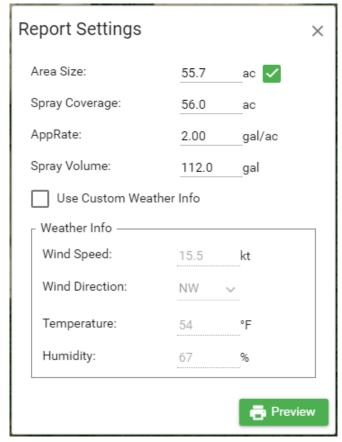


Figure 6 - 10: View Map and Spray Data

d) To turn on/off measurement information, click



- e) To print an application report, click
- f) Check the Report Settings for information that will be printed on the report. You can change the information as desired. When you change Spray Coverage or App Rate, Spray Volume will be recalculated.
 - If you want to input custom weather info, check mark on "Use Custom Weather Info" then input the values accordingly.
- g) Click "Preview". The report will be shown in Report Viewer screen within a new browser Tab. You then can print or save the report to a PDF or Excel file.



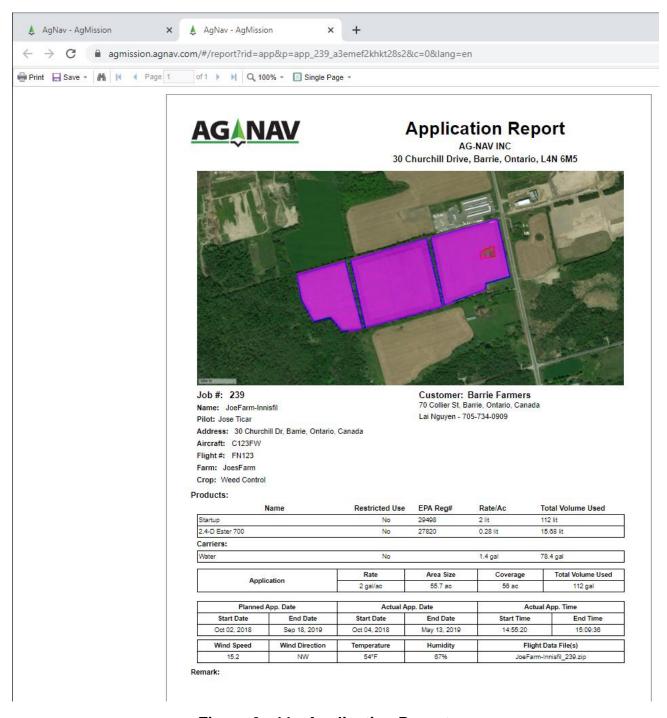


Figure 6 - 11: Application Report

7. Manage Jobs by Uploading Files

This section describes how you can create or update existing jobs if you have areas and/or spray data files. Refer to section 6.3 above, if you want to upload files to create a new job.

As mentioned in section 3 above, assumed that you have existing jobs and want to update the job items (areas, exclusion zones, etc.) or spray data manually by uploading files. To do that,

- 1. Zip all the files into one zip file as mentioned in section 6.3.
- 2. Click on Jobs menu to open the Job List screen.
- 3. Select the job then click "Detail" button to open the job in Job Information page.

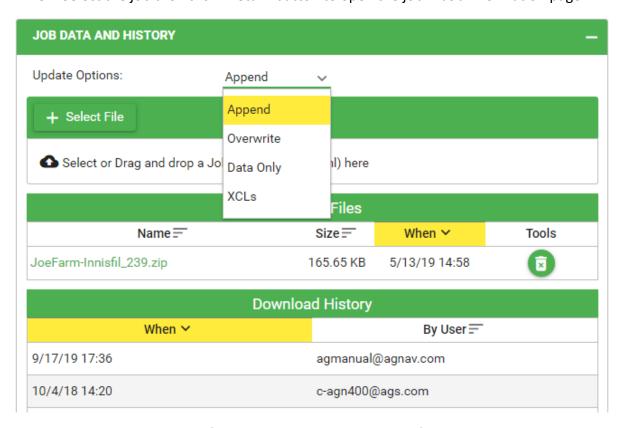


Figure 7 - 1: Update Job Options

Look for the "JOB DATA AND HISTORY" section, on the "Update Options" options, select the desire one.

- Append: all founds areas, waypoints and data to be appended.
- Overwrite: replace all existing job items with the ones found including the data.
- Data Only: add data found only.
- o XCLs: all areas found will be appended as exclusion zones.
- 4. Click on + Select File the select the zip file, click on "Open" button.

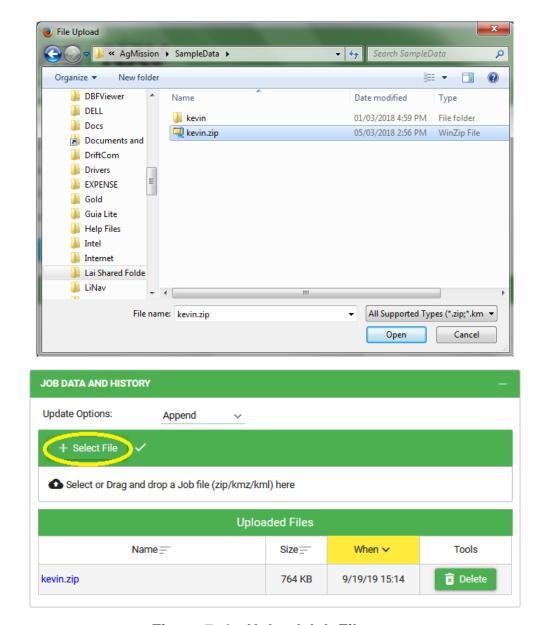


Figure 7- 2: Upload Job Files

Agmission processes the upload file, when finished; the file will be added to the "Uploaded Files" list.

5. Optional. You might want to click on "View Map" button to open the job in Job Map page to check the job items, view the spray data or print the application/pre-mission report.

Notes: you can delete the uploaded files by clicking on the button. Agmission will only remove the data found within the zip filed. All changed to job items will not be undoable.

7.1 Upload Shape Files

The shape file format includes a spatial file *.shp, index file *.shx, database file *.dbf, and map projection file *.prj. Remember to compress all files together into one zip file.

7.2 Upload Google Earth Files

If you create spray areas in Google Earth, the result is a kml or kmz file. You can upload the file to AgMission as is, no need to compress it. A kml/kmz file can have one or more spray polygons, exclusion zones, buffer zones, and place marks. A buffer zone is a multi-path line. The width of buffer zone must be defined in the multipath name. For example, if a buffer zone is 10m wide, the name of multi-path line should be "buffer zone: 10m".

8. More on Create Job Items

This section describes each of the functions to create Job items within Job Map page.

After creating a job and show the map at the desired location, you can do the following:

8.1 Create Pivot Spray Zone

a) Click and select Pivot Spray Zone.

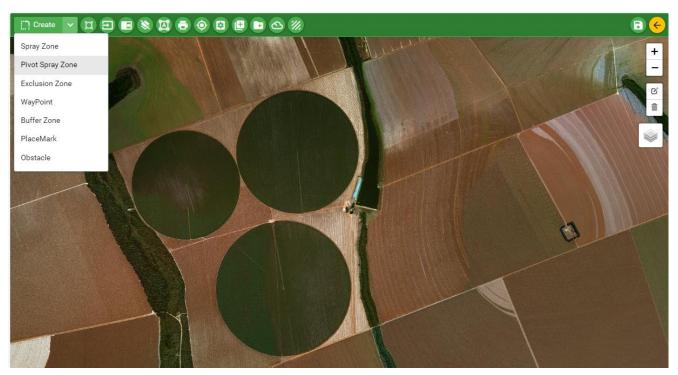


Figure 8 - 1: Create - Pivot Spray Zone

- b) Move the cursor to the center of the pivot spray area.
- c) Click then hold down the left mouse key and drag the mouse to the edge of pivot area.



Figure 8 - 2: Creating Pivot Area

- d) Release the mouse button when the circle matching with pivot area.
- e) The area information is shown. You can rename it or change boundary color. Click OK to close it.

Note: a pivot area is then physically created with at least 18-side polygon or more depends on the radius. The area size of polygon shown on the Spray Zone info is slightly smaller than the size of circle.

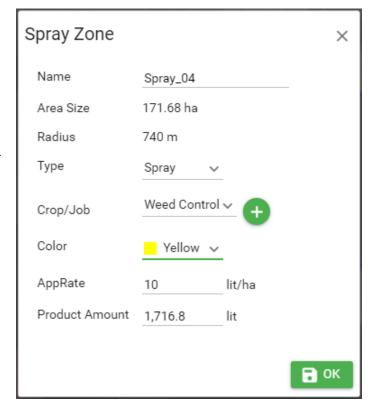




Figure 8 - 3: Showing Measurement - Area Size

You can create a mix of pivot areas and polygons for the same mission. You can use a pivot area to mark a no-spray zone such as bird nest, beehives, or school. In this case, when the Spray Zone information is shown, you can change the Type to Exclusion Zone and change Color to Red.

f) When all areas have been made, click to save the mission.

8.2 Create Buffer Zone


A buffer zone is a no-spray zone between a sensitive zone and a spray zone. It is created and saved as an exclusion zone. To create a buffer zone:

- a) Click and select Buffer Zone.
- b) Move the mouse to the buffer zone.
- c) Click along the buffer zone.



Figure 8 - 4: Create Buffer Zone

- d) When reaching the end of buffer zone, click the last point to finish.
- e) The Buffer Zone information is shown. Enter the width of buffer zone as required. Click OK to finish buffer zone.

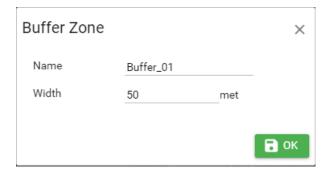

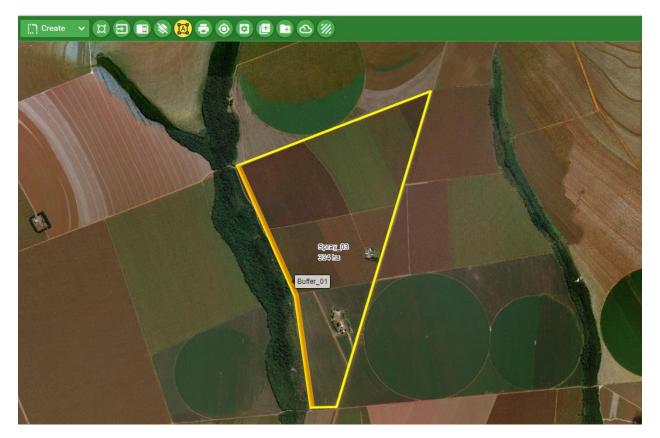


Figure 8 - 5: Buffer Zone Done

f) When all areas have been made, click to save the mission.


Note: while creating spray/pivot zones, exclusion zones, buffer zones, if you want to show detail measurements, click on Show Info button.

8.3 Create Waypoints

A waypoint is a point or location that pilot wants to get guidance to fly to. A waypoint can be a local airport, loading zone, or dumping zone. When you create waypoints in AgMission, the waypoints will be saved to area files (.no1, .prj, .agn) for use during mission application.

To create a waypoint for a mission, the mission must have at least one spray area. You cannot make a mission just to have waypoints. Thus, you should make spray areas first. Then add the waypoints. To add waypoints, do the following:

- a) Click and select "WayPoint".
- b) Move the map to the desired location.
- c) Click at the location.
- d) When Waypoint info dialog is shown, you can change the waypoint name. Note that for a waypoint name to be shown properly on the Guia systems, it should have maximum 5 characters and without a space. You can change the coordinates if needed.

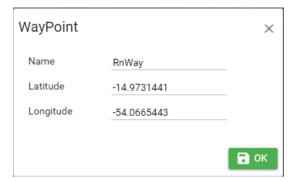

e) When all waypoints have been created, click to save the mission.



Figure 8 - 6: Create Waypoints - Done

On the map, waypoints are shown as balloon symbols.

8.4 Create PlaceMarks

A PlaceMark is used to mark a special place on the map. PlaceMarks are not saved to a mission file for use during flight. If you want to show PlaceMarks on the Guia, you should enter them as waypoints. To create a PlaceMark:

- a) Click Create v then select PlaceMark.
- b) Move the map to the desired location.
- c) Click at the location.
- d) When PlaceMark information is shown, you can change the PlaceMark name.
- e) When all PlaceMarks have been entered, click to save the mission.



Figure 8 - 7: Create - PlaceMark

On the map, PlaceMarks are shown as pushpin symbols.

8.5 Create and Show Obstacles

An obstacle is a high object that may cause air accident. An obstacle can be a tower, windmill, power line, or high tree. Obstacle awareness is the key to avoid accidents during aerial application at low flight height above ground. For this reason, obstacles can be marked on the map around the spray areas for pilot to know before flight.

For spray areas in the United States, Canada and Mexico, the obstacles recorded by FAA are read and displayed on the map.

To show obstacles on the map, click then select Obstacles.

Obstacles are shown as tower symbols on the map. The colors of obstacles are defined based on their height.

When pointing the mouse to an obstacle, the obstacle information is shown. The information includes the obstacle ID or name, coordinates, type, and height above ground.

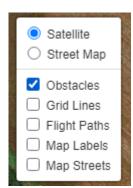




Figure 8 - 8: Obstacle Display

Besides the FAA obstacle database, you can create an obstacle database for yourself for use in AgMission for all missions.


To create an obstacle:

- a) Click then select "Obstacles".
- b) Move the map to the obstacle location.
- c) Click at the location.



Figure 8 - 9: Create - New Obstacle

d) When Obstacle Information is shown, you can edit the information. "Name" can have up to 15 characters. "Height" is the height above ground (AGL) of obstacle. "MSL Height" is read from the map for height relative to mean sea level. When you enter the "Height", the "MSL Height" will be adjusted.

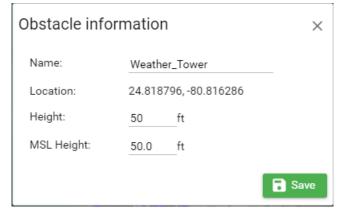

e) Click Save to save the info. New obstacle will be shown in color depending on its height.

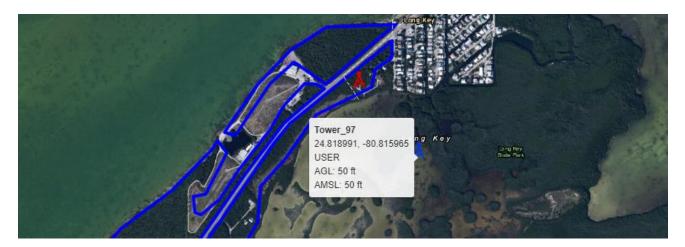


Figure 8 - 10: New Obstacle Display

If an obstacle is created by the user, the type of obstacle will be "USER".

To change the obstacle information or delete obstacle, click on the obstacle. The obstacle information is shown again for you to edit or delete it.

Note that only obstacles created by you can be edited or deleted.


9. More on Display Functions

This section describes on additional display functions within the Job Map page.

9.1 Obstacle Settings

To view and change the obstacle colors, do the following:

I. Click to show the Job Map Settings.

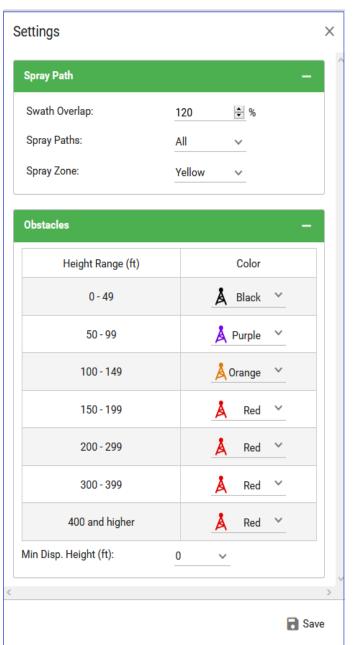

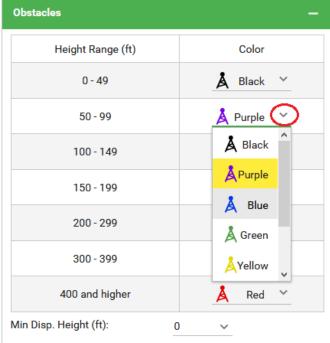


Figure 9 - 1: AgMission Settings

- II. The obstacle colors are defined based on the Height Ranges. You can change the color for each range by clicking the down arrow button beside the color.
- III. Select the color from the drop-down list.
- IV. You can filter out the obstacles by entering the "Min Disp. Height". Any obstacles lower than this height will not be shown on the map. By default, the minimum display height is 0 feet or meter.
- V. When done, click the "Save" button to save the settings.

9.2 Download User Obstacles

To download User Obstacles for use in a Guia system, click and select "User Obstacles".

- a) Click Download button.
- b) Save obstacle file. The default file name is "obstacles.dat". You can change the file name, but the file extension must be ".dat" for the Guia to recognize it to be an obstacle file.

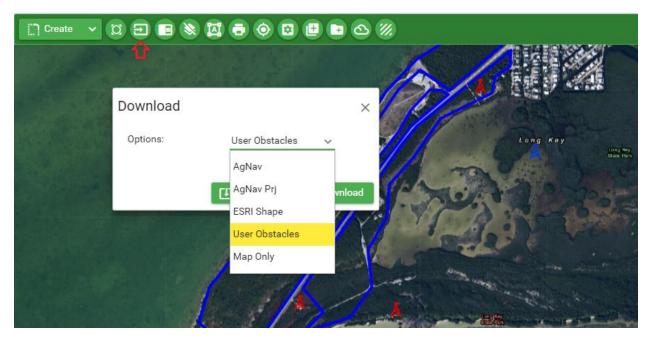


Figure 9 - 2: Download User Obstacles

9.3 Weather Display

As part of flight planning, you may want to know if the weather is good for application. To view the weather at the current time around the spray location,

- a) Click Weather Info button . The mouse cursor is changed to crosshair.
- b) Click the desired location on the map to show the weather.

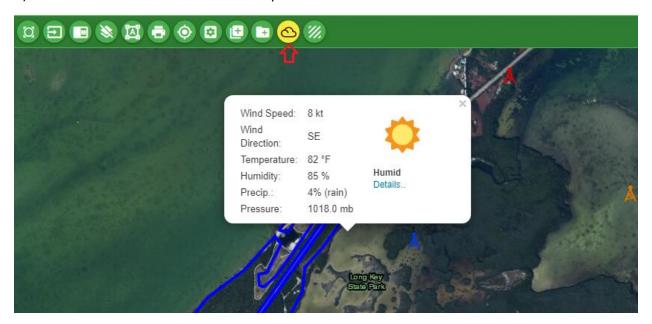


Figure 9 - 3: Map Display - Weather

- c) To view the weather broadcast, click the "details.." link on the weather information.
- d) To turn off weather display, click again.

Note that the weather information is obtained from the internet. The accuracy depends on where the closest weather station is and when the information was updated.

9.4 Coordinates Display

To view the coordinates on the map,

- a) Click . The mouse cursor is changed to crosshair.
- b) A crosshair symbol is displayed at the center of the map. The coordinates shown at the bottom right corner of map is the coordinates at this crosshair.



Figure 9 - 4: Map Display - Coordinates

c) By default, the coordinates are shown in degrees of Latitude and Longitude. To change the coordinate format, double click on the coordinate box.



Figure 9 - 5: Coordinate Formats

d) To show coordinates at other location, hold down the left mouse button and move the map so that the desired location is at the crosshair symbol at the center of display.

9.5 Grid Lines Display and Generation

Depending on the shapes of areas, locations of sensitive areas and obstacles, you can determine what would be the direction that pilot should fly and spray. AgMission allows you to create grid lines over the spray areas when making flight plans. To create grid lines on the spray areas:

a) Turn on rid lines display by clicking



b) Check mark "Grid Lines".

If grid lines were not generated on the spray areas, "Best Heading" will be used to create grid lines on each area.





Figure 9 - 6: Grid Line Display - Best Heading

c) Click GridLine Generation button to open the functions to create grid lines.



Figure 9 - 7: Grid Line Generation - Functions

The controls include:

- Center map on selected areas.
- Select a single area for grid line generation.
- Select multiple areas for grid line generation.
- Deselect all areas.
- Create grid lines with the Best Heading on selected areas.
- Create grid lines with heading defined by two points (AB line method).

The information shows:

- Line heading of selected area(s). If it is the first time grid lines are shown, the first area in the area list on the left panel is the selected area.
- Total number of lines on the selected area(s).
- Number of areas selected for grid line generation.
- d) To create grid lines on a single area, click then click on the desired area.



Figure 9 - 8: Grid Line Generation - Select Single Area

You can click on the area again to deselect it.

e) To create grid lines on multiple areas, click

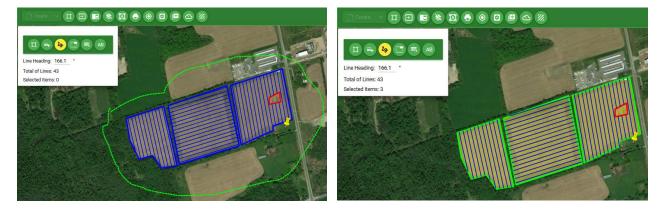


Figure 9 - 10: Grid Line Generation - Select Multi Areas

- f) Hold down the left mouse button and draw around the desired areas.
 - You can click to deselect all areas.
- g) After selecting areas, to create grid lines by using the best heading on the areas, click The Line Heading and Number of Lines on all selected areas are shown.

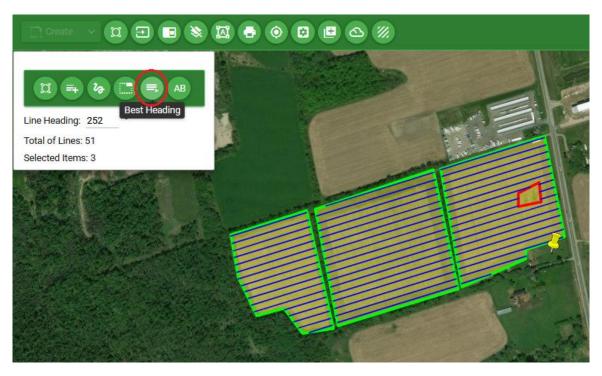


Figure 9 - 11: Grid Line Generation - Best Heading

- h) To create grid lines by the AB line, click AB.
- i) Move the mouse to a desired location then left click to mark point A.



Figure 9 - 12: Grid Line Generation - Mark Point A

j) Move the mouse to the desired location. A dotted line plotted on screen.

k) Left click the mouse to mark point B. The AB line is shown, and grid lines are generated on the selected areas.



Figure 9 - 13: Grid Line Generation - AB Line

Note: you can change the line direction by pointing the mouse to point A or point B then holding down the left mouse button and moving the point to a new location. Then release



the mouse to enter point B.

Figure 9 - 14: Grid Line Generation - Change AB Line

- I) When grid line generation is done, click to turn off the functions.
- m) Click to save the grid lines.

10. Aircraft and Ground Crew Tracking

This section describes on how the Agmission Tracking works and how to setup and use the Tracking function in Agmission.

Agmission Tracking function allows the users to track aircraft which are performing application missions in real time.

In addition, it also can track the location of the ground crew and allows sharing current location of the ground crew to Platinum. When using AgMission in the field, pilot and ground crew can send their current locations to each other for tracking and guidance. This function is helpful when the team, pilots and ground crew, have to move from job to job. The ground crew location can be a loading zone or landing strip for the next job. By clicking "Send My Location" button, AgMission will send ground crew location to the Platinum for pilot to know where the loading zone is. Platinum will display the location as a dynamic waypoint and provide pilot with guidance to fly to the loading zone. The Platinum also sends its location to the ground crew. All current aircraft position and ground crew are shown on AgMission Tracking screen.

10.1 Prerequisites

To enable tracking function with Agmission, you need to do:

- 1. Update the aircraft profile with a UnitID and aircraft Account. Click on Entities > Aircraft menu.
 - a) The unique Id can be defined by your convention based on the tail number then prefix it with '0' to form a 10-digit number. For example, 0000004312. Make sure there is no duplication error.

Notes: Do not use UnitID from 1 to 10. These IDs are reserved to AgNav for testing purpose only.

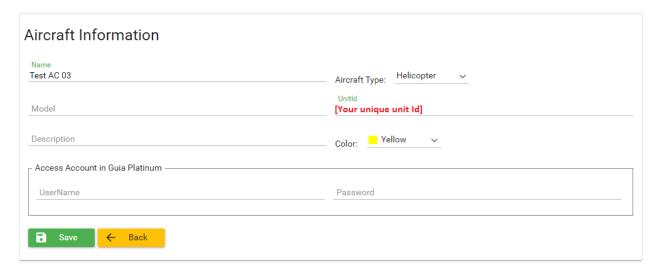


Figure 10 - 1: Aircraft Information - Tracking UnitID

- b) Create an aircraft account. If you want Platinum to see the shared locations of the ground crew, enter the UserName and Password in "Access Account in Guia Platinum" box. If this is the case, you also need to enter the account in Platinum's Agmission Settings as mentioned in section 5.1.
- c) Click on "Save" button.

Next, in order to enable the tracking function in Platinum, you will need to enter the UnitID to Platinum's TrackerNav settings.

2. Enter the UnitID to Platinum's TrackerNav Settings.

On the Platinum Main menu, select Settings, tap on "TrackerNav" button, then change "TrackerNav Service" to "Enabled", enter the UnitID then tap on the checkmark button to confirm.

Notes: You do not need to enter the prefix '0' digits of the UnitID. Do not use UnitID from 1 to 10. These IDs are reserved to AgNav for testing purpose only.

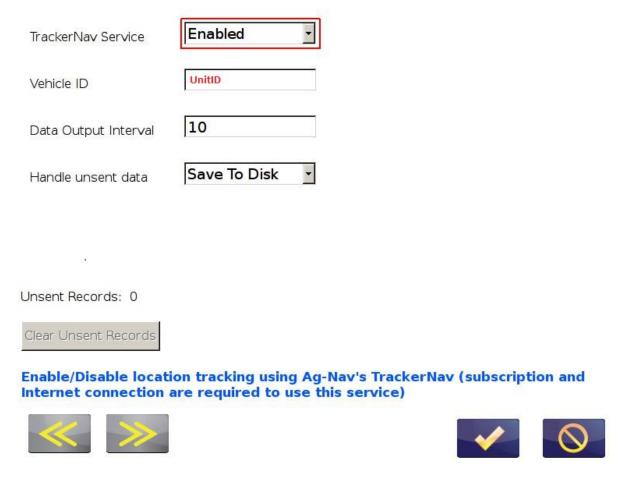


Figure 10 - 2: TrackerNav Settings - Enter UnitID

After this configuration, the Platinum will send tracking data to Agmission when and where there are GPS signal and internet access.

3. Enable Location Access in browser

The device or PC running Agmission must have internet and allowing location access permission in browsers. When you first open the Tracking screen (click on tracking menu), the browser will ask you for permission to use the location for the ground crew tracking function to work.

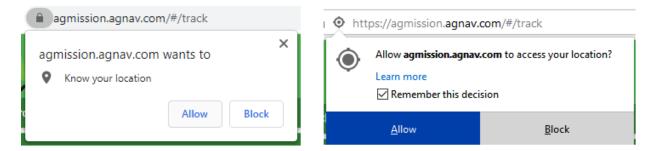


Figure 10 - 3: Location Access - In Chrome and FireFox

Click on "Allow" button to confirm, check mark "Remember this decision" in FireFox to skip prompting for this on next times you enter the Tracking screen. If the browser can obtain your current location, it will show your current location with a red user icon.

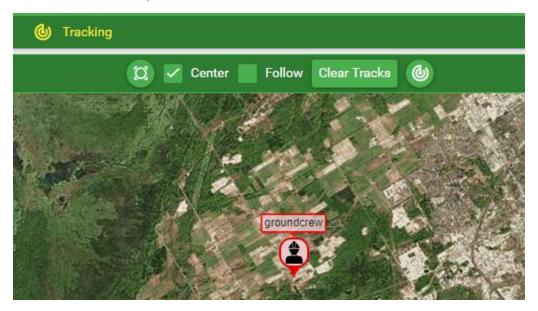


Figure 10 - 4: User Current Location

Note: The location precision depends on whether your device has a GPS sensor or less precise using the internet.

4. Tracking Display Measurement Unit Settings

The display of measurement units of tracking information in "Tracking Info" panel is determined based on the General Settings.

To change the Settings,

a) Click on Tools > Settings menu to open the Settings screen

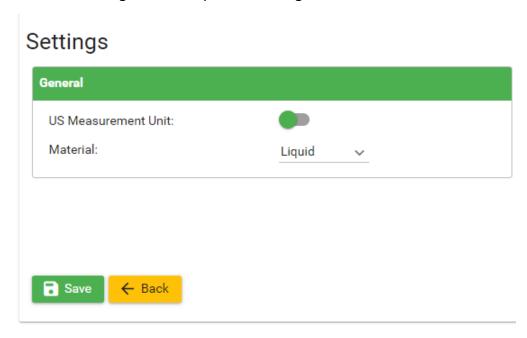


Figure 10 - 5: Tracking Measurement Unit Settings

"US Measurement Unit": Slide the button to select U.S. measurement units or metric units.

"Material": Select the type of material (Liquid or Solid) used in your application.

b) Click on "Save" button to confirm.

10.2 Tracking with Agmission

To access the Tracking function in Agmission, click on "Tracking" menu to open Tracking screen.

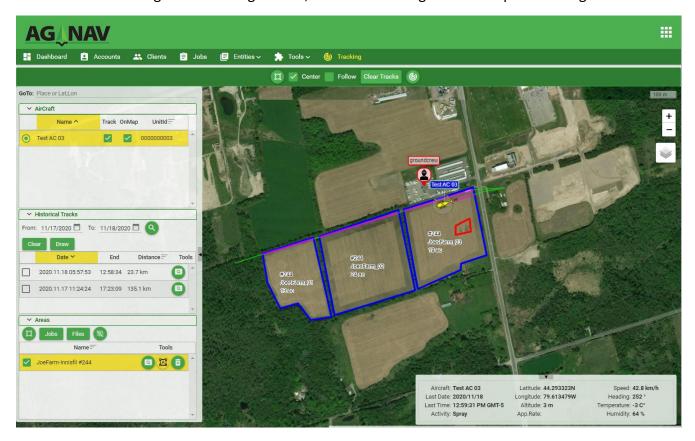


Figure 10 - 6: Live Tracking in Agmission

Tracking functions are designed for maximum user intuition. To track an aircraft, check mark on the "Track" column of the aircraft in "AirCraft" list. When a new position of the aircraft is received, Agmission will plots a line connecting from the previous position to the current position. All the line segments form a tracking line or drive/flight path. On the map the drive/flight path is plotted in green. When spray is on, the path is plotted in magenta.

The "AirCraft", "Historical Tracks" list, the "Tracking Tools" Center Follow and the "Tracking Info" panel are connected when and aircraft is selected.

1. Tracking Tools menu



E Zoom to all AirCraft. Click on this button to adjust the map view to see all aircraft.

Center: Center selected AirCraft. When check marked, the aircraft will be centered on the map screen every time you selected an aircraft.

Follow: Follow selected AirCraft. When check marked, the selected aircraft is always centered on the map view whenever there is new location.

: Clear all live Tracks. Click on this button will clear all live track paths of all aircraft on the map view.

Send My Location. For ground crew user only. Click on this will send the current location to all other users and all Platinum. With the crew member shown in Platinum navigation screen, the pilot can select this waypoint for guidance, if desired.


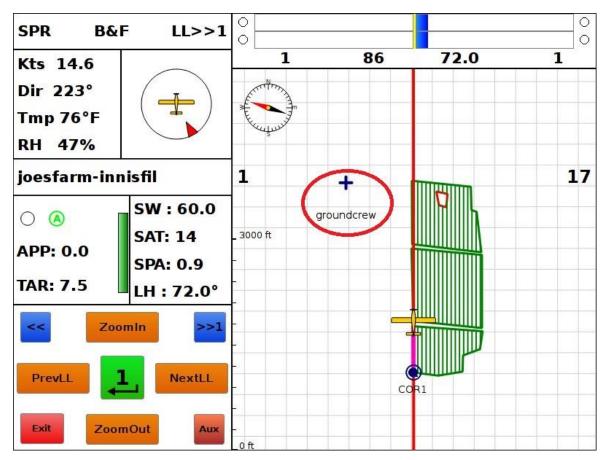


Figure 10 - 7: Ground Crew Location Display on Platinum

Note that if there are more than one ground crew team members or more than one aircraft flying, all their locations will be shown both on the Agmission Tracking screen and on each Platinum navigation screen.

 2. AirCraft List




End of the control of



"Track" : when check marked, it will plot the live tracks to new locations.

"OnMap" : check to show or uncheck to hide the aircraft icon on the map view.

3. Historical Tracks

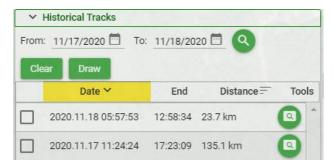

When an aircraft is selected, you can search and display tracks in the past. Select the date range in "From" and "To" then click on the Search button.

: To plot selected tracks. Old tracks are grouped by date, when there are old tracks in the list; you can check mark on the ones with the date desired then click on this button to draw the track paths.

- : To clear all plotted old tracks on the map view.
- : To show or hide the track on the map view.
- : To center the map view on the old track paths.

4. Areas List



"Areas List" functions allow you to load areas from jobs or files to show on the map view while tracking aircraft performing missions.

: Load areas from Jobs. To show "Select Jobs" dialog to search and select the jobs to show their areas on the tracking map view.


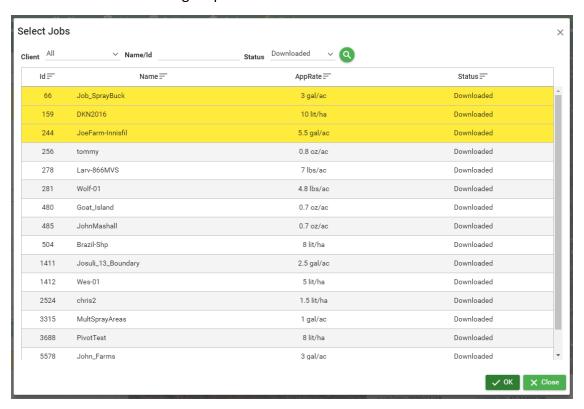


Figure 10 - 8: Ground Crew Location Display on Platinum

: Load areas from files. To show select a (.zip/.kml/.kmz) file that contains areas to show on the map view.

: Clear all. To clear the list and all plotted areas on the map view.

 5. Tracking Info panel



"Tracking Info" panel, located on the bottom right of the map view, shows the last known detail tracking information of the selected aircraft. It will also be automatically updated when there is new tracking data received by Agmission.

The measurement units of the fields are determined by the "Measurement Unit" setting in Tools > Settings.