


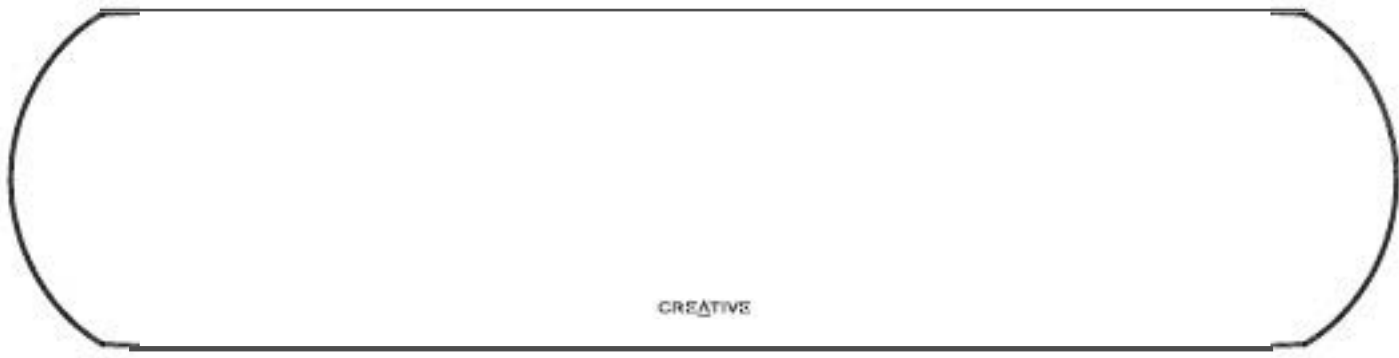


compatible with Stereo
Bluetooth devices



P/N 03MF809500003 REV A
Model No.: MF8095

1. Product Overview

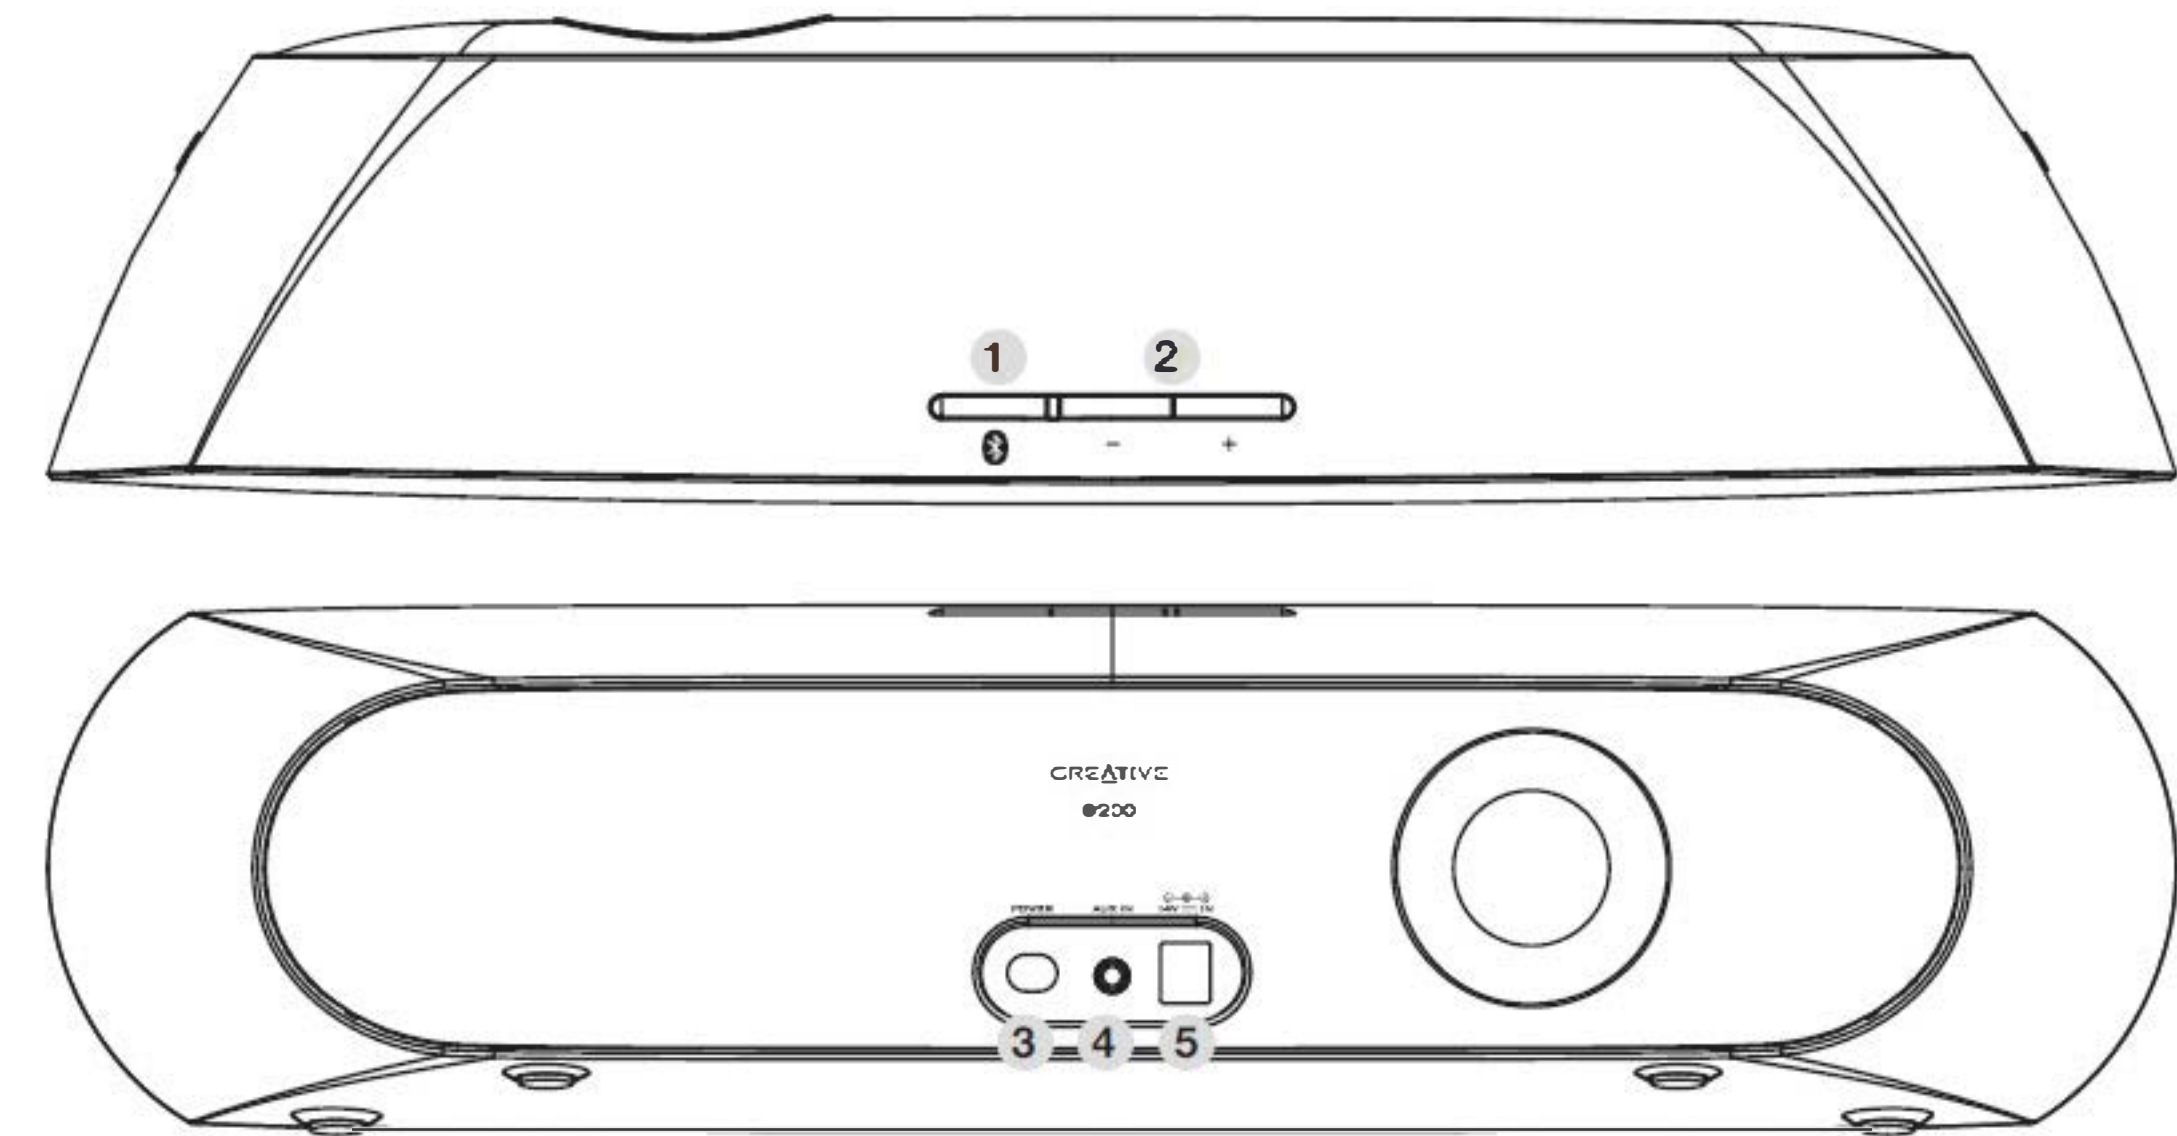


Product Overview

- 1. CONNECT Button
- 2. Volume Down / Up
- 3. Power ON/OFF
- 4. AUX IN
- 5. DC IN


2. Enjoy audio from *Bluetooth®* devices

a.

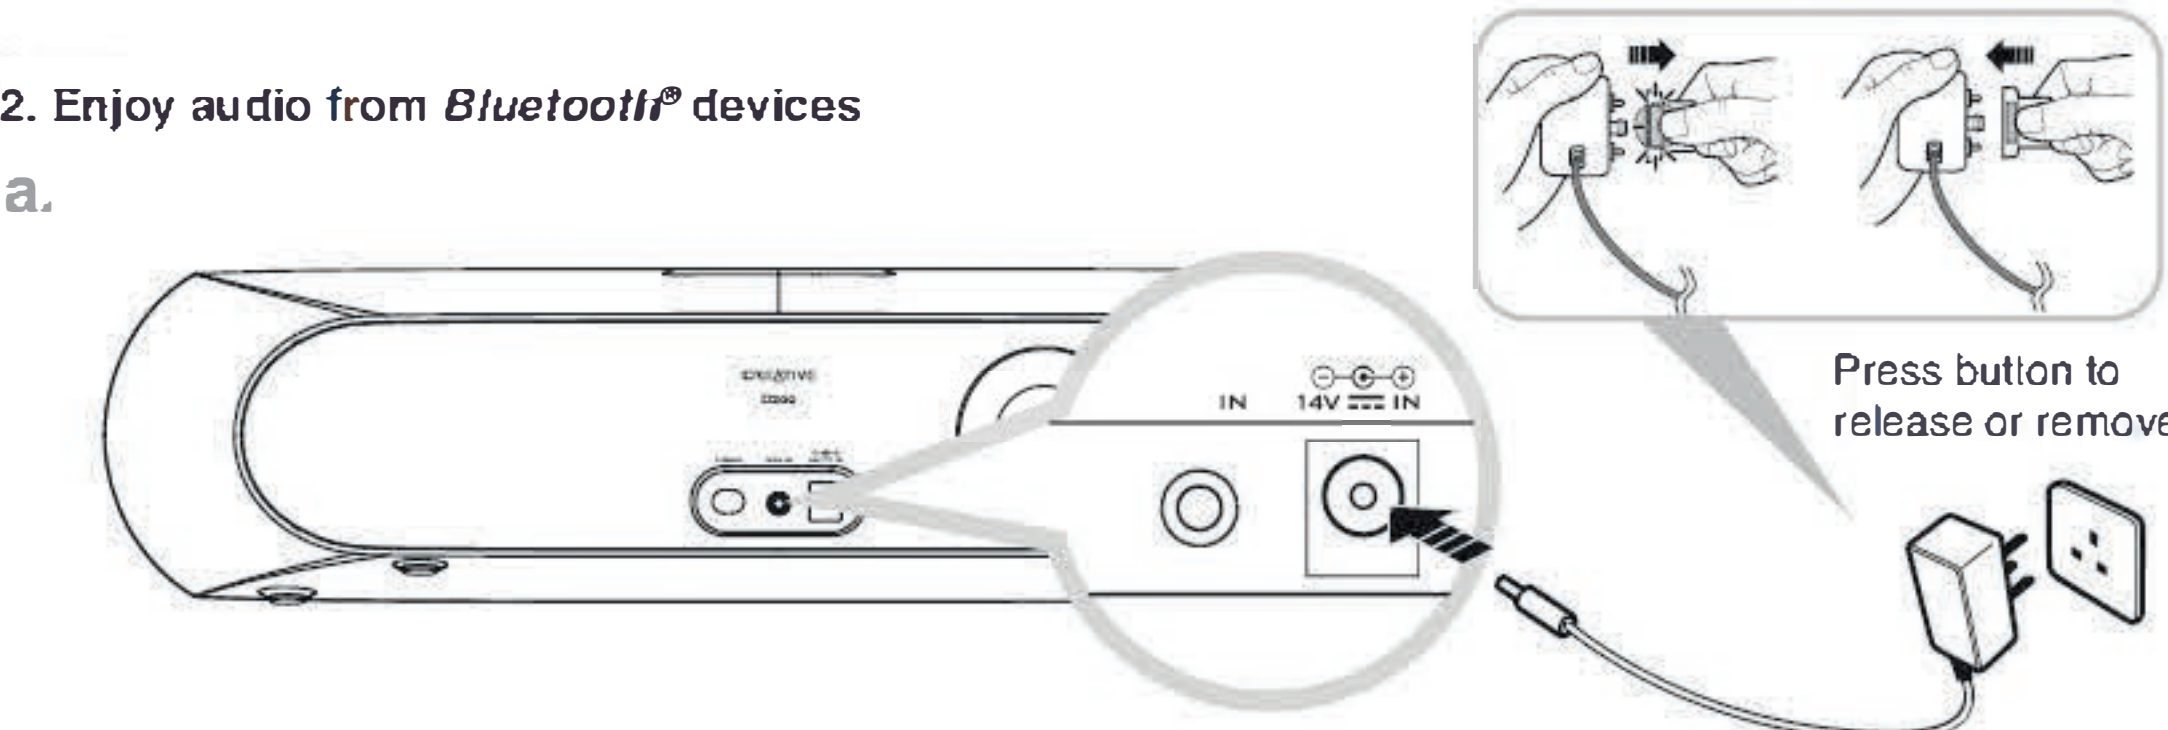


Power on the [speaker](#) and the LED status indicator will show green. This indicates that upon power up, the status of the speaker is not connected to any devices.

b.

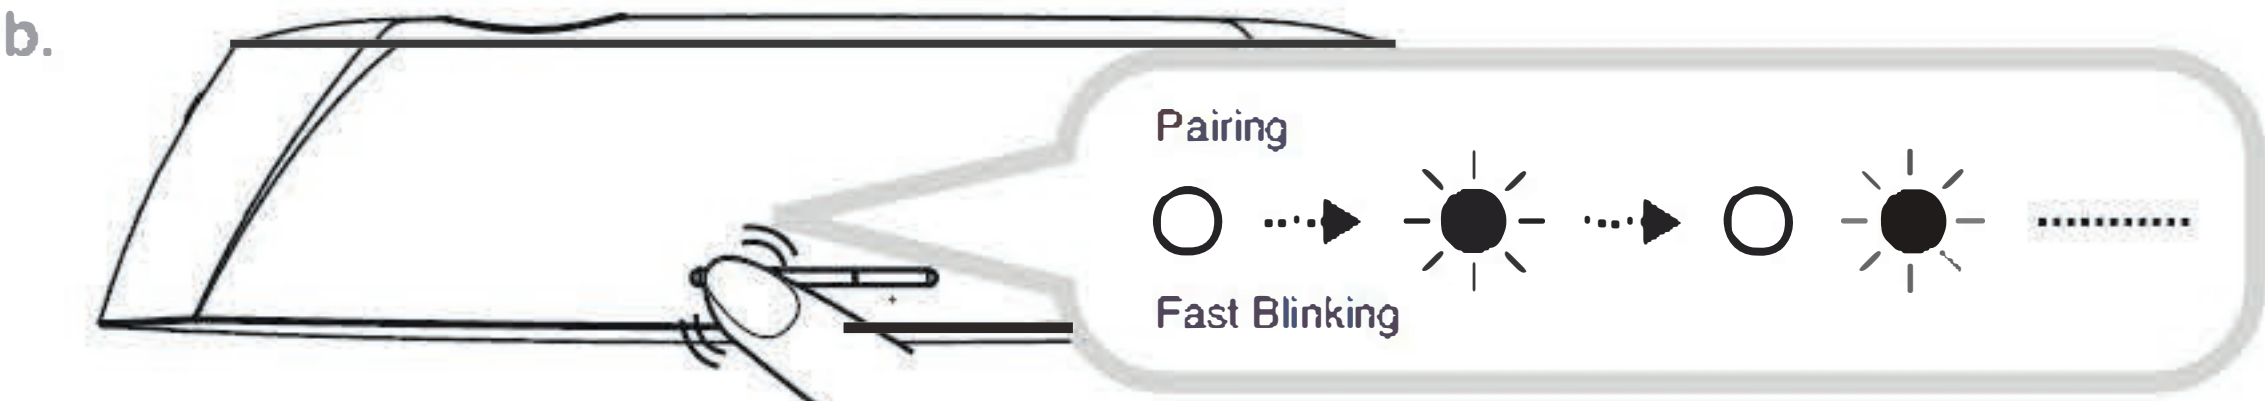

Press and hold the CONNECT button for 3 seconds while the speaker is ON.


c.

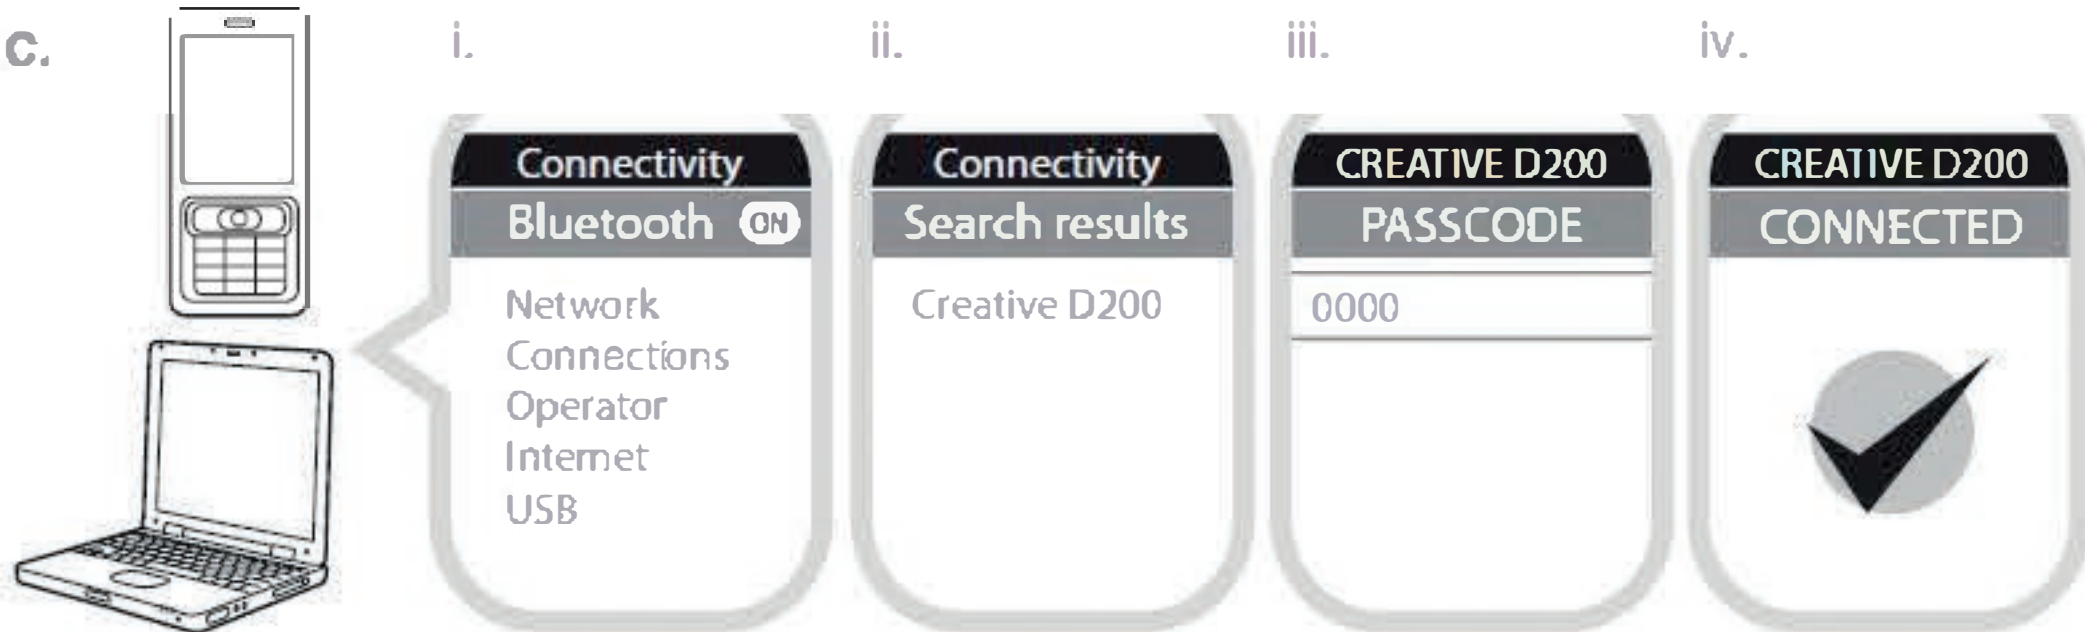


- i. Turn on the *Bluetooth* feature on your device.
- ii. Search for Creative D200.
- iii. Pair and connect to D200. If prompted for passcode, enter 0000.
- iv. Pairing successful, ready to stream music.

Note: The above are generic steps to pair to a *Bluetooth* device, for more specific instructions on *Bluetooth* connectivity for your device, please consult your manufacturer's manual.

d.

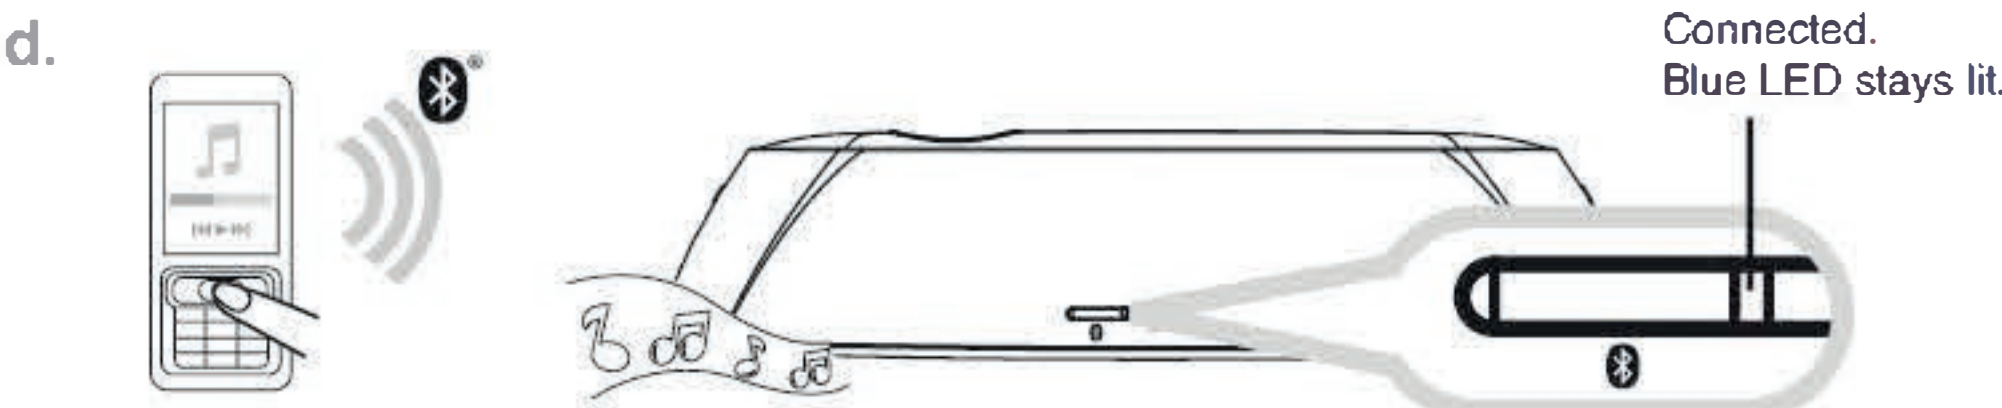

e.

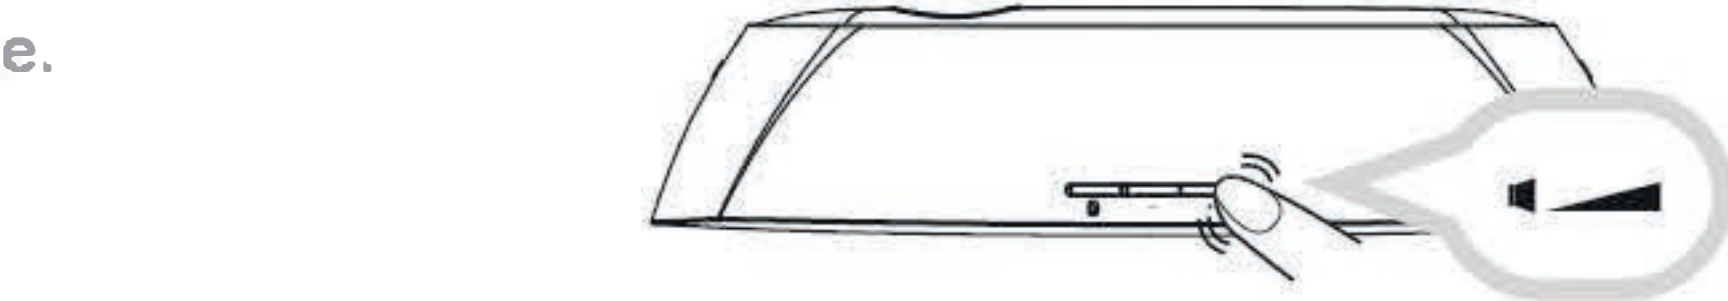

3. Switching between paired devices

Switch between your current connected device to your previous connected device by following these steps

Action	Press "CONNECT" button for 1 second
Indicators	D200 LED blinks and stay lit in Blue
Status	Ready to stream music

Note: Ensure that your next paired device's *Bluetooth* feature is ON and ready to accept connections.


- You can re-connect to the last connected or previously connected device by either
 - Pressing the CONNECT button once when it is turned ON
 - Initiate a connection from your *Bluetooth* device when the speaker is not connected to any device

4. Reset to factory setting

Follow these steps to return to factory settings and clear paired device memory on the D200.

Action	Ensure the speaker is OFF. Press and hold Power Button for 8 seconds until D200 LED fast blinks
Indicators	D200 LED blinks in Blue
Status	Pairing mode. Ready to accept connection from other devices

5. Playback with other audio devices via AUX IN

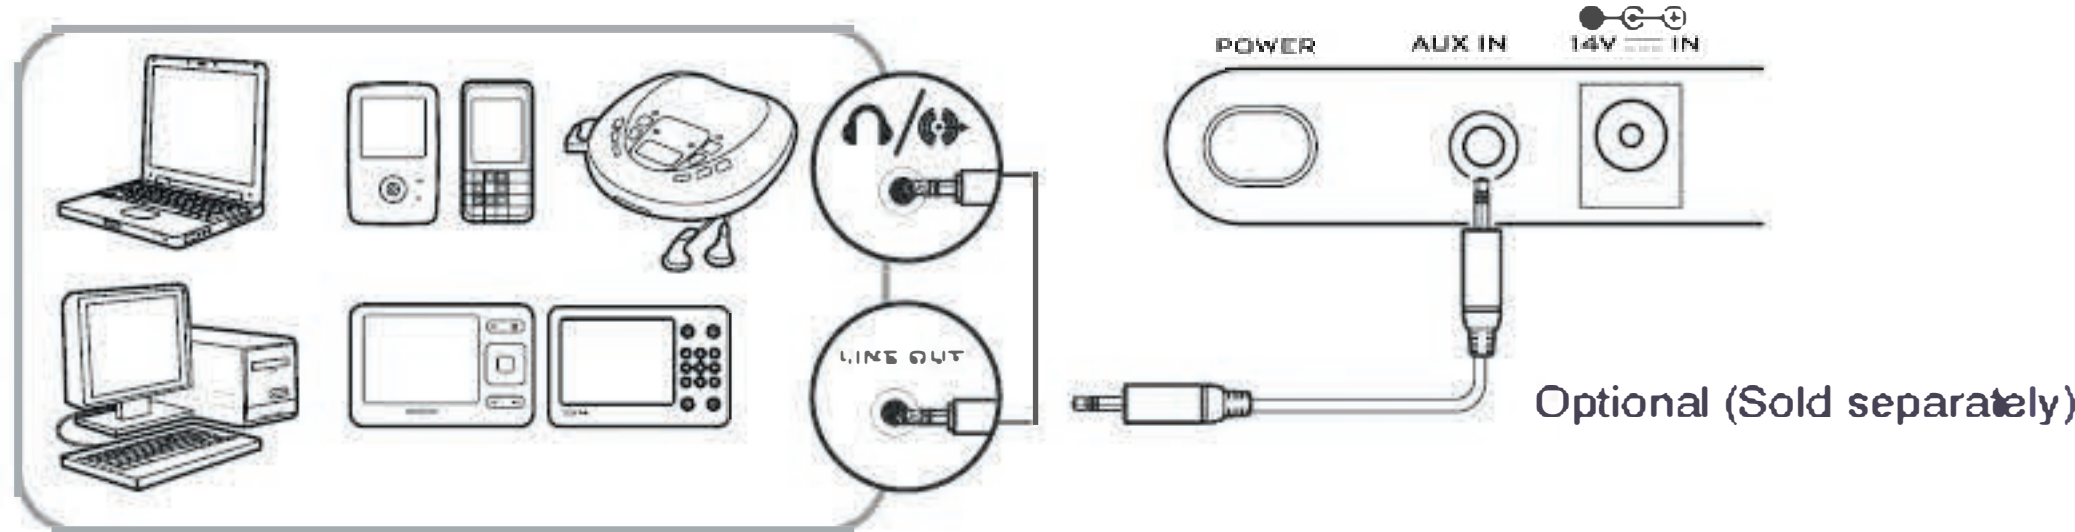

6. FAQ (Frequently Asked Questions)

There's no *Bluetooth* link between my device and the Creative D200. What should I do?

- Delete the Creative D200 name entry from your *Bluetooth* device paired memory list and perform the steps in Section 2 (Enjoy audio from *Bluetooth* devices) to re-pair your device with Creative D200
- Position them within 1 meter or closer to each other if you experience pairing difficulties
- Ensure that both your *Bluetooth* device and Creative D200 are not connected to any other devices

Bluetooth link is established and paired between the devices but there's no music. What should I do?
With some built-in *Bluetooth* enabled computers, 3rd party USB *Bluetooth* dongles or other devices, you may be required to manually specify/set-up the audio output as Creative D200. eg. (under sound and audio devices section on your computer's operating system) Please consult your manufacturer's documentation for further information.