


Clearance

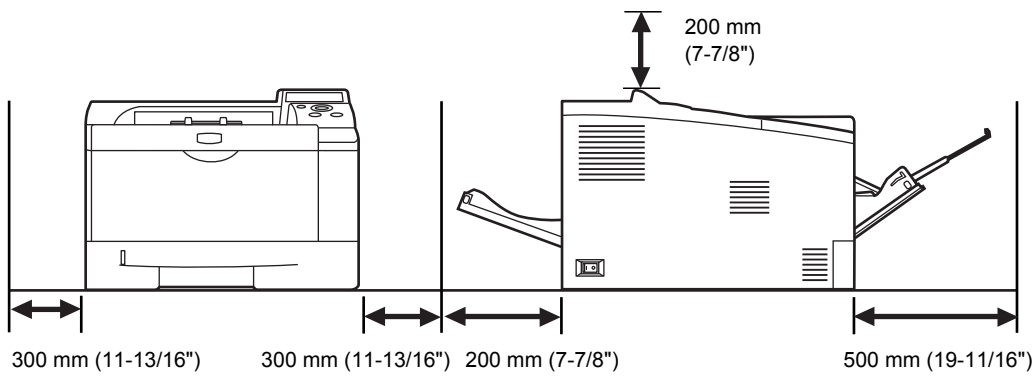

Environment

- Temperature: 10 to 32.5 °C (50 to 90.5 °F)
- Humidity: 15 to 80 %RH
- Power Supply: 120 V AC, 60 Hz / 220 to 240 V AC, 50/60 Hz




CAUTION: Be sure to provide enough space around printer. Prolonged use without sufficient clearance may cause overheating.


Important: Do not install the printer where temperature or humidity is outside the recommended range. Print quality may suffer and there will be an increased chance of paper jams.

1 Unpacking






1 Unpack the printer and all its included components.

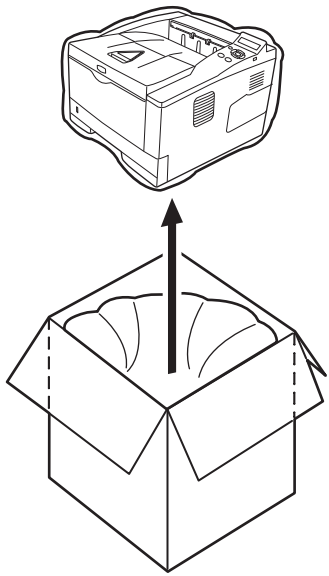

2 Remove the packing item.

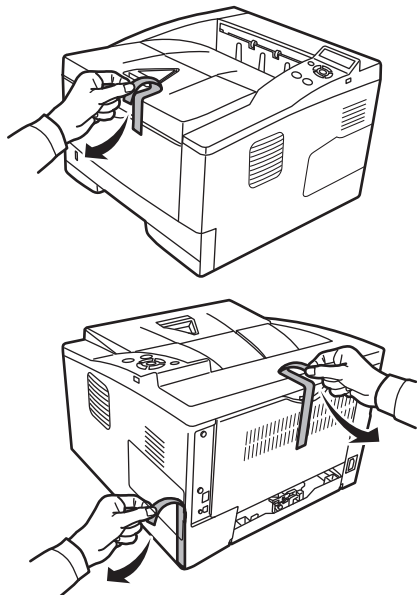


3 Check the parts and components.

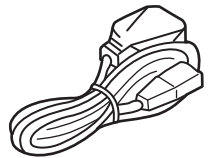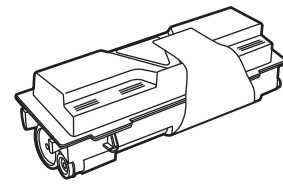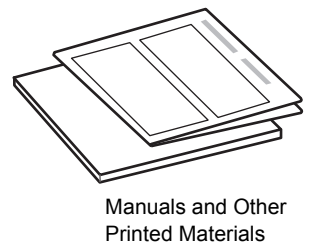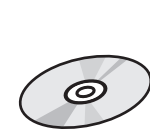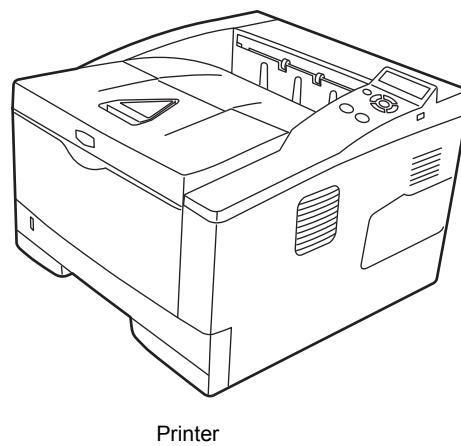


2 Installing the Toner Container


1 Open the top cover.

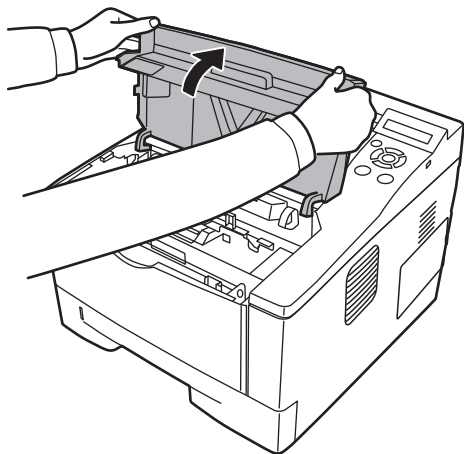


2 Turn the lock lever to the unlock position.

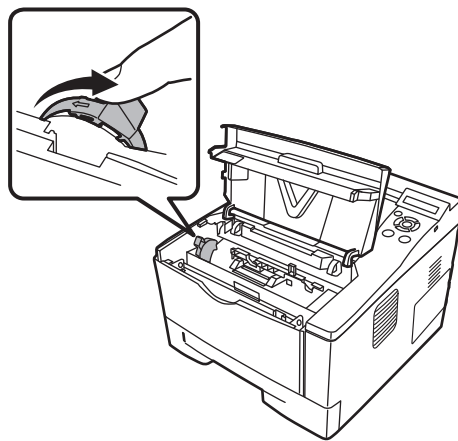


3 Take the toner container from the bag. Shake the new toner container at least 5 times as shown in the figure in order to distribute the toner evenly inside the container.

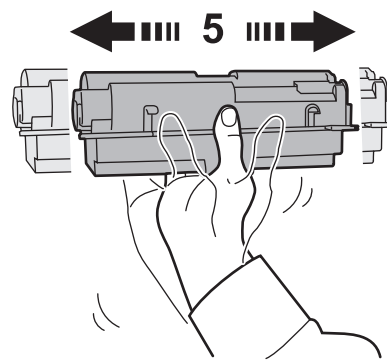


4 Remove the label from the toner container.

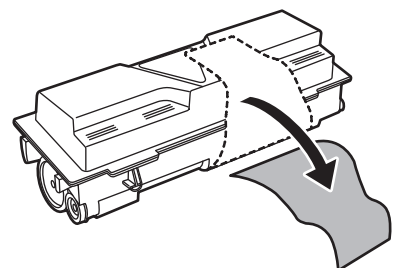


5 Install the new toner container into the printer.

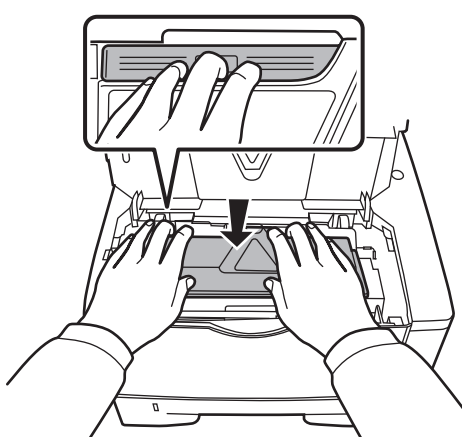


6 Push firmly on the top of the container at the positions marked **PUSH**, until you hear a click.

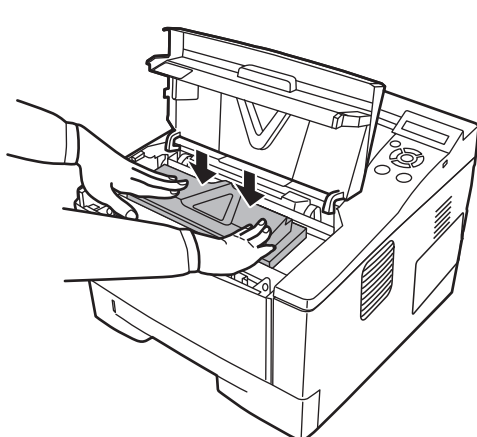

7 Turn the lock lever to the lock position.




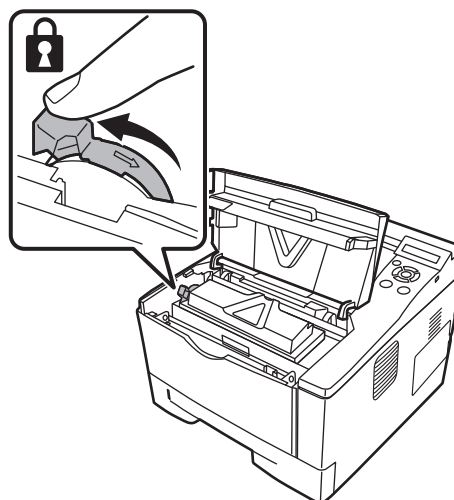


8 Close the top cover.

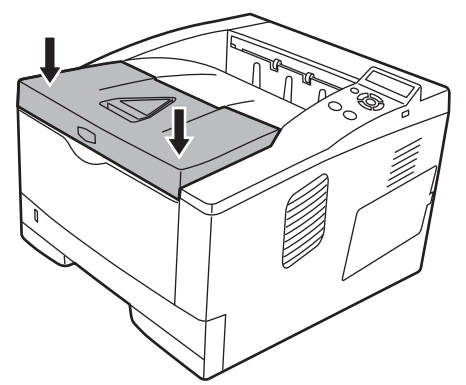



3 Loading Paper

- 1 Pull the paper cassette all the way out of the printer.
- 2 Adjust the paper length guide to fit the paper size.
- 3 Adjust the paper width guides to fit the paper size.
- 4 Fan the paper, then tap it on a level surface to avoid media jams or skewed printing.

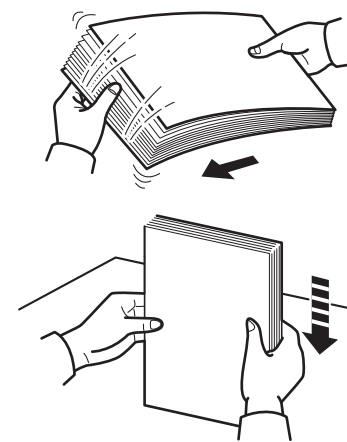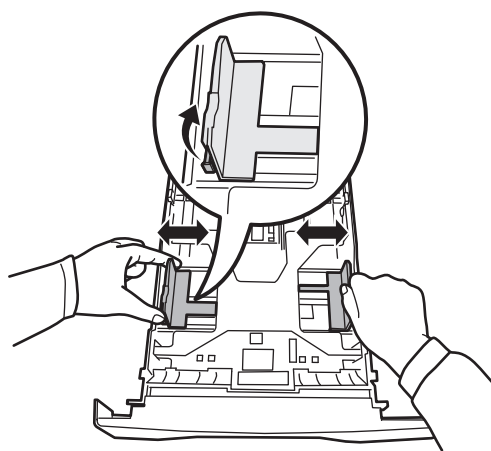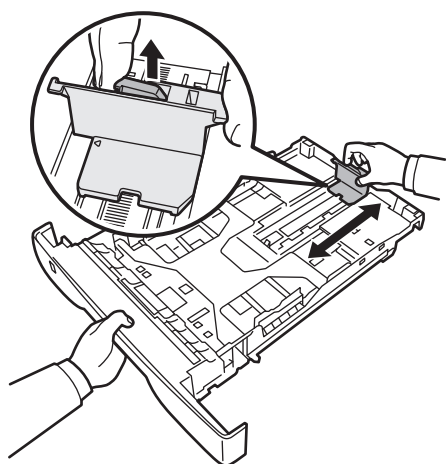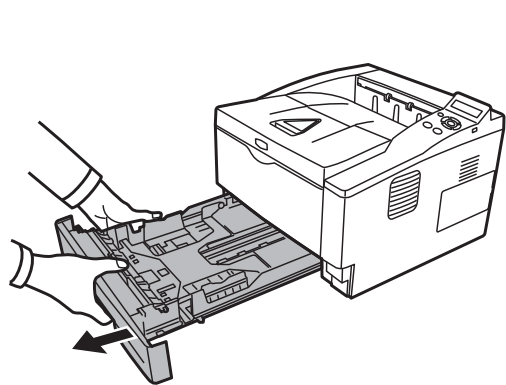


- 5 Load paper in the cassette, with the side to be printed downward.

Important: Do not exceed the upper limit of the cassette. Otherwise, it may cause paper jams.

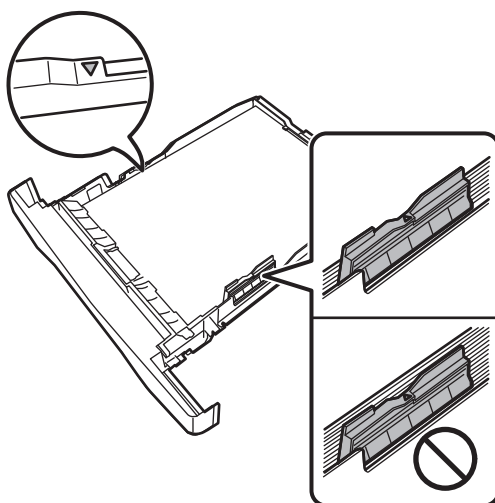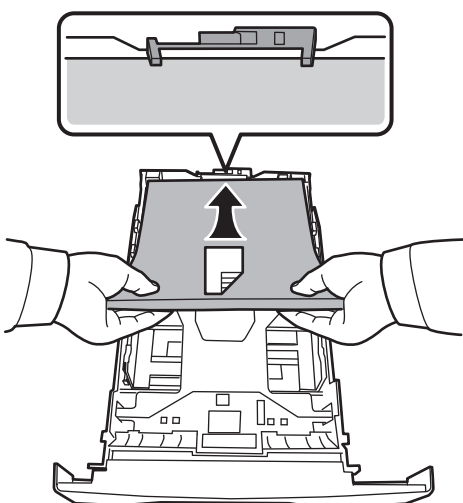


- 6 Insert the paper cassette into the slot in the printer. Push it straight in as far as it will go.

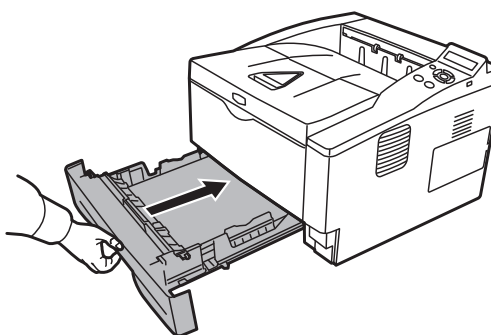


4 Connecting Cables

- 1 Connect the printer to the PC or your network device. Use shielded interface cables. These cables are sold separately.

Note: Remove the cap, when using the network interface.

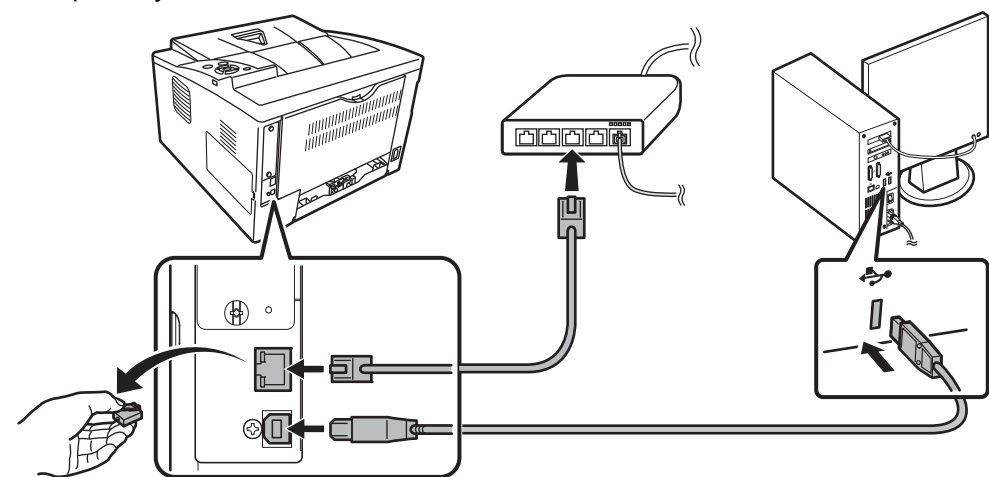


- 2 Connect the power cord to the printer and the other end into a power outlet.

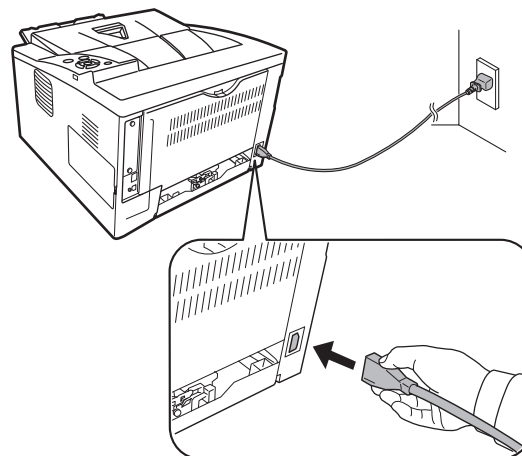

5 Selecting the Message Language

- 1 Turn the power switch on (I).

Important: The printer will begin replenishing the toner; this will take approximately 15 minutes.

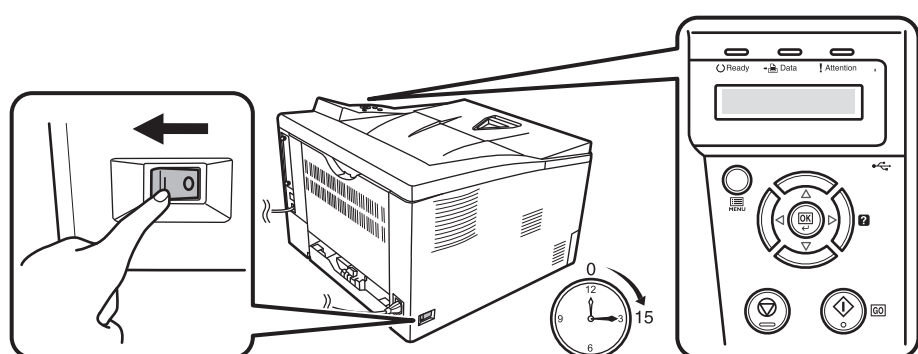

- 2 Wait until the message display indicates `Message Language`. The default message language is `English`.

Important: `Message Language` may not appear according to the destination.

- 3 To change the language, press `[△]` or `[▽]` repeatedly until the message display shows the desired language.

- 4 Press `[OK]`. The message language will be changed.