



**convizion**

---

User Guide

---




## QUICK START GUIDE


- 1** Please fully charge your glasses before use to ensure high quality video and still photography.
- 2** Glasses are fully charged when solid red light is off.
- 3** To keep the glasses from water damage, please make sure the silicone USB cover is securely positioned enclosing USB port **(5)** before water exposure. Dry glasses thoroughly after being exposed to water.



## LENS CHANGING GUIDE

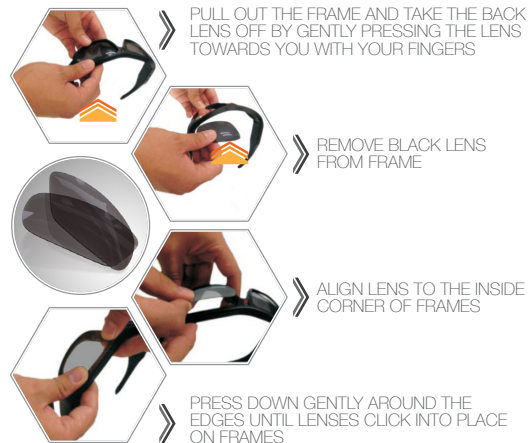

### PolarizedMax Lens Coating Technology

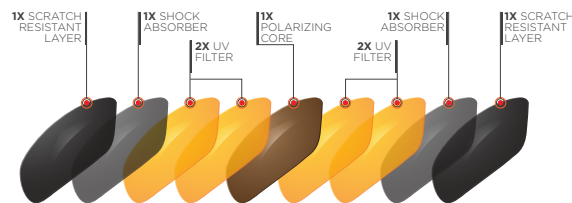

## NOSE PIECE CHANGING GUIDE

### PULL-OFF



### PUSH-ON



**Pull-off / Push-on.** Customize your GoVision's with interchangeable nose pads to achieve your perfect fit. Simply pull off the nose pads starting from the top part of the pad by pulling outwards away from the frame. Once the nose pad has detached, correctly align and position the desired nose pad with the nose frame mount before connecting the new nose pad to the frame. Use slight pressure when connecting.

## GOVISION PRODUCT PREVIEW

GoVision is a brand of action camera sunglasses that allows users to capture their life-seeking adventures in high definition video/photography.

High definition polarized lenses offer highest available light reduction UV 400 protection for brilliant color enhancements and clarity. Image and recording life's adventures just got more stylish.

1. On/Off/Video Recording Button
2. Red LED power indicator light
3. Blue LED low battery indicator light
4. Microphone
5. 5 pin USB port
6. Reset Button
7. Charging LED indicator light





## USER GUIDE

### ■ ON/OFF

Press and hold down the on/off button **(1)** until the red LED power indicator Light **(2)** turns on and the glasses vibrate before releasing the button with your finger to turn on your GoVision. GoVision will automatically enter video recording mode once the glasses have been turned on. The red LED power indicator light **(2)** will flash while recording.

To Power off the glasses, hold down the on/off button **(1)** for two seconds and the red LED power indicator light **(2)** will turn off and the glasses will vibrate automatically saving the files and shut down.

### ■ RECORDING VIDEO

Power on the glasses by holding down the on/off button **(1)**. The red LED power indicator light **(2)** will turn on and the glasses will vibrate. After you feel the vibration you can release your finger from the on/off button **(1)**. Once powered on the glasses will automatically enter into video record mode. To Stop recording, press the on/off button **(1)**. The system will automatically save video files in 10 minutes increments.

In order to ensure good sound quality, make sure you do not block the microphone.

To keep the glasses from water damage, please make sure the silicone USB cover is securely positioned enclosing USB port **(5)**.

### ■ TAKING PICTURES

When the glasses are powered on and shooting video, simply press the on/off button **(1)** to take still pictures. The glasses blue LED indicator light **(3)** will flash letting you know the picture was taken and saved. Taking pictures will not interrupt the video recording process and the user now has the ability to capture photos and video simultaneously.

- **Note: Make sure there is adequate light when taking pictures and the glasses are upright and stable.**

### ■ FILE UPLOADS

Connect the GoVision Sunglasses with USB cable to a proper computer USB port. The micro SD card will be recognized as an external drive. All of your movies and photos can be accessed in the file folder DCIM.

- **Note: Please allow time for your computer to discover the glasses USB cable in external disk drive when looking to view video and photo files. If the USB cable is not identified after 2 minutes, ensure the 5-Pin end of the cable is properly secured to the glasses then remove the USB cable and re-insert all the way into the computer.**

### ■ CHARGING

Connect glasses to computer by USB cable to charge battery. The charging led indicator light **(7)** will be solid red during the charging process. Glasses are fully charged when the charging indicator light **(7)** shuts off. It will take up to two hours to obtain a full charge. Please make sure your GoVision is fully charged before use.

- **Note: It is recommended that you only charge the GoVision glasses for no more than 2 1/2 Hours at one time.**



## USER GUIDE

### ■ HOW TO FORMAT MICRO SD CARD

If your GoVision glasses are on and your indicator light stays solid red for 1 minute and shuts off automatically the SD card must be formatted.

#### WINDOWS

- Go to My Computer
- Go To Removable Disk Drives
- Make sure your cursor is over the drive that holds the GoVision Glasses (ex: Removable Drive E)
- Right click
- Go to format
- Click on it
- A dialog box will appear asking to format
- Click Start

### MAC

- Open the Applications Folder
- Select Utilities
- Click on Disk Utilities
- Click on the Untitled folder/No name folder on the left pane of disk utilities
- Click on Erase

### ■ TROUBLESHOOTING

#### INSUFFICIENT MICRO SD CARD STORAGE SPACE

Blue LED indicator light **(3)** will flash for 5 seconds and you will feel a slow vibration at the same time and turn off. If this happens, please move the files off the SD card and store the files into a remote hard drive or on your computer to free up the SD card storage.

#### LOW BATTERY

Blue LED indicator light **(3)** will flicker for 5 seconds with a fast vibration sequence at the same time and shut off. Please recharge your glasses.

#### NO FUNCTION

If the glasses stop working for any reason or are not responding, please insert a small paper clip end into the reset button **(6)** to restart device. If additional problems persist, please email us at [customerservice@audyglobal.com](mailto:customerservice@audyglobal.com) or call our customer service support line at **617.379.0023**

## TECHNICAL SPECS

<b>Video Format:</b>	AVI
<b>Video Encoding:</b>	M-JPEG
<b>Video Resolution:</b>	1080P
<b>Video Frame rate:</b>	30 fps
<b>Media playing software:</b>	Window Media Player or Mainstream audio and video media playing software. KM Player recommend.
<b>Picture Format:</b>	JPEG
<b>Picture Pixels:</b>	1440 x 1080
<b>Supporting systems:</b>	Window me/2000/xp/2003/Vista/7,8 and 8.1 and MAC OS
<b>Interface type:</b>	USB 5 pin Port
<b>Storage support:</b>	Internal Micro-SD (TF Card) Max.to 8GB
<b>Battery type:</b>	480mAh high-capacity lithium polymer
<b>Battery charge time:</b>	Approximately 2 hours by standard computer
<b>IP66 Level Dust and Water proof resistant</b>	Glasses are protected against the effects of temporary water immersion up to 3 feet for a duration time of 1 minute.

## WARNING

1. **Application:** Please strictly abide to all relevant state and federal regulations and laws as it relates to video and photo recordings. This product should not be used for any illegal purposes. The user is fully responsible for all videos and photos captured.
2. **Battery:** If you have not recorded video for a long time, please charge your device fully before using.
3. **File security:** This product is not a professional storage device. It does not guarantee the integrity and security of saved files. Please back up your important documents on the computer or other storage device timely.
4. **Operating temperature:** 0--40°C. For the extension of life, it is best used at room temperature.
5. **Shooting brightness:** Do not stare directly into sunlight to avoid damage to built-in optical devices and your eyes.
6. **Water exposure:** Glasses are protected against the effects of temporary water immersion up to 3 feet for a duration time of 1 minute. The glasses are not meant for diving and continuous underwater exposure. Not intended to be used as an underwater camera.
7. **Night time driving:** Not suitable for driving in twilight or at night or under conditions of dull light.
8. **Additional eyewear:** Some activities may require glasses support straps or protective eyewear in addition to the HD Sunglasses.

## WARRANTY

GoVision products and accessories are guaranteed against manufacturing defects for a period of one (1) year from the original date of purchase. GoVision's sole obligation in the event of a defect during this period is to repair or replace the defective part or product with a comparable part or product at GoVision's sole discretion. Except for such repair or replacement, the sale, processing or other handling of this product is without warranty, condition or other liability even though the defect or loss is caused by negligence or other fault. Damage resulting from use, accident, or normal wear and tear is not covered by this or any warranty. GoVision assumes no liability for any accident, injury, death, loss, or other claim related to or resulting from the use of this product. In no event shall GoVision be liable for incidental or consequential damages relating to or resulting from the use of this product or any of its parts. Returns or replacements of parts and/or products may be subject to shipping, handling, replacement and/or restocking fees.

Your Questions and Comments? Look no further than our Support Team for world class customer support, please email [customerservice@audyglobal.com](mailto:customerservice@audyglobal.com). We are here to help you with your GoVision product. We want you to like it as much as we do!



Designed and Distributed by **Audy Global Enterprises, Inc.**  
+1.617.379.0023 | [customerservice@audyglobal.com](mailto:customerservice@audyglobal.com)

Made in China