


JVC

SERVICE MANUAL

STEREO INTEGRATED AMPLIFIER

MODEL No. **AX-311BK**

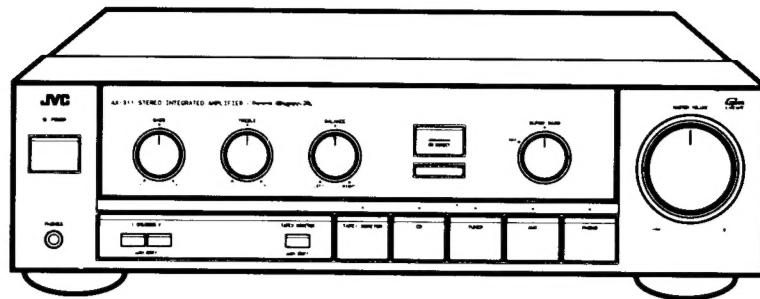

Contents

Page	Page		
Safety Precautions.....	1-2	Block Diagram	1-8
Specifications.....	1-3	Internal Block Diagrams of ICs.....	1-9
Front Panel.....	1-4	Connection Diagram	1-10
Operation.....	1-5	Schematic Diagrams	Insertion
Removal Procedures.....	1-6	Printed Circuit Boards.....	Insertion
Adjustment Procedures	1-7	Parts List.....	Separate Volume Insertion

Safety Precautions

1. The design of this product contains special hardware and many circuits and components specially for safety purpose. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the product have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (▲) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the Parts List of Service Manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.
5. Leakage current check (Electrical shock hazard testing)

After re-assembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.


Do not use a line isolation transformer during this check.

- Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5 mA AC (r.m.s.).
- Alternate check method

Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having 1,000 ohms per volt or more sensitivity in the following manner. Connect a $1,500 \Omega$ 10 W resistor paralleled by a $0.15 \mu\text{F}$ AC-type capacitor between an exposed metal part and a known good earth ground.

Measure the AC voltage across the resistor with the AC voltmeter.

Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

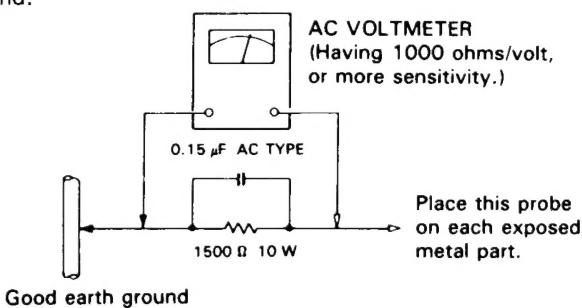

Warning

1. This equipment has been designed and manufactured to meet international safety standards.
2. It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
3. Repairs must be made in accordance with the relevant safety standards.
4. It is essential that safety critical components are replaced by approved parts.
5. If mains voltage selector is provided, check setting for local voltage.

Specifications

AX-311BK

OVERALL CHARACTERISTICS

Output power:

80 watts per channel into 4 ohms at 1 kHz (DIN).

60 watts per channel into 8 ohms at 1 kHz (DIN).

55 watts per channel, min. RMS, both channels driven, into 8 ohms from 20 Hz to 20 kHz, with no more than 0.007% total harmonic distortion.

55 watts per channel, min. RMS, both channels driven, into 8 ohms at 1 kHz with no more than 0.003% total harmonic distortion. (measured by JVC Audio Analyzer System)

Total harmonic distortion : 0.007% (20 Hz — 20 kHz, 8 ohms) at

55 watts

Intermodulation distortion : 0.007% (60 Hz : 7 kHz = 4 : 1, 8 ohms) at

55 watts

Power band width : 5 Hz — 50 kHz (IHF, 0.05%, 8 ohms both channels driven)

Frequency response : 5 Hz — 80 kHz +0, -3 dB (8 ohms)

Damping factor : 90 (1 kHz, 8 ohms)

Input terminals

Input sensitivity/impedance (1 kHz)

PHONO : 2.5 mV/47 kohms

CD/AUX/ : 200 mV/43 kohms

TUNER/TAPE 1, 2

Signal-to-noise ratio

PHONO : 74 dB ('66 IHF)

CD/AUX/ : 104 dB ('66 IHF)

TUNER/TAPE 1, 2

PHONO : 80 dB ('78 IHF)

(REC OUT)

CD/AUX/ : 76 dB ('78 IHF)

TUNER/TAPE 1, 2

(SP OUT)

PHONO : 67 dB (DIN)

CD/AUX/ : 68 dB (DIN)

TUNER/TAPE 1, 2

Tone controls : TREBLE: +8 ±1 dB

-8 ±1 dB

(at 10 kHz)

BASS: +8 ±1 dB

-8 ±1 dB

(at 100 Hz)

SUPER BASS : +6 dB (at 50 Hz)

(Volume control at

-30 dB position)

EQUALIZER

PHONO overload capacity

95 mV (0.02% THD)

PHONO RIAA deviation

±0.5 dB (20 Hz — 20 kHz)

Recording output

Output level/ impedance

TAPE REC-1, 2 : 200 mV/Maximum 2 kohms

GENERAL

Dimensions

: 435 (W) x 127 (H) x 310 (D) mm
(17-3/16" x 4-15/16" x 12-1/16")

Weight : 7.2 kg (15.9 lbs.)

Design and specifications subject to change without notice.

POWER SPECIFICATIONS

Areas	Line voltage & frequency	Power consumption	
		AX-311BK	AX-411BK
Continental Europe	AC 220 V~, 50 Hz	220 watts	240 watts
U.K.	AC 240 V~, 50 Hz	510 watts	590 watts
Australia			
Other areas	AC 110/120/220/240 V~ selectable, 50/60 Hz	220 watts	240 watts

CONNECTION DIAGRAM


ANSCHLUSSDIAGRAMM

SCHEMA DE RACCORDEMENTS

AANSLUITINGSSCHEMA


DIAGRAMA DE CONEXIONES

ANSLUTNINGSSCHEMA

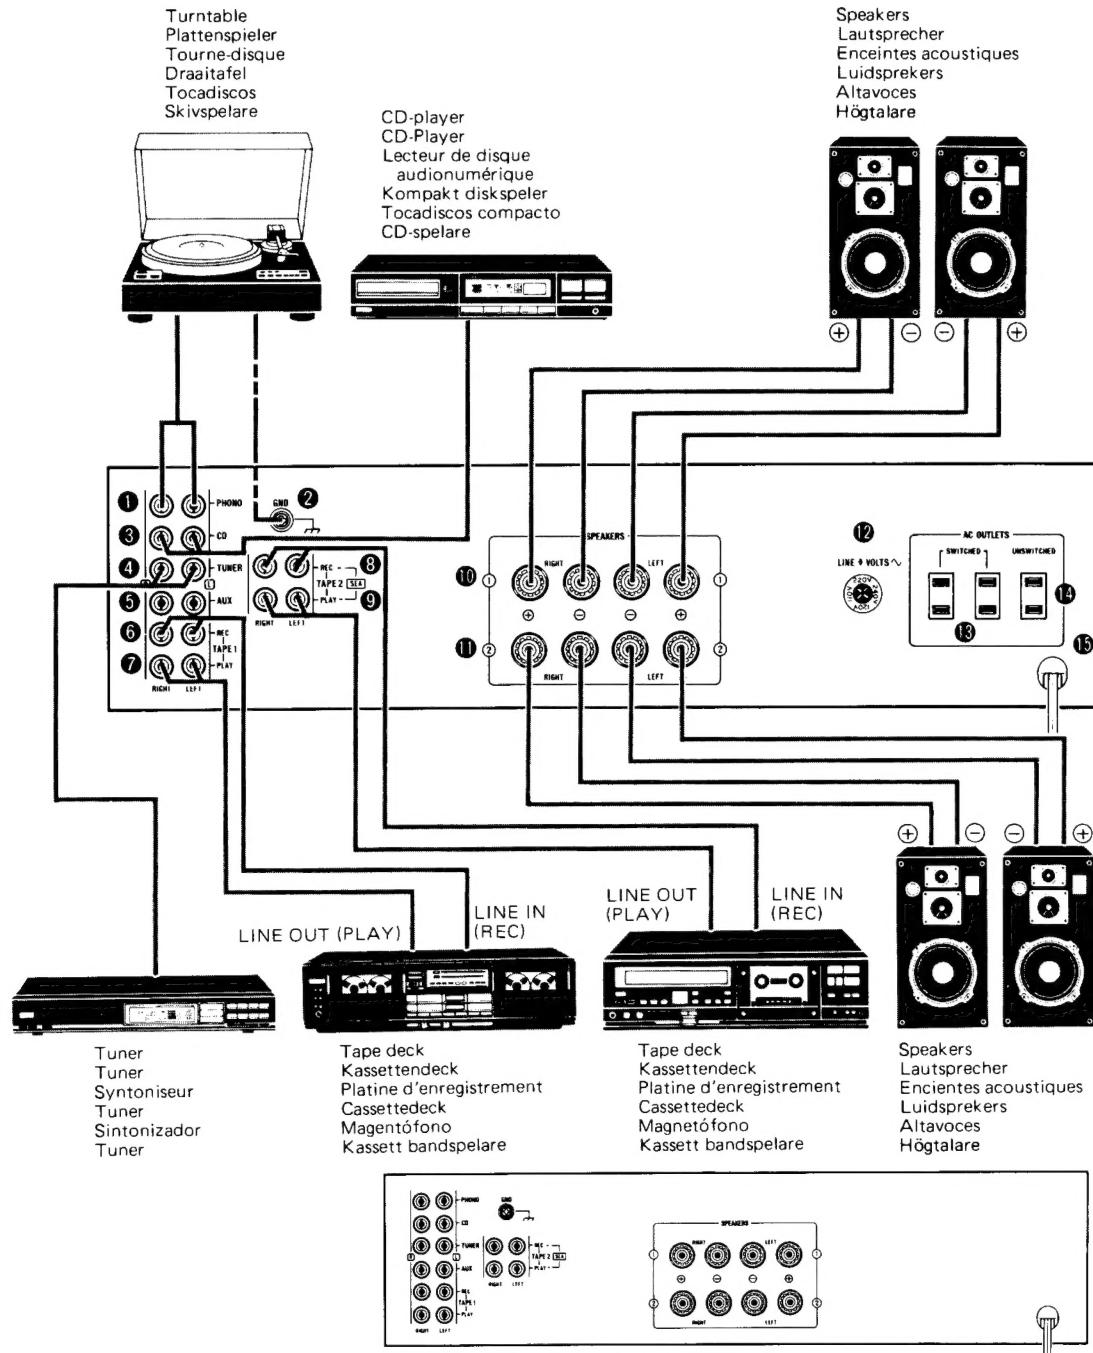

Provided on units for Continental Europe, the United Kingdom and Australia.
Vorhanden an Geräten für Kontinentaleuropa, Großbritannien und Australien.
Fourni sur les appareils pour l'Europe Continentale, le Royaume-Uni et l'Australie.
Aanwezig op apparaten voor het Europees Vasteland, Groot-Brittannië en Australië.
Se provee en las unidades para Europa Continental, el Reino Unido y Australia.
För kontinentala Europa, Storbritannien och Australien.

FRONT PANEL

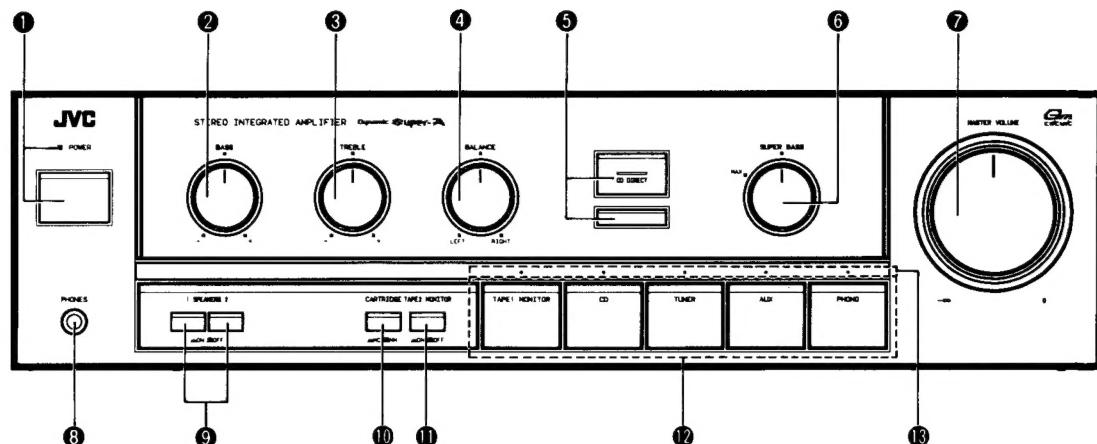

① POWER and indicator

Press this button to turn the power on. To turn the power off, press it again. The indicator lights when the POWER button is pressed to on.

Notes:

- When power is not supplied to this amplifier for 2 — 3 days, the source select button pressed before the power was switched off may be lost when the power is switched on again. If this happens, set the buttons, etc. again.
- An electronic source selector is used in this unit. When the POWER button is first switched on, two or more sources or no source may be selected. Make sure to input the source select data by pressing one of the source selectors.
- If the POWER button is pressed repeatedly to switch on and off too quickly, the same phenomenon as the above will occur.

② BASS

Turn clockwise to boost bass response and counterclockwise to decrease it.

③ TREBLE

Turn clockwise to boost treble response and counterclockwise to decrease it.

④ BALANCE

Balances the volume between the left and right speakers. Usually set it to the center click position.

⑤ CD DIRECT and indicator

Press this button to enjoy listening to the CD with good sound quality. The indicator lights and the signal fed from the CD terminals is directly connected to the volume, bypassing the circuits on the way, thus allowing you to enjoy listening to an improved sound quality.

Note:

- While the CD DIRECT button is pressed, the reproduced sound does not change even if the source selector (including TAPE 2 MONITOR) and BALANCE volume are operated, press the CD DIRECT button again to turn the indicator off when using these.

⑥ SUPER BASS

When sound volume is turned down, the human ear tends to become less aware of bass sound. At low sound levels the SUPER BASS knob can be used to emphasize the bass sound. For ordinary use, the knob should be set to the normal position.

⑦ MASTER VOLUME

Controls the volume of the speakers and headphones.

⑧ PHONES (Headphones jack)

Plug stereo headphones into this jack for private listening.

If you want to listen to sound from the headphone only, press the SPEAKERS buttons to "OFF".

⑨ SPEAKERS

Press to switch the speakers connected to the SPEAKERS 1 or 2 terminals on (—) and off (■).

⑩ CARTRIDGE (AX-411BK only)

MC (—): Press in when using an MC cartridge having an output of less than 0.5 mV.

MM (■): Press again when using an MM or MC cartridge having an output of more than 0.5 mV.

⑪ TAPE 2 MONITOR

ON (—): Set to this position to listen to the tape deck connected to the TAPE 2 terminals of this unit. If your tape deck is of the 3-head type, you can monitor the recorded sound while recording by setting this button to ON.

OFF (■): Keep this button set to this position, except when you want to listen to the tape deck connected to the TAPE 2 terminals of this unit.

⑫ Source selector

TAPE 1 MONITOR

Press to listen to a tape deck connected to the TAPE 1 terminals.

CD

Press to listen to the source connected to the CD terminals.

TUNER

Press to listen to radio broadcasts by a tuner connected to the TUNER terminals.

AUX

Press to listen to the source connected to the AUX terminals.


PHONO

Press to listen to records played by a turntable connected to the PHONO terminals.

⑬ Source indicator

The indicator corresponding to the source select button pressed lights.

Removal Procedures

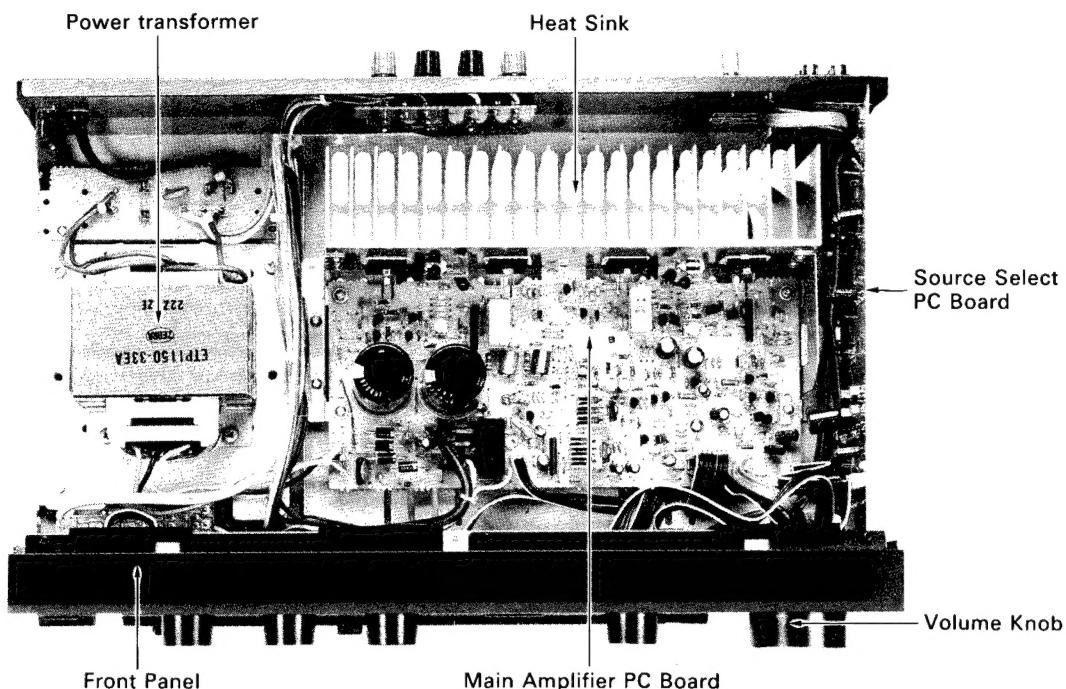

■ Removing the Top Cover

1. Remove six screws.
2. Remove the top cover by lifting up its rear section and pulling it backward while holding it on incline.

■ Removing the Front Panel

1. Remove the top cover.
2. Pull out the volume knob.
3. Remove three plastic rivets on the upper part of the front panel and three screws from the lower part.


■ Removing the Bottom Cover

1. Remove 17 screws fixing the bottom cover.

Note : When installing the bottom cover, properly insert the protect cover between the power transformer and the power primary PC board as shown in the figure at right.


■ Removing the Power Transistors

1. Remove the top cover.
2. Remove the bottom cover.
3. Remove the retaining screw from the defective power transistor and replace it.

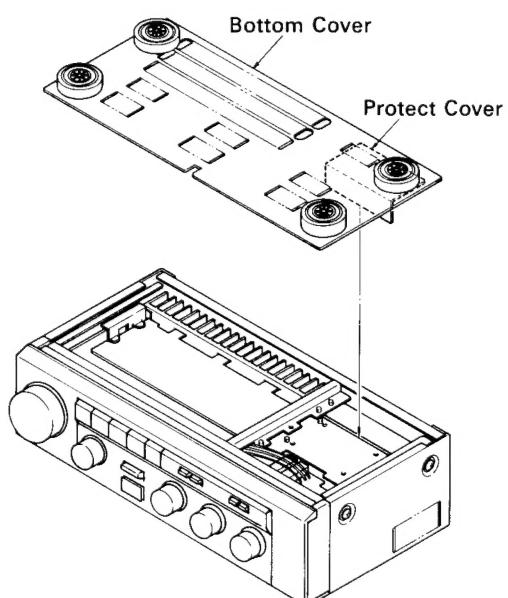

Adjustment Procedures

■ Power Amplifier Idling Adjustment

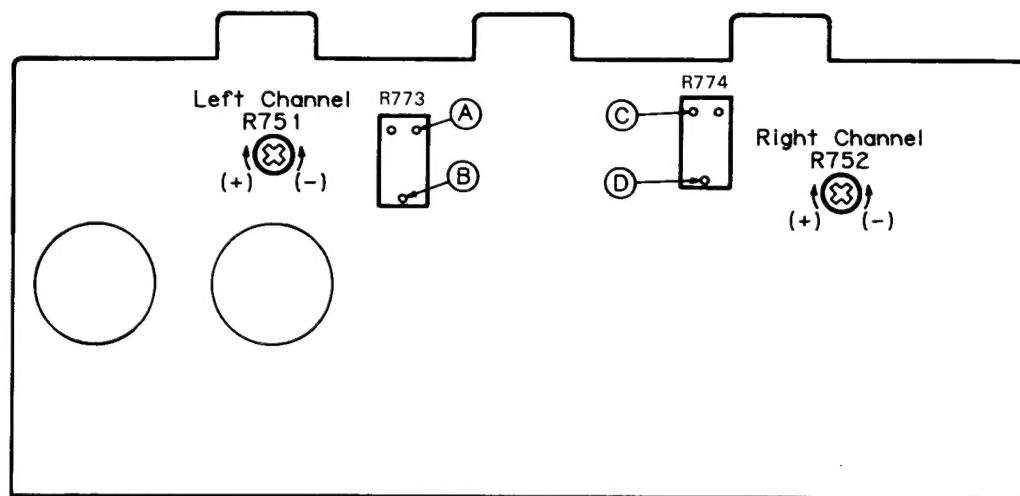


1. Before turning on the power, turn the the semi-fixed resistors (R751 for L channel and R752 for R channel) of the power amplifier circuit board fully counterclockwise.
2. Adjust the semi-fixed resistor (R751 and R752) so that the voltage at the following test points of the power amplifier circuit board is within a range of 3 ~ 5 mV after the power is turned on.
L channel: Measure the voltage between test point A (emitter of Q761) and output at the test point B.
R channel: Meaure the voltage between test point C (emitter of Q762) and output at the test point D.

3. Readjust resistors R751 and R752 about 10 minutes after the power is turned on (the heatsink temperature must be sufficiently high) so that the voltage at the test points becomes 11 mV.
Confirm that the voltage does not vary when the heat-sink temperature increases further.


Note: Be sure to perform the measurement with the probes and cabinet of the measuring equipment separated from the grounding terminals of AX-311BK or other measuring equipment.

Block Diagram

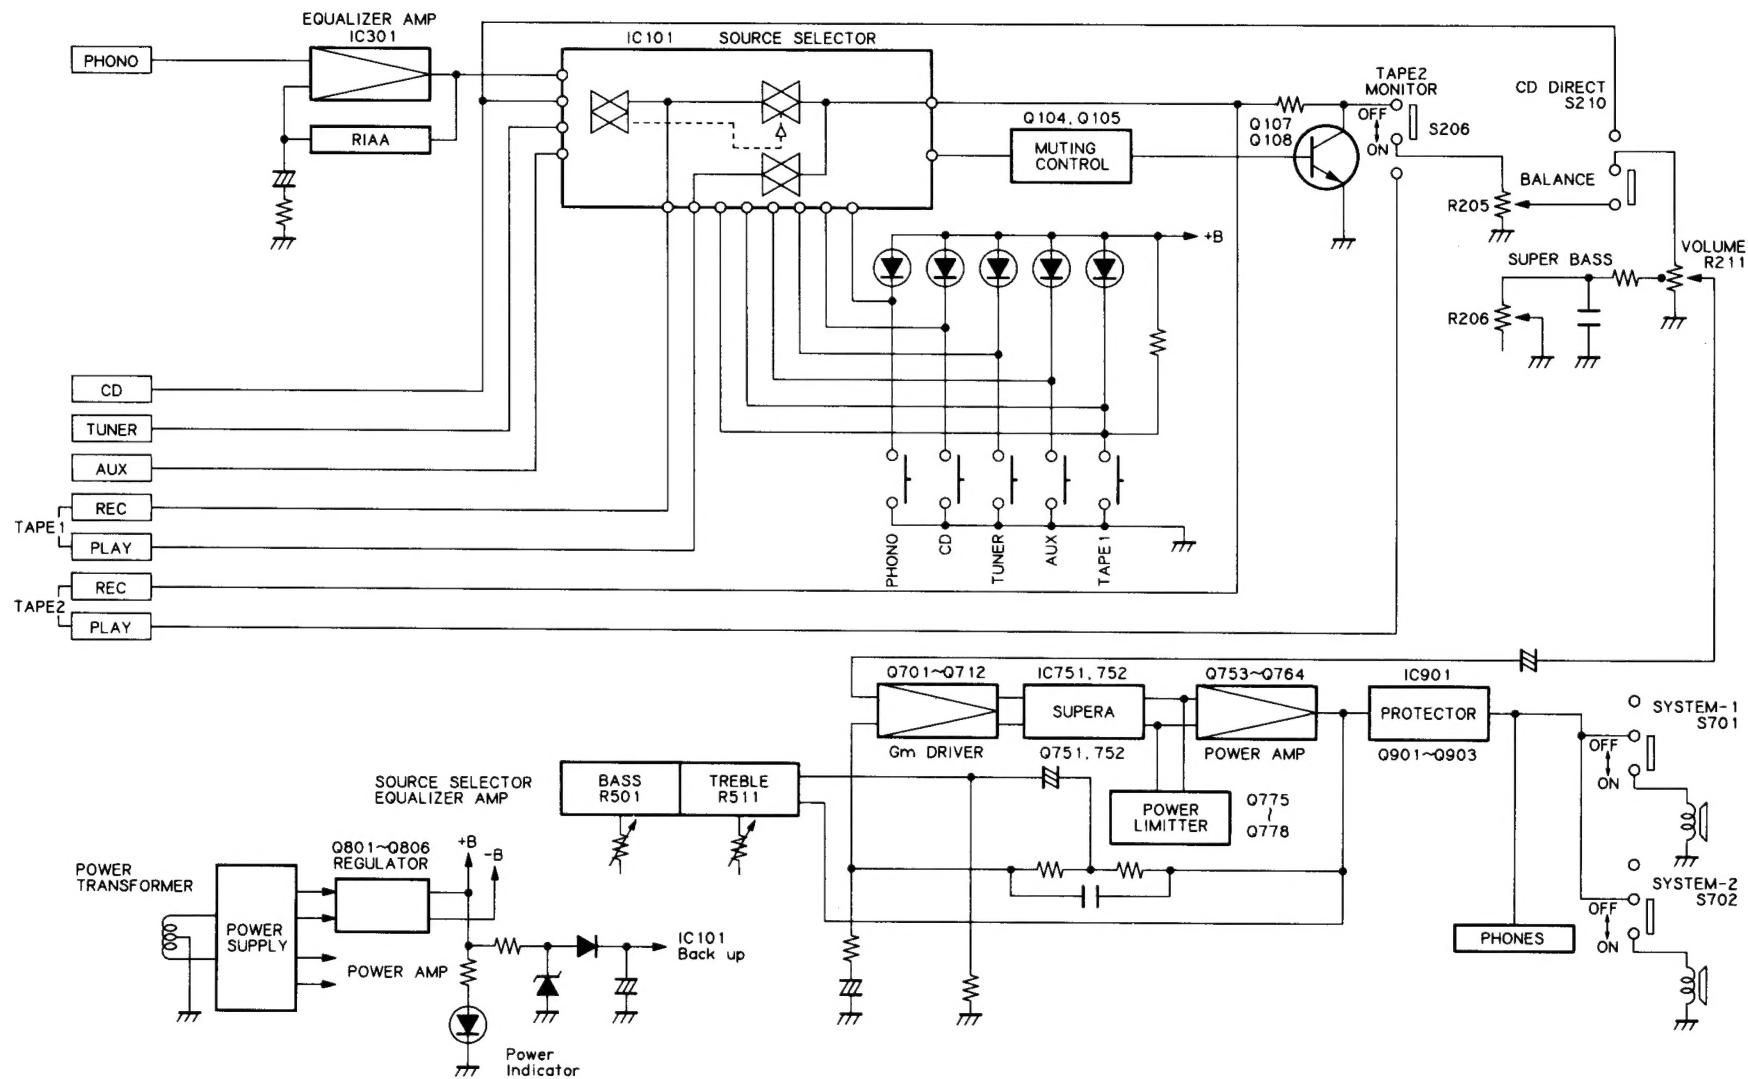


Internal Block Diagrams of ICs


■ LC7818 (IC101): Analog Switch

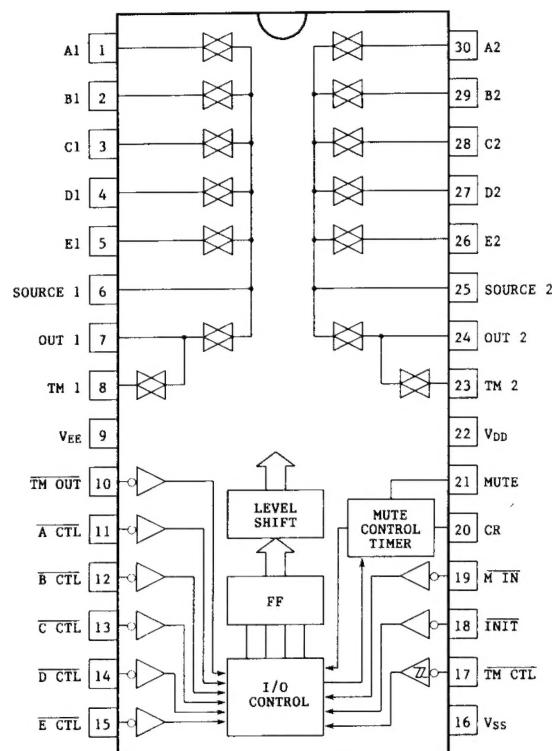


■ VC5022 [X, Y] (IC751, IC752): Super-A

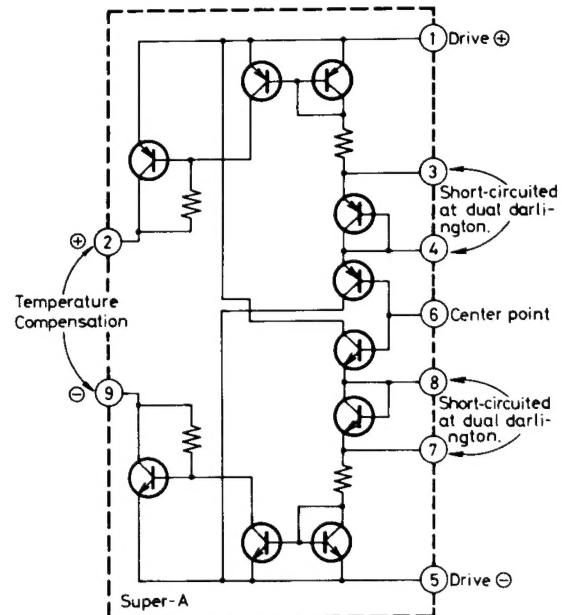


■ μPC1237HA (IC901): Relay Driver

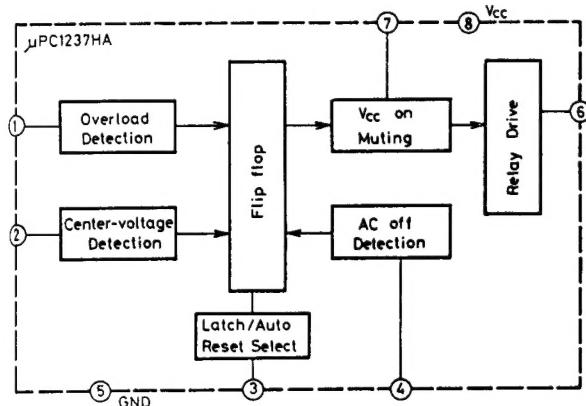

■ NJM4558D-D (IC301): Dual OP Amp

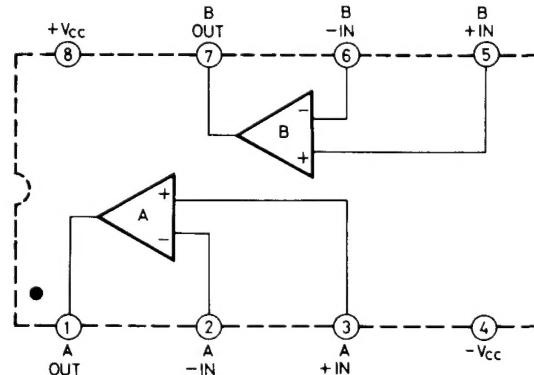

Connection Diagram

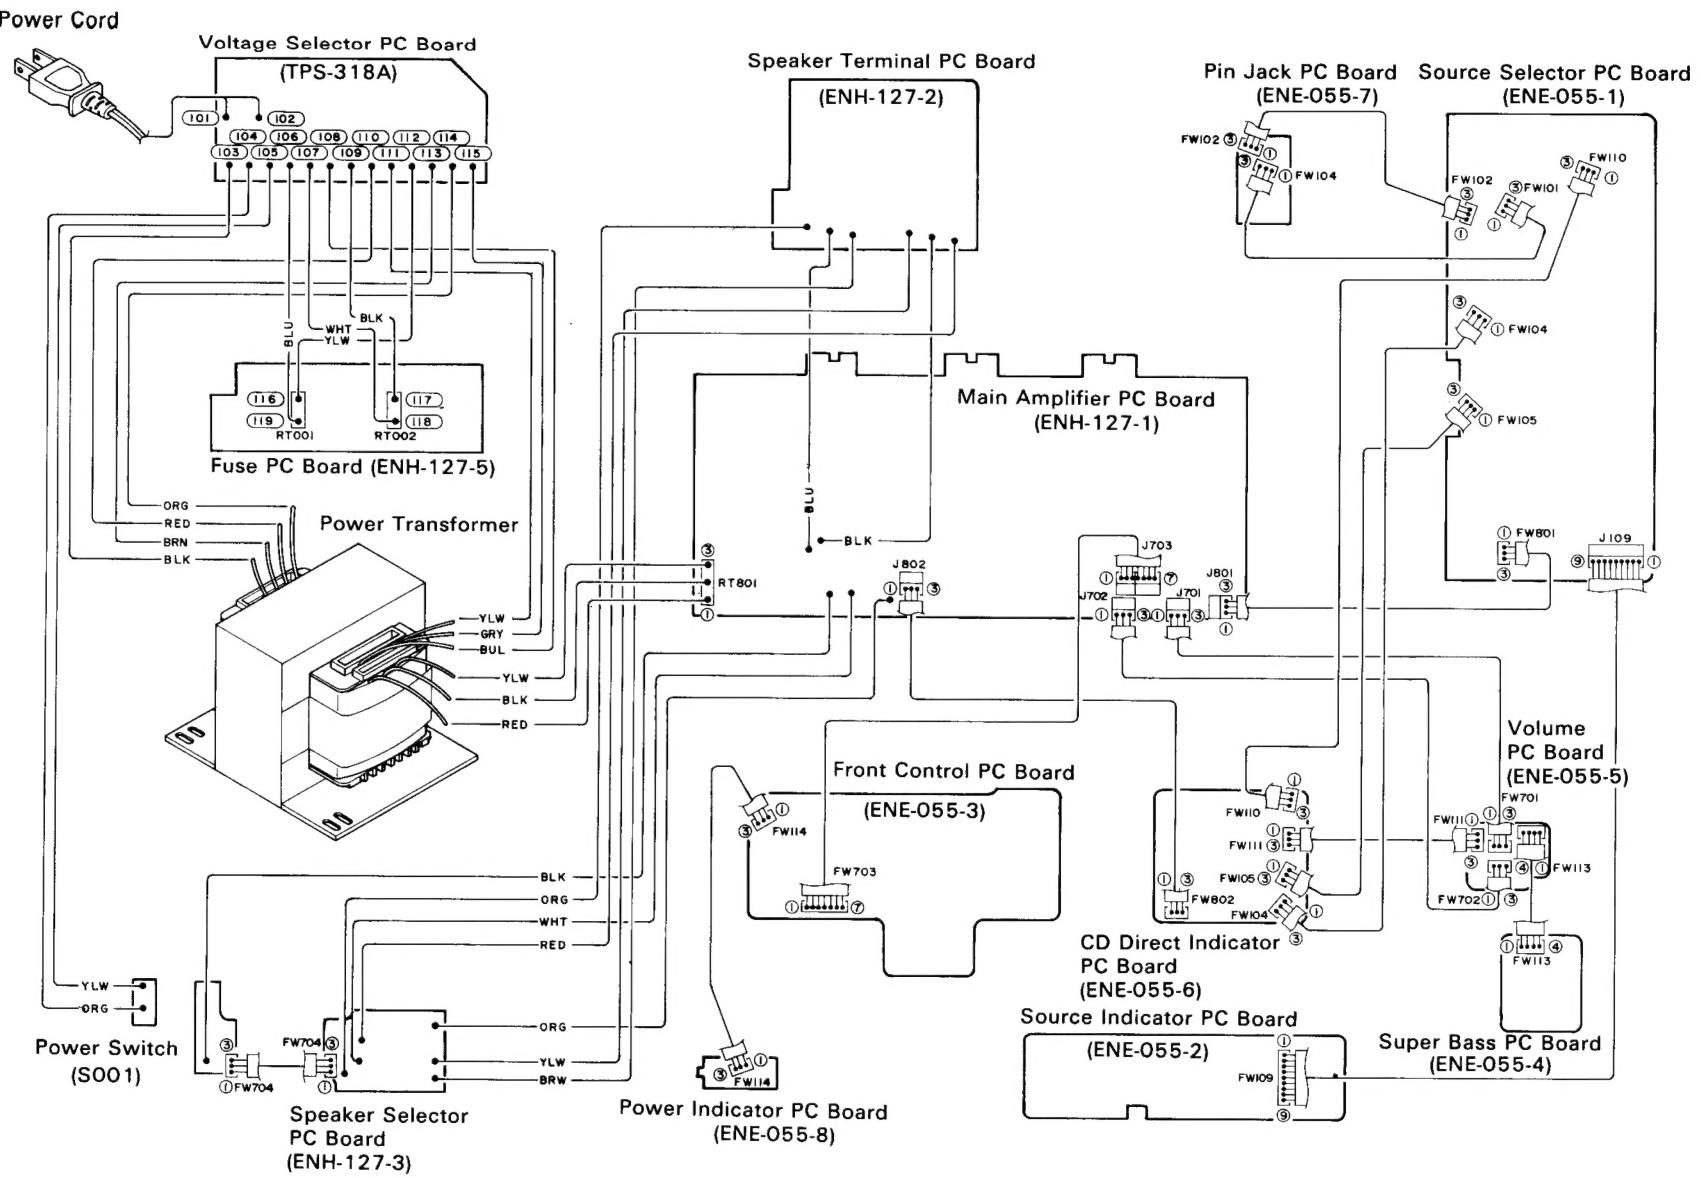

- MEMO -

AX-311BK

JVC

VICTOR COMPANY OF JAPAN LIMITED
AUDIO PRODUCTS DIVISION, YAMATO PLANT, 1644, SHIMOTSURUMA, YAMATO-SHI, KANAGAWA-KEN, 242, JAPAN

(No. 20097)




Printed in Japan
8902 (G)

Schematic Diagrams


(1) Source Select and Main Amplifier Section

Notes:

1. — indicates + B power supply.
2. — indicates - B power supply.
3. — indicates signal path.
4. ■ shows DC voltage to the chassis with no signal input.
5. When replacing the parts in the darkened area (■) and those marked with △, be sure to use the designated parts to ensure safety.
6. This is the standard circuit diagram. The design and contents are subject to change without notice.

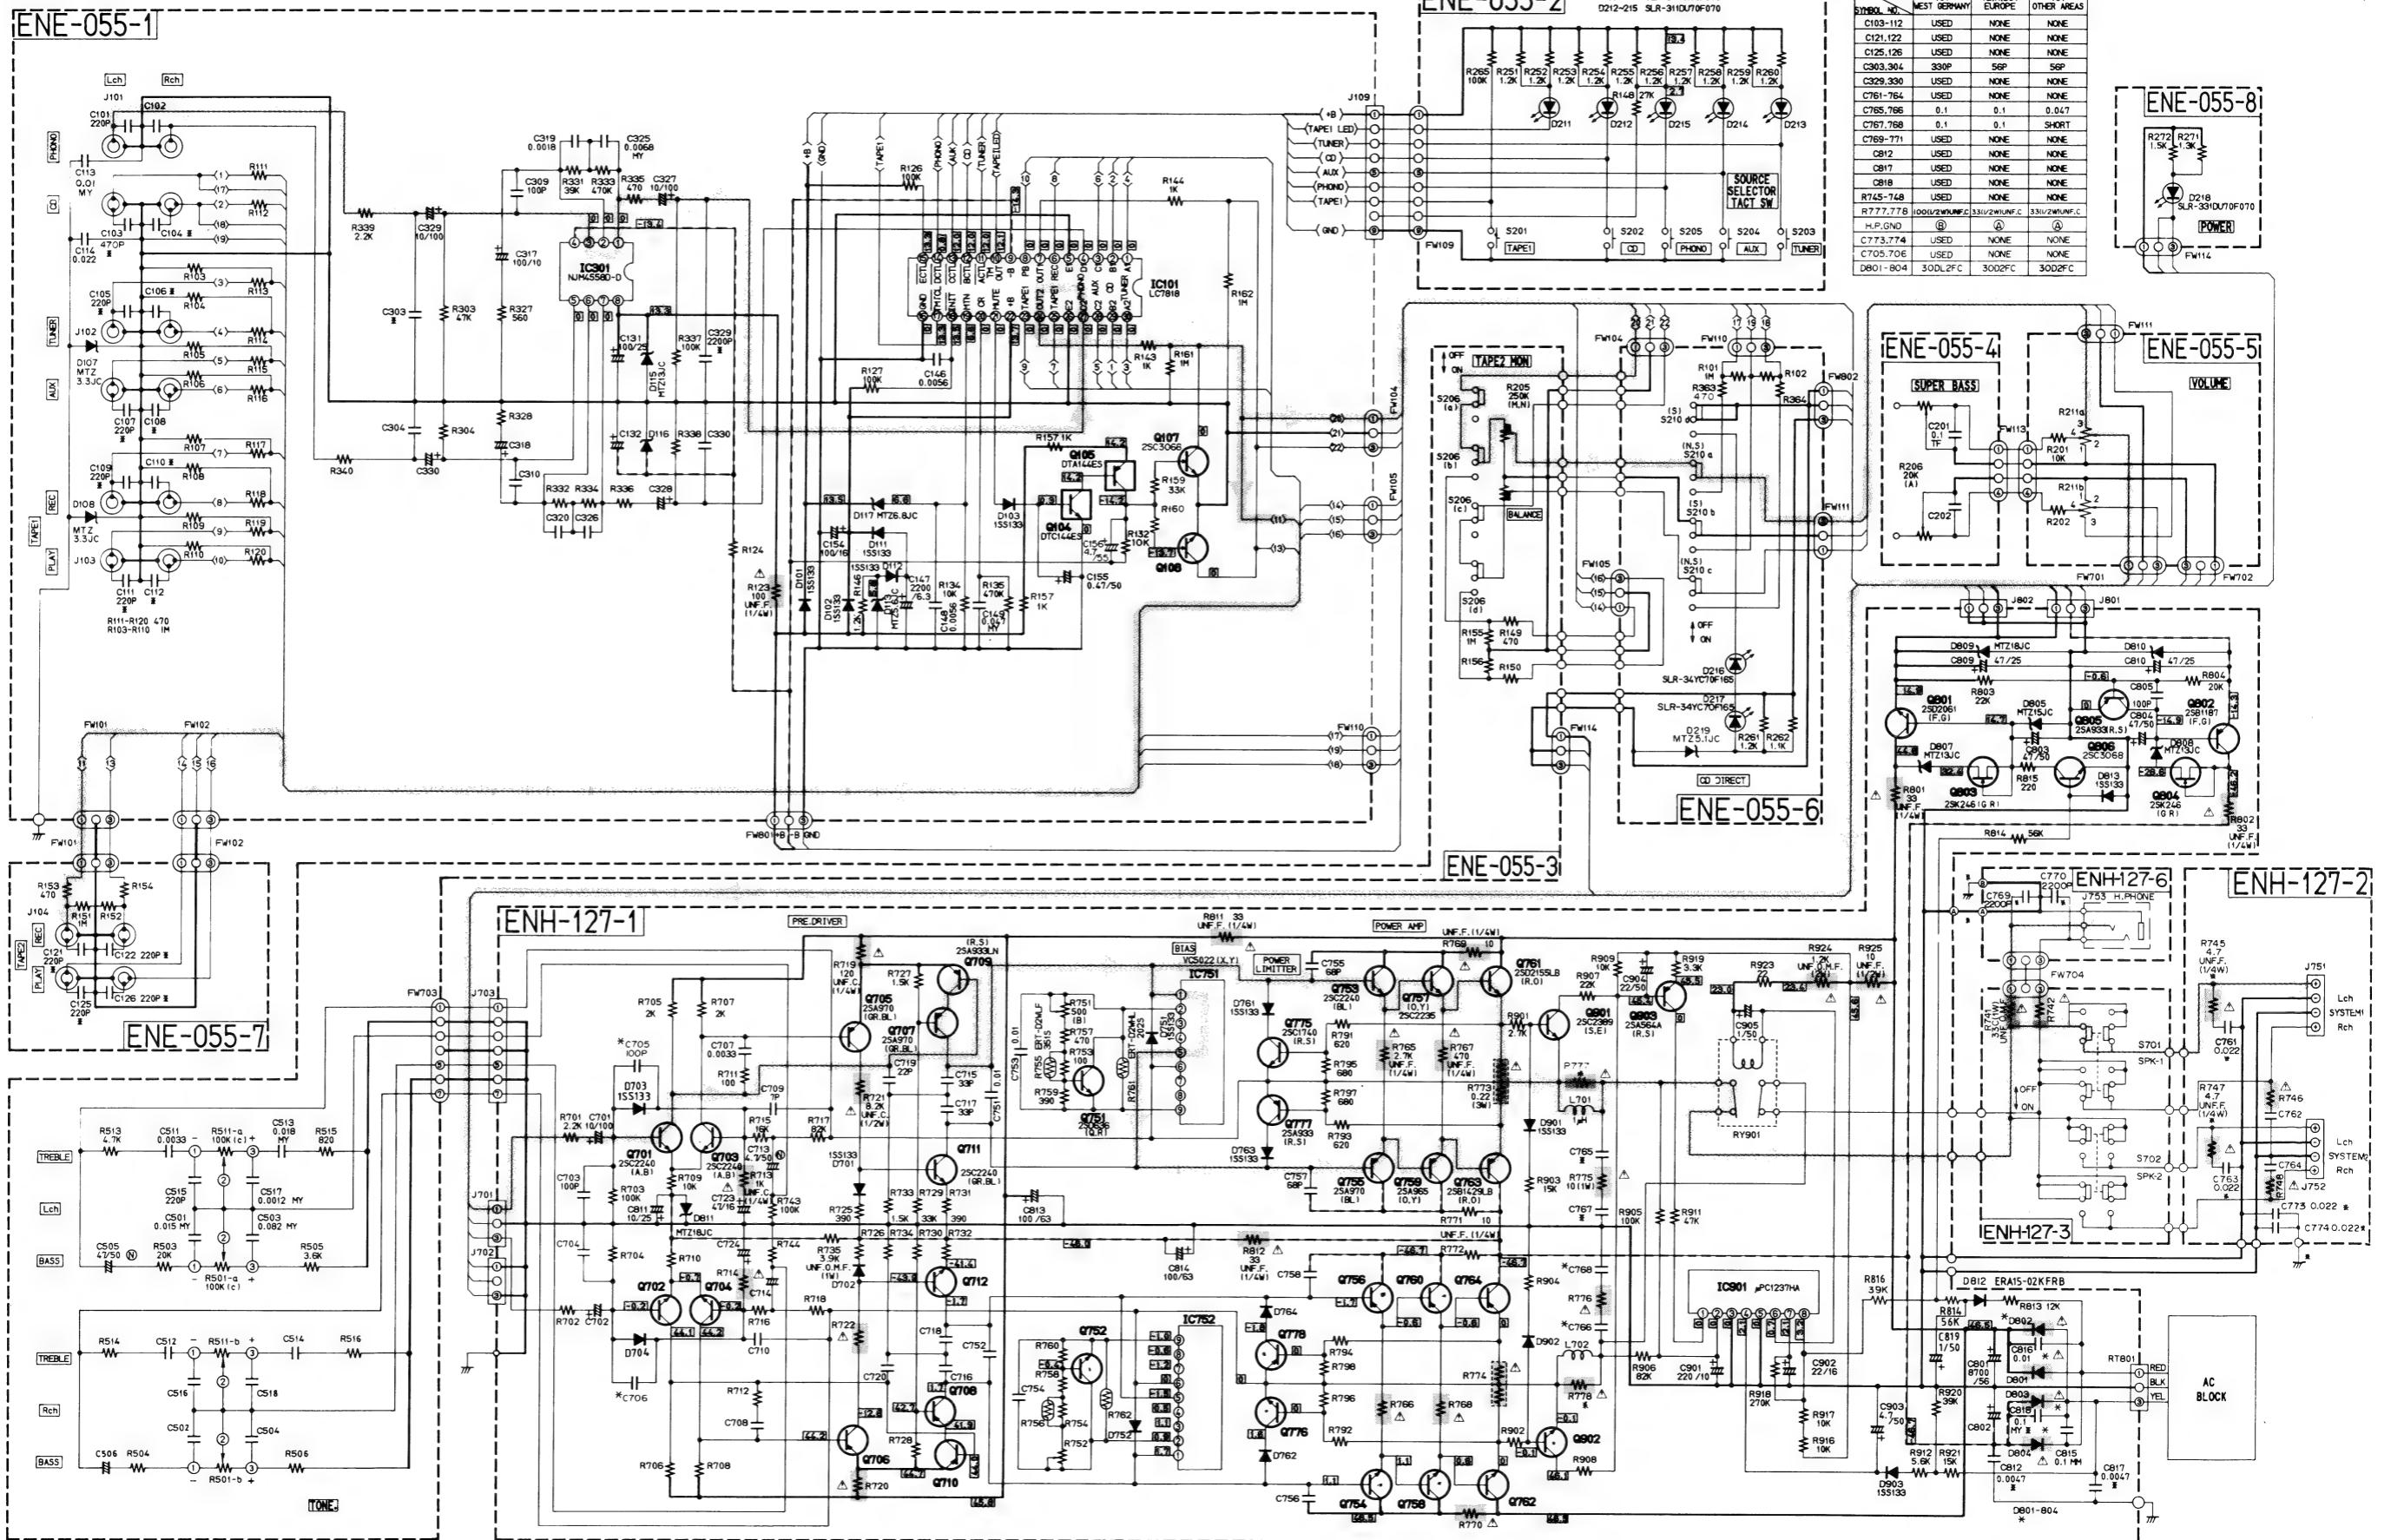


(2) Power Supply Section

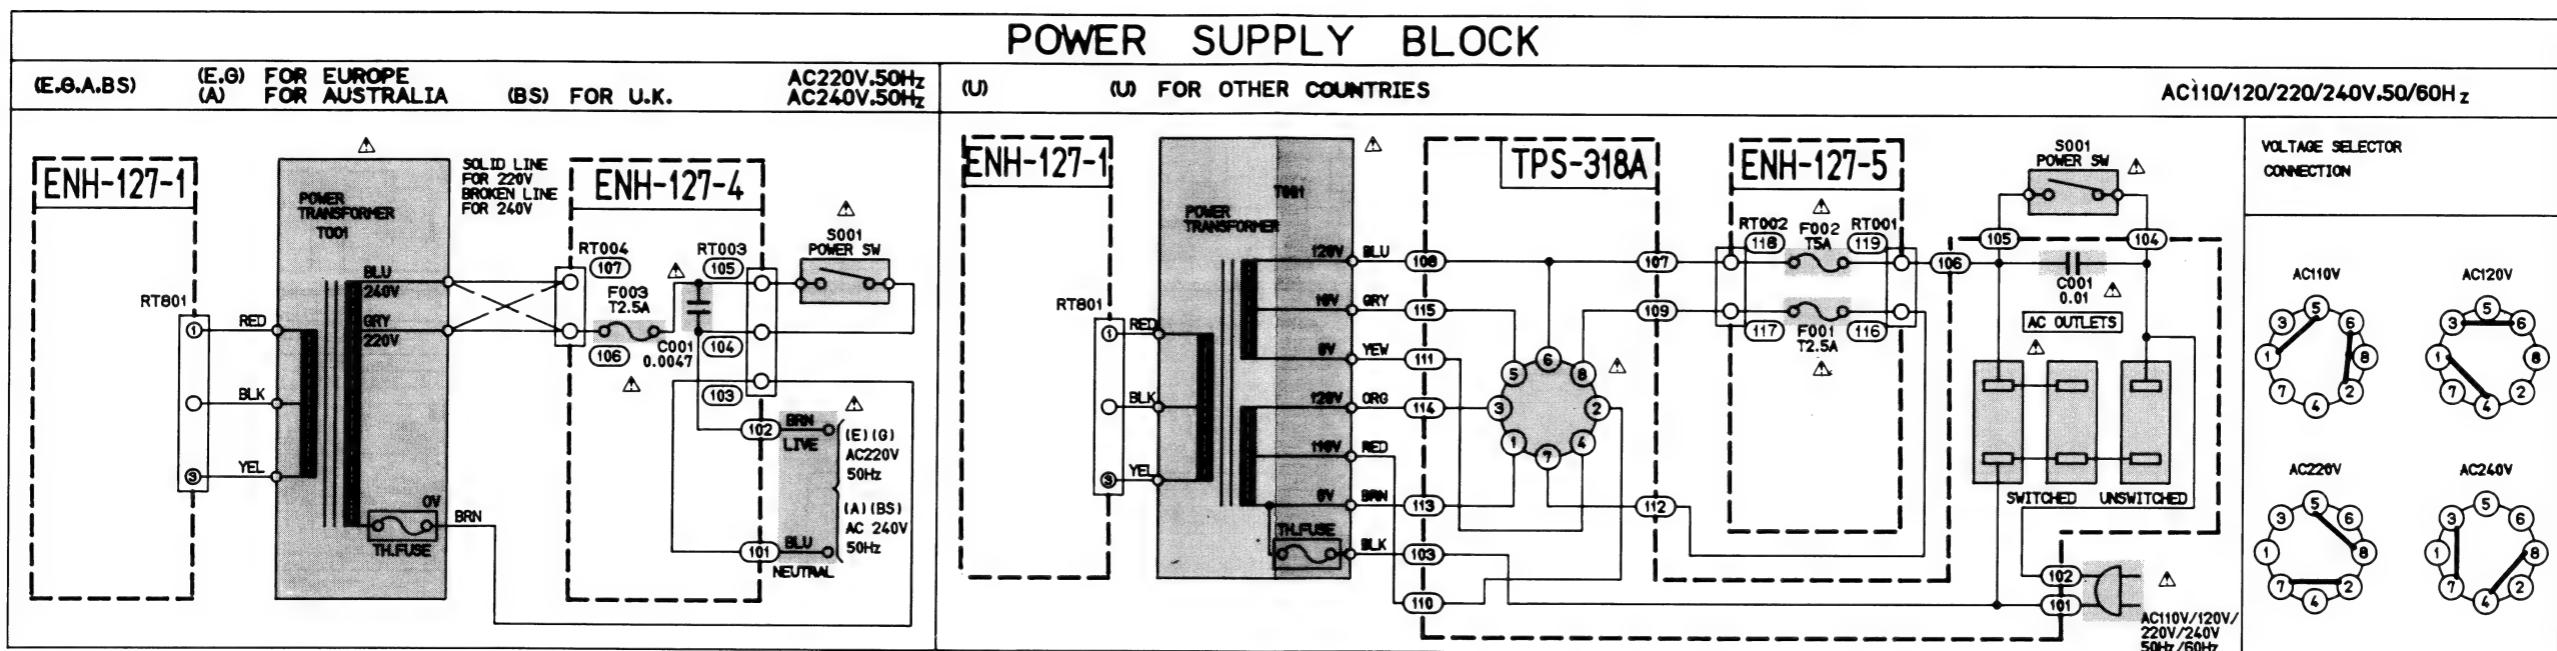


Printed Circuit Boards

■ Source Select PC Board (ENE-055)

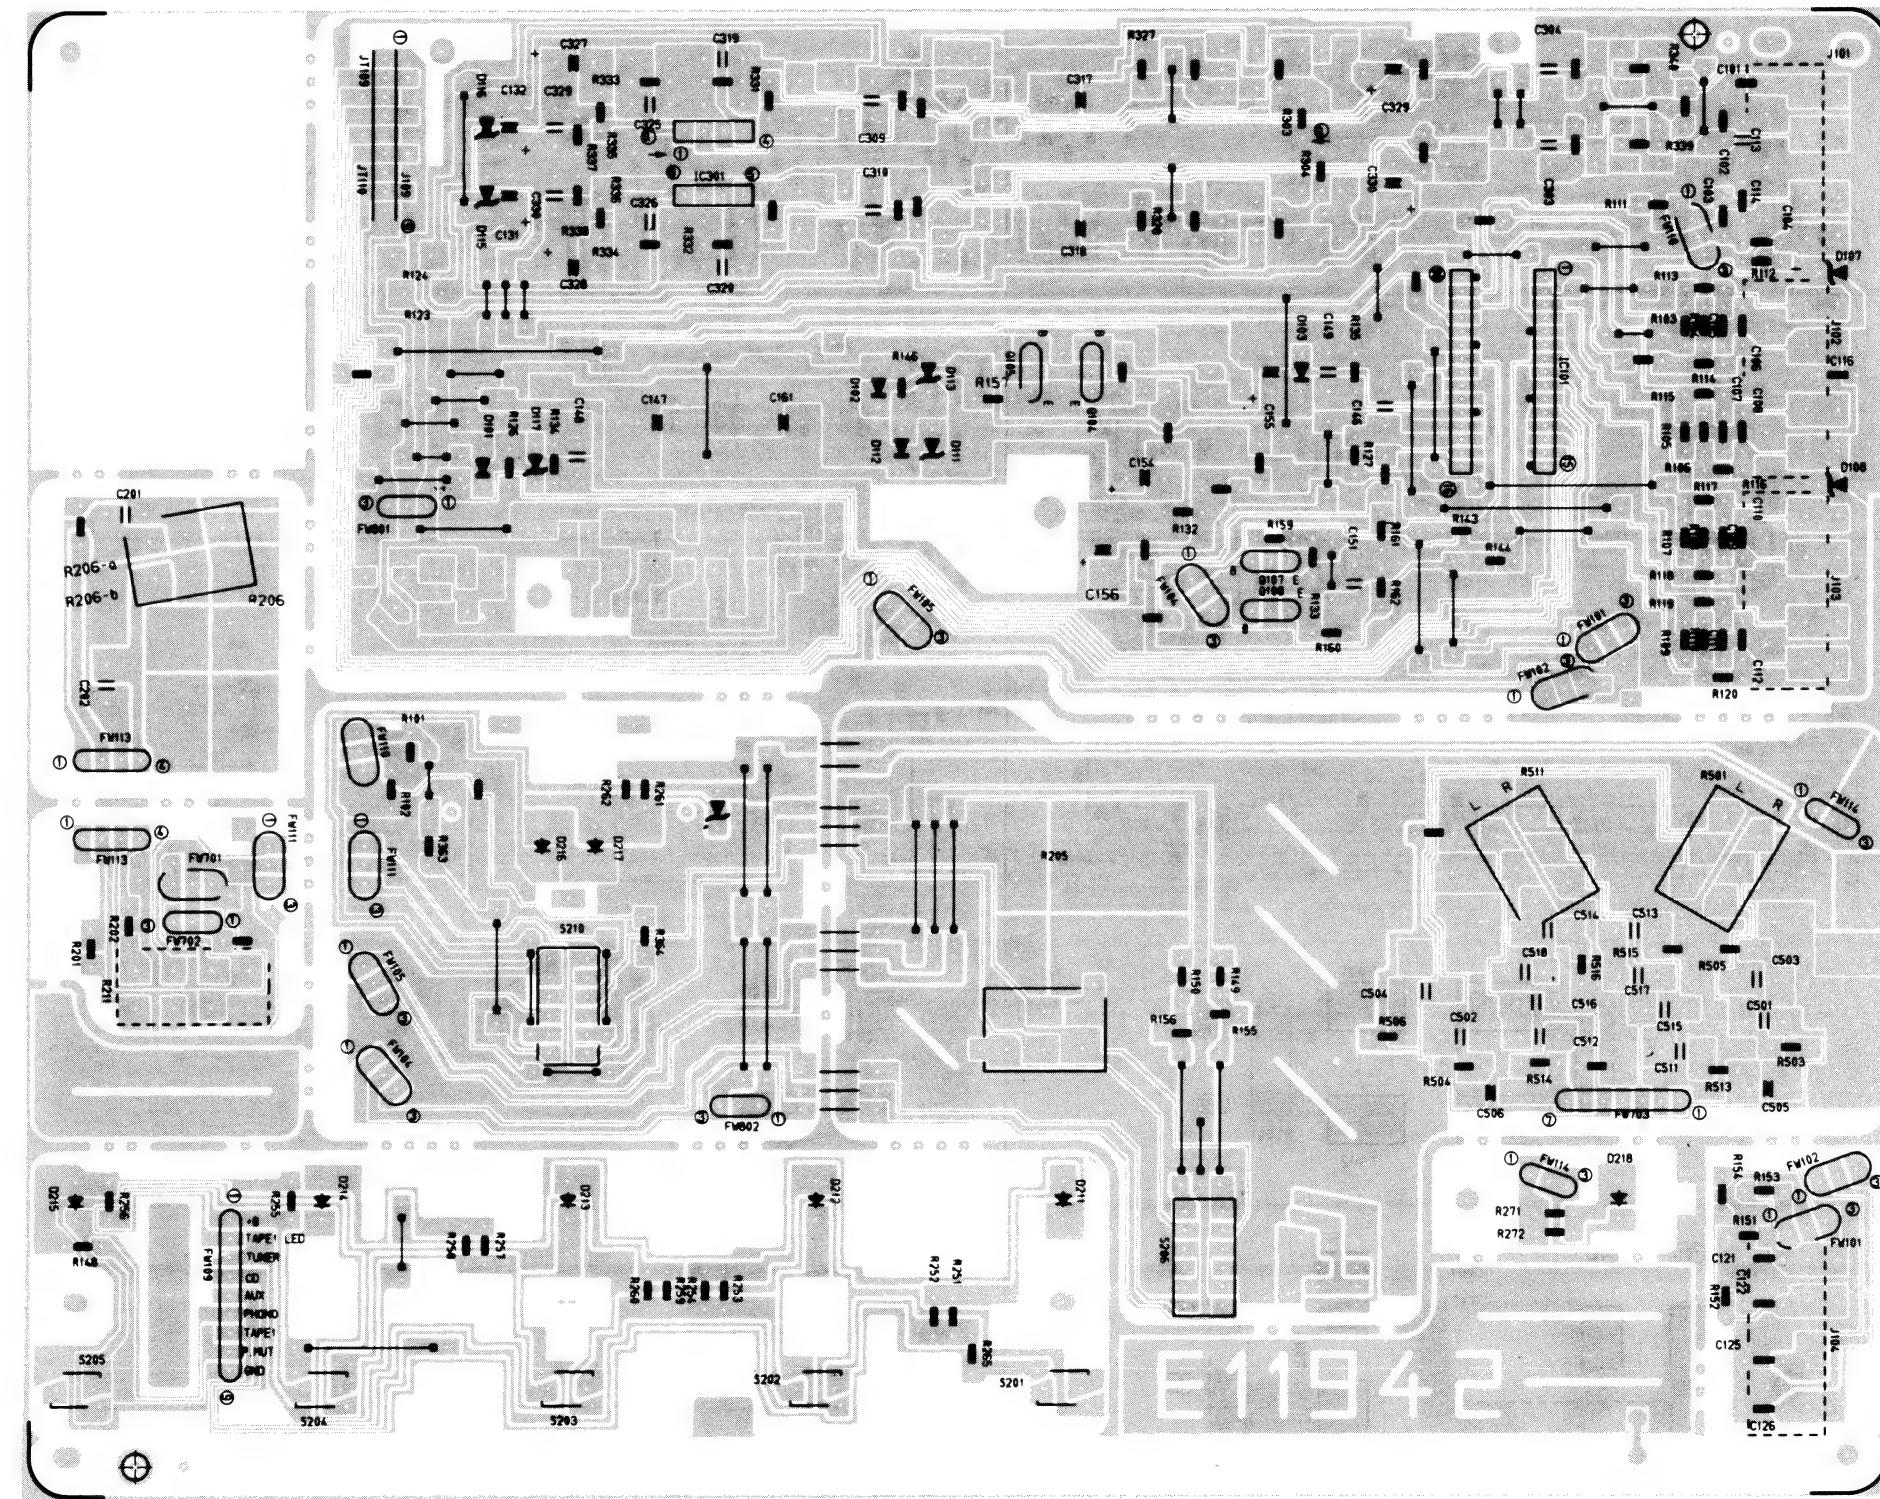

■ Main Amplifier PC Board (ENH-127)

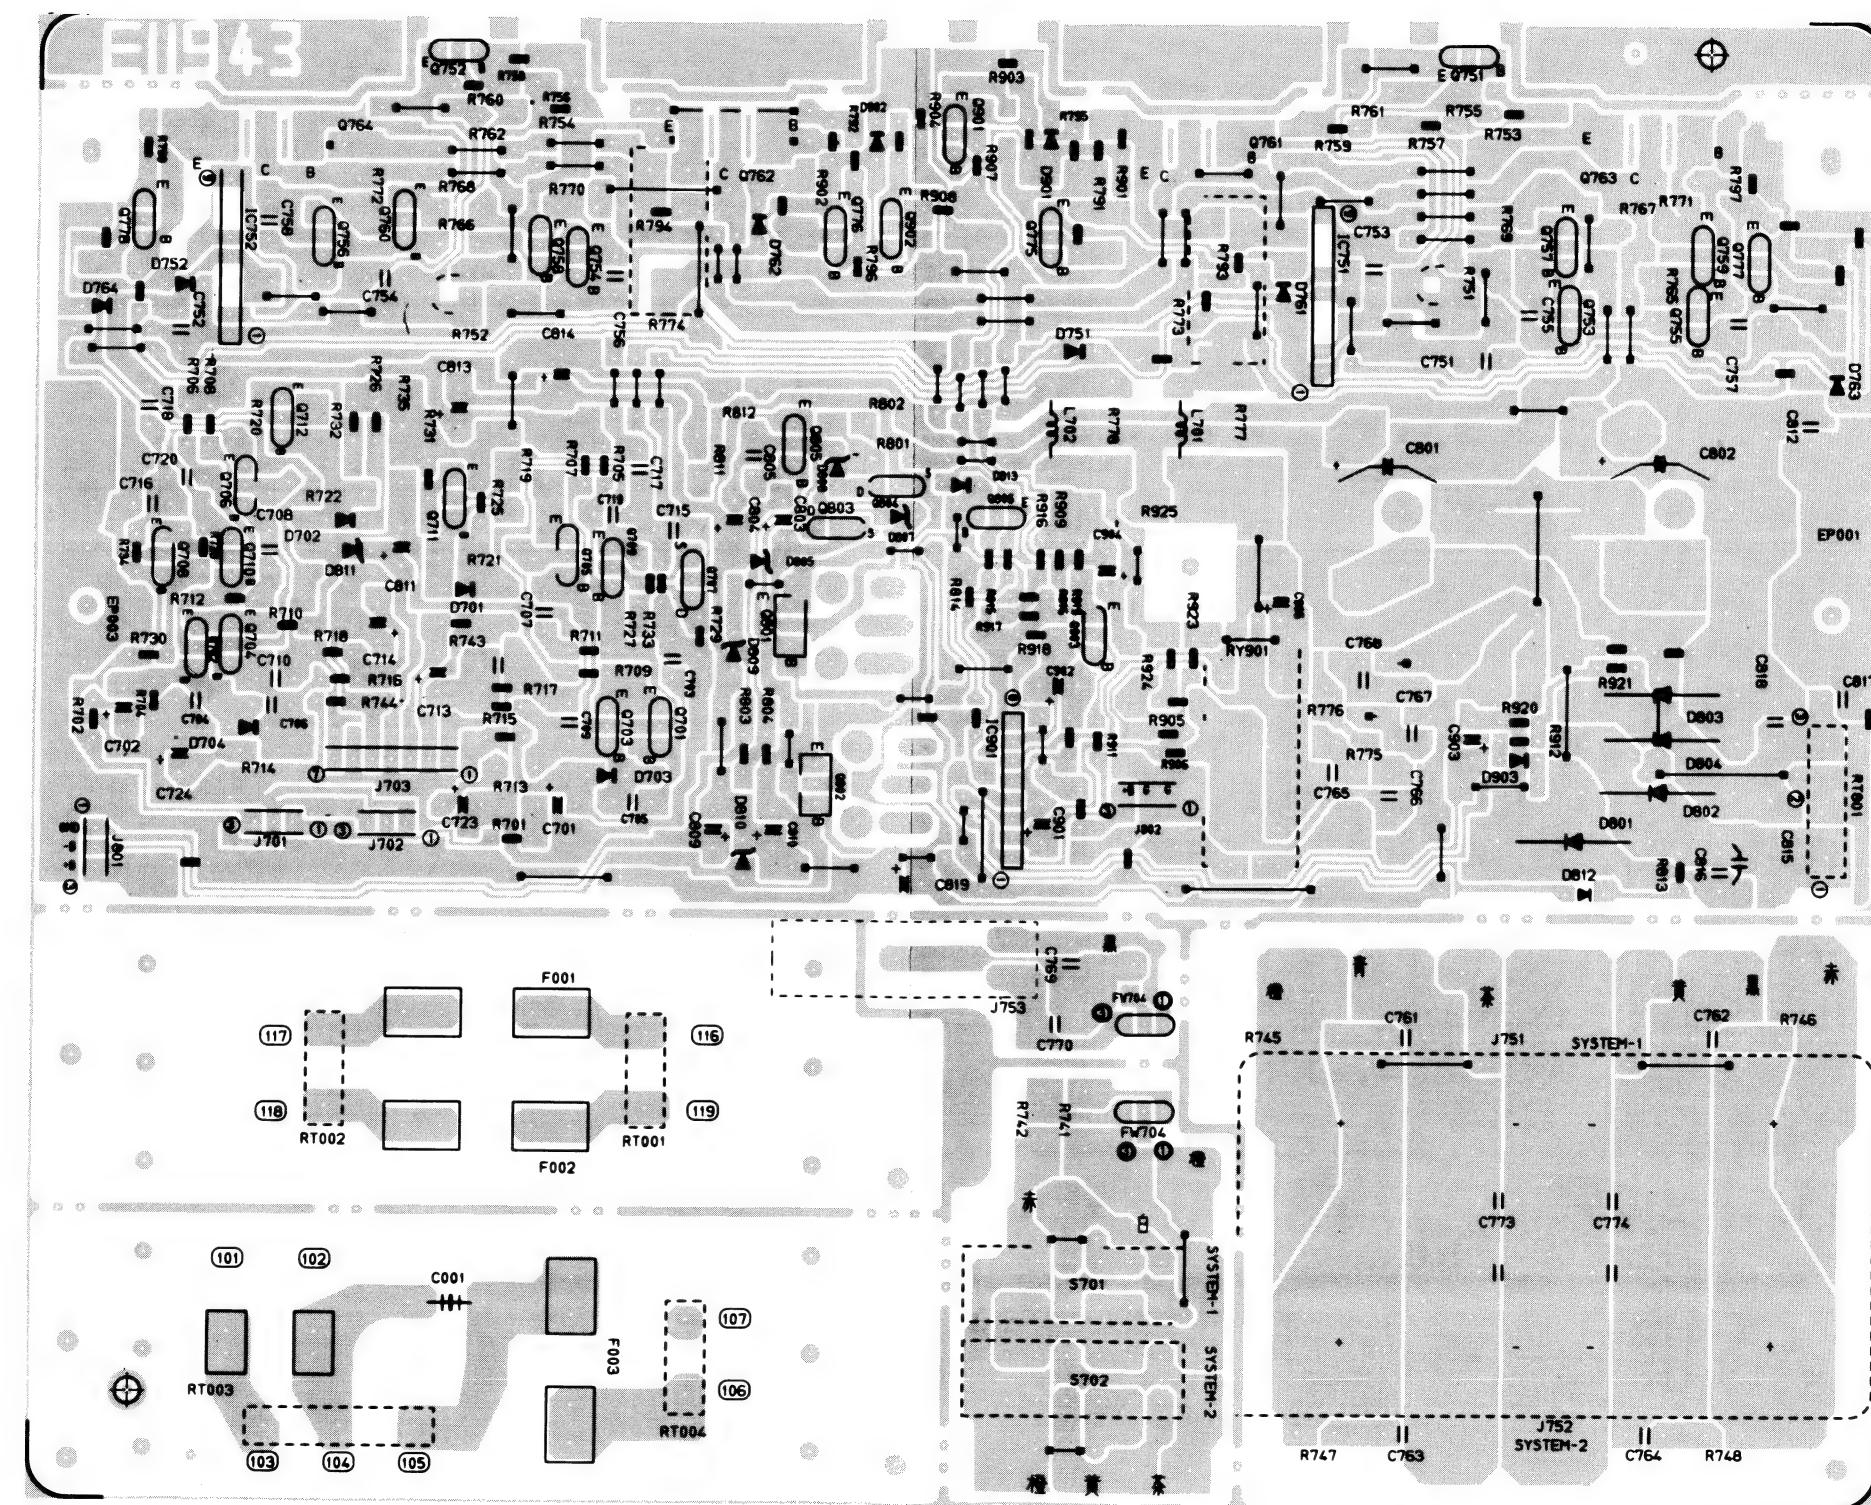


PARTS LIST

Contents

Exploded View and Parts List.....	2-2
Printed Circuit Board Ass'y and Parts List.....	2-5
■ ENH-127 □ Main Amplifier PC Board Ass'y.....	2-5
■ ENE-055 □ Source Selector PC Board Ass'y.....	2-8
■ TPS-318 [A] Voltage Selector PC Board Ass'y	2-10
Accessories List.....	2-11
Packing Materials and Part Numbers	2-12

Exploded View and Parts List

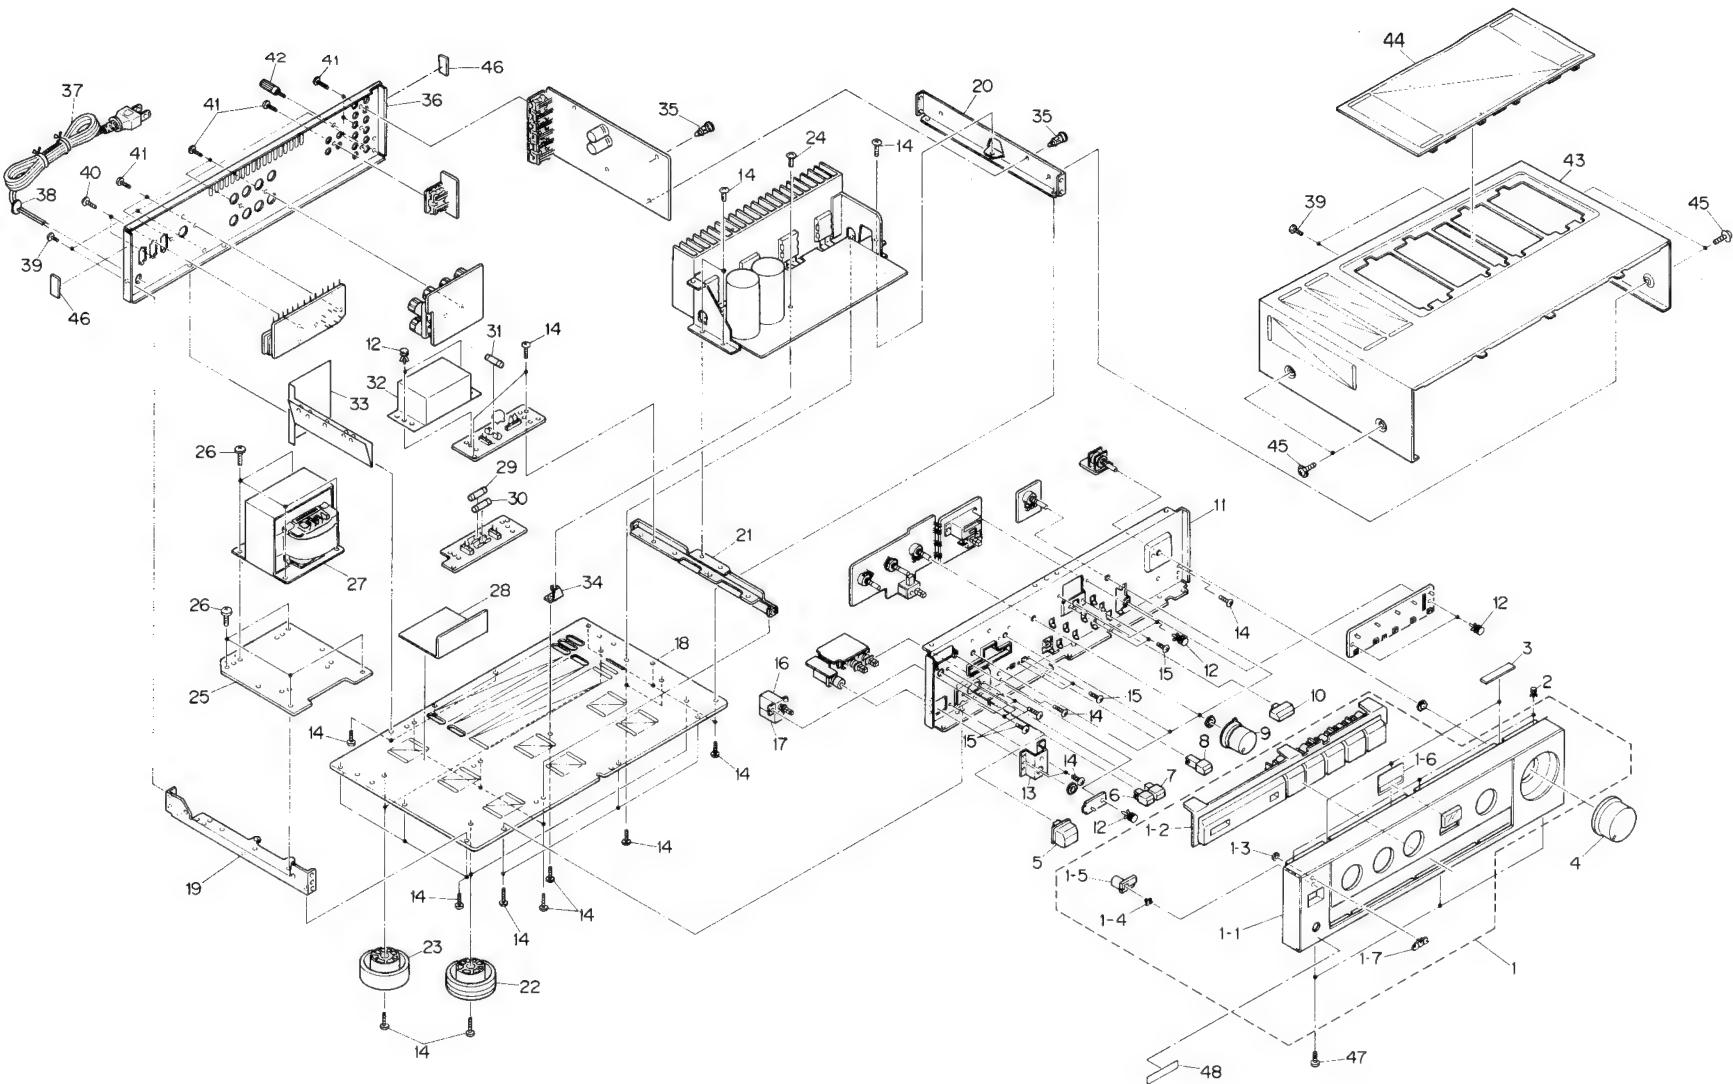

■ Parts List

⚠	Item	Part Number	Part Name	Q'ty	Description	Areas
	1 1-1 1-2 1-3 1-4	EFP-AX311BKE E26391-001 E26332-001 E60912-003 E73522-001	Front Panel Ass'y Front Panel Push Button Ass'y Speed Nut Indicator	1 1 1 1 1		
	1-5 1-6 1-7 2 3	E75286-001 E75327-001 E72968-001 E48729-009 EXO060007N40S	Holder Indicator Sheet JVC Mark Plastic Rivet Spacer	1 1 1 3 3		
	4 5 6 7 8	E305980-001 E75079-001 E75073-001 E75073-002 E75182-001	Volume Knob Power Button Push Button Push Button Push Button	1 1 1 1 1		
	9 10 11 12	E305981-001 E75117-001 E11953-001 E48729-008 E48729-008	Knob Push Button Front Bracket Plastic Rivet Plastic Rivet	4 1 1 5 7		U except U
⚠ ⚠	13 14 15 16	E75183-001 SBSG3008CC SBST3006CC QSP1106-004 QSP1106-004BS	Head Phone Bracket Screw Screw Push Switch Push Switch	1 31 8 1 1	Power Power	except BS BS
	17 18 19 20 21	E71004-001 E26273-001 E305810-001 E305811-001 E305812-002	Switch Cover Bottom Cover Side Bracket Side Bracket Center Bracket	1 1 1 1 1	Left Right	BS
	22 23 24 25 26	E75088-001 E75088-002 GBSB3008CC E305803-002 E65389-004	Foot Ass'y Foot Ass'y Screw Trans Bracket Special Screw	2 2 1 1 8	Front Rear	
⚠ ⚠ ⚠	27 — 28	ETP1150-33EA ETP1150-33EABS ETP1150-33FA E303260-189 E75353-001	Power Transformer Power Transformer Power Transformer Rating Label Protect Cover	1 1 1 1 1		E, G, A, EF BS U E, G, EF except U
⚠ ⚠ ⚠ ⚠	29 30 31 32	QMF51A2-2R5S QMF51A2-5ROS QMF51A2-2R5S QMF51E2-2R5SBS E306171-001	Fuse Fuse Fuse Fuse Protect Cover	1 1 1 1 1	F001 F002 F003 F003	U U E, G, A, EF BS except U

⚠: Safety Parts

⚠	Item	Part Number	Part Name	Q'ty	Description	Areas
	33 34 35 36	E305986-001 E68587-008 E303216-001 E26334-001 E26334-002	Protect Cover Bracket Fastener Rear Panel Rear Panel	1 1 2 1 1		U except U
⚠ ⚠ ⚠ ⚠ ⚠	37 38	QMP2560-244 QMP3900-200 QMP7600-200 QMP9017-008BS QHS3876-162	Power Cord Power Cord Power Cord Power Cord Cord Stopper	1 1 1 1 1		A E, G, EF U BS except BS
⚠	39 40 41	QHS3876-162BS SBSG3008M SDSB3008M E73273-001 E73273-001	Cord Stopper Screw Screw Special Screw Special Screw	1 5 2 8 6	AC Outlet	BS U U except U
	42 43 44 45	E70078-001 E26336-001 E26336-002 E24134-008 E61660-004	GND Terminal Metal Cover Metal Cover Grill Special Screw	1 1 1 1 4		G, A, U E, EF, BS E, EF, BS
	46 47 48	EXO040010R10S10 SBSG3006M E49267-001	Spacer Screw Olign Marking Label	2 3 1		BS

⚠: Safety Parts


The Marks for Designated Areas

- | | | | |
|-------------|--------------------|------------------------------|-----------------|
| E, EF | Continental Europe | BS | the U.K. |
| G | West Germany | U | Other Countries |
| A | Australia | No mark indicates all areas. | |

Printed Circuit Board Ass'y and Parts List

■ ENH-127 □ Main Amplifier PC Board Ass'y

Note: ENH-127 □ varies according to the areas employed. See note (1) when placing an order.

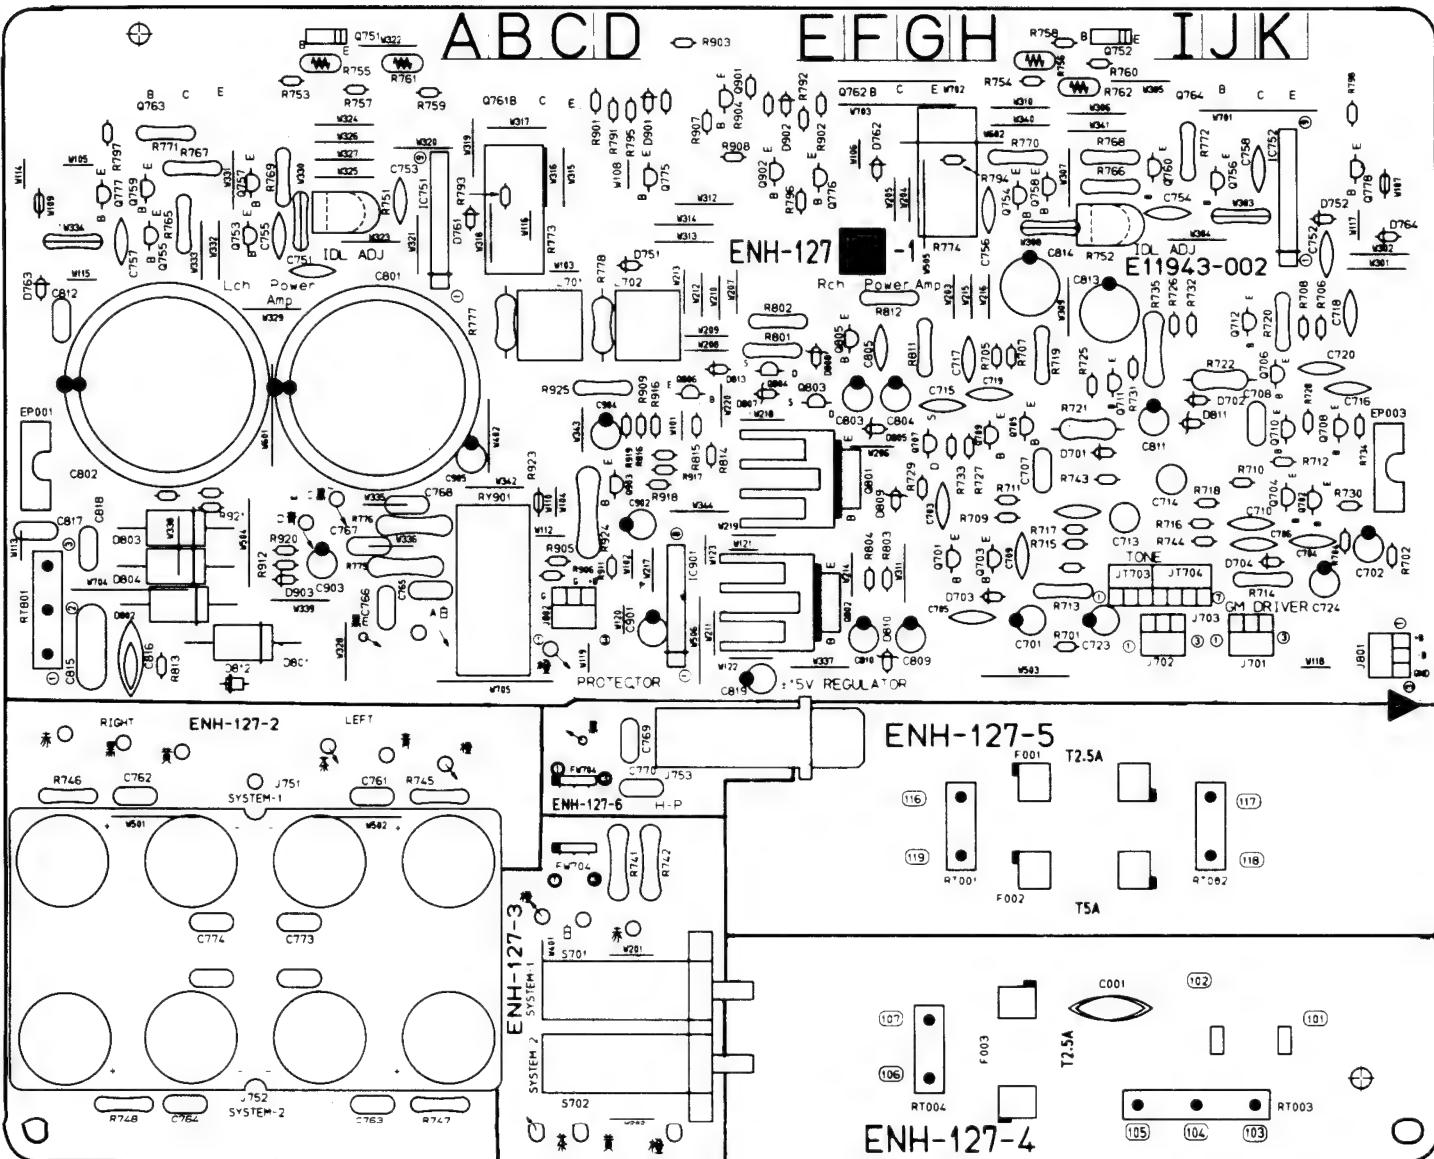

Note (1)

PC Board Ass'y	Designated Areas	PC Board Ass'y	Designated Areas
ENH-127 [A]	Other Countries	ENH-127 [C]	West Germany
ENH-127 [B]	Continental Europe, Australia	ENH-127 [D] BS	the U.K.

Transistors

△ ITEM	PART NUMBER	DESCRIPTION	AREA	MAKER
Q701	2SC2240(A,B)	SILICON	TOSHIBA	
Q702	2SC2240(A,B)	SILICON	TOSHIBA	
Q703	2SC2240(A,B)	SILICON	TOSHIBA	
Q704	2SC2240(A,B)	SILICON	TOSHIBA	
Q705	2SA970(GR,BL)	SILICON	TOSHIBA	
Q706	2SA970(GR,BL)	SILICON	TOSHIBA	
Q707	2SA970(GR,BL)	SILICON	TOSHIBA	
Q708	2SA970(GR,BL)	SILICON	TOSHIBA	
Q709	2SA933LN(R,S)	SILICON	ROHM	
Q710	2SA933LN(R,S)	SILICON	ROHM	
Q711	2SC2240(GR,BL)	SILICON	TOSHIBA	
Q712	2SC2240(GR,BL)	SILICON	TOSHIBA	
Q751	2SD636(Q,R)	SILICON	MATSUSHITA	
Q752	2SD636(Q,R)	SILICON	MATSUSHITA	
Q753	2SC2240(GR)	SILICON	TOSHIBA	
Q754	2SC2240(GR)	SILICON	TOSHIBA	
Q755	2SA970(GR)	SILICON	TOSHIBA	
Q756	2SA970(GR)	SILICON	TOSHIBA	
Q757	2SC2235(O,Y)	SILICON	TOSHIBA	
Q758	2SC2235(O,Y)	SILICON	TOSHIBA	
Q759	2SA965(O,Y)	SILICON	TOSHIBA	
Q760	2SA965(O,Y)	SILICON	TOSHIBA	
Q761	2SD2155LB(R,O)	SILICON	TOSHIBA	
Q762	2SD2155LB(R,O)	SILICON	TOSHIBA	
Q763	2SB1429LB(R,O)	SILICON	TOSHIBA	
Q764	2SB1429LB(R,O)	SILICON	TOSHIBA	
Q775	2SC1740S(R,S)	SILICON	ROHM	
Q776	2SC1740S(R,S)	SILICON	ROHM	
Q777	2SA933S(R,S)	SILICON	ROHM	
Q778	2SA933S(R,S)	SILICON	ROHM	
Q801	2SD2061(F,G)	SILICON	ROHM	
Q802	2SB1187(F,G)	SILICON	ROHM	
Q803	2SK246(GR)	F.E.T		
Q804	2SK246(GR)	F.E.T		
Q805	2SA933S(R,S)	SILICON	ROHM	
Q806	2SC3068	SILICON	SANYO	
Q901	2SC2389(S,E)	SILICON	ROHM	
Q902	2SC2389(S,E)	SILICON	ROHM	
Q903	2SA564A(R,S)	SILICON		

△ : SAFETY PARTS

Diodes

△ ITEM	PART NUMBER	DESCRIPTION	AREA	MAKER
D810	MTZ18JC	ZENER	ROHM	
D811	MTZ18JC	ZENER	ROHM	
D812	ERA15-02L19	SILICON		
D813	1SS133	SILICON	ROHM	
D901	1SS133	SILICON	ROHM	
D902	1SS133	SILICON	ROHM	
D903	1SS133	SILICON	ROHM	

△ : SAFETY PARTS

Capacitors

△ ITEM	PART NUMBER	DESCRIPTION	AREA	MAKER
C001	QCZ9019-472	4700PF		CERAMIC
C001	QCZ9019-472	4700PF		CERAMIC
C001	QCZ9019-472BS	4700PF		CERAMIC
C701	EETB2AM-106E	10MF	100V	ELECTRO
C702	EETB2AM-106E	10MF	100V	ELECTRO
C703	QCS21HJ-101	100PF	50V	CERAMIC
C704	QCS21HJ-101	100PF	50V	CERAMIC
C705	QCS21HJ-101	100PF	50V	CERAMIC
C706	QCS21HJ-101	100PF	50V	CERAMIC
C707	QFN81HK-332	3300PF	50V	MYLAR
C708	QFN81HK-332	3300PF	50V	MYLAR
C709	QCS21HJ-100	10PF	50V	CERAMIC
C710	QCS21HJ-100	10PF	50V	CERAMIC
C713	QEN51HM-475	4.7MF	50V	NON POLE
C714	QEN51HM-475	4.7MF	50V	NON POLE
C715	QCS21HJ-330	33PF	50V	CERAMIC
C716	QCS21HJ-330	33PF	50V	CERAMIC
C717	QCS21HJ-330	33PF	50V	CERAMIC
C718	QCS21HJ-330	33PF	50V	CERAMIC
C719	QCS21HJ-220	22PF	50V	CERAMIC
C720	QCS21HJ-220	22PF	50V	CERAMIC
C723	QTB1CM-476	47MF	16V	ELECTRO
C724	QTB1CM-476	47MF	16V	ELECTRO
C751	QCF21HP-103	0.01MF	50V	CERAMIC
C752	QCF21HP-103	0.01MF	50V	CERAMIC
C753	QCF21HP-103	0.01MF	50V	CERAMIC
C754	QCF21HP-103	0.01MF	50V	CERAMIC
C755	QCS32HJ-680	68PF	500V	CERAMIC
C756	QCS32HJ-680	68PF	500V	CERAMIC
C757	QCS32HJ-680	68PF	500V	CERAMIC
C758	QCS32HJ-680	68PF	500V	CERAMIC
C761	QFN81HK-223	0.022MF	50V	MYLAR
C762	QFN81HK-223	0.022MF	50V	MYLAR
C763	QFN81HK-223	0.022MF	50V	MYLAR
C764	QFN81HK-223	0.022MF	50V	MYLAR
C765	QFN81HK-104	0.1MF	50V	MYLAR
C765	QFN81HK-104	0.1MF	50V	MYLAR
C765	QFN81HK-104	0.1MF	50V	MYLAR
C765	QFN81HK-104	0.047MF	50V	MYLAR
C766	QFN81HK-104	0.1MF	50V	MYLAR
C766	QFN81HK-104	0.1MF	50V	MYLAR
C766	QFN81HK-104	0.1MF	50V	MYLAR
C766	QFN81HK-104	0.1MF	50V	MYLAR
C766	QFN81HK-104	0.1MF	50V	MYLAR
C766	QFN81HK-104	0.1MF	50V	MYLAR
C766	QFN81HK-104	0.1MF	50V	MYLAR
C767	QFN81HK-473	0.047MF	50V	MYLAR
C767	QFN81HK-104	0.1MF	50V	MYLAR
C767	QFN81HK-104	0.1MF	50V	MYLAR
C767	QFN81HK-104	0.1MF	50V	MYLAR
C768	QFN81HK-104	0.1MF	50V	MYLAR
C768	QFN81HK-104	0.1MF	50V	MYLAR
C768	QFN81HK-104	0.1MF	50V	MYLAR
C769	QCF21HP-222	2200PF	50V	CERAMIC
C770	QCF21HP-222	2200PF	50V	CERAMIC
C773	QFN81HK-223	0.022MF	50V	MYLAR
C774	QFN81HK-223	0.022MF	50V	MYLAR
C801	QE20075-878E	8700MF	56V	ELECTRO
C802	QE20075-878E	8700MF	56V	ELECTRO
C803	QETB1HM-476	47MF	50V	ELECTRO
C804	QETB1HM-476	47MF	50V	ELECTRO
C805	QCS21HJ-101	100PF	50V	CERAMIC
C809	QETB1EM-476	47MF	25V	ELECTRO
C810	QETB1EM-476	47MF	25V	ELECTRO
C811	QETB1EM-106	10MF	25V	ELECTRO
C812	QFN32AK-472	4700PF	100V	MYLAR
C813	QETB1JM-107	100MF	63V	ELECTRO
C814	QETB1JM-107	100MF	63V	ELECTRO
C815	QFH42EK-104	0.1MF	250V	M.MYLAR
C816	QE22HP-103A	0.01MF	500V	CERAMIC
C817	QFN82AK-472	4700PF	100V	MYLAR
C818	QFN82AK-104	0.1MF	100V	MYLAR
C819	QETB1HM-105	1MF	50V	ELECTRO
C901	QETB1AM-227	220MF	10V	ELECTRO

Capacitors

A	ITEM	PART NUMBER	DESCRIPTION			AREA
	C902	QETB1CM-226	22MF	16V	ELECTRO	
	C903	QETB1HM-475	4.7MF	50V	ELECTRO	
	C904	QETB1HM-226	22MF	50V	ELECTRO	
	C905	QETB1HM-105	1MF	50V	ELECTRO	

A : SAFETY PARTS

Resistors

△	ITEM	PART NUMBER	DE S C R I P T I O N	AREA
	R701	QRD167J-222	2.2K	1/6W CARBON
	R702	QRD167J-222	2.2K	1/6W CARBON
	R703	QRD167J-104	100K	1/6W CARBON
	R704	QRD167J-104	100K	1/6W CARBON
	R705	QRD167J-202	2K	1/6W CARBON
	R706	QRD167J-202	2K	1/6W CARBON
	R707	QRD167J-202	2K	1/6W CARBON
	R708	QRD167J-202	2K	1/6W CARBON
	R709	QRD167J-103	10K	1/6W CARBON
	R710	QRD167J-103	10K	1/6W CARBON
	R711	QRD167J-101	100	1/6W CARBON
	R712	QRD167J-101	100	1/6W CARBON
△	R713	QRD14CJ-102S	1K	1/4W UNF.CARBON
△	R714	QRD14CJ-102S	1K	1/4W UNF.CARBON
	R715	QRD167J-163	16K	1/6W CARBON
	R716	QRD167J-163	16K	1/6W CARBON
	R717	QRD167J-823	82K	1/6W CARBON
	R718	QRD167J-823	82K	1/6W CARBON
△	R719	QRD14CJ-121S	120	1/4W UNF.CARBON
△	R720	QRD14CJ-121S	120	1/4W UNF.CARBON
△	R721	QRD125J-822	8.2K	1/2W UNF.CARBON
△	R722	QRD125J-822	8.2K	1/2W UNF.CARBON
	R725	QRD167J-391	390	1/6W CARBON
	R726	QRD167J-391	390	1/6W CARBON
△	R727	QRD167J-152	1.5K	1/6W CARBON
	R728	QRD167J-152	1.5K	1/6W CARBON
	R729	QRD167J-333	33K	1/6W CARBON
	R730	QRD167J-333	33K	1/6W CARBON
	R731	QRD167J-391	390	1/6W CARBON
	R732	QRD167J-391	390	1/6W CARBON
	R733	QRD167J-152	1.5K	1/6W CARBON
	R734	QRD167J-152	1.5K	1/6W CARBON
△	R735	QRG01CJ-392A	3.9K	1W O.M.FILM
△	R735	QRG01CJ-392A	3.9K	1W O.M.FILM
△	R735	QRG01CJ-392A	3.9K	1W O.M.FILM
	R735	QOG01CJ-392A	3.9K	1W O.M.FILM
△	R741	QRG01CJ-331A	330	1W O.M.FILM
△	R742	QRG01CJ-331A	330	1W O.M.FILM
	R743	QRD167J-104	100K	1/6W CARBON
	R744	QRD167J-104	100K	1/6W CARBON
△	R745	QRZ0077-4R7	4.7	1/4W UNF.CARBON
△	R746	QRZ0077-4R7	4.7	1/4W UNF.CARBON
△	R747	QRZ0077-4R7	4.7	1/4W UNF.CARBON
△	R748	QRZ0077-4R7	4.7	1/4W UNF.CARBON
	R751	QPVE601-501	500	0.15W VARIABLE
	R752	QPVE601-501	500	0.15W VARIABLE
	R753	QRD167J-101	100	1/6W CARBON
	R754	QRD167J-101	100	1/6W CARBON
	R755	ERT-D2WFL351S	350	1/4W THERMISTOR
	R756	ERT-D2WFL351S	350	1/4W THERMISTOR
	R757	QRD167J-471	470	1/6W CARBON
	R758	QRD167J-471	470	1/6W CARBON
	R759	QRD167J-391	390	1/6W CARBON
	R760	QRD167J-391	390	1/6W CARBON
	R761	ERT-D2WHL202S	2K	1/4W THERMISTOR
	R762	ERT-D2WHL202S	2K	1/4W THERMISTOR
△	R765	QRZ0077-272	2.7K	1/4W FUSIBLE
△	R766	QRZ0077-272	2.7K	1/4W FUSIBLE
△	R767	QRZ0077-471	470	1/4W FUSIBLE
△	R768	QRZ0077-471	470	1/4W FUSIBLE
△	R769	QRZ0077-100	10	1/4W FUSIBLE
△	R770	QRZ0077-100	10	1/4W FUSIBLE
△	R771	QRZ0077-100	10	1/4W FUSIBLE
△	R772	QRZ0077-100	10	1/4W FUSIBLE
△	R773	ERF032K-R22	0.22	3W CEMENT
△	R774	ERF032K-R22	0.22	3W CEMENT
△	R775	QRG01CJ-100A	10	1W O.M.FILM
△	R776	QRG01CJ-100A	10	1W O.M.FILM
△	R777	QRD125J-101	100	1/2W UNF.CARBON
△	R777	QRD125J-330	33	1/2W UNF.CARBON
	R777	QRD125J-330	33	1/2W UNF.CARBON
	R777	QRD125J-330	33	1/2W UNF.CARBON
	R778	QRD125J-101	100	1/2W UNF.CARBON
	R778	QRD125J-330	33	1/2W UNF.CARBON
	R778	QRD125J-330	33	1/2W UNF.CARBON
	R778	QRD125J-330	33	1/2W UNF.CARBON
	R778	QRD125J-330	33	1/2W UNF.CARBON
	R791	QRD167J-621	620	1/6W CARBON
	R792	QRD167J-621	620	1/6W CARBON
	R793	QRD167J-621	620	1/6W CARBON
	R794	QRD167J-621	620	1/6W CARBON

Resistors

▲	ITEM	PART NUMBER	DESCRIPTION	AREA
	R795	QRD167J-181	180	1/6W CARBON
	R796	QRD167J-181	180	1/6W CARBON
	R797	QRD167J-181	180	1/6W CARBON
	R798	QRD167J-181	180	1/6W CARBON
▲	R801	QRZ0077-330	33	1/4W FUSIBLE
▲	R802	QRZ0077-330	33	1/4W FUSIBLE
	R803	QRD167J-223	22K	1/6W CARBON
	R804	QRD167J-203	20K	1/6W CARBON
▲	R811	QRZ0077-330	33	1/4W FUSIBLE
▲	R812	QRZ0077-330	33	1/4W FUSIBLE
	R813	QRD167J-123	12K	1/6W CARBON
	R814	QRD167J-563	56K	1/6W CARBON
	R815	QRD167J-221	220	1/6W CARBON
	R816	QRD167J-393	39K	1/6W CARBON
	R901	QRD167J-272	2.7K	1/6W CARBON
	R902	QRD167J-272	2.7K	1/6W CARBON
	R903	QRD167J-153	15K	1/6W CARBON
	R904	QRD167J-153	15K	1/6W CARBON
	R905	QRD167J-104	100K	1/6W CARBON
	R906	QRD167J-823	82K	1/6W CARBON
	R907	QRD167J-223	22K	1/6W CARBON
	R908	QRD167J-223	22K	1/6W CARBON
	R909	QRD167J-103	10K	1/6W CARBON
	R911	QRD167J-473	47K	1/6W CARBON
	R912	QRD167J-562	5.6K	1/6W CARBON
	R916	QRD167J-103	10K	1/6W CARBON
	R917	QRD167J-103	10K	1/6W CARBON
	R918	QRD167J-274	270K	1/6W CARBON
	R919	QRD167J-332	3.3K	1/6W CARBON
	R920	QRD167J-393	39K	1/6W CARBON
	R921	QRD167J-153	15K	1/6W CARBON
	R923	QRD167J-220	22	1/6W CARBON
▲	R924	QRG02CJ-122A	1.2K	2W O.H. FILM
▲	R925	QRZ0077-100	10	1/4W FUSIBLE

⚠ : SAFETY PARTS


Others

△	ITEM	PART NUMBER	DESCRIPTION	AREA
		EMG7331-002U	FUSE CLIP	
		EMG7331-002	FUSE CLIP	
		E11943-002	CIRCUIT BOARD	A
		E11943-002	CIRCUIT BOARD	B
		E11943-002	CIRCUIT BOARD	C
		E11943-002BS	CIRCUIT BOARD	DBS
		E300209-029	HEAT SINK	
		E305804-001	INSTRUCTION BOOK	
		E305805-001	INSTRUCTION BOOK	
		E33754-001	TIE BAND	
		E65508-002	TAB	B
		E65508-002	TAB	C
		E65508-002	TAB	DBS
		E70945-H25	HEAT SINK	
		E73525-003	SCREW	
		GBSB3008CC	SCREW	
		SBSB3008CC	SCREW	
		SBSB3008CC	SCREW	
J701		EMV7122-003	CONNECTOR	
J702		EMV7122-003	CONNECTOR	
J751		EMB00TP-801C	SPEAKER TERMINAL	
J752		EMB00TP-801C	SPEAKER TERMINAL	
J753		QMS6440-021	HEADPHONE JACK	
J801		EMV7122-003	CONNECTOR	
J802		EMV7122-003	CONNECTOR	
L701		EQL0001-1R0	INDUCTOR	
L702		EQL0001-1R0	INDUCTOR	
S701		QST4231-E04	PUSH SWITCH	
S702		QST4231-E04	PUSH SWITCH	
EP001		E70859-001	EARTH PLATE	C
EP003		E70859-001	EARTH PLATE	
FW704		EWR33B-085ST	FLAT WIRE	
JT703		EMV7122-003	CONNECTOR	
JT704		EMV7122-004	CONNECTOR	
RT001		E67764-202	WRAPPING TERMINA	A
RT002		E67764-202	WRAPPING TERMINA	A
RT003		E67764-203	WRAPPING TERMINA	B
RT003		E67764-203	WRAPPING TERMINA	C
RT003		E67764-203	WRAPPING TERMINA	DBS
RT004		E67764-202	WRAPPING TERMINA	B
RT004		E67764-202	WRAPPING TERMINA	C
RT004		E67764-202	WRAPPING TERMINA	DBS
RT801		E67764-103	WRAPPING TERMINA	
RY901		ESK5D24-218	RELAY	

— SAGE V BARTS

■ ENE-055 □ Source Selector PC Board Ass'y

Note: ENE-055 □ varies According to the areas employed. See note (1) when placing an order.

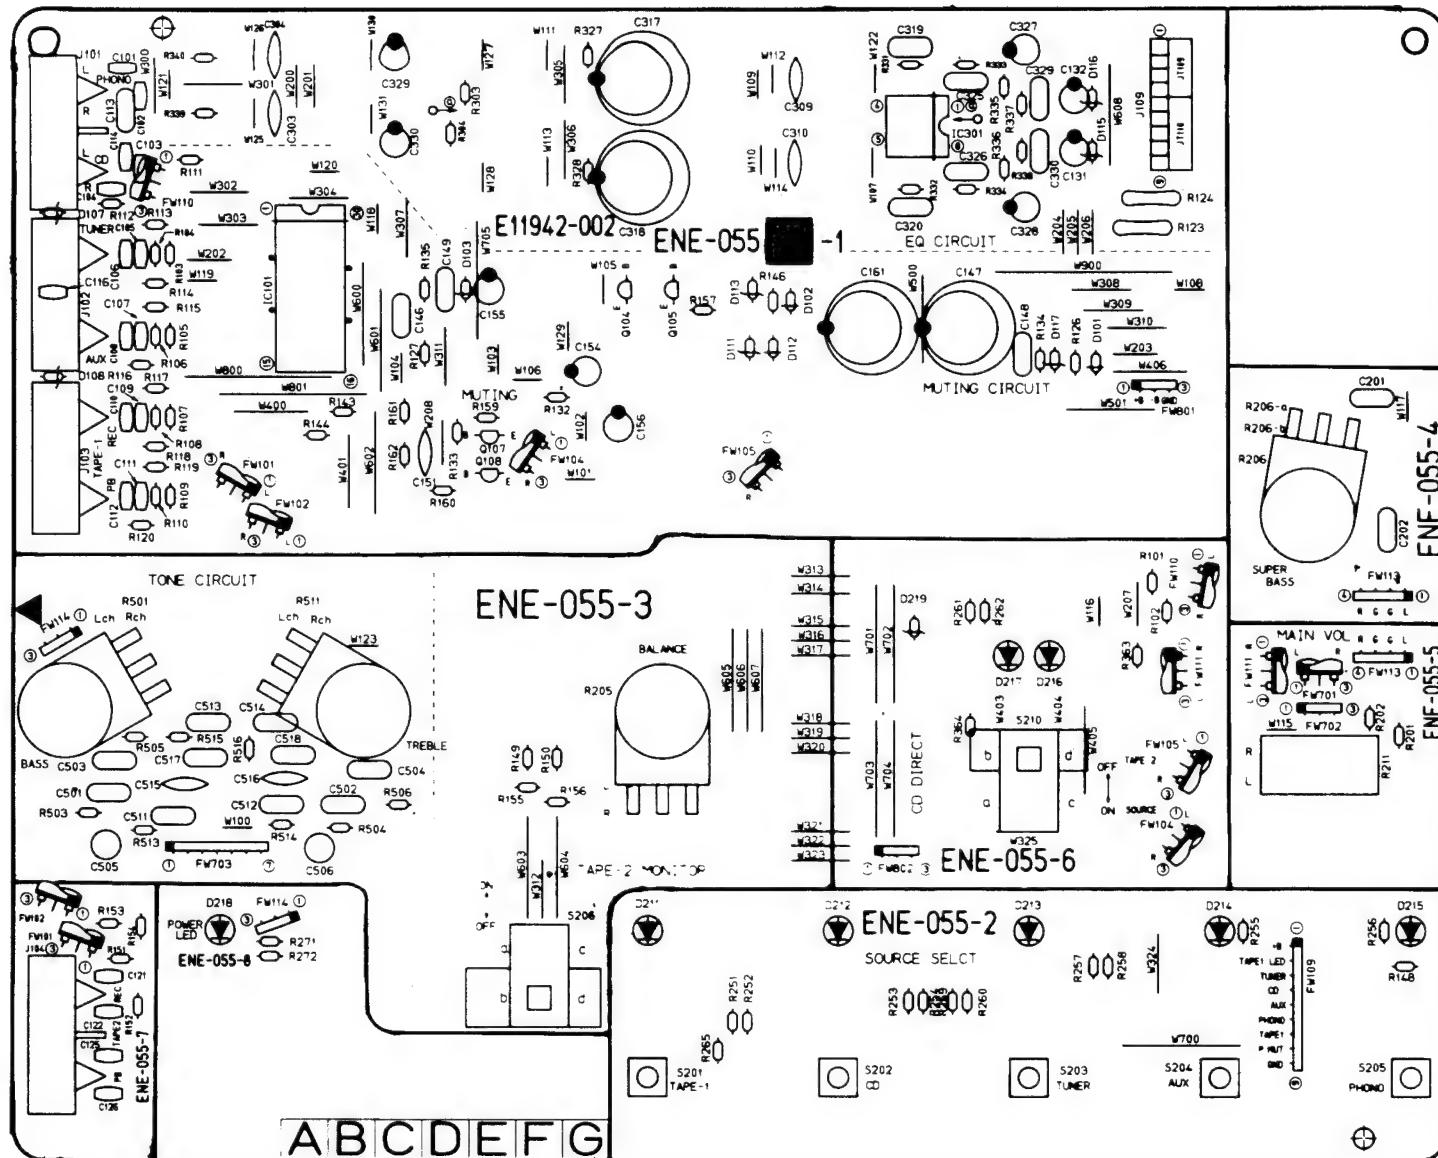

Transistors

△	ITEM	PART NUMBER	DESCRIPTION		AREA
			MAKER		
	Q104	DTC144ES	SILICON	ROHM	
	Q105	DTA144ES	SILICON	ROHM	
	Q107	ZSC3068	SILICON	SANYO	
	Q108	ZSC3068	SILICON	SANYO	

△ : SAFETY PARTS

I.C.s

△	ITEM	PART NUMBER	DESCRIPTION		AREA
			MAKER		
	IC101	LC7818	I.C.	SANYO	
	IC301	NJM4558D-D	I.C.		

△ : SAFETY PARTS

Diodes

△	ITEM	PART NUMBER	DESCRIPTION		AREA
			MAKER		
	D101	ISS133	SILICON	ROHM	
	D102	ISS133	SILICON	ROHM	
	D103	ISS133	SILICON	ROHM	
	D107	MTZ3.3JB	ZENER	ROHM	
	D108	MTZ3.3JB	ZENER	ROHM	
	D111	ISS133	SILICON	ROHM	
	D112	ISS133	SILICON	ROHM	
	D113	MTZ5.6JC	ZENER	ROHM	
	D115	MTZ13JC	ZENER	ROHM	
	D116	MTZ13JC	ZENER	ROHM	
	D117	MTZ6.8JC	ZENER	ROHM	
	D211	SLR-331VR50F070	L.E.D.	ROHM	
	D212	SLR-331DU50F070	L.E.D.	ROHM	
	D213	SLR-331DU50F070	L.E.D.	ROHM	
	D214	SLR-331DU50F070	L.E.D.	ROHM	
	D215	SLR-331DU50F070	L.E.D.	ROHM	
	D216	SLR-34YC50F165	L.E.D.	ROHM	
	D217	SLR-34YC50F165	L.E.D.	ROHM	
	D218	SLR-331DU70F070	L.E.D.	ROHM	
	D219	MTZ5.1JC	ZENER	ROHM	

△ : SAFETY PARTS

Capacitors

△	ITEM	PART NUMBER	DESCRIPTION		AREA
			MAKER		
	C101	QCBB1HK-221	220PF	50V CERAMIC	
	C102	QCBB1HK-221	220PF	50V CERAMIC	
	C103	QCBB1HK-471	470PF	50V CERAMIC	C
	C104	QCBB1HK-471	470PF	50V CERAMIC	C
	C105	QCBB1HK-221	220PF	50V CERAMIC	C
	C106	QCBB1HK-221	220PF	50V CERAMIC	C
	C107	QCBB1HK-221	220PF	50V CERAMIC	C
	C108	QCBB1HK-221	220PF	50V CERAMIC	C
	C109	QCBB1HK-221	220PF	50V CERAMIC	C
	C110	QCBB1HK-221	220PF	50V CERAMIC	C
	C111	QCBB1HK-221	220PF	50V CERAMIC	C
	C112	QCBB1HK-221	220PF	50V CERAMIC	C
	C113	QFN81HJ-103	0.01MF	50V MYLAR	
	C114	QCBB1EZ-223	0.022MF	25V CERAMIC	
	C121	QCBB1HK-221	220PF	50V CERAMIC	C
	C122	QCBB1HK-221	220PF	50V CERAMIC	C
	C125	QCBB1HK-221	220PF	50V CERAMIC	C
	C126	QCB1HK-221	220PF	50V CERAMIC	C
	C131	QETB1EM-107	100MF	25V ELECTRO	
	C132	QETB1EM-107	100MF	25V ELECTRO	
	C146	QFN81HJ-562	5600PF	50V MYLAR	
	C147	QETB0JM-228	2200MF	6.3V ELECTRO	
	C148	QFN81HJ-562	5600PF	50V MYLAR	
	C149	QFN81HK-473	0.047MF	50V MYLAR	
	C154	QETB1CM-107	100MF	16V ELECTRO	
	C155	QETB1HM-474	0.47MF	50V ELECTRO	
	C156	QETB1HM-475	4.7MF	50V ELECTRO	
	C201	QFV81HJ-104	0.1MF	50V T.FILM	
	C202	QFV81HJ-104	0.1MF	50V T.FILM	
	C303	QCS21HJ-331	330PF	50V CERAMIC	C
	C303	QCS21HJ-560	56PF	50V CERAMIC	A
	C303	QCS21HJ-560	56PF	50V CERAMIC	B
	C304	QCS21HJ-331	330PF	50V CERAMIC	C
	C304	QCS21HJ-560	56PF	50V CERAMIC	A
	C304	QCS21HJ-560	56PF	50V CERAMIC	B

Capacitors

△	ITEM	PART NUMBER	DESCRIPTION		AREA
			MAKER		
	C309	QCS21HJ-101	100PF	50V CERAMIC	
	C310	QCS21HJ-101	100PF	50V CERAMIC	
	C317	QETB1AM-107	100MF	10V ELECTRO	
	C318	QETB1AM-107	100MF	10V ELECTRO	
	C319	QFN81HJ-182	1800PF	50V MYLAR	
	C320	QFN81HJ-182	1800PF	50V MYLAR	
	C325	QFN81HJ-682	6800PF	50V MYLAR	
	C326	QFN81HJ-682	6800PF	50V MYLAR	
	C327	EETB2AM-106E	10MF	100V ELECTRO	
	C328	EETB2AM-106E	10MF	100V ELECTRO	
	C329	QFN81HJ-222	2200PF	50V MYLAR	C
	C330	QFN81HJ-222	2200PF	50V MYLAR	C
	C331	EETB2AM-106E	10MF	100V ELECTRO	C
	C332	EETB2AM-106E	10MF	100V ELECTRO	C
	C501	QFN81HK-153	0.015MF	50V MYLAR	
	C502	QFN81HK-153	0.015MF	50V MYLAR	
	C503	QFN81HK-823	0.082MF	50V MYLAR	
	C504	QFN81HK-823	0.082MF	50V MYLAR	
	C505	QEN51HM-475	4.7MF	50V NON POLE	
	C506	QEN51HM-475	4.7MF	50V NON POLE	
	C511	QFN81HK-332	3300PF	50V MYLAR	
	C512	QFN81HK-332	3300PF	50V MYLAR	
	C513	QFN81HK-183	0.018MF	50V MYLAR	
	C514	QFN81HK-183	0.018MF	50V MYLAR	
	C515	QCS21HJ-221	220PF	50V CERAMIC	
	C516	QCS21HJ-221	220PF	50V CERAMIC	
	C517	QFN81HK-122	1200PF	50V MYLAR	
	C518	QFN81HK-122	1200PF	50V MYLAR	

△ : SAFETY PARTS

Resistors

△	ITEM	PART NUMBER	DESCRIPTION		AREA
			MAKER		
	R101	QRD167J-105	1M	1/6W CARBON	
	R102	QRD167J-105	1M	1/6W CARBON	
	R103	QRD167J-105	1M	1/6W CARBON	
	R104	QRD167J-105	1M	1/6W CARBON	
	R105	QRD167J-105	1M	1/6W CARBON	
	R106	QRD167J-105	1M	1/6W CARBON	
	R107	QRD167J-105	1M	1/6W CARBON	
	R108	QRD167J-105	1M	1/6W CARBON	
	R109	QRD167J-105	1M	1/6W CARBON	
	R110	QRD167J-105	1M	1/6W CARBON	
	R111	QRD167J-471	470	1/6W CARBON	
	R112	QRD167J-471	470	1/6W CARBON	
	R113	QRD167J-471	470	1/6W CARBON	
	R114	QRD167J-471	470	1/6W CARBON	
	R115	QRD167J-471	470	1/6W CARBON	
	R116	QRD167J-471	470	1/6W CARBON	
	R117	QRD167J-471	470	1/6W CARBON	
	R118	QRD167J-471	470	1/6W CARBON	
	R119	QRD167J-471	470	1/6W CARBON	
	R120	QRD167J-471	470	1/6W CARBON	
	R123	QRZ0077-101	100	1/4W FUSIBLE	
	R124	QRZ0077-101	100	1/4W FUSIBLE	
	R126	QRD167J-104	100K	1/6W CARBON	
	R127	QRD167J-104	10K	1/6W CARBON	
	R132	QRD167J-103	10K	1/6W CARBON	
	R134	QRD167J-103	10K	1/6W CARBON	
	R135	QRD167J-474	470K	1/6W CARBON	
	R143	QRD167J-102	1K	1/6W CARBON	
	R144	QRD167J-102	1K	1/6W CARBON	
	R146	QRD167J-122	1.2K	1/6W CARBON	
	R149	QRD167J-471	470	1/6W CARBON	
	R150	QRD167J-471	470	1/6W CARBON	
	R151	QRD167J-105	1M	1/6W CARBON	
	R152	QRD167J-105	1M	1/6W CARBON	
	R153	QRD167J-471	470	1/6W CARBON	
	R154	QRD167J-471	470	1/6W CARBON	
	R155	QRD167J-105	1M	1/6W CARBON	
	R156	QRD167J-105	1M	1/6W CARBON	
	R157	QRD167J-102	1K	1/6W CARBON	
	R159	QRD167J-333	33K	1/6W CARBON	
	R160	QRD167J-333	33K	1/6W CARBON	
	R161	QRD167J-105	1M	1/6W CARBON	
	R162	QRD167J-105	1M	1/6W CARBON	
	R201	QRD167J-103	10K	1/6W CARBON	
	R202	QRD167J-103	10K	1/6W CARBON	
	R205	QVDB87M-EF5B	250K	VARIABLE	
	R206	QVDB87A-E24B	20K	VARIABLE	
	R211	QVD8A7B-AFSVA	250K	VARIABLE	
	R251	QRD167J-122	1.2K	1/6W CARBON	
	R252	QRD167J-122	1.2K	1/6W CARBON	
	R253	QRD167J-122	1.2K	1/6W CARBON	
	R254	QRD167J-122	1.2K	1/6W CARBON	
	R255	QRD167J-122	1.2K	1/6W CARBON	
	R256	QRD167J-122	1.2K	1/6W CARBON	
	R257	QRD167J-122	1.2K	1/6W CARBON	

△ : SAFETY PARTS

Resistors

ITEM	PART NUMBER	DESCRIPTION			AREA
R258	QRD167J-122	1.2K	1/6W	CARBON	
R259	QRD167J-122	1.2K	1/6W	CARBON	
R260	QRD167J-122	1.2K	1/6W	CARBON	
R261	QRD167J-122	1.2K	1/6W	CARBON	
R262	QRD167J-112	1.1K	1/6W	CARBON	
R265	QRD167J-104	100K	1/6W	CARBON	
R271	QRD167J-132	1.3K	1/6W	CARBON	
R272	QRD167J-152	1.5K	1/6W	CARBON	
R303	QRD167J-473	47K	1/6W	CARBON	
R304	QRD167J-473	47K	1/6W	CARBON	
R327	QRD167J-561	560	1/6W	CARBON	
R328	QRD167J-561	560	1/6W	CARBON	
R331	QRD167J-393	39K	1/6W	CARBON	
R332	QRD167J-393	39K	1/6W	CARBON	
R333	QRD167J-474	470K	1/6W	CARBON	
R334	QRD167J-474	470K	1/6W	CARBON	
R335	QRD167J-471	470	1/6W	CARBON	
R336	QRD167J-471	470	1/6W	CARBON	
R337	QRD167J-104	100K	1/6W	CARBON	
R338	QRD167J-104	100K	1/6W	CARBON	
R339	QRD167J-222	2.2K	1/6W	CARBON	
R340	QRD167J-222	2.2K	1/6W	CARBON	
R363	QRD167J-471	470	1/6W	CARBON	
R364	QRD167J-471	470	1/6W	CARBON	
R501	QVD887C-E15B	100K	VARIABLE		
R503	QRD167J-203	20K	1/6W	CARBON	
R504	QRD167J-203	20K	1/6W	CARBON	
R505	QRD167J-362	3.6K	1/6W	CARBON	
R506	QRD167J-362	3.6K	1/6W	CARBON	
R511	QVD887C-E15B	100K	VARIABLE		
R513	QRD167J-472	4.7K	1/6W	CARBON	
R514	QRD167J-472	4.7K	1/6W	CARBON	
R515	QRD167J-821	820	1/6W	CARBON	
R516	QRD167J-821	820	1/6W	CARBON	

△ : SAFETY PARTS


Others

ITEM	PART NUMBER	DESCRIPTION	AREA
J101	E11942-002	CIRCUIT BOARD	
J102	E305983-001	HOLDER	
J103	EMN00TV-405A	4P PIN JACK	
J104	EMN00TV-402A	4P PIN JACK	
S201	ESP0001-018	TACT SWITCH	
S202	ESP0001-018	TACT SWITCH	
S203	ESP0001-018	TACT SWITCH	
S204	ESP0001-018	TACT SWITCH	
S205	ESP0001-018	TACT SWITCH	
S206	QSTL101-E03	PUSH SWITCH	
S210	QSTL101-E04	PUSH SWITCH	
FW101	EWR23C-20NN	FLAT WIRE	
FW102	EWR23C-20NN	FLAT WIRE	
FW104	EWR23C-30NN	FLAT WIRE	
FW105	EWR23C-25NN	FLAT WIRE	
FW109	EWR39B-20KST	FLAT WIRE	
FW110	EWR23C-35NN	FLAT WIRE	
FW111	EWR23C-16NN	FLAT WIRE	
FW113	EWR34B-20SST	FLAT WIRE	
FW114	EWR33B-13SST	FLAT WIRE	
FW701	EWR23C-10JN	FLAT WIRE	
FW702	EWR33B-13KST	FLAT WIRE	
FW703	EWR37B-35KST	FLAT WIRE	
FW801	EWR33B-10KST	FLAT WIRE	
FW802	EWR33B-13KST	FLAT WIRE	
JT109	EMV7122-004	CONNECTOR	
JT110	EMV7122-005	CONNECTOR	

△ : SAFETY PARTS

■ TPS-318 A Voltage Selector PC Board Assy

(Except for Europe, Australia, West Germany, the U.K.)

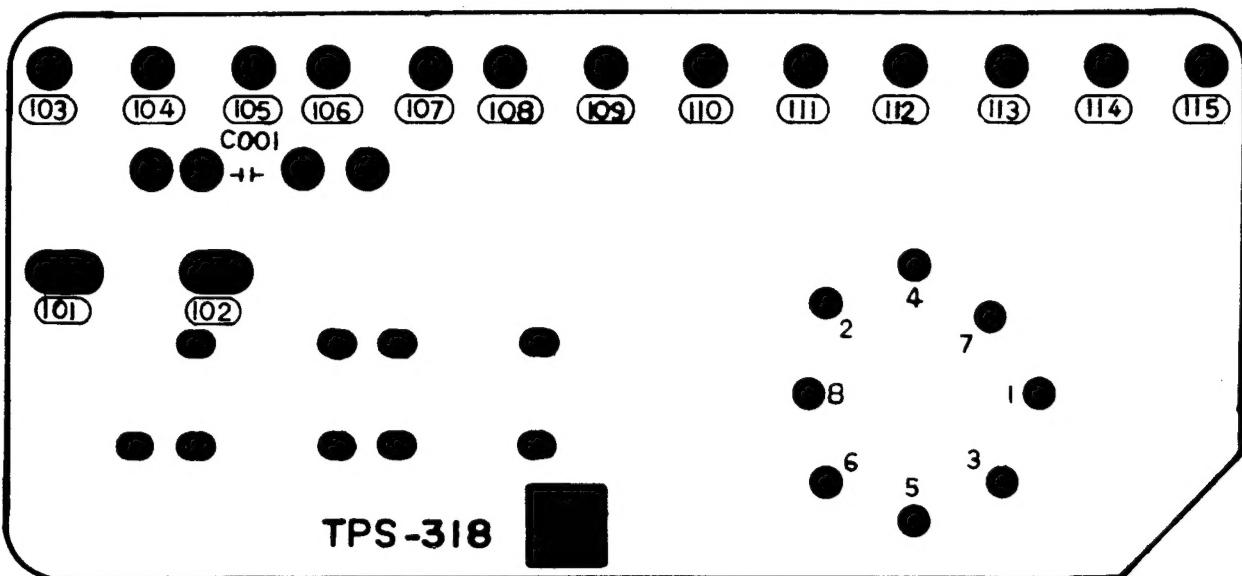

Capacitors

ITEM	PART NUMBER	DESCRIPTION			AREA
C001	QCZ9018-103	0.01MF		CERAMIC	

△ : SAFETY PARTS

Others

ITEM	PART NUMBER	DESCRIPTION	AREA
	E302057-002	CIRCUIT BOARD	
	E65508-002	TAB	
	E67764-302	WRAPPING TERMINAL	
	E67764-303	WRAPPING TERMINAL	
	E67764-304	WRAPPING TERMINAL	
▲	QMC0637-004	AC OUTLET	
▲	QSR0085-006U	VOLTAGE SELECTOR	

△ : SAFETY PARTS

Accessories List

⚠	Part Number	Part Name	Q'ty	Description	Areas
	E30580-1517A E30580-1517ABS BT20029C BT20060 BT-20064A	Instruction Book Instruction Book Warranty Card Warranty Card Warranty Card	1 1 1 1 1	for Australia	except BS BS A BS G
⚠	BT20066A BT20098 QZL1008-001 E43486-340A E04056	EEC Agency Audio Warranty Card FTZ Information Sheet Safety Sheet Siemens Plug	1 1 1 1 1	for New Zealand	G, BS A G BS U
	E41202-2 E41202-2B	Envelope Envelope	1 1		except BS BS

⚠: Safety Parts

The Marks for Designated Areas

- | | | | |
|-------------|--------------------|-------------------------------------|-----------------|
| E, EF | Continental Europe | BS | the U.K. |
| G | West Germany | U | Other Countries |
| A | Australia | No mark indicates all areas. | |

Packing Materials and Part Numbers

