

# KODAK PIXPRO AZ901

DIGITAL CAMERA

## User Manual



# BEFORE YOU START

## **Declaration of Conformity**

Responsible Party: JK Imaging Ltd.

Address: JK Imaging Ltd., 17239 So. Main Street, Gardena, CA 90248 USA

Company Website: [kodakpixpro.com](http://kodakpixpro.com)

## **INDUSTRY CANADA**

This device complies with Canadian RSS-210.

This device complies with Industry Canada license-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## **Radiation Exposure Statement:**

This product complies with the Canadian portable RF exposure limit set forth for an uncontrolled environment and is safe for intended operation as described in this manual. Additional RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

## **NEW CAMERA OWNER / IMPORTANT INFORMATION**

Thank you for purchasing your new **KODAK PIXPRO AZ901 Astro Zoom** camera. In an effort to provide you with the most up to date benefits and features of the AZ901, **we strongly encourage you to register your new camera on our website:**

**<https://kodakpixpro.com/support/product-registration>**

Doing so will keep you informed of important updates, including firmware, features and other important information that pertain to the AZ901. Your information is always kept secure, is encrypted and is never sold, shared or used for any purposes other than for AZ901 camera specific notifications, unless you opt-in to receive other types of communications during the registration process.

## For Customers in Europe



This symbol [crossed-out wheel bin WEEE Annex IV] indicates separate collection of electrical waste and electronic equipment in the European countries. Please do not throw the equipment into domestic refuse. Please use the return and collection systems available in your country for proper, safe disposal of this product.



"CE" mark indicates that this product complies with the European requirements for safety, health, environment and customer protection. "CE" marked cameras are intended for sales in Europe.

Europe – EU Declaration of Conformity

This device complies with the essential requirements of the RED Directive 2014/53/EU. The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the RED Directive 2014/53/EU:

- EN 62368-1:2014/A11:2017

Safety of Information Technology Equipment

- EN 50566:2017

Product standard to demonstrate compliance of radio frequency fields from handheld and body-mounted wireless communication devices used by the general public (30 MHz — 6 GHz)

- EN 62209-2:2010/A1:2019

Human exposure to radio frequency fields from handheld and body-mounted wireless communication devices — Human models, instrumentation, and procedures

Part 2: Procedure to determine the specific absorption rate (SAR) for wireless communication devices used in close proximity to the human body (frequency range of 30 MHz to 6 GHz)

- EN 300 328 V2.2.2 (2019-07)

Wideband transmission systems; Data transmission equipment operating in the 2.4 GHz ISM band and using wide band modulation techniques

- EN 301 489-1 V2.2.3 (2019-11)

Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements

- EN 301 489 -17 V3.2.4 (2020-09)

Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment; Part 17: Specific conditions for Broadband Data Transmission Systems

### **For SAR statement**

A minimum separation distance of XX cm must be maintained between the user's body and the device, including the antenna during body-worn operation to comply with the RF exposure requirements in Europe.

To compliance with RF Exposure requirements in Europe, third-party belt-clips, holsters or similar accessories used by this device should not contain any metallic components. The use of accessories that do not satisfy these requirements may not comply with RF exposure requirements, and should be avoided.

Hereby, Sintai Optical (Shenzhen) Co., Ltd, declares that this PIXPRO AZ901 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Manufacturer: Sintai Optical (Shenzhen) Co., Ltd

Address: Qiwei Ind Sec, 1st, 2nd,& 3RD Bldg, Lisonglang Village, Gongming Town, Bao'an District, Shenzhen, Guangdong, China



Batteries: Please dispose of used batteries at designated collection centers.



Packaging: Please follow local regulations for the recycling of packaging.

## **For Customers in the U.S.A.**

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### **Radiation Exposure Statement:**

This product complies with the FCC portable RF exposure limit set forth for an uncontrolled environment and is safe for intended operation as described in this manual. Additional RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

## About this Manual

Thank you for purchasing this KODAK PIXPRO Digital Camera. Please read this manual carefully and keep it in a safe place for future reference.

- JK Imaging Ltd. reserves all rights of this document. No part of this published manual may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form, by any means, without the prior written permission of JK Imaging Ltd..
- All trademarks mentioned in this manual are used for identification purposes only and are properties of their respective owners.
- This manual will instruct you on how to operate the KODAK PIXPRO Digital Camera. JK Imaging Ltd. has tried its utmost to ensure the correctness of the user manual contents, but reserves the right to modify as necessary. All of these contents are subject to change without prior notice.
- Throughout this manual, the following symbols are used to help you locate information quickly and easily:



Indicates useful information.

- In the instructions below, the following symbols may be used throughout this manual on how to operate the camera. This is to facilitate better understanding.  
「Item properties」: The optional properties in the camera interface are indicated by the symbol「」.

# SAFETY NOTES

## **Safety notes for this camera**

- Do not drop the camera or allow it to hit solid objects.
- Do not attempt to disassemble or repair the camera.
- Do not use or store the camera in dusty places or on a beach to prevent dust or sand from entering the camera, causing possible damage to it.
- Do not use or store the camera in a hot environment or under direct sunlight.
- Do not use or store the camera near a powerful magnetic field, for example near a magnet or transformer.
- Avoid touching the lens of the camera.
- Do not expose the camera to direct sunlight for a long period of time.
- To prevent the camera from being damaged by moisture, do not use or store the camera in very humid environments, such as in rain or near bodies of water.
- If water accidentally comes in contact with the camera, turn the camera off, remove the battery and the memory card, and dry it within 24 hours.
- When you take the camera from a cold place to a warmer environment, condensation may occur. Please wait for a reasonable period of time before you turn it on.
- Before you remove the battery and memory card, the camera should be turned off.
- When you clean the body of the camera, do not use abrasive, alcohol-based or organic cleaner.
- Use a professional lens wiping cloth and dedicated cleaner to wipe and clean the lens.
- Download your photos and remove the memory card when you are going to store the camera for a long period of time.
- If this camera is not in use for a long time, please keep it in a dry and clean condition.
- Our company will not pay compensation for any failure of playback of pictures or videos caused by improper operation.

## **Safety notes for battery**

- Please use a battery that is the same type as the one included.
- Please use the attached charger to charge the battery.
- If battery fluid leaks inside the camera, contact our customer service department. If battery fluid leaks onto your skin, rinse your skin with clean water and seek immediate medical attention.
- Disposal of used batteries should be carried out in accordance with the local (national or regional) regulations.
- To prevent the battery from being damaged, do not drop the battery or allow it to hit solid objects or to be scratched by the objects.
- Do not let the battery come in contact with metal objects (including coins) to avoid short circuiting, discharging, excessive heat, or possible leakage.
- Do not attempt to disassemble the battery.
- Do not expose the battery to water. Always keep the battery contacts dry.
- Do not heat the battery or throw it into a fire to avoid a possible explosion.
- Do not store the battery in a hot environment or in direct sunlight.
- If the battery overheats during charging or use, stop charging or use immediately. Turn off the product, remove the battery carefully, and wait until it cools down.
- When the camera is stored for a long period of time, remove the battery and keep it in a dry place that is not accessible to infants and children.
- In a colder environment, the performance of the battery could be noticeably reduced.
- When you install the battery, install it according to the positive and negative markings on the battery compartment. Never force it into the battery compartment.

### **Safety notes for memory card**

- We suggest buying only well-known, name brand memory cards to ensure peak performance.
- Format the memory card using the camera before you use it or insert a new one.
- Do not drop the memory card or allow it to hit solid objects to avoid damaging it.
- Do not attempt to disassemble or repair the memory card.
- Do not expose the memory card to water. Always keep it dry.
- Do not remove the memory card when the camera is turned on. Otherwise, the memory card could be damaged.
- Do not directly edit the data on the memory card. Copy the data to your PC before you edit them.
- When the camera is stored for a long period of time, be sure to download your photos and remove the memory card. Store it in a dry environment.
- Do not modify the name of the files or folders of the memory card using your PC. Modifying the file names may cause the files to not be recognized on the camera or a possible error may occur.
- A photo taken with the camera will be stored in the folder that is automatically generated on the memory card. Do not store photos that are not taken using this camera in these folders as the pictures cannot be recognized during the playback.
- When you insert a memory card, make sure the notch of the card matches the markings on the top of the card slot.

## Other Safety Notes

- Do not disconnect the power or turn the camera off during the update process. Doing so may cause incorrect data to be written and the camera may not power on later.
- Do not hang the neck strap of the camera around the neck of a child.
- When using your camera on an airplane, observe the relevant rules specified by the airline.
- Due to the limitations of manufacturing technology, the LCD may have a few dead or bright pixels. These pixels do no effect the quality or performance of the camera, photos or video.
- Do not expose the LCD to water. In a humid environment, only wipe it with a soft and dry cleaning cloth.
- If the LCD screen is damaged, pay particular attention to the liquid crystal in the screen. If any of the following situations arise, immediately take the steps listed below:
  1. If liquid crystal comes in contact with your skin, please wipe with a dry cloth, wash thoroughly with soap, and rinse with plenty of clean water.
  2. If liquid crystal gets into your eye, flush the eye immediately with plenty of clean water for at least 15 minutes and then seek medical assistance.
  3. If liquid crystal is swallowed, immediately rinse your mouth thoroughly with clean water and induce vomiting. Seek medical assistance.

## Trademark Information

- The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



## WARNING

- Altering, tampering or modifying the any parts of AZ901 camera are unauthorized and will void the manufacturer's warranty and "could" void Federal and/or State Compliance.

# CONTENTS

|                                                    |           |
|----------------------------------------------------|-----------|
| <b>BEFORE YOU START .....</b>                      | <b>1</b>  |
| <b>SAFETY NOTES .....</b>                          | <b>6</b>  |
| <b>CONTENTS.....</b>                               | <b>10</b> |
| <b>GETTING READY .....</b>                         | <b>14</b> |
| Accessories Included .....                         | 14        |
| Install lens cap and neck strap .....              | 15        |
| Part Names .....                                   | 16        |
| Installing Battery and Memory Card.....            | 19        |
| Charging Battery .....                             | 21        |
| Vari-angle LCD .....                               | 22        |
| Turning Camera On and Off .....                    | 23        |
| Set your Language, Date/Time .....                 | 24        |
| <b>MODE OVERVIEW .....</b>                         | <b>27</b> |
| LCD Display.....                                   | 27        |
| Overview of the Screen Icons in Shooting Mode..... | 27        |
| Overview of the Screen Icons in Movie Mode.....    | 29        |

|                                                     |    |
|-----------------------------------------------------|----|
| Overview of the Screen Icons in Playback Mode ..... | 30 |
| How to take pictures .....                          | 31 |
| Using the Mode Dial .....                           | 32 |

## **BASIC OPERATION ..... 51**

|                                               |    |
|-----------------------------------------------|----|
| Using EVF (Electronic View Finder) .....      | 51 |
| Using the Zoom Function.....                  | 52 |
| Display Setting .....                         | 53 |
| AF Area .....                                 | 55 |
| Macro Mode.....                               | 56 |
| Self-timer Mode .....                         | 57 |
| Flash Mode .....                              | 58 |
| WB (White Balance) Mode .....                 | 60 |
| Continuous Shot Mode .....                    | 62 |
| Exposure Compensation Functions Setting ..... | 64 |
| Using Quick Recording .....                   | 66 |
| i Button Function Menu.....                   | 67 |
| Using the Lens Function Ring.....             | 68 |

## **PLAYBACK..... 71**

|                                                     |    |
|-----------------------------------------------------|----|
| Viewing Photos and Videos .....                     | 71 |
| Thumbnail View .....                                | 72 |
| Using Zoom Playback (for still pictures only) ..... | 73 |
| Continuous Shot Group Playback .....                | 74 |
| Animation panorama play .....                       | 75 |
| Slideshow .....                                     | 76 |
| Photos and Video Deletion .....                     | 77 |

## **USING THE MENUS..... 78**

|                         |     |
|-------------------------|-----|
| Shooting Menu .....     | 78  |
| Shoot Setting1 .....    | 81  |
| Shoot Setting 2.....    | 87  |
| Playback Menu .....     | 92  |
| Playback Settings ..... | 97  |
| General Settings.....   | 101 |
| File Settings.....      | 104 |
| Format .....            | 105 |

|                      |     |
|----------------------|-----|
| Copy to Card .....   | 106 |
| File Numbering.....  | 106 |
| Reset Settings ..... | 106 |
| Version.....         | 107 |

## **CONNECTION SETTINGS ..... 108**

|                                                     |     |
|-----------------------------------------------------|-----|
| Connecting to a Computer .....                      | 108 |
| Connecting to a PictBridge Compatible Printer ..... | 110 |
| Using the PictBridge Menu .....                     | 112 |
| Video System .....                                  | 116 |
| Supported HDMI Connections .....                    | 117 |
| HDMI CEC Control.....                               | 118 |
| Set Eye-Fi SD Card Connection Mode.....             | 123 |

 
## **APPENDICES ..... 124**

|                                    |     |
|------------------------------------|-----|
| Product Specifications.....        | 124 |
| Prompts and Warning Messages ..... | 128 |
| Troubleshooting .....              | 133 |


# GETTING READY

## Accessories Included


Your camera box should contain the camera model you purchased along with the following accessories. If anything is missing or appears to be damaged, please contact your retailer. (Based on sales in different countries or regions, the shape of the AC adapter will vary. Please subject to the actual product will prevail.)



Rechargeable  
Li-ion battery

 


AC adapter

 


Micro USB cable



Neck strap

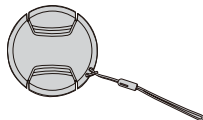

Lens cap with strap

 


Quick start guide



Warranty card




 Service card




CD-ROM


## Install lens cap and neck strap

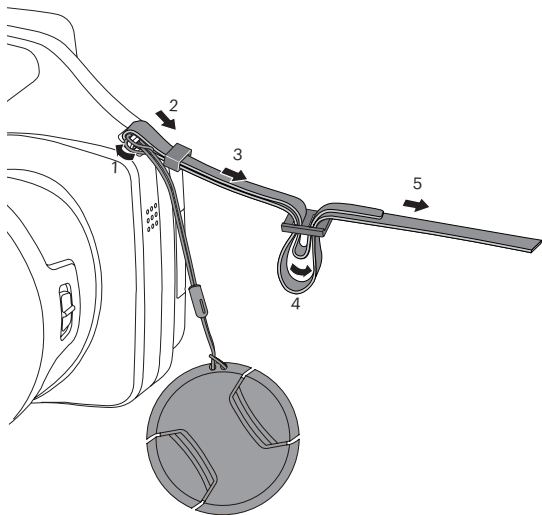

## Part Names

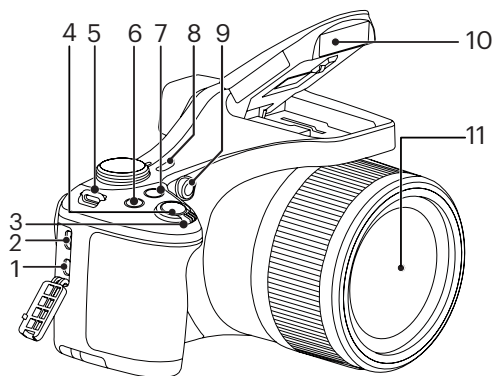


1. Micro HDMI port
2. Micro USB port
3. Zoom lever
4. Shutter button
5. Strap eyelet
6.  Exposure compensation button
7.  Continuous shot button
8. Power button
9. AF assist beam/Self-timer lamp
10. Flash lamp
11. Lens

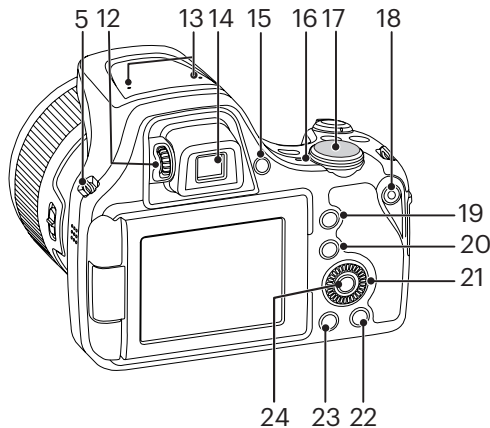


- 12. Diopter adjustment knob
- 13. Microphone
- 14. Electronic view finder (EVF)
- 15. EVF / LCD switch button
- 16. Indicator lamp
- 17. Mode dial
- 18. Fast video recording button
- 19. i button
- 20. Menu button
- 21. Jog dial
- [ **AF** ] AF button/Up button
- [ ] Delete button/Self-timer button/Down button
- [ ] Macro button/Left button
- [ ] Flash button/Right button
- 22. Display button
- 23. Playback button
- 24. SET button



Rolling the jog dial can be for fast selection instead of pressing the up/down/left/right button.

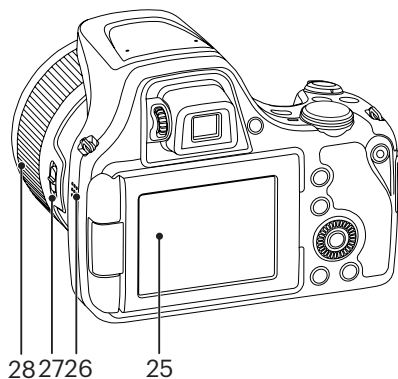


- 25. Vari-angle LCD
- 26. Speaker
- 27. Lens function ring lever
- 28. Lens function ring

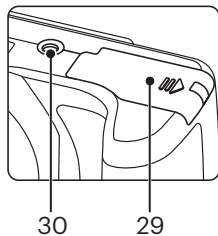


- 29. Battery cover
- 30. Tripod socket

## Installing Battery and Memory Card

1. Open the battery cover.

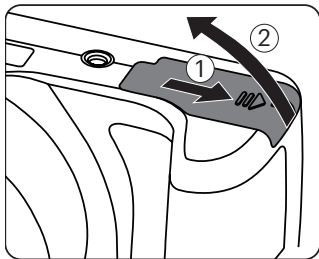


2. Insert the battery into the battery compartment according to the negative and positive directions as illustrated in the picture. Push the battery down until it locks in place.

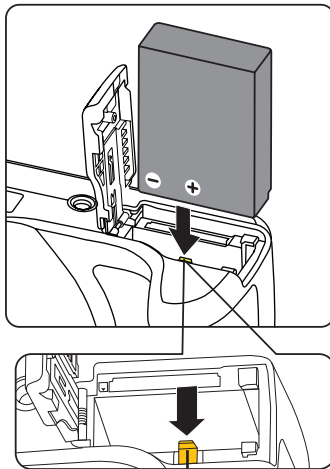


Battery lock knob

3. Insert the memory card into the memory card slot as shown in the diagram.

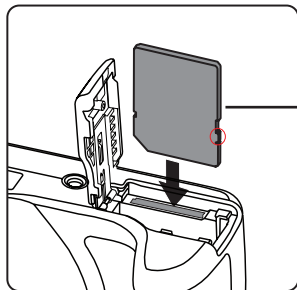

Write protection buckle

4. Close the battery cover.

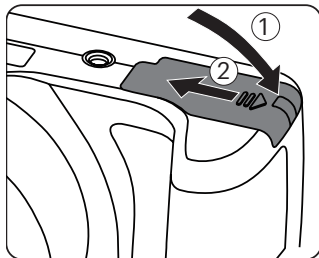

-  The memory card (SD/SDHC) is optional and not included in all camera packaging. It needs to be purchased separately. Please use an original memory card which is Class 4 or higher and has a capacity of 4GB to 32GB.
-  To remove your memory card, open the battery cover, gently press the memory card to eject it and remove it carefully.

## Charging Battery



Please insert the battery and charge it under shutdown mode.

1. Connect the camera and the power charger using the supplied Micro USB cable.
2. Insert the plug of the power charger into the power outlet to charge the battery.

 After the battery is stored for a long period of time, use the supplied power charger to charge the battery prior to use.


 Charging indicator:  
Steady orange: Charging  
Steady green: Charging complete  
To have maximum battery life, charge the battery for at least 4 hours the first time.

 Please charge the battery indoors between 0°C and 40°C.

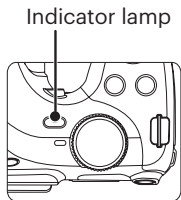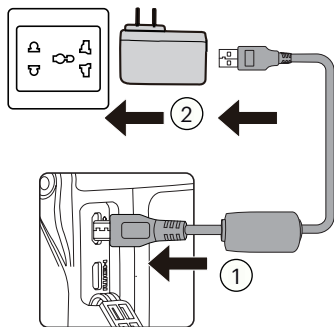

## Vari-angle LCD

The LCD is housed in the camera's body. You may follow the directions shown below to move it as needed:

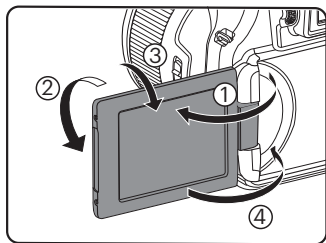

1. Turn on the LCD along the direction shown by arrow ①.
2. Available to rotate 180° along the direction shown by arrow ②.
3. Available to rotate 90° along the direction shown by arrow ③.
4. Turn off the LCD along the direction shown by arrow ④.




Please don't rotate the LCD with excessive force to prevent damages.



Please turn off the LCD along the direction shown by arrow ④ after use to protect it from scratches.

## Turning Camera On and Off

Press the power button to turn the camera on. To turn the camera off, press the power button again.

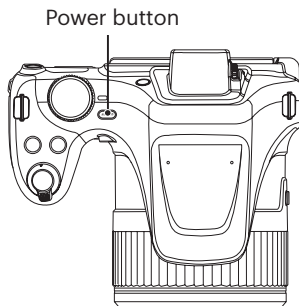


When the power is off, press and hold the  button to power on and enter playback mode.

## Set your Language, Date/Time

### Set your Language, Date/Time after the first power-on


1. When you turn the camera on for the first time, the language selection screen appears.
2. Press the [ **▲AF** ]/[ **▼**   ] button to select your desired language.
3. After you press the  button to confirm the selection, the Date/Time settings screen appears.
4. Press the [ **◀**  ]/[ **▶**  ] button to select the Date/Time to be adjusted: Time is displayed in YYYY.MM.DD HH:MM.
5. Press the [ **▲AF** ]/[ **▼**   ] button to adjust the value for the selected Date/Time.
6. Press the  button to confirm the time settings and the shooting screen appears.

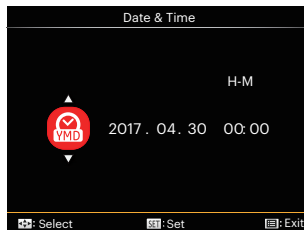

## Resetting your Language

After you set your language for the first time, follow the instructions below to reset your language.



1. Press the  button, press the [  **AF** ]/[    ] button to select , and press the  button to enter the menu.
2. Press the [   ]/[   ] button to select .
3. Press the [  **AF** ]/[    ] button to select 「Language」 and press the  button to enter the menu.
4. Press the [  **AF** ]/[    ] button to select your desired language and press the  button to confirm.
5. Press the  button and the shooting screen appears.

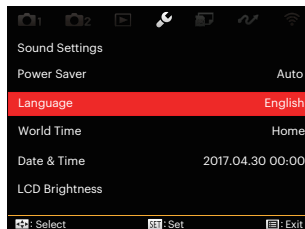

## Resetting Date/Time

After you set your Date/Time for the first time, follow the instructions below to reset date and time.


1. Press the  button, press the [  **AF** ]/[    ] button to select , and press the  button to enter the menu.
2. Press the [   ]/[   ] button to select .
3. Press the [  **AF** ]/[    ] button to select 「Date & Time」 and press the  button to enter the menu.
4. Press the [   ]/[   ] button to select the Date/Time to be adjusted: Time is displayed in YYYY.MM.DD HH:MM.
5. Press the [  **AF** ]/[    ] button to press the value for your selected block. After you finish your settings, press the  button to confirm.
6. Press the  button and the shooting screen appears.

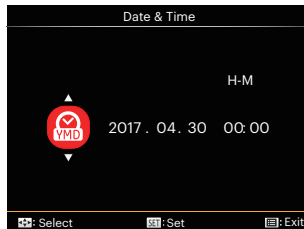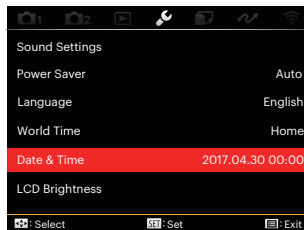


# MODE OVERVIEW

## LCD Display

### Overview of the Screen Icons in Shooting Mode

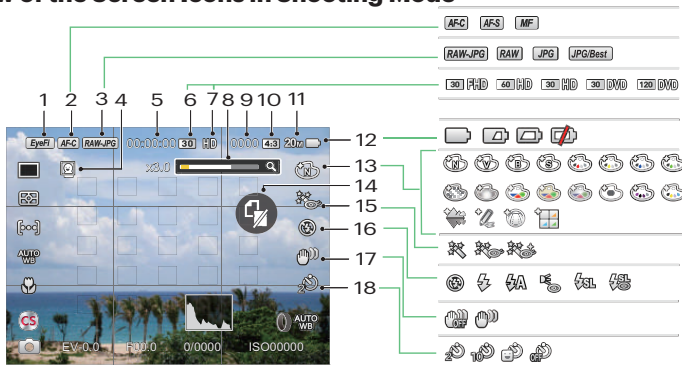


|   |                         |    |                                         |    |                |
|---|-------------------------|----|-----------------------------------------|----|----------------|
| 1 | Eye-Fi ON (with signal) | 7  | Video Pixels                            | 13 | Color Effect   |
| 2 | Focus Mode              | 8  | Zoom Display(By turning the Zoom Lever) | 14 | No Memory Card |
| 3 | Quality                 | 9  | Number of Pictures in Static Mode       | 15 | Beautifier     |
| 4 | Face Detection          | 10 | Ratio of Shooting Pixels                | 16 | Flash Mode     |
| 5 | Maximum Record Time     | 11 | Image Size                              | 17 | OIS            |
| 6 | Recording Speed (fps)   | 12 | Battery Status                          | 18 | Self-timer     |

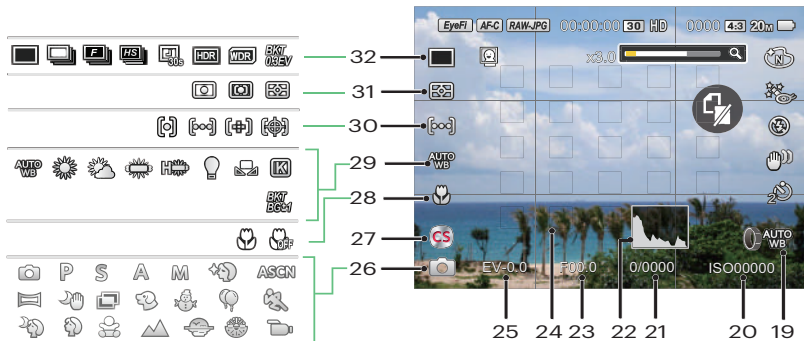


|    |                                    |    |                             |    |                                                      |
|----|------------------------------------|----|-----------------------------|----|------------------------------------------------------|
| 19 | Lens Function Ring Custom Settings | 24 | Focus Frame                 | 29 | White Balance                                        |
| 20 | ISO Value                          | 25 | Exposure Compensation Value | 30 | AF Area                                              |
| 21 | Shutter Speed                      | 26 | Shooting Mode               | 31 | Expo Metering                                        |
| 22 | Histogram                          | 27 | Custom Settings             | 32 | Single / Continuous Shot / HDR / WDR / AE Bracketing |
| 23 | Aperture Value                     | 28 | Macro Mode                  |    |                                                      |

## Overview of the Screen Icons in Movie Mode

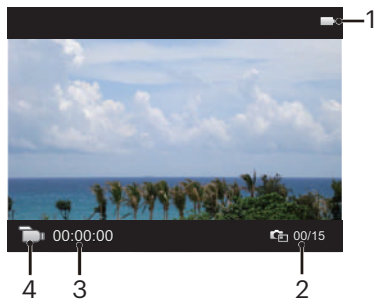


|   |                           |
|---|---------------------------|
| 1 | Battery Status            |
| 2 | Number of Videos Captured |
| 3 | Continuous Recording Time |
| 4 | Movie Mode                |

## Overview of the Screen Icons in Playback Mode

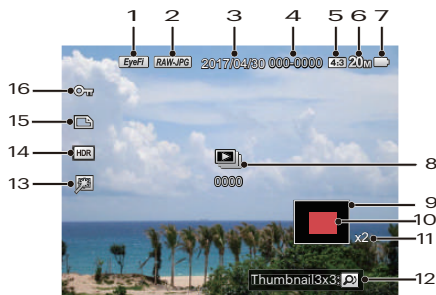

|   |                                |    |                         |
|---|--------------------------------|----|-------------------------|
| 1 | Eye-Fi ON (with signal)        | 9  | Image Area              |
| 2 | Quality                        | 10 | Zoom Magnification Area |
| 3 | Capture Date                   | 11 | Image Zoom Ratio        |
| 4 | File Name                      | 12 | Index Prompt            |
| 5 | Shooting Pixel Ratio           | 13 | Touch-up                |
| 6 | Image Size                     | 14 | HDR                     |
| 7 | Battery Status                 | 15 | DPOF File Icon          |
| 8 | Continuous Shot Group Playback | 16 | File Protection Icon    |

## How to take pictures

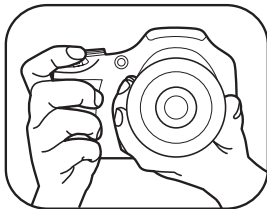

1. Hold the camera with both hands as shown in the figure, not blocking the flash and lens by fingers.
2. Aim the camera at the object and then frame with the LCD.
3. Use the zoom lever to select Tele or Wide positions to zoom in or out on your subject.
4. Press the shutter button half way to focus on the subject. When the focus frame turns green, press the shutter button completely down to take the picture.

## Using the Mode Dial

This camera provides a convenient mode dial that allows you to manually switch between different modes with ease. The available modes are listed below:

| Mode Name         | Icon                                                                              | Description                                                                                                                                                                                                                                        |
|-------------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Auto Mode         |  | In this mode, the optimal conditions for taking pictures will be set based on the subject and environment. It is the most commonly used mode for taking pictures.                                                                                  |
| Program AE        | <b>P</b>                                                                          | Under different scenes, the user can switch the ISO and EV value according to personal preference, the camera can automatically set the shutter speed and aperture value.                                                                          |
| Shutter priority  | <b>S</b>                                                                          | Setting allows you to adjust the shutter speed / EV value and ISO value. The camera automatically sets the aperture value based on the shutter speed and ISO value to get the most appropriate exposure value.                                     |
| Aperture priority | <b>A</b>                                                                          | In this mode, you can adjusting the aperture size, EV and ISO values. The large aperture is to highlight the object focused through blurring the background, while the small aperture is for clear focusing on both the background and the object. |

|                 |                                                                                   |                                                                                                                    |
|-----------------|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| Manual Mode     | <b>M</b>                                                                          | This mode is for manually setting the aperture, shutter speed and ISO value.                                       |
| Face Beautifier |  | This mode automatically enhances facial features with skin softening touches and eye brightening capabilities.     |
| Wi-Fi Mode      |  | Enable image transmission and remote control by connecting smart device with Wi-Fi.                                |
| Scene Mode      | <b>SCN</b>                                                                        | Choose from 14 different pre-set scene types and effects for your photos.                                          |
| Movie Mode      |  | Record videos.                                                                                                     |
| Custom Settings | <b>CS</b>                                                                         | The user can store frequently used shooting modes and parameters. Switching to this mode enables quick adjustment. |


Please refer to the table below if any nonadjustable options in **PSAM** mode:  
(O: Optional X: Not optional)

| Options<br>Mode | Aperture       | Shutter        | EV             | ISO |
|-----------------|----------------|----------------|----------------|-----|
| <b>P</b>        | X<br>(Display) | X<br>(Display) | O              | O   |
| <b>S</b>        | X<br>(Display) | O              | O              | O   |
| <b>A</b>        | O              | X<br>(Display) | O              | O   |
| <b>M</b>        | O              | O              | X<br>(Display) | O   |

1. Turn the mode dial to select the **PSA M** mode you want.
2. Press the  button to configure settings.
3. Press the []/[] button to select an adjustment setting.
4. Press the [ **AF**]/[] button to adjust the parameters.
5. Press the  button to confirm the settings and enter the shooting screen.

## Face Beautifier

1. Turn the mode dial to select face beautifier mode (  ).
2. Press the  button and press the [  **AF** ]/[   ] button to select  .
3. Press the [   ]/[   ] button or rolling the  jog dial to select an option and press the  button to confirm and enter the shooting screen.

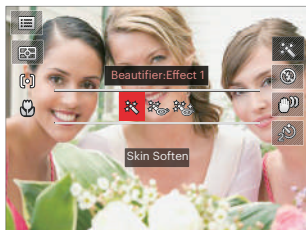

-  Effect 1: Skin Soften
-  Effect 2: Skin Soften + Eye Brightening
-  Effect 3: Skin Soften + Eye Brightening + Eye Enlargement

## Wi-Fi Mode

Enable image transmission and remote control by connecting smart device with Wi-Fi.

Matters needing attention before use:


- Your smart device operating system version needs to be iOS 14 or higher, or Android 8.0 or higher. If not, please upgrade your smart device before using the App.
- Please do not use in places having high intensity magnetic field, electrostatic and electric wave interference (for example near a microwave oven), which may cause failure in receiving signals.
- To maintain a connection, please keep the camera within 10 meters (32.8 feet) without signal shielding interference.
- Please do not use Wi-Fi connection functionality on a plane.
- The camera and the smart device can only be connected one to one.

## Downloading the App package:

Download a dedicated installation package from the application store (App name: PIXPRO Remote Viewer  ) and then install it.

- Android devices : Search and download the App “PIXPRO Remote Viewer”  in Google play, and install it following the instructions on the interface.
- iOS devices : Search and download the App “PIXPRO Remote Viewer”  in App store, and install it following the instructions on the interface.

Rotate the mode dial to  and then enter the Wi-Fi® selection interface.

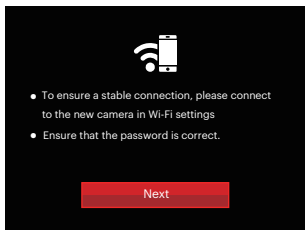


- Next: Enter the SSID interface.



Rotate the mode dial to disconnect.

### Settings of Camera:

Press the [  **AF** ]/[    ] button to select options to be adjusted, and press the  button to enter the option setting interface.

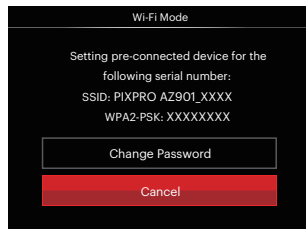

- Change Password: Enter the WPA2 PSK password refresh interface.

Yes: Create a new WPA2 PSK password.

No: Back to previous page.

- Cancel: Back to previous page.

### Settings of Smart Device:

1. Enable the Wi-Fi® of smart device and then search surrounding wireless devices.
2. Select the name of camera SSID to be connected and then input the eight-digit number password after WPA2-PSK on the camera.
3. Click the icon of the PIXPRO Remote Viewer App  to enable the App.

### Set up completion:


Once the App is connected to the camera, functional operation can be enabled on the smart device.




Every AZ901 camera is shipped with a default factory Wi-Fi® password that is randomized and unique to that camera and will not change unless you wish to reset the password with a new randomly generated password. If you wish to change the Wi-Fi® password in your AZ901 from the assigned, unique factory password, you can do so by selecting and using the refresh setting. If “refresh” is selected, a new random password will be generated and saved in the camera until changed or if you use the “Reset” function. If you reset your AZ901 to the factory settings, then the initial, randomly factory assigned and unique Wi-Fi® password will be restored to your camera. (Please refer to Reset instructions on page 106).

## Display of Wi-Fi Connection Status:

The Wi-Fi has successfully connected but App is not enabled.

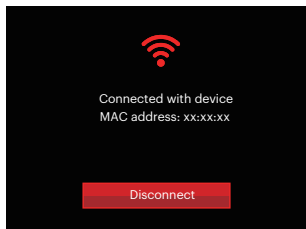

The Wi-Fi has successfully connected and App is enabled.

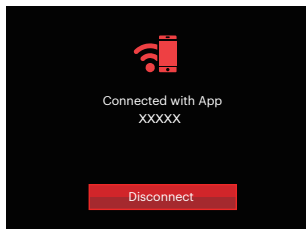


## For interrupting the connection:



- No: Keep Wi-Fi connected and back to previous page.
- Yes: Disconnect and back to Wi-Fi connection screen.

## The Wi-Fi of smart device interrupts:

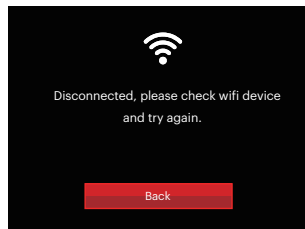


- Back: Back to the SSID interface.

## Setting

The name of this camera can be changed under Wi-Fi® settings.


1. In other modes, press the  button and press the up/down button to select . Press the  button to enter the menu.
2. Press the [ ]/[ ] button to select  and press the  button or right arrow button to enter the menu.
3. Press the [ **AF**]/[  ] button to select options to be adjusted and then press the  button to enter the menu.

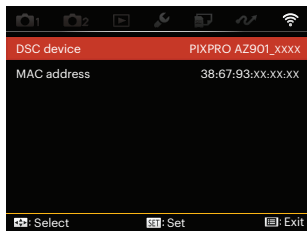

4. Press the  button to confirm settings and then skip the menu.

## DSC Device

The default name of DSC device is「PIXPRO AZ901\_XXXX」. Change the name of DSC device through key stroking.

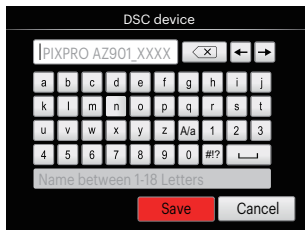

Meanings of Interface Icons:

| Icon                                                                              | Description                                            |
|-----------------------------------------------------------------------------------|--------------------------------------------------------|
|  | Delete the last letter                                 |
|  | Switch the display of letters in capital and lowercase |
|  | Move the Cursor                                        |
|  | Switch the symbol input                                |
|  | Input Space                                            |

### **MAC address**

Check the wireless MAC address of this camera.

### **App Operating Instructions**

Refer to the "PIXPRO Remote Viewer User Manual" located on the web:

Americas / Europe




[http://kodakpixpro.com/  
Americas/support/downloads.php](http://kodakpixpro.com/Americas/support/downloads.php)

## Scene Mode SCN

You can select an appropriate mode from the 14 scene modes according to the type of environment you are shooting. The camera then configures the most appropriate settings automatically.

1. Rotate the mode dial to **SCN**, then the LCD will display as below:

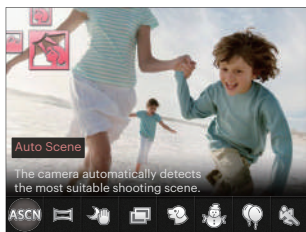

2. Press the [ ]/[ ] button to select a scene, and press the button to confirm.
3. If any need of changing the scene, please press the button and then the button and finally the [ ]/[ ] button to reselect the scene.

| Scene                                                                                            | Description                                                                     |
|--------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
|  Auto Scene      | The camera automatically detects the most suitable shooting scene.              |
|  Panorama Mode  | For shooting up to 360-degrees of landscape.                                    |
|  Handheld Night | Reduce blur when shooting low light/ illuminated scenes.                        |
|  Multi Exposure | Take several shots and overlap as a single image.                               |
|  Cat/Dog        | The camera automatically takes a picture when a dog or cat face is detected.    |
|  Snow           | For subjects in the snow. Reduce underexposure.                                 |
|  Party          | For subjects at night without using a tripod. Capture sharp shots without blur. |
|  Sport          | For fast-moving subjects. Capture sharp action shots without blur.              |
|  Night Portrait | For portraits against night time scenery.                                       |
|  Portrait       | For shooting portraits                                                          |
|  Children       | For kids and pets. Flash is disabled for eye protection.                        |
|  Landscape      | Speed adjusted for brilliant images.                                            |
|  Sunset         | For sunsets. Capture subjects in strong sunlight.                               |
|  Fireworks      | For fireworks at night. Slow shutter speed adjusted for brilliant images.       |

## Auto Scene (ASCN)

In “ASCN” scene mode, the camera can detect different environments intelligently and automatically select the best scene and photo settings for you.

“ASCN” can intelligently detect the following scenes:


| Mode Name                                                                                          | Description                                                                                                                                    |
|----------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
|  Auto             | The camera will automatically adjust the exposure and focus to ensure the best possible pictures.                                              |
|  Landscape        | For landscapes, will automatically adjust the exposure to match the background.                                                                |
|  Backlit Portrait | When the sun or any other light source is behind you, will automatically adjust the foreground exposure to produce the best pictures possible. |
|  Macro            | The Macro setting is ideal for shooting small objects or close-up photos.                                                                      |
|  Night Landscape  | For night scenes, will automatically increase the ISO value to compensate for low light.                                                       |
|  Portrait         | Most suitable for capturing people with focus on their faces.                                                                                  |
|  Night Portrait   | When you take portraits at night, or in low light conditions, will automatically adjust the exposure for people and night scenes.              |

## Panorama Mode

This feature allows you to capture a panoramic view that will have significantly more content than a single photograph. Follow the instruction arrow with a smooth and steady movement of the camera to seamlessly shoot an ultra-wide scene of up to 360 degrees.

Follow the steps below:

1. Select the panorama mode () and then press the **SET** button to confirm.
2. Press the [**▲AF**]/[**▼**  ]/[**◀** ]/[**▶** ] button to select a shooting direction. (The right direction is used as default if you do not make any choice), 2 seconds later, the camera is ready to take pictures. You can also press the **SET** button or half press the shutter button to be ready to take pictures.
3. Compose your shot on the LCD and half press the shutter button to focus on the subject. After focusing, fully press the shutter button down to take the first picture. At this time, the process dialog of panorama mode stitching appears on the screen.

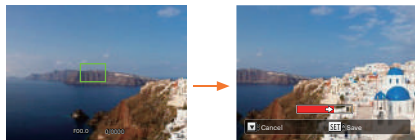

4. Rotate the camera according to the set direction. When the range of rotation does not exceed the range that the camera can detect, the progress dialog along the indication arrow partially turns red. When it completely turns red, panorama mode shooting is finished.



Panoramic image can be played back by the method of flash playing. Please see the animation panoramic playback on page 75.



During shooting, the flash, self-timer, macro modes and exposure compensation are not available. Focus adjustment is also not available at this time.

 During panorama mode shooting, press the **[SET]** button to interrupt shooting and save the current pictures taken. Press the **[▼ 🗑️ ⏸️]** button to cancel shooting and not to save the previously taken pictures.

 During panorama mode shooting, when the moving direction of the camera is wrong or the angle deviates from the internal settings, the LCD shows a warning message 「Improper alignment. Please try again.」and the current pictures taken are saved.

### **Multi Exposure**

Suitable for shooting moving objects (as many as 6) in the same background.

 Keep camera steady before shooting. Press and hold the shutter button to take 6 photos continuously when it will stop automatically. To stop shooting, release the shutter button in the midway.

 Objects shall be moved only from left to the right in order to be recorded. Objects moving from other directions would not be recorded.

 Shooting effect will be influenced if object is moving too fast or too close.

### **Cat/Dog**

1. It defaults to enabling the auto shoot after entering the Cat/Dog mode. When a face of cat or dog is detected, the camera will take photos automatically. Meanwhile, you also may press down the shutter button to shoot.
  2. Press the **[▼ 🗑️ ⏸️]** button to enter Auto Shoot menu. If this function is disabled, you may only take photos manually.
-  At most, 10 cat /dog faces can be detected at one time.

Functions that can be adjusted in each scene are as below:


| Scene          | Adjustable Functions                                        |
|----------------|-------------------------------------------------------------|
| Auto Scene     | Flash <sup>*1</sup> /Self-timer                             |
| Handheld Night | Expo Metering/Self-timer <sup>*2</sup>                      |
| Multi Exposure | Expo Metering                                               |
| Cat/Dog        | Auto Shooting/Continuous Shot/<br>Expo Metering/Macro       |
| Snow           | Continuous Shot/Expo Metering/<br>Flash/Self-timer          |
| Party          | Continuous Shot/HDR/Expo<br>Metering/Flash/Self-timer/Macro |
| Sport          | Continuous Shot/Expo Metering                               |
| Night Portrait | HDR/Expo Metering/Self-timer                                |
| Portrait       | Continuous Shot/HDR/Expo<br>Metering/Flash/Self-timer/Macro |
| Children       | Continuous Shot/Expo Metering                               |
| Landscape      | Expo Metering/Self-timer <sup>*2</sup>                      |
| Sunset         | HDR/WDR/Expo Metering/Flash/<br>Self-timer <sup>*2</sup>    |
| Fireworks      | Continuous Shot/Expo Metering/<br>Self-timer <sup>*2</sup>  |

\*1 Means the flash as an option of Night Landscape mode in Auto Scene is non-adjustable.

\*2 Means self-timer smile is not included in the self-timer.

For continuous shot, there are only「Continuous Shot」and「Time-Lapse」for selection.

Mode: 

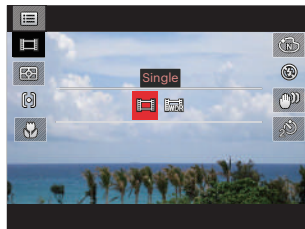


•  Single

•  WDR


## Custom Settings CS

The user can store the frequently used shooting modes and parameters and switch to this mode for quick adjustment. Settings under **CS** mode (unset state or state after reset):

1. Turn the mode dial to select the **CS** mode, and enter the setup screen, as shown in the figure below:

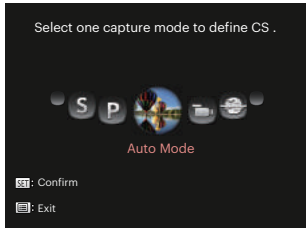


2. As shown in the figure, press the [◀🔍]/[▶⚡] button to select a capture mode that you want to define as **CS**, and press the (SET) button to enter the shooting screen.
3. As shown in the figure, press the (M) button, and choose whether to continue the **CS** mode setting or rotate the mode dial to skip.

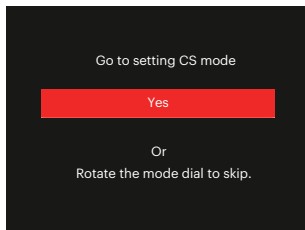


For setting under other modes (use this method to select a different custom setting):

1. Select any mode to be stored.
2. Set your desired parameters in the current mode.
3. Press the (M) button, press the [▲AF]/[▼🗑️🔄] button to select [📄], and press the (SET) button to enter the menu.
4. Press the [◀🔍]/[▶⚡] button to select 📷2.

5. Press the [ ▼ 🗑️ 🔄 ] button select「Custom Settings」and press the (SET) button to enter the menu.

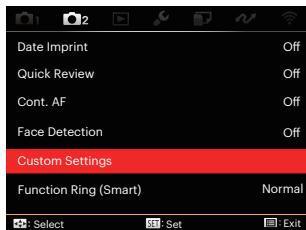

6. Select「Yes」to save or「No」to cancel.

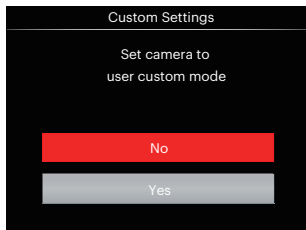

7. Turn the mode dial to switch to the custom settings ( **CS** ).
8. The photo settings you stored the last time are invoked.



When the **CS** mode is used for the first time, there is no preset parameter stored in the **CS** mode.



If you want to remove the parameter setting of「Custom Settings」, please see the reset function on page 107 to operate.


# BASIC OPERATION

## Using EVF (Electronic View Finder)

EVF functions as the LCD, which can be used to observe the scene and objects and for playback, preview and menu operations.

EVF has the following advantages:

It will not be affected by ambient light and may avoid poor composition due to light reflection on the LCD.

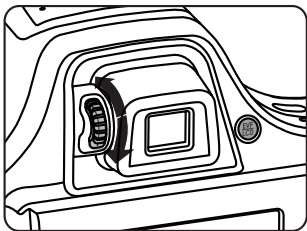

Follow the steps below:

1. Turn the camera on and press the  button to switch to the EVF display. At this time, the LCD will become black.
2. View the scenes and objects through the EVF.
3. When the screen display is not clear, rotate the dioptic adjustment knob to adjust the screen sharpness.
4. Press the  button again or restart the camera to switch back to the LCD display.




The effect of eyes to refract rays of light is referred to as refraction. The capacity of refraction is represented by focal power, which is called diopter.




Diopter adjustment is aimed at making the naked eyes of the operators with myopia (-300 or less) or hyperopia (+100) adapt to the viewfinder (EVF).

## Using the Zoom Function

Your camera is equipped with two types of zoom functions: optical zoom and digital zoom. Toggle the zoom lever of the camera to zoom in or out of the subject while taking pictures.

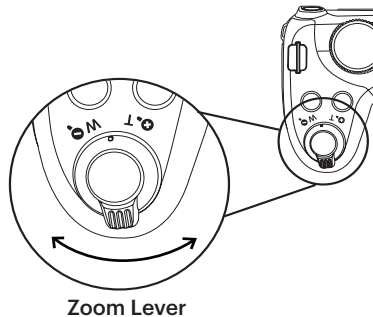

Zoom Lever

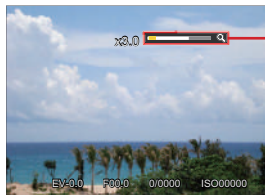

Zoom Indicator


When the optical zoom reaches the threshold as digital zoom, release and turn the zoom lever to T to switch between the optical zoom and digital zoom.

## Display Setting


Mode: PSAM SCN CS

Press the button to switch among 4 screens.


Function Message Display

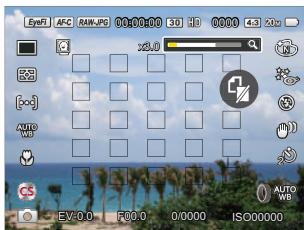

Display with Grid and Histogram

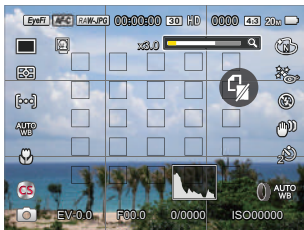

No Message Display

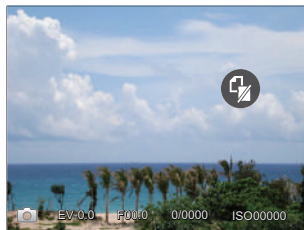


Message Display



Mode: 

Press the  button to display the playback screen, press the  button to switch among 3 screens.

### Function Message Display

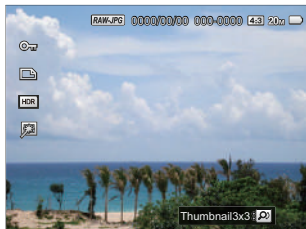

### No Message Display



### Detailed Message Display



## AF Area

In different photo shooting modes, you can select different focus methods.  
(Adjustable in **PSAM** mode)

1. Press the [ **▲AF** ] button to display the settings screen.



2. Press the [ **◀** ]/[ **▶** ] button to select the following 4 modes:



Center-AF

The focus frame appears on the center of the LCD to focus on the subject.



Multi-AF

The camera automatically focuses the subject in a wide area to find the focus point.



Spot Focus

Choose the single-point focus position within the scope of focus.



Object Tracking

Smart tracking of the object in motion under the focusing shooting.

3. Press the [ **SET** ] button to confirm the settings and enter the shooting screen.



After enabling spot focus, rolling the  jog dial to adjust the position of focus point in the screen.




The function of object tracking cannot be enabled until successful focus. For tracking the focus, you need to keep the shutter semi-pressed.

## Macro Mode

The Macro Setting is ideal for shooting small objects or close-up photos. This mode allows you to focus on subjects very close to the camera.

1. Press the [  ] button to enter the Macro Menu.

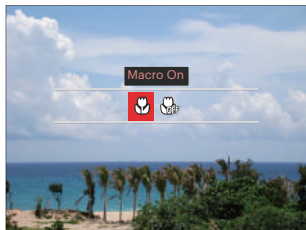

2. Press the [  ]/[  ] button to select the following 2 modes:
  -  Macro On  
Select this option to make focusing on the object closer to the lens (At the W side, the shooting distance should be more than 5 cm).
  -  Macro Off  
Select this option to disable Macro.
3. Press the (SET) button to confirm the settings and enter the shooting screen.

## Self-timer Mode

Using this function can take photos at regular time. The camera can be set to shoot after 2 seconds, 10 seconds since pressing the shutter or shoot after smile.

1. Press the [ ▼ 📷 ⏸ ] button to enter the self-timer menu.



2. Press the [ ◀ 📷 ]/[ ▶ ⚡ ] button to select the following 4 modes:

-  Self-timer 2sec  
A single picture is shot 2 seconds after the Shutter button is pressed.

-  Self-timer 10sec  
A single picture is shot 10 seconds after the shutter button is pressed.
-  Self-timer Smile  
Press the shutter button and a picture will be taken immediately after a smile is detected.
-  Self-timer Off  
Disables the self-timer.

3. Press the (SET) button to confirm the settings and enter the shooting screen.

-  When enabling the self-timer, pressing the shutter or the [ ▼ 📷 ⏸ ] button can disable the self-timer and return to the shooting screen while keeping the self-timer setting.

When enabling the smile detection, pressing the shutter or the **(SET)** button can disable the self-timer and return to the shooting screen while keeping the self-timer smile setting.

Self-timer settings will remain after completion of shooting with the self-timer. They can be canceled by switching modes or by turning the camera off and then on again.

## Flash Mode

The flash provides supplemental light for the scene. The flash is usually used when shooting against the light to highlight the object; it is also suitable for metering and shooting in darker scenes to improve the exposure.

1. Press the [▶⚡] button to enter the flash settings menu.



2. Press the [◀🌸]/[▶⚡] button to select the following 6 modes:

-  Force Off  
Flash is turned off.

-  **Fill Flash**  
For fill flash at the moment of taking a picture.
-  **Flash Auto**  
Camera flash goes off automatically based on existing light conditions.
-  **Red-Eye Reduction**  
The camera emits a brief pre-flash before the picture is taken to reduce red-eye effects.
-  **Slow Sync.**  
This allows you to take pictures of people at night that clearly show both your subjects and the night time backdrop. The use of a tripod is recommended when shooting with this setting.
-  **Slow Sync.+Red-Eye Reduction**  
Use this mode for slow synchrony shots with red-eye reduction.

3. Press the  button to confirm the settings and enter the shooting screen.


 After pressing the shutter button half way to achieve focus lock, the flash will automatically pop up if needed.

## WB (White Balance) Mode

The white balance function allows adjustment of the color temperature for different light sources. (Adjustable in **PS AM** Mode)

Follow the steps below to set white balance of the camera:

1. Press the **(SET)** button to enter white balance menu.

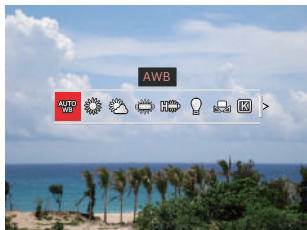

2. Press the **[◀🌸]/[▶⚡]** button to select the following 9 modes:

- **AUTO WB** AWB
  -  Daylight
  -  Cloudy
  -  Fluorescent
  -  Fluorescent H
  -  Incandescent
  -  Manual WB  
Set WB according to the current light source, press the **(SET)** button to set.
  -  Color Temp. (1900K~10000K)  
Press the **(SET)** button to enter and rolling the **(◉)**, jog dial to adjust the color temperature value.
  - **BKT WB** WB Bracketing  
Press the shutter button once to take three photos with different WB settings.
3. Press the **(SET)** button to confirm the settings and enter the shooting screen.


## WB Bracketing:

Press the **(SET)** button to enter options and then press the [ **▲ AF** ]/[ **▼** ]/[ **◀** ]/[ **▶** ] button to adjust the shift and rolling the jog dial to adjust the BKT value (0, 1 and 2).

Rotate clockwise to adjust X axis (B-A). BKT value

Rotate counterclockwise to adjust Y axis (G-M). BKT value

Press the **(SET)** button to confirm your settings.

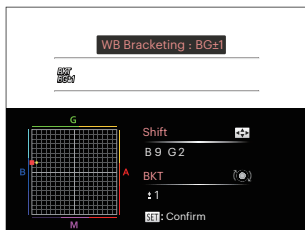

WB bracketing is for setting the bracketing range. Shift to both sides for 3 spaces at most. If at the page border, shift only to the other side and 2 photos can be taken. If no shift, only one photo can be taken.

## Continuous Shot Mode


Functions that can be enabled under each mode may be different.

Mod:  **PSAM**  **SCNCS**

For setting the single, continuous shot, Time-Lapse, HDR, WDR or AE bracketing functions.

Please follow the following steps to set:

1. Press the  button to enter the continuous shot menu.

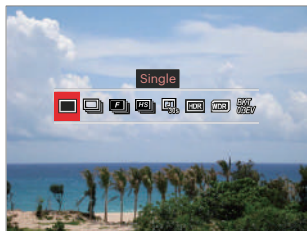

2. Press the     button to select the following 8 modes:

-  Single  
Capture a single shot only.

-  Continuous Shot  
For taking more than one picture continuously.
-  Cont.Shot-Fast (2M)  
For continuous shot with 2M pixels.
-  Cont.Shot-High Speed (VGA)  
For continuous shot with VGA pixel.
-  Time-Lapse  
Take pictures based on the preset interval (30sec/ 1min/ 5min/ 10min). Press the  button to select the interval time.
-  HDR (-1EV, 0EV, +1EV)  
This setting is to control the high dynamic image range in taking still pictures, with vivid effect in highlight and that the effect in dark parts can identify the outline and depth of the object. (Use of tripod is recommended)



- HDR effect may be affected by handshaking, light, subject movement or shooting environment.
- The flash is not available in HDR mode.
- It may take longer to save a photo in HDR.



#### WDR (Wide Dynamic Range)

When the camera detects that there is a big contrast in brightness between scenes and such scenes are against the light, it will automatically adjust the brightness and saturation to capture an image that better represents the scene.

- WDR is not available in  mode.
- For WDR in the **SCN** mode:



: adjustable;



: unadjustable and on by default;

Other modes: not available.



Please refer to page 135-136 for a detailed explanation of HDR and WDR effects.



AE Bracketing (0.3EV, 0.7EV, 1.0EV, 1.3EV, 1.7EV, 2.0EV)

The camera will automatically and continuously take three pictures separately with a brightness of original, darker and brighter as long as you press the shutter once. Press the  button to select the range of exposure.

3. Press the  button to confirm the settings and then enter shooting screen.

## Exposure Compensation Functions Setting


The EV function menu of the camera includes functions, such as EV adjustment, ISO, shutter adjustment, aperture adjustment, etc. Using the appropriate function settings can improve your pictures.

Please follow the steps below to set:

1. Press the  button to display the settings screen.  
4 options in [ Exposure Compensation Functions Setting ]:
  - EV Adjustment
  - ISO Adjustment
  - Shutter Speed Adjustment
  - Aperture Adjustment
2. Press the [   ]/[   ] button to select the setting options.
3. Press the [  **AF** ]/[    ] button to adjust the option values.
4. Press the  button to complete the setting and enter shooting screen.

### EV Adjustment

Set up to adjust the picture brightness. In the case of a very high contrast between the photographed object and the background, the brightness of the picture can be appropriately adjusted. (Adjustable in **PSA**   mode)

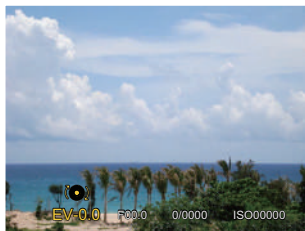


The adjustable range of exposure value is from EV -3.0 to EV+3.0.

## ISO Adjustment

ISO allows you to set the sensitivity of the camera sensor. Please use a higher ISO value in darker places and a lower value in brighter conditions.


(Adjustable in **P S A M** +  mode)

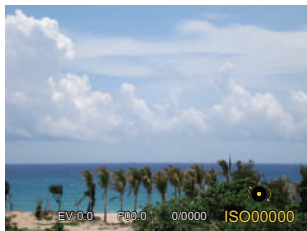

Options of ISO value: Auto, 100, 200, 400, 800, 1600 and 3200.


## Shutter Speed Adjustment

For shutter speed, the camera may automatically set the aperture value corresponding to the manually set shutter speed so as to obtain a most suitable exposure value. The movement of object may be shown by adjusting the shutter speed. High shutter value can make you clearly capture the movement of fast moving object while low shutter value can allow you to take a picture for fast moving object with a strong sense of movement. (Adjustable in **S M** mode)

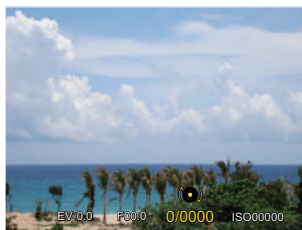


## Aperture Adjustment

You can adjust the aperture size value. Selecting a large aperture opening will emphasize the point of focus and show a blurry background and foreground. A small aperture opening will keep both the background and main object in clear focus. (Adjustable in **AM** mode)

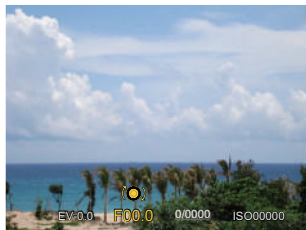

## Using Quick Recording

In shooting mode, press the  button to begin recording video.

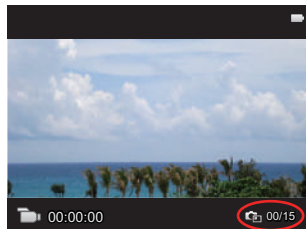

15 pictures at most can be taken by pressing the shutter when recording.

The sizes of images taken are as below when playing them back:

FHD -> 2M **2m**

HD -> 1M **1m**

DVD -> VGA **VGA**

After recording, press the  button again to stop recording. The camera will store the video and return to the shooting screen.


## i Button Function Menu

Functions that can be enabled are different under each mode.

Mode: **PSAM** 

The image color setting allows you to select different effects.

1. Press the  button to select the Image color setting menu.

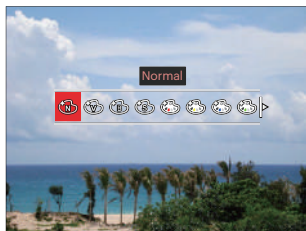

2. Press the [   ]/[   ] button to select the image color setting options.

-  Normal
-  Vivid
-  Black and White
-  Sepia

-  Partial Color-Red
-  Partial Color-Yellow
-  Partial Color-Blue
-  Partial Color-Green
-  Dreamy
-  Vignetting
-  EKTACHROME Film
-  KODACHROME Film
-  KODACOLOR Film
-  Salon
-  Punk
-  Negative
-  Reflection
-  Sketch
-  Fish Eye
-  4 Grids - Stylish(2M)



Fish Eye effect is not available when shot size is 20M.


## Using the Lens Function Ring

There is a lens function ring lever in one side of the lens. Moving it up and down can switch among ZOOM/AF, SMART and MF mode.


### Zoom/AF Mode

Rotate the lens function ring for optical zoom.

1. Switch the lens function ring lever to position **ZOOM /AF**.

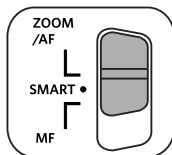

2. Rotate the lens function ring to optically zoom the object.

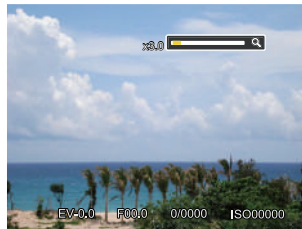


Rotating the lens function ring in Zoom/AF mode is only for optical zoom.


## Function Ring (Smart) Mode

Rotate the lens function ring to set parameters of aperture, shutter, ISO, EV, etc.

1. Switch the lens function ring lever to position **SMART**.

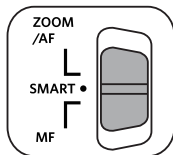

2. Rotate the lens function ring or rolling the  jog dial to select options needed.

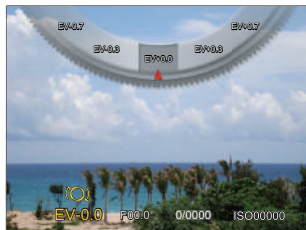

3. Press the  button to complete the setting and enter shooting screen.




The selection of functions of Function Ring (Smart) in the menu is needed before using Function Ring (Smart) mode. The default setting is Normal. (See P91 for details)

| Options           | Referred Pages |
|-------------------|----------------|
| Normal            | P64            |
| Aperture priority | P66            |
| Shutter priority  | P65            |
| EV                | P64            |
| ISO               | P65            |
| Continuous Shot   | P62            |
| Color             | P67            |
| White Balance     | P60            |
| Image Size        | P82            |
| Expo Metering     | P79            |
| Flash             | P58            |
| AF Area           | P55            |

## MF(Manual Focus) Mode

Rotate the lens function ring for manual focus.

1. Switch the lens function ring lever to position **MF**.

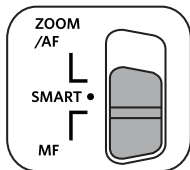

2. If the lens function ring is operated or rolling the  jog dial, the focus enlargement frame will appear on the LCD. After clear focus is achieved through manual adjustment, press the  button to close the focus enlargement frame. The camera will return to the normal shooting screen. Semi-pressing the shutter button will have no effect; you need to fully press the shutter button to take a normal photo.



Manual focus works only under the **P S A M** mode.



The MF assist needs to be enabled in the menu before it will function. (See P85 for details)

# PLAYBACK

## Viewing Photos and Videos

For viewing taken photos and videos on the LCD:

1. After pressing the , the last photo or video clip taken will be displayed on the LCD.
2. Press the [  ]/[  ] button to scroll through the photos or video clips stored in the built-in memory or on the memory card.
3. To play a selected video clip, press the  button to enter the movie playback mode. An operation guide appears on the screen when playing back a video. Press the appropriate buttons to enable the corresponding functions.

Under Playback



Paused



|                                                                                                                                                                     |              |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|
|   | Pause        |
|                                                                                    | Rewind       |
|                                                                                    | Fast Forward |

|                                                                                   |                              |
|-----------------------------------------------------------------------------------|------------------------------|
|  | Clockwise Volume Up          |
|  | Counterclockwise Volume Down |
|  | Volume                       |
|  | Mute                         |



|                                                                                                                                                                     |                 |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
|   | Play            |
|                                                                                    | Frame Backward  |
|                                                                                    | Frame Forward   |
|                                                                                    | Cancel playback |



## Using Zoom Playback (for still pictures only)

When playing back photos, you can also use the zoom lever to zoom in on the photos 2 to 8 times.

1. Press the  button to switch to playback mode.
2. Press the [  ]/[  ] button to select a picture to be zoomed in.
3. Rotate the zoom lever to .T position to zoom in.
4. Rolling the  jog dial clockwise to zoom in and counterclockwise to zoom out.
5. The bottom right corner of the LCD will display the number of times and area of the photo zooming operation.

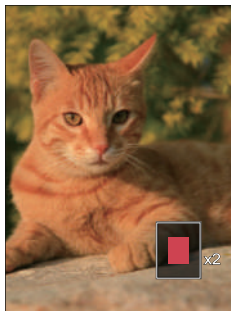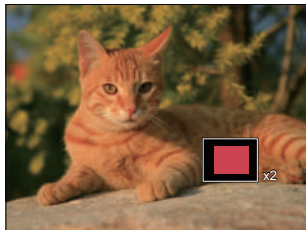

6. Press the [  AF ]/[  ]/[  ]/[  ] button to navigate and select a part of the image to be zoomed in.
7. Press the  button to return the image to its original scale.



Movie images cannot be magnified.


## Continuous Shot Group Playback

High speed (VGA) and fast (2M) can make Continuous Shot for group image playback.

1. Press the  button to enter playback screen.
2. Press the []/[] button to select continuous group.
3. Press the  button to start playback.



Cont. Group

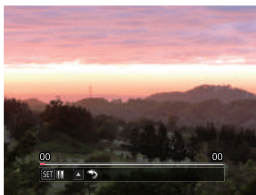

Playing



Pause

|                                                                                                                                                                     |                                                         |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------|
|   | Pause                                                   |
|   | Cancel Play (back to 1:1 playback for continuous group) |

Playing


|                                                                                                                                                                     |                                                          |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------|
|   | Play                                                     |
|   | Previous photo (loop available only in continuous group) |
|   | Next photo (loop available only in continuous group)     |
|   | Cancel Play (back to 1:1 playback for continuous group)  |

Pause


## Animation panorama play

Panoramic animation playing is to play full size image in accordance with the shooting direction. After playing, it will automatically return to the static screen of panoramic image.

1. Press the  button to enter playback screen.
2. Press the [  ]/[  ] button to select animated panoramic photos.
3. Press the  button to play in selected shooting direction.

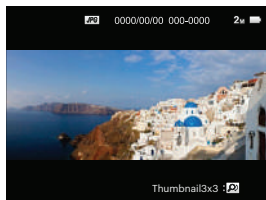

Video Panorama

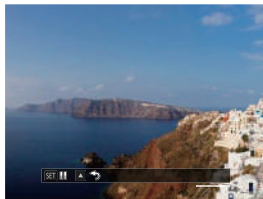

Playing



Pause

|                                                                                                                                                                     |             |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|
|   | Pause       |
|   | Cancel Play |


 In the process of panoramic animation playback, press the [  **AF** ] button to stop playing and return to the playback screen.

 Picture will not be rotated during panorama play or pause.


## Slideshow

This setting allows you to view all the stored images as a slideshow.

1. Press the  button to enter playback screen.
2. Rotate the zoom lever counter to the **w** position to display thumbnails 3x3 and then press the  button to select the index mode.

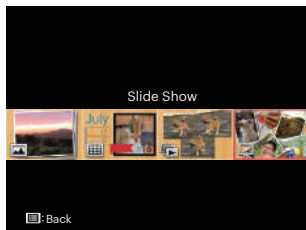

3. Press the /[  ] button to select slideshow playing and then press the  button to enter slide option.
4. Press the /[  ] button to select play effect and then press the  button to confirm.

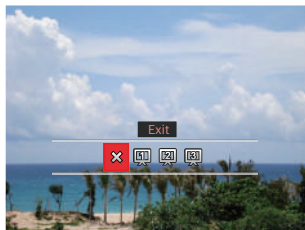


-  Exit
-  Type 1: Slow-in and slow-out
-  Type 2: Separate in middle and move off to the left and right
-  Type 3: Separate into blocks and spin in

## Photos and Video Deletion

In playback mode, press the [ ▼ 🗑️ ] button to delete your photos and videos.

To delete photos or videos:

1. Press the [ ⏮ ] button to switch to playback mode.
2. Press the [ ◀ 🗑️ ]/[ ▶ ⚡ ] button to select the photos or videos to be deleted.
3. Press the [ ▼ 🗑️ ] button and the deletion screen is displayed.

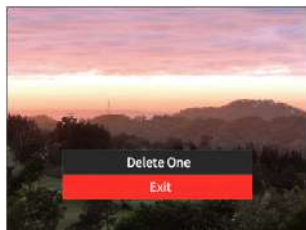

4. Press the [ ▲ AF ]/[ ▼ 🗑️ ] button to select 「Delete One」or「Exit」and press the [ SET ] button to confirm.



Erased photos/video clips cannot be recovered.



Please refer to page 98 for instructions on deleting more than one image at a time.

# USING THE MENUS

## Shooting Menu

Mode: **PSAM** **SCNCS**

1. In shooting mode, press the button to enter the shooting menu.

12 options in [ Shooting Menu ]:

- Continuous Shot Mode (refer to P62)
- Expo Metering (refer to P79)
- AF (Auto Focus) Area (refer to P55)
- WB (White Balance) Mode (refer to P60)
- Macro Mode (refer to P56)
- Color (refer to P67)
- Flash mode (refer to P58)
- OIS (Optical Image Stabilization) (refer to P79)
- Self-timer Mode (refer to P57)
- Beautifier (Adjustable only in Mode)
- Select Scene (Adjustable only in **SCN** Mode)
- Menu

2. Press the [ **AF** ]/[ ] button to select the shooting menu to be set.
3. Press the [ ]/[ ] button or rolling the jog dial to select options of the shooting menu to be set and then press the button to confirm.

Refer to the following pages for more details about each setting.



Functions that can be enabled are different under each mode.

## Expo Metering


Use this setting to select the “target” size of the camera’s field of view to be metered.



-  Spot  
For metering the block displayed in the center of the screen.
-  Center  
For metering the object in the center of the screen.
-  AiAE (Artificial Intelligence AE)  
For automatically selecting the central and surrounding metering to weight a proper metering value.

## OIS (Optical Image Stabilization)


This mode can help reduce photo blur caused by unintentional hand shake, or low light.

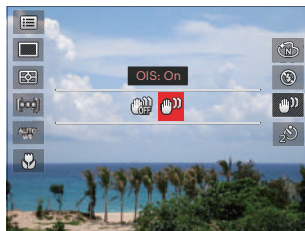

-  OIS: Off
-  OIS: On
-  Use this image stabilization mode in dark environments.
-  Shooting in a windy or unstable environment (such as a moving vehicle) may cause blurred images.
-  Using a tripod, suggest the image stabilizer is deactivated.

## Beautifier


Set the effect of the face beautifier mode.

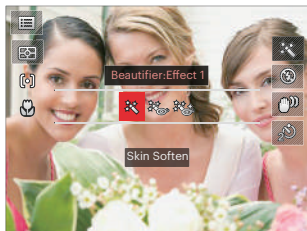

-  Effect 1: Skin Soften
-  Effect 2: Skin Soften +  
Eye Brightening
-  Effect 3: Skin Soften +  
Eye Brightening +  
Eye Enlargement

## Select Scene

Select the scene mode under the SCN mode.

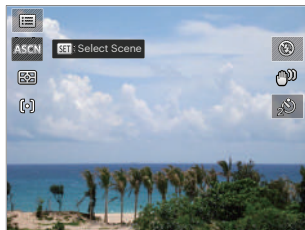

## Shoot Setting1

Mode: **PSAM** **SCNCS**


1. Press the button, press the [ **▲AF** ]/[ **▼** ] button to select .
2. Press the button to enter the menu.
3. Press the [ **◀** ]/[ **▶** ] button to select 1.  
6 options in [ Shoot Settings 1 ]:
  - Image Size
  - Movie Size
  - Quality
  - MF Assist
  - AF Assist Beam
  - Digital Zoom
4. Press the [ **▲AF** ]/[ **▼** ] button to select the item to be set and press the button to enter the menu.
5. Press the [ **▲AF** ]/[ **▼** ] button to select an option and press the button to confirm.



Functions that can be enabled are different under each mode.

## Image Size

The size setting refers to the image resolution in pixels. A higher image resolution allows you to print that image in larger sizes without degrading the image quality.

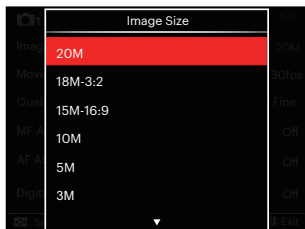


- 20M: High quality printing
- 18M-3:2: full size printing
- 15M-16:9: 16:9 display
- 10M: poster printing
- 5M: A3 printing
- 3M: A4 printing
- 2M-16:9: 4"x 6" printing
- VGA: E-Mail



The larger the number of recorded pixels, the larger the file size and the fewer files that can be saved on your memory card.

## Movie Size

Set the image resolution used during video recording.

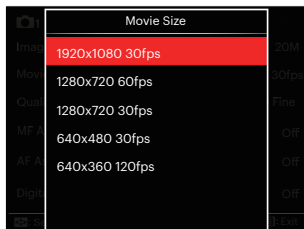

Total time of video recorded for each setting:

| No. | Image Pixel | Frame (fps) | Recommendation | Recording time (approximate) (4GB) |
|-----|-------------|-------------|----------------|------------------------------------|
| 1   | 1920x1080 * | 30          | Class 6        | 30 minutes                         |
| 2   | 1280x720 *  | 60          | Class 6        | 33 minutes                         |
| 3   | 1280x720 *  | 30          | Class 4        | 59 minutes                         |
| 4   | 640x480     | 30          | Class 4        | 105 minutes                        |
| 5   | 640x360     | 120         | Class 6        | 54 minutes                         |



\* The longest recording time is 29 minutes at one time.



When recording in higher pixel resolutions for extended periods of time, this can cause the camera to generate heat. This is not a camera malfunction.




When the video format is set as 640x360 (120fps), shooting time is 30 seconds, playback time is 2 minutes.



Sound recording is disabled when 640x360 120fps is chosen.


## Quality

The quality setting can be used to adjust the image compression ratio.

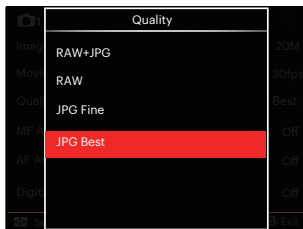

- **RAW+JPG**  
Creates two images: one in RAW and the other in JPG best.
- **RAW**  
The image file will contain more data that can be used for the purpose of editing on a computer.
- **JPG Fine**
- **JPG Best**


If RAW or RAW+JPG is selected, the settings of Colour Effect, Continuous Shot, Cont.Shot-Fast (2M), Cont.Shot-High Speed (VGA), HDR and AE Bracketing cannot be adjusted.

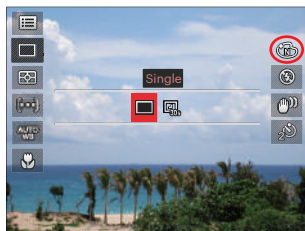

The RAW file format provides lossless compression of the image data, which is not processed by the camera. The RAW file may be opened and modified using the image processing software, PhotoStudio Darkroom, that is located on the CD-ROM included with this camera. PhotoStudio Darkroom supports Windows 7/8/10 and Mac OS X (V10.8~V10.11).

### MF (Manual Focus) Assist


Enables an enlarged focus window during the use of manual focus to provide the user better visibility for focus control. (Adjustable in **PSAM** mode)

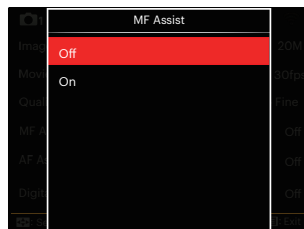

- Off
- On

## AF Assist Beam


In a darker environment, AF assist beam can be turned on for better focus.

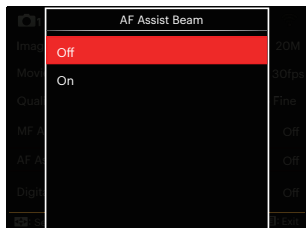

- Off
- On

## Digital Zoom

This setting is for adjusting digital zoom. If this function is disabled, only optical zoom can be used.

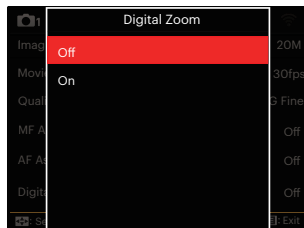

- Off
- On

## Shoot Setting 2

Mode: **P** **S** **A** **M** + **S** **C** **N** **C** **S**



1. Press the button, press the [ **▲ AF** ]/[ **▼** ] button to select .
2. Press the button to enter the menu.
3. Press the [ **◀** ]/[ **▶** ] button to select 2 .  
6 options in [ Shoot Settings 2 ]:
  - Date Imprint
  - Quick Review
  - Cont. AF
  - Face Detection
  - Custom Settings
  - Function Ring (Smart)
4. Press the [ **▲ AF** ]/[ **▼** ] button to select the item to be set and press the button to enter the menu.
5. Press the [ **▲ AF** ]/[ **▼** ] button to select an option and press the button to confirm.



Functions that can be enabled are different under each mode.

## Date Imprint


Include a Date/Time stamp on the photo image.

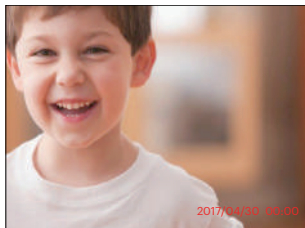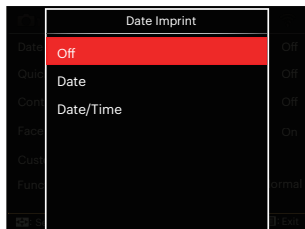

- Off
- Date
- Date / Time

## Quick Review

This option enables a brief review of images immediately after capture. Each picture will be displayed on the LCD per the selections below.

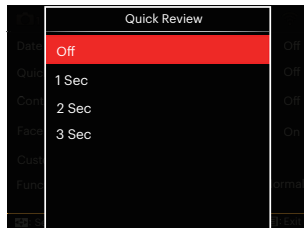

- Off
- 1 sec
- 2 sec
- 3 sec

## Cont. AF


Enable the continuous AF to be able to continuously focus automatically when taking pictures.




- Off
- On

## Face Detection


For detecting and focusing on faces to make all faces as clear as possible in photo mode.

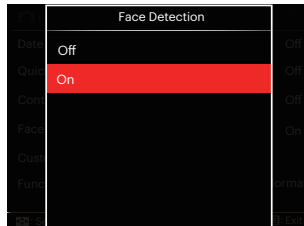

1. Hold the camera steadily and then focus on the object to detect its face. A focus frame will appear at the face on the screen when a face is detected.

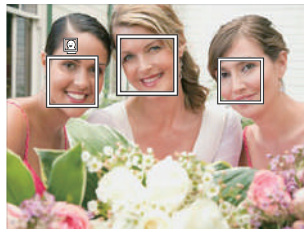

2. Press the shutter button half-way down to focus. The LCD will show a green focus frame when the subject is in focus.

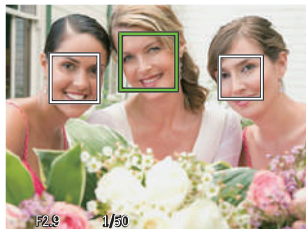


3. Press the shutter button all the way down to take pictures.



The closed eyes detection is usually on. If the camera detects in the course of quick review there is a face with eyes closed, a prompt of closed eyes will appear .

## Custom Settings


Custom Settings stores the current photo shooting mode and its parameters. The stored mode and parameters are directly invoked in Custom Settings mode.

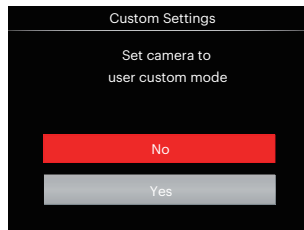

- No
- Yes

## Function Ring (Smart)

The options listed below can be set as Function Ring (Smart) Custom. Once set, the chosen function can be quickly adjusted with the lens function ring during shooting.

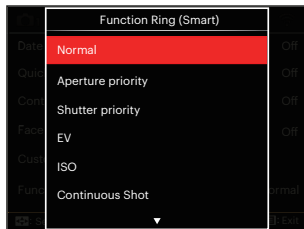

- Continuous Shot
- Color
- White Balance
- Image Size
- Expo Metering
- Flash
- AF Area

- Normal
- Aperture priority
- Shutter priority
- EV
- ISO

## Playback Menu

Mode: 

1. Press the  button to display the playback screen and press the  button to enter the menu.

7 options in [ Playback Menu ]:

-  Menu
  -  Display Mode
  -  Rotate
  -  Color
  -  HDR
  -  Touch-up
  -  Resize
2. Press the [  AF ]/[   ] button to select the playback to be set and press the  button to enter.
  3. Press the [   ]/[  ] button to select an option and press the  button to confirm.


Refer to the following pages for more details about each setting.

## Menu

7 options in [ Menu ]

- Shoot Settings 1  (See P81 for details)
- Shoot Settings 2  (See P87 for details)
- Playback Settings  (See P97 for details)
- General Settings  (See P101 for details)
- File Settings  (See P104 for details)
- Connection Settings  (See P108 for details)
- Wi-Fi Settings  (See P41 for details)

## Display Mode

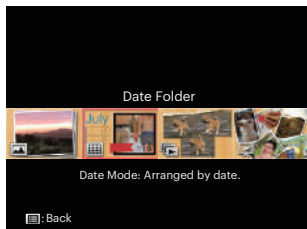

 Normal Mode: Display all images.

 Date Mode: Arranged by date.

 Cont. Photo Mode: Arranged by Cont. Photo Group.


 Slide Show

 The Date Folder is displayed in date order based on photo shooting date/time.

 If there is no continuous shot image file in memory, continuous photo mode cannot be enabled.

## Rotate

You can use this setting to change the orientation of the picture.

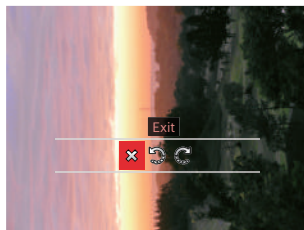

 : Exit

 : Turn Left


 : Turn Right

 Videos and panoramic pictures cannot be rotated.

 The rotated picture file will replace the original photo.

## Color

This setting allows you to change the picture color effect. The file is saved as a new photo and stored in memory together with the original photo.

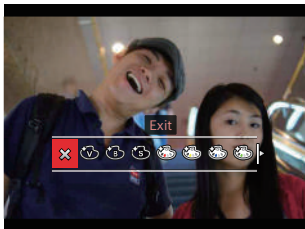

-  Exit
-  Vivid
-  Black and White
-  Sepia
-  Partial Color-Red
-  Partial Color-Yellow
-  Partial Color-Blue
-  Partial Color-Green
-  Dreamy


-  Vignetting
-  Salon
-  Punk (4M)
-  Negative (8M)
-  Reflection
-  Fish Eye
-  4 Grids - Stylish (2M)

 In playing back single photos, press the  button to enter the color effect setting menu.

 Fish Eye effect is not available when shot size is 20M.

## HDR


With the HDR function, pictures that are overexposed may be corrected to optimize the highlights and lowlights captured to more accurately represent the actual scene.

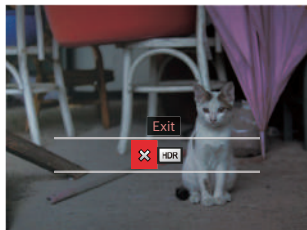

 : Exit

 : HDR


Select  with HDR :

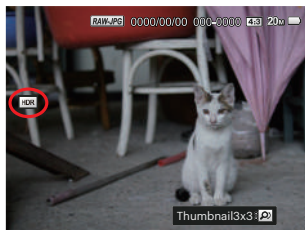

After using the HDR function, the image will be saved as a new file and the original file is still stored in the memory.

## Touch-up

The playback beauty feature allows for beautification using three individual effects.

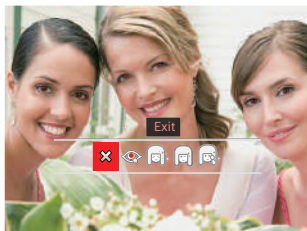

 : Exit

 : Red-Eye Reduction

 : Skin Soften

 : Eye Brightening

 : Eye Enlargement


 Using the face beautifier mode allows you to select from single, two, or all three effects combined.

Select  with touch-up:



## Resize

This setting allows you to resize a picture to a particular resolution and saves it as a new picture.

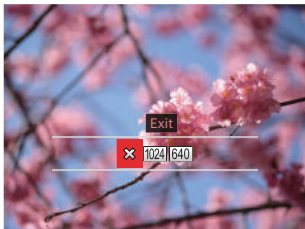

 : Exit

 : Resize to 1024x768

 : Resize to 640X480

 Only for adjusting pictures with high resolution to those with low resolution.

 Sizes of photos taken in panorama mode or rotated cannot be adjusted.

## Playback Settings

Mode:  PSAM  SCNC  

1. Press the  button, press the [  AF ]/[    ] button to select .
2. Press the  button to enter the menu.
3. Press the [   ]/[   ] button to select .


5 options in [ Playback Settings ]:

- Protect
  - Delete
  - DPOF
  - Trim
  - Play Slide Show
4. Press the [  AF ]/[    ] button to select the item to be set and press the  button to enter the menu.
  5. Press the [  AF ]/[    ] button to select an option and press the  button to confirm.

Refer to the following pages for more details about each setting.

## Protect


To prevent any pictures or videos from being accidentally erased, use this setting to lock one or all of the files.

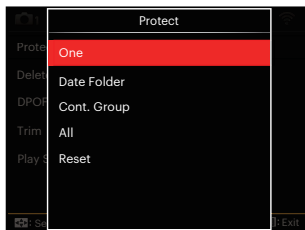

- **One**  
Lock the selected photo or video if they are unprotected; unlock the selected photo or video if they are protected.
- **Date Folder**  
Protect all photos in the Date Folder.
- **Cont. Group**  
Protect all photos in the Cont. Group.
- **All**  
Lock all photos or videos.
- **Reset**  
Cancel all locked photos or videos.

## Delete

You can delete one or all photo/video files.

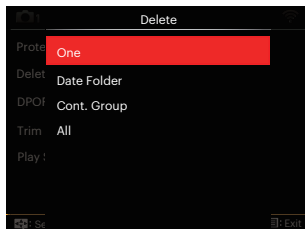

- **One**  
Delete one photo or video.
- **Date Folder**  
Delete all photos in the Date Folder.
- **Cont. Group**  
Delete all photos in the Cont. Group.
- **All**  
Delete all photos or videos.



The “” indicator means a file is protected. File protection must be removed first before a file can be deleted.




Deleting files will cause DPOF settings to be reset.



When one photo in the Cont. Group and Date Folders is protected, it will be kept but any other photos will be deleted.

## DPOF (Digital Print Order Format)

The DPOF feature allows you to compile and select a group of pictures that you would like to print and will save your selection on the memory card so that you can use the memory card to print without having to individually specify the photos you want to print.

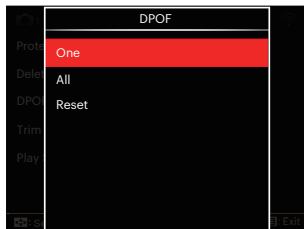

- One
- All
- Reset




The printer that supports DPOF is needed for printing.

## Trim

The Trim setting allows you to crop photos and save them as new pictures.

1. Select 「Yes」 to confirm trim. Toggle the zoom lever or rolling the  jog dial to select the aspect ratio and press the [  AF ]/[  ▼  ◀ ]/[  ▶  ] buttons to adjust the part you want to trim.

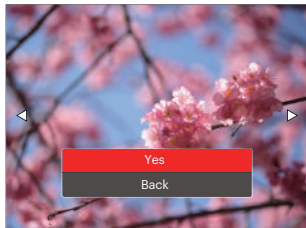


2. Press the  button and the 「Save Change?」 prompt appears. Select 「 »」 to change and save the picture. Select 「 X」 to cancel changes and return to the trim prompt screen.

-  The image cannot be clipped/trimmed again once it has been clipped to 640X480.
-  Videos, RAW files cannot be trimmed.
-  The picture after trimming cannot be trimmed again.

## Play Slide Show

This setting allows you to view all the stored images as a slideshow.

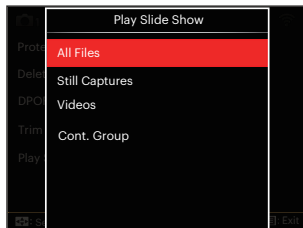

- All Files  
To display and play back all images in memory card.
- Still Captures  
To display and play back images of photo files in memory card.
- Videos  
To play back movies on memory card.
- Cont. Group  
To only play back images arranged by cont. group in memory card.

## General Settings

Mode : **PSAM** + **SCNCS**


1. Press the button, press the [ **▲AF** ]/[ **▼** ] button to select .
2. Press the button to enter the menu.
3. Press the [ **◀** ]/[ **▶** ] button to select .  
6 options in [ General Settings ] :
  - Sound Settings
  - Power Saver
  - Language
  - World Time
  - Date & Time
  - LCD Brightness
4. Press the [ **▲AF** ]/[ **▼** ] button to select the item to be set and press the button to enter the menu.
5. Press the [ **▲AF** ]/[ **▼** ] button to select an option and press the button to confirm.

Refer to the following pages for more details about each setting.

## Sound Settings


With this setting you may adjust the sound volume.

Press the [ ◀ 🔊 ]/[ ▶ 🔊 ] button to adjust the volume and press the (SET) button to confirm our setting.

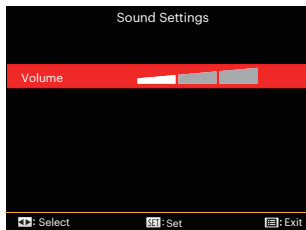

## Power Saver

This setting allows you to save power and get the maximum possible running time for your camera's batteries. Turn the LCD and camera off automatically after a consecutive period of inactivity.

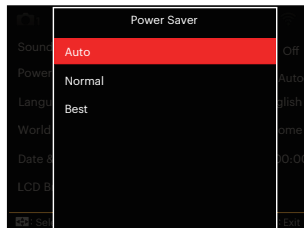

- Auto
- Normal
- Best

| Power Saver | LCD power off time | Turn off time |
|-------------|--------------------|---------------|
| Auto        | 3 min              | 5 min         |
| Normal      | 1 min              | 3 min         |
| Best        | 30 s               | 1 min         |

## Language

Refer to the “Reset your language” section on page 25.

## World Time

The World Time setting is a useful function for your overseas trips. This feature enables you to display the local time on the LCD while you are abroad.

1. Press the [ ▲ AF ]/[ ▼ 🏠🌐 ] button to select the departure place ( 🏠 ) and destination ( 🌐 ) fields.
2. Press the [ ⏪🌐 ]/[ ⏩⚡ ] button to select a city located in the same time zone as that of the field. Press the (SET) button to confirm settings.




## Date & Time

Refer to the “Reset Date/Time” section on page 26.

## LCD Brightness

Use this setting to adjust the brightness of your LCD.

Press the [ ⏪🌐 ]/[ ⏩⚡ ] button to adjust the brightness of screen and press the (SET) button to confirm.

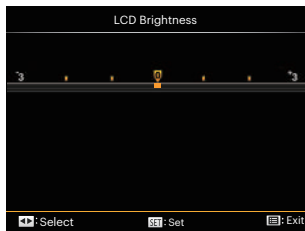

## File Settings

Mode : PSAM SCNCS

1. Press the button, press the [ **▲AF** ]/[ **▼** ] button to select .
2. Press the button to enter the menu.
3. Press the [ **◀** ]/[ **▶** ] button to select .
4. Press the [ **▲AF** ]/[ **▼** ] button to select the item to be set and press the button to enter the menu.
5. Press the [ **▲AF** ]/[ **▼** ] button to select 「Yes」 or 「No」 and press the button to confirm.


5 options in [ File Settings ] :

- Format
- Copy to Card
- File Numbering
- Reset Settings
- Version

Refer to the following pages for more details about each setting.

## Format

Please note: formatting enables you to delete all contents in the memory card or built-in memory, including protected photo and movie files.

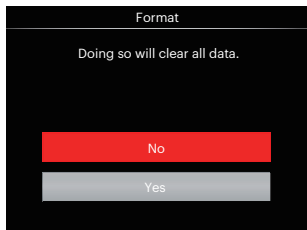


If you select 「Yes」 the camera formats its memory.



If there is no memory card in the camera, the built-in memory will be formatted; if there is a memory card, it will be formatted only.

## Copy to Card


Use this setting to copy the files stored in the built-in memory to a memory card.

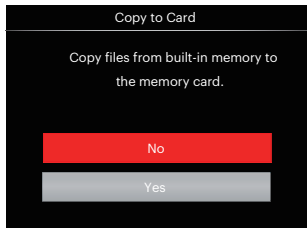

If there is no card available in the camera, this function will not be displayed.


## File Numbering

After you take a picture or video clip, the camera will save it with a sequential number. You can use this to reset the file numbering to 1.

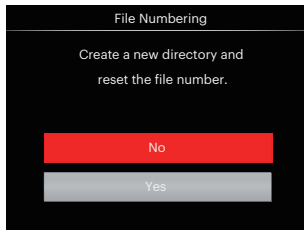

## Reset Settings

Use this setting to restore the camera to its original default settings.

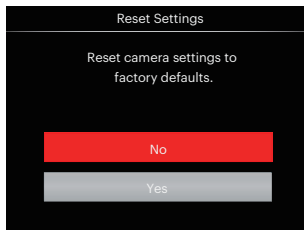


## Version

Use this setting to view the current camera firmware version.



When there is a new firmware version in the memory card, select「Yes」to update.

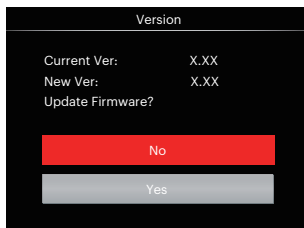

## NEW CAMERA OWNER / IMPORTANT INFORMATION

Thank you for purchasing your new **KODAK PIXPRO AZ901 Astro Zoom** camera. In an effort to provide you with the most up to date benefits and features of the AZ901, **we strongly encourage you to register your new camera on our website:**

**<https://kodakpixpro.com/support/product-registration>**

Doing so will keep you informed of important updates, including firmware, features and other important information that pertain to the AZ901. Your information is always kept secure, is encrypted and is never sold, shared or used for any purposes other than for AZ901 camera specific notifications, unless you opt-in to receive other types of communications during the registration process.

# CONNECTION SETTINGS

## Connecting to a Computer


You can use a Micro USB cable to connect the camera and copy (transmit) photos to a computer, printer or other device.

### Setting the USB Mode

The camera's Micro USB port can be set to connect with either a computer or a printer. The following steps will allow you to ensure that the camera is correctly configured to connect with a PC.

1. Press the  button, press the [  **AF** ]/[    ] button to select  and press the (SET) button to enter the menu.
2. Press the [   ]/[   ] button to select .
3. Press the [  **AF** ]/[    ] button to select 「USB」 and press the (SET) button to enter the menu.

4. Press the [  **AF** ]/[    ] button to select 「PC」 and press the (SET) button to confirm.

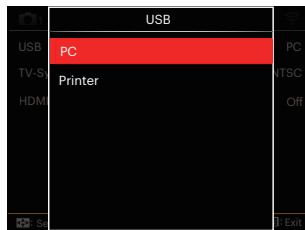


## Transferring files to your computer

The computer will automatically detect the camera as a removable drive. Double-click the my computer icon on the desktop to locate the removable drive and to copy folders and files in the drive to a directory on your PC as you would copy any typical folder or file.

Follow the steps below to connect the camera to a computer.

1. Make sure the computer is turned on.
2. Connect one end of the supplied Micro USB cable to the Micro USB port on your camera.
3. Connect the other end of the cable to an available USB port on your computer.
4. After the transmission is complete, disconnect the Micro USB cable according to the instructions specifying how to safely remove USB devices.

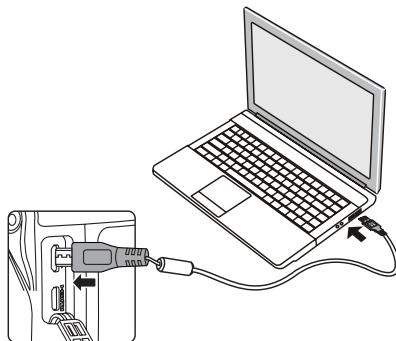

## Connecting to a PictBridge Compatible Printer


PictBridge technology allows printing of the photos saved in the memory card by the printer.

To find out if a printer is PictBridge compatible, simply look for the PictBridge logo on the packaging or check the owner's manual for specifications. With the PictBridge function on your camera, you can print the captured photos directly to a PictBridge compatible printer using the supplied Micro USB cable, without the need for a PC.

### Setting the USB Mode

The camera's Micro USB port can be set to connect with either a PC or a Printer, the following steps will ensure that the camera is correctly configured to connect with a Printer.


1. Press the  button, press the [  **AF** ]/[    ] button to select  and press the  button to enter the menu.
2. Press the [   ]/[   ] button to select .
3. Press the [  **AF** ]/[    ] button to select 「USB」 and press the  button to enter the menu.
4. Press the [  **AF** ]/[    ] button to select 「Printer」 and press the  button to confirm.

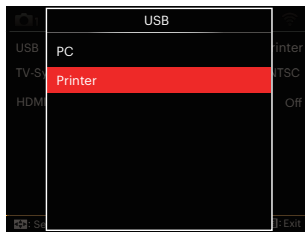


-  After the camera is reset, it will switch to PC mode automatically from USB mode.
-  See “Using the PictBridge Menu” section on page 112.

## Connecting to your Printer

1. Make sure the printer is turned on.
2. Connect one end of the supplied Micro USB cable to the Micro USB port on your camera.
3. Connect the other end of the cable to the USB port on the printer.

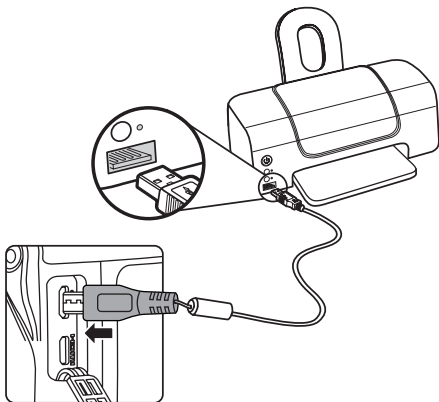


If the camera is not connected to a PictBridge compatible printer, the following error message will appear on the LCD.

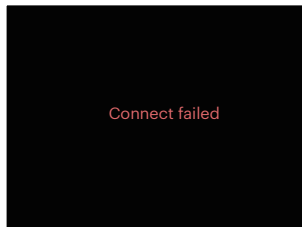

The error message above will also appear if the USB mode is set incorrectly, in which case you should disconnect the Micro USB cable, check the USB mode settings, ensure that the printer is turned on, and then try connecting the USB cable again.

## Using the PictBridge Menu

After setting the USB mode to printer, the PictBridge menu will appear.

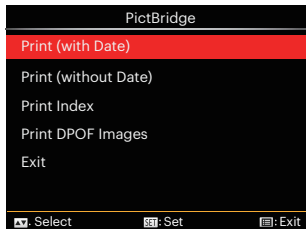


Press the [▲AF]/[▼🗑️🕒] button to select a menu item and press the (SET) button to enter the item.

Refer to the following sections for more detailed information on each setting.

### Print (with Date)


If you have set the date and time on your camera, the date and time will be recorded and saved with each photo you take.

1. In the PictBridge menu, select 「Print (with Date)」 and the screen as shown below appears.

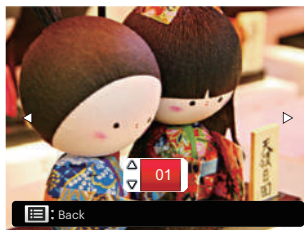

2. Press the [◀👁️]/[▶⚡] button to select a photo to be printed.

3. Press the [ **▲AF** ]/[ **▼** ] button to select the number of copies for the currently displayed photo.
4. Press the **(SET)** button and the following screen will appear.

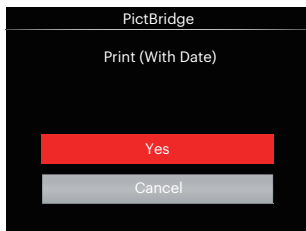


5. Select 「Yes」 and press the **(SET)** button to confirm; select 「Cancel」 to cancel printing.


## Print (without Date)

Use this setting to print the photos without dates on them.

1. In the PictBridge menu, select 「Print (without Date)」 and the screen as shown below appears.

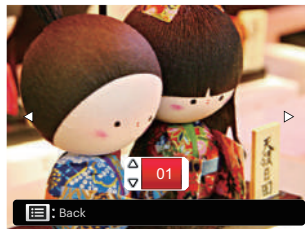

2. Press the [ **◀** ]/[ **▶** ] button to select a photo to be printed.
3. Press the [ **▲AF** ]/[ **▼** ] button to select the number of copies for the currently displayed photo.
4. Press the **(SET)** button and the following screen will appear.

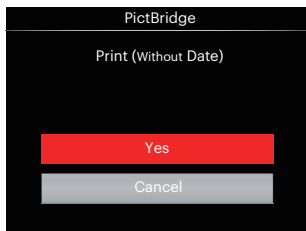


5. Select 「Yes」 and press the  button to confirm; select 「Cancel」 to cancel printing.

## Print Index

You can print all photos in the camera via this function.

1. In the PictBridge menu, select 「Print Index」 and the screen as shown below appears.

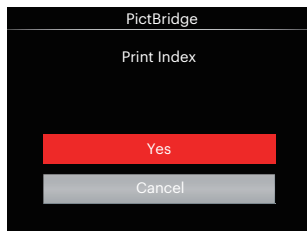


2. Select 「Yes」 and press the  button to confirm; select 「Cancel」 to cancel printing.

## Print DPOF Images

To use DPOF printing, you must select your photos for printing using the DPOF settings beforehand. See “DPOF” section on page 99.


1. In the PictBridge menu, select「Print DPOF Images」and the screen as shown below appears.

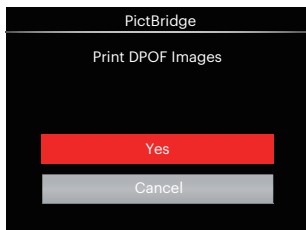

2. Select「Yes」and press the  button to confirm; select「Cancel」to cancel printing.

## Exit

Select「Exit」to exit the PictBridge menu. At this time, the message「Remove USB Cable!」appears on the screen.

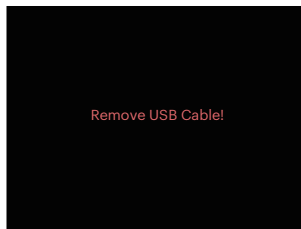


Disconnect the Micro USB cable from the camera and printer.

## Video System

You can use the AV cable (which should be purchased separately) to connect the camera and the television for realizing the video output. Connect one end of the AV cable to AV port of the camera, connect the other end to AV-OUT port of the television. Adjust the format of the video output system according to your requirements, and the steps are as follows:

1. Press the  button, press the [  AF ]/[    ] button to select  and press the  button to enter the menu.
2. Press the [   ]/[   ] button to select .
3. Press the [  AF ]/[    ] button to select 「TV-System」 and press the  button to enter the menu.
4. Press the [  AF ]/[    ] button to select 「NTSC」 or 「PAL」 and press the  button to confirm.

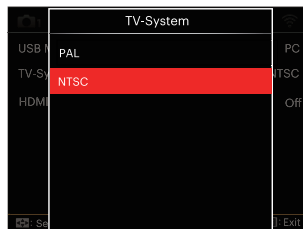

NTSC: English, Chinese (Traditional), Japanese, French, Korean, Russian, Vietnamese, Greek, Hungarian


PAL: German, Spanish, Italian, Chinese (Simplified), Portuguese, Swedish, Danish, Finnish, Indonesia, Norwegian, Dutch, Turkish, Polish, Thai, Croatian, Czech, Arabic, Hindi



The video output system would change accordingly based upon the changes of the selected language.

## Supported HDMI Connections

HDMI (High Definition Multimedia Interface), is a fully digital audio/video transmission interface, through which uncompressed audio and video signals are transmitted.

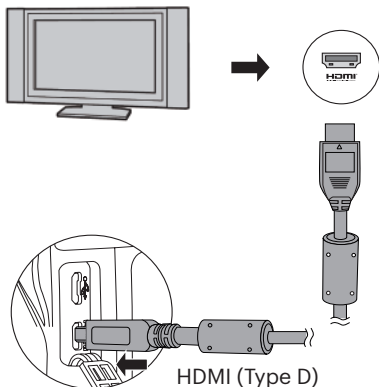

### Connecting HDMI-Ready TV


1. Use the cable with high resolution output terminal (which should be purchased separately) to connect the camera to the television which meets HDMI standard.
2. The camera will be automatically detected by the TV.
3. After connecting via HDMI, the camera enters Playback Mode.



Make sure the camera and the TV are both turned on before connecting.

## HDMI CEC Control

After connecting the camera with TV-System, you may view pictures taken with the camera on the TV screen and operate the camera with your TV remote control to view and edit all images.

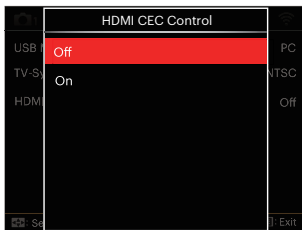

-  It is required that the TV-System supports HDMI CEC.
-  After the camera is successfully connected with TV-System, other buttons of the camera except the Power button cannot work, with the LCD staying dark.
-  Please refer to TV manual for relative settings of TV-System.

### Introduction on Icons

1.  Info Hiding/Display
2.  Zoom-in  
 : Zoom in Images  
 : Zoom out Images
3. Rotate Images  
 : Only Turn Left
4.  Image Index  
 : 5\*3 Index Playback  
 : 10\*5 Index Playback  
 : 3\*1 Date Folder Index  
 : 5\*3 Cont. Group Index
5.  Back
6.  Play Slide Show
7.  Button for Switching Between Previous and Next Images

 
8.  Videos
9. Movie Length:00:00:00
10.  Cont. Group File
11.  First Image Mark
12. 000/000:Current Sorting/Total  
Number of Images in Group
13.  :Confirm Effect
14.  :No Change

The following operations are available during HDMI CEC playback:

- 1:1 Single Playback
- Zoom-in Playback
- Rotate
- Index Playback
- Cont. Group Playback
- Slide Show Playback
- Video Play
- Panoramic File Play
- Image Edit



Pressing the four-color button on remote control can enable relative functions displayed on the TV-System screen.



### 1:1 Single Playback:

Pressing the left and right arrow buttons can switch among images.

### Zoom-in Playback:

Under the 1:1 single playback mode, press the red button to zoom in images; press the red and green buttons on remote control to zoom out images.

### Rotate:

Under the 1:1 single playback mode, press the blue button to rotate single picture.

### Index Playback:

Under the 1:1 playback mode, press the green button to enter index playback; press the central button to enter image selection and then the arrow buttons to select files you want and finally press the central button again to back to the 1:1 single playback.

Under the 5\*3 index playback mode, press the green button to enter index selection and then the left and right arrow buttons to select , , , and , and finally press the central button again to confirm your selection.

### Cont. Group Playback:

Under the 1:1 single playback mode, press the central button to start playing images in continuous group.

If no images in the camera's cont. group, there will appear a prompt of no pictures if you select  on the index playback interface.

### Slide Show Playback:

Under the 1:1 single playback mode, press the down arrow button to enter slide show playback. While playing, you may press the left and right arrow buttons to directly switch between previous and next images and the central button to end playing.

### Video Play:

Under the 1:1 single playback mode, select a video and then press the central button to start playing. While playing, you may use the arrow buttons and the central button to perform operations such as fast forward/backward, pause, frame forward/backward, back to play, etc. according to prompts on the screen.

### Panoramic File Play:

Under the 1:1 single playback mode, select a panoramic file and then press the central button to begin playing.

### Image Edit:

Multiple edit can be repeated under image edit mode. Only one picture is saved finally.

Under the 1:1 single playback mode, select a picture and then press the up arrow button to enter image edit and start detecting face.

Press the up arrow button to do HDR editing.

Press the down arrow button to delete one picture.

Press the left and right arrow buttons to edit the color. 12 effects in total for selection.

The following beautifier touch-up functions cannot be enabled until a face is detected. You may press relative color buttons to edit.



: Skin Soften



: Eye Enlargement



: Eye Brightening



Availability of edit functions corresponding to each type of file (O : Available; X : Not Available)

|                  | HDR | Color | Beautifier | Delete |
|------------------|-----|-------|------------|--------|
| Normal (face)    | O   | O     | O          | O      |
| Normal (no face) | O   | O     | X          | O      |
| Panorama         | X   | X     | X          | O      |
| Video            | X   | X     | X          | O      |

## HDMI CEC Connection

| Function             | Full Size Playback    | Zoom-in Playback                                 | Index Playback | Video Play | Cont. Group Play | Panoramic File Play |
|----------------------|-----------------------|--------------------------------------------------|----------------|------------|------------------|---------------------|
| Zoom In              | O                     | O<br>(Movable to four directions during zoom-in) | X              | X          | X                | X                   |
| Zoom Out             | X                     | O                                                | X              | X          | X                | X                   |
| Rotate               | O<br>(turn left only) | X                                                | X              | X          | X                | X                   |
| Play Slide Show      | O                     | X                                                | X              | O          | O                | O                   |
| Edit Image           | O*1                   | X                                                | X              | O          | O                | O                   |
| Info Hiding/ Display | O                     | O                                                | X              | O*2        | O*2              | O*2                 |
| Delete               | O                     | X                                                | X              | O*3        | O*3              | O*3                 |

\*1 After entering the image edit, relative operation of the beautifier cannot appear until a face is detected.


\*2 It is available before and in playing and during pause.

\*3 The function of delete one cannot work until the camera enters image edit mode.

## Set Eye-Fi Card Connection Mode

This camera supports wireless connection for Eye-Fi memory cards. Enable the Eye-Fi connection by following the steps below.

1. Press the  button, press the [ **▲AF** ]/[ **▼**   ] button to select  and press the  button to enter the menu.
2. Press the [ **◀**  ]/[ **▶**  ] button to select .
3. Press the [ **▲AF** ]/[ **▼**   ] button to select 「Eye-Fi」 and press the  button to enter the menu.
4. Press the [ **▲AF** ]/[ **▼**   ] button to select 「On」 or 「Off」 and press the  button to confirm.

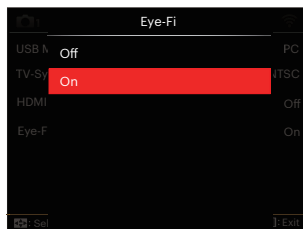

If the Eye-Fi card is not available in the camera, this feature is not displayed.

# APPENDICES

## Product Specifications



Design and specifications are subject to change without notice.

|                       |                      |                                                                          |
|-----------------------|----------------------|--------------------------------------------------------------------------|
| Image Sensor          | Type                 | 1/2.3" BSI CMOS                                                          |
|                       | Effective Pixels     | 20.68 Megapixels                                                         |
|                       | Total Pixels         | 21.14 Megapixels                                                         |
| Lens                  | Focal Length         | 3.9mm (Wide) — 351mm (Tele)                                              |
|                       | 35mm film equivalent | 22mm (Wide) — 1980mm (Tele)                                              |
|                       | F number             | F3.1 (Wide) — F6.8 (Tele)                                                |
|                       | Lens Construction    | 14 groups 18 elements                                                    |
|                       | Optical Zoom         | 90x                                                                      |
|                       | Focusing Range       | Normal: (Wide) 50cm ~ ∞, (Tele) 500cm ~ ∞;<br>Macro: 5cm ~ ∞ (Wide Only) |
| Autofocus System      |                      | TTL Autofocus                                                            |
| Electronic Viewfinder |                      | Yes (-3~+1 diopter)                                                      |
| Anti-Handshake        |                      | Optical Image Stabilization                                              |
| Digital Zoom          |                      | 4x Digital Zoom (Combined Zoom: 360x)                                    |

|                            |             |                                                                                                                                                           |                          |                                             |
|----------------------------|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|---------------------------------------------|
| Number of Recording Pixels | Still Image | (4:3)<br>20MP: 5184×3888<br>10MP: 3648×2736<br>5MP: 2592×1944<br>3MP: 2048×1536<br>0.3MP: 640×480                                                         | (3:2)<br>18MP: 5184×3456 | (16:9)<br>15MP: 5120×2880<br>2MP: 1920×1080 |
|                            | Movie       | 1920×1080 (30fps), 1280×720 (60fps), 1280×720 (30fps), 640×480 (30fps), High-Speed Movie: 640×360 (120fps)                                                |                          |                                             |
| Image Compression          |             | Best, Fine, Normal                                                                                                                                        |                          |                                             |
| DCF, DPOF (Ver1.1) Support |             | Yes                                                                                                                                                       |                          |                                             |
| File Format                | Still Image | JPEG (Best, Fine), RAW, RAW+ JPEG (Best)                                                                                                                  |                          |                                             |
|                            | Movie       | MOV [Image: H.264; Audio: Linear PCM (Stereo)]                                                                                                            |                          |                                             |
| Shooting Modes             |             | Auto Mode, Program AE, Shutter priority, Aperture priority, Manual Mode, Face Beautifier, Wi-Fi Mode, Scene Mode, Movie Mode, Custom Settings             |                          |                                             |
| Scene Mode                 |             | Auto Scene, Panorama Mode, Handheld Night, Multi Exposure, Cat/Dog, Snow, Party , Sport, Night Portrait, Portrait, Children, Landscape, Sunset, Fireworks |                          |                                             |
| Detection Features         |             | Face, Smile, Blink, Cat, Dog                                                                                                                              |                          |                                             |
| Photo Touch-up             |             | Red-Eye Reduction, Skin Soften, Eye Brightening, Eye Enlargement                                                                                          |                          |                                             |

|                          |                  |                                                                                                      |
|--------------------------|------------------|------------------------------------------------------------------------------------------------------|
| HDR                      |                  | Yes                                                                                                  |
| Scan Panorama            |                  | Up to 360°                                                                                           |
| LCD                      | Display          | 3.0 inch (920k Pixels)                                                                               |
|                          | Angle Adjustment | Yes                                                                                                  |
| Image Auto Rotation      |                  | Yes                                                                                                  |
| ISO Sensitivity          |                  | Auto, ISO100/200/400/800/1600/3200                                                                   |
| Focus Mode               |                  | Single AF, Continuous AF, Object Tracking, Manual Focus                                              |
| Focusing Area Selection  |                  | Single Area Focusing, 25-Area-Focusing, Face Detection, Manual Area Focusing                         |
| Exposure Metering Method |                  | Artificial Intelligence AE (AiAE), Center-Weighted Average, Spot (Fixed to Center of Frame), Face AE |
| Exposure Control Method  |                  | Program AE (AE-Lock Available), Shutter Prior AE, Aperture Prior AE                                  |
| Exposure Compensation    |                  | ±3EV in 1/3 Step Increments                                                                          |
| Shutter Speed            |                  | 1/2000 ~ 30 Seconds                                                                                  |
| Continuous Shooting      |                  | Yes                                                                                                  |
| Playback Modes           |                  | Single, Index (9/16 Thumbnails), Slide Show, Date, Burst Shooting, Zoom (Approx. x2 ~ x8)            |

|                                           |              |                                                                                                          |
|-------------------------------------------|--------------|----------------------------------------------------------------------------------------------------------|
| White Balance Control                     |              | AWB, Daylight, Cloudy, Fluorescent, Fluorescent H, Incandescent, Manual WB, Color Temp. (1900K ~ 10000K) |
| Flash                                     | Flash Method | Pop-up (Auto)                                                                                            |
|                                           | Flash Modes  | Force Off, Fill Flash, Flash Auto, Red-Eye Reduction, Slow Sync., Slow Sync. + Red-Eye Reduction         |
| Recording Media                           |              | Internal Memory: Approx. 8MB                                                                             |
|                                           |              | SD/SDHC Card (Up to 32GB Support) [MMC Card Not Supported]                                               |
| Multi-Language Support                    |              | 27 Languages                                                                                             |
| Jacks                                     |              | AV-OUT/USB 2.0 (Micro 5 pin USB), HDMI (Type D)                                                          |
| Eye-Fi Support                            |              | Yes                                                                                                      |
| Wi-Fi                                     |              | Yes (802.11 b/g/n)                                                                                       |
| Remote Viewfinder                         |              | Yes (via iOS/Android smart device)                                                                       |
| Power                                     |              | Rechargeable Li-ion Battery LB-070, 7.4V 1020mAh, In-Camera Charging                                     |
| Shooting Capability (Battery Performance) |              | Approx. 400 Shots (Based on CIPA Standards)                                                              |
| Operation Environment                     |              | Temperature: 0 ~ 40°C, Humidity: 0 ~ 90%                                                                 |
| Dimensions (W×H×D)                        |              | Approx. 138.7×103.5×118.5mm (Based on CIPA Standards)                                                    |
| Weight                                    |              | Approx. 777g (Body only)                                                                                 |

## Prompts and Warning Messages

| Message                                                    | Description                                                    | Action                                                                                                         |
|------------------------------------------------------------|----------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| Warning!<br>Battery exhausted.                             | Warning before power off when the camera battery is exhausted. | Displaying that it will power off after 2 seconds.                                                             |
| Built-in memory error!                                     | In the case of built-in memory error.                          | Disappear after 2 seconds and return to shooting.                                                              |
| Warning! Do not turn off your camera during update!        | The message appears during the firmware update process.        | The message disappears after the camera update and restart.                                                    |
| Battery temperature is too high.                           | Battery temperature is too high.                               | The message will disappear after 2 seconds.<br>Let the battery cool before attempting to use the camera again. |
| Please update firmware after the battery is fully charged! | The firmware cannot be updated when power is insufficient.     | Remove the message after 2 seconds and returning to the update screen.                                         |

| Message                                                | Description                                                                                                                                                   | Action                                                                        |
|--------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| Cannot change settings under this mode.                | Appears during shooting mode if a function can not be set by rotating the function ring.                                                                      | Remove the message after 2 seconds and return to shooting.                    |
| Improper alignment. Please try again.                  | The offset is too big for panorama shooting.                                                                                                                  | Remove the message after 2 seconds and return to shooting.                    |
| Connection Failed!                                     | In the case of failing to connect to a PC or a printer.<br>In the case of failing to connect to a TV-system (including HDMI).                                 | Remove cable and retry connection                                             |
| In this capture *****<br>Still size limited to<br>** M | After choosing the image size in the Function Ring (Smart), this message may occur when the still size limit is reached.                                      | Remove the message after 2 seconds and return to shooting.                    |
| Capture reached maximum limit                          | Press the shutter to capture images in recording a video. If the number of images captured exceeds 15, there will be a prompt if you press the shutter again. | The message will disappear in 2 seconds with no influence to video recording. |

| Message                         | Description                                                                                                                                                                                  | Action                                                        |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------|
| Write Protect !                 | In the case that there is lock protection for the card when saving the image.                                                                                                                | Disappear after 2 seconds and return to the previous image.   |
| Card Full !                     | In the case that the camera detects the card capacity is insufficient when turning on or pressing the shutter.                                                                               | Disappear after 2 seconds and return to the previous image.   |
| Memory Full !                   | In the case that the camera detects the memory capacity is insufficient when turning on or pressing the shutter.                                                                             | Disappear after 2 seconds and return to the previous image.   |
| Exceeded maximum folder number. | When the folder number in the card exceeds the maximum folder number (999), the time for turning on and reading will be too long, it will prompt the message until the reading is completed. | The message will end after the camera processing is complete. |
| Card Error !                    | The card cannot be recognized after being formatted.                                                                                                                                         | Normal display.                                               |
| Card is not formatted.          | When the card reading error occurs,the message of not formatted will be displayed.                                                                                                           | Disappear after 2 seconds and enter the formatting process.   |

| Message                   | Description                                                                                                                                                                            | Action                                                               |
|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|
| Slow access               | When a card lower than Class 4 is recording movie above HD, it may be accessed slowly and the recording cannot be continued.                                                           | Remove the message after 2 seconds and return to the shooting image. |
| Cannot write to SD card.  | The recording cannot be continued if there are problems which may cause interruption of the recording during writing to the card or recording in the process of shooting or recording. | Disappear after 2 seconds and return to shooting.                    |
| No Picture!               | When pressing the button there is no image in the camera or the card.                                                                                                                  | Disappear after 2 seconds and return to shooting.                    |
| No continuous group file. | When it switches from playback mode to Cont. playback mode, if there is no continuous group file in the files, this prompt message will display.                                       | Remove the message after 2 seconds and return to Thumbnail 3x3 mode. |
| No Red-Eye Detected!      | No red-eye detected when pressing for red-eye removing in playback touch-up.                                                                                                           | Disappear after 2 seconds and return to the touch-up menu.           |

| Message                                | Description                                                                                                             | Action                                                               |
|----------------------------------------|-------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|
| Too many pictures for fast processing. | The image may be unable to enter the date playback if the image exceeds the specification in the case of date playback. | Remove the message after 2 seconds and return to Thumbnail 3x3 mode. |
| Unable to recognize files.             | When the format of the file viewed is not supported or the file is damaged and cannot be recognized properly.           | This image message disappears only after the file is deleted.        |
| Protected!<br>Undeleteable!            | This message will be displayed on the image immediately when executing delete action to the protected files.            | Disappear after 2 seconds and return to the previous image.          |
| This image cannot be edited.           | The file format does not support editing or the edited file cannot be edited again.                                     | Remove the message after 2 seconds and return to the original image. |
| Cannot edit because no face detected!  | No face image entered into the touch-up menu.                                                                           | Remove the message after 2 seconds and return to the touch-up menu.  |

## Troubleshooting


| Problem                                          | Possible causes                                                                                                                                                                                                                                       | Solution                                                                                                                                                                                                                                                                         |
|--------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Camera does not turn on                          | <ul style="list-style-type: none"> <li>■ The battery has been depleted.</li> <li>■ The battery is not inserted correctly.</li> </ul>                                                                                                                  | <ul style="list-style-type: none"> <li>■ Recharge the battery.</li> <li>■ Correctly reinstall the battery.</li> </ul>                                                                                                                                                            |
| Camera turns off suddenly during operation       | <ul style="list-style-type: none"> <li>■ The batteries have been depleted.</li> </ul>                                                                                                                                                                 | <ul style="list-style-type: none"> <li>■ Recharge the battery.</li> </ul>                                                                                                                                                                                                        |
| The picture is blurred                           | <ul style="list-style-type: none"> <li>■ Camera shakes while taking a picture.</li> </ul>                                                                                                                                                             | <ul style="list-style-type: none"> <li>■ Turn on OIS feature.</li> <li>■ Please use tripod for high magnification (above 15X) optical zoom.</li> </ul>                                                                                                                           |
| Images and video files cannot be saved           | <ul style="list-style-type: none"> <li>■ The memory card is full.</li> <li>■ The memory card is locked.</li> </ul>                                                                                                                                    | <ul style="list-style-type: none"> <li>■ Use another memory card or delete unnecessary files.</li> <li>■ Unlock the memory card.</li> </ul>                                                                                                                                      |
| Images will not print from the connected printer | <ul style="list-style-type: none"> <li>■ The camera is not connected to the printer correctly.</li> <li>■ The printer is not PictBridge compatible.</li> <li>■ The printer is out of paper or ink.</li> <li>■ The printer paper is jammed.</li> </ul> | <ul style="list-style-type: none"> <li>■ Check the connection between the camera and printer.</li> <li>■ Use a PictBridge compatible printer.</li> <li>■ Load paper into the printer or replace the ink cartridge in the printer.</li> <li>■ Remove the jammed paper.</li> </ul> |
| Saving data to memory card is slow               | <ul style="list-style-type: none"> <li>■ Using a memory card below Class 4 may result in slower recording times.</li> </ul>                                                                                                                           | <ul style="list-style-type: none"> <li>■ Use a memory card with write Class 4 or higher than 4 to improve performance.</li> </ul>                                                                                                                                                |

| Problem                         | Possible Causes                                                                                                                        | Solution                                                                  |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------|
| Cannot write to the memory card | ■ The memory card has been locked.                                                                                                     | ■ Release the write lock of the memory card or replace with another card. |
| Too many movies to process      | ■ The number of pictures or folders in the memory card exceed the specifications, so the playback of data folder can not be displayed. | ■ Delete unwanted files.                                                  |

 When shooting with stacked filters attached, the corners of the photo may turn dark (vignetting effect) because the filter holder blocks light from reaching the camera image sensor; especially, at wide angle zoom control settings. Please take test shots and review the results when using stacked filters. (Filter size :  $\Phi 67\text{mm}$ )

 Please enter the new password on smart device after changing Wi-Fi password. Some models of smart device will remember the Wi-Fi password previously entered, so please clear the old password on smart device manually before connection (For different models, this operation may be varied, please subject to your user manual).

iOS devices

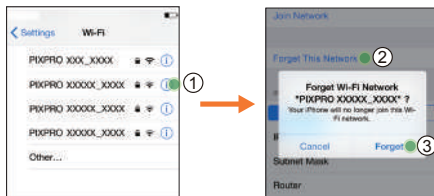

Android devices



## HDR- High Dynamic Range

HDR captures three photos taken at different exposure levels and combines them into one photo. This optimizes all the details of the object or scene in the photo. Even the features in darker areas can be viewed clearly. (The following pictures are an example of HDR composition.)


Underexposed




Normal exposure



Overexposed

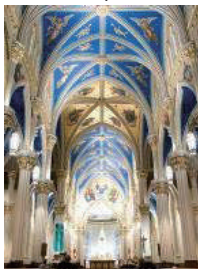


HDR Mode

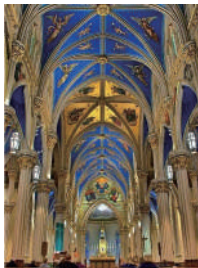


### **WDR- Wide Dynamic Range**

For high light, intense sunlight, or environments with artificial light, WDR allows Smart Lens to correct shadows surrounding a subject. This makes it easier to distinguish details in darker areas of the photo.

With WDR enabled video, clear images are provided when there are not only very bright areas, but also very dark areas in the camera's field of view. (The following pictures are an example of WDR.)

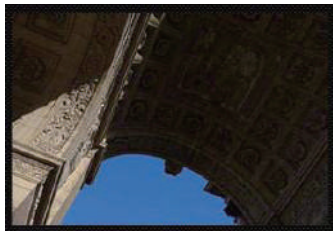

Without WDR

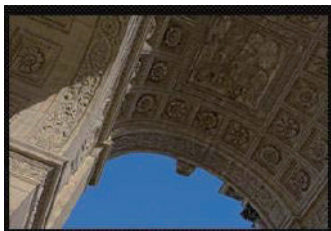

With WDR

© 2023 JK Imaging Ltd. All Rights Reserved.

The Kodak and Kodachrome, Kodacolor and Ektachrome trademarks, logo and trade dress are used under license from Eastman Kodak Company.

All other logos, products or company names that are referred to in this document are trade names, trademarks or registered trademarks of their holders. The holders are not affiliated with JK Imaging Ltd., our products or our website.

JK Imaging Ltd., 17239 So. Main Street, Gardena, CA 90248 USA

[kodakpixpro.com](http://kodakpixpro.com)

Made in Myanmar

Document No/Sequence: U.DIS.0062.0323.en.08



Ver. 8.0