

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC400 -8**

**PC400LC-8**

**PC450 -8**

**PC450LC-8**

SERIAL NUMBERS

PC400-	70001	
PC400LC-	70001	
PC450-	70001	and up
PC450LC-	70001	

**ecot3**

**KOMATSU**

[epcatalogs.com](http://epcatalogs.com)

# HYDRAULIC EXCAVATOR

PC400-8  
PC400LC-8  
PC450-8  
PC450LC-8

Machine model	Serial number
PC400-8	70001 and up
PC400LC-8	70001 and up
PC450-8	70001 and up
PC450LC-8	70001 and up

## 00 Index and foreword

### Index

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02223-15
00 Index and foreword	SEN02224-15
Index	SEN02225-15 ●
Foreword and general information	SEN02226-02
01 Specification	SEN02227-02
Specification and technical data	SEN02228-02
10 Structure, function and maintenance standard	SEN02229-08
Engine and cooling system	SEN02230-00
Power train	SEN02231-00
Undercarriage and frame	SEN02232-00
Hydraulic system, Part 1	SEN02233-00
Hydraulic system, Part 2	SEN02234-04
Hydraulic system, Part 3	SEN02235-02 ●
Work equipment	SEN02236-00
Cab and its attachments	SEN02237-00
Electrical system	SEN02238-03
20 Standard value table	SEN02239-03
Standard service value table	SEN02643-03
30 Testing and adjusting	SEN02240-07
Testing and adjusting, Part 1	SEN02644-04
Testing and adjusting, Part 2	SEN02645-06
Testing and adjusting, Part 3	SEN02662-02
40 Troubleshooting	SEN02241-04
Failure code table and fuse locations	SEN02646-03
General information on troubleshooting	SEN02647-03
Troubleshooting by failure code (Display of code), Part 1	SEN02648-04
Troubleshooting by failure code (Display of code), Part 2	SEN02649-03
Troubleshooting by failure code (Display of code), Part 3	SEN02650-04
Troubleshooting of electrical system (E-mode)	SEN02651-03
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02652-03

Troubleshooting of engine (S-mode)	SEN02653-02
50 Disassembly and assembly	SEN02242-07
General information on disassembly and assembly	SEN02654-03
Engine and cooling system	SEN02655-01
Power train	SEN02656-02
Undercarriage and frame	SEN02657-04
Hydraulic system	SEN02658-01
Work equipment	SEN02659-01 ●
Cab and its attachments	SEN02660-01
Electrical system	SEN02661-02
90 Diagrams and drawings	SEN02243-04
Hydraulic diagrams and drawings	SEN02244-01 ●
Electrical diagrams and drawings	SEN02245-03

[Buy now](#)

[Komatsu Hydraulic Excavator PC400 -8, PC400LC-8, PC450 -8,  
PC450LC-8 Shop Manual PDF](#)

[With Instant Download](#)