

JVC

Quick Start Guide

Portable Bluetooth® Party Speaker

MX-D519PB

 
Thank you for purchasing your new product.

We recommend that you spend some time reading this Quick Start Guide for a successful first time set up.



Unpacking

Remove all packaging from the unit. Retain the packaging. If you dispose of it please do so according to any local regulations.

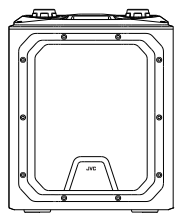


✓ Main Unit




✓ Mains Cable



 ✓ 3.5 mm to 3.5 mm stereo audio cable



✓ Instruction Manual

 


✓ Quick Start Guide

Connections

Connecting a Mobile Device

 
Connect the **LINE IN** (AUX IN) socket of the main unit to the headphone jack on a mobile device (not included) with a 3.5 mm to 3.5 mm stereo audio cable (included) illustrated below.

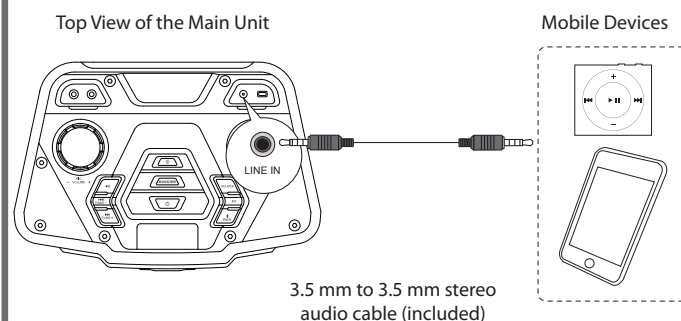

Connections


Connecting a Microphone

 Connect your microphone (not included) into the **MIC IN** socket. Turn the **-MIC VOLUME+** dial to adjust the volume/echo of the microphone.

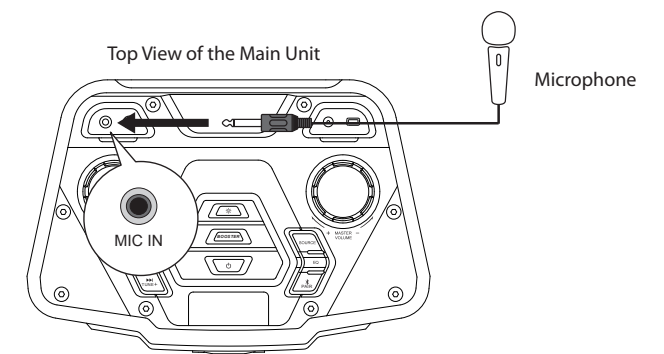

Connecting a Guitar

 You can connect a guitar (not included) to the unit directly through the **GUITAR IN** socket on the top panel.

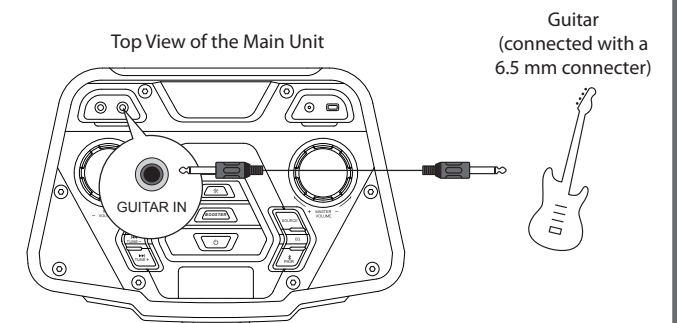


Charging the Unit



- Ensure all audio connections of the unit are connected before connecting to the mains power socket.
- Make sure the mains plug is firmly inserted into the mains socket.
- Do not overcharge the battery as it may shorten its life. Disconnect the mains cable after the unit is fully charged.
- The unit should be fully recharged after using the device each time. This will keep the health of the battery.
- If you plan to store your device for longer than 6 months, charge the battery for an hour every 6 months to keep it fresh.
- Charging time varies depending on conditions of use of the battery and the output voltage of your charging device.
- The unit will get warm during charging. This is not a malfunction.

 - The unit has a built-in rechargeable battery, which should be charged before using the speaker for the first time.
- The battery is charged automatically whenever the unit is connected to the mains socket.
- Charge the unit for 4 hours before first time use.
- Connecting the unit to any other power source may damage the unit. Unwind the mains cable to its full length. Connect the end of the cable to the **AC IN~** socket at the rear of the unit and then connect the mains plug to the mains socket.

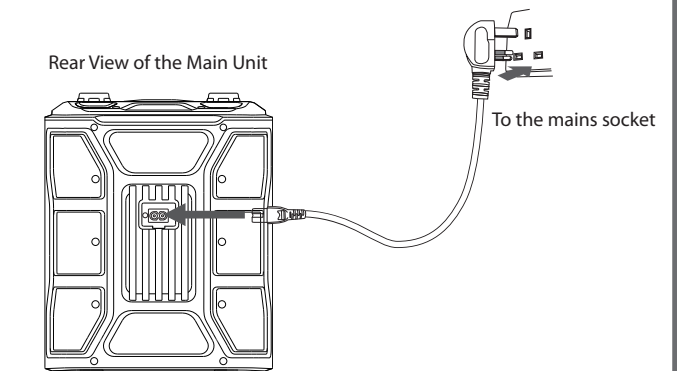

Battery Life

The unit has has approximately 8 hours of playback time in fully charge status and in medium sound level. Time stated above may vary, depending on ambient temperature or conditions of use.

Currys.co.uk

All the support you need.

Whether it's a tech emergency or you need plain good advice, we're always on hand to help.
UK: 0344 561 1234
IRE: 1890818 575

Partmaster.co.uk

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0344 800 3456 (UK customers only). Calls charged at National Rate.

The **Bluetooth®** word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Currys Group Limited is under license. Other trademarks and trade names are those of their respective owners.

All trademarks are the property of their respective owners and all rights are acknowledged.

Well done, your new product is now ready to use. You will find that there are many exciting features available. To get to know all these features, please take some time to read the instruction manual provided with your product.

The product is distributed and warranted exclusive by Currys Group Limited
"JVC" is the trademark of JVC KENWOOD Corporation, used by Currys Group Limited under license.

(QSG-MX-D519PB-211213V4)