

T.sonic™ 615

User's Manual



Transcend
Exceeding Your Expectations

Table of Contents

Introduction 	5
Package Contents 	5
Features 	6
System Requirements 	6
Safety Precautions 	6
■ General Use	6
■ Backing Up Data	7
■ Caution: Risk of Deafness.....	7
■ Reminders	7
Player Controls 	8
Music Playback Screen 	9
Basic Operation 	11
■ Charging the Battery.....	11
■ Power ON.....	11
■ Power OFF	11
■ Play a Song.....	12
■ Pause a Song	12
■ Next Track.....	12
■ Previous Track	12
■ Fast Forward	12
■ Rewind	12
■ Increase Volume	12
■ Decrease Volume	12
■ Main Menu	12
■ Voice Recording.....	12
■ A-B Repeat.....	13
■ Hold.....	13
■ Reset	13
MUSIC Mode 	14
■ Playing MP3, WMA, or WMA-DRM10 Music.....	14
■ File Navigator	14
■ Deleting Music Files	14
RADIO Mode 	15
■ Listening to the Radio	15
■ Selecting a Radio Station.....	15
■ Adjusting the Volume	15
■ Saving a Radio Station	16

■ Recalling a Saved Station	16
■ Recording the Radio	16
RECORD Mode 	17
■ Making Voice Recordings with the Built-In Microphone	17
■ Playing Voice or FM Recordings	17
■ File Navigator	18
■ Deleting Recorded Files	18
Settings 	19
■ The Settings Menu	19
■ Equalizer (EQ)	19
■ User EQ Customization	19
■ Repeat Mode.....	20
■ Play Speed.....	21
■ Record Settings	21
■ Record Quality	21
■ VAD (Voice Activity Detection).....	22
■ Contrast	23
■ Screen Saver	23
■ Lyrics Sync.....	24
■ Sleep Timer.....	24
■ Date / Time Settings.....	24
■ Set Date / Time	24
■ Time Zone	25
■ Daylight Saving Time (DST).....	25
■ FM Reset	26
■ Language.....	26
■ Music Transfer Protocol (MTP).....	27
■ Player Info.....	27
Driver Installation 	28
Connecting to a Computer 	29
■ Transferring Files to the T.sonic	29
■ Disconnecting from a Computer	30
T.sonic™ Utility Software 	32
■ Installing the T.sonic Utility Program.....	32
■ PC-Lock	34
■ Partition	37
■ Log In / Log Out	38
■ Changing your Password.....	39
■ Forgotten Passwords	40

Troubleshooting | 41

Specifications | 43

Ordering Information | 43

Transcend Limited Warranty | 44

Introduction |

Thank you for purchasing Transcend's **T.sonic™ 615**, a next-generation MP3 Player that combines all the advantages of lightweight portable music with the benefits of a USB flash drive, and includes many extra features such as an FM radio, digital voice recording, karaoke-style lyrics display, A-B repeat functions and variable track playback speeds. Your T.sonic 615 is equipped with a high-speed USB 2.0 interface to transfer data and music files to and from your computer quickly and easily. The A-B repeat and variable track playback speed features allows you to continuously replay specific sections of an audio file at slower or faster speeds – ideal for learning foreign languages and reviewing an important part of a song or recording. In addition, you can make personal memos and record meetings or class lectures using the digital voice recorder with the built-in microphone. The stylish T.sonic 615 from Transcend will change the way you think about digital music forever.

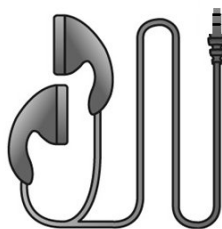
Package Contents |

The T.sonic 615 package includes the following items:

- T.sonic™ 615



- Earphones




- USB cable



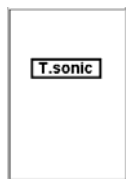- Software CD





Features |

- MP3 Player – supports MP3, WMA, WMA-DRM10 (subscription music) and WAV music formats
- Recordable FM Radio with 20 station presets
- Advanced Digital Voice Recorder
- Karaoke-style lyrics display
- Vivid dual-color OLED screen displays clear text at any angle and in any light
- VAD (Voice Activity Detection) for high quality gapless audio recordings
- A-B repeat function allows you to continuously replay a designated section of a track
- Variable track playback speeds
- Supports 13 languages including menus, song/album title, artist name and lyrics
- USB flash drive capabilities for data transfer and storage
- Included software can be used to lock your computer and password-protect your files
- 7 Equalizer effects, including a customizable USER EQ setting
- Internal rechargeable Li-ion battery provides over 15 hours of continuous music playback*
- High-speed mini USB 2.0 port for easy computer connectivity and fast file transfers
- Real Time Clock displays local and world times

* Max. playback time achieved with screen saver set to “Blank” and “Lyrics Sync” disabled.

System Requirements |

- A desktop or notebook computer with a working USB port
- One of following operating systems:
 - Windows® Me
 - Windows® 2000
 - Windows® XP
 - Windows Vista™
 - Mac™ OS 10.0, or later
 - Linux™ Kernel 2.4, or later

Safety Precautions |

These usage and safety guidelines are **IMPORTANT!** Please follow them carefully.

■ General Use

- Unpack the contents of the T.sonic package carefully.
- Do not allow your T.sonic to get wet or come in contact with water or any other liquids.

- Do not use a damp/wet cloth to wipe the exterior case.
- Do not use or store your T.sonic in any of the following environments:
 - Direct sunlight
 - Next to an air conditioner, electric heater or other heat sources
 - In a closed car that is in direct sunlight

■ Backing Up Data


Transcend does NOT take any responsibility for data loss or damage during operation. If you decide to store data on your T.sonic, we strongly advise that you regularly backup the data to a computer or other storage medium.

To ensure Hi-Speed USB 2.0 data transfer rates when connecting to a computer, please ensure the computer has the necessary USB drivers. If you are unsure how to check this, please consult your computer or motherboard's User's Manual for USB driver information.

■ Caution: Risk of Deafness

- Repeated or regular use of headphones or earphones at volume levels above 80 decibels can give a false impression that the audio level is not high enough. Users may try to progressively increase the volume control, therefore risking a dangerous noise level for their ears.
- To protect your health and your hearing, keep the volume of your MP3 player below 80 decibels and do not use for an extended period of time. Stop use if symptoms like headaches, nausea, or hearing disorders occur.
- Your MP3 player is limited to a volume level of 100 decibels.
- Both the MP3 player and its accompanying earphones are compliant with the French regulation concerning musical Walkmans (24th July 1998 Order).
- Before using any other earphones, confirm that their technical specifications are compatible with the original set.

■ Reminders

- Make sure the  switch is not enabled before turning on the player.
- Never use the "Quick Format" or "Full Format" functions in Windows® to format your T.sonic 615.
- Follow the procedures in the "**Disconnecting from a Computer**" section to properly remove your T.sonic 615 from a computer.
- Transcend occasionally releases firmware updates for certain products. We suggest you visit <http://www.transcendusa.com> and download the latest firmware version for your device.

Player Controls |

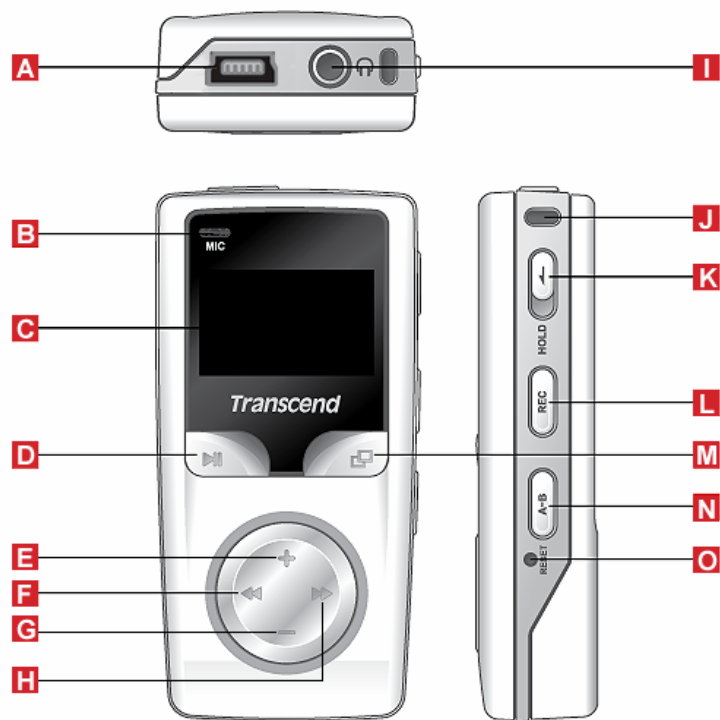
 







 
 





































Figure 1. T.sonic 615

A		Hi-Speed mini USB 2.0 Connector
B		Microphone
C		Dual-Color OLED Display
D		Play / Pause / Power
E		Volume Up
F		Previous / Rewind
G		Volume Down
H		Next / Fast-Forward
I		Headphone Jack
J		Lanyard Attachment Loop
K		Hold Switch
L		Record
M		Menu Button
N		A-B Repeat
O		Reset Button

Music Playback Screen |



Figure 2. OLED Display

	ICON	INDICATION
A	Record Source	 Built-in Microphone  FM Radio
B	VAD	Indicates Voice Activity Detection is enabled
C	Record Quality	 Low Quality  Medium Quality  High Quality
D	Sleep	Indicates the Sleep Timer is enabled
E	EQ Mode	(Blank)  Normal  Pop  Rock  Classical  Jazz  Bass  USER
F	Repeat Mode	(Blank)  Normal  Repeat One  Repeat All  Shuffle  Normal in Folder  Repeat in Folder  Shuffle in Folder  A-B Repeat
G	Play Speed	(Blank) 1.00x  1.33x  1.14x  0.80x  0.67x
H	Graphic EQ	Displays real-time graphic equalizer visualization during playback.
I	Lock	Indicates the Hold switch is enabled (controls are locked)
J	Battery	Indicates the battery power level
K	Album / Artist / Lyrics	Displays album title, artist name, or lyrics
L	Song Title / Lyrics	Displays song title, file name, or lyrics
M	Date	Displays today's date and day of the week
N	Time	Displays the current time
O	Track Info	Indicates current track number and playtime statistics
P	Play Status	 Play  Pause  Stop  Rewind  Fast-Forward  Record

Q	Text Display Mode	 Album Title	 Artist Name	 Song Lyrics
----------	--------------------------	--	---	--

Basic Operation |



The T.sonic 615 needs to be charged for at least 12 hours before first use.

■ Charging the Battery

Plug the small end of the USB cable into the Mini USB port on the T.sonic, and plug the large end of the cable into an available USB port on your desktop or notebook computer. The T.sonic 615's internal Li-ion battery will begin charging.







Figure 3. Connecting to a Computer

■ Power ON

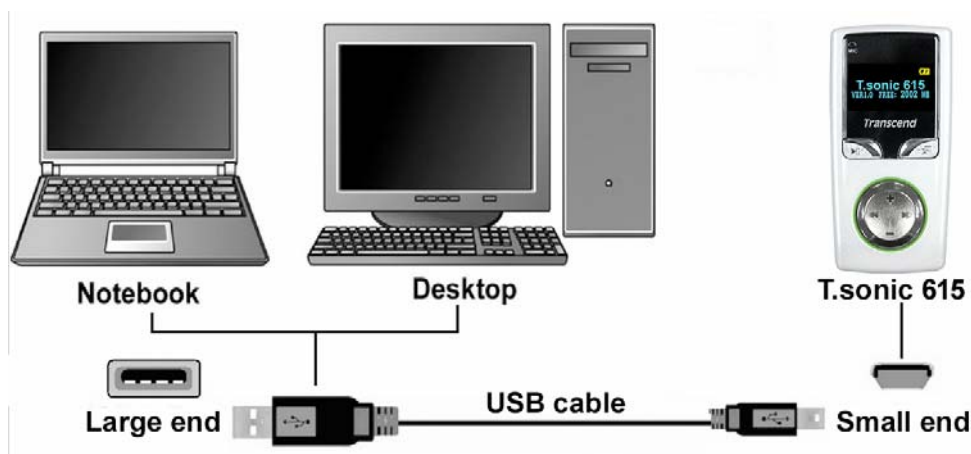Press and hold the  button to turn on the player. An animated Transcend logo will appear on the screen. After the startup screen disappears, the Main Menu will appear. You can now start using the T.sonic 615. The Main Menu will appear.



- It takes a few seconds for the T.sonic to power up.
- If the Lock icon  appears on the display while powering on the T.sonic, this means that the  switch is enabled. You must switch off the Hold mode before you can power on the player.


■ Power OFF

Press and *hold* the  button to turn off the T.sonic 615.


- It takes a few seconds to completely power down.
- The power OFF animation will be displayed:




■ Play a Song

Press  to play the currently selected MP3, WMA, or WAV track.

■ Pause a Song

Press  to pause and un-pause a track during playback.

■ Next Track

Press  to skip to the next available song.

■ Previous Track

Press  to go back to the previous song.

■ Fast Forward

Press and *hold* the  button to fast-forward.

■ Rewind

Press and *hold* the  button to rewind.

■ Increase Volume

Press once or press and *hold* the  button until you reach the desired volume level.

■ Decrease Volume


Press once or press and *hold* the  button until you reach the desired volume level.


■ Main Menu

Press  in any mode to bring up the Main Menu. The Main Menu gives you access to the **MUSIC**, **RADIO**, **RECORD** modes and the **SETTINGS** menu.

 
 
 
■ Voice Recording

The T.sonic 615 records using its built-in microphone located near the  button.


1. Press and *hold* the  button for 2 seconds in any mode (except the FM Radio mode) to activate the T.sonic 615's built-in microphone and begin recording.

2. Press and *hold*  for 2 seconds again to finish the recording.
3. Recorded audio files can be found in the **Record** mode.


■ A-B Repeat

1. While listening to a song or recording in the Music or Record modes, press the  button once to mark the beginning of the portion you wish to repeat.
2. Press the  button again to mark the end of the section you wish to repeat.
3. The marked section of the track will playback the marked A-B section in a continuous loop.
4. Press the  button once more to stop the A-B repeat function.

■ Hold

When the  switch is enabled, all of the T.sonic 615's buttons will be disabled, and cannot accidentally be pressed while in your pocket.

■ Reset



If the T.sonic is not functioning properly, you can reboot by pressing  for 3 to 5 seconds.

MUSIC Mode |









Before buying DRM (Digital Rights Management) protected music online, please be advised that the T.sonic 615 only supports WMA-DRM10 file


■ Playing MP3, WMA, or WMA-DRM10 Music

1. Press and *hold* the  button to power ON the T.sonic. The Main Menu will appear.
 - If the T.sonic is already on, press the  button to enter the Main Menu.




2. Use the  and  buttons to select the “MP3” icon  and press  to confirm. The player will automatically find available music files.
3. Select the song you want to listen to with the  and  buttons or use the **File Navigator**.
 - If T.sonic cannot find any MP3, WMA, or DRM10 files, a “No Music Files” message will appear.
 - WAV files can only be played in the Record mode.











4. Press the  button to play the music file.
 - T.sonic 615 supports Mpeg I Layer 3 and WMA files compressed at between 32Kbps – 320Kbps.

■ File Navigator

The File Navigator is a fast and convenient way of moving between tracks, files and folders.

1. In the MUSIC mode, press and *hold* the  button to enter the File Navigator.



2. A list of files or folders will appear. Use the  and  buttons to move up and down the list.
3. Press  or  to play the **highlighted** song or to enter the selected folder.
4. Press  or select the  icon and press  to move up one folder level.
5. To exit, press and *hold* .

■ Deleting Music Files

1. In the MUSIC mode, press and *hold*  to enter the File Navigator.



2. Navigate to the file you want to delete with the **+** / **-** and **◀** / **▶** buttons.
3. With the file highlighted, press the **REC** button. A “Delete? yes / no” message will appear.



4. Use the **◀** button to highlight “yes” and press **▶** to permanently delete the file.


RADIO Mode |

■ Listening to the Radio

1. Plug in the earphones . (Earphones must be plugged-in to listen to the Radio)
2. Press the button to go to the Main Menu.
3. Use the **◀** and **▶** buttons to select the “FM” icon and press .



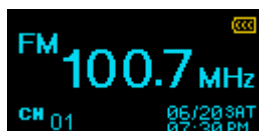
4. The current FM radio frequency will be displayed.



- The first time you use the Radio, the T.sonic will automatically scan all frequencies and save the 20 strongest stations as channel presets (CH). To rescan, select “FM Reset” in the SETTINGS menu.

■ Selecting a Radio Station

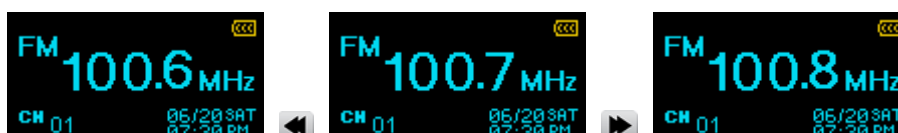To manually select a radio station, press **◀** or **▶** (the FM frequency will increase or decrease in 0.1MHz increments) until you reach the desired station. Alternatively, you can press and hold either **◀** or **▶** to auto-scan for the next available station.




■ Adjusting the Volume

Press once or press and *hold* the **+** or **-** buttons until you reach a comfortable volume level.


■ Saving a Radio Station

The T.sonic lets you save (preset) your 20 favorite radio stations (CH 01 to CH 20).

To save a station:

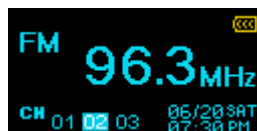
1. Use ◀ or ▶ to select the radio station (FM frequency) that you want to save.
2. Press (don't hold) the  button to display the preset channel selector




3. Use the ◀ and ▶ buttons to select the channel number (CH 01 to CH 20) to save the station to.
4. Press (don't hold)  again to save the current station to that channel number.


■ Recalling a Saved Station

1. In the RADIO mode press (don't hold)  to display your saved stations (CH 01 to CH 20).



2. Use the ◀ and ▶ buttons to select the channel you want to listen to.
3. Press  to listen to the selected channel.




■ Recording the Radio

1. Select a radio station that you want to record.
2. Press and *hold* the  button for 2 seconds to begin recording the station.
3. An automatically generated file name for your recording will appear.



➤ FM Recordings are named in this format: "**MonthDayF###.WAV**"

Ex: "0101F012.WAV" would be the twelfth FM recording made on January 1st

4. Press  to pause the recording, and press  again to resume.
5. Press and *hold*  again to finish the recording. The player will return to the RADIO mode.

➤ FM recordings are saved in the /FMIN.DIR/ folder


➤ FM recordings can be accessed by using the File Navigator in RECORD mode 

➤ To adjust the recording sample rate, please see the "Record Settings" section of this manual.

RECORD Mode |

The T.sonic 615 can record from 2 different sources: the FM Radio or the built-in microphone. The RECORD mode is for creating voice recordings and playing back both FM and voice recordings. To record from the FM Radio, please see the previous section on “**Recording the Radio.**”




■ Making Voice Recordings with the Built-In Microphone


1. Press and *hold* the  button for 2 seconds in any mode (except FM Radio) to activate the T.sonic 615's built-in microphone and begin voice recording.
2. An automatically generated file name for your recording will appear.








- Voice Recordings are named in this format: “**MonthDayM###.WAV**”

Ex: “0113M012.WAV” would be the twelfth Voice recording made on January 13




3. Press  to pause the recording, and press  again to resume.
4. Press and *hold*  again to finish the voice recording. The player will return to the RECORD mode.

- Voice recordings are saved in the **/MICIN.DIR/** folder
- Voice recordings can be accessed by using the File Navigator in RECORD mode

- To adjust the recording sample rate, please see the “Record Settings” section of this manual.
- For best results, try to position the T.sonic 615's microphone as close as possible to the source of the sound or voice you are recording.

■ Playing Voice or FM Recordings

1. Press  to bring up the Main Menu.
2. Use the  or  buttons to select the “Record” icon  and press .



 
3. All voice and FM radio recordings can be found in the RECORD mode. Use the  and  buttons or the **File Navigator** to find your desired recording and press  to listen to it.

- If the T.sonic cannot find any voice or FM recordings, a “No Recordings” message will appear.















■ File Navigator


The File Navigator is a fast and convenient way of moving between tracks, files and folders.

1. In the RECORD mode, press and *hold* the  button to enter the File Navigator.








2. The “MICIN.DIR” or “FMIN.DIR” folder will appear, and a list of available recordings will be shown. Use the  and  buttons to move up and down the list.
3. Press  to play the selected recording.
4. To switch between the MICIN.DIR and FMIN.DIR folders, press  or select the  icon and press  to go up to the “Root” directory.
 - Voice recordings can be found in the /MICIN.DIR/ folder
 - FM recordings can be found in the /FMIN.DIR/ folder
5. Select a folder using the  and  buttons, and press  or  to open it.
6. To exit, press  or  while in the “Root” directory.



■ Deleting Recorded Files

1. In the RECORD mode, press and *hold*  to enter the File Navigator.








2. Navigate to the file you want to delete with the  /  and  /  buttons.
3. With the file highlighted, press the  button. A “Delete? yes / no” message will appear.



4. Use the  button to highlight “yes” and press  to permanently delete the file.

Settings |

■ The Settings Menu





1. Press the  button to enter the Main Menu.
2. Use the  or  buttons to select the “Settings” icon  and press .






■ Equalizer (EQ)

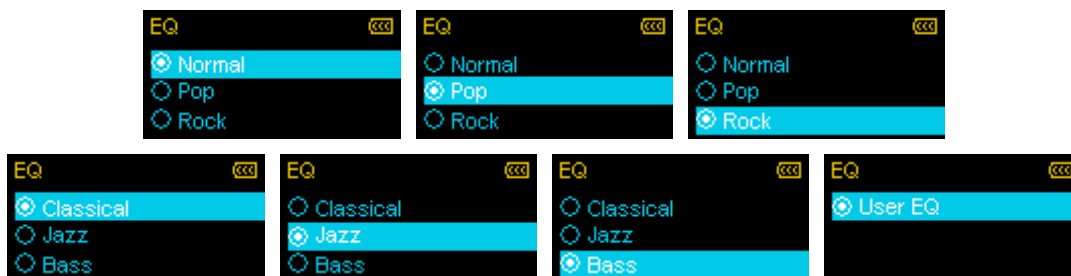
There are seven equalizer modes to choose from:

Normal, Pop, Rock, Classical, Jazz, Bass, and User EQ

1. In the SETTINGS menu, use the  and  buttons to select “EQ”  and press .



2. Use the  and  buttons to select an equalizer mode. If music is playing, you will instantly hear the difference between each mode through the earphones.
3. Press  to confirm the new EQ setting.




■ User EQ Customization



The User EQ allows you to customize the 5-band equalizer to your personal preference.

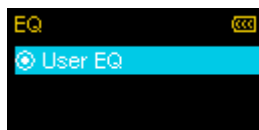1. In the SETTINGS menu, use  and  to select “EQ”  and press .



2. In the EQ menu, use  and  to select “User EQ” and press .




3. Use the  and  buttons to switch between 5 bands: 80Hz, 250Hz, 1KHz, 4KHz, and 12KHz. The “ALL” setting move all 5 bands up or down together.



4. Press **+** or **-** to increase or decrease levels in 1.0dB steps (Adjustment range: -7dB to +8dB)



5. Press  to save the new User EQ settings and return to the SETTINGS menu.


Repeat Mode

There are seven Repeat modes to choose from:

- Normal** (plays all music files available one time, in consecutive order)
- Repeat One** (continuously repeats the current song),
- Repeat All** (continuously repeats playback of all music files available, in consecutive order)
- Shuffle** (continuously repeats playback of all music files available, in random order)
- Normal in Folder** (plays all music files in a folder one time, in consecutive order)
- Repeat in Folder** (continuously repeats playback of all music files in a folder, in consecutive order)
- Shuffle in Folder** (continuously repeats playback of all music files in a folder, in random order)

1. In the SETTINGS menu, use  and  to select the "Repeat" icon  and press .



2. Use the **+** and **-** buttons to select the desired repeat mode and press  to confirm.






■ Play Speed

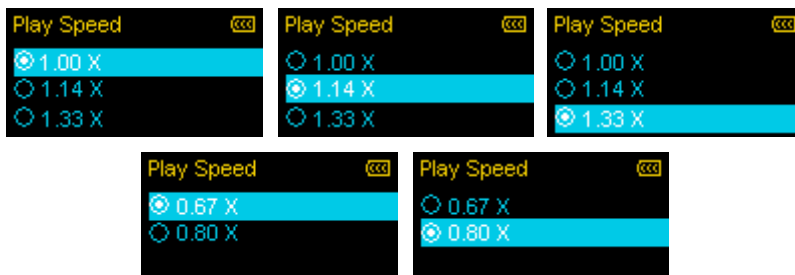
The speed at which an audio file is played can be increased or decreased. Playback speeds can be set to:

0.67 X (very slow), **0.80x** (slow), **1.00x** (normal), **1.14x** (fast), **1.33x** (very fast).

1. In the SETTINGS menu, use ◀ or ▶ to select the “Play Speed” icon  and press .



2. Use + or - to select one of the 5 playback speed settings and press  to confirm.



■ Record Settings

■ Record Quality


The quality of an audio recording can be set to **Low** (8,000Hz), **Medium** (16,000Hz), or **High** (32,000Hz). Higher recording quality settings require more memory space to save the recorded WAV files.

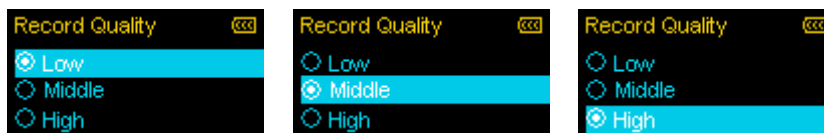
1. In the SETTINGS menu, use ◀ or ▶ to select “Record Settings”  and press .



2. Use ◀ or ▶ to select “Record Quality”  and press .



3. Use + or - to switch between “Low”, “Medium”, or “High” and press  to confirm.



Maximum Record Time / Quality Table

FM Radio Recording	Sample rate	Channels	2GB	4GB
	Low (8KHz)	2 (stereo)	64 hrs	128 hrs
	Med (16KHz)	2 (stereo)	32 hrs	64 hrs
	High (32KHz)	2 (stereo)	16 hrs	32 hrs



Voice Recording	Sample rate	Channels	2GB	4GB
	Low (8KHz)	1 (mono)	128 hrs	256 hrs
	Med (16KHz)	1 (mono)	64 hrs	128 hrs
	High (32KHz)	1 (mono)	32 hrs	64 hrs

Note: The above recording times may not be possible if space is limited or the battery power is low.

- For best results, try to position the T.sonic 615's Microphone as close as possible to the source of the sound or voice you are recording.
- RADIO recordings are recorded in Stereo. Voice recordings are recorded in Mono.

■ VAD (Voice Activity Detection)


VAD allows the T.sonic 615 to make gapless voice recordings. This means during voice recording with the internal microphone, the player will only record when it detects voices. If the person(s) pauses or stops speaking, the T.sonic 615 will temporarily stop recording until the person(s) starts speaking again. This allows for more concise, easier to understand recordings and smaller recording files.

1. In the SETTINGS menu, use ◀ or ▶ to select the "Record Settings" icon  and press .



2. Use ◀ or ▶ to select "VAD" icon  and press .



3. Use + or - to switch between "Enable" or "Disable" and press .




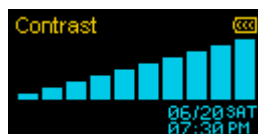
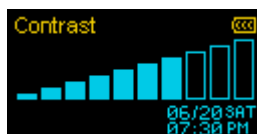
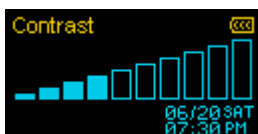
■ Contrast

The contrast of the OLED display can be adjusted for brighter or darker text. Higher contrast levels will drain the battery faster, while lowering the contrast level will provide better battery life.

1. In the SETTINGS menu, use ◀ and ▶ to select the “Contrast” icon  and press .



2. Use ◀ and ▶ to increase or decrease contrast. Press  to confirm the new contrast level.




■ Screen Saver

This function lets you enable/disable the screen saver, choose which screen saver you want to be displayed, and set the time delay for the screen saver to activate. Available screen savers are:

- Blank** (Displays an all-black screen to save battery life)
- Clock** (Displays the current real time)
- Song Title** (Displays the title of the song currently being played)

1. In the SETTINGS menu, use ◀ and ▶ to select the “Screen Saver” icon  and press .



2. Use + or - to select a Screen Saver delay and press . The screen saver will commence whenever this amount of time passes with no button activity. Available delay timers are: “Disable”, “10 Seconds”, “20 Seconds”, and “60 Seconds”



3. After you select a Screen Saver time delay, a list of available screen savers will appear.



4. Use + or - to select one of the three Screen Saver types and press .

■ Lyrics Sync


This feature displays the lyrics of a song (if available) simultaneously during music playback.

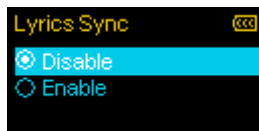
Note: For Lyrics Sync to work, an “.LRC” file with the exact same file name as its corresponding .MP3 song must be transferred to the T.sonic in the same folder as the MP3 file.

Ex: If the MP3 file is “GM-Last_Christmas.mp3”, the LRC lyrics file must be named “GM-Last_Christmas.lrc”

1. In the SETTINGS menu, use ◀ and ▶ to select the “Lyrics Sync” icon  and press .



2. Use + or - to switch between “Enable” or “Disable” and press . If lyrics are disabled, the album, artist, and song title information will be displayed during music playback.




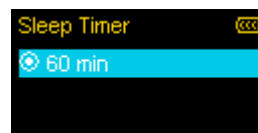
■ Sleep Timer

This function sets a time delay to automatically power OFF the T.sonic 615, regardless of playback status.

1. In the SETTINGS menu, use ◀ and ▶ to select “Sleep Timer”  and press .





2. Use + or - to select a Sleep delay time and press . You can choose from “15 Min”, “30 Min”, “60 Min” or “Disable”. When the selected time is reached, the T.sonic will automatically power OFF.



■ Date / Time Settings

■ Set Date / Time

This setting lets you adjust the time and date, choose between 12Hr or 24Hr format, and set the time zone.

1. In the SETTINGS menu, use ◀ or ▶ to select the “Date/Time Settings” icon  and press .

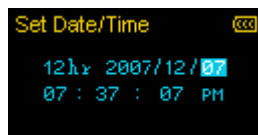


2. Use ◀ or ▶ to select the "Set Date/Time" icon  and press .

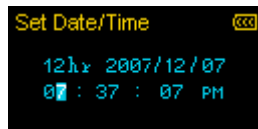


3. Use ◀ and ▶ to move between 12/24Hr, Year, Month, Day, Hour, Minute, Second, and AM/PM.

➤ "12 Hr" will display AM and PM, "24 Hr" will display 00:00 - 24:00





4. Use the + and - buttons to adjust the values of each field.





5. After setting the date and time, press  to continue and set the **Time Zone**.

■ Time Zone

The T.sonic can display the local time for different time zones; this is a handy feature for travelers.

1. In the SETTINGS menu, use ◀ or ▶ to select the "Date/Time Settings" icon  and press .




2. In the "Date/Time Settings" menu, use ◀ or ▶ to select the "Time Zone" icon  and press .





3. The Time Zone setup screen will appear.



4. Use ◀ and ▶ to select the time zone for your country and press .

■ Daylight Saving Time (DST)


If your region uses DST, the T.sonic can automatically adjust the clock for Summer and Winter time.

1. In the SETTINGS menu, use ◀ or ▶ to select the “Date/Time Settings” icon  and press .



2. Use ◀ or ▶ to select the “Daylight Saving” icon  and press .



3. Use + or - to switch between “Enable” or “Disable” and press .




- *Enabling Daylight Saving Time will automatically adjust the T.sonic 615's clock forward or backward one hour, depending on the time of year and the time zone you are in.*

■ FM Reset

This function resets all saved Radio stations (CH 01 – CH 20). If you use this feature, the next time you enter the **RADIO** mode, the T.sonic will automatically re-scan and save the 20 strongest stations.

1. In the SETTINGS menu, use ◀ or ▶ to select the “FM Reset” icon  and press .



2. Use + or - to select “Yes” to reset your FM stations or “No” to keep them. Press  to confirm.




■ Language

This option adjusts the T.sonic 615's display language, which includes menus, song/album titles, artist names, and lyrics. The player supports 13 different languages.

1. In the SETTINGS menu, use ◀ and ▶ to select the “Language” icon  and press .



2. Use the **+** and **-** buttons to select your language and press  to confirm.



■ Music Transfer Protocol (MTP)

If you own WMA-DRM10 music files or if you want to use Windows Media Player 10 to synchronize music between your computer and the T.sonic, the Music Transfer Protocol (MTP) must be enabled. This setting lets you switch between **MTP** or **USB** transfer modes.

USB (Use this mode for normal transfer of all other files or if using Mac™ or Linux™)

MTP (Use this mode for transferring WMA-DRM10 music files with Windows Media Player 10)

1. In the SETTINGS menu, use  or  to select the “MTP” icon  and press .







2. Use **+** or **-** to switch between “MTP” or “USB” and press .



➤ Note: In MTP transfer mode, all files will be stored in the “Music” folder.

■ Player Info

Displays the T.sonic 615’s firmware version and available memory capacity.

1. In the SETTINGS menu, use  or  to select the “Player Info” icon  and press .



2. Press any button to continue.

Driver Installation |

■ Driver Installation for Windows® Me, 2000, XP and Vista

No drivers are required. These Windows® Operating Systems have built-in drivers to support the T.sonic 615. Plug your T.sonic 615 into an available USB port and Windows® will install the necessary files. A **Removable Disk** drive with a newly assigned drive letter will appear in the **My Computer** window.

■ Driver Installation for Mac™ OS 10.0, or Later

No drivers are required. Plug your **T.sonic™ 615** into an available USB port and your computer will automatically detect it.

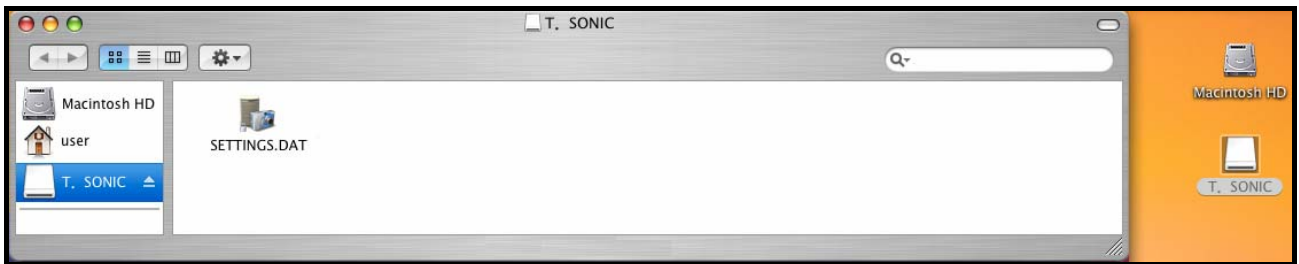


Figure 4. Mac Installation

■ Driver Installation for Linux™ Kernel 2.4, or Later

No drivers are required. Plug your T.sonic 615 into a USB port and mount it.

1. Create a directory for the T.sonic.

Example: **mkdir /mnt/T.sonic**

2. Mount the T.sonic.

Example: **mount -a -t msdos /dev/sda1/mnt/T.sonic**



Plug the T.sonic directly into a USB port on your computer. Connecting the T.sonic through a USB hub is strongly discouraged.



Audio files (MP3/WMA/WMA-DRM10/WAV) must be **no more than 4 folder levels away** from the "[/Root /]" directory. The T.sonic 615 is limited to 128 characters for a file name.



NEVER format your T.sonic 615 in Windows.

Connecting to a Computer |



If you are using Windows Media Player 10 and want to play WMA-DRM10 music files, you must set the T.sonic's Music Transfer Mode to MTP to transfer and synchronize music files between the computer and your T.sonic 615.

■ Transferring Files to the T.sonic

If you want to use your T.sonic 615 to listen to music other than the Radio, you must transfer MP3, WMA, or WMA-DRM10 music files to the player. **When the T.sonic 615 is connected to a computer, it is locked into transferring files.** You will not be able to play or record any music at this time. Please disconnect your T.sonic 615 from the computer when you want to use the player.

1. Plug the small end of the USB cable into the Mini USB port on the T.sonic and plug the large end of the cable into an available USB port on your desktop or notebook computer. While the T.sonic™ is connected to a computer, it can only be used for transferring files. The T.sonic 615's rechargeable Li-ion battery will begin charging.

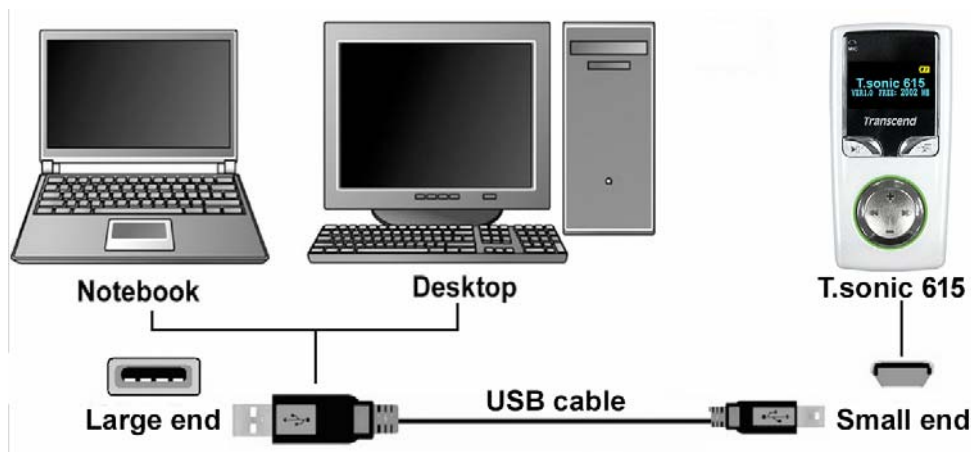


Figure 5. Connecting to a Computer

2. When connected to a computer the T.sonic 615's screen will display a "READY" message, indicating that files can be loaded onto the player.



- **You cannot play or record music when the T.sonic 615 is connected to a computer.**

If you are using Windows® a new Removable Disk drive with a newly assigned drive letter representing the T.sonic 615 will appear in the My Computer window.

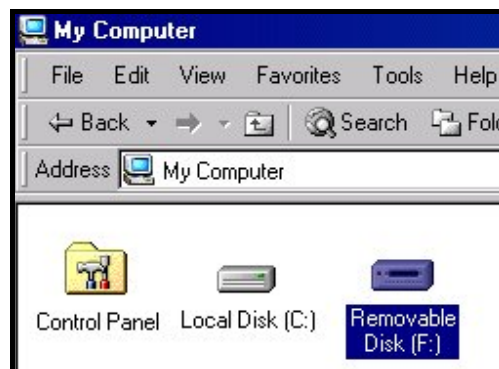


Figure 6. The T.sonic 615 shows up as a Removable Disk in the My Computer window

*Note: "(F:)" is an example drive letter – your "My Computer" window may differ

3. To transfer normal **MP3** and **WMA** music files to the T.sonic, the MTP (see **Music Transfer Protocol**) mode in the Settings menu must be set to "USB." You can transfer music and data files to the T.sonic by simply dragging them onto the T.sonic 615's "Removable Disk" drive letter.
4. While files are being transferred to the T.sonic, the screen will display a "WRITE" message. After files have been successfully transferred, the "READY" message will be displayed again.



5. If you choose to transfer files or folders to the computer, the T.sonic will display a "READ" message indicating that files are being transferred to the computer. After files have been successfully transferred, the "READY" message will be displayed again.



NEVER unplug the T.sonic during file transfer. Unplug the T.sonic only when Windows informs it is safe (see Disconnecting from a Computer) and the "READY" screen disappears.

■ Disconnecting from a Computer

Always follow the procedures listed below before you disconnect the T.sonic.

Removing the T.sonic 615 in Windows® Me, 2000, XP and Vista


1. Select the Hardware icon  in the system tray.
2. The **Safely Remove Hardware** pop-up window will appear. Select it to continue.




Figure 7. Safely Remove Hardware

3. A message window will appear stating: "The 'USB Mass Storage Device' device can now be safely removed from the system."



Figure 8. Safe to Remove Hardware

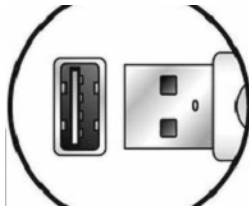4. Unplug the T.sonic from your computer.



Removing the T.sonic 615 in Mac™ OS 10.0 or Later

1. Drag the Disk icon that corresponds to your T.sonic 615 into the trashcan.
2. Unplug your T.sonic 615 from the USB port

Removing the T.sonic 615 in Linux™ Kernel 2.4 or Later

1. Execute **umount /mnt/T.sonic** to un-mount the device.
2. Unplug your T.sonic 615 from the USB port.

T.sonic™ Utility Software |

The bundled software CD includes some very useful software tools that can help you manage your data increase productivity. Please read the following instructions before using the **T.sonic™ Utility** program.

The T.sonic Utility has four functions:

PC-Lock	(Use the T.sonic 615 to temporarily lock your computer)
Partition	(Divide your T.sonic's memory into Public and Private areas)
Login/out	(Log in to the Private area to access your personal files)
Password	(Change the password to the Private area on your T.sonic)

- *The T.sonic Utility is only supported in Windows® Me, 2000, XP and Vista*
- *The T.sonic Utility is not supported on Mac™, or Linux™ Operating Systems.*
- *To use the T.sonic Utility, you must log in to the Windows® OS with Administrator rights.*

■ Installing the T.sonic Utility Program

1. Put the software CD into your computer's CD-ROM drive (with Auto-run enabled).
2. The T.sonic 615 Auto-Run window will appear.



Figure 9. T.sonic Auto-Run window

3. Click on the “**T.sonic 615 Utility**” button.
4. Choose your setup language and click the “**OK**” button to continue.



Figure 10. Choose a language

5. The “InstallShield Wizard” window will appear. Click the “**Next**” button to continue. The InstallShield Wizard will guide you through the installation process.

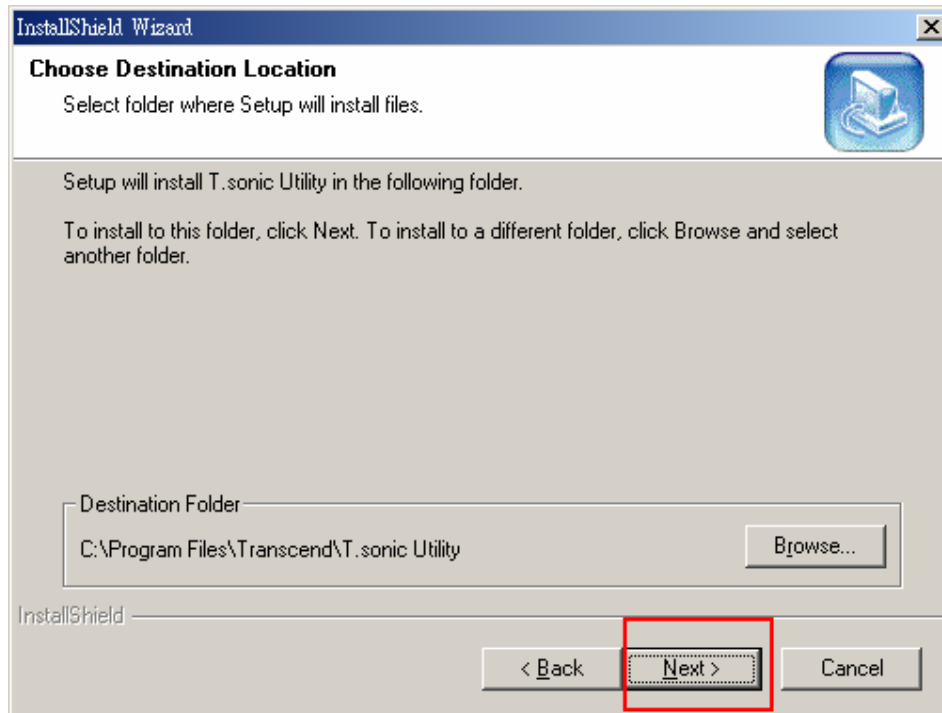


Figure 11. T.sonic Utility InstallShield Wizard

6. When the T.sonic 615 Utility is finished installing, click the “**Finish**” button to exit the wizard.

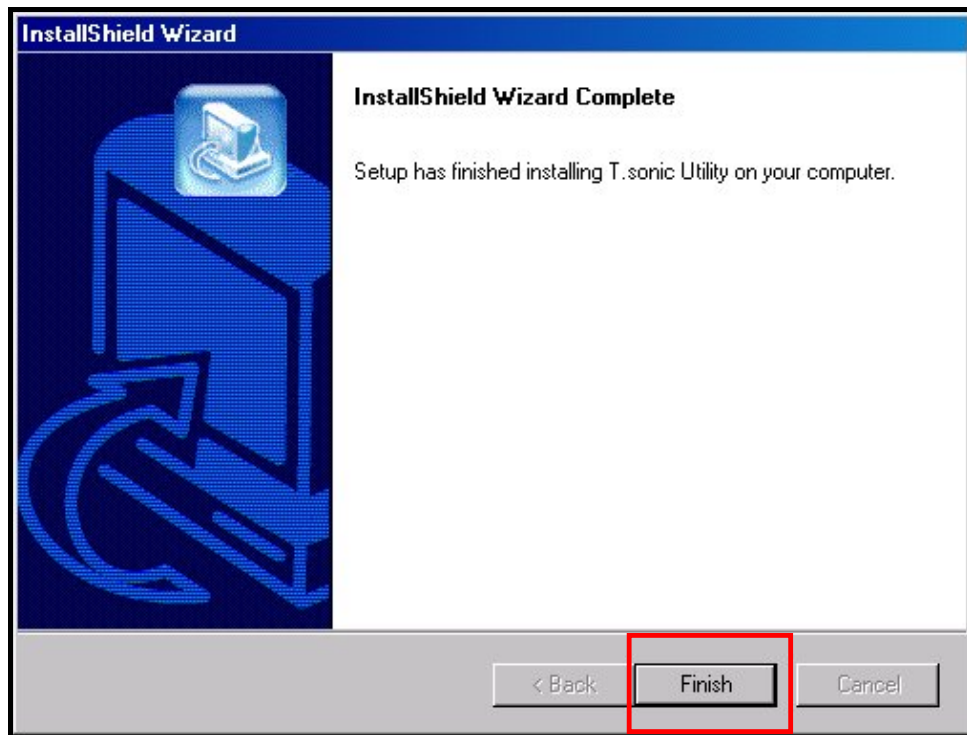



Figure 12. Installation complete

7. The T.sonic Utility program can be found in: “ **start** -> **Programs** -> **T.sonic Utility**.”

■ PC-Lock

With PC-Lock, you can use your T.sonic as a key to temporarily lock your computer while you are away.



1. Start the T.sonic Utility ( **start** -> **Programs** -> **T.sonic Utility**)
2. Click on the “**PC-Lock**” button  in the T.sonic Utility window or Task Bar menu.



Figure 13. T.sonic Utility – PC-Lock

3. The PC-Lock Settings window will appear. Select the “**Enable PC-Lock**” checkbox.

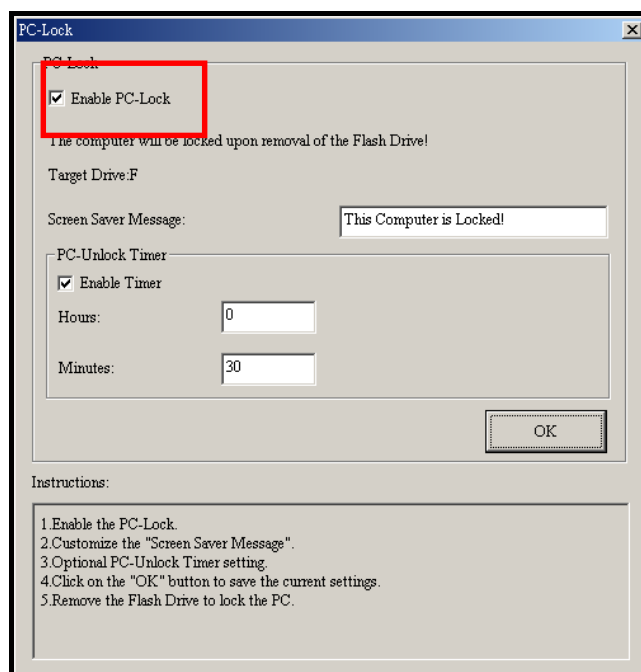


Figure 14. Enable PC-Lock

4. You can change the text displayed on the screen while the computer is locked in the “**Screen Saver Message**” field.

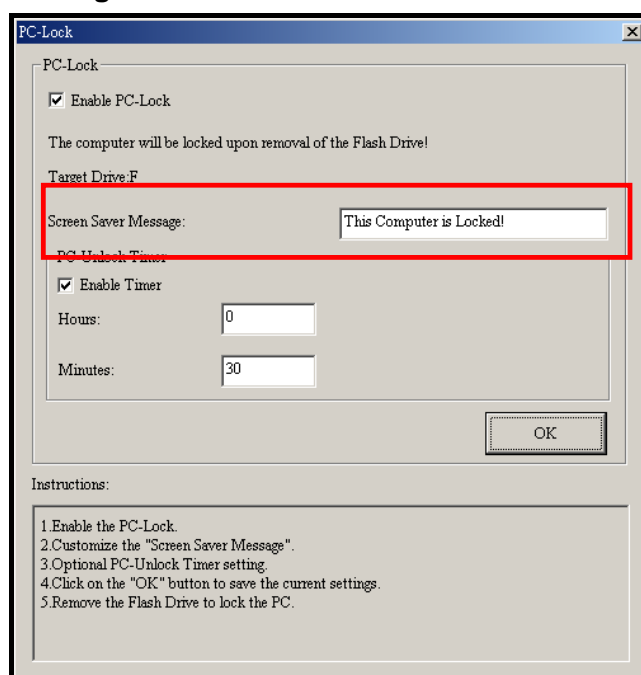


Figure 15. PC-Lock Screen Saver text

5. You can adjust the period of time that your computer will be locked for with the “Enable Timer” option. Set the Unlock Timer in **Hours** and **Minutes**. When this time elapses, your computer will automatically unlock and be available for use.

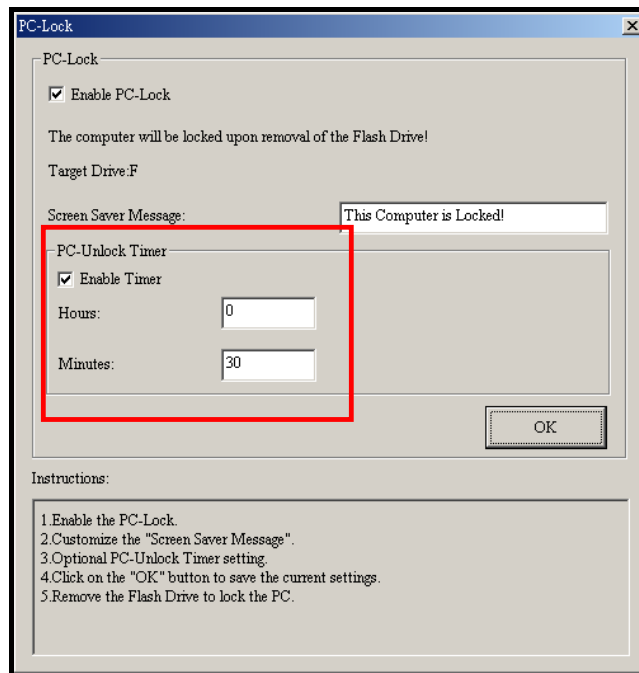


Figure 16. PC-Unlock Timer

6. Click the “OK” button to start the PC-Lock.

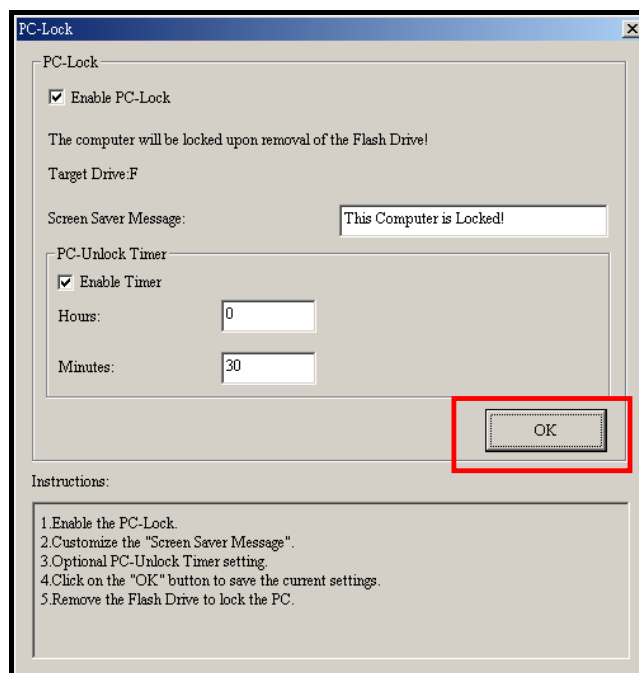


Figure 17. Start PC-Lock

- *When PC-Lock is enabled, your computer will be locked when the T.sonic is unplugged*
- *While your computer is locked, the screen will display the “Screen Saver Message” text.*

To unlock the computer, you must reconnect your T.sonic to your computer. The PC-Lock message text will disappear and you will be free to use your computer again. The computer will also unlock itself automatically when the lock timer expires.

■ Partition

This feature allows you to create a secure password-protected area on the T.sonic for your personal files. You can adjust the size of Public and Private areas, and add a password to protect the Private area. Data stored in the Private area will be kept secure and can only be accessed with your password.



WARNING! Creating a Private area or adjusting the partition size will erase all data on T.sonic! Please back up your data before using this feature.



1. Connect the T.sonic to your computer.
2. Start the T.sonic Utility ( -> **Programs** -> **T.sonic Utility**)
3. Click on the **"Partition"** button  in the T.sonic Utility window or Task Bar menu.



Figure 18. T.sonic Utility – Partition

4. The Partition window will appear. Move the slider left and right to adjust the size of the **Public** and **Private** areas on your T.sonic.

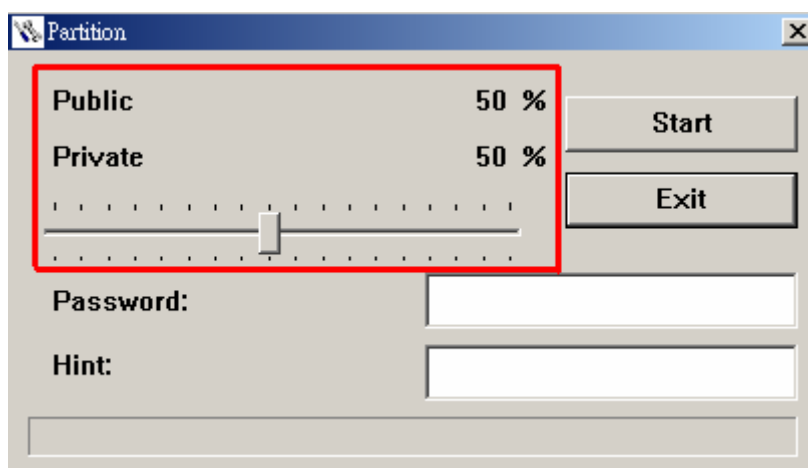


Figure 19. Create a Partition

5. To protect the Private area, choose a password and a "Hint" (in case you forget your password)

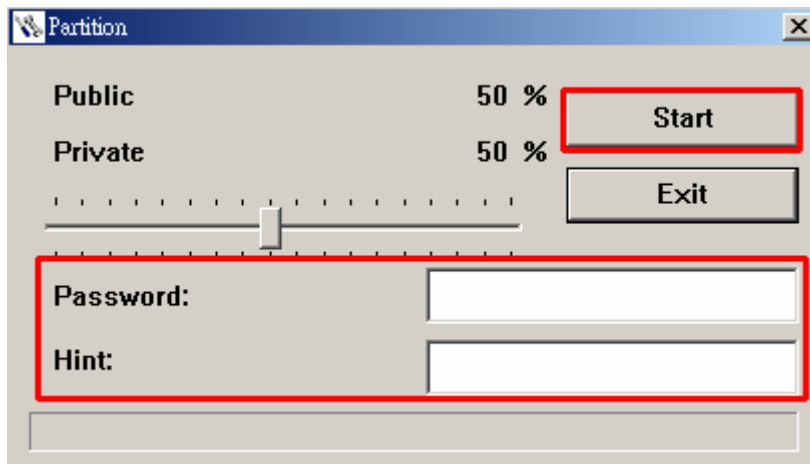


Figure 20. Password and Hint

6. Click the **“Start”** button to complete Partition & Security setup. The process may take a few minutes.

7. Click the **“Start”** button to complete the Partition & Security setup.

■ Log In / Log Out

This function lets you access the files stored on the Private partition of your T.sonic. If you do not log in, your protected files will be invisible.



1. Connect the T.sonic to your computer.
2. Start the T.sonic Utility ( -> **Programs -> T.sonic Utility**)
3. Click on the **“Login/Logout”** button  in the T.sonic Utility window or Task Bar menu.



Figure 21. T.sonic Utility – Login/out

4. The Login/out window will appear. Input your password and click **“Login.”**

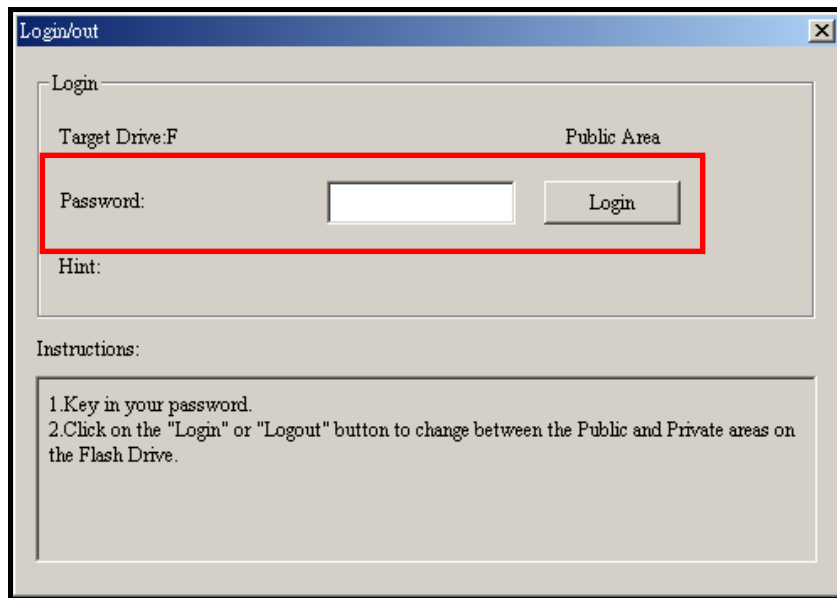


Figure 22. Enter your password


5. When successfully logged in, the “Public Area” message will change to “**Private Area.**” The files in your Private Area will no longer be hidden and can be accessed normally.
6. When you are finished using the Secure Area and no data is being transferred between the T.sonic and the computer, click the “**Login/Logout**” button  again to log out.



Figure 23. T.sonic Utility – Login/out

■ Changing your Password



1. Start the T.sonic Utility ( -> **Programs -> T.sonic Utility**)
2. Click on the “**Password**” button  in the T.sonic Utility window or Task Bar menu.



Figure 24. T.sonic Utility – Password

3. The New Password window will appear. Input your current Password and New Password, then confirm the new password. Use the “New Hint” field to give yourself a hint in case you forget your new password.

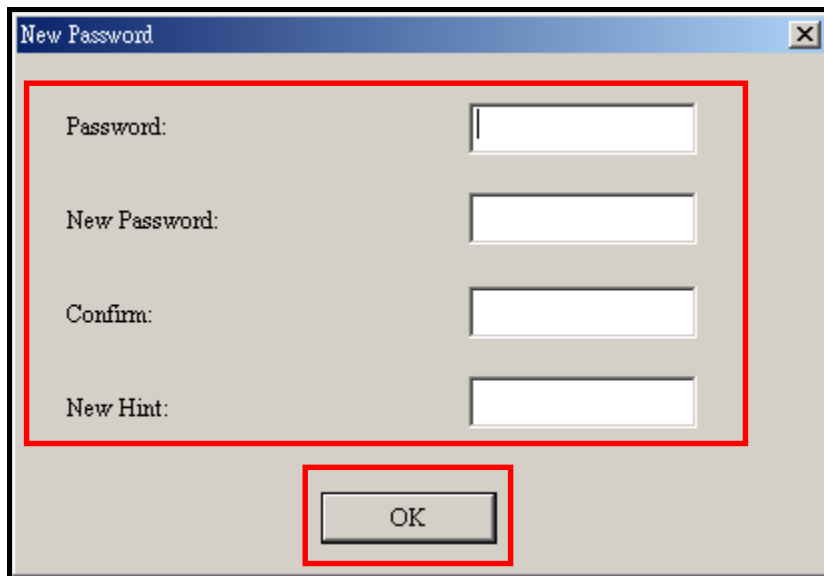
A screenshot of a 'New Password' dialog box. The dialog has a title bar with the text 'New Password' and a close button (X). The main area contains four input fields: 'Password:', 'New Password:', 'Confirm:', and 'New Hint:'. Each field is represented by a text label followed by a rectangular input box. A red rectangular border encloses the four input fields. Below the input fields, centered, is an 'OK' button, which is also enclosed in a red rectangular border.

Figure 25. Change Password

4. Click on the “OK” button to complete the New Password setup.

■ Forgotten Passwords

If you forget your password, use the password hint to help you remember your password. If you are still unable to remember your password, you will have to use the **Partition** function to reset the Public and Private areas. THIS WILL ERASE ALL DATA ON THE T.SONIC. Although the data in the Private area will be lost, you can back up all data on the Public area before using the Partition function.

Troubleshooting |

If a problem occurs with your T.sonic 615, please first check the information listed below before taking your T.sonic 615 for repair. If you are unable to remedy a problem from the following hints, please consult your dealer, service center, or local Transcend branch office. We also have FAQ and Support services on our website at <http://www.transcendusa.com>.

■ **Software CD does not auto-run in Windows®**

Go to the Device Manager in the Control Panel and enable the **Auto-Insert** function for the CD-ROM drive. Alternatively, you can manually run the “**T.sonic.EXE**” file on the software CD.


■ **Operating system cannot detect the T.sonic 615**

Check the following:

1. Is your T.sonic 615 properly connected to the USB port? If not, unplug it and plug it in again.
2. Is your T.sonic 615 connected to the Mac keyboard? If yes, unplug it and plug it into an available USB port on your Mac Desktop.
3. Is the USB port enabled? If not, refer to the user's manual of your computer (or motherboard) to enable it.

■ **Cannot Power ON**

Check the following:

1. Is the T.sonic 615 connected to your computer? If yes, unplug it.
2. Is the  switch enabled? If yes, switch it to the “OFF” position.
3. Is the battery out of power? If yes, please recharge the battery.

■ **Cannot transfer MP3, WMA, WMA-DRM10, or WAV files to the T.sonic 615**

Uninstall and re-install the driver. If this doesn't work, try **Resetting** the T.sonic.

■ **Buttons aren't working**

Is the Hold switch enabled? If yes, set it to the “OFF” position.

■ **Cannot hear track playback**

1. Have you downloaded any music files onto the T.sonic? If no, then you must first do so from your computer or the Internet. (Only Mpeg I Layer 3 and WMA files compressed at a rate of 32Kbps–320Kbps are supported.)
2. Are the earphones properly connected to the earphones jack? If not, reconnect them.
3. Is the volume loud enough? If not, increase the volume level until the music can be heard.

■ **Track name does NOT display correctly on the screen**

1. The default language of the T.sonic is English. Please set the language option first.
2. ID3 tag information has display priority on the screen of the T.sonic. You can modify the ID3 tag by using Windows Media Player or Winamp.
3. If the ID3 tag is empty, just the file name will be displayed on the screen.

■ **Cannot enter the RECORD Mode**

To make sure the recorded file will not be lost, two safety mechanisms are provided.

1. If the remaining battery capacity is less than 10%, you cannot enter the RECORD Mode.
2. During recording, if the remaining battery capacity goes **below 10%** the T.sonic will automatically save the recording.


■ **Track playback sounds intermittent**

Plug the earphones into the earphones jack again to make sure they are properly connected.

■ **T.sonic Powers OFF automatically**

T.sonic features a SLEEP Mode, which acts as a Power Saving feature. You can preset your T.sonic to Power OFF automatically after 15, 30, or 60 minutes. Please refer to the “**Sleep Timer**” section of this manual.

■ **T.sonic just isn't working properly**

If your T.sonic ever stops working properly, or locks up, try Powering it ON and OFF a few times, if this does not correct the problem you can reset the T.sonic by pressing and holding the  **RESET** button for 3 to 5 seconds.

■ **Cannot find the file that was just copied to the T.sonic™**

Re-copy the file and refer to the “**Disconnecting from a Computer**” section to remove the T.sonic after the copy process is completed.

■ **A File that was just deleted still appears**

Re-delete the file and refer to the “**Disconnecting from a Computer**” section to remove the T.sonic after the delete process is completed.

■ **T.sonic™ cannot operate after it was formatted in Windows®**

Formatting the T.sonic using the “Quick Format” or “Full Format” option in Windows® destroys the default format of the T.sonic. To retrieve the default format, visit <http://www.transcendusa.com> and download a Firmware from Transcend's download center.

■ **How do I find out what Windows Media Player version I am using?**

1. Open your Windows Media Player program.
2. Click on the “Help” menu and select the “**About Windows Media Player**” option.
3. The version of your Windows Media Player will be displayed on the computer screen.

■ **Cannot listen to DRM music on my T.sonic 615?**

1. The T.sonic 615 only supports WMA-DRM10 protected music files, is this the file type you are using?
2. Did you use the MTP “**Music Transfer Protocol**” to transfer music to the T.sonic 615?

■ **Lyrics Sync: Why can't I see the words of the song I am listening to?**

For detailed Lyrics Sync instructions, please see the FAQ section on our website at: <http://www.transcendusa.com/Support/FAQ>

Specifications |

Size (L x W x H):	70mm × 34.5mm × 15.5mm
Weight:	28g (with Li-ion battery)
Music Formats:	MP3, WMA and WMA-DRM10 (Subscription music)
Recording Format:	ADPCM (WAV)
Estimated Battery Life:	15 hours (fully charged battery)
Compression Rates:	32Kbps to 320Kbps
Data Retention:	Up to 10 years
Erase Cycles:	≥ 100,000 times
Signal-to-Noise Ratio:	≥ 90dB
Certificates:	CE, FCC, BSMI
Warranty:	2-years

Ordering Information |

<i>Device Description</i>	<i>Memory Size</i>	<i>Transcend P/N</i>
T.sonic 615 MP3 Music Player	2GB	TS2GMP615
T.sonic 615 MP3 Music Player	4GB	TS4GMP615

Transcend Limited Warranty |

“Above and Beyond” is the standard we set ourselves for customer service at Transcend. We consistently position ourselves to be significantly above the industry norm, which is all part of our commitment to Customer Satisfaction.

All Transcend information, Inc. (Transcend) products are warranted and tested to be free from defects in material and workmanship and to conform to the published specifications. During the warranty period should your Transcend T.sonic 615 fail under normal use in the recommended environment due to improper workmanship or materials, Transcend will repair the product or replace it with a comparable one. This warranty is subject to the conditions and limitations set forth herein.

Duration of Warranty: The Transcend T.sonic 615 is covered by this warranty for a period of two (2) years from the date of purchase. Proof of purchase including the date of purchase is required for warranty service. Transcend will inspect the product and decide whether to repair or replace it. Transcend reserves the right to provide a functional equivalent or refurbished replacement product.

Limitations: This warranty does not apply to product failure caused by accidents, abuse, mishandling, improper installation, alteration, acts of nature, improper usage, or problems with electrical power. In addition, opening or tampering with the product casing, or any physical damage, abuse or alteration to the product's surface, including all warranty or quality stickers, product serial or electronic numbers will also void the product warranty. Transcend is not responsible for recovering any data lost due to the failure of a flash memory device. Transcend's T.sonic 615 must be used with devices that conform to the recommended industry standards. Transcend will not be liable for damages resulting from a third party device that causes the Transcend T.sonic 615 to fail. Transcend shall in no event be liable for any consequential, indirect, or incidental damages, lost profits, lost business investments, lost goodwill, or interference with business relationships as a result of lost data. Transcend is also not responsible for damage or failure of any third party equipment, even if Transcend has been advised of the possibility. This limitation does not apply to the extent that it is illegal or unenforceable under applicable law.

Disclaimer: The foregoing limited warranty is exclusive. There are no other warranties, including any implied warranty of merchantability or fitness for a particular purpose. This warranty is not affected in any part by Transcend providing technical support or advice.

Online Registration: To expedite the warranty service, please register your Transcend Product within 30 days of purchase.

Register online at <http://www.transcendusa.com/productregister>

- ❖ The specifications mentioned above are subject to change without notice.

Transcend
Exceeding Your Expectations

Transcend Information, Inc.

www.transcendusa.com

*The Transcend logo is a registered trademark of Transcend Information, Inc.

*All logos and marks are trademarks of their respective companies.